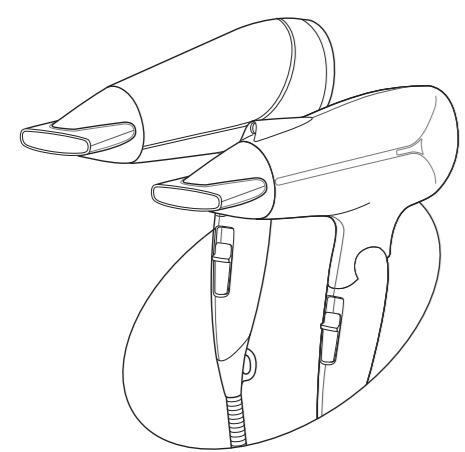


Operating Instructions
(Household use) Hair Dryer

使用說明書
(家用) 風筒
คู่มือการใช้งาน
ເຄື່ອງປັ້ນໄພ (ໃຫ້ນາກໃຫ້ນາ)
Huong dan sua dung
(Sử dụng trong gia đình)
Máy sấy tóc
Model No. 型號 EH-NE66
ນາມບໍາຫາວຸນ EH-ND65
Số mẫu máy

Thank you for purchasing this Panasonic product.
Before operating this unit, please read these instructions completely and save them for future use.

請仔細閱讀本說明書，並妥善保存以供未來使用。
本產品之前，請仔細閱讀本說明書，並妥善保存以供未來使用。
請購買 Panasonic 產品。

若要確保安全，請勿將電源線插入牆面的電源插座。

Cảm ơn bạn đã mua sản phẩm Máy sấy tóc của Panasonic.

Trước khi vận hành thiết bị, xin vui lòng đọc toàn bộ hướng dẫn sử dụng và lưu lại them khaô sau.

Panasonic Corporation
http://www.panasonic.com
© Panasonic Corporation 2021
EN, HK, TH, VN
Printed in Thailand
EH9210ND656052 A0621-10621

CAUTION

► To protect your hair
○ Do not use with the air inlet damaged.
○ Your hair may get tangled in the air inlet, which could damage the hair.

Be sure to keep a distance of over 3 cm between the air outlet and your hair.
- Failure to do so may cause burns to the hair.

Be sure to keep your hair at least 10 cm away from the air inlet.
- Your hair may get tangled in the air inlet, which could damage the hair.

! Note the following precautions
○ Do not drop or subject to shock.
- Doing so may cause electric shock or ignition.

○ Do not use on infants.
- Doing so may cause burn.

○ Do not touch the air outlet and concentrator nozzle which will become very hot.
- Doing so may cause burn.

○ Do not look into the air outlet while in use.
- The hair dryer blows air with dust, etc., possibly resulting in injury.

! Only use for drying or styling human hair. (Do not use on pets, or to dry clothing, shoes, etc.)
- Doing so may cause fire or burn.

► Note
- This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to cool air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair, etc. is in the air inlets and outlets before switching it on again.

繁體中文 (香港)

1 安全須知

為減低受傷、死亡、觸電、火災、及財物損失的風險，請務必留意以下安全須知。
符號說明
以下符號用於為危險、傷害及財物損失的級別分類和作出解釋。若忽視此等符號，不當使用本產品可能會導致所指的危險、人身傷害及財物損失。

△ 警告 表示可能會導致嚴重受傷或死亡的潛在危險。
△ 注意 表示可能會導致輕傷或財物損失的危險。

以下符號用於分類和解釋必須留意的指示類型。

○ 此符號用於提示使用者，不得執行某項特定的操作程序。

! 此符號用於提示使用者，必須遵從某項特定的操作程序，才能安全操作本產品。

「安全須知」內的插圖可能與實際產品不一致。

△ 警告 表示可能會導致觸電、火災、及財物損失的風險。

► 插頭與電源線

切勿在使用時將電源線繩繩在一起。
○ 否則可能會引起火災或觸電。

切勿損壞電源線或插頭。
○ 切勿損壞、改造、用力彎曲或拉扯電源線或插頭。此外，切勿將任何重物置於電源線上，扭曲或摺壓電源線。
- 否則可能會造成燙傷或短路而引起火災。

當插頭或電源線損壞或發熱時，切勿使用。

○ 否則可能會造成燙傷或短路而引起火災。

如果插頭在家用電源插座內有鬆動現象，切勿使用本產品。

○ 否則可能會造成燙傷或短路而引起火災。

切勿在洗澡時將電源插頭插入家用電源插座或將其從插座中拔除。

儲藏時，切勿將電源線繩繩在本機主體上。

○ 否則可能會導致燙傷或受傷。

備註：切勿將電源線繩繩在本機主體上。

○ 否則可能會令電源線內的電線因負荷而斷裂，並可能造成觸電、灼傷或因短路而引起火災。

切勿在扭曲狀態下存放或使用電源線。
○ 否則可能會令電源線內的電線因負荷而斷裂，並可能造成觸電或因短路而引起火災。

2 零件說明

6 保養
務必關閉風筒開關並從家用插座拔出插頭。（保養出風口時除外）
入風口的保養
每月一次或以上清潔入風口。
• 用牙刷或真空吸塵器清除入風口的棉絮、頭髮或其他東西。

出風口的保養

每月一次或以上清潔出風口。
刷去塵埃、頭髮等阻擋網孔的物體。

• 若僅僅刷出出風口時，才應該將風筒插入到家用電源插座。

• 將電源開關調至「**O**」使用冷風，以使用牙刷刷出灰塵時將其吹走。

註

• 保養期間，切勿以手或其他物件阻擋入風口。

• 在保養出風口期間之後，灰塵等可能會吹至四周。在使用前確保風筒不會從出風口吹出灰塵。（切勿向出風口內看。）

7 疑難拆解

問題

產品內部可能會出現火花。

（這些火花是由保護裝置（恆溫開關）引起，並不會構成危險。）

熱風反轉變為冷風。

熱風異常高溫。

插頭異常高溫。

在負離子出口內部產生火花。

（僅限 EH-NE66 型產品）

負離子出口有異音（劈啪聲）。

（僅限 EH-NE66 型產品）

如仍無法解決問題，請與您購買本機的商店聯繫，或聯絡 Panasonic 直屬服務站進行維修。

8 規格

電源 220 V~ 50 - 60 Hz | 230 V~ 50 - 60 Hz | 240 V~ 50 - 60 Hz

消耗電量 1700 W | 1850 W | 2000 W

配件 造型風咀

此產品只適用於家庭內使用。

1 使用前，確認電源開關位於「**O**」位置，然後將插頭插入家用插座並打開電源開關。

2 使用電源開關選擇吹風溫度，然後吹乾頭髮。

3 將電源開關調至「**O**」位置，然後從家用插座上拔除插頭。

► 造型風咀

專注並集中氣流以精確制定髮型。

4 關於負離子（僅限 EH-NE66 型產品）

負離子是帶負電荷的氣體與空氣中的濕氣結合所產生的分子，並且無法以肉眼看見。

（負離子產生方法：高壓放電）

► 請使用風筒時可能會聞到一種特別的氣味。這對人體無害。

以下髮型的人可能感覺不到負離子的效果：

• 有波浪形的頭髮、牢固的捲髮、特別平順的頭髮、短髮，或三四個月前曾燙直過頭髮的人。

5 關於高溫防護

這種模式提供持續且和暖的溫度，以防止過熱的溫度對頭髮和頭皮造成傷害。

English

1 Safety precautions

To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

WARNING

Denotes a potential hazard that could result in serious injury or death.

CAUTION

Denotes a hazard that could result in minor injury or property damage.

The following symbols are used to classify and describe the type of instructions to be observed.

This symbol is used to alert users to a specific operating procedure that must not be performed.

This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.

Some parts of the safety precaution illustrations differ from the actual product.

WARNING

Denotes a potential hazard that could result in serious injury or death.

Plug and Cord

Do not use with the cord bundled.

- Doing so may cause fire or electric shock.

Do not damage the cord or plug.

- Do not deface, modify, forcefully bend or pull the cord or plug. Also, do not place anything heavy on, twist or pinch the cord.

- Doing so may cause electric shock, burn or fire due to a short circuit.

Do not use when the plug or cord is damaged or hot.

- Doing so may cause burn, electric shock, or fire due to a short circuit.

Never use the appliance if the plug fits loosely in a household outlet.

- Doing so may cause burn, electric shock, or fire due to a short circuit.

Do not connect or disconnect the plug to a household outlet with a wet hand.

- Doing so may cause electric shock or injury.


Do not wrap the cord tightly around the main body when storing.

- Doing so may cause the wire in the cord to break with the load, and may cause electric shock, burn or fire due to a short circuit.

Do not store or use the cord in a twisted state.

- Doing so may cause the wire in the cord to break with the load, leading to electric shock or fire due to a short circuit.

2 Parts identification

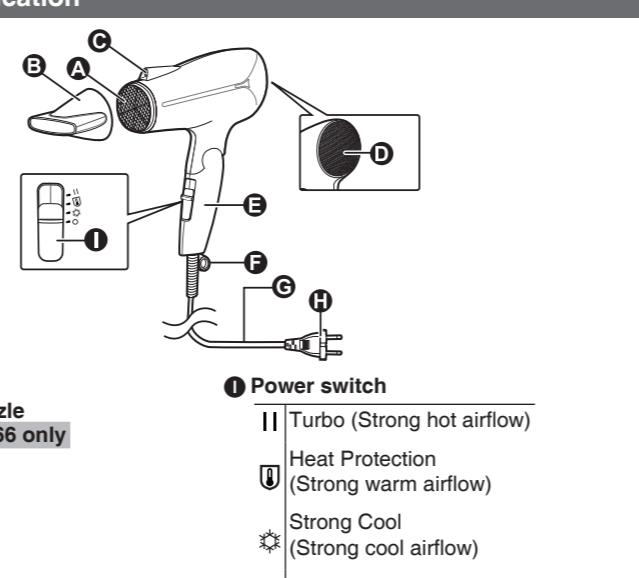

3 How to use

1 Before using the hair dryer, confirm that the power switch is at position "O", then plug into a household outlet and turn on the power switch.

2 Select the temperature of the airflow with the power switch, and then dry your hair.

3 Set the power switch to position "O", and then remove the plug from the household outlet.

► Concentrator nozzle

Focuses and concentrates airflow for precise hair styling.

4 About Ion (EH-NE66 only)

Ions are particles that combine negatively charged oxygen and moisture in the air, and cannot be seen through the naked eye.
(Ion generation method: High-voltage discharge)

► Notes

• You may notice a specific odor when using this hair dryer. This is not harmful to the human body.

• The effects of ion might not be felt by the following people.

• People with crimped hair, strong curly hair, very smooth hair, short hair, or who have had a hair straightening perm in the last three or four months.

5 About Heat Protection

This mode provides constant and warm temperature to protect hair and scalp from heat.

WARNING

Disconnect the plug by holding onto it instead of pulling on the cord.

- Failure to do so may cause the wire in the cord to break, and may cause burn, electric shock, or fire due to a short circuit.

Regularly clean the plug to prevent dust from accumulating.

- Failure to do so may cause fire due to insulation failure caused by humidity.

Always turn off the power switch and disconnect the plug from the household outlet after use.

- Failure to do so may cause fire or burn.

Insert the plug into the household outlet directly.

- Do not use with an extension cord.

Fully insert the plug.

- Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance.

- Failure to do so may cause fire or electric shock.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

- Failure to do so may cause fire or accident or injury.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- Failure to do so may cause an accident or injury.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent (described in the warranty), or similarly qualified persons in order to avoid a hazard.

