



Panasonic®

Operating Instructions Plasma Television

Model No. **TH-P42G15A**
TH-P50G15A

VIERA

DVB®

AVCHD™

VIERA
Link

VIERA
CAST

DOLBY
DIGITAL



VIERA
IMAGE VIEWER

FULL
HD
1920×1080p



HDTV

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Thank you for purchasing this Panasonic product.
Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.


English

TQB3DC0003-1

Turn your own living room into a movie theatre!

Experience an amazing level of multi-

Receive digital terrestrial services using an integrated Digital TV tuner
Sharp pictures with HDMI terminal
Create home theatre and DVD recorder link-ups with "VIERA Link"
without complicated settings!

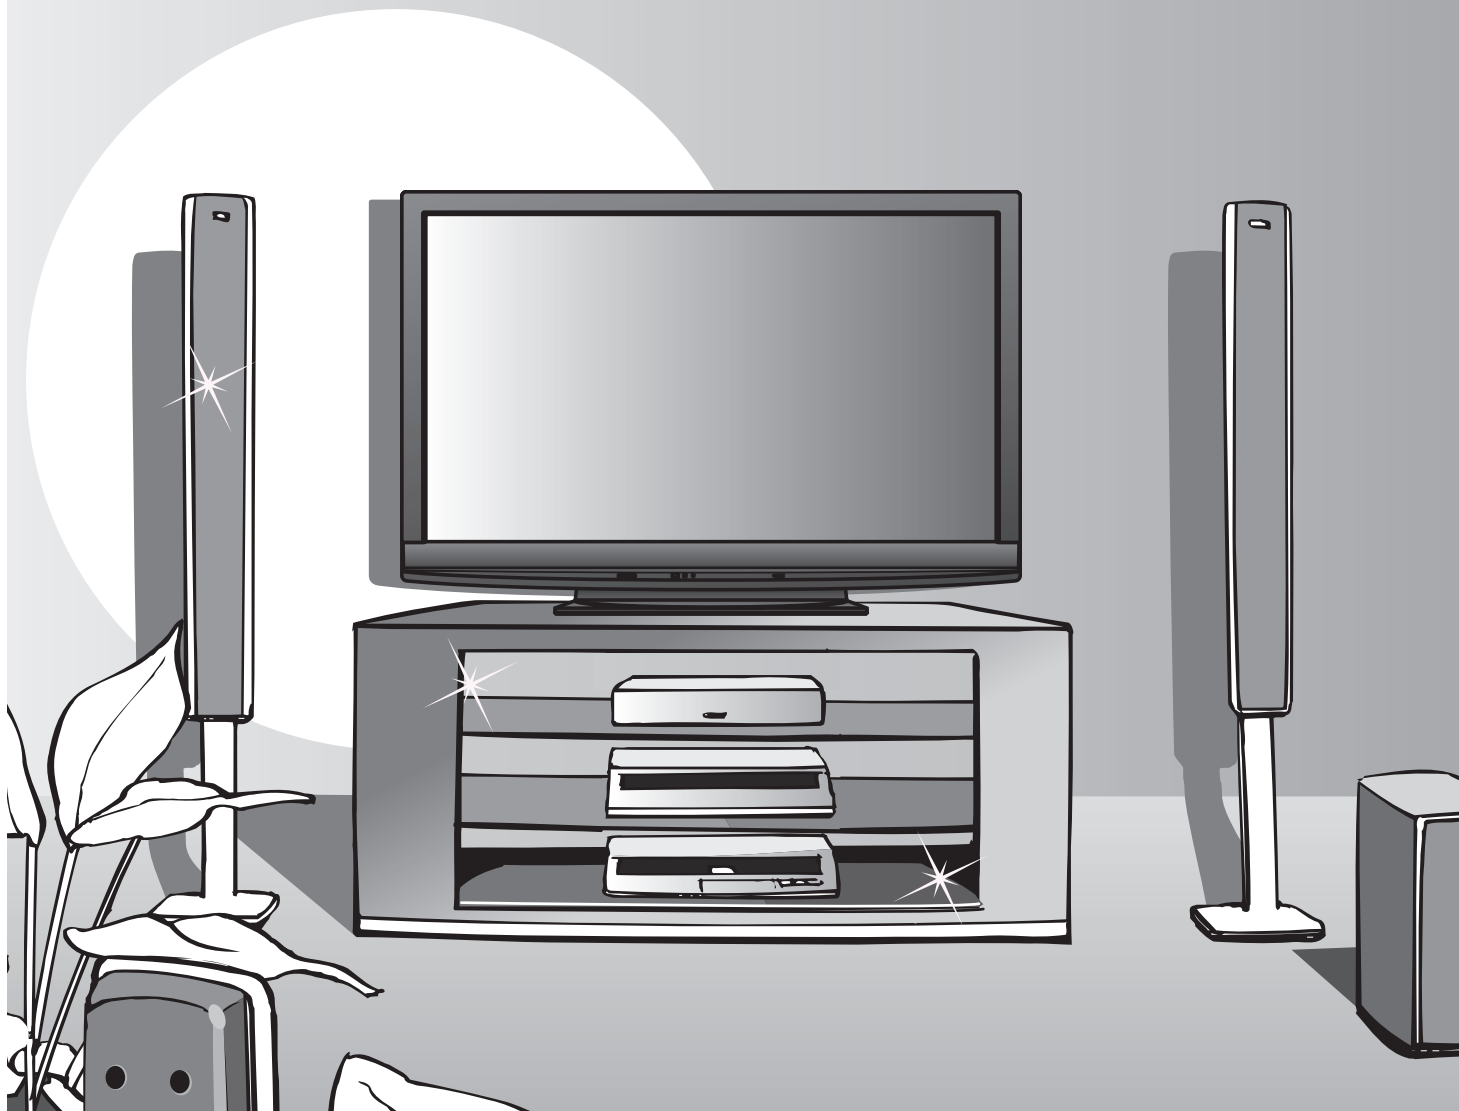

Trade Mark of the DVB Digital Video Broadcasting Project (1991 to 1996)
TH-P42G15A Declaration of Conformity No. 6421, 13 January 2009
TH-P50G15A Declaration of Conformity No. 6412, 13 January 2009


Notice about Digital TV Functions

- The MPEG-4 AVC feature was designed to specifications as we know them today. This specification may be subject to future changes beyond our control that may not guarantee the decoding of such services.

February 2009

media excitement

Enjoy rich multimedia

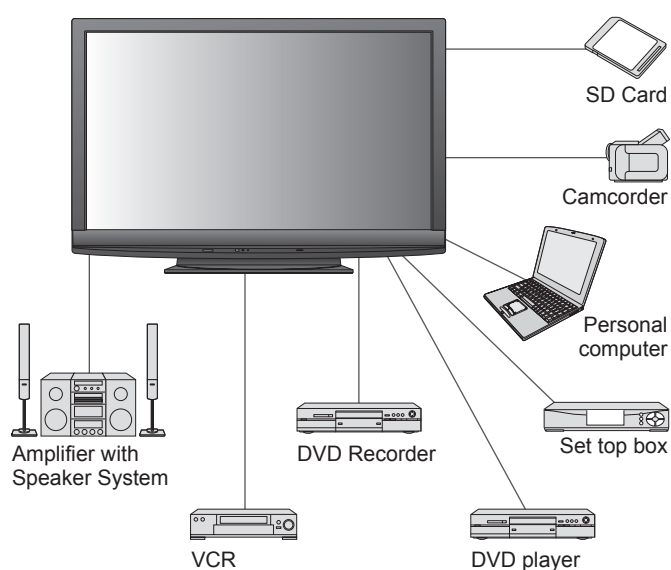

Contents

Be Sure to Read

- Safety Precautions 4
(Warning / Important Installation Notices)
- Maintenance 6
- Licence 6

Quick Start Guide

- Accessories / Options 7
- Identifying Controls 9
- Basic Connection 11
- Auto Tuning 12

Basic Features

- Watching TV 14
- Using TV Guide 17
- Viewing Teletext 18
- Watching Videos and DVDs 20

Advanced Features

- How to Use Menu Functions 22
(picture, sound quality, etc.)
- Input Labels 26
- Digital TV Settings 27
- Editing Channels 28
- Tuning Channels 30
- Restore Settings (Shipping Condition) 32
- Displaying PC Screen on TV 33
- HDMI Functions 34
- Viewing from SD Card (VIERA IMAGE VIEWER) 35
- VIERA Link "HDAVI Control™" 38
- VIERA Tools 43
- VIERA CAST™ 44
- External Equipment 48

Technical Features

- Technical Information 50
- FAQs 54
- Specifications 57
- WARRANTY 58

Safety Precautions


Warning

Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. If the mains plug is loose, it could generate heat and cause fire.
- Ensure that the mains plug is easily accessible.
- Ensure the earth pin on the mains plug is securely connected to prevent electrical shock.
- Do not touch the mains plug with a wet hand. This may cause electrical shock.
- Do not use any mains lead other than that provided with this TV. This may cause fire or electrical shock.
- Do not damage the mains lead. A damaged lead may cause fire or electrical shock.
 - Do not move the TV with the lead plugged in the socket outlet.
 - Do not place a heavy object on the lead or place the lead near a high-temperature object.
 - Do not twist the lead, bend it excessively, or stretch it.
 - Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
 - Do not use a damaged mains plug or socket outlet.

If you find any abnormality, remove the mains plug immediately!

**AC 220 - 240 V
50 / 60 Hz**

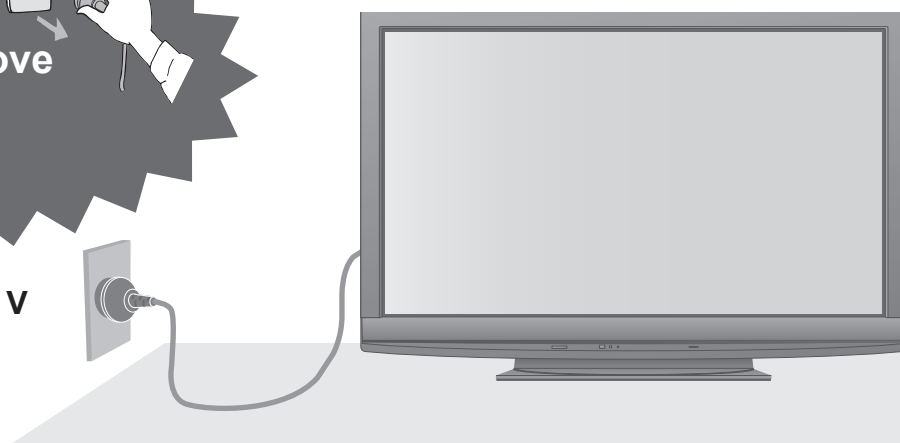

Power source

- This TV is designed to operate on AC 220 - 240 V, 50 / 60 Hz.

Do not remove covers

NEVER modify the TV yourself

High-voltage components may cause serious electrical shock.

- Have the TV checked, adjusted, or repaired at your local Panasonic dealer.

Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the TV, including on shelves above, etc.

Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV.

Avoid exposing the TV to high atmospheric moisture (such as tropical rain) or night time dew condensation

- This TV is designed and manufactured for indoor use only.

Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents. Fire or electrical shock may result.

Do not place the TV on sloped or unstable surfaces

- The TV may fall off or tip over.

Use only the dedicated pedestals / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use approved pedestals / mounts (p. 8).

Do not allow children to handle SD Card

- As with any small object, SD Cards can be swallowed by young children. Please remove SD Card immediately after use and store out of reach of children.

Important Installation Notices

Install TV on a stable surface

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

When cleaning the TV, remove the mains plug

- Cleaning an energized TV may cause electrical shock.

When the TV is not going to be used for a long period of time, remove the mains plug



- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

Transport only in upright position

- Transporting the TV with its display panel facing upward or downward may cause damage to the internal circuitry.

Allow sufficient space around the TV for radiated heat

Minimum distance

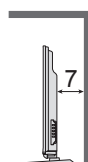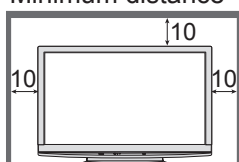

(cm)

- When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
- In case of using Wall-hanging bracket, follow the manual of it.

Do not block the rear air vents

- Blocked ventilation by newspapers, table cloths, curtains, etc. may cause overheating, fire or electrical shock.


Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.

Display panel is made of glass. Do not apply strong force or impact to the display panel.

- This may cause damage resulting in injury.

The TV is heavy. Handle the TV by 2 or more people. Support as shown to avoid injury by the TV tipping or falling.

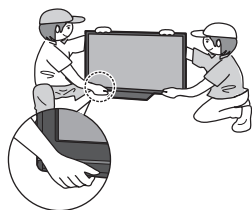

Auto power standby function

- If no signal is received and no operation is performed in Analogue TV mode for 30 minutes, the TV will automatically go to standby mode.

Keep the TV away from these types of equipment

- Electronic equipment
In particular, do not place video equipment near the TV. Electromagnetic interference may distort images / sound.
- Equipment with an infrared sensor
This TV also emits infrared rays. This may affect operation of other equipment.

Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("image retention"). This is not considered a malfunction and is not covered by the warranty.

Typical still images



- Programme number and other logos
- Image displayed in "4:3" mode
- Video game
- Computer image

To prevent image retention, contrast is lowered automatically after a few minutes if no signals are sent or no operations are performed. (p. 54)

Maintenance

First, remove the mains plug from the socket outlet.

Display panel

Regular care: Gently wipe the surface clean of dirt by using a soft cloth.

Major contamination: Wipe the surface clean using a soft cloth dampened with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

Caution

- The surface of the display panel has been specially treated and may be easily damaged. Do not tap or scratch the surface with your fingernail or other hard object.
- Take care not to subject the surface to insect repellent, solvent, thinner, or other volatile substances. This may degrade surface quality.

Cabinet, Pedestal

Regular care: Wipe the surface clean using a soft dry cloth.

Major contamination: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

Caution

- Take care not to subject the TV's surfaces to detergent. A liquid inside the TV could lead to product failure.
- Take care not to subject surfaces to insect repellent, solvent, thinner, or other volatile substances. This may deteriorate the surface by peeling the paint.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time.

Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

Licence

- DVB is a trademark of the DVB Digital Video Broadcasting Project (1991 to 1996).
- VGA is a trademark of International Business Machines Corporation.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
- SDHC Logo is a trademark.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Macintosh is a trademark of Apple Inc.
- VIERA CAST™ is a trademark of Panasonic Corporation.
- YouTube and Picasa are trademarks of Google, Inc.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Accessories / Options

Standard accessories

Check that you have the accessories and items shown ☒


☐ Remote Control
● N2QAYB000430



☐ Batteries for the Remote Control (2)
● R6 (AA)



☐ Pedestal
➔ p. 8

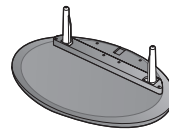


☐ Fall-prevention parts
➔ p. 9


☐ Cleaning cloth



☐ Mains Lead
➔ p. 11

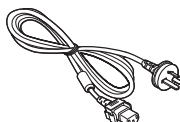

☐ Ferrite core (2)
➔ p. 48

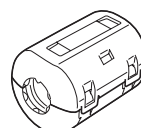

☐ Operating Instructions with Warranty statement


Use the Ferrite cores to comply with the EMC standard.

Caution

This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

Optional accessories

Wall-hanging bracket
● TY-WK4P1RW

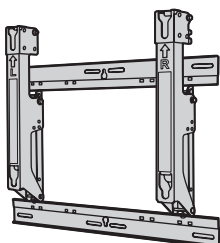


Caution


- In order to maintain the unit's performance and safety, be absolutely sure to ask your dealer or a licenced contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the wall-hanging bracket, and be absolutely sure to take steps to prevent the TV from falling off.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause product damage.

Installing remote's batteries

1

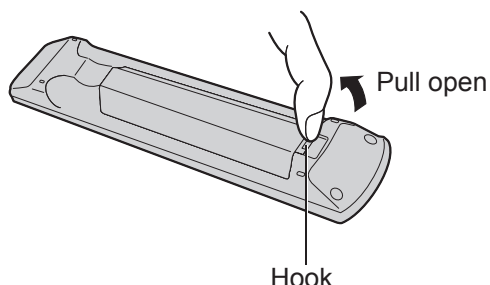

2

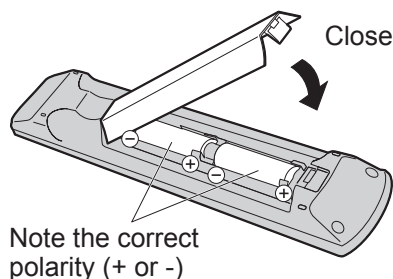

Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
 - Do not use rechargeable (Ni-Cd) batteries.
 - Do not burn or breakup batteries.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Accessories / Options

Attaching the pedestal

Warning

Do not disassemble or modify the pedestal.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Caution

Do not use any other TV and displays.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Do not use the pedestal if it becomes warped or physically damaged.

- If you use the pedestal while it is physically damaged, personal injury may result. Contact your nearest Panasonic dealer immediately.

During set-up, make sure that all screws are securely tightened.





- If insufficient care is taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Ensure that the TV does not fall over.

- If the TV is knocked or children climb onto the pedestal with the TV installed, the TV may fall over and personal injury may result.

Two or more people are required to install and remove the TV.


- If two or more people are not present, the TV may be dropped, and personal injury may result.

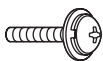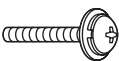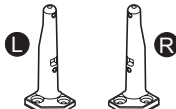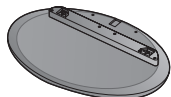- | | | | |
|---|--|--|---|
| Ⓐ Assembly screw (4)
(silver)
● XYN5+F18FN

M5 × 18 | Ⓑ Assembly screw (4)
(black)
● THEL064N

M5 × 25 | Ⓒ Pole (2)
● L:TBL3DA3008
R:TBL3DA3007
 | Ⓓ Base
● TBL3DX0009
(TH-P42G15A)
● TBL3DX0010
(TH-P50G15A)
 |
|---|--|--|---|

Assembling the pedestal

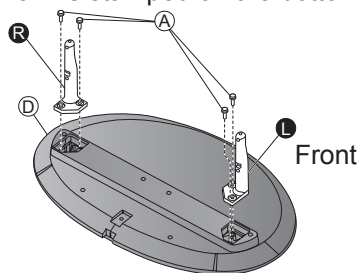Use the four assembly screws Ⓐ to fasten the left and right poles to the base securely.


- Make sure that the screws are securely tightened.
- Forcing the assembly screws the wrong way will strip the threads.
- "L" or "R" mark is stamped on the bottom of the pole.



Securing the TV


Use the assembly screws Ⓑ to fasten securely.

- Make sure that the screws are securely tightened.
- Carry out the work on a horizontal and level surface.

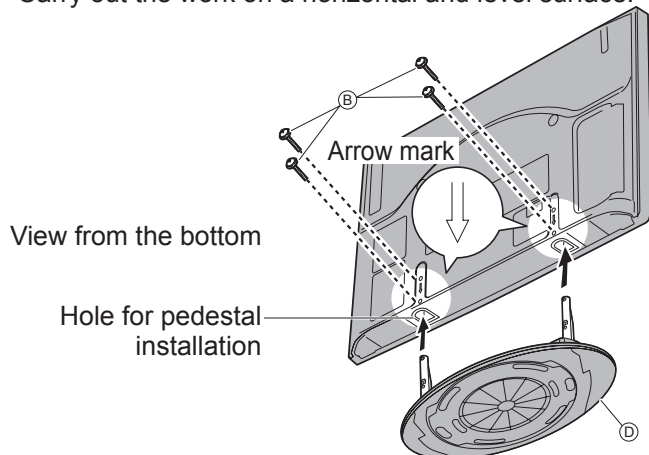


Adjust the panel to your desired angle

- Ensure that the pedestal does not hang over the edge of the base even if the TV swivels to the full rotation range.
- Do not place any objects or hands within the full rotation range.

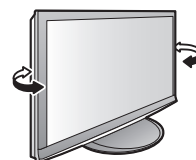

Set the mark at the centre as illustrated, to have the swivel positioned at the centre of the rotation angle.

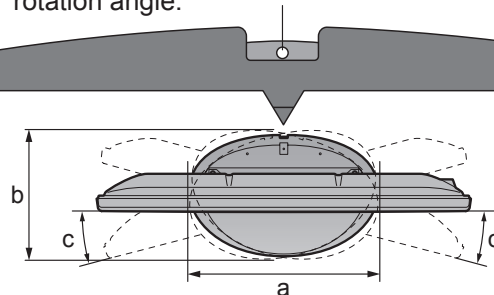

(View from the top)

- TH-P42G15A
a: 520 mm / b: 355 mm / c: 15°
- TH-P50G15A
a: 528 mm / b: 407 mm / c: 10°


Preventing the TV from falling over

This TV could fall over if it's pushed, pulled or knocked down.
We therefore recommend the TV is secured to the base as illustrated.


- This measure is designed to reduce the risk of injury from a falling TV. However, it cannot guarantee protection in all cases.

Fall-prevention parts

Ⓐ Band
● TKLA4301

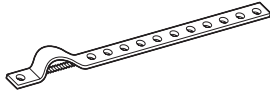

Ⓑ Clamp
● TKL3DA0101

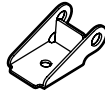

Ⓒ Screw




Ⓓ Wood screw



Securing to a base


Fix pedestal and base together with band.

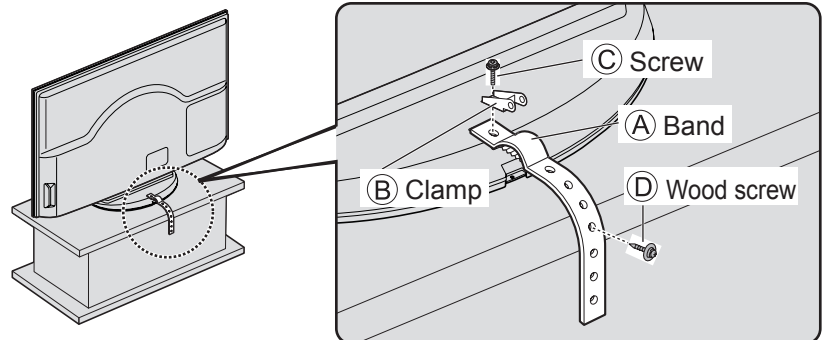

This image is for illustrative purposes only.

Identifying Controls

TV

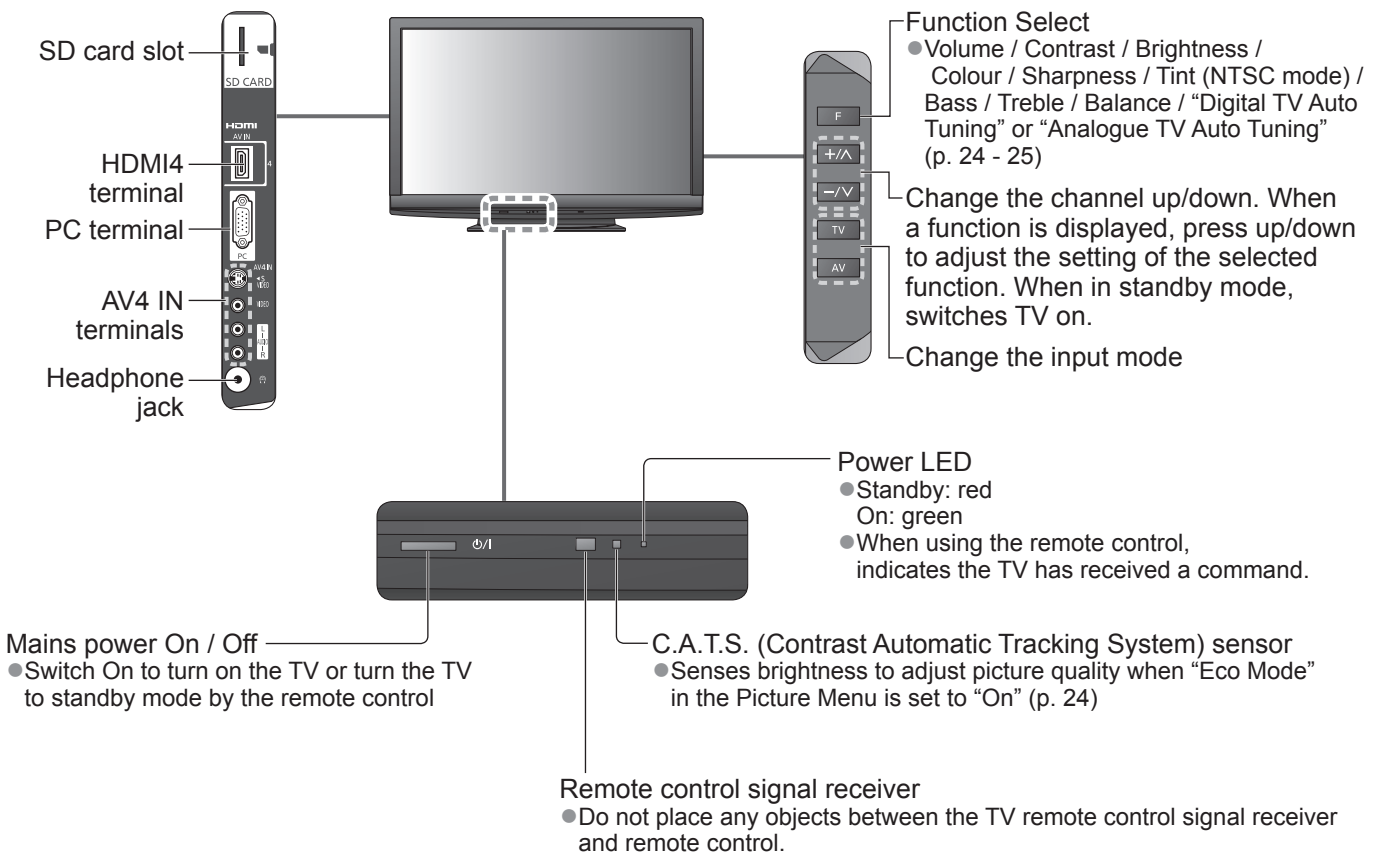

Identifying Controls

Remote Control

SD Card (p. 35)
 ● Switches to SD Card viewing mode

Standby On / Off switch
 ● Switches TV On or Off standby

Aspect (p. 16)
 ● Changes aspect ratio from Aspect Selection list
 ● Also possible by pressing this button repeatedly until you reach the desired aspect

Main Menu (p. 22)
 ● Press to access Picture, Sound and Setup Menus

Channel / Programme Information (p. 15)
 ● Displays channel and programme information

VIERA TOOLS (p. 43)
 ● Displays functions of the linked equipment and SD card

VIERA Link (p. 38)
 ● Press to access VIERA Link Menu

OK
 ● Confirms selections and choices
 ● Press after selecting channel positions to quickly change programme

Option Menu (p. 16)
 ● Easy setting for sound options

Teletext (p. 18)
 ● Switches to teletext mode

Subtitles (p. 14)
 ● Displays subtitles

Numeric buttons
 ● Changes channel and teletext pages
 ● When in Standby mode, switches TV On

Sound Mute
 ● Switches sound mute On or Off

Volume Up / Down

Input mode selection
 ● TV - switches Digital TV / Analogue TV mode (p. 14)
 ● AV - switches to AV input mode from Input Selection list (p. 20)

Stereo / Bilingual Sound Selection (p. 50)
 ● Changes the sound track when more than two choices are available (Digital TV mode) (p. 16)

VIERA CAST (p. 44)
 ● Displays VIERA CAST home screen

Exit
 ● Returns to the normal viewing screen

Guide (p. 17)
 ● Displays TV Guide

Cursor buttons
 ● Makes selections and adjustments

Return
 ● Returns to the previous menu

Coloured buttons
 ● Used for the selection, navigation and operation of various functions

Hold
 ● Freeze / unfreeze picture (p. 14)
 ● Holds the current teletext page (teletext mode) (p. 18)

Index (p. 19)
 ● Returns to the teletext index page (teletext mode)

Surround (p. 24)
 ● Switches surrounding sound setting

Channel Up / Down
 ● Selects channel in sequence

VCR / DVD Panasonic equipment operations (p. 21)




Basic Connection

External equipment and cables shown are not supplied with this TV.

Please ensure that the TV is disconnected from the mains socket before attaching or disconnecting any leads. When disconnecting the mains lead, be absolutely sure to disconnect the mains plug at the socket outlet first.


Connecting aerial

TV only

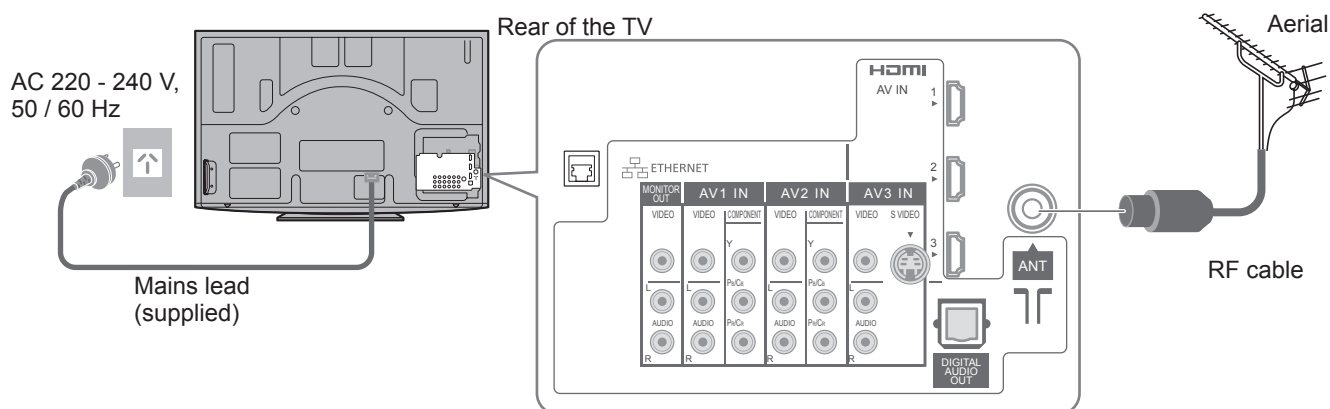

Connecting DVD Recorder / VCR

TV, DVD Recorder or VCR

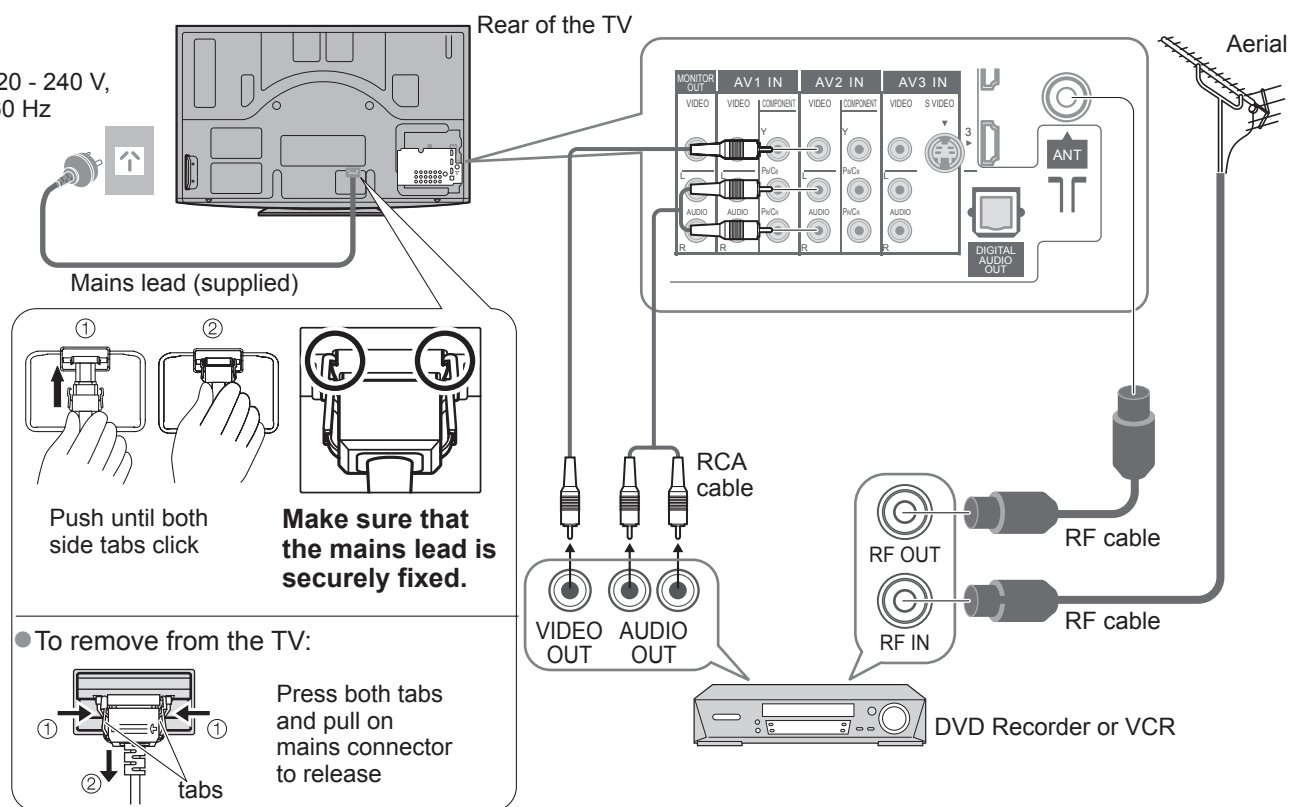

Note

- Do not put the RF cable close to the mains lead to avoid noise.
- Do not place the RF cable under the TV.
- To obtain optimum quality picture and sound, an Aerial, the correct cable (75 Ω coaxial) and the correct terminating plug are required.
- If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct Aerial system for your particular area and the accessories required.
- Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.
- VIERA Link connection ➔ p. 38
- Read the manual of the equipment too.

Auto Tuning

Search and store TV channels automatically.

These steps are not necessary if the setup has been completed by your local dealer.



1


Plug the TV into mains socket and switch On



- You can now use the remote control to turn On the TV or switch the TV to standby mode. (Power LED: On)

2

Select your area

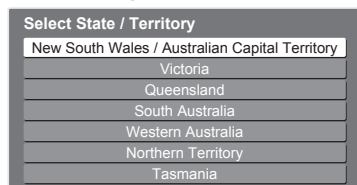


① select

② set

3


Select Auto Scan Type

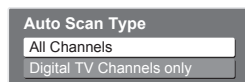

select

4


Start Auto Tuning

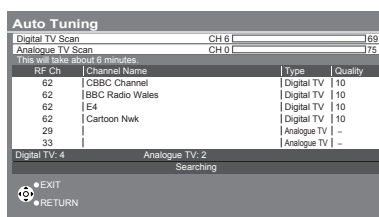

- Auto Tuning will start to search for TV channels and store them. The sorted channel order depends upon the TV signal, the broadcasting system and reception conditions.

5

Select the viewing environment

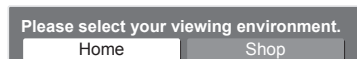

- "Home" is the recommended mode for viewing at home. Select "Home" for optimal picture / power consumption. "Shop" is for in-store display. Home: "Viewing Mode" is set as "Normal". (p. 24) Shop: "Viewing Mode" is set as "Dynamic". (p. 24)



① select

② set




Auto Tuning is complete

If you select "Shop" by mistake

Return to the "Home" or "Shop" Selection menu




Select "Home"

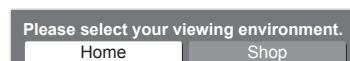

Auto Tuning is complete

- Once you press the OK button in this menu, the TV is set to Shop mode. Please reset all settings to set to "Home" mode. ➔ "Shipping Condition" (p. 32)

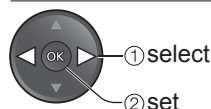


① select

② set

Using the On-Screen Displays

Many features available on this TV can be accessed via the On-Screen Display menu.

ON SCREEN HELP Instructions box (example: Sound Menu)

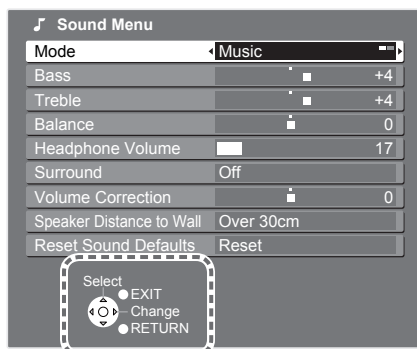

On-screen operation guide

How to use remote control



Open the Main Menu



Move the cursor / select the menu



Move the cursor / adjust levels / select from a range of options



Access the menu / store settings after adjustments have been made or options have been set



Return to the previous menu




Exit the menu system and return to the normal viewing screen

Note

- To edit channels ➔ “Editing Channels” (p. 28)
- If tuning has failed ➔ “Tuning Channels” (p. 30)
- To reset all settings ➔ “Shipping Condition” (p. 32)
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with Mains power On / Off switch.

Watching TV



1 Turn power on
POWER
● Mains power On / Off switch should be On. (p. 9)

2 Select Digital TV or Analogue TV mode
TV
● Also possible to select the mode using the TV button on the side panel of the TV. (p. 9)

3 Select a channel
 ▲ up
CH
▼ down
 or
 1 2 3
4 5 6
7 8 9
0
 ● To select the two or three-digit channel number, e.g. 39
 ➔ 3 def ➔ 9 wxyz (in a short time)
 ● If one or two-digit channel number
 ➔ OK ➔ quickly changes the channel
 ● To select from the Channel List
 ➔ OK

Information banner appears whenever you select a channel
 ● For details ➔ p. 15

All Digital Channels
 1. BBC ONE
 2. BBC TWO
 3. BBC THREE
 4. BBC FOUR
 5. BBC FIVE
 6. BBC SIX
 7. BBC SEVEN
 8. BBC EIGHT
 9. BBC NINE
 10. BBC TEN
 11. BBC ELEVEN
 12. BBC TWELVE
 13. BBC THIRTEEN
 14. BBC FOURTEEN
 15. BBC FIFTEEN
 16. BBC SIXTEEN
 17. BBC SEVENTEEN
 18. BBC EIGHTEEN
 19. BBC NINETEEN
 20. BBC TWENTY
 21. BBC TWENTY ONE
 22. BBC TWENTY TWO
 23. BBC TWENTY THREE
 24. BBC TWENTY FOUR
 25. BBC TWENTY FIVE
 26. BBC TWENTY SIX
 27. BBC TWENTY SEVEN
 28. BBC TWENTY EIGHT
 29. BBC TWENTY NINE
 30. BBC THIRTY
 31. BBC THIRTY ONE
 32. BBC THIRTY TWO
 33. BBC THIRTY THREE
 34. BBC THIRTY FOUR
 35. BBC THIRTY FIVE
 36. BBC THIRTY SIX
 37. BBC THIRTY SEVEN
 38. BBC THIRTY EIGHT
 39. BBC THIRTY NINE
 40. BBC FORTY
 41. BBC FORTY ONE
 42. BBC FORTY TWO
 43. BBC FORTY THREE
 44. BBC FORTY FOUR
 45. BBC FORTY FIVE
 46. BBC FORTY SIX
 47. BBC FORTY SEVEN
 48. BBC FORTY EIGHT
 49. BBC FORTY NINE
 50. BBC FIFTY
 51. BBC FIFTY ONE
 52. BBC FIFTY TWO
 53. BBC FIFTY THREE
 54. BBC FIFTY FOUR
 55. BBC FIFTY FIVE
 56. BBC FIFTY SIX
 57. BBC FIFTY SEVEN
 58. BBC FIFTY EIGHT
 59. BBC FIFTY NINE
 60. BBC SIXTY
 61. BBC SIXTY ONE
 62. BBC SIXTY TWO
 63. BBC SIXTY THREE
 64. BBC SIXTY FOUR
 65. BBC SIXTY FIVE
 66. BBC SIXTY SIX
 67. BBC SIXTY SEVEN
 68. BBC SIXTY EIGHT
 69. BBC SIXTY NINE
 70. BBC SEVENTY
 71. BBC SEVENTY ONE
 72. BBC SEVENTY TWO
 73. BBC SEVENTY THREE
 74. BBC SEVENTY FOUR
 75. BBC SEVENTY FIVE
 76. BBC SEVENTY SIX
 77. BBC SEVENTY SEVEN
 78. BBC SEVENTY EIGHT
 79. BBC SEVENTY NINE
 80. BBC EIGHTY
 81. BBC EIGHTY ONE
 82. BBC EIGHTY TWO
 83. BBC EIGHTY THREE
 84. BBC EIGHTY FOUR
 85. BBC EIGHTY FIVE
 86. BBC EIGHTY SIX
 87. BBC EIGHTY SEVEN
 88. BBC EIGHTY EIGHT
 89. BBC EIGHTY NINE
 90. BBC NINETY
 91. BBC NINETY ONE
 92. BBC NINETY TWO
 93. BBC NINETY THREE
 94. BBC NINETY FOUR
 95. BBC NINETY FIVE
 96. BBC NINETY SIX
 97. BBC NINETY SEVEN
 98. BBC NINETY EIGHT
 99. BBC NINETY NINE
 100. BBC HUNDRED

1 select a channel
2 watch

Note

- When the TV is switched to standby, there will be a clicking sound after a short delay. This is normal.

Select a channel using information banner (p. 15)


Possible to confirm the programme name before selecting channels.

Display information banner if it is not displayed



- Possible to set display timeout in "Banner Display Timeout" (p. 25).

While the banner is displayed, select a channel

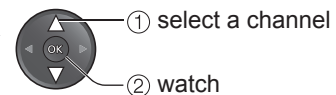


Select a channel using TV Guide (Digital TV mode) (p. 17)

Possible to confirm the TV Guide (EPG) before selecting channels.

Display TV Guide



Select a channel

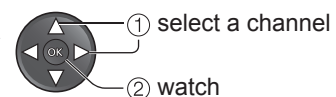

Other useful functions

Hold

HOLD



Freeze / unfreeze picture

Display subtitles

STTL



Display / hide subtitles (if available)

Other useful functions

Display information banner



Display information banner

- Also appears when changing channels

Programme name Channel Current time

1 TEN Digital 10:30am All Digital Channels

Coronation Street Select favourites

9:00 am - 11:00 am ◀ Now ▶ Software update

Rating: PG Bad signal I/II 45

Digital TV: Programme Start / Finish time (example)

Analogue TV: Channel status

Features available / Message meanings

	Sound mute On	Bad signal	Poor TV signal quality (Digital TV mode)		Teletext service available
	Audio mode (p. 50) (Analogue TV mode)	Encrypted	Scrambled programme (Digital TV mode)		Multiple audio available (Digital TV mode)
Rating:	Rating information (Digital TV mode) (p. 50)		Subtitle service available	1 - 90	Off Timer remaining time
					For settings → see below

- To confirm another tuned channel name



- To watch the programme listed in the banner



- To select a favourite list (Digital TV mode)



- To hide



- Information on the next programme (Digital TV mode)



- To set display timeout

→ "Banner Display Timeout" (p. 25)





- Extra information (press again to hide the banner) (Digital TV mode)



Off Timer

Turn the TV off automatically after a fixed period of time (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)

MENU

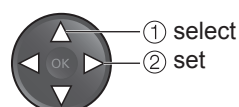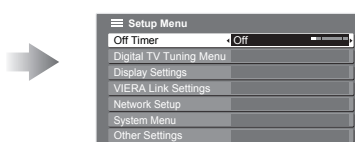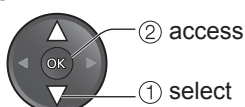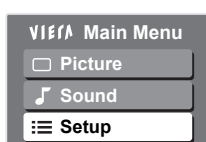

Select "Off Timer" and set the time

- To cancel → Set to "Off" or turn the TV off.
- To display the remaining time → Information banner
- When the remaining time is within 3 minutes, the remaining time will flash on screen.

Adjust the standard time Region Select

Select the region where you live to adjust the standard time.

- The time contained in the broadcast signal is UTC (Universal Time coordinated) formally known as GMT (Greenwich Mean Time).

Region	Standard time	Daylight Saving Time: Auto (During Summer Time)
NSW / ACT	+10:00	+11:00
Victoria		
Queensland	+10:00	
South Australia	+9:30	+10:30
Western Australia	+8:00	+9:00
Northern Territory	+9:30	
Tasmania	+10:00	+11:00

(Based on GMT)

- These items can be set from "Other settings" in Setup Menu. (p. 23, 25)

Adjust for Summer Time Daylight Saving Time

Select time offset from the standard time for Summer Time.

- Normally select "Auto".
- If there is a gap between displayed time and actual time, set this function.

Watching TV

Other useful functions

Display the selectable settings for the current programme

OPTION **Check or change the current programme status instantly**



② change
① select

Change the settings

Audio Selection (Digital TV mode)

Allows you to select between alternative language for sound tracks (if available)

Volume Correction

Adjusts volume of individual programme or input mode

MPX (Analogue TV mode)

➔ Sound Menu (p. 24)

Note

- Also possible to change the settings in Menu list (p. 24 and p. 25).

Change aspect ratio

ASPECT



Change the aspect ratio




Aspect Selection list

Enjoy viewing the picture at its optimum size and aspect.

ASPECT



Display Aspect Selection list ➔

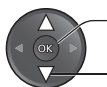

② store
① select

While the list is displayed, select the mode

- To change the mode using the ASPECT button only



➔ Press repeatedly until you reach the desired mode

16:9



Directly displays the image at "16:9" without distortion (anamorphic).

14:9



Displays the image at the standard "14:9" without distortion.

Just



Displays a "4:3" image full-screen. Stretching is only noticeable at the left and right edges.

4:3



Displays the image at the standard "4:3" without distortion.

4:3 Full




Displays a "4:3" image enlarged horizontally to fit the screen.
● Digital TV mode and HD signal only

Zoom1



Displays a "16:9" letterbox or "4:3" image without distortion.

Zoom2

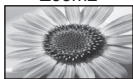

Displays a "16:9" letterbox (anamorphic) image full-screen without distortion.

Zoom3




Displays a "2.35:1" letterbox (anamorphic) image full-screen without distortion.
At "16:9", displays the image at its maximum (with slight enlargement).

Note

- Only "16:9" and "4:3 Full" are available in Digital TV mode.
- Only "16:9" and "4:3" are available in PC mode.
- Only "16:9" is available when "Viewing Mode" is set to "Game".
- Not available in teletext mode.
- Aspect mode can be memorized separately for SD (Standard definition) and HD (High definition) signals. (except Digital TV mode)


Using TV Guide

Using TV Guide enables you to select programme easily, view programme informations, etc. TV Guide—Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the future broadcasts over the next seven days (depending on the broadcasters).

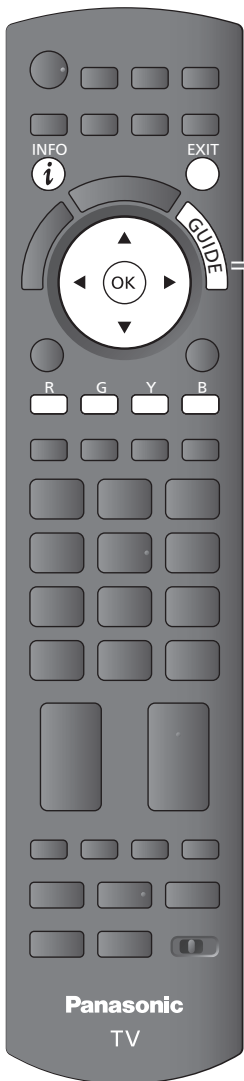


View TV Guide

Each time pressed, the layout will be changed.
(Landscape / Portrait)

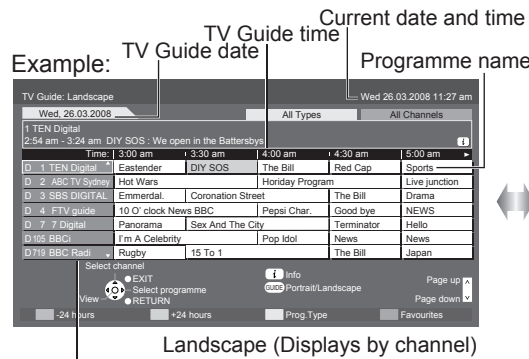

Example:

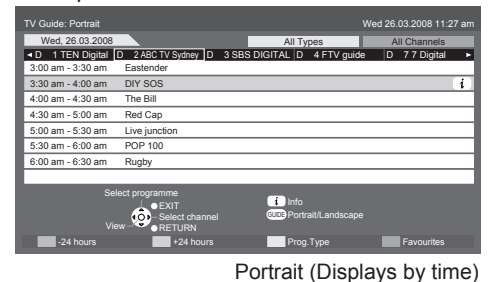


Channel

To the previous day → R

To the next day → G

To watch the programme

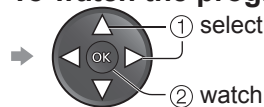


To view details of the programme

Select the programme




To return to TV → EXIT

To view a channel list of the selected favourite list

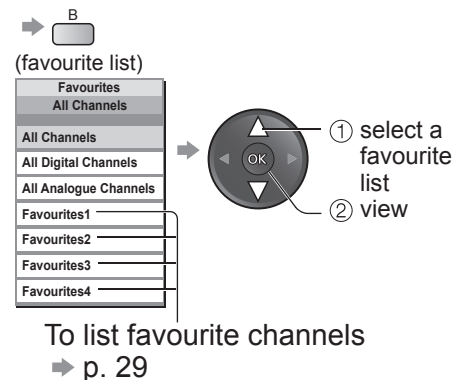

To view a channel list of the selected type

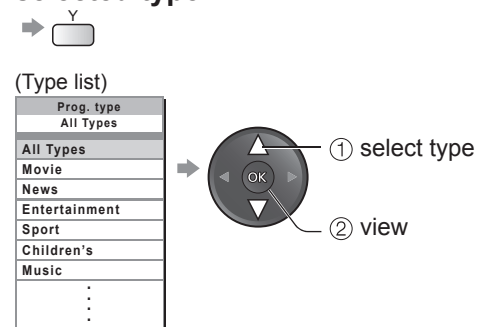

Note

- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before the TV Guide is completely shown.

Viewing Teletext

You can enjoy teletext broadcasting, including news, weather forecasts and subtitles, if this service is provided by the broadcasters.

To change mode → “Teletext” in Setup Menu (p. 25)

1 Switch to Teletext

TEXT ● Displays Index (content varies depending on the broadcasters)

2 Select the page (up to page 899)

1 2 3 or [OK] or [CH] or R G Y B
4 5 6
7 8 9
0
(Corresponds to the colour bar)

To adjust contrast
→ MENU (Press three times) → [OK] As the blue bar is displayed

To return to TV → TEXT or EXIT

Sub page number
Current page number **P100** 17:51 28 Feb Time / date

TELETEXT INFORMATION

Colour bar

What is FASTEXT mode?

In FASTEXT mode, four differently coloured subjects are situated at the bottom of the screen. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.

What is TOP mode? (in case of TOP text broadcasting)

TOP is a particular improvement of the standard teletext service that results in an easier search and effective guide.

- Fast overview of the teletext information available
- Easy to use step-by-step selection of the topical subject
- Page status information at the bottom of the screen

Available page up / down → R G

To select among subject blocks → B

To select next subject within the subject block
(After the last subject, it moves to the next subject block.) → Y

What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. (“Store frequently viewed pages”, p. 19)

Using teletext conveniently

Hold

HOLD Stop automatic updating
(If you wish to hold the current page without updating)



To resume → HOLD

Reveal hidden data

MENU → R Reveal hidden words e.g. quiz page answers


Re-hide → R


Using teletext conveniently

INDEX	Call up Subtitles
INDEX Return to the main index page 	STTL Display subtitles  <ul style="list-style-type: none"> ● Call up P801 (subtitle page) if available. ● If you press this button during P801 is displayed, teletext mode will be cancelled and return to TV.

View in multiwindow

Watch TV and Teletext in two windows at once

MENU
 (Press twice)





Select teletext only or picture / teletext.


- Operations can be made only in Teletext screen.

FULL / TOP / BOTTOM

MENU → G

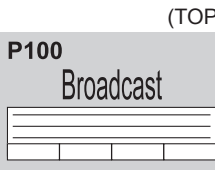

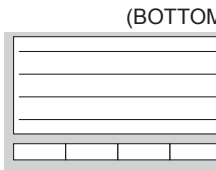

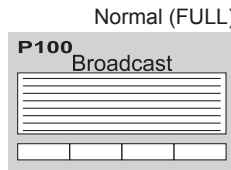



(Expand the TOP half) (Expand the BOTTOM half) Normal (FULL)

Store frequently viewed pages


Store frequently viewed pages in the colour bar (List mode only)



Corresponding colour button
(As page is displayed)




press and hold

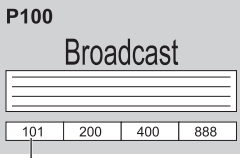


The number changes to white.


To change stored pages



Colour button you want to change




Enter new page number




press and hold

View sub page

View sub page (Only when teletext is more than one page)



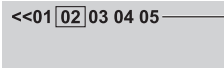



Appears at top of the screen


To view specific sub page

MENU → B





Enter the 4-digit number

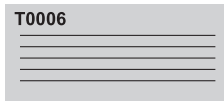


- Sub pages:
The number of sub pages varies depending on the broadcasters.
It may take some time for searching, during which time you can watch TV.

Watch TV while waiting for update


View the TV picture while searching for a teletext page

Teletext automatically updates itself when new information becomes available.

MENU → Y



Appears when updating is completed



View the updated page

Changes to TV screen temporarily
 (You cannot change the programme.)

- The news page provides a function that indicates arrival of latest news ("News Flash").

Watching Videos and DVDs

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch the input.

● To connect the equipment ➔ p. 11

You can operate some functions of selected Panasonic external equipment with this remote control.




1

Display the input selection menu

AV

2

Select the input mode of the connected equipment

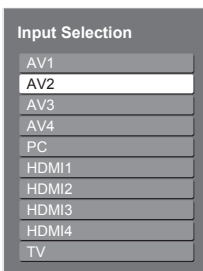

② watch

① select

● You can also select the input using the AV button on the remote control or the side panel of the TV.


Press the button repeatedly until the desired input is selected.

● You can label or skip each input mode ➔ “Input Labels” (p. 26)

3

View

Displays the selected mode

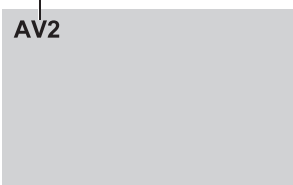










To return to TV ➔ TV

Note


- If the external equipment has an aspect adjustment function, set to “16:9”.
- For details, see the manual of the equipment or ask your local dealer.

Panasonic equipment connected to the TV can be directly operated with the remote control.

	BD/DVD / TV switch* Switch to BD/DVD to operate Panasonic DVD Recorder, DVD Player, Player theatre, Blu-ray Disc theatre or VCR Switch to TV to operate VIERA Link equipment ➡ “VIERA Link Control” (p. 41)
	Standby Set to Standby mode / Turn on
	Play Playback videocassette / DVD
	Stop Stop the operations
	Rewind / Skip / Search VCR: Rewind, view the picture rapidly in reverse DVD: Skip to the previous track or title Press and hold to search backward
	Fast-forward / Skip / Search VCR: Fast-forward, view the picture rapidly forward DVD: Skip to the next track or title Press and hold to search forward
	Pause Pause / Resume DVD: Press and hold to play at slow speed
	Programme Up / Down Select programme
	Record Start recording

***Setting your remote control to operate the Panasonic equipment**

① Switch to BD/DVD ➡ 

② Press and hold  during the following operations

Enter the appropriate code
See table below

1

2

3

4

5

6

7

8

9

0

➡ Press 

Type of equipment	Code
DVD Recorder / DVD Player / Blu-ray Disc Player	70 (default)
Player theatre / Blu-ray Disc theatre	71
VCR	72

Note

- Confirm if the remote control works correctly after changing the code.
- The codes will be reset to default values if batteries are replaced.
- Some operations may not be possible on some equipment models.

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.



1


Display the menu



- Displays the functions that can be set (varies according to the input signal)

2

Select the menu

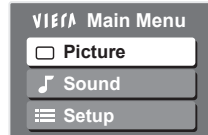

(example)




② access

① select

3

Select the item

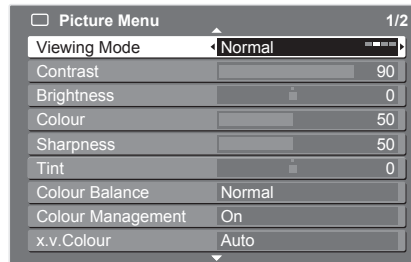


(example)



select

4

Adjust or select

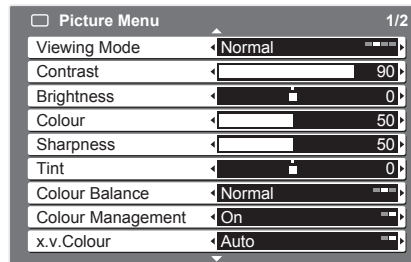

(example)



① change

② store or access
(Required by some functions)


To return to TV at any time



To return to the previous screen



To change menu pages

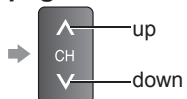

Choose from among alternatives

Number and positions of alternatives



Changed

Adjust using the slide bar





Moved

Go to the next screen



Displays the next screen

Enter characters by free input menu

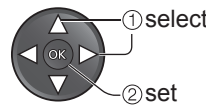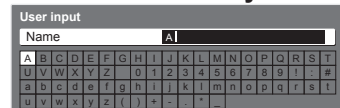

- To delete a character → R


- To delete all characters → B

Every press changes the character by one. Leave it for a second to set the character, or press OK or any numeric button within a second.

See the table below for the corresponding characters for each numeric button.

Numeric buttons	Characters	Numeric buttons	Characters
1	. 1 ! : # + - * _ ()	6	m n o 6 M N O
2	a b c 2 A B C	7	p q r s 7 P Q R S
3	d e f 3 D E F	8	t u v 8 T U V
4	g h i 4 G H I	9	w x y z 9 W X Y Z
5	j k l 5 J K L	0	Space 0

Overview

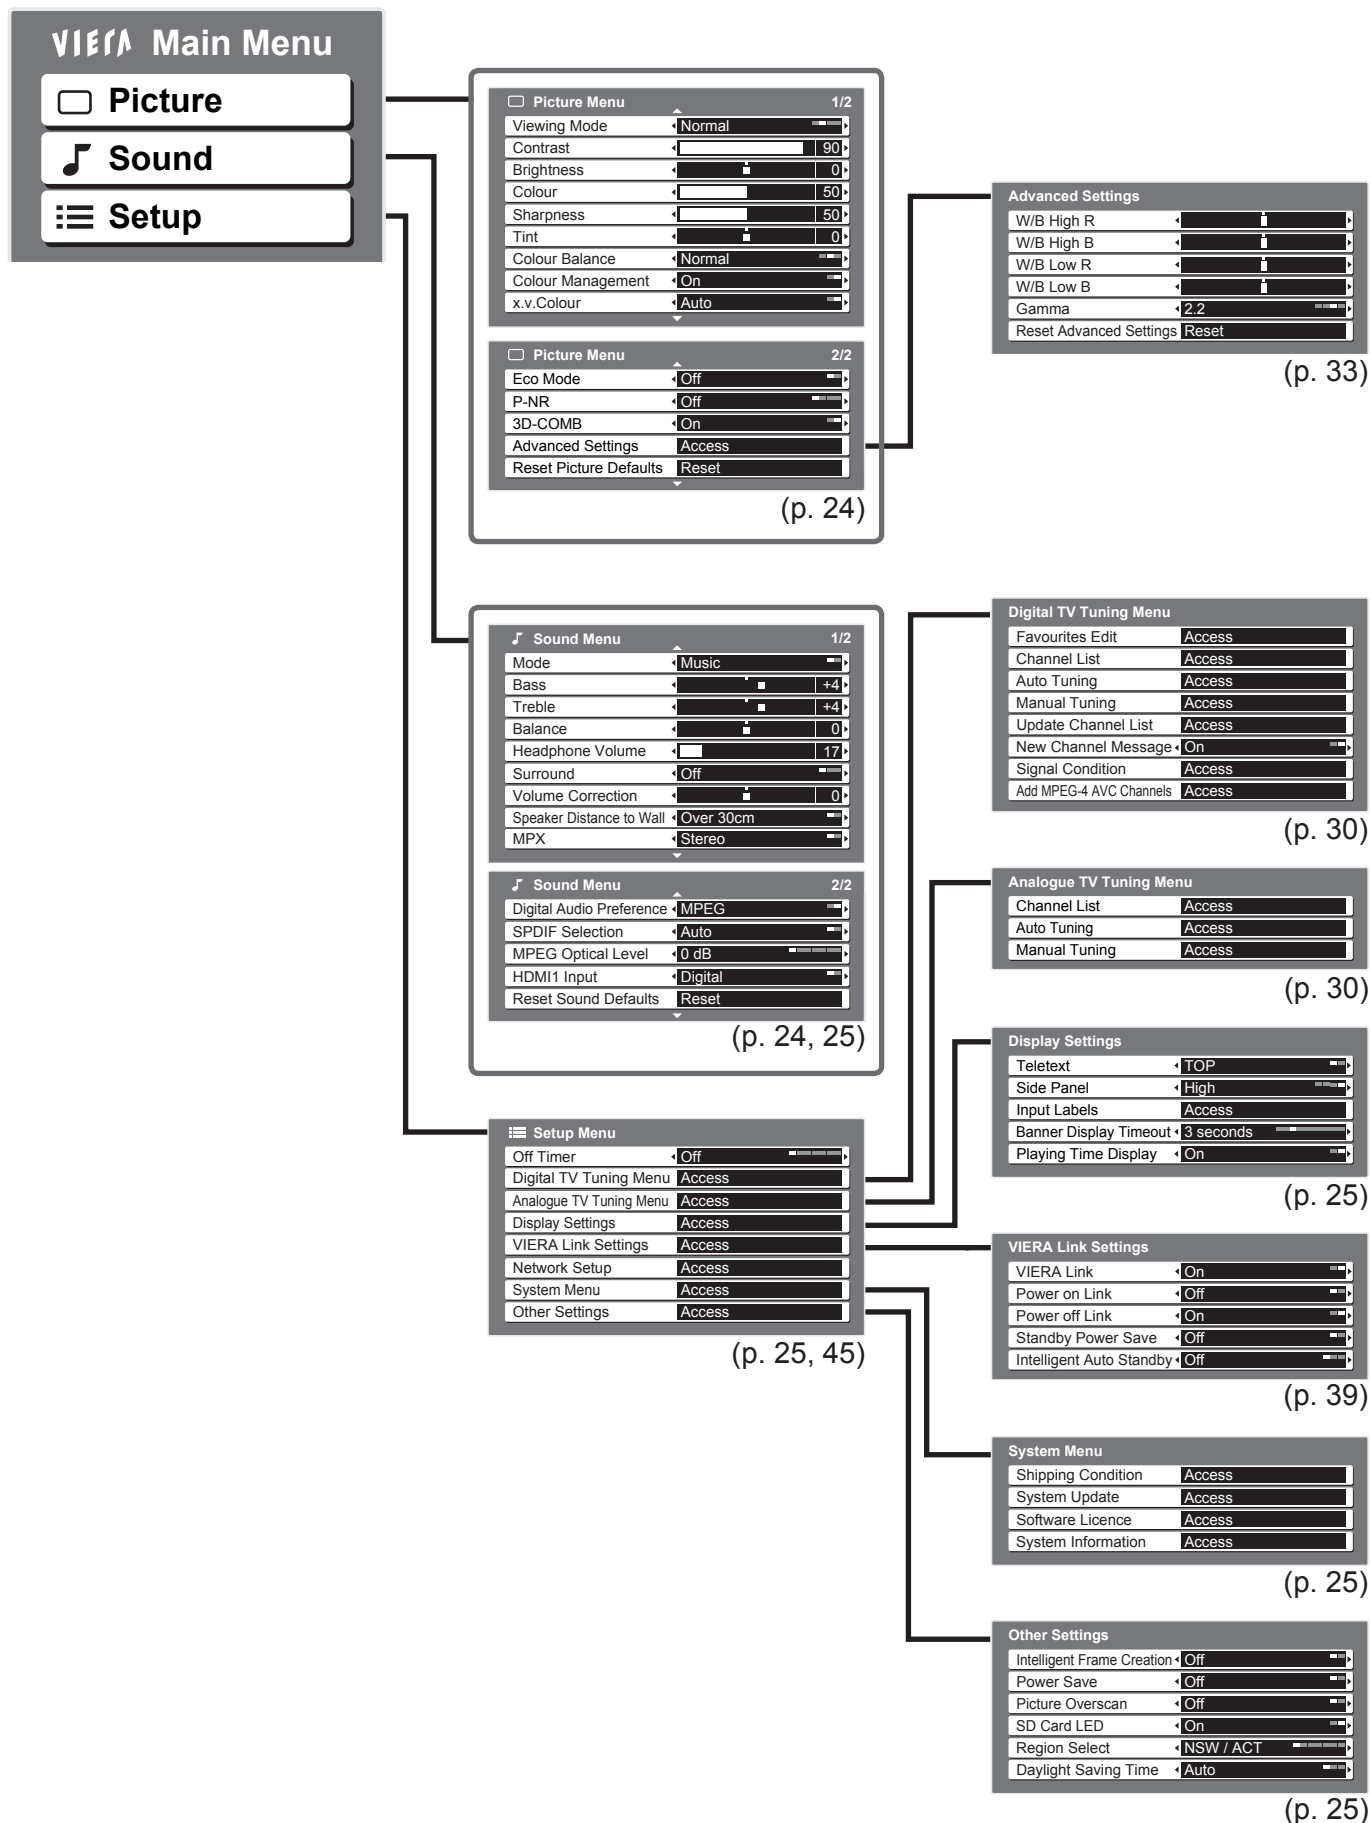

● Depending on the received signals, available items are varied.

How to Use Menu Functions

Menu list


Menu	Item	Adjustments / Configurations (alternatives)
Picture	Viewing Mode	Basic picture mode (Dynamic / Normal / Cinema / Game) Dynamic : Provides enhanced picture contrast and sharpness when viewing in a bright room Normal : Recommended for viewing under normal ambient room lighting conditions Cinema : For watching movies in a darkened room producing a cinema-like picture Game : Game playing time is displayed only when connecting a game equipment. ●Set for each input signal.
	Contrast, Brightness, Colour, Sharpness	Increases or decreases the levels of these options according to your personal preference
	Tint	With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste. ●For NTSC or Component / HDMI input signal reception only
	Colour Balance	Allows you to set the overall colour tone of the picture (Cool / Normal / Warm)
	Colour Management	Automatically adjusts colours to vivid ones (Off / On) ●Not valid on PC signal
	x.v.Colour	Increases the colour gradations (Off / Auto) This is effective when watching HD moving pictures with extended gamut (xvYCC) from external equipment. ●HDMI input mode or Movie View Mode (p. 37) only
	Eco Mode	Adjusts picture settings automatically dependent on ambient lighting conditions (Off / On)
	P-NR	Picture Noise Reduction Automatically reduces unwanted picture noise and flicker noise in the contoured parts of a picture (Off / Min / Mid / Max) ●Not valid on PC signal
	3D-COMB	Occasionally, whilst viewing still or slow moving pictures, colour patterning may be seen. Set to "On" to display sharper and more accurate colours. (Off / On) ●For PAL or NTSC signal reception only ●Not valid on S-Video, Component, PC, HDMI and SD Card
	Advanced Settings	Set for colour balance, view and position. (p. 33) Set for colour balance in Normal or Cinema viewing mode.
	Reset Picture Defaults	Press the OK button to reset the present Picture Menu to the default settings.
Sound	Mode	Basic sound mode (Music / Speech)
	Bass	Increases or decreases level to enhance or minimise lower, deeper sound output
	Treble	Increases or decreases level to enhance or minimise sharper, higher sound output
	Balance	Adjusts volume level of right and left speakers
	Headphone Volume	Adjusts the volume of the headphones
	Surround	Surround sound settings (Off / V-Audio / V-Audio Surround) V-Audio: Provides a dynamic enhancer to simulate improved spatial effects V-Audio Surround: Provides a dynamic enhancer of width and depth to simulate improved spatial effects ●Switching is also possible by the Surround button on the remote control. (p. 10)
	Volume Correction	Adjusts volume of individual channel or input mode
	Speaker Distance to Wall	Adjusts the low frequency sound (Over 30cm / Up to 30cm) ●Over 30cm: Recommended when the back space between the TV and wall is over 30 cm ●Up to 30cm: Recommended when the back space between the TV and wall is within 30 cm
	MPX	Selects stereo / monaural (Mono / Stereo) (p. 50) ●Normally: Stereo ●Stereo signal cannot be received: Mono ●M1 / M2: Available while mono signal is transmitted ●Analogue TV mode only
	Digital Audio Preference	Selects the initial setting for Audio tracks (Dolby D / MPEG) If programme has both Dolby Digital and MPEG audio tracks, priority is given to what you select. Dolby D:A method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2ch) audio, these signals can also be multi-channel audio. MPEG:An audio compression method that compresses audio to small size without any considerable loss of audio quality. ●Digital TV mode only
	SPDIF Selection	Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal (Auto / PCM) Auto: Dolby Digital is output as Dolby Digital Bitstream. MPEG is output as PCM. PCM: Dolby Digital is output as PCM. MPEG is output as PCM. ●Digital TV mode only

Menu	Item	Adjustments / Configurations (alternatives)
Sound	MPEG Optical Level	You can adjust the audio level of MPEG output from DIGITAL AUDIO OUT terminal as the initial setting. ●0dB to -12dB in -2dB reductions ●Digital TV mode only
	HDMI1 / 4 Input	Select to fit the input signal. (Digital / Analogue) (p. 34) Digital: HDMI cable connection Analogue: HDMI-DVI adapter cable connection ●HDMI input mode only ●HDMI2 / 3 terminals are for digital signal only.
	Reset Sound Defaults	Press the OK button to reset the present Sound Menu to the default settings.
Setup	Off Timer	Sets the time the TV automatically turns Off (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes) (p. 15)
	Tuning Menu	Favourites Edit
		Channel List
		Auto Tuning
		Manual Tuning
		Update Channel List
		New Channel Message
		Signal Condition
	Display Settings	Add MPEG-4 AVC Channels
		Teletext
		Side Panel
		Input Labels
		Banner Display Timeout
		Playing Time Display
	VIERA Link Settings	VIERA Link
		Power on Link
		Power off Link
		Standby Power Save
		Intelligent Auto Standby
	Network Setup	
	System menu	Shipping Condition
		System Update
		Software Licence
		System Information
	Other Settings	Intelligent Frame Creation
		Power Save
		Picture Overscan
		SD Card LED
		Region Select
		Daylight Saving Time

- A different menu will be displayed while PC, DVI to HDMI adapter cable or SD Card is used. (p. 33 - 37)
- Only available items can be selected.

Input Labels

For easier identification and selection of the input mode, you can label each input terminals or skip terminal that is not connected to any equipment. (p. 20)



1 Display the menu
MENU

2 Select "Setup"
VIERA Main Menu
Picture
Sound
Setup

3 Select "Display Settings"
Setup Menu
Off Timer Off
Digital TV Tuning Menu
Display Settings Access
VIERA Link Settings
Network Setup
System Menu
Other Settings

4 Select "Input Labels"
Display Settings
Teletext TOP
Side Panel High
Input Labels Access
Banner Display Timeout 3 seconds
Playing Time Display On

5 Select an input terminal and set
Input Labels 1/2
AV1 AV1
AV2 AV2
AV3 AV3
AV4 AV4
PC PC
HDMI1 HDMI1
HDMI2 HDMI2
HDMI3 HDMI3
HDMI4 HDMI4
Input Labels 2/2
Digital TV Digital TV
Analogue TV Analogue TV

② access
① select

② access
① select

② access
① select

② set
① select

To return to TV → EXIT

The labels you set will be displayed in "Input Selection" menu (p. 20) or banner.

● If "Skip" is selected, you cannot select the mode.

User input

You can name each input terminals freely.

① select
② access
Select "User input"

User input
Name A1
A B C D E F G H I J K L M N O P Q R S T
U V W X Y Z 0 1 2 3 4 5 6 7 8 9 * #
a b c d e f g h i j k l m n o p q r s t
u v w x y z () + - . * _


(maximum: ten characters)
You can set characters by using numeric buttons. → p. 22

① select
② set
Set characters

RETURN
Store

Digital TV Settings

Digital TV Settings provide access to various advanced features.



1 If in Analogue TV mode
Select Digital TV mode
TV

2 **Display the menu**
MENU

3 **Select “Setup”**

VIERA Main Menu	
Picture	
Sound	
Setup	

4 **Select “System Menu”**


Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	
Display Settings	
VIERA Link Settings	
Network Setup	
System Menu	Access
Other Settings	

5 **Select “System Update”**

System Menu	
Shipping Condition	
System Update	Access
Software Licence	
System Information	

6 **Set**

To return to TV → EXIT

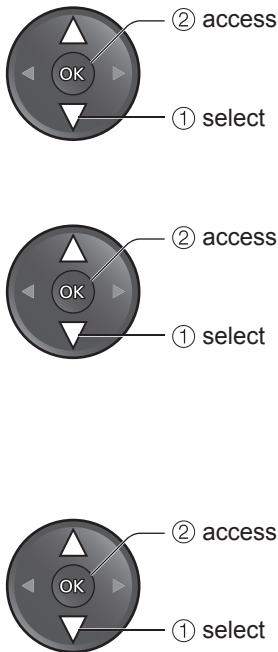


Update TV's software system **System Update**

Download new software to TV.

- For details → p. 50

If System Update is performed, the software will be updated. It may change TV functions. If you do not wish to do so, set “Auto Update Search in Standby” to Off.

Select “Auto Update Search in Standby” and then set “On” or “Off”

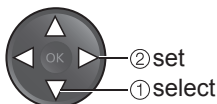


- On: Automatically performs a search in standby and downloads an update, if any software updates are available

Note

- When the TV is switched to standby, there will be a clicking sound after a short delay. Similar clicking sounds will also occur at 3:00 AM and 5:00 AM (p. 50) when “Auto update Search in Standby” is set to “On”. These sounds are normal.

To update immediately

Select
“System Update Search Now”

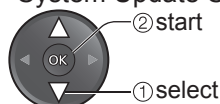

Searches for an update (for several minutes) and displays a corresponding message if any

Download



- Download may take for about 1 hour.

Note

- During downloading, the TV will display a blank screen for 40 to 50 seconds. Do not interrupt the TV during this procedure.

Editing Channels

You can make your favourite channel lists, skip unwanted channels, etc.

- 1 Select Digital TV or Analogue TV**
TV
- 2 Display the menu**
MENU
- 3 Select "Setup"**

VIERA Main Menu	
Picture	
Sound	
Setup	
- 4 Select "Digital TV Tuning Menu" or "Analogue TV Tuning Menu"**

Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	Access
Display Settings	
VIERA Link Settings	
Network Setup	
System Menu	
Other Settings	
- 5 Select "Favourites Edit" or "Channel List"**

Digital TV Tuning Menu	
Favourites Edit	Access
Channel List	Access
Auto Tuning	
Manual Tuning	
Update Channel List	
New Channel Message	On
Signal Condition	
- 6 Set**


To return to TV → EXIT

List favourite channels (Digital TV mode) **Favourites Edit**

Create your favourite channel list (Favourites) from various broadcasters (up to 4: Favourites1 to 4). The list is added to "Favourites" list in TV Guide (p. 17) and information banner (p. 15) and then easily accessed. **Select a channel and add it to the list**



To edit List

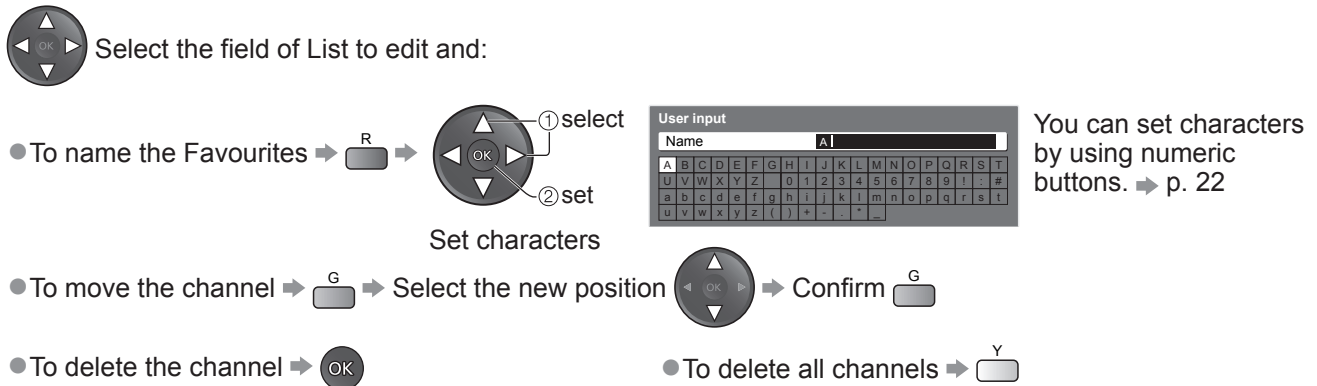

Note

- Channel numbers are defined by the broadcaster and cannot be changed.
- Hidden channels (see below) can be selected but not viewed.

Skip unwanted channels / Edit channels (Change name, Move) **Channel List**

You can hide unwanted channels. The hidden channels cannot be displayed except in this function. Use this function to skip unwanted channels.


Select a channel and add / delete



You can edit channels.


- If a VCR is connected only with the RF cable, edit "VCR". (Analogue TV mode)

① Select a channel to edit

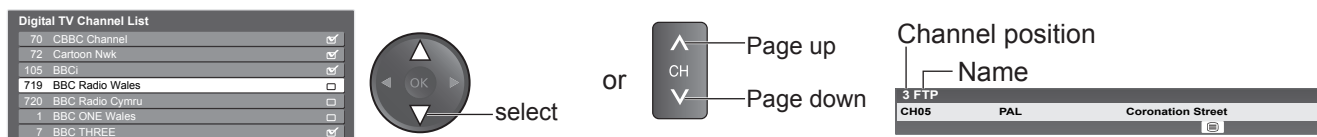

② Edit

To change the displayed name when selecting channels (Only in Analogue TV mode)

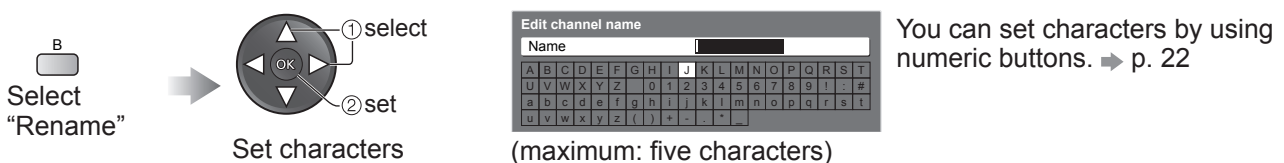

To move channel position




To swap channels



Tuning Channels

You can retune all the TV channels when moving house or search for new channels which may have recently started broadcasting.




- 1 Select Digital TV or Analogue TV**
TV
- 2 Display the menu**
MENU
- 3 Select "Setup"**
Main Menu
Picture
Sound
Setup
- 4 Select "Digital TV Tuning Menu" or "Analogue TV Tuning Menu"**
Setup Menu
Off Timer Off
Digital TV Tuning Menu Access
Display Settings
VIERA Link Settings
Network Setup
System Menu
Other Settings
- 5 Select a function**
Digital TV Tuning Menu
Favourites Edit
Channel List
Auto Tuning Access
Manual Tuning Access
Update Channel List Access
New Channel Message On
Signal Condition Access
- 6 Set**

To return to TV → EXIT

For Auto Tuning, using the buttons on the side panel of the TV (p. 9)

- ① Press repeatedly until "Auto Tuning" appears F
 - ② Access "Auto Tuning" TV
 - ③ Start "Auto Tuning" TV
- To return to TV → F

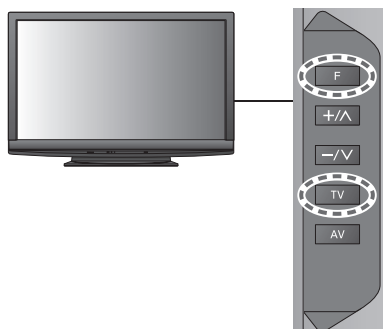


Set all Digital TV or Analogue TV channels automatically

Digital TV Auto Tuning or Analogue TV Auto Tuning

Automatically retune all Digital TV or Analogue TV channels received in the area.

- Only Digital TV channels are retuned in Digital TV mode.
- Only Analogue TV channels are retuned in Analogue TV mode.

Start Auto Tuning

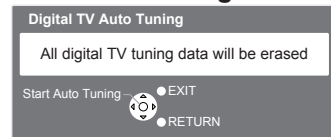

Settings are made automatically

Digital TV Auto Tuning				
Scan CH 6 69				
This will take about 3 minutes.				
RF Ch	Channel Name	Type	Quality	
62	CBBC Channel	Digital TV	10	
62	BBC Radio Wales	Digital TV	10	
62	E4	Digital TV	10	
62	Cartoon Net	Digital TV	10	
Digital TV - 4 Searching				


- All the previous tuning settings are erased.
- When the operation is completed, the channel at channel position "1" will be displayed.
- Search begins in the order from the lower channels to the higher channels. Channels received during this process are added to the list. (p. 31)
- If tuning has not been done completely → "Digital TV Manual Tuning", "Analogue TV Manual Tuning" (p. 31)

Set Digital TV channel manually **Digital TV Manual Tuning**

Normally use "Digital TV Auto Tuning" or "Update Channel List" to update Digital TV channels on your channel list.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

Digital TV Manual Tuning			
Physical Channel	[CH32] 552.00 MHz		
Signal Quality	0	10	
Signal Strength	0	10	
No.	Channel Name	Type	New
Digital TV: 0			

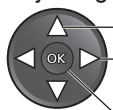

- ①select physical channel
- ②adjust frequency (set where the level of “Signal Quality” becomes the maximum)
- ③search

- All channels found will be added to the Digital TV Channel List.

Set Analogue TV channel manually


Manual Tuning

Set Analogue TV channel manually after Analogue TV Auto Tuning.

- If a VCR is connected only with the RF cable, select channel position "0".

Analogue TV Manual Tuning

1 BBC1 CH33

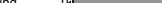Manual Tuning 0  75

Select a channel position



Select a channel



Search and store



- ① search
- ② store

Update channels automatically **Update Channel List**

You can add new channels, delete duplicated channels, update channel name and position automatically to Channel List.

Digital TV Update Channel List

Scan CH 6 69

This will take about 3 minutes.

RF Ch	Channel Name	Type	Quality

Digital TV: 0 Searching

- The Digital TV Channel List is updated with the current settings saved as they are.

Display a message **New Channel Message**

Selects whether to give a message when new Digital TV channels are found. **(Off / On)**

New channels found!
Press OK to update channel list.
Press EXIT to ignore.

Check Digital TV signal Digital TV Signal Condition

Selects a channel and checks the Digital TV signal condition.

- To change the channel ➡



Digital TV Signal Condition

Channel Name	101 DZFinfokanal
Signal Quality	<div><div></div></div>
Signal Strength	<div><div></div></div>
	0 2 4 6 8 10
Network Name	RiksTV
RF Parameter	[CH32] 562.00MHz

A good Signal Strength is not an indication of suitable signal for Digital TV reception. Please use the Signal Quality indicator as follows:


Signal Quality:

- Green bar ➡ Good
- Yellow bar ➡ Poor
- Red bar ➡ Bad (Check the aerial)

Restore Settings

(Shipping Condition)

Resets the TV to its original condition, i.e. no channels tuned in. All settings (channels, picture, sound quality, etc.) are reset.

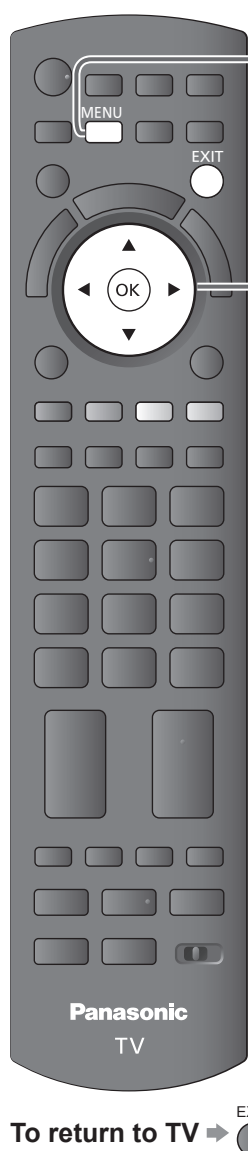


- 1 Display the menu**
MENU
- 2 Select "Setup"**
VIERA Main Menu
Picture
Sound
Setup
- 3 Select "System Menu"**
Setup Menu
Off Timer Off
Digital TV Tuning Menu
Display Settings
VIERA Link Settings
Network Setup
System Menu Access
Other Settings
- 4 Select "Shipping Condition"**
System Menu
Shipping Condition Access
System Update
Software Licence
System Information
- 5 Set**

To return to TV → EXIT

Restore Settings Shipping Condition

① Check the message and reset

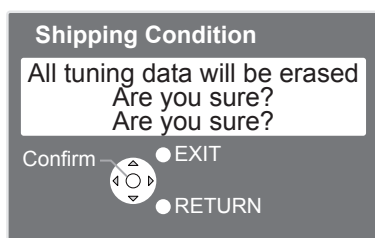

② Follow the on-screen instructions

- "Auto Tuning" will automatically start when Mains power On / Off switch is next turned On. (p. 12)


To retune TV channels only, e.g. after moving house

- ➔ "Digital TV Auto Tuning" or "Analogue TV Auto Tuning" (p. 30)

Displaying PC Screen on TV

The screen of the PC connected to the TV can be displayed on the TV.
You can also listen to PC sound with the audio cable connected.

●To connect PC ➔ p. 48

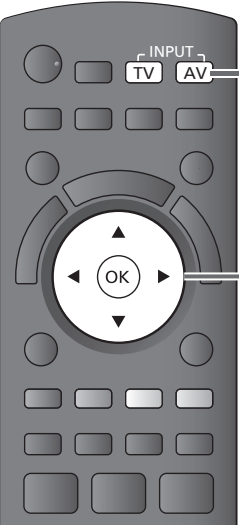

1

Select the external input

AV

2

Select "PC"

Input Selection

AV1

AV2

AV3

AV4

PC

HDMI1

HDMI2

HDMI3

HDMI4

TV

② access

① select



OK

●Corresponding signals ➔ p. 53

●If "H-freq." or "V-freq." is shown in red, the signals may not be supported.

To return to TV ➔ TV

PC menu setting (changed as desired)

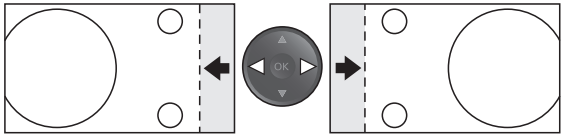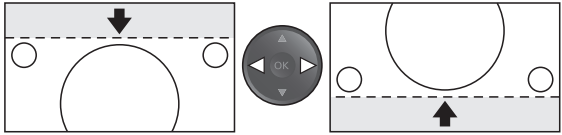Menu	Item		Adjustments / Configurations (options)	
Picture	Advanced Settings	W/B High R	White balance of bright red area	<div><div>①</div><div>②</div><div>① and ② repeatedly adjusted</div></div>
		W/B High B	White balance of bright blue area	
		W/B Low R	White balance of dark red area	
		W/B Low B	White balance of dark blue area	
		Gamma	(S Curve / 2.0 / 2.2 / 2.5)	
		Reset Advanced Settings	Press the OK button to reset to the default Picture settings	
Setup	PC Setup	Input Resolution	Switches to a wide view ●VGA (640 × 480 pixels), WVGA (852 × 480 pixels), XGA (1,024 × 768 pixels), WXGA (1,280 × 768 pixels, 1,366 × 768 pixels) ●Options change depending on signals	
		Clock	Set to the minimum level if noise occurs	
		H-pos	Adjusts horizontal position	
		V-pos	Adjusts vertical position	
		Clock Phase	Eliminates flicker and distortion ●Adjust after Clock adjustment	●Set to the minimum level if noise occurs
		Sync	PC sync signal type (H & V / SOG) ●H & V : Horizontal and Vertical sync from your PC (Most common sync format) SOG : Sync on Green sync from your PC	
		Reset PC Settings	Press the OK button to reset to the default Setup settings	

●Other items ➔ p. 24 and p. 25

Restore Settings (Shipping Condition)
Displaying PC Screen on TV

Advanced

HDMI Functions

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set top box, a DVD player or a game equipment, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.

About connections, see “External Equipment” (p. 48).

Note

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- Audio settings can be made on the “HDMI1 / 4 Input” menu screen. (p. 25)
- Applicable audio signal sampling frequencies (2ch L.PCM): 48 kHz, 44.1 kHz, 32 kHz
- HDMI2 and 3 terminals are for digital audio signal only.
- Use with a PC is not guaranteed. Only HDMI video formats in the HDMI table (p. 53) are applicable.
- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- An equipment having no digital output terminal may be connected to the input terminal of either “COMPONENT”, “S-VIDEO”, or “VIDEO” to receive analogue signals.
- The HDMI input terminal can be used only with the following image signals:
480i, 480p, 576i, 576p, 720p, 1080i and 1080p. Match the output setting of the digital equipment.
- For details of the applicable HDMI signals, see p. 53.



DVI connection

- If the external equipment has only a DVI output, connect to the HDMI1 / 4 terminal via a DVI to HDMI adapter cable (*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal (HDMI1: use AV2 IN AUDIO terminals / HDMI4: use AV4 IN AUDIO terminals).

DVI Position Settings

If the picture position is not fit to the screen during the DVI connection, adjust the position on “DVI Position Settings” in Setup Menu. The settings are memorized for each HDMI terminals and input signals.

- To make settings ➡ “How to Use Menu Functions” ① to ④ (p. 22)

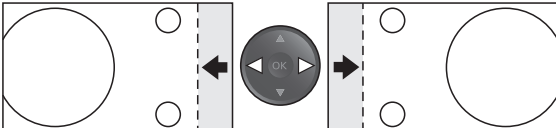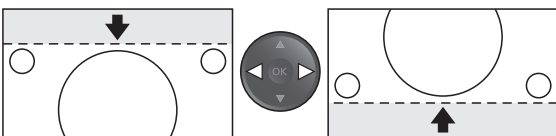Menu	Item		Adjustments	
Setup	DVI Position Settings	H-pos	Adjusts horizontal position	
		V-pos	Adjusts vertical position	
		Reset DVI Position Settings	Press the OK button to reset to the default Setup settings	

(*1): The HDMI logo is displayed on HDMI-compliant equipment.

(*2): Enquire at your local digital equipment retailer shop.

Viewing from SD Card

(VIERA IMAGE VIEWER)

Photo View: Still images recorded by digital cameras will be displayed.

Movie View: Moving pictures recorded by digital video cameras will be played back.

- During the operation, no signals are output from any of the AV terminals. But the sound in Movie View can be output from AUDIO OUT and DIGITAL AUDIO OUT terminals.
- “Date” shows the date on which the recording was made by the digital camera or digital video camera. The file without record of the date is shown “**/**/****”.
- For details on SD Cards ➡ p. 51




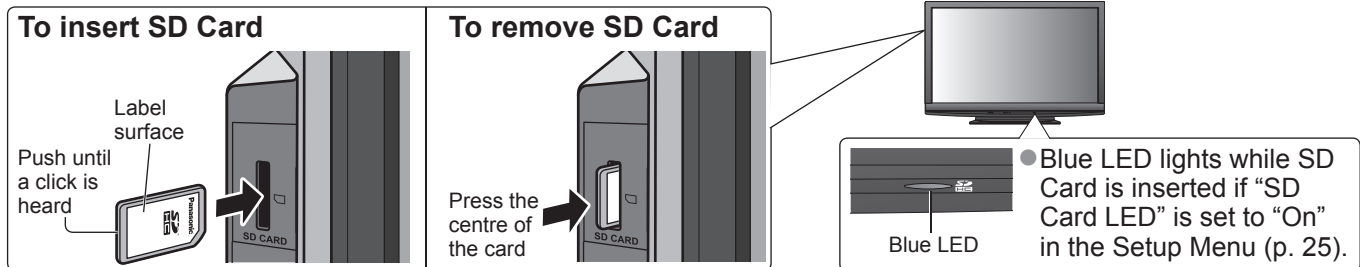



Photo View


- Insert the SD Card**
- Select “Photo View”**

- Select a folder to display the thumbnail**

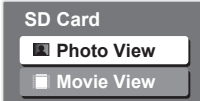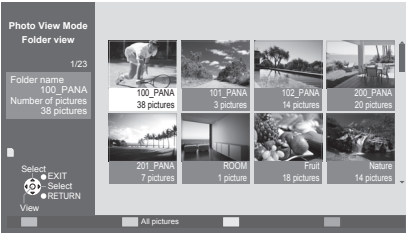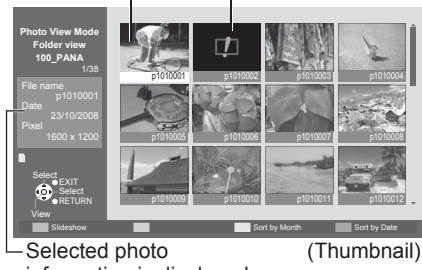


(Folder view)
- Select a photo from the thumbnail to be viewed**


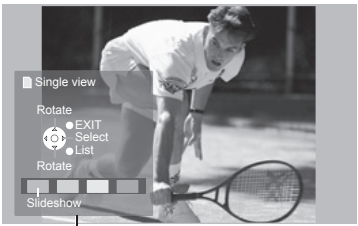
(Thumbnail)

Selected photo
Error display (images that could not be loaded, etc.)
Selected photo information is displayed

To return to TV
 ➡ EXIT or 

To return to the previous screen
 ➡ 

Displayed one at a time
 ● To display / hide the operation guide
 ➡ 
 To the previous photo
 Rotate 90° (counter-clockwise)
 To the next photo
 Rotate 90° (clockwise)
 ● To return to thumbnail ➡ 

Single view


Operation guide (Single view)

Viewing from SD Card

(VIERA IMAGE VIEWER)

Slideshow

Start Slideshow (operate in step ④)

Select the photo for the first view

Start Slideshow



● To pause →

● To return to Single view →

Note



- Slideshow is done within the thumbnail.

Slideshow settings (operate in Photo View Mode)


Display the menu



Select "Viewing Setup"

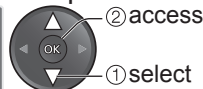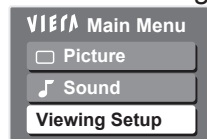

Select the items and set

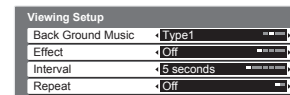


● Other Items → p. 24 - 25


Menu	Item	Adjustments / Configurations (alternatives)
Viewing Setup	Back Ground Music	Selects the back ground music during the slideshow (Off / Type1 / Type2 / Type3)
	Effect	Selects the effect for switching the photo during the slideshow (Off / Fade / Slide / Dissolve / Random) Fade : The next photo fades in gradually Slide : The next photo slides and appears from the left side Dissolve : The photo is replaced by an indefinite block unit Random : Selects each effect at random
	Interval	Selects slideshow interval (5 / 10 / 15 / 30 / 60 / 90 / 120 seconds)
	Repeat	Slideshow repeat (Off / On)

To display all the photos

Display the thumbnail of all the photos in SD Card.

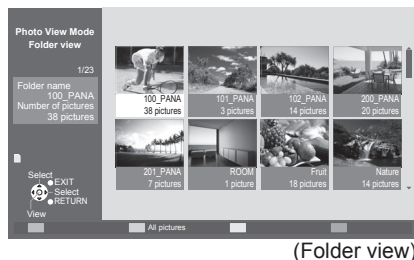

(Folder view)

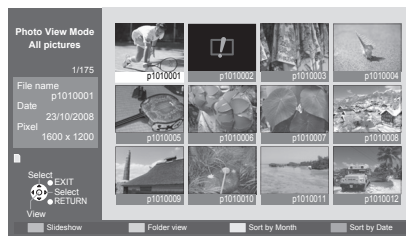


(Thumbnail - All pictures)




To sort by date or month recorded

Display the list of groups sorted by the same date or the same month.



- The group of the photos without record of the date is shown as "Unknown".

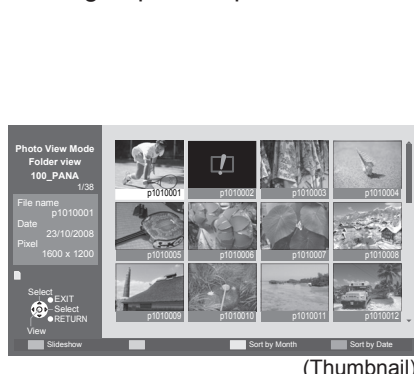


(Thumbnail)

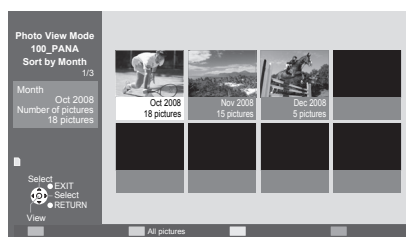

(Sort by Month)

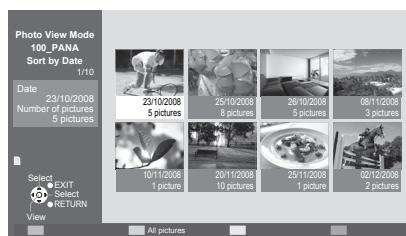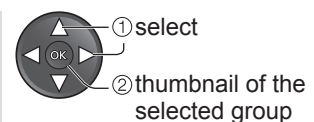

(Sort by Date)

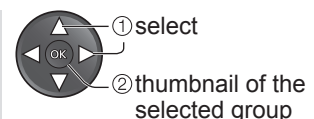

Movie View

1 Insert the SD Card

2 Select "Movie View"

3 Select the file to be viewed

SD Card
Photo View
Movie View

File format
Only AVCHD or MPEG2 is supported.
● For details → p. 51

Selected file

Playback will start

● To display the operation guide

● To hide the operation guide → RETURN

● To return to list → (stop)

● To change aspect ratio (only for the 4:3 movie content)

ASPECT

Operation guide

information banner

Playback

● To the previous movie → R

● To the next movie → G

● To return to TV

EXIT OR

● To return to the previous screen

RETURN

● access

● select

● playback

● select

Rewind

Pause / Playback

Fast forward

Stop

Audio Settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT terminal.

To confirm or change the current sound status (during playback)

Display the Option menu

Change the sound (if the movie has multiple audio signals)

OPTION
Option Menu
Audio Selection Stereo
(Current sound status)

● It may take several seconds to change the sound.

Audio output settings (operate in step ③)

Display the menu

Select "Sound"

Select "SPDIF Selection" and set

MENU

VIERA Main Menu
Picture
Sound
Setup

● access

● select

● set

● select

● Other items → p. 24 - 25

Sound Menu
Mode Music
Bass +4
Treble +4
Balance 0
Headphone Volume 17
Surround Off
Volume Correction 0
Speaker Distance to Wall Over 30cm
SPDIF Selection Auto

Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	SPDIF : A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal (Auto / PCM) Auto: Dolby Digital is output as Dolby Digital Bitstream. MPEG is output as PCM. PCM: Digital output signal is fixed to PCM.

VIERA Link “HDAVI Control™”

Enjoy additional HDMI interoperability with Panasonic products which have “HDAVI Control” function. This TV supports “HDAVI Control 4” function.

Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cable allow you to interface them automatically.

These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- Some functions are not available depending on the equipment’s version of HDAVI Control. Please confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for the equipments. About applicable Panasonic equipment, consult your local Panasonic dealer.

VIERA Link features and connections

VIERA Link

Connected equipment with VIERA Link function	DIGA Recorder*1	DVD Player / Blu-ray Disc Player*1	HD Video Camera / LUMIX Camera*1	Player theatre*2	Blu-ray Disc theatre*2	Amplifier*2
Features						
Channel download	○*4	—	—	—	—	—
Easy playback	○	○	○	○*7	○*7	—
Power on link	○	○	○	○	○	—
Power off link	○	○	○	○	○	○
Reduce unnecessary power consumption in standby	○*5	○*5	—	—	○*5	—
Auto standby for unnecessary equipment	○*3	○*3	—	○*3*8	○*3*8	○*3
Pause Live TV programme	○*4*6	—	—	—	—	—
Direct TV Recording	○*4	—	—	—	—	—
Control the menu of the connected equipment by VIERA remote control	○*3	○*3	○*3	○*3	○*3	—
Speaker control	—	—	—	○	○	○

*1: HDMI Connection only

*2: HDMI and Audio out connections

*3: available with the equipment which has “HDAVI Control 2 or later” function

*4: available with the equipment which has “HDAVI Control 3 or later” function

*5: available with the equipment which has “HDAVI Control 4” function


*6: available with DIGA Recorder which has HDD

*7: while playingback a disc


*8: except for watching a disc

Connection


- To use DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera

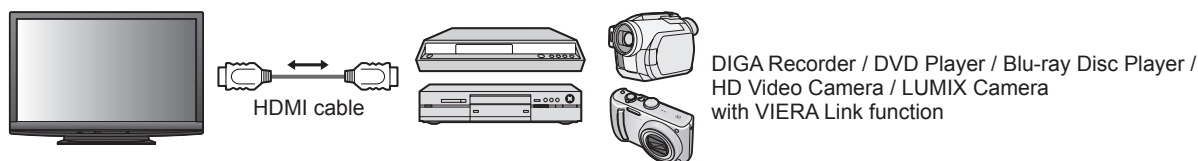

- To use Player theatre / Blu-ray Disc theatre:

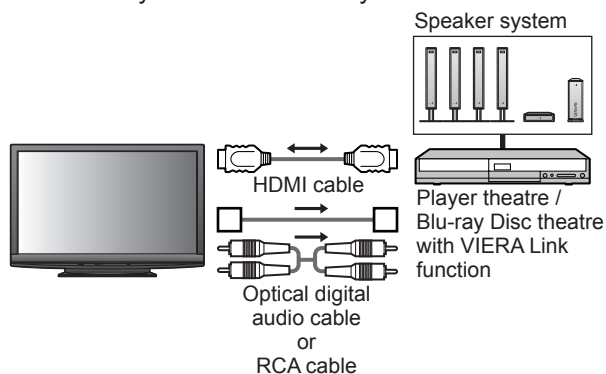

- To use Amplifier:

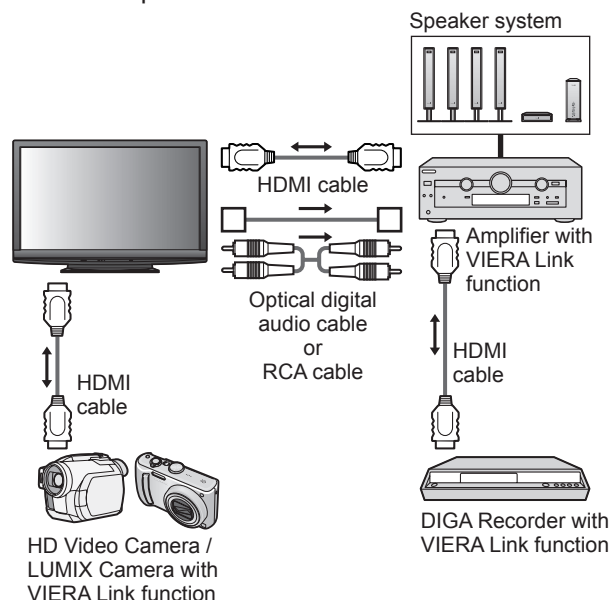

Note

- This function may not work properly depending on the connected equipment.
- For DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera with VIERA Link function, connect to HDMI1, HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable.
- For Player theatre / Blu-ray Disc theatre / Amplifier, connect to HDMI1, HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable and/or either the optical digital audio cable or RCA cable for audio output from the TV.
- Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilized.
Recommended Panasonic's HDMI cable part number:
 - RP-CDHG10 (1.0 m) • RP-CDHG15 (1.5 m) • RP-CDHG20 (2.0 m) • RP-CDHG30 (3.0 m) • RP-CDHG50 (5.0 m)

Preparations

- Connect the equipment supporting VIERA Link.
- Set up the connected equipment. Read the manual of the equipment.
- For optimal recording, the settings of the recorder might be required. For details, read the manual of the recorder.
- Set VIERA Link On in Setup Menu ➔ "VIERA Link" (p. 25)
- Set up the TV ➔ **After connection, turn the equipment on and then switch the TV on. Select the input mode to HDMI1, HDMI2, HDMI3 or HDMI4 (p. 20), and make sure that an image is displayed correctly.**
This setup should be done each time when the following conditions occur:
 - for the first time / • when adding or reconnecting equipment / • when changing setup

Features available

Channel download	
Channel setting can be downloaded to the recorder.	
Easy playback	
Automatic input switching - When the connected equipment is operated, input mode is switched automatically.	
Power on link	
Set Power on Link "On" in Setup Menu to use this function ➔ "Power on Link" (p. 25) When the connected equipment starts playback or direct navigator / function menu for the equipment are activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)	
Power off link	
Set Power off Link "On" in Setup Menu to use this function ➔ "Power off Link" (p. 25) When the TV is set to Standby mode, the connected equipment is also automatically set to Standby. <ul style="list-style-type: none">● This function will work even if the TV enters standby mode automatically by Off Timer function or auto power standby function.	
Reduce unnecessary power consumption in standby Standby Power Save	
Set Standby Power Save "On" in the Setup Menu to use this function ➔ "Standby Power Save" (p. 25) The power consumption in Standby mode of the connected equipment is controlled higher or lower in synchronization with the TV On / Off state to reduce the consumption. When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption in Standby mode of the connected equipment is automatically minimized. When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to make startup time early. <ul style="list-style-type: none">● This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.	
Auto standby for unnecessary equipment Intelligent Auto Standby	
Set Intelligent Auto Standby "On (With reminder)" or "On (No reminder)" in the Setup Menu to use this function ➔ "Intelligent Auto Standby" (p. 25) When the TV is on, the connected equipments not in use go into Standby mode automatically to reduce the power consumption. <ul style="list-style-type: none">● If you select "On (With reminder)", the on screen message will be displayed to be noticed before working this function.	

VIERA Link “HDAVI Control™”

Features available (Using VIERA Link Menu)

Direct TV Recording - What you see is What you record **Direct TV Rec**

Recording the current programme in DIGA Recorder immediately.

- If you connect several recorders including other manufacturers' recorders at the same time, please connect DIGA Recorder to the TV's lower HDMI terminal number.
- If you cannot operate, check the settings and the equipment ➡ “VIERA Link features and connections” (p. 38)

① Display “VIERA Link Menu”

② Select “Direct TV Rec” and start recording

To stop recording
Select “Stop” in “Direct TV Rec” and access

Pause Live TV programme **Pause Live TV**

You can pause the live TV programme and resume later.

Live TV programme will be recorded on HDD of the connected DIGA Recorder.

- This function is available with DIGA Recorder which has HDD.
- If you connect several recorders including other manufacturers' recorders at the same time, please connect DIGA Recorder which has HDD to the TV's lower HDMI terminal number.
- If you cannot operate, check the settings and the equipment ➡ “VIERA Link features and connections” (p. 38)

Access and pause the live TV programme

① Display “VIERA Link Menu”

② Select “Pause Live TV” and pause

TV picture will be paused.

- Live TV programme is recorded on HDD from where it was paused.
- Follow the operation guide to operate Pause Live TV function.

To operate Pause Live TV

search backward
pause
search forward
playback
stop

To return to Live TV
(stop playback of Pause Live TV / cancel pause)

Select “Yes”

① select
② stop

Pause Live TV

Stop Pause Live TV?

Yes No

- If you stop playback or cancel pause, the recorded programme will be deleted from HDD.


Features available (Using VIERA Link Menu)

Operate the connected equipment with VIERA remote control **VIERA Link Control**

You can control some functions of the connected equipment with this TV remote control by pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment → “VIERA Link features and connections” (p. 38)
- For details of the operations for the connected equipment, read the manual of the equipment.

Access and operate the menu of the equipment

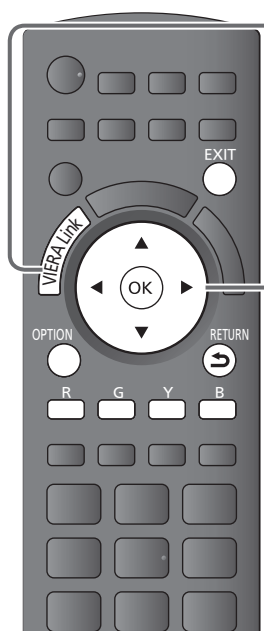

- Display “VIERA Link Menu”**
- Select “VIERA Link Control”**

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

- Select the equipment you want to access**
The type of the connected equipment is displayed.
Select the type of the equipment and access.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema











Recorder / Player / Home Cinema / Video Camera / LUMIX / Other

- “Home Cinema” means Player theatre, Blu-ray Disc theatre or Recorder theatre.
- “Other” means Tuner set top box.

The menu of the accessed equipment
(Input mode will be changed automatically)

④ Operate the connected equipment

- Switch to TV** → 
- Follow the operation guide**

To display the operation guide →		Store / set / access →	
Move the cursor / select the menu →		Return to the previous menu →	
Move the cursor / access / adjust →		Exit the menu →	
When the key words are displayed on colour bar →    			

Note

- Some operations may not be available for some equipment. If so, use its own remote control.

If several recorders or players are connected
You can connect up to three recorders or players at the same time.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder2
Speaker Selection	Home Cinema

— Recorder1-3 / Player1-3

The number is given from the TV's lower HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI2 and HDMI3, one connected to HDMI2 is displayed as Recorder1 and the other as Recorder2.

If you access the invalid equipment
When the equipment with “HDAVI Control” function is connected

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

— Recorder1-3 / Player1-3

Type of the connected equipment is displayed. You can access the menu of the equipment. But you cannot operate it. Use its own remote control to operate the equipment.

VIERA Link “HDAVI Control™”

Features available (Using VIERA Link Menu)

Speaker control **Speaker Selection**

You can control the theatre speaker with this TV remote control by pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment ➔ “VIERA Link features and connections” (p. 38)

Access and control the speaker volume



① Display “VIERA Link Menu”

② Select “Speaker Selection”

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

③ Set to “Home Cinema” or “TV”

Home Cinema
 Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode and the sound is from theatre speakers connected to the equipment.

- Volume up / down
 ➔  (Volume slide bar will be displayed when adjusting the volume of the equipment.)
- Mute ➔  MUTE
- The sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

TV
 TV speakers are active.

Note


- If you wish to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect with HDMI cable and Optical digital audio cable (p. 38), and then select “Home Cinema”.
 To enjoy the sound from the DIGA Recorder in multi-channel sound, connect an HDMI cable from the DIGA Recorder to the Amplifier (p. 38).
- Easy playback may be available by using the remote control for Player theatre, Blu-ray Disc theatre or Amplifier. Read the manual of the equipment.

Note

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when input mode is switched.
- “HDAVI Control 4” is the newest standard (current as of December, 2008) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm this TV's version of HDAVI Control ➔ “System Information” (p. 25)

VIERA Tools

With VIERA Tools, you can directly access to some of the useful functions of connected equipment or SD card.

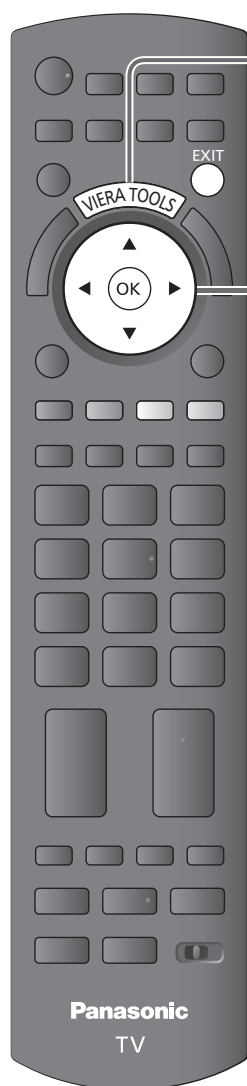


1

Display VIERA Tools Menu



2

Select a feature

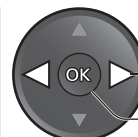

① select

② access

3

Follow the operation of each feature



VIERA CAST

VIERA CAST (p. 44)
VIERA CAST home screen is displayed.



VIERA Link Control

VIERA Link Control (p. 41)
The connected device can be operated with the VIERA remote control.
When multiple devices are connected, an indicator appears below the icon so that one device can be selected.



Pause Live TV

Pause Live TV (p. 40)
A live TV programme can be paused and resumed later.



Direct TV Rec

Direct TV Rec (p. 40)
What is on TV can be recorded immediately.



Speaker Selection

Speaker Control (p. 42)
Theatre speaker can be set.



Photos

SD card photo view (p. 35)
Photo folders are displayed.



Movies

SD card movie view (p. 37)
The title list for SD movie image is displayed.

To return to TV



VIERA CAST™

VIERA CAST is a gateway to the internet services unique to Panasonic.


By connecting the TV to the internet environment, VIERA CAST allows you to enjoy internet content on the TV screen such as photos, movies, weather, etc. from VIERA CAST home screen.

You can access VIERA CAST home screen directly by pressing the VIERA CAST button on the remote control.


Network connections

Connect the TV and Internet in the following way.

Example 1

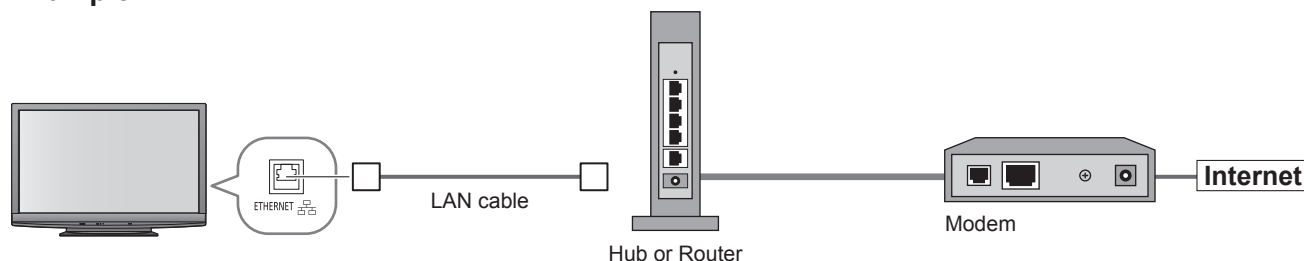

Example 2

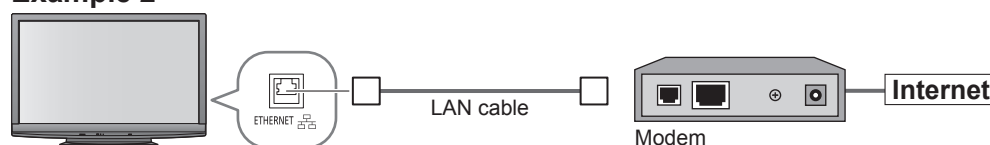


Note

- If you do not have a Broadband network services, please consult your retailer for assistance.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company.
- Set up and connect any equipment required for the network environment.
- Depending on the ISP or telecommunications company, the required equipment and the internet connection procedure are different. Ensure that you use the network equipment that are authorized by your ISP and telecommunications company.
- You cannot make settings for the network equipment on this TV. You may be required to make settings on your computer.
- Depending on the terms and conditions of the contracts with your ISP or telecommunications company, additional fees may be incurred or multiple connections to the internet may be impossible.
- Please contact your ISP or telecommunications company if you require further assistance regarding the network equipment.
- Ensure to use a LAN straight cable for connection.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the Broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 LAN cables are required.
- Read the manual of the network equipment, too.

Network Setup

- Ensure the connections are completed before starting Network Setup.

➔ “Network connections” (p. 44)



1 Display the menu
MENU

2 Select “Setup”
VIERA Main Menu
Picture
Sound
Setup

3 Select “Network Setup”
Setup Menu
Off Timer Off
Digital TV Tuning Menu
Display Settings
VIERA Link Settings
Network Setup Access
System Menu
Other Settings

4 Set

② access
① select

② access
① select

Panasonic TV


To return to TV



Update TV's software **Software Update**

Accesses the specific web site to update TV's software and search if any software updates are available.

① Select “Software Update”

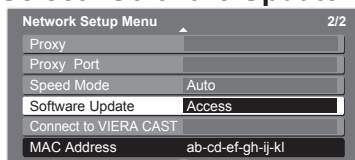

Network Setup Menu 2/2
Proxy
Proxy Port
Speed Mode Auto
Software Update Access
Connect to VIERA CAST
MAC Address ab-cd-ef-gh-ij-kl


② access
① select

② Follow the displayed instructions

Note

MAC Address

- MAC address is a unique address that identifies hardware in the network.
(for information only)

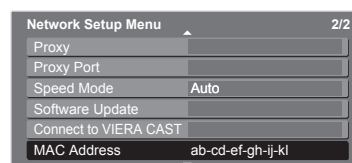

Network Settings

① Set the network setting items

Acquire IP Address



Acquire DNS Address

Sets IP Address, Subnet Mask, Gateway, Primary DNS and Secondary DNS

For most users, the recommended method of connection to your network is by using Auto feature.

Select “Acquire IP Address” and then set to “Auto”

Select “Acquire DNS Address” and then set to “Auto”

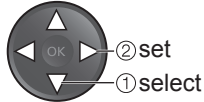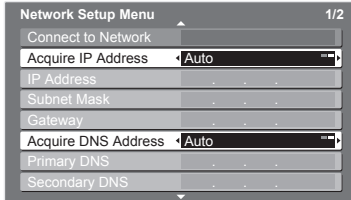

- The available settings are displayed automatically.

Manual settings

If you wish to set these functions manually, select “Manual”.

Select “IP Address”, “Subnet Mask”, “Gateway”, “Primary DNS” or “Secondary DNS”

Move the cursor and enter the number





Proxy

Sets Proxy address


- This is the address of the relay server that is connected to the target server instead of the browser and sends data to the browser. Setting is required if specified by the provider.

Select “Proxy”

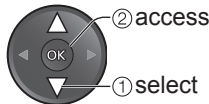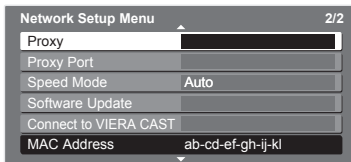

Enter the address

Set characters one by one

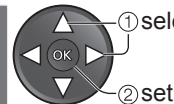

Store




- You can set characters by using numeric buttons.
➔ p. 22

Proxy Port

Sets Proxy port number

- This number is also specified by the provider with the Proxy address.

Select “Proxy Port”

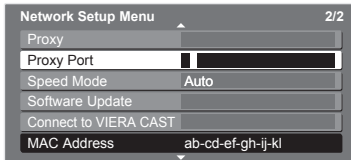

Move the cursor and enter the number





Speed Mode (Auto / 10base half / 10base duplex / 100base half / 100base duplex)



Sets the LAN speed setting

- Set to “Auto” normally.
- If “Connect to Network” or “Connect to VIERA CAST” test fails, try the other speed modes.

Select “Speed Mode” and then set the speed mode

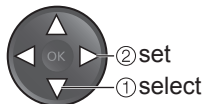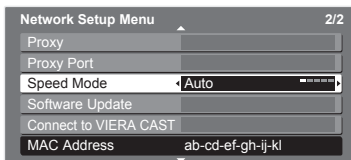

② Select “Connect to Network” and access to test

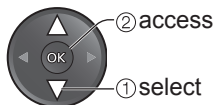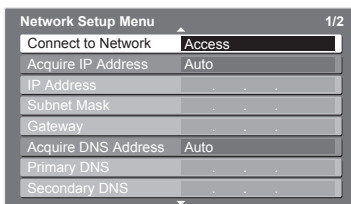

Connected

The test is successful and the TV is connected to the network.

Not connected



Check the settings and connections, and then perform this function again.

Performs automatic testing of the network connection for the TV (It takes a while to test.)

Network Settings

③ Select "Connect to VIERA CAST" and access to test

- This step is for ensuring to access VIERA CAST.

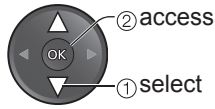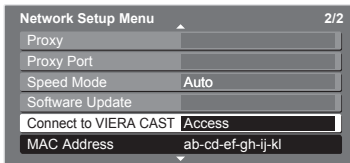

Connected

The test is successful and you can use VIERA CAST features.

Not connected

Check the settings and connections, and then perform this function again.

Performs automatic testing for accessing VIERA CAST. (It takes a while to test.)

Operate VIERA CAST

You can access a selection of internet services from VIERA CAST home screen. For example, YouTube, Picasa Web Albums.

- VIERA CAST requires a broadband internet connection. Dial-up internet connections cannot be used.
- Ensure the network connections and network settings are completed.
 - ➔ "Network connections" (p. 44), "Network Setup" (p. 45 and p. 46)



Access VIERA CAST

- Depending on the usage conditions, it may take a while to read all the data.
- You can also access directly by using VIERA TOOLS
 - ➔ "How to Use VIERA TOOLS" (p. 43)

How to operate VIERA CAST

To move the cursor / select the item ➔



To access ➔



To return to the previous screen ➔



When the key words are displayed on colour bar



When options with numbers are displayed




To return to TV



Note


- The VIERA CAST home screen and its services are subject to change without notice. This screen is current as of June 2009.
- Services provided through VIERA CAST are operated by their respective service providers. Services may be added and/or discontinued either temporarily or permanently without notice. Panasonic makes no warranty for content or service continuity.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you will not be able to use VIERA CAST.
 - You can update the software later manually ➔ "Software Update" in the Network Setup Menu (p. 45)
- VIERA CAST usage adds to your ISP download/upload data quota.
- Content accuracy is provided "as is"; all warranties of any kind, express or implied, are disclaimed.
- Some content may be inappropriate for some viewers.
- Some content may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- Turn the TV off before changing or reconnecting the network connection.
- When available, the VIERA CAST Weather time is local time for your region as selected during initial product installation.
- During operation, VIERA CAST audio is output from AV1, AV2, AUDIO OUT and DIGITAL AUDIO OUT terminals; no video signals are output.

Example:

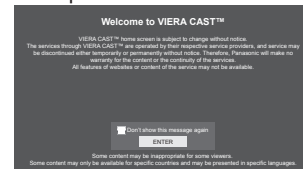

- Messages might be displayed before VIERA CAST home screen. Please read these instructions carefully and follow the displayed instructions.


Example:

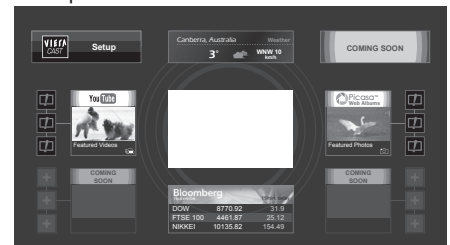

VIERA CAST home screen

External Equipment


These diagrams show our recommendations for how to connect the TV to your various equipment. For other connections, consult the instructions for each piece of equipment, the table below, and the specifications (p. 57).

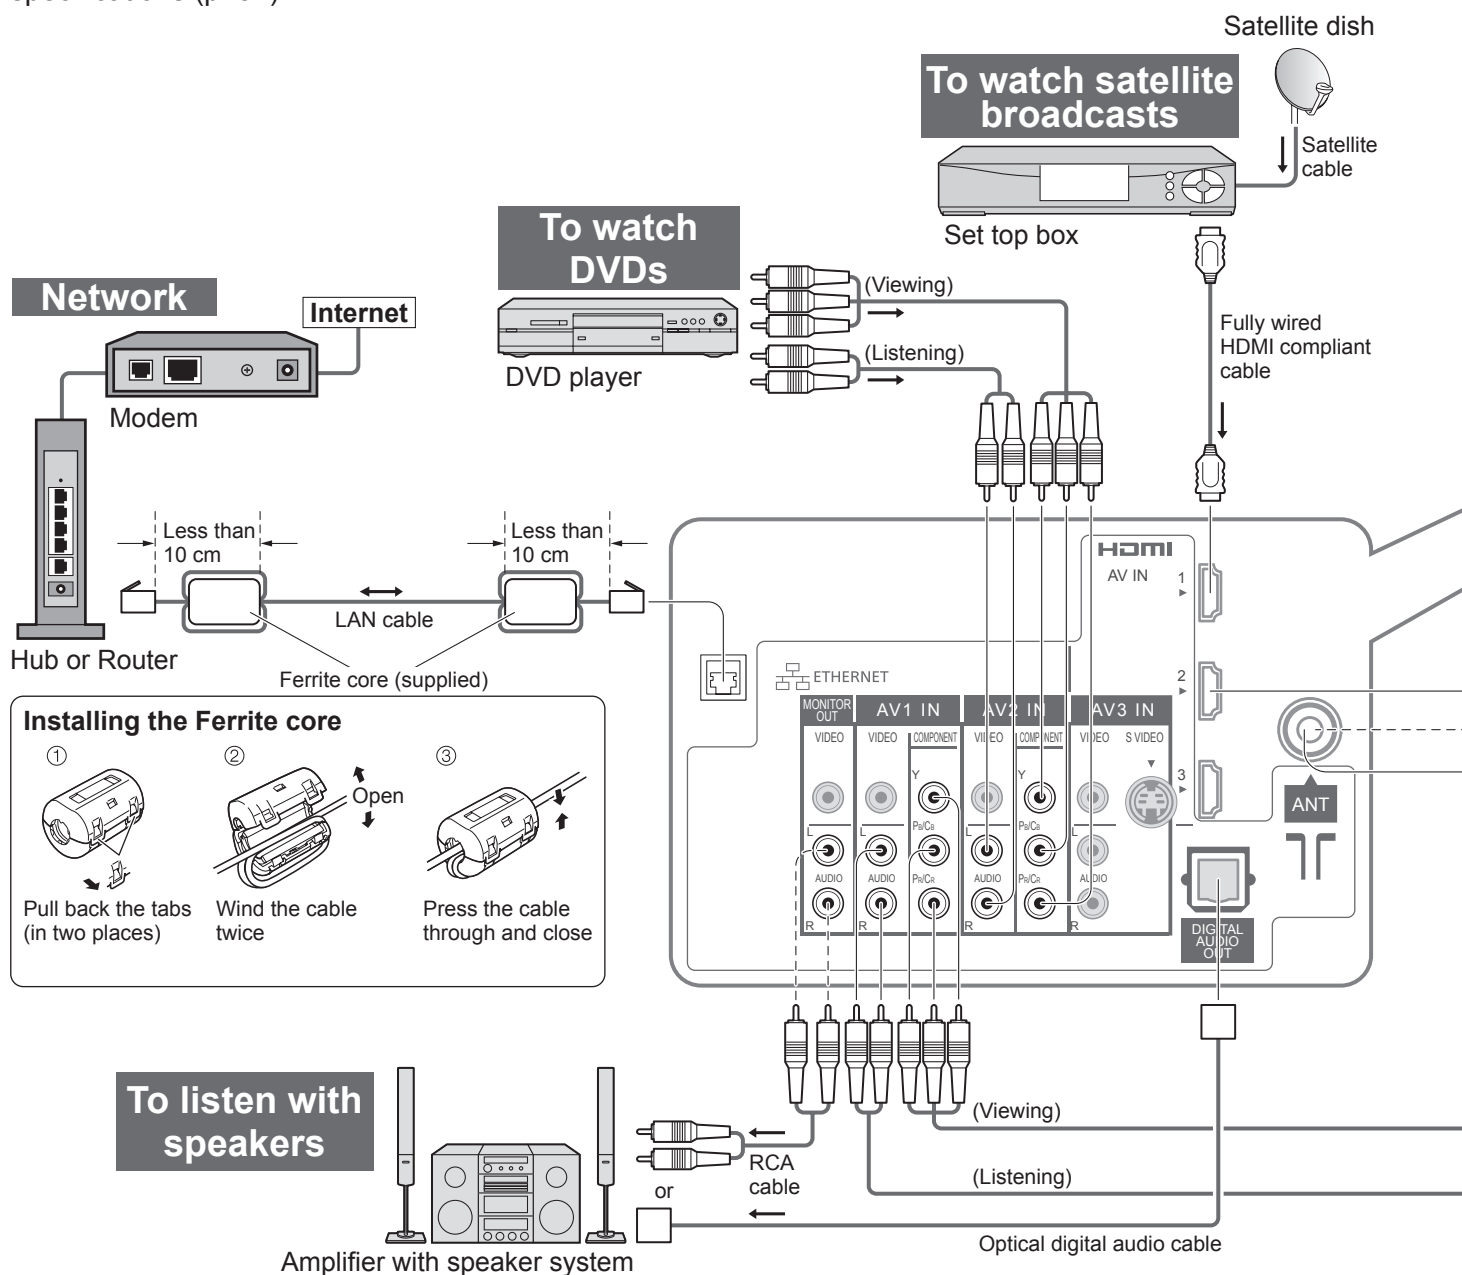



Types of connectable equipment to each terminal

Terminal	AV1 IN	AV2 IN	AV3 IN	AV4 IN (Side panel of TV)	MONITOR OUT
	VIDEO COMPONENT Y Pb/Cb Pr/Cr AUDIO L R	VIDEO COMPONENT Y Pb/Cb Pr/Cr AUDIO L R	VIDEO S-VIDEO COMPONENT Y Pb/Cb Pr/Cr AUDIO L R	AV4 IN S-VIDEO VIDEO L R	VIDEO L AUDIO L R
Recording / Playback (equipment)					
To record / playback videocassettes / DVDs (VCR / DVD recorder)	○	○	○	○	○
To watch DVDs (DVD player)	○	○	○	○	
To watch camcorder images (Video camera)	○	○	○	○	
To watch satellite broadcasts (Set top box)	○	○	○	○	
To play games (Game equipment)	○	○	○	○	
To use amplifier with speaker system					○
To use network services					
VIERA Link					

○: Recommended Connection

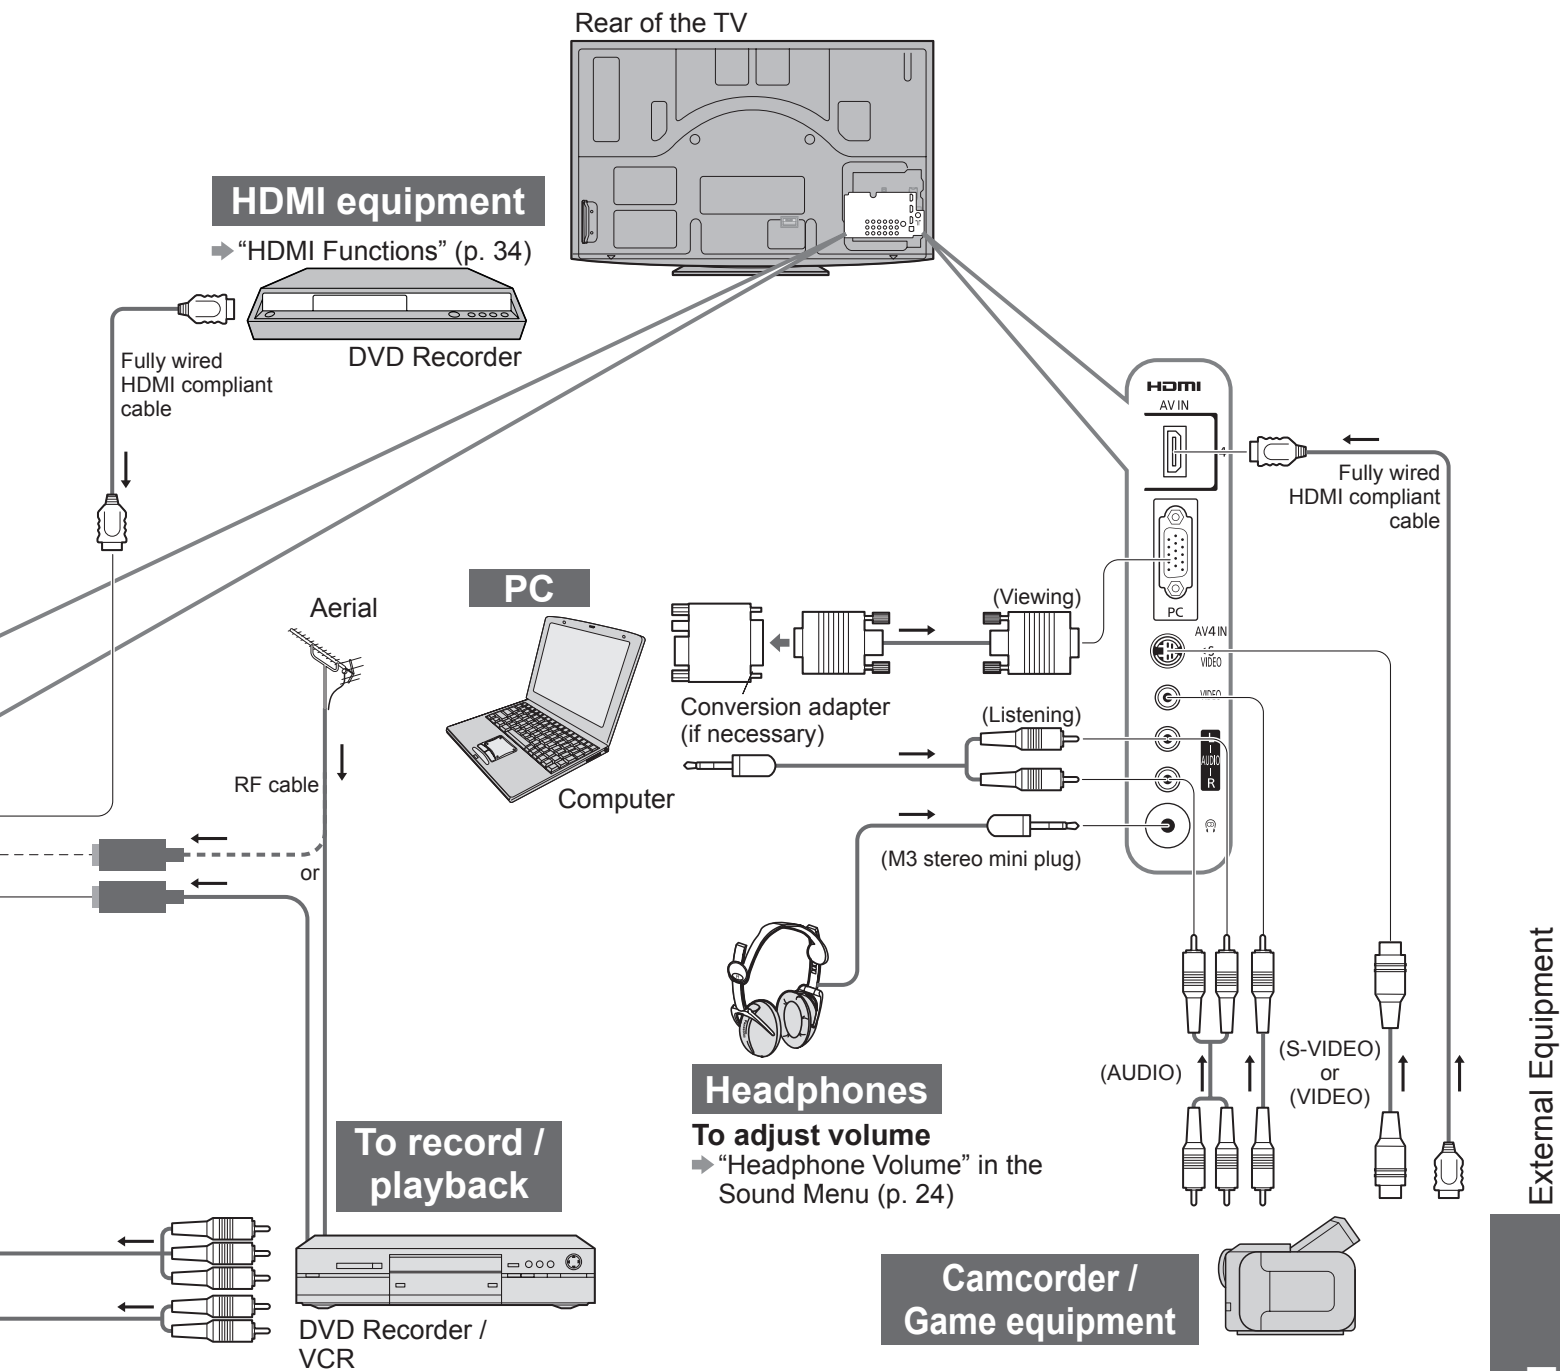

	DIGITAL AUDIO OUT	ETHERNET	HDMI			
			1	2	3	4
			○	○	○	○
			○	○	○	○
			○	○	○	○
			○	○	○	○
	○		○	○	○	○
		○	○	○	○	○
			○	○	○	○

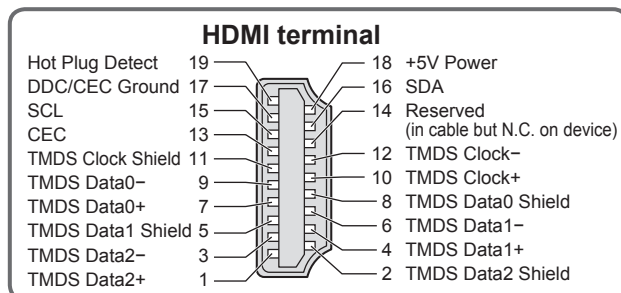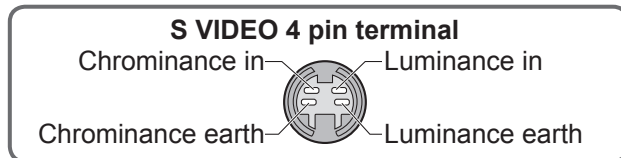

- Connect the S VIDEO or VIDEO terminal when using AV3 / AV4 IN terminal.
- Connect the COMPONENT or VIDEO terminal when using AV1 / AV2 IN terminal.

Technical Information

Channel Allocation (Analogue TV mode)

CH Display / Receive Channel			
CH 0 - CH 5	S 2 - S 10	CH 5A	CH 6 - CH 9
CH 9A	CH 10 - CH 12	S 11 - S 44	CH 20 - CH 75

Rating (Digital TV mode)

Rating	Meaning	Rating	Meaning
-	Not classified	M	Mature
P	Pre school	MA 15+	Mature Adult 15+
C	Children	AV 15+	Adult strong Violence 15+
G	General	R	Restricted 18+
PG	Parental Guidance recommended		

Updating the software system (Digital TV mode)

Update system software to ensure that you have latest version software.

If there is an update available, a notification banner is displayed when the channel has the update information.

- To download new software, press "OK" ➔ Downloading (approx. 1 hour)

If you choose not to download, press "EXIT".

To update automatically

Set "Auto Update Search in Standby" to "On" (p. 27)

If there is a new version software being broadcast, the TV will download this automatically.

- The automatic updating sequence is carried out at 3:00 AM and 5:00 AM every morning under the following condition.

Standby (TV turned Off with the remote control)

Recording is not in progress.

To update manually

Perform "System Update Search Now" (p. 27)

If there is an update available, a notification banner is displayed.

Note

- During downloading, do not turn Off the TV or touch any buttons.
(The TV is automatically activated after downloading is completed.)
- When the TV is switched to standby, there will be a clicking sound after a short delay. Similar clicking sounds will also occur at 3:00 AM and 5:00 AM when "Auto update Search in Standby" (p. 27) is set to "On". These sounds are normal.

Stereo / Bilingual Sound Selection (Analogue TV mode)

⏏/▽ When you receive the stereo / bilingual sound system, sound output modes can be selected by pressing the **I/II** **Stereo / Bilingual Sound Selection** button.

Audio Signal	STEREO	MAIN I	SUB II	MONO
Mode Indicator	⊖	I	II	▽

NICAMUsed in New Zealand, Singapore, Hong Kong etc.

Type of broadcast	Regular broadcast (Standard Audio)	Regular + NICAM MONO I (MAIN I)	NICAM STEREO	NICAM DUAL MONO (MAIN I / SUB II)
Mode Indicator	No Indicator ↔ ▽	I ↔ ▽	⊖ ↔ ▽	I → II I ↔ II

A2 (German)Used in Australia, Malaysia etc.

Type of broadcast	Regular broadcast (Standard Audio)	BILINGUAL or DUAL MONO: MAIN I / SUB II	STEREO
Mode Indicator	No Indicator ↔ ▽	I ↔ II	⊖ ↔ ▽

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position, using the stereo / bilingual sound selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.

SD Card

Cautions in handling SD Card

- Do not remove the card while the TV is accessing data (this can damage card or TV).
- Do not touch the pins on the back of the card.
- Do not subject the card to a high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the TV. (Panasonic is not liable for any deterioration or damage of recorded data.)

Data format for Card browsing

Photo : Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF standards

Data format - Baseline JPEG (Sub-sampling 4:4:4, 4:2:2 or 4:2:0)

Max. number of files - 9,999

Image resolution - 8 × 8 to 30,719 × 17,279 pixels

Movie : SD-Video Standard Ver. 1.2 [MPEG-2 (PS format)] and AVCHD Standard compatible files with an audio format that is either MPEG-1/Layer-2 format or Dolby Digital format

(AVCHD files recorded with vertical frequency 50Hz are applicable. A modified data with a PC may not be displayed correctly.)

- Compliant card type (maximum capacity): SDHC Card (32 GB), SD Card (2 GB) and miniSD Card (2 GB) (requiring miniSD adapter)
- If miniSD Card is used, insert / remove it together with the adapter.
- Check the latest information on the card type at the following website. (English only)
<http://panasonic.co.jp/pavc/global/cs/>

*DCF (Design rule for camera file system): Unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).

Note

- Format the card with the recording equipment.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- This function cannot display Motion JPEG and still image not JPEG formatted (i.e. TIFF, BMP).
- A data modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF (Exchangeable Image File) 2.0, 2.1, and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- All ".JPG" extension datas in the card will be read in Photo View Mode.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if the file or folder names are changed.

On screen messages

Message	Meaning / Action
Cannot read file	<ul style="list-style-type: none"> ● The file is broken or unreadable. ● The TV does not support the format. (For the applicable formats and data, see above.)
Please confirm the SD card is OK	<ul style="list-style-type: none"> ● The inserted SD card has a problem.
No SD card inserted	<ul style="list-style-type: none"> ● Insert a SD Card.
No valid file to play	<ul style="list-style-type: none"> ● The card has no data.
Over 9999 pictures found. (max. is 9999)	<ul style="list-style-type: none"> ● Maximum valid number of photos is 9,999.
This operation is not possible	<ul style="list-style-type: none"> ● Your operation is not available.

Technical Information

Network

On screen messages

Message	Meaning / Action
An internal error occurred.	► ● Check the settings. (p. 45 and p. 47)
Communication with the server failed.	► ● This might be a problem of the media server. Read the manual of the server software.
Connection to the server failed.	► ● Check the connections and settings. (p. 44 - 47)
Server not found	► ● There are no available media server on your home network. Check the connections and settings. (p. 44 - 47)
The software update is not completed.	► ● Network download failed. Check the connections and settings. (p. 44 - 47)

PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.


- PC signals that can be inputted: Horizontal scanning frequency 31 to 69 kHz; vertical scanning frequency 59 to 86 Hz (more than 1,024 signal lines could result in incorrect display of the image).
- A PC adapter is not necessary for the DOS/V-compliant D-sub 15-pin connector.

Note

- Some PC models cannot be connected to this TV.
- When using PC, set the colour display quality of PC to the highest position.
- For details of the applicable PC signals, see below.
- Max. display resolution

Aspect	4:3	1,440 × 1,080 pixels
	16:9	1,920 × 1,080 pixels

- D-sub 15-pin connector signal

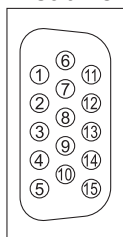

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC (not connected)
③	B	⑧	GND (Ground)	⑬	HD
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC (not connected)

Input signal that can be displayed

COMPONENT (Y, P_B/C_B, P_R/C_R), HDMI

* Mark: Applicable input signal

Signal name	COMPONENT	HDMI
525 (480) / 60i	*	*
525 (480) / 60p	*	*
625 (576) / 50i	*	*
625 (576) / 50p	*	*
750 (720) / 60p	*	*
750 (720) / 50p	*	*
1,125 (1,080) / 60i	*	*
1,125 (1,080) / 50i	*	*
1,125 (1,080) / 60p		*
1,125 (1,080) / 50p		*
1,125 (1,080) / 24p		*

PC (D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 400 @70 Hz	31.47	70.07
640 × 480 @60 Hz	31.47	59.94
640 × 480 @75 Hz	37.50	75.00
800 × 600 @60 Hz	37.88	60.32
800 × 600 @75 Hz	46.88	75.00
800 × 600 @85 Hz	53.67	85.06
852 × 480 @60 Hz	31.44	59.89
1,024 × 768 @60 Hz	48.36	60.00
1,024 × 768 @70 Hz	56.48	70.07
1,024 × 768 @75 Hz	60.02	75.03
1,024 × 768 @85 Hz	68.68	85.00
1,280 × 1,024 @60 Hz	63.98	60.02
1,280 × 768 @60 Hz	47.70	60.00
1,366 × 768 @60 Hz	48.39	60.04
Macintosh13" (640 × 480)	35.00	66.67
Macintosh16" (832 × 624)	49.73	74.55
Macintosh21" (1,152 × 870)	68.68	75.06


Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- Applicable input signal for PC is basically compatible to VESA standard timing.
- PC signal is magnified or compressed for display, so that it may not be possible to show fine detail with sufficient clarity.

FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If the problem still persists, please contact your local Panasonic dealer for assistance.

White spots or shadow images (noise)

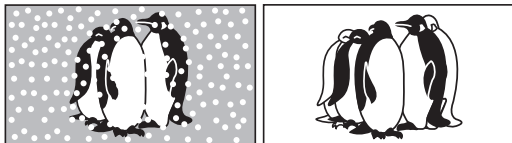

- Check the position, direction, and connection of the aerial.

Neither image nor sound is produced


- Is the TV in "AV mode"?
- Is the mains lead plugged into the socket outlet?
- Is the TV turned On?
- Check Picture Menu (p. 24) and volume.

An error message appears

- Follow the message's instructions.
- If the problem persists, contact your local Panasonic dealer.

"VIERA Link" function does not work and an error message appears

- Confirm the connection.
- Turn the connected equipment on and then switch the TV on. (p. 38)

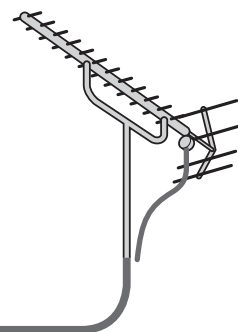

Contrast is reduced

- Contrast is lowered in the following conditions without any user operation for a few minutes:
 - no signal in DVB or AV mode
 - selected invalid programme
 - selected radio service
 - displayed menu
 - Thumbnail or still picture in SD Card mode

Pixel Statement

- An image on a LCD or Plasma TV screen is created by many small groups of dots known as pixels (which is similar to the image in a newspaper). It also naturally follows that higher panel resolutions contain more pixels. To create a colour image, each pixel consists of three tiny coloured dots (known as sub-pixels), one each of red, green and blue. Each one of these dots is precisely controlled by the electronics of the TV to produce the picture. Whilst Panasonic maintains the highest standards in manufacturing technology and processes in the construction of these panels, there are a number of allowable pixel/subpixel failures that still allow the panel to be defined as a good panel. It is not possible to guarantee absolutely no pixel loss.

Problem

Actions

Screen

Chaotic image, noisy

- Change the setting of "P-NR" in the Picture Menu (to remove noise). (p. 24)
- Check nearby electrical products (car, motorcycle, fluorescent lamp).

No image can be displayed

- Is "Colour" or "Contrast" in the Picture Menu set to the minimum? (p. 24)

**Blurry or distorted image
(no sound or low volume)**

- Reset channel. (p. 32)

Unusual image is displayed

- Turn off the TV with Mains power On / Off switch, then turn it on again.

**"Shop" appears on screen at
switch on**

- "Shop" was selected in "Auto Tuning" (p. 12). Reset all settings in "Shipping Condition" (p. 32), then select "Home" in "Auto Tuning" (p. 12).


Sound

No sound is produced

- Is "Sound Mute" active? (p. 10)
- Is the volume set to the minimum?

**Sound level is low
or sound is distorted**

- Sound signal reception may be deteriorated.
- Set "MPX" (p. 24) in the Sound Menu to "Mono".

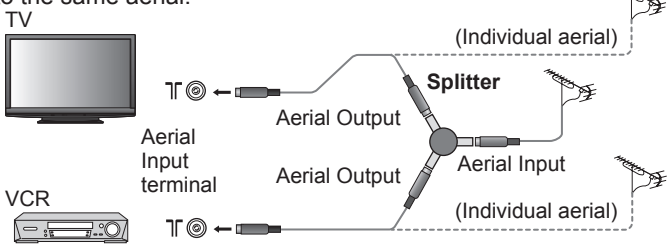Problem		Actions
HDMI	Sound is unusual	<ul style="list-style-type: none"> ● Set the sound setting of the connected equipment to "2ch L.PCM". ● Check the "HDMI1 / 4 Input" setting in the Sound Menu. (p. 25) ● If digital sound connection has a problem, select analogue sound connection. (p. 34)
	Pictures from external equipment are unusual when the equipment is connected via HDMI	<ul style="list-style-type: none"> ● Is the HDMI cable connected properly? (p. 48) ● Turn Off the TV and equipment, then turn them On again. ● Check an input signal from the equipment. (p. 53) ● Use an equipment compliant with EIA/CEA-861/861B.
Digital TV	● Digital TV reception technology requires high quality, robust DTV signals which in some domestic aerial installations, may be relatively poor despite good analogue reception.	
	Aerial connection when using DTV and VCR / DVD Recorder	<ul style="list-style-type: none"> ● To maintain optimum signal quality from TV aerial, use a TV aerial splitter (as illustrated) when connecting two or more equipments to the same aerial. 
	After Digital TV Auto Tuning only some or no services are found	<ul style="list-style-type: none"> ● Check to ensure your area is covered by DVB transmissions. ● Check that the aerial and antenna cable are designed for DVB. For your safety, the aerial and cable should be inspected / installed by a licenced installer that should comply with Australian Standard AS1417.1. Note: If you live within 5-10 Km of DVB transmission towers, a combined VHF / UHF aerial should be adequate. Outside this area, separate VHF and UHF aerials provide superior reception performance. ● If you live in a unit or apartment, check to ensure the Master Antenna TV (MATV) system is designed for analogue and DVB-T reception. Please consult your body corporate.
	Picture regularly breaks up on some programmes, or "No Signal" message	<ul style="list-style-type: none"> ● Check "Signal Condition". (p. 31) If "Signal Quality" or "Signal Strength" are displayed in red or constantly changing, check aerial. If problem persists consult your local TV aerial installer. ● Check that the aerial and antenna cable are designed for DVB. For your safety, the aerial and cable should be inspected / installed by a licenced installer that should comply with Australian Standard AS1417.1. ● Interference (known as impulse noise) from household appliances such as light switches, fridges etc may cause picture break up and / or audio distortion. Use high quality quad shielded coaxial cable fly lead between TV and antenna wall socket to minimise impulse noise pickup. If problem persists consult your local TV aerial installer. ● When "No Signal" message is displayed check TV aerial connection. ● The received signal may be too weak to allow the TV to reliably lock to the desired "No Signal" programme to generate a stable picture. Repeat the tuning procedure (p. 31). If problem persists consult your local TV aerial installer.
	Picture very infrequently breaks up on some or all programmes	<ul style="list-style-type: none"> ● Electrical atmospheric interference caused by local or distant lighting storms or heavy rain with wind in "leafy" locations may cause pictures to break up and audio to mute or distort momentarily. ● Impulse noise interference from an infrequently used electrical appliance, or a passing vehicle or lawn mower with a "noisy" ignition system.

FAQs

	Problem	Actions
Network	Cannot connect to the network	<ul style="list-style-type: none"> ● Check the LAN cable is connected properly. (p. 44) ● Check the connections and settings. (p. 44 - 47) ● Check the network equipment and network environment. If the problem persists, consult your Internet Service Provider or telecommunications company.
	Cannot operate VIERA CAST	<ul style="list-style-type: none"> ● Check the connections and settings. (p. 44 - 47) ● The server or connected line might be busy now.
Other	TV takes so long to turn on	<ul style="list-style-type: none"> ● Like your computer, the TV has to run a number of diagnostic and software checks before it can display any programmes.
	The programme cannot be changed	<ul style="list-style-type: none"> ● Is the TV in Teletext mode? (p. 18)
	The programme cannot be selected	<ul style="list-style-type: none"> ● Is the programme skipped? (p. 29)
	TV goes into "Standby mode"	<ul style="list-style-type: none"> ● Off Timer function is activated. ● The TV enters "Standby mode" about 30 mins. after analogue broadcasting ends.
	The remote control does not work	<ul style="list-style-type: none"> ● Are the batteries installed correctly? (p. 7) ● Has the TV been switched On?

Specifications

			TH-P42G15A	TH-P50G15A		
Power	Power rating		AC 220 - 240 V, 50 / 60 Hz 2.35 A		AC 220 - 240 V, 50 / 60 Hz 2.7 A	
	Normal (Home) mode		217 W		301 W	
	Standby condition		0.4 W		0.4 W	
Display panel	Aspect Ratio		16:9			
	Visible screen size		106 cm (diagonal) 921 mm (W) × 518 mm (H)		127 cm (diagonal) 1,105 mm (W) × 622 mm (H)	
	Number of pixels		2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]			
Sound	Speaker		140 mm × 35 mm × 2 pcs, 6 Ω			
	Audio Output		20 W (10 W + 10 W), 10% THD			
	Headphones		M3 (3.5 mm) stereo mini Jack × 1			
PC signals			VGA, SVGA, WVGA, XGA SXGA, WXGA (compressed) Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz			
Receiving Systems / Band name			PAL B/G		Reception of Off air broadcasts	
			Digital TV		7 MHz VHF / UHF (Australia) free-to-air TV broadcast reception	
			PAL 60 Hz		Playback of NTSC tape from some PAL Video recorders (VCR)	
			M.NTSC		Playback from M. NTSC Video recorders (VCR)	
Aerial - Rear			Standard Belling & Lee connector			
Operating Conditions			Temperature : 0 °C - 35 °C Humidity : 20 % - 80 % RH (non-condensing)			
Connection Terminals	AV1 Input	AUDIO L - R	RCA PIN Type × 2		0.5 V[rms]	
		VIDEO	RCA PIN Type × 1		1.0 V[p-p] (75 Ω)	
		COMPONENT	Y P _B /C _B , P _R /C _R		1.0 V[p-p] (including synchronization) ±0.35 V[p-p]	
	AV2 Input	AUDIO L - R	RCA PIN Type × 2		0.5 V[rms]	
		VIDEO	RCA PIN Type × 1		1.0 V[p-p] (75 Ω)	
		COMPONENT	Y P _B /C _B , P _R /C _R		1.0 V[p-p] (including synchronization) ±0.35 V[p-p]	
	AV3 Input	AUDIO L - R	RCA PIN Type × 2		0.5 V[rms]	
		VIDEO	RCA PIN Type × 1		1.0 V[p-p] (75 Ω)	
		S VIDEO	Mini DIN 4-pin		Y:1.0 V[p-p] (75 Ω) C:0.286 V[p-p] (75 Ω)	
	AV4 Input	AUDIO L - R	RCA PIN Type × 2		0.5 V[rms]	
		VIDEO	RCA PIN Type × 1		1.0 V[p-p] (75 Ω)	
		S VIDEO	Mini DIN 4-pin		Y:1.0 V[p-p] (75 Ω) C:0.286 V[p-p] (75 Ω)	
	Monitor Output	AUDIO L - R	RCA PIN Type × 2		0.5 V[rms] (high impedance)	
		VIDEO	RCA PIN Type × 1		1.0 V[p-p] (75 Ω)	
	Others	HDMI1 - 4 Input	TYPE A Connectors		● This TV supports “HDAVI control 4” function.	
		PC Input	HIGH-DENSITY D-SUB 15PIN		R, G, B/0.7 V[p-p] (75 Ω) HD, VD/TTL Level 2.0 - 5.0 V[p-p] (high impedance)	
		DIGITAL AUDIO OUT	PCM / Dolby Digital, Fiber optic			
		ETHERNET	RJ45, IEEE802.3 10BASE-T / 100BASE-TX			
		Card slot	SD Card slot × 1			
Dimensions (W × H × D)			1,029 mm × 704 mm × 334 mm (With Pedestal) 1,029 mm × 661 mm × 97 mm (TV only)		1,218 mm × 814 mm × 401 mm (With Pedestal) 1,218 mm × 769 mm × 97 mm (TV only)	
Mass			28.0 kg Net (With Pedestal) 25.0 kg Net (TV only)		35.0 kg Net (With Pedestal) 32.0 kg Net (TV only)	

Note

● Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

WARRANTY - Australia only

1. The product is warranted for 12 months from the date of purchase. Subject to the conditions of this warranty Panasonic or its Authorised Service Centre will perform necessary service on the product without charge for parts or labour if, in the opinion of Panasonic, the product is found to be faulty within the warranty period.
 2. This warranty only applies to Panasonic products purchased in Australia and sold by Panasonic Australia or its Authorised Distributors or Dealers and only where the products are used and serviced within Australia or its territories. Warranty cover only applies to service carried out by a Panasonic Authorised Service Centre and only if valid proof of purchase is presented when warranty service is requested.
 3. This warranty only applies if the product has been installed and used in accordance with the manufacturer's recommendations (as noted in the operating instructions) under normal use and reasonable care (in the opinion of Panasonic). The warranty covers normal domestic use only and does not cover damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accident, misuse, neglect, build-up of dirt or dust, abuse, maladjustment of customer controls, mains supply problems, thunderstorm activity, infestation by insects or vermin, tampering or repair by unauthorised persons (including unauthorised alterations), exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
 4. This warranty does not cover the following items unless the fault or defect existed at the time of purchase:

(a) Video or Audio Tapes	(d) Cabinet Parts	(g) Microwave Oven cook plates.
(b) Video or Audio Heads and Stylii resulting from wear and tear in normal use	(e) User replaceable Batteries	(h) Kneader mounting shaft unit (bread bakery)
(c) Shaver Heads or Cutters	(f) Thermal Paper, Toner/Ink Cartridges, Drums, Developer, Film (Ink/Ribbon), Film Cartridge, Printer Heads	
 5. If warranty service is required you should:
 - Telephone Panasonic's Customer Care Centre on 132600 or visit our website and use the Service Centre Locator for the name/address of the nearest Authorised Service Centre.
 - Send or bring the product to a Panasonic Authorised Service Centre together with your proof of purchase receipt as a proof of purchase date. Please note that freight and insurance to and / or from your nearest Authorised Service Centre must be arranged by you.
 - Note that home or pick-up/delivery service is available for the following products in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centres:

(a) Picture tube (CRT) based Television Receivers (screen sizes greater than 66cm); Rear Projection TV's; Plasma/LCD televisions / displays (screen size greater than 103 cm)	(b) Convection/Combination Microwave Ovens
	(c) Whiteboard (except portable type)
 6. The warranties hereby conferred do not extend to, and exclude, any costs associated with the installation, de-installation or re-installation of a product, including costs related to the mounting, de-mounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.
- Panasonic Authorised Service Centres are located in major metropolitan areas and most regional centres of Australia, however, coverage will vary dependant on product. For advice on exact Authorised Service Centre locations for your product, please telephone our Customer Care Centre on 132600 or visit our website and use the Service Centre Locator.
- Unless otherwise specified to the consumer the benefits conferred by this express warranty are additional to all other conditions, warranties, guarantees, rights and remedies expressed or implied by the *Trade Practices Act 1974* and similar consumer protection provisions contained in legislation of the States and Territories and all other obligations and liabilities on the part of the manufacturer or supplier and nothing contained herein shall restrict or modify such rights, remedies, obligations or liabilities.

November 2005

**THIS WARRANTY CARD AND THE PURCHASE DOCKET (OR SIMILAR PROOF OF PURCHASE)
SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES**

**If you require assistance regarding warranty conditions or any other enquiries,
please visit the **Panasonic Australia** website
www.panasonic.com.au or by phone on 132 600
*If phoning in, please ensure you have your operating instructions available.***

Panasonic Australia Pty. Limited

ACN 001 592 187 ABN 83 001 592 187

Locked Bag 505, Frenchs Forest, NSW 2086
www.panasonic.com.au

PRO-031-F01 Issue: 3.0

23-11-2005

MEMO

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

Serial Number

Panasonic Corporation

Web Site: <http://panasonic.net/>

© Panasonic Corporation 2009

Printed in China
PBS0809H1