



TH-P55VT60A

TH-P65VT60A

*e***HELP**

Watching

my Home Screen

• Information	11
• How to use	12
• Settings	13

Basic

• Basic connection	15
• Selecting channel	17
• Information banner	18
• Option Menu	20
• Subtitle	21
• Off Timer	21
• Last view	21
• Adjusting time	22

External equipment

• External connection	23
• Watching external input	25
• Operating with TV's remote control	26
• HDMI features	27
• Valid input signals	29

For best picture

• Viewing Mode	30
• Ambient Sensor	31
• Auto power standby function	31
• Aspect	32
• Advanced Settings	33
• Lock Settings	36
• Copy Adjustment	37

For best audio

• Sound mode	38
--------------	----

TV Guide

• Using TV Guide	39
• Timer Programming	40

3D

• Note	41
• 3D Eyewear - Functions	42
• 3D Eyewear - Registration	44
• 3D Eyewear - Replacing battery	44
• Viewing 3D	45
• 3D Mode Selection	46
• 3D Settings	47
• Source image format	50

Tuning and editing channels

• Setting menu	51
• Favourites Edit	51
• Channel List	53
• Auto Tuning	54
• Manual Tuning	54
• Update Channel List	55
• New Channel Message	55
• Signal Condition	55

Recording

USB HDD setup

• Preparations	57
• Setting for USB HDD	58

Recording current programme

• One Touch Recording	60
• REW LIVE TV	61

Timer Programming

• Setting timer programming	63
• Editing timer programming	65
• Note	66

Technical information

• USB HDD	67
-----------	----

Internet service

Internet content

• Information	68
• Selecting internet content	68
• Note	69

Network connections

• Internet connection	70
• Note	71

Network settings

• Network Connection	72
• Custom - Wireless	73
• Custom - Wired	76
• Network Status	77
• VIERA remote Settings	77
• Network Link Settings	77
• Software Update	78
• New Software Message	78

Home network

DLNA

• Information	79
• Using DLNA	82

Network connections

• DLNA connection	83
• Note	85

Network settings

• Network Connection	85
• Custom - Wireless	86
• Custom - Wired	89
• Custom - Wireless Access Point	90
• Network Status	91
• VIERA remote Settings	92
• Network Link Settings	93

• Software Update	94
• New Software Message	94
Photos	
• Selecting file	95
• Viewing photo	96
• Using slideshow	96
Videos	
• Selecting file	98
• Watching video	99
• Video Setup	100
• Audio output settings	101
Music	
• Selecting file	102
• Playing music	102
• Music Setup	103
DIGA Recorder	
• Controlling DIGA Recorder	104
Technical information	
• Photo format	105
• Video format	105
• Music format	108
Media Player	
Using Media Player	
• Information	110
• Selecting device / mode	112
Photo mode	
• Selecting file	113
• Viewing photo	114
• Sorting photos	115
• Multi Shot 3D	115
• Using slideshow	116

Video mode	
• Selecting file	120
• Watching video	121
• Video Setup	122
• Audio output settings	123

Recorded TV mode	
• Selecting content	124
• Watching recorded TV	125
• Grouping contents	126
• Deleting content	126
• Changing device	126
• Chapter List	127
• Audio output settings	127

Music mode	
• Selecting file	128
• Playing music	128
• Music Setup	129

USB Sharing	
• USB Sharing	129

Technical information	
• Device handling caution	131
• SD Card	131
• USB devices	132
• Photo format	133
• Video format	133
• Music format	136

Functions

APPS List	
• Information	137
• How to use	137
• Settings	138

VIERA Link “HDAVI Control™”

• Summary of VIERA Link	138
• Preparations	142
• Easy playback	142
• Power on Link	142
• Power off Link	143
• Standby Power Save	143
• Intelligent Auto Standby	143
• VIERA Link Control	143
• Speaker Selection	145
• Note	145

Child Lock

• Using Child Lock	146
• PIN number	146
• Parental Rating	147

Shipping Condition

• Shipping Condition	147
----------------------	-----

Updating the TV Software

• Information	148
• Auto update	148
• Manual update	149

Setting characters

• Using numeric buttons	149
-------------------------	-----

Built-in Camera

• Using built-in Camera	150
-------------------------	-----

Voice Control

• Preparations	151
• How to use	152

Electronic Touch Pen

• Information	153
• Touch Pen Setup	153
• Using Electronic Touch Pen	153
• Maintenance	154

Bluetooth devices	
• Bluetooth Setup	155

Keyboard / Gamepad	
• Keyboard	157
• Gamepad	158

Settings

Setting menu	
• How to use	159

Picture	
• Viewing Mode	161
• Basic settings	162
• Ambient Sensor	163
• Noise reduction settings	163
• Resolution Remaster	163
• Caption Smoother	163
• Brilliance Enhancer	163
• Intelligent Frame Creation	163
• 24p Smooth Film	164
• Advanced Settings	164
• Option Settings	164
• Screen Settings	165
• 3D Settings	167
• Lock Settings	168
• Copy Adjustment	169
• Reset Picture Defaults	169

Sound	
• Mode	169
• Basic settings	169
• Volume settings	171
• Voice Guidance Settings	171
• Audio Description	172
• Advanced settings	172

• Reset Sound Defaults	174
------------------------	-----

Network

• Network Connection	175
• Network Status	175
• VIERA remote Settings	175
• Network Link Settings	175
• Other settings	175

Timer

• Off Timer	176
• Timer Programming	176
• Clock Settings	176
• Auto Standby	177
• No signal Power off	177

Setup

• Eco Navigation	177
• Voice Control Settings	177
• USB Device Setup	177
• Recording Setup	177
• Touch Pen Setup	177
• VIERA Touch Pad Controller	178
• Bluetooth Setup	178
• Child Lock	178
• Tuning Menu	178
• Display Settings	180
• VIERA Link Settings	180
• Professional Mode (isfccc)	181
• System Menu	181
• Other Settings	182

Support

FAQs

• Picture	183
• Digital TV	184

• Sound	186
• 3D	187
• HDMI	188
• Network	188
• Other	190
Maintenance	
• Care and Cleaning	192
Information	
• Using Help menu	193
Optional accessories	
• Electronic Touch Pen	194
• 3D Eyewear	194
• Wall-hanging bracket	195
Licence	
• Licence	196



Letters enclosed in a box indicate remote control buttons.



Letters in cyan indicate on-screen display items.



References in this eHELP


- The images shown in this eHELP are for illustrative purposes only.

Watching my Home Screen

Information

“my Home Screen” is a gateway to the TV, applications, and more.

It provides easy access to special features such as the Media Player, videos, games, communication tools, etc. as shown below (example).

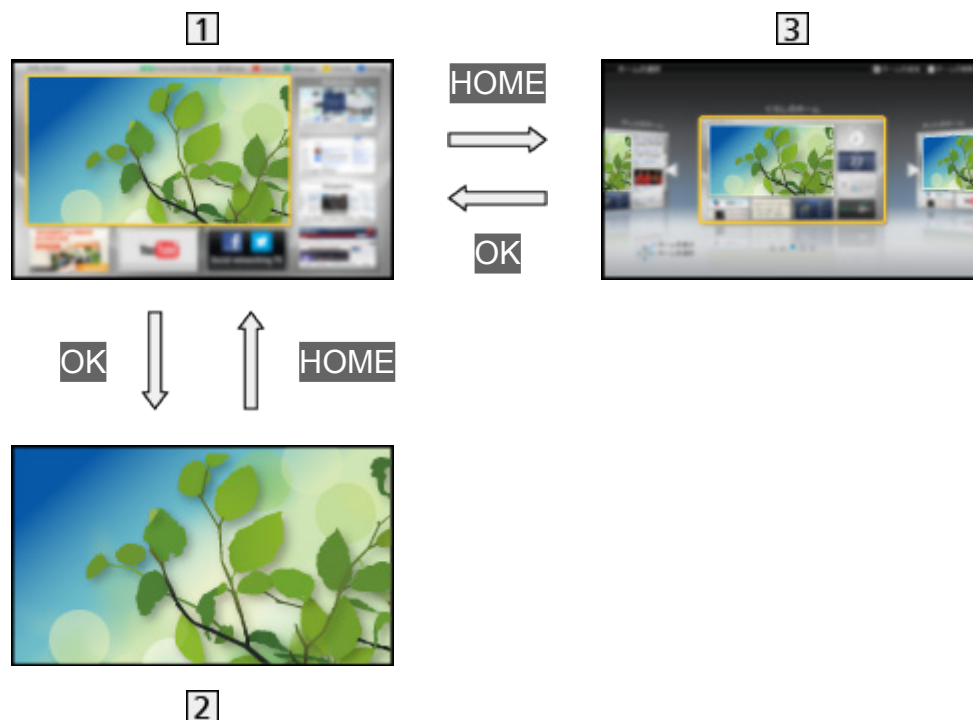

1 Home Screen

2 Selected content screen (TV, application, etc.)

3 Home Screen Selection

- Your preferred Home Screen can be selected or added.

How to use

Home Screen provides access to special features such as the Media Player, TV, internet content, data services, communication tools, etc.

1. Display Home Screen with **HOME**

(Example)



- The last viewed Home Screen is displayed when the TV is turned on.
- Press again to select or add your preferred Home Screen layout.

 → Watching > my Home Screen > Settings

2. Select a feature with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access

- To watch full-screen TV

1) Select the TV viewer with $\triangle / \nabla / \triangleleft / \triangleright$

(Example)



2) Press **OK** to watch

(Example)



- Also refer to [Tutorial](#) from the tool guide.


= Note =

- To prevent panel “image retention”, the brightness of the screen is adjusted when no operation is performed on Home Screen. After a certain period of time, full-screen TV is displayed automatically.

Settings

Select the setup menu from the tool guide on the top of the screen, or use coloured button to display the setup menu.


(Example)

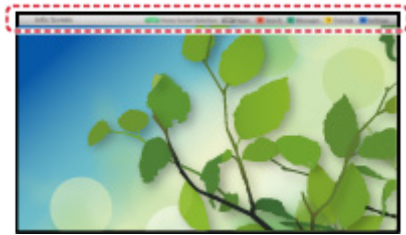

■ Home Screen Selection

1. Display [Home Screen Selection](#) with **HOME**

(Example)

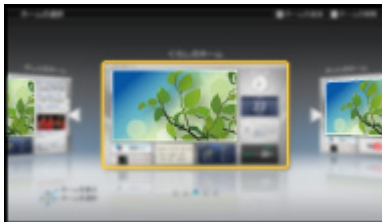

2. Select the screen with ◀ / ▶ and press **OK** to set

[Full Screen TV](#):

Displays full-screen TV.

[TV Home Screen](#):

To make your TV experience more convenient and comfortable.

[Lifestyle Screen](#):

Displays the TV with useful information and services for everyday life.

[Info Screen](#):

Enjoy internet content while watching TV.

[Add New Screen](#):

You can add a new screen to personalise.

■ Face Recognition

By using the built-in Camera, you can select the registered Home Screen with face recognition. Please refer to [Tutorial](#) from the tool guide.

- For details of the built-in Camera



→ [Functions](#) > [Built-in Camera](#) > [Using built-in Camera](#)

■ Settings

You can customise any Home Screen. (For example, changing the wallpaper, renaming freely, editing applications, setting the screen launched when the TV is turned on, etc.)

1. Select **Settings** from the tool guide
2. Follow the on-screen instructions

■ Search

You can search the content from various features.

1. Select **Search** from the tool guide
2. Follow the on-screen instructions

= Note =

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Internet service > Network connections

 → Internet service > Network settings

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you will not be able to use my Home Screen. You can update the software later manually.

 → Internet service > Network settings > Software Update

Basic

Basic connection

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

■ Aerial




1 Aerial terminal

2 RF cable

3 Aerial

- Keep RF (antenna) cable away from the mains lead to avoid and minimise mains interference pickup.
- Do not place the RF cable under the TV.
- An aerial, correct cable (75 Ω coaxial) and correct terminating plug are required to obtain optimum quality picture and sound.
- If a communal aerial system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.

■ DVD Recorder / VCR

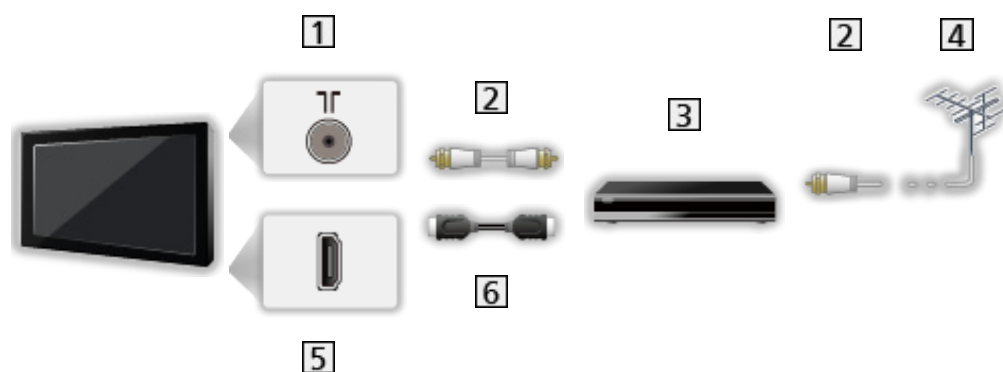


- 1 Aerial terminal
- 2 RF cable
- 3 DVD Recorder / VCR
- 4 Aerial
- 5 HDMI terminal
- 6 HDMI cable

- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

■ Set top box

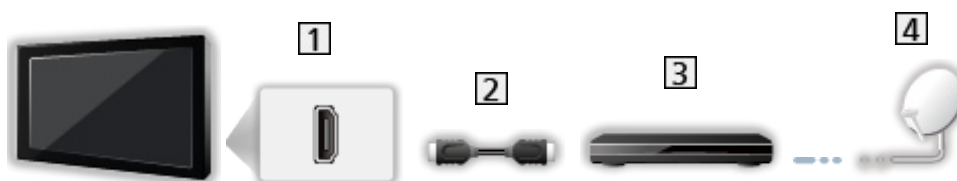

- 1 HDMI terminal
- 2 HDMI cable
- 3 Set top box
- 4 Satellite dish

- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

= Note =

- External equipment and cables shown are not supplied with this TV.
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.

- When using an HDMI cable, it is recommended to use fully wired one.
- Check the terminal type and cable plugs are correct when connecting.

Selecting channel

1. Select Digital TV or Analogue TV with **TV**

- You can also select the mode pressing INPUT/OK/HOLD for MENU button repeatedly on the control panel of the TV.
- The selected mode is displayed on the top left of the screen.

2. Select a channel with Channel Up / Down or numeric buttons



- Press the numeric buttons to select a channel position with 2 or more-digit (e.g. 399, press **3** **9** **9**).

■ To select a channel from the channel list

1. Display the channel list with **OK**
2. Select a channel from the list with $\triangle$ / ∇ and press **OK** to watch

■ To select a channel using information banner

1. Display information banner with **INFO** if it is not displayed
2. Select a channel with $\triangle$ / ∇ and press **OK** to watch while the banner is displayed

 → Watching > Basic > Information banner

■ To select a channel using TV Guide

1. Display TV Guide with **GUIDE**
2. Select the current programme or channel with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select **View** with $\triangle$ / ∇ and press **OK** to watch (Digital TV)


 → Watching > TV Guide

Information banner

Display information banner with **INFO**.

- Also appears when changing a channel.

(Example)

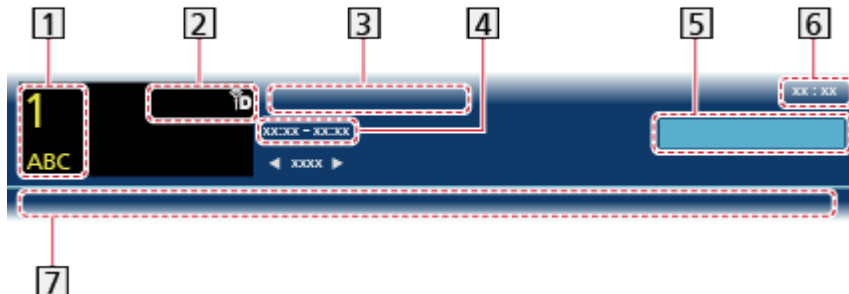

- 1 Channel position and name
- 2 Channel type (Radio, etc.) / encrypted channel (🔒) / TV mode (📺, 📻)
- 3 Programme
- 4 Programme start / finish time (Digital TV)
Channel position, etc. (Analogue TV)
- 5 Category
- 6 Current time
- 7 Features available / message meanings



Sound mute is on

Rating:

Rating information



→ Functions > Child Lock > Parental Rating

Bad signal:

Poor quality TV signal



Subtitle service available



Multiple image or audio available

∞, I, II, ▽ :

Audio mode



→ Settings > Sound > Advanced settings

AD:

Audio Description service available

- This function can aid visually-impaired viewers by adding an additional audio track to describe events on screen.

 → [Settings](#) > [Sound](#) > [Audio Description](#)

1 – 90:

Off Timer remaining time

 → [Watching](#) > [Basic](#) > [Off Timer](#)

- To confirm another tuned channel

△ / ▽

- To watch the channel listed in the banner

OK

- Information on the next programme (Digital TV)

▶

- Extra information (Digital TV)

INFO

– Press again to hide the banner.

- To hide the banner

EXIT

- To update the TV software (if available)

 (red)

- To select a favourite list (Digital TV)

 (blue)

– If the favourite list is created in [Favourites Edit](#).

 → [Watching](#) > [Tuning and editing channels](#) > [Favourites Edit](#)

- To adjust banner timeout, set [Banner Display Timeout](#).

 → [Settings](#) > [Setup](#) > [Display Settings](#)

Option Menu

Confirm or change the current status.

1. Display **Option Menu** with **OPTION**
 2. Select one of the following items with Δ / ∇ and press **OK** to access
[Voice Guidance Settings](#) / [Audio Description](#) / [Audio Selection](#) / [Dual Audio](#) / [MPX](#) / [Volume Correction](#)
 3. Set with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store
-

Voice Guidance Settings

Guidance settings for visually impaired users

 → [Settings](#) > [Sound](#) > [Voice Guidance Settings](#)

Audio Description

Set to **Auto** if the programme has Audio Description service, then you will hear an additional audio track to describe events on screen.

- To adjust the volume for Audio Description

 → [Settings](#) > [Sound](#) > [Audio Description](#)

- For Digital TV
-

Audio Selection

Selects between alternative languages for sound tracks (if available).

- For Digital TV
-

Dual Audio

Selects stereo / monaural (if available).

- For Digital TV
-

MPX

Selects multiplex sound mode (if available).

 → [Settings](#) > [Sound](#) > [Advanced settings](#)

- For Analogue TV
-

Volume Correction

Adjusts the volume of each individual channel or input mode.

Subtitle

Display / hide subtitles (if available) with **STTL**.

- For Digital TV

= Note =

- Subtitles may not be displayed properly in 3D images.

Off Timer

Turn the TV Standby mode automatically after a fixed period.

1. Display the menu with **MENU**
 2. Select **Timer** > **Off Timer** with $\triangle$ / ∇ and press **OK** to access
 3. Select the time in 15-minute increments with $\triangle$ / ∇ and press **OK** to set
90 / 75 / 60 / 45 / 30 / 15 / Off (minutes)
- To cancel, set to **Off** or turn the TV off.
 - The remaining time displays on the information banner.
 → **Watching > Basic > Information banner**
 - When the remaining time is less than 3 minutes, the remaining time will flash on the screen.

Last view

Switch to a previously viewed channel or input mode easily with **LAST VIEW**.

- Press again to return to the current view.

= Note =

- Switching channel is not available while the recording of **Timer Programming** or **One Touch Recording** is in progress.
- Watching less than 10 seconds is not reflected in the previously viewed channel or input mode.

Adjusting time

■ Adjust the standard time

Select the region where you live to adjust the standard time. (Base on GMT)

1. Display the menu with **MENU**
2. Select **Timer** > **Clock Settings** > **Region Select** with Δ / ∇ and press **OK** to access
3. Select the region with Δ / ∇ and press **OK** to set

NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania

- The time contained in the broadcast signal is UTC (Universal Time coordinated) formally known as GMT (Greenwich Mean Time).

NSW / ACT / Victoria / Queensland / Tasmania: +10:00

South Australia / Northern Territory: +9:30

Western Australia: +8:00

■ Adjust for Summer Time

Select time offset from the standard time for Summer Time. (Base on GMT)

1. Display the menu with **MENU**
2. Select **Timer** > **Clock Settings** > **Daylight Saving Time** with Δ / ∇ and press **OK** to access
3. Select **Auto** / **Off** / **+ 1/2 hour** / **+ 1 hour** with Δ / ∇ and press **OK** to set
 - If there is a gap between displayed time and actual time, set this function.
 - Normally select **Auto** to adjust as following for the region has been set in **Region Select**.

NSW / ACT / Victoria / Tasmania: +11:00

South Australia: +10:30

Queensland: +10:00

Northern Territory: +9:30

Western Australia: +8:00

External equipment

External connection

These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment.


- For basic connection

 → [Watching > Basic > Basic connection](#)

- Check the terminal type and cable plugs are correct when connecting.
- To use the specific devices supporting Bluetooth wireless technology

 → [Functions > Bluetooth devices](#)

■ HDMI equipment

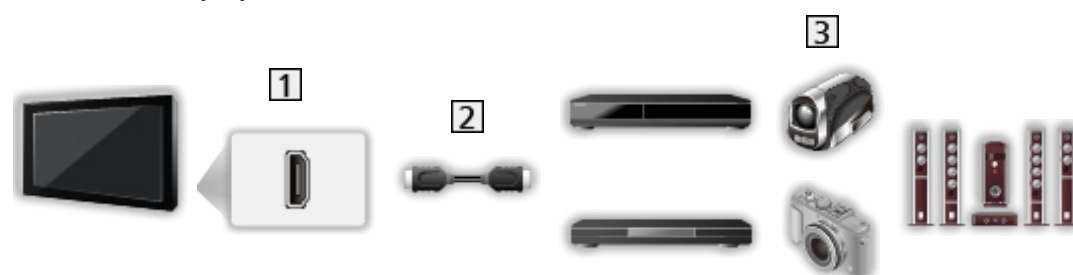

1 HDMI terminal

2 Fully wired HDMI compliant cable

3 Recorder / Player / 3D compatible player / Set top box / Camcorder / Amplifier with speaker system


= Note =

- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

■ AV devices

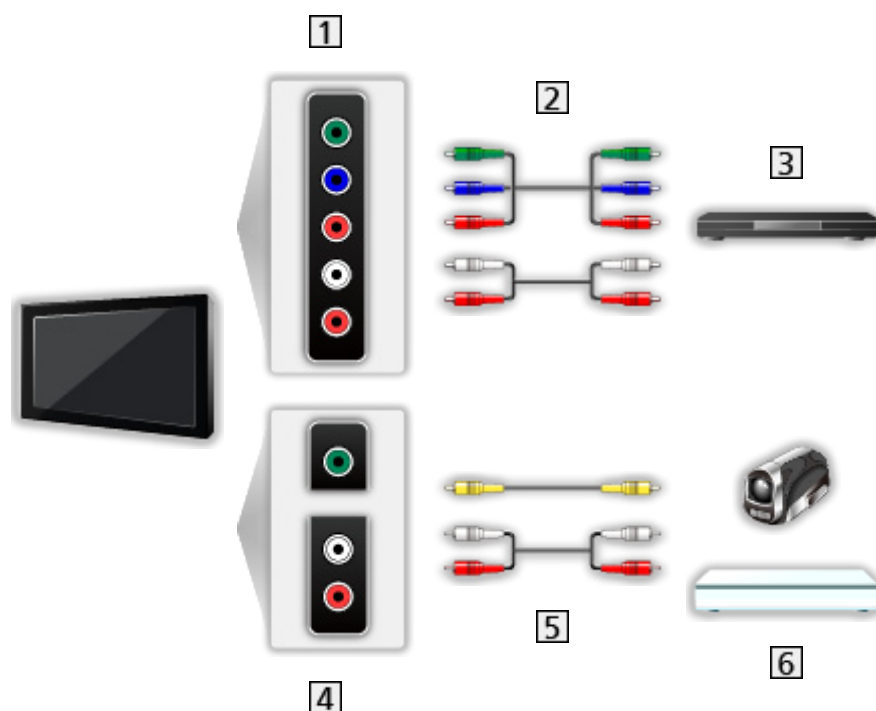

1 AV IN (COMPONENT) terminal

2 Component cables

3 DVD player

4 AV IN (VIDEO) terminal

5 Composite cables

6 Camcorder / Game equipment

■ USB devices



1 USB port

2 USB cable

3 USB HDD

= Note =

- It is recommended to connect the devices to the TV's USB ports directly.
- You cannot use two or more of the same kind of USB devices simultaneously except USB Flash Memory or USB HDD.
- Use USB 3 port for connecting the USB HDD.

- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- Additional information for the devices may be on the following website.
(English only)

<http://panasonic.net/viera/support>

■ To listen with speakers



1 DIGITAL AUDIO OUT

2 Optical digital audio cable

3 Amplifier with speaker system

- To enjoy the sound from the external equipment in multi-channel sound (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.

Watching external input

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch through the input.

1. Display the input selection menu with **AV**
 2. Select the input mode connected to the equipment with $\triangle / \nabla$ and press **OK** to watch (The selected mode is displayed on the top left of the screen)
 - You can also select the input pressing **AV** on the remote control or INPUT/OK/HOLD for MENU button on the control panel of the TV. Press repeatedly until the desired input is selected.
 - To switch between **COMPONENT** and **VIDEO** in **AV**, select with $\triangleleft / \triangleright$.
 - You can label or skip each input mode. Skipped inputs will not be displayed when **AV** is pressed. ([Input Labels](#))
- [Settings](#) > [Setup](#) > [Display Settings](#)
- The remote control is capable of operating the contents or external equipment.
- [Watching](#) > [External equipment](#) > [Operating with TV's remote control](#)
- To return to TV mode

TV

= Note =

- If the external equipment has an aspect adjustment function, set it to [16:9](#).
- For details, read the manual of the equipment or ask your local dealer.

Operating with TV's remote control

You can operate the contents in Media Player / media server, recording functions or the connected equipment with the below buttons of this TV's remote control.



:

Playback videocassette / DVD / video content



:

Stop the operations



:

Rewind, view the picture rapidly in reverse (VCR)

Skip to the previous track, title or chapter (DVD / video content)



:

Rewind, view the picture rapidly in reverse (VCR)

Search backward (DVD / video content)



:

Fast-forward, view the picture rapidly forward (VCR)

Skip to the next track, title or chapter (DVD / video content)



:

Fast-forward, view the picture rapidly forward (VCR)

Search forward (DVD / video content)



:

Pause / Resume

Press and hold to play at slow speed (DVD)



:

[One Touch Recording](#)



→ [Recording](#) > [Recording current programme](#) > [One Touch Recording](#)

■ How to change the code

Each Panasonic product has its own remote control code. Change the code according to the product for operation.

1. Press and hold Standby On / Off switch during the following operations



2. Enter the appropriate code as follows with numeric buttons



- Codes for each product and features

70: DVD Recorder, DVD Player, Blu-ray Disc Player

71: Player theatre, Blu-ray Disc theatre

72: VCR

73 (default):

Using in USB HDD recording, Media Player, DLNA features, product using in VIERA Link

3. Press  to change

= Note =

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to defaults if batteries are replaced.
- Some operations may not be available depending on the equipment.

HDMI features

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment* with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.



→ [Watching](#) > [External equipment](#) > [External connection](#)

*: The HDMI logo is displayed on HDMI-compliant equipment.

■ Applicable HDMI features

- Input audio signal:

2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)

- Input video signal:

Matches the output setting of the digital equipment.



→ [Watching](#) > [External equipment](#) > [Valid input signals](#)

- VIERA Link (HDAVI Control 5)



→ [Functions](#) > [VIERA Link “HDAVI Control™”](#) > [Summary of VIERA Link](#)

- Content Type
- Deep Colour
- Audio Return Channel
 - Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.
 - For HDMI2 terminal
- 3D
- x.v.Colour™

■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When using the DVI to HDMI adaptor cable, connect the audio cable to the audio input terminal (use AV IN audio terminals).

- Enquire HDMI adaptor cable at your local digital equipment retailer shop.

= Note =

- Audio settings can be made on [HDMI1 / 2 / 3 Input](#) in the Sound Menu.



→ [Settings](#) > [Sound](#) > [Advanced settings](#)

- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

Valid input signals

■ COMPONENT (Y, Pb/Cb, Pr/Cr), HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1,125 (1,080) / 60i, 50i	○	○
1,125 (1,080) / 60p, 50p, 24p		○

○: Applicable input signal

= Note =

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

For best picture

Viewing Mode

1. Display the menu with **MENU**
 2. Select **Picture** > **Viewing Mode** with $\triangle$ / ∇ and press **OK** to access
 3. Select the mode with $\triangle$ / ∇ and press **OK** to set
-

Viewing Mode

(**Dynamic** / **Normal** / **Cinema** / **THX Cinema** / **THX Bright Room** / **Custom** / **Professional1** / **Professional2**)

Selects your favourite picture mode for each input.

Dynamic:

Improves contrast and sharpness for viewing in a bright room.

Normal:

Normal use for viewing in a normal lighting condition.

Cinema:

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

THX Cinema *:

Reproduces the original image quality precisely in a darkened room.

- THX3D Cinema is displayed instead of THX Cinema in 3D mode.

THX Bright Room *:

Reproduces the original image quality precisely in a bright room.

- Not valid in 3D mode

Custom:

Adjusts each menu item manually to suit your favourite picture quality.

Professional1 / 2:

Allows you to set and lock the professional picture settings.

 → **Watching** > **For best picture** > **Advanced Settings**

- This mode is available only when **Professional Mode (isfccc)** in the Setup Menu is set to **On**.
- If the certified professional dealer sets these modes, **Professional1** and **Professional2** may be displayed as **isf Day** and **isf Night**.

In each Viewing Mode, [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#), [Colour Temperature](#), [Vivid Colour](#), [Ambient Sensor](#), [Noise Reduction](#), [MPEG Remaster](#), [Resolution Remaster](#), [Caption Smoother](#), [Brilliance Enhancer](#), [Intelligent Frame Creation](#) and [24p Smooth Film](#) can be adjusted and stored.

When in [Custom](#) or [Professional1 / 2](#) mode, [Advanced Settings](#) can be adjusted additionally. The settings in [Custom](#) or [Professional1 / 2](#) mode can be stored for each input.

- You can set [Viewing Mode](#) in 2D and 3D mode for each.

*: THX modes are used to mirror the picture settings used by professional filmmakers, faithfully reproducing the image quality of THX Certified movies. THX Certified movies have the THX logo on the disc. THX modes are not available for photo contents or internet services.

Ambient Sensor

1. Display the menu with **MENU**
 2. Select [Picture](#) > [Ambient Sensor](#) with Δ / ∇ and press **OK** to access
 3. Select [On](#) / [Off](#) with Δ / ∇ and press **OK** to set
-

Ambient Sensor

([On](#) / [Off](#))

- Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

Auto power standby function

The TV will automatically go into Standby mode in the following conditions:

- [Off Timer](#) is active.
 → [Watching](#) > [Basic](#) > [Off Timer](#)
- No operation is performed for 4 hours while [Auto Standby](#) is set to [On](#).
 → [Settings](#) > [Timer](#) > [Auto Standby](#)
- No signal is received and no operation is performed for 10 minutes while [No signal Power off](#) is set to [On](#).
 → [Settings](#) > [Timer](#) > [No signal Power off](#)

= Note =

- This function does not affect the recording of [Timer Programming](#) and [One Touch Recording](#).

Aspect

Change the aspect ratio (image size) with **ASPECT**.

- Enjoy viewing the image at its optimum size and aspect.

■ To change the aspect ratio manually

1. Display **Aspect Selection** list with **ASPECT**
2. Select the mode with $\triangle$ / ∇ and press **OK** to set
 - You can also change the mode pressing **ASPECT**.
(Press repeatedly until you reach the desired mode.)

16:9:

Directly displays the image at 16:9 without distortion (anamorphic).

14:9:

Displays the image at the standard 14:9 without distortion.

Just:

Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

4:3:

Displays the image at the standard 4:3 without distortion.

Zoom:

Displays a 16:9 letterbox or 4:3 image without distortion.

4:3 Full:

Displays a 4:3 image enlarged horizontally to fit the screen.

- For HD (High definition) signals

Sidecut Just:

Displays a 16:9 letterbox (anamorphic) image full-screen. Stretching is only noticeable at the left and right edges.

- For HD (High definition) signals

Sidecut Zoom:

Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

- For HD (High definition) signals

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.

- Aspect cannot be changed in 3D format signals.

Advanced Settings

You can adjust and set up the detailed picture settings for each input when **Viewing Mode** is set to **Custom** or **Professional1 / 2** mode.

 → **Watching** > **For best picture** > **Viewing Mode**

1. Select the input mode with **AV** or **TV**
2. Display the menu with **MENU**
3. Select **Picture** > **Viewing Mode** with Δ / ∇ and press **OK** to access
4. Select the mode with Δ / ∇ and press **OK** to set
Custom / **Professional1** / **Professional2**

■ Adjust the detailed picture settings

1. Display the menu with **MENU**
2. Select **Picture** > **Advanced Settings** > **Panel Luminance Setting** / **Adaptive Gamma Control** / **Black Expander** / **Colour Gamut** / **White Balance** / **Colour Management** / **Gamma** with Δ / ∇ and press **OK** to access
3. Set with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store

■ Panel Luminance Setting

Panel Luminance Setting

(**High** / **Mid** / **Low**)

Changes the luminance level of the panel to adjust the overall brightness.

■ Adaptive Gamma Control

Adaptive Gamma Control

Adjusts the gamma curve to make the image brighter.

■ Black Expander

Black Expander

Gradually adjusts the shades of black.

■ Colour Gamut

Colour Gamut

([Native](#) / [Rec. 709](#) / [SMPTE-C](#) / [EBU](#))

Reproduces image colour precisely according to the colour gamut standards.

[Native](#):

Displays deep colours by expanding the colour gamut to its maximum.

[Rec. 709](#):

Standard for HD (High definition)

[SMPTE-C](#):

Standard for NTSC

[EBU](#):

Standard for PAL

- For HDMI input or video contents of Media Player (when [Colour Remaster](#) is set to [Off](#).)

■ White Balance

[R-Gain](#) / [G-Gain](#) / [B-Gain](#)

Adjusts the white balance of bright red / green / blue areas.

[R-Cutoff](#) / [G-Cutoff](#) / [B-Cutoff](#)

Adjusts the white balance of dark red / green / blue areas.

[More Detailed Adjustment](#)

Adjusts more detailed White Balance items.

[Input Signal Level](#):

Adjusts the input signal level.

[R-Gain](#) / [G-Gain](#) / [B-Gain](#):

Adjusts the detailed white balance of bright red / green / blue areas.

[Reset White Balance](#):

Resets to the default detailed White Balance.

[Reset White Balance](#)

Resets to the default White Balance.

■ Colour Management

[R-Hue](#) / [R-Saturation](#) / [R-Luminance](#)

Adjusts the picture hue / saturation / luminance of red areas.

[G-Hue](#) / [G-Saturation](#) / [G-Luminance](#)

Adjusts the picture hue / saturation / luminance of green areas.

[B-Hue](#) / [B-Saturation](#) / [B-Luminance](#)

Adjusts the picture hue / saturation / luminance of blue areas.

[More Detailed Adjustment](#)

Adjusts more detailed Colour Management items.

[Y-Hue](#) / [C-Hue](#) / [M-Hue](#):

Adjusts the picture hue of yellow / cyan / magenta areas.

[Y-Saturation](#) / [C-Saturation](#) / [M-Saturation](#):

Adjusts the saturation of yellow / cyan / magenta areas.

[Y-Luminance](#) / [C-Luminance](#) / [M-Luminance](#):

Adjusts the luminance of yellow / cyan / magenta areas.

[Reset Colour Management](#):

Resets to the default detailed Colour Management.

[Reset Colour Management](#)

Resets to the default Colour Management.

■ Gamma

[Gamma](#)

([2.6](#) / [2.4](#) / [2.2](#) / [2.0](#) / [1.8](#) / [S Curve](#))

Switches the gamma curve.

- Please note the numerical values are reference for the adjustment.
-

More Detailed Adjustment

Adjusts more detailed Gamma items.

Input Signal Level:

Adjusts the input signal level.

Gain:

Adjusts the gain of gamma for selected signal level.

Reset Gamma:

Resets to the default detailed Gamma.

Reset Gamma

Resets to the default Gamma.

■ Reset Picture Defaults

Reset Picture Defaults

Resets [Advanced Settings](#) to the default settings.

Lock Settings

Locks the settings of [Professional1 / 2](#) mode for each input.

1. Display the menu with **MENU**
2. Select [Picture](#) > [Lock Settings](#) with $\triangle$ / ∇ and press **OK** to access
3. Enter the PIN number (4 digits) with numeric buttons



- Enter the PIN number twice at first setting.
 - Make a note of the PIN number in case you forget it.
4. Select [Adjustment Lock](#) with $\triangle$ / ∇ and press **OK** to access
 5. Select [On](#) with $\triangle$ / ∇ and press **OK** to set
 - [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#), [Colour Temperature](#), [Vivid Colour](#), [Resolution Remaster](#), [Caption Smoother](#), [Brilliance Enhancer](#), [Advanced Settings](#) and [Reset Picture Defaults](#) can be locked.

■ To change the PIN number

1. Select **Change PIN** with $\triangle$ / ∇ and press **OK** to access
2. Enter a new PIN number twice with numeric buttons



Copy Adjustment

Copies the picture settings of **Custom**, **Professional1** or **Professional2** to those of another input.

1. Display the menu with **MENU**
2. Select **Picture** > **Copy Adjustment** > **Destination Viewing Mode** / **Destination Input** with $\triangle$ / ∇ and press **OK** to access
3. Select the destination to copy to with $\triangle$ / ∇ and press **OK** to set
4. Select **Copy Start** with $\triangle$ / ∇ and press **OK** to copy
5. When the confirmation screen is displayed, select **Yes** with $\triangleleft$ / $\triangleright$ and press **OK** to set

= Note =

- **Option Settings**, **Screen Settings** and **3D Settings** will not be copied.
- You cannot copy to the locked mode.

For best audio

Sound mode

1. Display the menu with **MENU**
 2. Select **Sound** > **Mode** with Δ / ∇ and press **OK** to access
 3. Select the mode with Δ / ∇ and press **OK** to set
-

Mode

(**Standard** / **Music** / **Ambience** / **User**)

Selects your favourite sound mode for each input.

Standard:

Provides the suitable sound quality for all types of scenes.

Music:

Improves sound quality for watching music videos, etc.

Ambience:

Improves spatial effects and provides clear sounds.

User:

Adjusts the sounds manually using the equaliser to suit your favourite sound quality.

- In each mode, **Bass**, **Treble**, **Surround**, **Bass Boost** and **Digital Remaster** can be adjusted and stored.
- For the User mode, **Equaliser** will be available in the Sound Menu instead of **Bass** and **Treble**. Select **Equaliser** and adjust the frequency.

 → **Settings** > **Sound** > **Basic settings**

- This function is effective only for the sound from TV speakers.

TV Guide

Using TV Guide

TV Guide - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcasters).

1. Select Digital TV or Analogue TV with **TV**
2. Press **GUIDE** to view TV Guide
 - Press again to change the layout ([Landscape](#) / [Portrait](#)).
 - View [Landscape](#) to see several channels.
 - View [Portrait](#) to see one channel by time.

(Example)



- 1 TV Guide date
- 2 TV Guide time
- 3 Programme
- 4 Channel position and name

- To watch the programme
 - 1) Select the current programme with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
 - 2) Select [View](#) with Δ / ∇ and press **OK** to exit TV Guide (Digital TV)
 - To use timer programming, select [Timer Programming](#).

$\rightarrow$ [Watching](#) > [TV Guide](#) > [Timer Programming](#)

- To the previous day (Digital TV)

(red)

- To the next day (Digital TV)
 (green)
- To view a channel list of the selected type (Digital TV)
 - 1) Display the type list with  (yellow)
 - 2) Select the type with Δ / ∇ and press **OK** to view
- To view a channel list of the selected favourite list
 - 1) Display the favourite list with  (blue)
 - 2) Select the favourite with Δ / ∇ and press **OK** to view
 - To list favourite channels, set [Favourites Edit](#).
 $\rightarrow$ [Watching](#) > [Tuning and editing channels](#) > [Favourites Edit](#)
- To view more details of the programme (Digital TV)
 - 1) Select the programme with Δ / ∇ / $\triangleleft$ / $\triangleright$
 - 2) Press **INFO** to view
 - Press again to return to TV Guide.
- To exit TV Guide
EXIT

= Note =

- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.
- Digital TV and Analogue TV channels are displayed on the same TV Guide screen. **D** means Digital TV channel and **A** means Analogue TV channel. There will be no programme listings for Analogue channels.

Timer Programming

The Timer Programming menu allows you to choose programmes that you want to remind watching or record to the USB HDD. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode.

1. Select the forthcoming programme or channel with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
2. Select [USB HDD Rec.](#) / [Reminder](#) with Δ / ∇ and press **OK** to set
 - To check / change / cancel a timer programming event
 $\rightarrow$ [Recording](#) > [Timer Programming](#) > [Editing timer programming](#)
 - LED will turn to orange in Standby mode if [Timer Programming](#) is set.
 - To return to TV Guide

RETURN

- If you select the current programme, a confirmation screen asking whether you want to watch or record the programme appears. Select [Timer Programming](#) with Δ / ∇ and press **OK** to set [USB HDD Rec.](#) to record from the time you finish the timer programming event setting.

= Note =

- Not valid in Analogue TV
- [Timer Programming](#) only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- No other channels can be selected while the recording of [Timer Programming](#) is in progress.
- When recording programmes to the USB HDD, be sure to format the USB HDD and enable it to record in [USB Device Setup](#).

 → [Recording](#) > [USB HDD setup](#)

3D

Note

- Display the image (TV, external input, etc.) full-screen for viewing 3D.
- If light appears to flicker under fluorescents or dimmers when using the 3D Eyewear, change the setting of [3D Refresh Rate](#).

 → [Watching](#) > [3D](#) > [3D Settings](#)

- Do not exert pressure on or scratch the lens of the 3D Eyewear.
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- When viewing 3D images, make sure your eyes are at an approximately horizontal level and keep a position where you do not see double images.
- Do not wear the 3D Eyewear when watching something other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as sunglasses.
- 3D effects may be perceived differently depending on the person.

3D Eyewear - Functions

■ Part names and functions



1 Power button / Mode change / Indicator lamp

- Power button
 - Press and hold for approx. 1 second to turn the 3D Eyewear On. (The indicator lamp lights for 2 seconds.)
 - Press and hold for approx. 2 seconds to turn the 3D Eyewear Off. (The indicator lamp lights 3 times.)
- Mode change
 - Press and hold for approx. 1 second to change the mode between 3D and 2D (view a 3D image in 2D).
 - When power is off, press and hold for approx. 5 seconds to change to registration mode.

 → [Watching > 3D > 3D Eyewear - Registration](#)

- Indicator lamp
 - Lights or flashes during use to show the status (see below).

2 Protection film

- Peel off the protection film on both side of the lens.

3 Insulating sheet

4 Battery cover

- When using for the first time, remove the insulating sheet. Pull the insulating sheet.
- To replace the battery

 → [Watching > 3D > 3D Eyewear - Replacing battery](#)

■ Indicator lamp status

- Lights red for 2 seconds when turned on:
Sufficient battery level
- Flashes 5 times when turned on:
Low battery level
- Flashes red:
Under registering
- Flashes red once every 1 second:
Under reconnecting to the TV
- Flashes red 3 times:
Power off (Press and hold for more than 2 seconds when in use,
or automatically power off when registering / reconnecting fails, or
connection is lost)
- Flashes red once every 2 seconds when in use:
3D mode is selected.
- Flashes red twice every 4 seconds when in use:
2D mode is selected.

■ Storing and cleaning the 3D Eyewear

- Store the 3D Eyewear in a cool, dry place.
- Clean using a soft, dry cloth.
 - Wiping the 3D Eyewear with a cloth that is covered in dust or dirt may scratch the eyewear. Shake off any dust from the cloth before use.
 - The lens of the 3D Eyewear is easily broken. Be careful when cleaning the lens.
- Do not use benzene, thinner or wax on the 3D Eyewear, otherwise this may cause peeling of the paint.
- Do not dunk the 3D Eyewear in liquid such as water.

3D Eyewear - Registration

■ First registration

Perform the first registration when the 3D Eyewear is used for the first time.

1. Turn the TV on
2. Press Power button for about 1 second to turn the 3D Eyewear on
 - The lamp lights for about 2 seconds and then flashes.
 - The 3D Eyewear will be turned on and the registration will start.
 - Place the 3D Eyewear within 50 cm from the TV while registration in progress.
3. After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode

■ Registration again

When connection with the registered TV fails, or when using with another TV, re-register the 3D Eyewear.

1. Turn the TV on
2. Within 50 cm from the TV, press Power button until lamp lights, then release it to start registration
3. After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode

= Note =

- If the registration failed, the 3D Eyewear will be turned off. In this case, turn the TV off and perform from step 1.

3D Eyewear - Replacing battery


When the battery is running low, the indicator lamp flashes 5 times on turning the 3D Eyewear on. In this case, early battery replacement is recommended.

- Dispose of the old batteries as non-burnable rubbish, or in line with the waste disposal regulations in your local area.

1. Remove the battery cover using pen tip or screwdriver (minus -) etc.



2. Replace the battery (coin-shaped lithium battery CR2025)

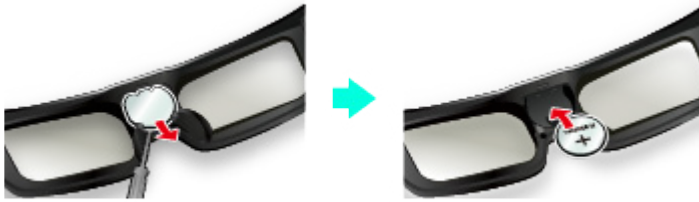

- If difficulty, remove it with the tip of the driver.
- Note the correct polarity (+ or -).

3. Attach the battery cover



Viewing 3D

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear.

- This TV supports Frame Sequential, Side by Side and Top and Bottom 3D formats.
 - Frame Sequential is the 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.
- The 3D Eyewear must be worn to view 3D images. Perform the First Registration when the 3D Eyewear is used for the first time.

 → [Watching > 3D > 3D Eyewear - Registration](#)

1. Turn the 3D Eyewear on and put it on

- Connection status and battery status are displayed on the bottom right of the screen.

2. View the 3D images

- Safety precautions will be displayed when you first watch the 3D image. Select **Yes** or **No** to continue to view 3D images.

If you select **Yes**, this message will be displayed again in the same condition after Mains power On / Off switch is next turned on. Select **No** if you do not want to display this message again.

- Turn off the 3D Eyewear after using it.

■ Playing back 3D-compatible Blu-ray disc (Frame Sequential format)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable. (If you use the non 3D-compatible player, the images will be displayed in 2D mode.)
- If the input mode is not switched automatically, select the input mode connected to the player.



→ Watching > External equipment > Watching external input

■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player and Network services



→ Media Player



→ Home network

■ 2D images converted to 3D

- Set to 2D→3D mode in 3D Mode Selection.



→ Watching > 3D > 3D Mode Selection

3D Mode Selection

You can easily change the viewing mode between 2D and 3D with **3D**.

1. Display the 3D Mode Selection screen with **3D**
2. Select the mode with $\triangle$ / ∇ and press **OK** to set
 - Items of 3D Mode Selection vary depending on the condition.

3D / 2D:

Displays the appropriate image as you desire without selecting 3D format.

- This mode may not work properly depending on the source image format. In this case, select the appropriate 3D format manually.

■ To change 3D format manually

When the image is not changed properly using 3D / 2D mode, use this manual setting.

1. Display the **3D Mode Selection (Manual)** screen with  (red) during above operation
2. Select the mode with $\triangle$ / ∇ and press **OK** to set

Original:

Displays the source image as it is.

- Use to identify the format type of the source image.

 → Watching > 3D > Source image format

Side by Side - 3D / Side by Side - 2D / Top and Bottom - 3D / Top and Bottom - 2D:

Displays the mode you select.

- Not valid in Analogue TV and AV mode

2D→3D:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places such as shops or hotels etc. may infringe on the rights of the copyright holder protected under copyright law.

3D Settings

1. Display the menu with **MENU**
2. Select **Picture** > **3D Settings** with $\triangle$ / ∇ and press **OK** to access
3. Select one of the following items with $\triangle$ / ∇ and press **OK** to access
3D Detection / **3D Signal Message** / **3D Refresh Rate** / **2D→3D Depth** / **3D Adjustment** / **L/R Picture Swap** / **Edge Smoother** / **Safety Precautions**
4. Set with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store
 - To exit the menu screen

EXIT

3D Detection

(On (Advance) / On / Off)

Selects whether to switch to the 3D mode automatically.

On (Advance):

Detects all the 3D format signals and displays the 3D image automatically.

On:

Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically.

- To view 3D images without any notifications and operations, set to On (Advance).

3D Signal Message

(On / Off)

Selects whether to give a notification message when a signal of 3D format is found.

- Not valid when 3D Detection is set to On (Advance)
- For Digital TV, Component and HDMI input

3D Refresh Rate

(Auto / 100Hz / 120Hz)

Reduces juddering and flicker noises of the 3D images when using the 3D Eyewear.

100Hz:

If light appears to flicker under fluorescents (or dimmers) of 50 Hz.

120Hz:

If light appears to flicker under fluorescents (or dimmers) of 60 Hz.

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in 2D→3D mode).

Set to On to enable Effect setting.

- When setting to On, a safety precaution message will appear. Read it carefully and press RETURN to go to Effect setting.
- When adjusting, take into account that the vision of 3D images varies among different individuals.

Effect:

Adjusts the 3D depth according to the contents or to your preference.
(This setting will not be memorised when changing the input mode or channel.)

L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in 2D→3D mode).

Select R/L (Reversed) if you feel that the sense of depth is unusual.

- This setting will not be memorised when changing the input mode or channel.
-

Edge Smoother

(On / Off)

Set to On if you feel the contoured parts of an image are not smooth enough (except in 2D→3D mode).

Safety Precautions

Displays the precautions for viewing 3D images.

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.

Source image format

If the picture appears to be abnormal, refer to the table of images that can be seen for each [3D Mode Selection \(Manual\)](#) and the source image format, and select the correct 3D mode.

- 3D images are displayed correctly with appropriate 3D format as following yellow boxes.

1	5			
	6	7	8	9
2				
3				
4				

1 Source image format

2 Side by Side

3 Top and Bottom

4 Normal format (2D)

5 3D Mode Selection

6 Original

7 Side by Side - 3D

8 Top and Bottom - 3D

9 2D→3D

*: When selecting [Side by Side - 2D](#) or [Top and Bottom - 2D](#), the images will be displayed without 3D effect.

- Depending on the player or broadcasts, the image may be different from the above illustrations.

Tuning and editing channels

Setting menu

You can retune channels, create your favourite channel lists, skip unwanted channels, etc.

1. Select Digital TV or Analogue TV with **TV**
2. Display the menu with **MENU**
3. Select **Setup > Tuning Menu** with **△ / ▽** and press **OK** to access
Digital TV Tuning Menu / Analogue TV Tuning Menu
 - The menu name varies depending on the TV mode.
4. Select one of the functions with **△ / ▽** and press **OK** to access
Favourites Edit / Channel List / Auto Tuning / Manual Tuning / Update Channel List / New Channel Message / Signal Condition

Favourites Edit

■ List favourite Digital TV channels

Create your favourite channel lists from various broadcasters (up to 4: **Favourites 1 to 4**).

The Digital TV Favourites lists are available from **Favourites** in the information banner and the TV Guide screen.

 → **Watching > Basic > Information banner**

 → **Watching > TV Guide > Using TV Guide**

1. Select **Favourites Edit** with **△ / ▽** and press **OK** to access
2. Select a channel to list from all Digital TV channels with **△ / ▽**
 -  appears when the channel is encrypted.
 - To display other Favourites
 (green)
3. Press **OK** to add it to **Favourite List**
 - To add all channels to the list
 (yellow)
4. Press **RETURN** and **OK** to store

■ Edit Favourites list

You can edit the favourites list while the cursor is on the channel in the favourites list.

- To move the channel

1) Select the channel with $\triangle$ / ∇

2) Press  (green)

3) Select the new position with $\triangle$ / ∇ or numeric buttons



4) Press  (green) to store

- To delete the channel

1) Select the channel with $\triangle$ / ∇

2) Press **OK** to delete

– Press  (yellow) to delete all channels

- To name the Favourites

1) Press  (red)

2) Enter characters (maximum 10 characters) with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



3) Press **RETURN** to store

= Note =

- Channel numbers are defined by the broadcaster and cannot be changed.
- Hidden channels can be selected but not viewed.

Channel List

■ Skip unwanted Digital TV / Analogue TV channels

You can hide (skip) unwanted channels. The hidden channels cannot be displayed except in this function.

1. Select **Channel List** with $\triangle$ / ∇ and press **OK** to access
2. Select a channel with $\triangle$ / ∇
3. Press **OK** to set **Reveal** / **Hide** (skip)

☒ : **Reveal**

☐ : **Hide** (skip)

- To reveal all channels

 (yellow)

■ Edit Digital TV / Analogue TV Channels

- To swap / move the channel position (if available)

1) Press  (green) to edit

2) Set the new position with $\triangle$ / ∇ or numeric buttons, and press  (green) to store



- To retune each channel (**Manual Tuning**)

 (red)

 → **Watching > Tuning and editing channels > Manual Tuning**

- To rename the channel name (Analogue TV)

1) Press  (blue) to edit

2) Enter characters (maximum 5 characters) with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



3) Press **RETURN** to store

= Note =

- If a VCR is connected only with the RF cable in Analogue TV, edit **VCR**.

Auto Tuning

Automatically retunes the channels received in the area.

 
- All the previous tuning settings are erased.
- Search begins in the order from the lower channels to the higher channels.
- If tuning has not been done completely, set [Manual Tuning](#).

 → [Watching](#) > [Tuning and editing channels](#) > [Manual Tuning](#)

1. Select [Auto Tuning](#) with $\triangle$ / ∇ and press **OK** to access
2. The confirmation screen is displayed and press **OK** to start [Auto Tuning](#) (Settings are made automatically)
 - When the operation is completed, the channel at the lowest position will be displayed.
 - This setting is applicable only for the selected TV mode.

■ Auto Tuning using the buttons on the TV

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu
2. Set [Auto Tuning](#) with following control panel buttons
 - Move the cursor / select from a range of options / select the menu item (up and down only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button.

Manual Tuning

■ Digital TV

Normally use [Auto Tuning](#) or [Update Channel List](#) to retune Digital TV channels.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

- All Digital channels found will be added to [Channel List](#).

1. Select physical channel with $\triangle$ / ∇ and select offset with $\triangleleft$ / $\triangleright$
2. Press **OK** to search

■ Analogue TV

Set Analogue TV channel manually after [Auto Tuning](#).

1. Select the channel position with numeric buttons



2. Select the channel with Channel Up / Down button



3. Search with ◀ / ▶

4. Select [Store](#) with ▲ / ▼ and press **OK** to set

- If a VCR is connected only with the RF cable, select channel position [0](#).

Update Channel List

By updating the Digital TV channel list, you can add new channels, delete removed channels or change channel names and positions automatically.

- The channel list is updated while keeping your settings in [Favourites Edit](#), [Channel List](#), [Child Lock](#), etc.
- Depending on the signal condition, the update may not work properly.

New Channel Message

Selects whether to give a notification message when a new Digital TV channel is found.

- When a notification message appears, you can perform [Update Channel List](#) pressing **OK**.
- Sometimes, mainly during summer months at night, the TV may pick up distant TV stations outside your broadcast due to favourable short term ionosphere conditions. In such circumstances when you press **OK**, the TV does not add any new channels. This is normal.

Signal Condition

Selects a channel and checks the signal condition.

A good Signal Strength is not an indication of suitable signal for Digital TV reception.

- Use the Signal Quality indicator as follows.
 - Green bar: Good
 - Yellow bar: Poor
 - Red bar: Bad (Check the aerial)
- Vertical lines show the maximum signal value of the selected channel.

- To change the channel



- For Digital TV

Recording

USB HDD setup


Preparations

You can record the digital TV programmes to the connected USB HDD and enjoy playing back in various ways.

- Prepare the USB HDD for the exclusive use of recording with this TV.
- Connect the USB HDD to the USB 3 port with the USB cable.
- Be sure to connect the USB HDD to the socket outlet.
- To remove the USB HDD safely from the TV, perform in [Safely remove USB](#) in [USB Device Setup](#).

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

- Check the terminal type and cable plugs are correct when connecting.

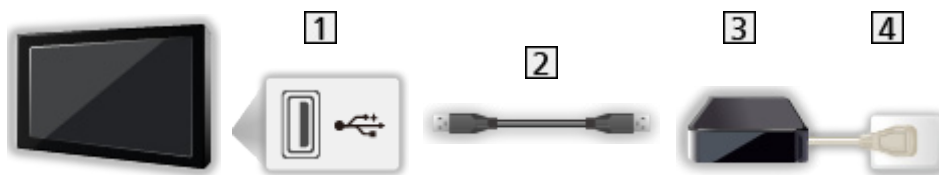

- 1** USB port
- 2** USB cable
- 3** USB HDD
- 4** Socket outlet

= Caution =

- All data in the USB HDD will be erased in the following cases:
 - When formatting the USB HDD with this TV
 -  → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)
 - When formatting the USB HDD to use on PC, etc.
- When the TV is repaired due to a malfunction, you may have to format the USB HDD again with this TV to use it. (All data will be erased after formatting.)
- In order to use the USB HDD with your PC after recording with this TV, format it again on your PC. (Special operations or tools may be necessary to format on your PC. For details, read the manual of the USB HDD.)
- The data recorded on the USB HDD with this TV can only be played back on this TV. You cannot play back its contents with another TV (including the TV of the same model number) or any equipment.

- Do not turn the TV off, pull out the mains plug or remove the USB HDD during operation (formatting, recording, etc.). Doing so may cause malfunction of the device or damage the recorded data. (An electric outage may also be a cause of malfunction.)

= Note =

- Analogue TV programme cannot be recorded on the USB HDD.
- The data broadcasting (MHEG, etc.), radio broadcasting will not be recorded, and also the recording function will not work during the period without any signal.
- Not all the programmes can be recorded depending on the broadcaster and service provider.
- You cannot copy the recorded contents of the USB HDD.
- For more information of the USB HDD

 → [Recording](#) > [Technical information](#) > [USB HDD](#)

Setting for USB HDD

Format and set up the USB HDD with this TV in order to use it for recording.

All the USB devices recognised as a mass storage device will be listed.

- Please note that USB HDD will be formatted and all data in it will be erased after this setup.
- Before setting, connect the USB HDD and be sure to turn on the USB HDD.

 → [Recording](#) > [USB HDD setup](#) > [Preparations](#)

1. Display the menu with **MENU**
2. Select [Setup](#) > [USB Device Setup](#) with $\triangle$ / ∇ and press **OK** to access
3. Select the USB HDD for recording with $\triangle$ / ∇ and press **OK** to start setup
 - Some USB HDD may not be displayed.
 - To display information of the highlighted device
INFO
4. When the caution and confirmation screen for using USB HDD is displayed, select [Yes](#) with $\triangleleft$ / $\triangleright$ and press **OK** to proceed

5. When the confirmation screen of USB HDD name is displayed, select **Yes** with ◀ / ▶ and press **OK** to set

- The name for the USB HDD is created automatically. If you want to edit the name, select **Yes**.

1) Enter characters with ▲ / ▼ / ◀ / ▶ or numeric buttons, and press **OK** to set



2) Press **RETURN** to store

6. When the confirmation screen to enable USB HDD for recording is displayed, select **Yes** with ◀ / ▶ and press **OK** to set

- If another formatted USB HDD for recording already exists, this confirmation screen will be displayed to switch to enable this USB HDD for recording.

- Mode of the USB HDD

 : The USB HDD is available for recording / playing back. Only one USB HDD on the list is available for recording.

 : The USB HDD is available for playing back.

- To change the mode



- To edit USB HDD name



(green)

- To format



(red)

- To remove the USB HDD safely from the TV



(yellow)

= Note =

- You can only select one USB HDD for recording at a time.
- You cannot change the settings for the USB HDD while recording is in progress.

Recording current programme

One Touch Recording

Records the current programme to the USB HDD immediately.

- Confirm the remote control code is “73”.



→ Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**
2. Select **Setup** > **Recording Setup** > **One Touch Recording** with $\triangle$ / ∇ and press **OK** to access
3. Select the maximum recording time **30 / 60 / 90 / 120 / 180 (minutes)** with $\triangle$ / ∇ and press **OK** to set

■ To start One Touch Recording

Press  to start.

- Other channels cannot be selected while recording is in progress.

■ To stop recording in progress

Press  to stop.

■ To play back or delete the recorded contents

TV programmes recorded by **One Touch Recording** can be played back in Media Player.

1. Display icons of the feature with **APPS**
2. Select **Recorded TV** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access



→ Media Player > Recorded TV mode

- Even if **One Touch Recording** is in progress, you can play back all the contents. (Depending on the USB HDD, playback may not be possible or the recording may not work properly during playback.)

REW LIVE TV

Records the current programme to the USB HDD constantly within the maximum recordable time.

- Confirm the remote control code is “73”.



→ Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**
2. Select **Setup** > **Recording Setup** > **REW LIVE TV** with Δ / ∇ and press **OK** to access
3. Select **Auto** with Δ / ∇ to start **REW LIVE TV**
 - When you select **Auto**, recording will start automatically.
 - This recording will not start if another recording is in progress, TV signal condition is bad or there are no images displayed.

■ To operate REW LIVE TV

- To pause



- To search backward (up to 90 minutes)



- After pausing or searching backward, the following buttons are available for operation.

$\triangleleft$: Search backward

$\triangleright$: Search forward

∇ : Return to the current programme

OK : Playback / Pause

: Search backward / forward

: Pause / Resume

: Playback

: Return to the current programme

■ To stop REW LIVE TV

1. Display the menu with **MENU**
2. Select **Setup** > **Recording Setup** > **REW LIVE TV** with Δ / ∇ and press **OK** to access
3. Select **Off** with Δ / ∇ to stop **REW LIVE TV**
 - If you stop **REW LIVE TV**, the recorded content for **REW LIVE TV** will be deleted.
 - **REW LIVE TV** will be stopped and the recorded content will be deleted automatically in the following conditions: (Even if **REW LIVE TV** stops for the following conditions, as long as the setting is **Auto**, a new recording will start automatically in a condition that makes the recording available.)
 - Other channels selected
 - Locked channel selected
 - Invalid channel selected
 - No TV signal
 - When another recording starts
 - When the TV enters Standby or is turned off

Timer Programming

Setting timer programming

The Timer Programming menu allows you to select programmes that you want to be reminded to watch or record to the USB HDD. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode.

- Not valid in Analogue TV

1. Select Digital TV with **TV**
2. Display the menu with **MENU**
3. Select **Timer** > **Timer Programming** with $\triangle$ / ∇ and press **OK** to access

■ Set timer programming event details

1. Press **OK** to start making the settings
2. Select **USB HDD Rec.** / **Reminder** with $\triangle$ / ∇

USB HDD Rec.:

Records the programme to the USB HDD.

When the start time comes, the channel will be switched automatically and the video and audio signals will be output. 2 minutes before the starting time, a reminder message appears if you are watching TV.

Reminder:

Reminds you to watch the programme.


When you are watching TV, a reminder message appears 2 minutes before the starting time. Press **OK** to switch to the programmed channel.

3. Select the item (channel, date and starting / ending time) with ◀ / ▶ and set [4] / [7] / [8] with ▲ / ▼

- [4] and [8] can also be entered with numeric buttons.



(Example)

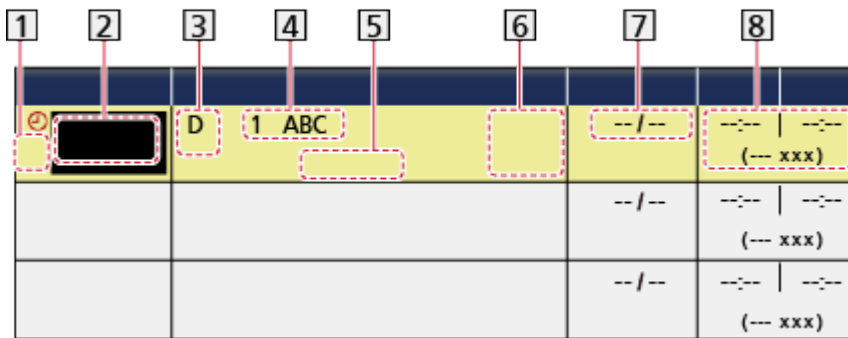

[1] !: Overlapped timer programming events

[2] Function

([USB HDD Rec.](#) / [Reminder](#))

[3] D: Digital TV

[4] Channel position and name

[5] <TIMER>: Timer Programming

[6] Displays subtitles (if available)

([STTL](#))

- Press  (yellow) to indicate subtitles and press again to remove them.

- Not valid when function is set to [USB HDD Rec.](#)

[7] Date (You can set one day ahead with ▲, select daily or weekly with ▼)

- [Daily Sun-Sat](#): Sunday to Saturday
- [Daily Mon-Sat](#): Monday to Saturday
- [Daily Mon-Fri](#): Monday to Friday
- [Weekly Sat / Fri / Thu / Wed / Tue / Mon / Sun](#): Same time on the same day every week

[8] Starting time / Ending time / Duration (automatic display)

4. Store with **OK**

Editing timer programming

1. Display the menu with **MENU**
2. Select **Timer** > **Timer Programming** with $\triangle$ / ∇ and press **OK** to access
3. Select the event with $\triangle$ / ∇

- To change a timer programming event

OK

- Correct as necessary.

 → **Recording** > **Timer Programming** > **Setting timer programming**

- To delete a timer programming event

1) Press  (red)

2) Press **OK** to delete

- To display subtitles (if available)

 (yellow)

- Press again to remove subtitles.

- Not valid when function is set to **USB HDD Rec.**

- To cancel a timer programming event temporarily

 (blue)

- Press again to stop cancelling.

■ To adjust the clock

If you cannot get the time information, set **Clock Settings** manually.

1. Display the menu with **MENU**
2. Select **Timer** > **Clock Settings** > **Mode** with $\triangle$ / ∇ and press **OK** to access
3. Select **Manual** with $\triangle$ / ∇ and press **OK** to set
4. Set **Date** / **Time** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons

1	2	3
4	5	6
7	8	9
0		

- **Clock Settings** are reset when the TV is turned off with Mains power On / Off switch.

 → **Settings** > **Timer** > **Clock Settings**

■ To play back or delete the recorded contents

TV programmes recorded on the USB HDD with this TV can be played back in Media Player.

1. Display icons of the feature with **APPS**
2. Select **Recorded TV** with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access

 → **Media Player > Recorded TV mode**

Note

- TV Guide may also be used to set timer programming event.
 → **Watching > TV Guide > Timer Programming**
- **Timer Programming** can store up to 15 events.
- **Timer Programming** only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- For recording using **Timer Programming**, the TV must be either on or in Standby. For reminders to be displayed, the TV must be on.
- No other channels can be selected while the recording of **Timer Programming** is in progress.
- Recording an encrypted (copy-protected) programme may not be possible.
- 2 minutes before the starting time, a reminder message appears if you are watching TV.
 - To remove the message and start the programming, press **OK**.
 - To cancel the programming, press **EXIT**.
- LED will turn to orange in Standby mode if **Timer Programming** is set.
- **Timer Programming** reminder messages will remain displayed until one of the following occurs:
 - You press **OK** to view the programme or **EXIT** to cancel the reminder.
 - The timer programming event that the reminder is set for ends.
- “!” identifies that two or more timer programming events are overlapped. **USB HDD Rec.** is given priority over **Reminder**. As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of **Timer Programming** will automatically change the channel to the programmed channel a few seconds before the starting time.
- The recording of **Timer Programming** will be performed even if the TV is in **REW LIVE TV** recording. In this case, **REW LIVE TV** recording will be cancelled.

 → **Recording > Recording current programme > REW LIVE TV**

- For more information of the USB HDD

 → [Recording](#) > [Technical information](#)

Technical information

USB HDD

■ USB HDD

(for recording the digital TV programmes with this TV)

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website. (English only)

<http://panasonic.net/viera/support>

= Note =

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.


Internet service

Internet content

Information

You can access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from APPS List.

(Example)

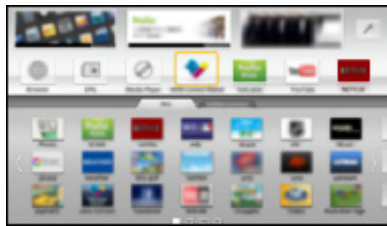

- To enable this function, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Internet service > Network connections

 → Internet service > Network settings

Selecting internet content

1. Display APPS List with **APPS**


- For details of APPS List

 → Functions > APPS List

- Depending on the usage conditions, it may take a while to read all the data.

2. Select the desired item with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access

(Example)

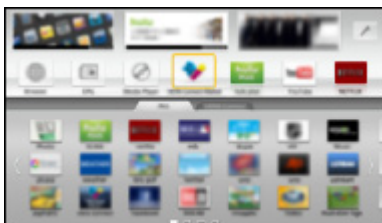

- To return to APPS List

APPS

- To exit APPS List

EXIT

- You may operate the internet contents with the free cursor and Voice Control function of the VIERA Touch Pad Controller (supplied).

- You can connect a keyboard and a gamepad for character input and playing games in the applications. You can also use the keyboard or gamepad for TV operation as well as for APPS List.

 → [Functions > Bluetooth devices](#)

 → [Functions > Keyboard / Gamepad](#)

Note

- If you cannot access the internet contents, check the network connections and settings.

 → [Internet service > Network connections](#)

 → [Internet service > Network settings](#)

- APPS List is subject to change without notice.
- Not all the features of the websites are available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you will not be able to use APPS List. You can update the software later manually.

 → [Internet service > Network settings > Software Update](#)

- The services through APPS List are operated by their respective service providers and such service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the contents or the continuity of the services.
- Some contents may be inappropriate for some viewers.
- Some contents may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- During the operation, audio signal is output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → [Functions > VIERA Link "HDAVI Control™"](#)

Network connections

Internet connection

To use internet service, you need a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality, respectively. If the transfer speed is not enough, contents may not be played back properly.

■ Wireless connection



1 Built-in wireless LAN (Rear of the TV)

2 Access point

3 Internet environment

■ Wired connection



1 ETHERNET terminal

2 LAN cable (Unshielded)

- Use the Unshielded Twist Pair (UTP) LAN cable.

3 Internet environment

Note

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 or later LAN cables are required.
- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off, and then on again when changing or making the network connection again.

Network settings

Network Connection

Ensure the connections are completed before starting network setup.

 → Internet service > Network connections

■ Quick setup - Wireless

1. Display the menu with **MENU**
2. Select **Network** > **Network Connection** with $\triangle$ / ∇ and press **OK** to access
 - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** with $\triangleleft$ / $\triangleright$ and press **OK** to access
 - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point with $\triangle$ / ∇ and press **OK** to access
 - Available Wireless Networks are displayed automatically.
 -  : Encrypted access point
 - For WPS(Push button)
 - 1) Select **Easy setup with Push button** with $\triangle$ / ∇ and press **OK** to access
 - 2) Press the WPS button on the access point until the light flashes
 - 3) Connect the TV with the access point with **OK**
 - WPS: Wi-Fi Protected Setup™
 - If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.
 - It is recommended to select the encrypted access point.
5. Enter the encryption key of the access point with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to set
 - You can set characters using numeric buttons.

1	2	3
4	5	6
7	8	9
0		
 - Press **RETURN** to store
6. Automatically setup is done and the **Network Status** screen is displayed

 → Internet service > Network settings > Network Status

7. Select **Exit** with ◀ / ▶ and press **OK** to set

- To set manually

 → Internet service > Network settings > Custom - Wireless

■ Quick setup - Wired

1. Display the menu with **MENU**

2. Select **Network** > **Network Connection** with ▲ / ▼ and press **OK** to access

3. Select **Quick setup** with ◀ / ▶ and press **OK** to access

4. Automatically setup is done and the **Network Status** screen is displayed

 → Internet service > Network settings > Network Status

5. Select **Exit** with ◀ / ▶ and press **OK** to set

- To set manually

 → Internet service > Network settings > Custom - Wired

Custom - Wireless

Ensure the connections are completed before starting network setup.

 → Internet service > Network connections

1. Display the menu with **MENU**

2. Select **Network** > **Network Connection** > **Custom** > **Wireless** with ▲ / ▼ / ◀ / ▶ and press **OK** to access

- Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.

3. Select your desired access point with ▲ / ▼ and press **OK** to access

- Available Wireless Networks are displayed automatically.

 : Encrypted access point

- For **WPS(Push button)**

1) Press  (red)

2) Press the WPS button on the access point until the light flashes

3) Connect the TV with the access point with **OK**

– WPS: Wi-Fi Protected Setup™

– If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.

- For **WPS(PIN)**
 - 1) Press  (green)
 - 2) Enter the PIN code to the access point
 - 3) Connect the TV with the access point with **OK**
- For **Manual**
 - 1) Press  (yellow)
 - 2) You can set up SSID, security type, encryption type, and encryption key manually
 - 3) Follow the on-screen instructions and set manually
 - When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select **AES** for the encryption type.
- To search access points again
 (blue)
- To display / hide information of the highlighted access point
INFO
- It is recommended to select the encrypted access point.
- 4. Enter the encryption key of the access point with **△ / ▽ / ◀ / ▶** and press **OK** to set
 - You can set characters using numeric buttons.

1	2	3
4	5	6
7	8	9
0		
 - Press **RETURN** to store
- 5. The **VIERA Name/IP/DNS Settings** screen is displayed

VIERA Name

- You can set your favourite name for this TV.
 - This name will be used as the name of this TV on the screen of the other network equipment.
-

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server connected between the browser and the target server and sends data to the browser.

- 1) Select **Proxy** with $\triangle$ / ∇ and press **OK** to access
- 2) Enter the address with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



- 3) Press **RETURN** to store

Proxy Port:

This number is also specified by the provider with the Proxy address.

- 1) Select **Proxy Port** with $\triangle$ / ∇
- 2) Enter the number with numeric buttons



- 3) Press **RETURN** to store

-
6. Select **Network Status** with $\triangle$ / ∇ and press **OK** to access

 → Internet service > Network settings > Network Status

7. Select **Exit** with $\triangleleft$ / $\triangleright$ and press **OK** to set

Custom - Wired

Ensure the connections are completed before starting network setup.

 → Internet service > Network connections

1. Display the menu with **MENU**
 2. Select **Network** > **Network Connection** > **Custom** > **Wired** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
 3. The **VIERA Name/IP/DNS Settings** screen is displayed
-

VIERA Name

- You can set your favourite name for this TV.
 - This name will be used as the name of this TV on the screen of the other network equipment.
-

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server connected between the browser and the target server and sends data to the browser.

- 1) Select **Proxy** with $\triangle$ / ∇ and press **OK** to access
- 2) Enter the address with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



- 3) Press **RETURN** to store

Proxy Port:

This number is also specified by the provider with the Proxy address.

- 1) Select [Proxy Port](#) with $\triangle$ / ∇
- 2) Enter the number with numeric buttons



- 3) Press **RETURN** to store

-
4. Select [Network Status](#) with $\triangle$ / ∇ and press **OK** to access

 → [Internet service](#) > [Network settings](#) > [Network Status](#)

5. Select [Exit](#) with $\triangleleft$ / $\triangleright$ and press **OK** to set

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**
2. Select [Network](#) > [Network Status](#) with $\triangle$ / ∇ and press **OK** to access
3. Automatically testing is done and the [Network Status](#) screen is displayed

Try Again:

Performs automatic testing of the network connection for the TV and displays the current status again.

Status Details:

Displays the detailed network status (SSID, security type, encryption type, etc.).

- For more information of the network connection, select [Help](#).

VIERA remote Settings

Sets to control the TV with any VIERA remote connected to your network.

 → [Home network](#) > [Network settings](#) > [VIERA remote Settings](#)

Network Link Settings

Sets to control the TV with devices connected to the network.

 → [Home network](#) > [Network settings](#) > [Network Link Settings](#)

Software Update

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**
2. Select **Network** > **Software Update** with $\triangle$ / ∇ and press **OK** to access
3. Follow the on-screen instructions

New Software Message

Selects whether to give a notification message when new software is found via network.

1. Display the menu with **MENU**
2. Select **Network** > **New Software Message** with $\triangle$ / ∇ and press **OK** to access
3. Select **On** / **Off** with $\triangle$ / ∇ and press **OK** to set

Home network

DLNA

Information

This TV is a DLNA Certified™ product.

DLNA® (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit www.dlna.org.

- To enable this function, connect this TV to your home network.

 → [Home network > Network connections](#)

 → [Home network > Network settings](#)

■ Playback of sharing contents stored in the media server

Store photos, videos or music contents into the DLNA Certified media server (for example, PC with Windows 7 / Windows 8 installed, DIGA Recorder, etc.) connected to your home network. And then you can enjoy these contents on this TV.

(Example)



- For watching and operating contents on this TV

 → [Home network > DLNA > Using DLNA](#)

- For supported file formats

 → [Home network > Technical information](#)

- To use a PC as a media server

Prepare the PC with Windows 7 / Windows 8 or ensure the server software is installed on the PC. “Windows 7 / Windows 8” and “Twonky 7 (installed on the PC with Windows XP or Mac)” are the server software that has been tested for compatibility with this TV (as of November, 2012). Any other server software has not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7 / Windows 8

The setup for homegroup settings of Windows 7 / Windows 8 is required. For details, refer to the help functions of Windows 7 / Windows 8.

- Twonky

“Twonky” is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting “Twonky”, visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

= Note =

- For more information about the server software, please consult each software company.
- When server software for the media server is installed on the PC, the data on the PC may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances in office, hotel or even at home when not using a router.

- To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can control it as one of the media servers.

- Please read the manual of your DIGA Recorder to check if the recorder is compatible with DLNA.

■ Playback of sharing contents on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy contents stored in the media server by controlling with the DMC network equipment (smartphone, PC with Windows 7 / Windows 8 installed, etc.) connected to your home network.

- To use this function with your smartphone or Windows 7 / Windows 8, set [VIERA remote](#) of this TV to [On](#).

 → [Home network](#) > [Network settings](#) > [VIERA remote Settings](#)

And you need to install the application for controlling VIERA on your smartphone. For information of the application (English only):

<http://panasonic.net/viera/support>

For the operations, refer to the support information of the application.

- “Windows 7 / Windows 8” are the OS that have been tested for compatibility of this TV (as of November, 2012). For the operations, refer to the help functions of Windows 7 / Windows 8.

■ Sharing the TV programme or contents of this TV with another piece of network equipment

You can enjoy the current digital TV programme or the contents*¹ of this TV on the other DLNA Certified VIERA, your smartphone, etc. connected to your home network. You can also select the channel and watch TV on your smartphone*².

For example, watching the TV programme on your smartphone in the other room, etc.

*¹ : Available contents:

- Contents that can be played back in Media Player of this TV and another piece of network equipment
- TV programmes recorded on USB HDDs with this TV

*² : To use this function with your smartphone, you need to install the application for controlling VIERA in your smartphone. For information of the application (English only):

<http://panasonic.net/viera/support>

For the operations, refer to the support information of the application.

- To use this function with another DLNA Certified VIERA, set [Network Link Settings](#) of this TV.

 → [Home network](#) > [Network settings](#) > [Network Link Settings](#)

- Sharing the current programme may not be available when selecting radio channels, encrypted (copy-protected) programmes or when the broadcast prohibits the output of video and audio.

= Note =

- To use this function, turn this TV on.
- This function is available only with 1 piece of other equipment.
- You may be able to control this TV to turn off the TV display and mute the sound using your smartphone. For details, refer to the support information of the application.
- This function may not be available in the following conditions of this TV:
 - While recording is in progress
 - When in internet service
 - When accessing the media server
 - When the data service is active

Using DLNA

To use DLNA® features, ensure the preparations of the media server, network connections and network settings are completed.

 → Home network > DLNA > Information

 → Home network > Network connections

 → Home network > Network settings

1. Display APPS List with **APPS**
2. Select **Media Server** with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select one of the media servers with Δ / ∇ and press **OK** to access
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with Δ / ∇ and press **OK** to access
(Example)



- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

Network connections


DLNA connection

To use DLNA features, you need a home network environment and you can operate the features without a broadband network environment.

- To use internet service, you need a broadband network environment.

 → Internet service > Network connections > Internet connection

■ Wireless connection (For DLNA and internet service)

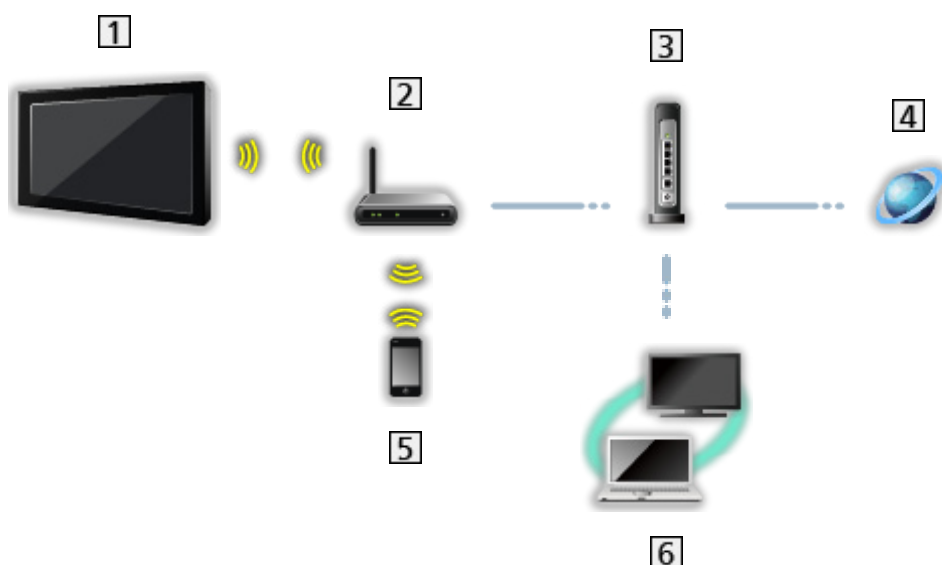

1 Built-in wireless LAN (Rear of the TV)

2 Access point


3 Hub or Router

4 Internet environment

5 Smartphone

6 DLNA Certified media server


■ Wired connection (For DLNA and internet service)

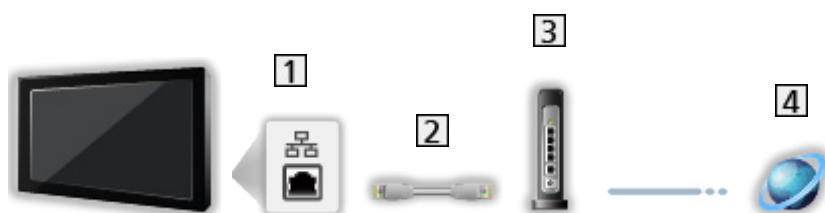



- 1 ETHERNET terminal
- 2 LAN cable (Unshielded)
 - Use the Unshielded Twist Pair (UTP) LAN cable.
- 3 Hub or Router
- 4 Internet environment
- 5 DLNA Certified media server

■ Wireless connection (For DLNA)

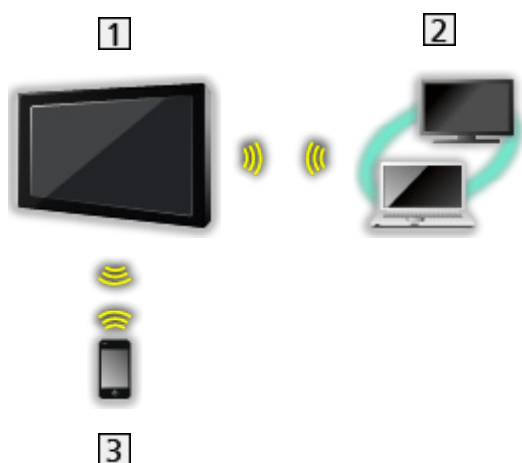

- 1 TV
 - To use the TV as a wireless access point
 -  → Home network > Network settings > Custom - Wireless Access Point
- 2 DLNA Certified media server
- 3 Smartphone

Note

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If you use the equipment compatible only with 100BASE-TX, category 5 or later LAN cables are required.
- Turn the TV off, and then on again when changing or making the network connection again.

Network settings

Network Connection

Ensure the connections are completed before starting network setup.

 → Home network > Network connections

■ Quick setup - Wireless

1. Display the menu with **MENU**
2. Select **Network** > **Network Connection** with $\triangle$ / ∇ and press **OK** to access
 - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** with $\triangleleft$ / $\triangleright$ and press **OK** to access
 - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point with $\triangle$ / ∇ and press **OK** to access
 - Available Wireless Networks are displayed automatically.
 : Encrypted access point
 - For WPS(Push button)
 - 1) Select **Easy setup with Push button** with $\triangle$ / ∇ and press **OK** to access
 - 2) Press the WPS button on the access point until the light flashes
 - 3) Connect the TV with the access point with **OK**
 - WPS: Wi-Fi Protected Setup™
 - If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.
 - It is recommended to select the encrypted access point.

5. Enter the encryption key of the access point with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to set

- You can set characters using numeric buttons.



- Press **RETURN** to store

6. Automatically setup is done and the **Network Status** screen is displayed

 → Home network > Network settings > Network Status

7. Select **Exit** with $\triangleleft$ / $\triangleright$ and press **OK** to set

- To set manually

 → Home network > Network settings > Custom - Wireless

■ Quick setup - Wired

1. Display the menu with **MENU**
2. Select **Network** > **Network Connection** with $\triangle$ / ∇ and press **OK** to access
3. Select **Quick setup** with $\triangleleft$ / $\triangleright$ and press **OK** to access
4. Automatically setup is done and the **Network Status** screen is displayed

 → Home network > Network settings > Network Status

5. Select **Exit** with $\triangleleft$ / $\triangleright$ and press **OK** to set

- To set manually

 → Home network > Network settings > Custom - Wired

Custom - Wireless

Ensure the connections are completed before starting network setup.

 → Home network > Network connections

1. Display the menu with **MENU**
2. Select **Network** > **Network Connection** > **Custom** > **Wireless** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
 - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.

3. Select your desired access point with  /  and press **OK** to access
 - Available Wireless Networks are displayed automatically.
 -  : Encrypted access point
 - For [WPS\(Push button\)](#)
 - 1) Press  (red)
 - 2) Press the WPS button on the access point until the light flashes
 - 3) Connect the TV with the access point with **OK**
 - WPS: Wi-Fi Protected Setup™
 - If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.
 - For [WPS\(PIN\)](#)
 - 1) Press  (green)
 - 2) Enter the PIN code to the access point
 - 3) Connect the TV with the access point with **OK**
 - For [Manual](#)
 - 1) Press  (yellow)
 - 2) You can set up SSID, security type, encryption type, and encryption key manually
 - 3) Follow the on-screen instructions and set manually
 - When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select [AES](#) for the encryption type.
 - To search access points again
 -  (blue)
 - To display / hide information of the highlighted access point
 - INFO**
 - It is recommended to select the encrypted access point.
 4. Enter the encryption key of the access point with  /  /  /  and press **OK** to set
 - You can set characters using numeric buttons.

1 2 3

4 5 6

7 8 9

0
 - Press **RETURN** to store
 5. The [VIERA Name/IP/DNS Settings](#) screen is displayed
-

VIERA Name

- You can set your favourite name for this TV.
 - This name will be used as the name of this TV on the screen of the other network equipment.
-

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server connected between the browser and the target server and sends data to the browser.

- 1) Select **Proxy** with $\triangle$ / ∇ and press **OK** to access
- 2) Enter the address with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



- 3) Press **RETURN** to store

Proxy Port:

This number is also specified by the provider with the Proxy address.

- 1) Select **Proxy Port** with $\triangle$ / ∇
- 2) Enter the number with numeric buttons



- 3) Press **RETURN** to store
-

6. Select **Network Status** with $\triangle$ / ∇ and press **OK** to access

 $\rightarrow$ Home network > Network settings > Network Status

7. Select **Exit** with $\triangleleft$ / $\triangleright$ and press **OK** to set

Custom - Wired

Ensure the connections are completed before starting network setup.

 → Home network > Network connections

1. Display the menu with **MENU**
 2. Select **Network** > **Network Connection** > **Custom** > **Wired** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
 3. The **VIERA Name/IP/DNS Settings** screen is displayed
-

VIERA Name

- You can set your favourite name for this TV.
 - This name will be used as the name of this TV on the screen of the other network equipment.
-

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server connected between the browser and the target server and sends data to the browser.

- 1) Select **Proxy** with $\triangle$ / ∇ and press **OK** to access
- 2) Enter the address with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set



- 3) Press **RETURN** to store

Proxy Port:

This number is also specified by the provider with the Proxy address.

- 1) Select **Proxy Port** with $\triangle$ / ∇
- 2) Enter the number with numeric buttons



- 3) Press **RETURN** to store

-
4. Select **Network Status** with $\triangle$ / ∇ and press **OK** to access

 → **Home network** > **Network settings** > **Network Status**

5. Select **Exit** with $\triangleleft$ / $\triangleright$ and press **OK** to set

Custom - Wireless Access Point

You can use the TV as a wireless access point and connect the network equipment without an access point.

- Confirm the PIN code, network settings of the equipment before starting setup. For details, read the manual of the equipment.

1. Display the menu with **MENU**
2. Select **Network** > **Network Connection** > **Custom** > **Wireless Access Point** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select **Connect to device in WPS** with $\triangle$ / ∇ and press **OK** to access
 - To set manually, select **Change settings**. (see below)
4. Select and set **WPS(Push button)** / **WPS(PIN)** with $\triangle$ / ∇ and press **OK** to access

WPS(Push button):

Set the equipment to WPS (Push button) mode. For details, read the manual of the equipment.

WPS(PIN):

Enter the PIN code of the equipment.

- If the connection has failed, check the settings and positions of the equipment. And then, follow the on-screen instructions.

■ Change settings

You can set up [Network name\(SSID\)](#), [Encryption key](#), [Wireless type](#) and [Channel setting method](#) manually.

Follow the on-screen instructions and set manually.

- Set [Reset settings](#) to reset the items of [Change settings](#).

= Note =

- You cannot connect the internet service while the TV is set to [Wireless Access Point](#).
- You can connect up to 7 devices. But the transfer rate will vary according to communication environment or the numbers of connected equipment.
- To confirm the current network settings



→ [Home network](#) > [Network settings](#) > [Network Status](#)

- Ensure the equipment to connect supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**
2. Select [Network](#) > [Network Status](#) with Δ / ∇ and press **OK** to access
3. Automatically testing is done and the [Network Status](#) screen is displayed

[Try Again:](#)

Performs automatic testing of the network connection for the TV and displays the current status again.

[Status Details:](#)

Displays the detailed network status (SSID, security type, encryption type, etc.).

- For more information of the network connection, select [Help](#).

VIERA remote Settings

Sets to control the TV with any VIERA remote connected to your network.

1. Display the menu with **MENU**
 2. Select **Network** > **VIERA remote Settings** with $\triangle$ / ∇ and press **OK** to access
 3. Select one of the following items with $\triangle$ / ∇ and press **OK** to access
-

VIERA remote

(On / Off)

Enables to control the TV from the network equipment (smartphone, etc.).

- You need to install the application for controlling VIERA on your smartphone. For information of the application (English only):

<http://panasonic.net/viera/support>

For the operations, refer to the support information of the application.

Device to upload contents

Selects device to upload contents from the network equipment (smartphone, etc.).

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

Network Link Settings

Sets to control the TV with devices connected to the network.

1. Display the menu with **MENU**
 2. Select **Network** > **Network Link Settings** with $\triangle$ / ∇ and press **OK** to access
 3. Select one of the following items with $\triangle$ / ∇ and press **OK** to access
DLNA Server / **Registration Type** / **Remote Device List**
 4. Set with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store
-

DLNA Server

(On / Off)

Enables to share the TV programme or contents of this TV with the network equipment (DLNA Certified VIERA etc.).

- To use this function with another VIERA, select the name of this TV from the DLNA server list of another VIERA, and then select the content to share. Also read the manual of another VIERA.
- To use this function with your smartphone, you need to install the application for controlling VIERA on your smartphone. For information of the application (English only):

<http://panasonic.net/viera/support>

For the operations, refer to the support information of the application.

Registration Type

(Auto / Manual)

Selects the type to restrict the access to this TV for each piece of equipment on the home network.

Auto:

All available equipment on the home network is accessible. (maximum 16 pieces of equipment)

Manual:

Sets the restrictions for each piece of equipment in the **Remote Device List**.

Remote Device List

Lists the equipment accessible to this TV on the home network.

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

Software Update

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**
2. Select **Network** > **Software Update** with $\triangle$ / ∇ and press **OK** to access
3. Follow the on-screen instructions

New Software Message

Selects whether to give a notification message when new software is found via network.

1. Display the menu with **MENU**
2. Select **Network** > **New Software Message** with $\triangle$ / ∇ and press **OK** to access
3. Select **On** / **Off** with $\triangle$ / ∇ and press **OK** to set

Photos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Home network > DLNA > Information

 → Home network > Network connections

 → Home network > Network settings

1. Display APPS List with **APPS**
2. Select **Media Server** with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select one of the media servers with Δ / ∇ and press **OK** to access
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with Δ / ∇ and press **OK** to access
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

Viewing photo

■ Playback

Photos are displayed one at a time.

- To operate Single view
 - ◀ : To the previous photo
 - ▶ : To the next photo
 - ▽ : Stop (return to list)
 - OK : Slideshow
- To display / hide the operation guide
INFO
- To rotate 90°
 (blue)
- To return to list
RETURN

Using slideshow

Slideshow ends when all photos within the list are viewed.

1. Select the file from the thumbnail of photos for the first view with ▲ / ▼ / ◀ / ▶
2. Start Slideshow with  (red) and OK
 - To display / hide the operation guide
INFO
 - To pause (return to Single view)
OK
 - To return to list
RETURN

■ Slideshow Settings

Set up the settings for photo file operations on this TV.

1. Display the option menu with OPTION
2. Select [Slideshow Settings](#) with ▲ / ▼ and press OK to access
3. Select one of the following items with ▲ / ▼ and press OK to access
[Transition Effect](#) / [Auto Makeup](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
4. Set with ▲ / ▼ / ◀ / ▶ and press OK to store

Transition Effect

(Off / Fade / Dissolve / Motion / Random)

Selects the transition effect for switching the photo during the slideshow.

Fade:

The next photo fades in gradually.

Dissolve:

Each photo is dissolved when switching to the next photo.

Motion:

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

Random:

The transition effect is selected at random.

Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

Interval

(Long / Normal / Short)

Selects slideshow interval.

- Not valid when [Transition Effect](#) is set to [Motion](#)
-

Repeat

(On / Off)

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5)

Selects the background music during Photo mode.

Videos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Home network > DLNA > Information

 → Home network > Network connections

 → Home network > Network settings

1. Display APPS List with **APPS**
2. Select **Media Server** with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select one of the media servers with Δ / ∇ and press **OK** to access
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with Δ / ∇ and press **OK** to access
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

Watching video

■ Playback

If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

- To operate playback

 : [Manual skip](#)

- Press to skip forward approx. 30 seconds.

 : Rewind

 : Fast forward

 : Stop

OK : Pause (displays the time seek bar) / Playback

- To display / hide the operation guide and information banner

INFO

- To the previous content

 (red)

- To the next content

 (green)

- To change aspect

1) Display [Aspect Selection](#) list with **ASPECT**

2) Select the mode with  /  and press **OK** to set

[Aspect1](#):

Displays the content enlarged without distortion.

[Aspect2](#):

Displays the content full-screen.

[Original](#):

Displays the content original size.

- You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
- Aspect cannot be changed depending on the content.

- To return to list

RETURN

Video Setup

Set up the settings for video file operations on this TV.

1. Display the option menu with **OPTION**
 2. Select **Video Setup** with $\triangle$ / ∇ and press **OK** to access
 3. Select one of the following items with $\triangle$ / ∇ and press **OK** to access
Video Preview / **Audio Selection** / **Dual Audio** / **Dual Mono Audio** / **Subtitle** / **Subtitle Text** / **Repeat**
 - Menu items and selectable options vary depending on the content.
 4. Set with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store
-

Video Preview

(On / Off)

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview **Off** to solve this.
-

Audio Selection, Dual Audio, Dual Mono Audio

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the selected file

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Home network > Videos > Video Setup

1. Display the menu with **MENU**
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Music

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Home network > DLNA > Information

 → Home network > Network connections

 → Home network > Network settings

1. Display APPS List with **APPS**
2. Select **Media Server** with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select one of the media servers with Δ / ∇ and press **OK** to access
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server
4. Select the file with Δ / ∇ and press **OK** to access
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file

INFO

INFO

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

Playing music

■ Playback

- To operate playback

$\triangleleft$: Rewind

$\triangleright$: Fast forward

∇ : Stop

OK : Pause / Playback

- To display / hide the operation guide

INFO

- To the previous track

 (red)

- To the next track

 (green)

- To return to list

RETURN

Music Setup

Set up the settings for music file operations on this TV.

1. Display the option menu with **OPTION**
2. Select **Music Setup** > **Repeat** with **OK**
3. Select **Folder** / **One** / **Off** with $\triangle$ / ∇ and press **OK** to set

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

DIGA Recorder

Controlling DIGA Recorder

Ensure the preparations of the media server, network connections and network settings are completed.

 → Home network > DLNA > Information

 → Home network > Network connections

 → Home network > Network settings

1. Display APPS List with **APPS**
2. Select **Media Server** with Δ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select **DIGA** with Δ / ∇ and press **OK** to access
4. The screen of the DIGA Recorder will be displayed. You can control the functions of the DIGA Recorder with this TV's remote control according to the operation guide.

(Example)



- Before operating, register this TV on the DIGA Recorder.
- For details, read the manual of the DIGA Recorder.

Technical information

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)

Image resolution (pixel):

8 × 8 to 30,719 × 17,279

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

- DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

- AVCHD (.mts)

Video codec:

H.264 BP/MP/HP

Audio codec:

Dolby Digital

- AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-

- SD-Video (.mod)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

- AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA

- Some subtitles or chapter functions may not be available.
 - WMA Pro and WMA Lossless are not supported.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA

- Copy-protected files cannot be played back.
 - WMA Pro and WMA Lossless are not supported.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, LPCM, MPEG Audio

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio

■ Supported Subtitles formats

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
 - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported Video formats are different in Media Player and media server.

 → [Media Player](#) > [Technical information](#) > [Video format](#)

Music format

■ Supported Music formats

- MP3 (.mp3)
-
- AAC, Apple Lossless (.m4a)
 - Copy-protected files cannot be played back.
-
- WMA (.wma)
 - Copy-protected files cannot be played back.
 - WMA Pro and WMA Lossless are not supported.
-
- LPCM (.wav)
-
- FLAC (.flac)
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.

- Connected devices may become unusable with this TV if the file or folder names are changed.

Media Player

Using Media Player

Information

Media Player allows you to enjoy photo, video or music recorded on an SD Card and a USB Flash Memory with this TV, and contents recorded with this TV to the formatted USB HDD.

(Example)

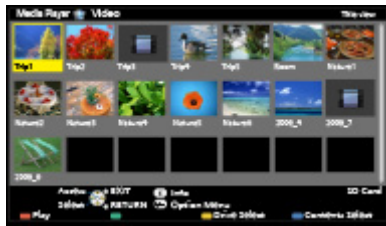


Photo mode:

Still pictures recorded with digital cameras will be displayed.

Video mode:

(For SD Card / USB Flash Memory) Moving pictures recorded with digital video cameras and digital video data will be played back.

Recorded TV mode:

(For exclusive USB HDD) TV programmes recorded on the USB HDD with this TV will be played back.

Music mode:

Digital music data will be played back.

- During operation, audio signals are output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals, however, no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.


 → **Functions > VIERA Link "HDAVI Control™"**

- **Date** shows the date on which the recording was made with the recording equipment. "**/**/****" appears on a file on which recording date has not been recorded.
- Pictures may not appear correctly on this TV depending on the recording equipment used.
- Displaying may take some time when there are many files and folders.
- Partially degraded files may be displayed with reduced resolution.
- Picture setting may not work depending on the conditions.

- Folder and file names may be different from those on the digital camera or digital video camera used.

■ To insert or remove the SD Card

Gently insert the SD Card with the label surface facing front. Push the centre of the card until a click is heard. (To remove, push it again.)

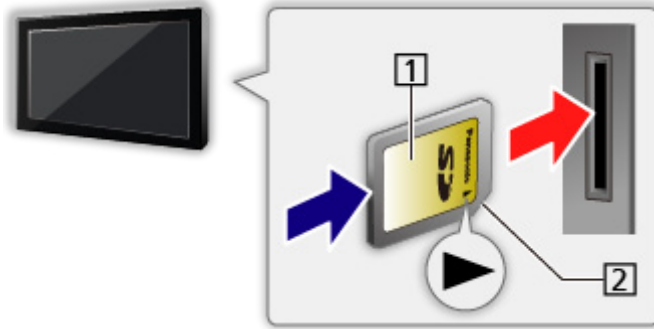


1 Label surface

2 Cutout

■ To insert or remove the USB Flash Memory

Ensure alignment is straight and complete when inserting or removing.

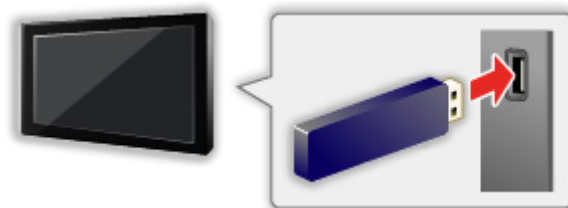

- To remove the USB Flash Memory safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).

 → [Settings](#) > [Setup](#) > [USB Device Setup](#)

- Connect the USB Flash Memory to the USB 1, 2 or 3 port.

= Note =

- To connect the USB HDD

 → [Recording](#) > [USB HDD setup](#)

- Check the terminal type and devices are correct when connecting.
- For the information of the devices

 → [Media Player](#) > [Technical information](#)

- For supported file formats

 → [Media Player](#) > [Technical information](#)

Selecting device / mode

1. Insert the SD Card or USB Flash Memory to the TV

- When you insert the SD Card, Media Player will start automatically.

 → Media Player > Using Media Player > Information

- To play back contents in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup

2. Display APPS List with **APPS**

3. Select **Media Player** with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access

4. Select the device with $\triangleleft / \triangleright$ and press **OK** to access

- If only one device connected, this step will be skipped.

5. Select **Photo** / **Video** / **Music** / **Recorded TV** with $\triangleleft / \triangleright$ and press **OK** to access

Photo

 → Media Player > Photo mode

Video

 → Media Player > Video mode

Music


 → Media Player > Music mode

Recorded TV

 → Media Player > Recorded TV mode

6. The thumbnail view will be displayed

(Example)

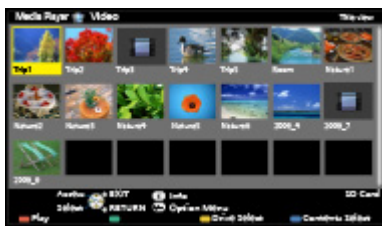

- To display / hide information of the highlighted content

INFO

= Note =

- You may also access each mode directly from APPS List.

 → Functions > APPS List > How to use

- **Recorded TV** is available for contents recorded on the USB HDD with this TV.
- Select the appropriate device and content for playing back each file.

- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → [Watching](#) > [External equipment](#) > [Operating with TV's remote control](#)

■ To change the device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the device selection screen with  (yellow) while the thumbnail is displayed
2. Select the device with ◀ / ▶ and press **OK** to access
 - Not valid in Recorded TV mode
 - To change the device in Recorded TV mode

 → [Media Player](#) > [Recorded TV mode](#) > [Changing device](#)

■ To change the mode

You can switch to another mode of Media Player from the thumbnail view.

1. Display the contents selection screen with  (blue) while the thumbnail is displayed
2. Select the contents with ◀ / ▶ and press **OK** to access
 - The mode can be switched in the current device.

Photo mode

Selecting file

Select the file in the thumbnail view with △ / ▽ / ◀ / ▶ and press **OK** to start playback.

 : Error display

- To change the size of photos in the thumbnail view
 - 1) Display the option menu with **OPTION**
 - 2) Select [Change Size](#) with △ / ▽ and press **OK** to change
- For supported file formats

 → [Media Player](#) > [Technical information](#) > [Photo format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To display [Slideshow Settings](#)



(red)



→ [Media Player](#) > [Photo mode](#) > [Using slideshow](#)

- To Sort



(green)

- To change the device



(yellow)

- To change the contents



(blue)

Viewing photo

■ Playback

- To operate Single view



: To the previous photo



: To the next photo



: Stop (return to thumbnail)



: Slideshow

- To display / hide the operation guide



- To rotate 90°



(blue)

- To return to thumbnail



Sorting photos

■ To sort by folder, recorded date or recorded month

1. Display the view selection in the thumbnail view with  (green)
2. Select **Folder view** / **Sort by Date** / **Sort by Month** with $\triangle$ / ∇ and press **OK** to set

Folder view:

Displays the thumbnail grouped by folder.

- Files which are not in a folder will be collected to the folder named “/”.

Sort by Date / Sort by Month:

Displays the thumbnail grouped by the same date or month.

- The group of the photos without recorded dates is shown as **Unknown**.
- To return to the thumbnail of all photos
 - 1) Display the view selection in the thumbnail view with  (green)
 - 2) Select **All photos** with $\triangle$ / ∇ and press **OK** to set

Multi Shot 3D

This TV can create a 3D photo using a pair of photos in the SD Card and save it into the same SD Card.

- This TV can also create a 3D photo from photos in the USB Flash Memory, but cannot save it.
 - This function is available with photos recorded on digital cameras.
 - Depending on the photos you select, they may not be suitable for creating 3D photos, or creating 3D photos may not be possible. In this case, it is recommended to take a photo (for L) and then move your camera to the right approx. 5 cm and take another photo (for R).
 - To view the created 3D photo with 3D effect, you need the 3D Eyewear.
1. Display the option menu in the thumbnail view with **OPTION**
 2. Select **Multi Shot 3D** with $\triangle$ / ∇ and press **OK** to access
 3. Select two photos for L (left) and R (right) with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and  (red)
 - You can only select photos of the same recording date and the same pixels.
 - You may not be able to view the created 3D photo properly if you transpose the L and R photos.

4. Create the 3D photo with **OK**

- If your selected photos are not suitable for the 3D photo, the error message will be displayed and you will return to the photo selection screen (step 3).
- To save the 3D photo in the SD Card, press **OK** and follow the on-screen instructions.
- After the photo is saved, the photo selection screen will be displayed (step 3). Select photos again to create another 3D photo or exit from [Multi Shot 3D](#) mode.

■ To enjoy the saved 3D photos

Saved 3D photos are displayed in the thumbnail view. Wear the 3D Eyewear and enjoy the 3D photos.

Using slideshow

Slideshow ends when all photos within the current thumbnail are viewed.

1. Select the file from the thumbnail of photos for the first view with $\triangle / \nabla / \triangleleft / \triangleright$
2. Start Slideshow with  (red) and **OK**
 - To display / hide the operation guide
INFO
 - To pause (return to Single view)
OK
 - To return to thumbnail
RETURN
 - You can change the back ground music by setting [Back Ground Music](#) in [Slideshow Settings](#) (see below).

■ Slideshow Settings

Set up the settings for Photo mode.

1. Display the option menu with **OPTION**
 2. Select [Slideshow Settings](#) with **OK**
 3. Select one of the following items with $\triangle / \nabla$ and press **OK** to access
[Frame](#) / [Colour Effect](#) / [Transition Effect](#) / [Auto Makeup](#) / [Screen Mode](#) / [Burst Playback](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
 4. Set with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to store
-

Frame

(Off / Multi / Collage / Drift (+ calendar) / Drift / Gallery (+ calendar) / Gallery / Cinema)

Selects the frame type of the slideshow.

Multi:

9 photos are displayed orderly at once.

Collage:

Each photo is displayed at a random position and random scale.

Drift (+ calendar) / Drift:

Photos are displayed with flow images.

- You can select whether to display the calendar or not. The month of calendar is changed with ◀ / ▶.

Gallery (+ calendar) / Gallery:

Various sizes of photos in the frames are displayed.

- You can select whether to display the calendar or not. The month of calendar is changed with ◀ / ▶.

Cinema:

Photos are displayed as old films (sepia tone).

Colour Effect

(Off / Sepia / Gray scale)

Selects the colour effect of photos in Single view and Slideshow.

- Not valid when **Frame** is set to **Drift**, **Gallery** or **Cinema**
-

Transition Effect

(Off / Fade / Dissolve / Motion / Random)

Selects the transition effect for switching photos during the slideshow.

Fade:

The next photo fades in gradually.

Dissolve:

Each photo is dissolved when switching to the next photo.

Motion:

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

Random:

The transition effect is selected at random.

- This function is available when [Frame](#) is set to [Off](#).
-

[Auto Makeup](#)

([On](#) / [Off](#))

Automatically detects the face in the photo and improves luminance and contrast.

[Screen Mode](#)

([Normal](#) / [Zoom](#))

Selects enlarged or normal viewing in Single view and Slideshow.

- Not valid when [Frame](#) is set to [Collage](#), [Drift](#), [Gallery](#), [Cinema](#) or when [Transition Effect](#) is set to [Motion](#)
 - Depending on the photo size, the photo may not be fully enlarged to fill the screen (e.g. portrait style picture).
-

[Burst Playback](#)

([On](#) / [Off](#))

Selects whether to display burst photos in a fast-paced slideshow mode or not.

- Not valid when [Frame](#) is set to [Drift](#), [Gallery](#), [Cinema](#) or when [Transition Effect](#) is set to [Motion](#)
-

[Interval](#)

([Long](#) / [Normal](#) / [Short](#))

Selects slideshow interval.

- Not valid when [Frame](#) is set to [Drift](#), [Gallery](#), [Cinema](#) or when [Transition Effect](#) is set to [Motion](#)
-

[Repeat](#)

([On](#) / [Off](#))

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5 / User / Auto)

Selects the background music during Photo mode.

Type1 - 5:

Music files installed on this TV at the factory settings will be played back.

Auto:

Music files stored in the root folder of the current device will be played back randomly.

- If there is no available music data, no sound will be played back.

User:

Music files in the device registered by yourself will be played back.

- If no music files have been registered or the device which had registered music files is removed, no sound will be played back.

● To register music

1) Select the music file with $\triangle$ / ∇ and press **OK** to access

- Depending on the condition of the device, select folders until you reach the desired music file.

2) Select **File** / **Folder** with $\triangle$ / ∇ and press **OK** to set

File:

The selected music file will be registered.

Folder:

All the music files in the folder which contains the selected music file will be registered.

= Note =

- Picture quality may be degraded depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

Video mode

Selecting file

1. Select the title in the thumbnail view with  /  /  / 

 : Error display

 : The file does not support thumbnail view.

- The preview will start when the title / scene is highlighted in the thumbnail view if it supports a preview. To turn off the preview, set [Video Preview](#) to [Off](#).

 → [Media Player](#) > [Video mode](#) > [Video Setup](#)

2. Start playback with  (red)

- If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
- For supported file formats

 → [Media Player](#) > [Technical information](#) > [Video format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the device

 (yellow)

- To change the contents

 (blue)

Watching video

■ Playback from the selected scene in the title (SD-Video or AVCHD)

Playback of the selected scene will start and continue until the end of the title.

1. Select the title with  /  /  /  and press **OK** to access
 2. Select the scene with  /  /  / 
 3. Start playback with  (red)
- The structure of titles and scenes may vary depending on the digital video camera used.
 - To repeat playback

 → Media Player > Video mode > Video Setup

■ Playback

- To operate playback
 -  : Rewind
 -  : Fast forward
 -  : Stop
 - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
 - 1) Display the time seek bar with **OK**
 - 2) While the time seek bar is displayed
 - Press  /  :
Search approx. 10 seconds
 - Press and hold  /  :
Search rapidly
 - 3) Jump to the specified time point with **OK**
- To display / hide the operation guide and information banner
INFO
- To the previous title / scene
 (red)
- To the next title / scene
 (green)
- To change aspect
 - 1) Display **Aspect Selection** list with **ASPECT**

2) Select the mode with $\triangle$ / ∇ and press **OK** to set

Aspect1:

Displays the content enlarged without distortion.

Aspect2:

Displays the content full-screen.

Original:

Displays the content original size.

- You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
- Aspect cannot be changed depending on the content.
- To return to thumbnail

RETURN

Video Setup

Set up the settings for Video mode.

1. Display the option menu with **OPTION**
2. Select **Video Setup** with **OK**
3. Select one of the following items with $\triangle$ / ∇ and press **OK** to access
Video Preview / **Audio Selection** / **Dual Mono Audio** / **Subtitle** / **Subtitle Text** / **Repeat**
 - Menu items and selectable options vary depending on the content.
4. Set with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to store

Video Preview

(On / Off)

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview **Off** to solve this.
- This function is available in the thumbnail view.

Audio Selection, Dual Mono Audio

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the title or selected file (depending on the content)

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Recorded TV mode

Selecting content

- For exclusive USB HDD
- To play back contents in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup

1. Contents list of the selected device is displayed in Recorded TV mode

- Remaining capacity of the selected device is displayed on the top right. (This value may not be accurate depending on the condition.)
- Contents list is displayed as **All** or **Not Viewed**.

All:

All the recorded contents are listed.

Not Viewed:

Contents not played back yet are listed.

- Icons are displayed.

 : Content not played back yet (Once you play back the content, this icon will disappear.)

 : Protected content cannot be deleted.

 : Content under recording (You can play back this content even if under recording.)

 : Two or more contents are grouped.

2. Select the content with / and press **OK** to start playback

- If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
 - If the content has multiple programmes with different parental ratings, the highest restriction is applied to the content. Once you unlock the restriction, all the programmes in the content can be played back.
- For supported file formats

 → Media Player > Technical information > Video format

Watching recorded TV

■ Playback

- To operate playback

 : [Manual skip](#)

- Press to skip forward approx. 30 seconds.
- Press and hold to skip backward approx. 15 seconds.

 : Rewind

 : Fast forward

 : Stop

OK : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with **OK**

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with **OK**

- To display / hide the operation guide and information banner

INFO

- To repeat between the starting point “A” and finishing point “B”

 (blue)

(Set “A” and “B” in order.)

- The points will be reset by pressing again or by other operations.

- To the previous / next chapter

 (red) /  (green)

- A recorded content is automatically divided into chapters (approx. 5 minutes for each).

- To change aspect

ASPECT

 → [Watching](#) > [For best picture](#) > [Aspect](#)

- To display the subtitle (if available)

STTL

- To confirm or change the current status (if available)

 → Watching > Basic > Option Menu

- To return to list

RETURN

Grouping contents

1. Select the content to edit with $\triangle$ / ∇ and press  (blue) to tick in the contents list
2. Display the option menu with **OPTION**
3. Select [Create Group](#) / [Release Group](#) / [Exclude from Group](#) / [Change Protect Status](#) with $\triangle$ / ∇ and press **OK** to set

[Create Group](#):

Two or more contents can be grouped. Select and tick all the desired contents, and then select [Create Group](#).

[Release Group](#):

Select the created group to release, and then select [Release Group](#). (To release several groups at once, tick all the desired groups.)

[Exclude from Group](#):

Select the group and press **OK** to display the grouped contents. To exclude one specific content from the group, tick it and then select [Exclude from Group](#). (To exclude several contents at once, tick all the desired contents.)

[Change Protect Status](#):

Select the content to protect from deletion, and then select [Change Protect Status](#). Perform the same way to cancel the protection. (To change the status of several contents at once, tick all the desired contents.)

Deleting content

1. Select the content to edit with $\triangle$ / ∇ and press  (blue) to tick in the contents list
2. Delete the content with  (red)
3. When the confirmation screen is displayed, select [Yes](#) with $\triangleleft$ / $\triangleright$ and press **OK** to set

Changing device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the option menu with **OPTION**

2. Select **Drive Select** with $\triangle$ / ∇ and press **OK** to access
3. Select the device with $\triangleleft$ / $\triangleright$ and press **OK** to access
 - If you select the device to play back photos, videos or music, change to the appropriate content.
 - 1) Display the option menu with **OPTION**
 - 2) Select **Contents Select** with $\triangle$ / ∇ and press **OK** to access

Chapter List

You can start playback from the chapter list you select.

1. Display the chapter list with  (yellow)
2. Select the chapter with $\triangleleft$ / $\triangleright$ and press **OK** to start playback

= Note =

- The chapter list is not displayed while the selected content is being recorded.
- Depending on the recorded programmes, some playback operations may not work properly.

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → **Media Player** > **Video mode** > **Video Setup**

1. Display the menu with **MENU**
2. Select **Sound** > **SPDIF Selection** with $\triangle$ / ∇ and press **OK** to access
3. Select **Auto** / **PCM** with $\triangle$ / ∇ and press **OK** to set

SPDIF Selection

(**Auto** / **PCM**)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. DTS is output as DTS. MPEG is output as PCM.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Music mode

Selecting file

1. Select the folder in the thumbnail view with  /  /  / 
2. Start playback with  (red)
 - For supported file formats
 → [Media Player](#) > [Technical information](#) > [Music format](#)

■ Thumbnail view

- To display / hide information of the highlighted content

 INFO

- To start playback

 (red)

- To change the device

 (yellow)

- To change the contents

 (blue)

Playing music

■ Playback of the selected file in the folder

1. Select the folder with  /  /  /  and press  to access
2. Select the file with  /  /  / 
3. Start playback with  (red)

■ Playback

- To operate playback

 : Rewind

 : Fast forward

 : Stop

 : Pause / Playback

- To display / hide the operation guide

 INFO

- To the previous track
 (red)
- To the next track
 (green)
- To return to thumbnail

RETURN

Music Setup

Set up the setting for Music mode.

- This function is available in the thumbnail view.
1. Display the option menu with **OPTION**
 2. Select **Music Setup** > **Repeat** with **OK**
 3. Select **Folder** / **One** / **Off** with $\triangle$ / ∇ and press **OK** to set

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

USB Sharing

USB Sharing

You can copy the contents from one device to another using the USB ports and SD Card slot.

- To enable this function, connect the source drive and destination drive to the TV.

 → **Media Player** > **Using Media Player** > **Information**

Source drive:

The device (USB Flash Memory or SD Card) which contains the data to be copied.

Destination drive:

The device (USB Flash Memory or SD Card) which you copy to.

1. Display APPS List with **APPS**
2. Select **USB Sharing** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select the drive from **Source drive** list with $\triangle$ / ∇ and press **OK** to access

4. Select the folder or file to copy with $\triangle$ / ∇ and press  (red) to set
 - To select all folders or files at once
 (green)
5. Press $\triangleright$ to go to [Destination drive](#) list
6. Select the drive with $\triangle$ / ∇ and press **OK** to access
 - You cannot select the source drive as the destination drive.
7. Select [Copy Here](#) with $\triangle$ / ∇ and press **OK** to access
8. When the confirmation screen is displayed, select [Yes](#) with $\triangleleft$ / $\triangleright$ and press **OK** to start copying
 - Copy progress is shown on the top right of the TV screen. When copying is finished, [Complete!!](#) is displayed.
 - To cancel the copying, select [USB Sharing](#) from APPS List again.
 - To watch TV while data copying is in progress, press **TV**.

■ Create a folder or delete a folder

You can create a new folder or delete an old folder while the cursor is in [Destination drive](#) list.

- To create a new folder
 - 1) Display the option menu with **OPTION**
 - 2) Select [Create Folder](#) with $\triangle$ / ∇ and press **OK** to access
 - 3) Enter characters (maximum 16 characters) with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ or numeric buttons, and press **OK** to set


 - 4) Press **RETURN** to store
- To delete an old folder
 - 1) Select the folder with $\triangle$ / ∇
 - 2) Display the option menu with **OPTION**
 - 3) Select [Delete](#) with $\triangle$ / ∇ and press **OK** to access
 - 4) When the confirmation screen is displayed, select [Yes](#) with $\triangleleft$ / $\triangleright$ and press **OK** to delete

= Note =

- Some files may not be copied properly.
- Please note there may be a risk of file corruption due to power failure or sudden shut down during [USB Sharing](#) process.

- In consideration of possible loss of the data included in your USB devices or SD card for any reasons, Panasonic recommends to store or back up the data included in the USB devices or SD card to the other places (storage medium) before inserting the same in the USB port or SD card slot, and please do not turn the TV off during data communication / transfer.

Technical information


Device handling caution

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals to prevent data deterioration, data damage or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

SD Card

■ SD Card

Use an SD Card which meets SD standards. Failure to do so may cause the TV to malfunction.

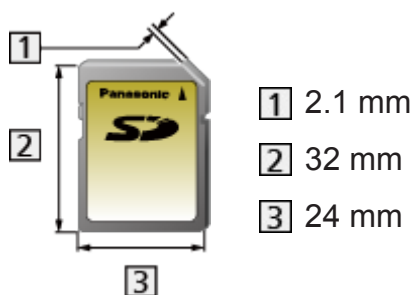

Card format:

SDXC Card - exFAT

SDHC Card / SD Card - FAT16 or FAT32

Compliant card type (maximum capacity):

SDXC Card (64 GB), SDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB) (miniSD adaptor required)

- When using a miniSD Card, insert / remove it together with the adaptor.

USB devices

- It is recommended to connect the USB HDD or USB Flash Memory to the TV's USB ports directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices using a USB card reader.
- Additional information for the devices may be found on the following website. (English only)

<http://panasonic.net/viera/support>

■ USB Flash Memory

(for playing back in Media Player)

USB Flash Memory format:

FAT16, FAT32 or exFAT

- USB HDDs formatted on a PC are not guaranteed to work in Media Player.

■ USB HDD

(for recording digital TV programmes with this TV and playing back in Media Player)

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.



→ Recording > USB HDD setup > Setting for USB HDD

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website. (English only)

<http://panasonic.net/viera/support>

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)
Image resolution (pixel):
8 × 8 to 30,719 × 17,279
Sub-sampling:
4:4:4, 4:2:2, 4:2:0
 - DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

- AVCHD (.mts)
Video codec:
H.264 BP/MP/HP
Audio codec:
Dolby Digital
 - AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-
- SD-Video (.mod)
Video codec:
MPEG1, MPEG2
Audio codec:
Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

- AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA

- Some subtitles or chapter functions may not be available.
 - WMA Pro and WMA Lossless are not supported.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA

- Copy-protected files cannot be played back.
 - WMA Pro and WMA Lossless are not supported.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MPEG Audio, MP3

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3

■ Supported Subtitles formats

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)

- The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported Video formats are different in Media Player and media server.

 → [Home network](#) > [Technical information](#) > [Video format](#)

Music format

■ Supported Music formats

- MP3 (.mp3)

- AAC, Apple Lossless (.m4a)

- Copy-protected files cannot be played back.
-

- WMA (.wma)

- Copy-protected files cannot be played back.
 - WMA Pro and WMA Lossless are not supported.
-

- LPCM (.wav)

- FLAC (.flac)

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Functions


APPS List

Information

Various applications (internet contents, network contents, Media Player, etc.) can be accessed easily from APPS List.

■ APPS List

(Example)

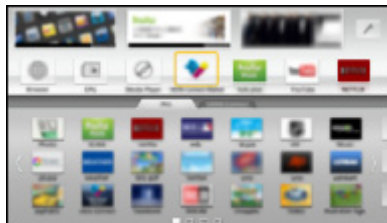

= Note =


- APPS List is subject to change without notice.

How to use

You can access special features such as internet contents, network contents, Media Player, etc. from APPS List.

1. Display APPS List with **APPS**

(Example)

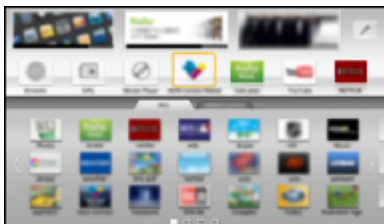

- To exit APPS List

EXIT

2. Select an icon of the features with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access Internet contents

 → Internet service > Internet content

Media Player

 → Media Player > Using Media Player > Selecting device / mode

Recorded TV

 → Media Player > Recorded TV mode

Media Server

 → Home network > DLNA > Using DLNA

VIERA Link

 → Functions > VIERA Link “HDAVI Control™”

Settings

You can customise APPS List (screen settings, etc.).

1. Display APPS List with **APPS**
2. Select the icon for settings on APPS List with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access



3. Follow the on-screen instructions

= Note =

- Setup menu items may be changed without notice.

VIERA Link “HDAVI Control™”

Summary of VIERA Link

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control™” function.

VIERA Link (HDAVI Control) connects the TV and the equipment with VIERA Link function, and enables easy control, playback, energy saving, creating home theatre, etc., without complicated settings. Connections to the equipment (DVD Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cables allow you to interface them automatically. These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.


- This TV supports “HDAVI Control 5” function.
- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link features may be available even with other manufacturers’ equipment supporting HDMI CEC.
- VIERA Link “HDAVI Control” is a unique function that we have developed and added based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control). As such, its operation with other manufacturers’ product that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for other manufacturers’ product supporting VIERA Link function.

- About applicable Panasonic product, consult your local Panasonic dealer.

■ VIERA Link (HDMI connection)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.

About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

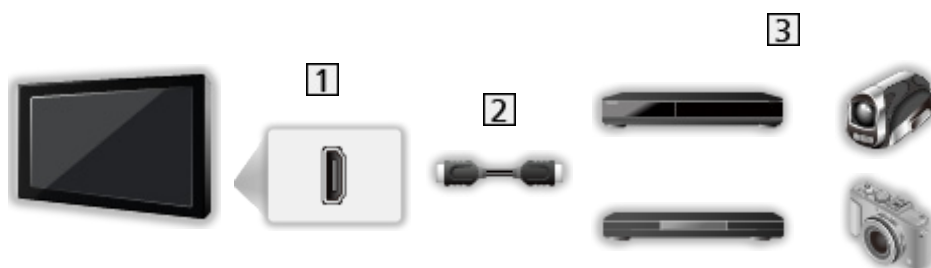

1 HDMI terminal

2 HDMI cable

3 Equipment with VIERA Link function (DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera)

■ Available features (HDMI connection)

DIGA Recorder / DVD Player / Blu-ray Disc Player

- Easy playback
- Power on link
- Power off link
- Standby Power Save^{*2}
- Intelligent Auto Standby^{*2}
- VIERA Link Control^{*1}

HD Video Camera / LUMIX Camera


- Easy playback
 - Power on link
 - Power off link
 - VIERA Link Control^{*1}
-

^{*1} : For equipment which has “HDAVI Control 2 or later” function.

*2 : For equipment which has “HDAVI Control 4 or later” function.

■ VIERA Link (HDMI and Audio out connections)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.
- Use the optical digital audio cable for audio output from the TV.

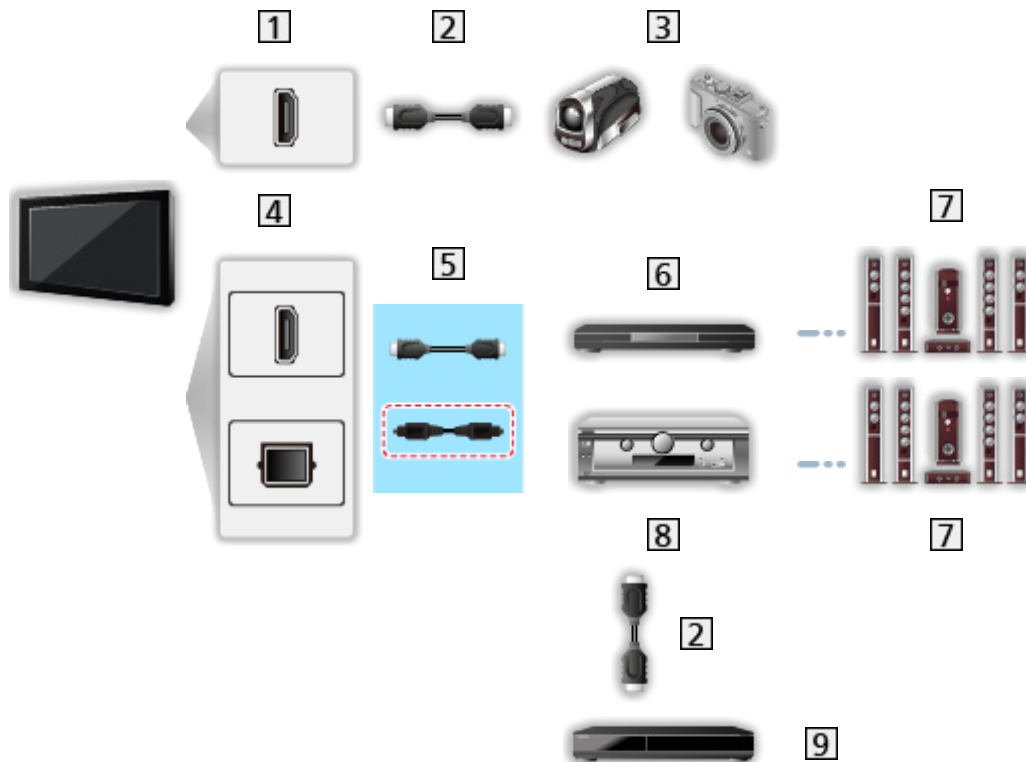

1 HDMI terminal

2 HDMI cable

3 HD Video Camera / LUMIX Camera with VIERA Link function

4 HDMI terminal / DIGITAL AUDIO OUT

5 HDMI cable / Optical digital audio cable *

6 Player theatre / Blu-ray Disc theatre with VIERA Link function

7 Speaker system

8 Amplifier with VIERA Link function

9 DIGA Recorder with VIERA Link function

*: If the connected equipment has “HDAVI Control 5” function, you do not have to use this audio cable (Optical digital audio cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

■ Available features (HDMI and Audio out connections)

Player theatre

- Easy playback*³
 - Power on link
 - Power off link
 - Intelligent Auto Standby*²*⁴
 - VIERA Link Control*¹
 - Speaker Selection
-

Blu-ray Disc theatre

- Easy playback*³
 - Power on link
 - Power off link
 - Standby Power Save*²
 - Intelligent Auto Standby*²*⁴
 - VIERA Link Control*¹
 - Speaker Selection
-

Amplifier

- Power off link
 - Intelligent Auto Standby*²
 - Speaker Selection
-

*¹ : For equipment which has “HDAVI Control 2 or later” function.

*² : For equipment which has “HDAVI Control 4 or later” function.

*³ : While playing a disc.

*⁴ : Except for watching a disc.

■ VIERA Link Control of compatible equipment

The following is the maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.

For example, DIGA Recorder connected to Amplifier which is connected to the TV via an HDMI cable.



→ Functions > VIERA Link “HDAVI Control™” > VIERA Link Control

- Recorder:
Maximum 3 (DIGA Recorder, etc.)
- Player:
Maximum 3 (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)
- Audio system:
Maximum 1 (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)
- Tuner:
Maximum 4 (Set top box, etc.)

Preparations

- Connect the equipment supporting VIERA Link.
- For VIERA Link connections
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Use a fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be used.
- Set up the connected equipment. Read the manual of the equipment.
- Set [VIERA Link](#) to [On](#) in the Setup Menu.
 → [Settings > Setup > VIERA Link Settings](#)
- Set up the TV. After connection, turn the equipment on and then switch the TV on. Select the HDMI input from [Input Selection](#) with **AV** and make sure that an image is displayed correctly. (This setup should be done each time the following conditions occur.)
 - first time operation
 - adding or reconnecting equipment
 - changing setup

Easy playback

Automatic input switching - When the connected equipment is operating, the input mode is switched automatically.

Power on Link

Set [Power on Link](#) to [On](#) in the Setup Menu to use this function.

 → [Settings > Setup > VIERA Link Settings](#)

When the connected equipment starts playback or direct navigator / function menu for the equipment is activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

Power off Link

Set **Power off Link** to **On** in the Setup Menu to use this function.

 → **Settings > Setup > VIERA Link Settings**

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

Standby Power Save

Set **Standby Power Save** to **On** in the Setup Menu to use this function.

 → **Settings > Setup > VIERA Link Settings**

The power consumption of the connected equipment in Standby mode is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to start the connected equipment fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when **Power off Link** is set to **On**.

Intelligent Auto Standby

Set **Intelligent Auto Standby** to **On** in the Setup Menu to use this function.

 → **Settings > Setup > VIERA Link Settings**

When the TV is on, non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when **Speaker Selection** is changed to **TV** (except for watching a disc).

- This function may not work properly depending on the connected equipment. In this case, set to **Off**.

VIERA Link Control

You can control some functions of the connected equipment with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**
2. Select **VIERA Link** with **△ / ▽ / ◀ / ▶** and press **OK** to access
3. Select **VIERA Link Control** with **△ / ▽** and press **OK** to access

4. Select one of the following items with  /  and press **OK** to access

[Recorder](#) / [Player](#) / [Home Cinema](#) / [Video Camera](#) / [LUMIX](#) / [Digital Camera](#) / [Other](#)

(The menu of the accessed equipment will be displayed. The input mode will be changed automatically.)

- The displayed item may vary depending on the connected equipment.
- [Home Cinema](#) means Player theatre, Blu-ray Disc theatre or Recorder theatre.
- [Other](#) means Tuner set top box.

5. Follow the on-screen instructions to operate the menu of the equipment

- Confirm the remote control code is “73”.



→ [Watching](#) > [External equipment](#) > [Operating with TV's remote control](#)

- To display the operation guide

OPTION

(If other manufacturers' product is accessed, Setup / Contents Selection menu may be displayed.)

- Available VIERA remote control buttons depend on the connected equipment.

■ If multiple recorders or players are connected

Each recorder / player is numbered. The number is given from the TV's lower number of HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as [Recorder1](#), and the recorder connected to HDMI3 is displayed as [Recorder2](#).

■ If you access non-VIERA Link equipment

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use the remote control of the connected equipment.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.



→ [Functions](#) > [VIERA Link “HDAVI Control™”](#) > [Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment. In this case, use the remote control of the connected equipment.
- For details of the operations for the connected equipment, read the manual of the equipment.

Speaker Selection

You can control the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**
2. Select **VIERA Link** with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to access
3. Select **Speaker Selection** with $\triangle$ / ∇ and press **OK** to access
4. Select **Home Cinema** / **TV** with $\triangle$ / ∇ and press **OK** to set

Home Cinema:

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use the Volume Up / Down button and **MUTE**.



TV:

TV speakers are active.

■ Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with an HDMI cable and Optical digital audio cable, and then select **Home Cinema**. If your Amplifier has the "HDAVI Control 5" function, you only need to connect it with an HDMI cable to the TV's HDMI2 terminal.

To enjoy the sound from the DIGA Recorder in multi-channel sound, connect an HDMI cable from the DIGA Recorder to the Amplifier.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.



→ [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Summary of VIERA Link](#)

Note

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be delivered for the first few seconds when the input mode is switched.

- “HDAVI Control 5” is the newest standard for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm the HDAVI Control version of this TV

 → [Support](#) > [Information](#) > [Using Help menu](#)

Child Lock

Using Child Lock

You can lock specific channels / AV input terminals to restrict access to them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1. Display the menu with **MENU**
2. Select [Setup](#) > [Child Lock](#) with $\triangle$ / ∇ and press **OK** to access
3. Enter the PIN number (4 digits) with the numeric buttons



- Make a note of the PIN number in case you forget it.
 - “0000” has been stored as the default PIN number.
4. Select [Child Lock List](#) with $\triangle$ / ∇ and press **OK** to access
 5. Select the channel / input with $\triangle$ / ∇ and press **OK** to lock
 -  appears when the channel / input is locked.
 - To cancel
 - 1) Select the locked channel / input with $\triangle$ / ∇
 - 2) Press **OK**
 - To lock all
 -  (green)
 - To cancel all locks
 -  (yellow)
 - To jump to the head of the next channel / input group
 -  (blue)

PIN number

You can change the PIN number.

1. Select [Change PIN](#) with $\triangle$ / ∇ and press **OK** to access
2. Enter a new PIN number twice with the numeric buttons



= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.
- If you have forgotten your changed PIN, input “6969” as the PIN number.

Parental Rating

To watch the Digital TV programme that has rating information on the selected age, enter the PIN number (depending on the broadcaster).

1. Select [Parental Rating](#) with $\triangle$ / ∇ and press **OK** to access
2. Select an age for the restriction of programmes with $\triangle$ / ∇ and press **OK** to set

■ Meaning of rating

[No Block](#): Not classified

[R](#): Restricted 18+

[AV 15+](#): Adult strong Violence 15+

[MA 15+](#): Mature Adult 15+

[M](#): Mature

[PG](#): Parental Guidance recommended

[G](#): General

[C](#): Children

[P](#): Pre school

= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.
- If you have forgotten your changed PIN, input “6969” as the PIN number.

Shipping Condition

Shipping Condition

Resets the TV to its original condition (i.e. no channels tuned in).

All settings other than [USB Device Setup](#) are reset (channels, picture, sound settings, etc.).

1. Display the menu with **MENU**
2. Select [Setup](#) > [System Menu](#) > [Shipping Condition](#) with $\triangle$ / ∇ and press

OK to access

3. When the confirmation screen is displayed, select **Yes** with ◀ / ▶ and press **OK** to set
4. Follow the on-screen instructions
 - **Auto Tuning** will automatically start.

= Note =

- To retune TV channels only (e.g. after moving house), set **Auto Tuning**.

 → **Watching > Tuning and editing channels > Auto Tuning**

Updating the TV Software

Information

A new version of software may be released for download to enhance the performance or operations of the TV.

If there is an update available and the channel has the update information, a notification message is displayed.

- To download

OK

- Press **EXIT** when not downloading

Auto update

You can update new software automatically.

1. Display the menu with **MENU**
2. Select **Setup > System Menu > System Update > Auto Update Search in Standby** with ▲ / ▼ and press **OK** to access
3. Select **Immediately / 1 hour after / Off** with ▲ / ▼ and press **OK** to set
 - If System Update is performed, the software will be updated (TV functions may be changed). If you do not want to do so, set **Auto Update Search in Standby** to **Off**.
 - Every time you set, the TV automatically performs search in Standby and downloads an update if any software updates are available.
 - The automatic updating is performed under the following conditions:
 - Standby (TV turned off by the remote control)
 - Recording by **Timer Programming** or **One Touch Recording** is not in progress.

= Note =

- Download may take a few hours.

- During software download and update, DO NOT switch off the TV.
- A notification message may be a reminder. In this case, schedule information (the date when the new version can be used) will appear. You can set the reservation for update. The update will not start when the TV is off.

Manual update

You can update new software manually.

1. Display the menu with **MENU**
2. Select **Setup > System Menu > System Update > System Update Search Now** with **△ / ▽** and press **OK** to access
3. Searches for an update (for several minutes) and displays a corresponding message if any
4. Download with **OK**

= Note =

- Download may take a few hours.
- During software download and update, DO NOT switch off the TV.
- To update via the Internet

 → **Internet service > Network settings > Software Update**

Setting characters

Using numeric buttons

You can enter characters for free input items using numeric buttons.

Press the numeric button repeatedly until you reach the desired character.

1 : . , @ / 1 ! : # + - * _ () “ ’ % & ? , ; = \$ [] ~ < > { } | ` ^ \

2 : a b c 2 A B C

3 : d e f 3 D E F

4 : g h i 4 G H I

5 : j k l 5 J K L

6 : m n o 6 M N O

7 : p q r s 7 P Q R S

8 : t u v 8 T U V

9 : w x y z 9 W X Y Z

0 : Space 0

- The character is set automatically if you leave for 1 second.
- You can also set the character pressing **OK** or other numeric buttons less

than 1 second.

- The characters may vary depending on the input items.

Built-in Camera

Using built-in Camera

You can use the built-in Camera as a communication tool for specific applications such as face recognition, video message, etc.

 → [Watching](#) > [my Home Screen](#) > [Settings](#)

= Note =

- Please note that under certain circumstances, audio / video recording may be prohibited by local laws. This appliance should be used only in compliance with all applicable laws, regulations and statutes.


■ Auto pop-up

When the application for camera operation is activated, the built-in Camera automatically pops up.

- Do not slide up the built-in Camera by hands.

■ To close the built-in Camera

- Push the top of the camera manually.

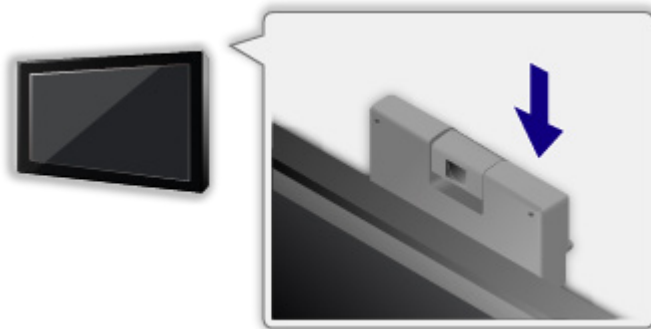

= Note =

- Face recognition may not work properly depending on surrounding environment or condition (for example, darkened room, etc.).
- The applications such as video communication need a broadband network environment. Ensure the network connections and network settings are completed.

 → [Internet service](#) > [Network connections](#)

 → [Internet service](#) > [Network settings](#)

- This function is subject to change without notice.

Voice Control

Preparations

Voice Control function allows you to operate the TV (e.g. selecting a channel), search the content from various features, etc. with your speech.

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Internet service > Network connections

 → Internet service > Network settings

- Ensure the pairing of the touch pad controller is completed.

 → Settings > Setup > VIERA Touch Pad Controller

■ Voice Control Settings

1. Display the menu with **MENU**
2. Select **Setup > Voice Control Settings > Speech Detection Level / Terms of Service** with **△ / ▽** and press **OK** to access
3. Set with **△ / ▽ / ◀ / ▶** and press **OK** to store

Speech Detection Level

(**High** / **Standard**)

Adjusts the sensitivity to recognise your speech.

Terms of Service

Displays the terms of service.

= Note =

- To use Voice Control function fully, you need a broadband network environment, because this function accesses the speech recognition server with the internet connection. Even if you have the internet environment, this function may not be available depending on the proxy settings. Please connect the internet without proxy settings. (Proxy settings are not required for normal household use. For details of internet environment, consult your Internet Service Provider (ISP) or telecommunications company.)

How to use

1. Press  of VIERA Touch Pad Controller
 - When the confirmation screen is displayed, read carefully and start Voice Control function.
2. The operation guide is displayed and follow the on-screen instructions
 - To display voice command list
OPTION
 - To exit Voice Control function
RETURN

= Note =

- When you start Voice Control function, sound level of the TV becomes low.
- Voice Control function may not work properly in the following conditions.
 - Not pronounce clearly and correctly
 - Volume level of your voice is too loud or too low.
 - Surrounded by the noise
- Phrases other than Voice Command may not be recognised.
- It is recommended to speak within about 15 cm from the integrated microphone of VIERA Touch Pad Controller when using Voice Control function.
- Voice Control function is subject to change without notice.

Electronic Touch Pen

Information

This function allows you to paint or play games on the TV screen using Electronic Touch Pen (hereafter referred to as “Touch Pen”).

- The Touch Pen is available only for specific applications.

Touch Pen Setup

■ Pairing

To use the Touch Pen, you need to pair the Touch Pen to the TV.

1. Display the menu with **MENU**
2. Select **Setup** > **Touch Pen Setup** > **Pairing** with $\triangle$ / ∇ and press **OK** to access
3. Follow the on-screen instructions

= Note =

- Place the Touch Pen within 50 cm from the TV while registration in progress.
- This TV can be paired with up to 2 pieces of the Touch Pen simultaneously. Pairing condition may differ depending on the registration status for each Bluetooth device.

■ Unpair

Cancels pairing all the registered Touch Pen.

1. Display the menu with **MENU**
2. Select **Setup** > **Touch Pen Setup** > **Unpair** with $\triangle$ / ∇ and press **OK** to access
3. Follow the on-screen instructions

Using Electronic Touch Pen

■ How to paint on the photo / video

1. Press Power button to turn on the Touch Pen
2. Display the following images full-screen
 - Digital TV
 - HDMI input
 - Photo / video contents of Media Player / Network services

3. Touch the pen tip to the TV screen for a few seconds
4. The confirmation screen is displayed and follow the on-screen instructions

= Note =

- You can save the image into the SD card / USB Flash Memory after painting in the following contents.
 - Photo content in Media Player / Network services
 - Not encrypted content in HDMI input
- Depending on the condition, you may not be able to paint on the edge of the screen.

■ Using applications (painting, playing games, etc.)

1. Press Power button to turn on the Touch Pen
2. Display APPS List with **APPS**
3. Select the specific application with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access
4. Follow the on-screen instructions

■ Basic operation for the Touch Pen

Perform the following operations using the Touch Pen when selecting screen operation or items, or using software for the Touch Pen.

Tap:

Touch the pen tip to the panel and release it quickly.

Hold/Release:

Keep touching the pen tip to the panel./Release the pen tip.

Drag and drop:

Move with the pen tip touched to the panel.

- Operations differ depending on application.

Maintenance

■ Storage and Cleaning

- Clean using a soft, dry cloth.
- Do not use benzene, thinner, or wax on the Touch Pen, as doing so may cause the paint to peel off.
- Do not dunk the Touch Pen in liquid such as water when cleaning.
- Avoid storing the Touch Pen in hot or highly humid locations.

- Remove soil stuck to the pen tip with a cotton swab, etc. Be careful not to subject the pen tip to impact since it is equipped with the sensor. Using with soil or foreign matters attached will cause scratch of the screen.

Bluetooth devices

Bluetooth Setup

You can use Bluetooth keyboards*¹ and Bluetooth audio devices*² (headphones, etc.) with this TV by setting [Bluetooth Setup](#) in the Setup Menu.

 → [Settings](#) > [Setup](#) > [Bluetooth Setup](#)

*¹ : HID (Human Interface Device Profile) compliant keyboards can be used.

*² : A2DP (Advanced Audio Distribution Profile) compliant audio devices can be used.

1. Display the menu with **MENU**
 2. Select [Setup](#) > [Bluetooth Setup](#) with $\triangle$ / ∇ and press **OK** to access
 3. Select [Devices](#) / [Bluetooth Audio Settings](#) with $\triangle$ / ∇ and press **OK** to access
-

Devices

Searches the available device and displays the status.

- You cannot use two or more A2DP compliant audio devices simultaneously.

Not paired:

The device is not registered. Register the device by following the on-screen instructions to use with this TV.

Connected:

The device is registered and you can use with this TV.

Not connected:

The device is already registered, but not connected to this TV. Check the device is turned on and set within the available range.

Bluetooth Audio Settings

Adjusts the delay time and volume for the audio device.

Lip Sync / Lip Sync Adjustment:

If the sound of the audio device does not synchronise the image, set [Lip Sync](#) to [On](#) and adjust in [Lip Sync Adjustment](#).

- This function is available only for the Bluetooth audio devices.

Audio Output:

Set to **Bluetooth only** to mute the TV speakers automatically when using the Bluetooth audio device. And you can adjust the volume of the device using the Volume Up / Down button on the remote control.

Volume:

Adjusts the volume of the Bluetooth audio device.

-
- Settings in the Sound Menu may not be effective for the Bluetooth audio devices.
 - This setup has not been designed for the 3D Eyewear, VIERA Touch Pad Controller and Electronic Touch Pen supporting Bluetooth wireless technology.
 - Additional information for the devices may be found on the following website. (English only)

<http://panasonic.net/viera/support>

Keyboard / Gamepad

Keyboard

- Keyboards requiring the drivers are not supported.
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard.
- Some of the keys of keyboards may correspond to the operation of the remote control.


Keyboard	Remote Control
↑ / ↓ / ← / →	△ / ▽ / ◀ / ▶
Enter	OK
Backspace	RETURN
Esc	EXIT
0 - 9 / Character	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	AV
F5 / F6	Channel Down / Up
F7 / F8	Volume Down / Up
F9 / F10 / F11 / F12	Coloured buttons

Gamepad

- Check the gamepads that have been tested for compatibility with this TV at the following website. (English only)

<http://panasonic.net/viera/support>

- Some of the keys of gamepads correspond to the operation of the remote control.

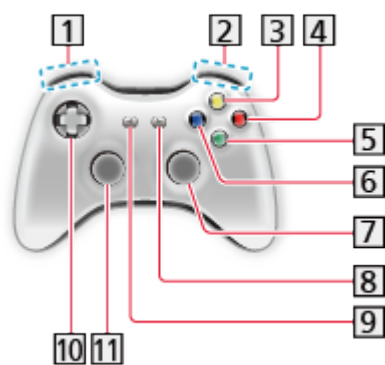

- 1** Volume Up / Down
- 2** Channel Up / Down
- 3** GUIDE
- 4** OK
- 5** RETURN
- 6** HOME
- 7** APPS
- 8** EXIT
- 9** AV
- 10** $\triangle / \nabla / \triangleleft / \triangleright$
- 11** MENU

Settings

Setting menu

How to use

Various menus allow you to make settings for the picture, sound, and other functions.

1. Display the menu with **MENU**
 - Displayed items vary depending on the input signal.
2. Select the menu with $\triangle$ / ∇ and press **OK** to access
3. Select the items with $\triangle$ / ∇ and press **OK** to access
 - Only available items can be selected.
 - You can also access from **eHELP** pressing  (red) at each item. (if available)
- You can select from among alternatives with $\triangle$ / ∇ and press **OK** to set.
- You can adjust using the slide bar with $\triangleleft$ / $\triangleright$ and press **OK** to set.
- You can go to the next screen with **OK**.
- You can enter names or numbers freely for some items.
 - 1) Enter characters one by one with $\triangle$ / ∇ / $\triangleleft$ / $\triangleright$ and press **OK** to set
 - You can set characters using numeric buttons.
 → **Functions > Setting characters > Using numeric buttons**
 - 2) Press **RETURN** to store
- To reset the settings
 - To initialise picture or sound settings only, select **Reset Picture Defaults** in the Picture Menu or **Reset Sound Defaults** in the Sound Menu.
 → **Settings > Picture > Reset Picture Defaults**
 → **Settings > Sound > Reset Sound Defaults**
 - To initialise all settings, select **Shipping Condition**.
 → **Settings > Setup > System Menu**
- To exit the menu screen
EXIT
- To return to the previous screen
RETURN

- To change menu pages



= Note =

- A different menu will be displayed in the mode of Media Player or Network services.



 
→ Media Player > Using Media Player



→ Home network > DLNA > Using DLNA

■ Using control panel buttons

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu
2. Select and set with following control panel buttons
 - Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button.

Picture

Viewing Mode

Selects your favourite picture mode for each input.

([Dynamic](#) / [Normal](#) / [Cinema](#) / [THX Cinema](#) / [THX Bright Room](#) / [Custom](#) / [Professional1](#) / [Professional2](#))

[Dynamic](#):

Improves contrast and sharpness for viewing in a bright room.

[Normal](#):

Normal use for viewing in a normal lighting condition.

[Cinema](#):

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

[THX Cinema](#)*:

Reproduces the original image quality precisely in a darkened room.

- THX3D Cinema is displayed instead of THX Cinema in 3D mode.

[THX Bright Room](#)*:

Reproduces the original image quality precisely in a bright room.

- Not valid in 3D mode

[Custom](#):

Adjusts each menu item manually to suit your favourite picture quality.

[Professional1](#) / [2](#):

Allows you to set and lock the professional picture settings.

 → [Watching](#) > [For best picture](#) > [Advanced Settings](#)

- This mode is available only when [Professional Mode \(isfccc\)](#) in the Setup Menu is set to [On](#).
- If a certified professional dealer sets these modes, [Professional1](#) and [Professional2](#) may be displayed as [isf Day](#) and [isf Night](#).

In each Viewing Mode, [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#), [Colour Temperature](#), [Vivid Colour](#), [Ambient Sensor](#), [Noise Reduction](#), [MPEG Remaster](#), [Resolution Remaster](#), [Caption Smoother](#), [Brilliance Enhancer](#), [Intelligent Frame Creation](#) and [24p Smooth Film](#) can be adjusted and stored.

When in [Custom](#) or [Professional1 / 2](#) mode, [Advanced Settings](#) can be adjusted additionally. The settings in [Custom](#) or [Professional1 / 2](#) mode can be stored for each input.

- You can set [Viewing Mode](#) in 2D and 3D mode for each.

*: THX modes are used to mirror the picture settings used by professional filmmakers, faithfully reproducing the image quality of THX Certified movies. THX Certified movies have the THX logo on the disc. THX modes are not available for photo contents or internet services.

Basic settings

[Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#)

Adjusts the levels of these options according to your personal preference.

[Colour Temperature](#)

([Cool](#) / [Normal](#) / [Warm](#))

Sets the overall colour tone of the picture (bluer - redder).

[Vivid Colour](#)

([On](#) / [Off](#))

Automatically adjusts colours to vivid ones.

[Colour Remaster](#)

([Auto](#) / [On](#) / [Off](#))

Displays the vivid images with the expanded colour gamut.

- Set to [Auto](#) to use this function effectively.
 - For HDMI input or video contents of Media Player (when [Viewing Mode](#) is set to [Dynamic](#), [Normal](#) or [Cinema](#))
-

[Reversal Film Effect](#)

([Auto](#) / [On](#) / [Off](#))

Provides the picture effect such as the reversal film for photo contents.

- Not valid in Network services

Ambient Sensor

Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

(On / Off)

Noise reduction settings

Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

Resolution Remaster

Enhances picture resolution to make the image sharper.

(Auto / Max / Mid / Min / Off)

Caption Smoother

Makes caption contours smooth. Specially effective for low resolution contents.

(Auto / Max / Mid / Min / Off)

- Not valid in 3D mode

Brilliance Enhancer

Enhances picture contrast locally to increase picture brilliance.

(Max / Mid / Min / Off)

- Not valid in 3D mode

Intelligent Frame Creation

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

(Max / Mid / Min / Off)

- Depending on the contents, images may be noisy. To prevent the noise, change the setting.
- Not valid when **Game Mode** is set to **On**

24p Smooth Film

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

([Max](#) / [Mid](#) / [Min](#) / [Off](#))

- This is available only for 24p signal input and displayed instead of [Intelligent Frame Creation](#).
- Not valid when [Game Mode](#) is set to [On](#)

Advanced Settings

You can adjust and set up the detailed picture settings.

 → [Watching](#) > [For best picture](#) > [Advanced Settings](#)

This function is available when [Viewing Mode](#) is set to [Custom](#) or [Professional1 / 2](#) mode.

 → [Settings](#) > [Picture](#) > [Viewing Mode](#)

Option Settings

[Game Mode](#)

([On](#) / [Off](#))

Provides suitable images for fast response signals when playing games.

- Not valid in TV mode
- To display time spent using Game Mode, set [Playing Time Display](#).

 → [Settings](#) > [Setup](#) > [Display Settings](#)

[Film Cadence Mode](#)

([On](#) / [Off](#))

Improves vertical resolution for movie images.

- This function is available for interlaced signals (except in Network services or when [Game Mode](#) is set to [On](#)).

[1080p Pure Direct](#)

([On](#) / [Off](#))

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

- Not valid in 3D mode
-

HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

Auto:

Automatically adjusts the picture settings according to the received HDMI content if the connected equipment supports HDMI Content Type.

- To set the availability of each content type for Auto mode, select [Auto Detail Setting](#).
 - For HDMI input
-

HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

- When the black level is not suitable, select [Full](#).
 - For HDMI input
-

3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

- Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to [On](#) to display sharper and more accurate colours.
- For PAL / NTSC signal reception in TV mode or from composite connection
- Not valid in 3D mode

Screen Settings

16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

On:

Enlarges the image to hide the edge of the image.

Off:

Displays the image in the original size.

- Set to [On](#) if noise occurs on the edge of the screen.

- This function can be memorised for SD (Standard definition) and HD (High definition) signals respectively.
 - Not valid in Network services
-

H-Size

(H-Size1 / H-Size2)

Switches the horizontal display range to reduce noise on the side edge of the image.

- For TV mode, AV and HDMI input
 - Not valid in 3D mode
-

Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Just](#), [Sidecut Just](#), [Zoom](#) or [Sidecut Zoom](#).

Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

- This function is effective in reducing power consumption when listening to the sound without watching the TV screen.
 - Press any buttons (except Standby) to turn the screen on.
-

Side Panel

(High / Mid / Low / Off)

Adjusts the brightness of the side panel.

- The recommended setting is [High](#) to prevent panel “image retention”.
-

Pixel Orbiter

(On / Auto)

Selects the mode for wobbling of the image to prevent panel “image retention”.

Auto:

Automatically works only for the appropriate images and you rarely recognise the wobbling.

Scrolling Bar

Displays scrolling bar pattern to assist elimination of panel “image retention”.

- Press **OK** to start scrolling and press any buttons (except Standby) to exit this mode.
- For positive effect to eliminate “image retention”, it may be necessary to display for a long time.

3D Settings

3D Detection

(On (Advance) / On / Off)

Selects whether to switch to the 3D mode automatically.

On (Advance):

Detects all the 3D format signals and displays the 3D image automatically.

On:

Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically.

- To view 3D images without any notifications and operations, set to **On (Advance)**.

3D Signal Message

(On / Off)

Selects whether to give a notification message when a signal of 3D format is found.

- This function is not available when **3D Detection** is set to **On (Advance)**.
- For Digital TV, Component and HDMI input

3D Refresh Rate

(Auto / 100Hz / 120Hz)

Reduces juddering and flicker noises of the 3D images when using the 3D Eyewear.

100Hz:

If light appears to flicker under fluorescents (or dimmers) of 50 Hz.

120Hz:

If light appears to flicker under fluorescents (or dimmers) of 60 Hz.

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in 2D→3D mode).

- Set to On to enable Effect setting.
- When setting to On, a safety precaution message will appear. Read it carefully and press RETURN to go to Effect setting.
- When adjusting, take into account that the vision of 3D images varies among different individuals.

Effect:

Adjusts the 3D depth according to the contents or to your preference.
(This setting will not be memorised when changing the input mode or channel.)

L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in 2D→3D mode).

Select R/L (Reversed) if you feel that the sense of depth is unusual.

- This setting will not be memorised when changing the input mode or channel.
-

Edge Smoother

(On / Off)

Set to On if you feel the contoured parts of an image are not smooth enough (except in 2D→3D mode).

Safety Precautions

Displays the precautions for viewing 3D images.

Lock Settings

Locks the settings of Professional1 / 2 mode for each input.

 → Watching > For best picture > Lock Settings

Copy Adjustment

Copies the selected [Custom](#), [Professional1](#) or [Professional2](#) settings to those of the other input.

 → [Watching](#) > [For best picture](#) > [Copy Adjustment](#)

Reset Picture Defaults

Resets the current Picture Viewing Mode to the default settings.

Sound

Mode

Selects your favourite sound mode for each input.

([Standard](#) / [Music](#) / [Ambience](#) / [User](#))

[Standard](#):

Provides the suitable sound quality for all types of scenes.

[Music](#):

Improves sound quality for watching music videos, etc.

[Ambience](#):

Improves spatial effects and provides clear sounds.

[User](#):

Adjusts the sounds manually by using the equaliser to suit your favourite sound quality.

- In each mode, [Bass](#), [Treble](#), [Surround](#), [Bass Boost](#) and [Digital Remaster](#) can be adjusted and stored.
- For the User mode, [Equaliser](#) will be available in the Sound Menu instead of [Bass](#) and [Treble](#). Select [Equaliser](#) and adjust the frequency.

 → [Settings](#) > [Sound](#) > [Basic settings](#)

- This function is effective only for the sound from TV speakers.

Basic settings

[Bass](#)

Adjusts level to enhance or minimise lower, deeper sound output.

[Treble](#)

Adjusts level to enhance or minimise sharper, higher sound output.

Equaliser

Adjusts the frequency level to suit your favourite sound quality.

- This function is available when **Mode** is set to **User**.
 - Select the frequency and change the frequency level by using Δ / ∇ .
 - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
 - To reset the levels of each frequency to the default settings, select **Reset Equaliser Settings** with $\triangleleft$ / $\triangleright$ and press **OK**.
 - This function is effective only for the sound from TV speakers.
-

Balance

Adjusts volume level of right and left speakers.

Surround

(**Stadium** / **Hall** / **Natural** / **Off**)

Selects surround sound settings.

Stadium:

Provides the sound effect such as a stadium.

Hall:

Provides the sound effect such as a concert hall.

Natural:

Controls the reverberation to make the voice sound clearer.

- This function is effective only for the sound from TV speakers.
-

Bass Boost

(**On** / **Off**)

Enhances the effect of bass sounds.

- This function is effective only for the sound from TV speakers.
-

Digital Remaster

(**On** / **Off**)

Compensates a compressed audio signal to reproduce the original sound quality.

- This function is effective only for the sound from TV speakers.

Volume settings

Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

Volume Correction

Adjusts the volume of each individual channel or input mode.

Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

- If the back space between the TV and wall is within 30 cm, **Up to 30cm** is recommended.
- If the back space between the TV and wall is over 30 cm, **Over 30cm** is recommended.
- This function is effective only for the sound from TV speakers.

Voice Guidance Settings

Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (menu item, on-screen messages, etc.) for visually impaired users.

Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network contents in web browser function.

Audio Description

Audio Description

(Auto / Off)

Narration settings for visually impaired users.

Set to **Auto** to activate the narration sound track when available on the broadcast.

- The availability of audio description sound track is indicated by **AD** in the information banner.
 - For Digital TV
-

Volume

Adjusts the volume for Audio Description.

- For Digital TV
-

Speakers

(On / Off)

Set to **On** to activate the description sound track from TV speakers.

- For Digital TV

Advanced settings

MPX

Selects multiplex sound mode (if available).

Stereo:

Use this normally.

Mono:

When stereo signal cannot be received

M1 / M2:

Available while mono signal is transmitted.

- For Analogue TV
-

When you receive the stereo / bilingual sound system, sound output modes can be selected by using the **MPX** in the Sound Menu.

- Meanings of mode indicators

∞ : STEREO

I : MAIN I

II : SUB II

▽ : MONO

■ Available mode indicator for each type of broadcast

- NICAM - Used in New Zealand, Singapore, Hong Kong, etc.
 - Regular broadcast (Standard Audio): No indicator / ▽
 - Regular + NICAM MONO I (MAIN I): I / ▽
 - NICAM STEREO: ∞ / ▽
 - NICAM DUAL MONO (MAIN I / SUB II): I / II / ▽
- A2 (German) - Used in Australia, Malaysia, etc.
 - Regular broadcast (Standard Audio): No Indicator / ▽
 - BILINGUAL or DUAL MONO (MAIN I / SUB II): I / II
 - STEREO: ∞ / ▽

= Note =

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended to switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position pressing the Sound Selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.

Digital Audio Preference

(Dolby D / MPEG)

Selects the initial setting for audio tracks.

Dolby D:

The priority is given to Dolby Digital.

MPEG:

The priority is given to MPEG.

- Dolby Digital is the method of coding digital signals developed by the Dolby Laboratories. Apart from stereo (2ch) audio, these signals can also be multi-channel audio.
 - MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.
 - For Digital TV
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS for video contents of Media Player / Network services.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.
- For Digital TV or video contents of Media Player / Network services



→ Media Player > Video mode > Audio output settings



→ Home network > Videos > Audio output settings

HDMI1 / 2 / 3 Input

(Digital / Analogue)

Selects to fit the input signal.



→ Watching > External equipment > HDMI features

Digital:

When sound is carried via the HDMI cable connection

Analogue:

When sound is not carried via the HDMI-DVI adaptor cable connection

- For HDMI input

Reset Sound Defaults

Resets the current Sound Mode to the default settings.

Network

Network Connection

Sets the network setting to use this TV in your network environment.

 → Internet service > Network settings > Network Connection

 → Home network > Network settings > Network Connection

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

 → Internet service > Network settings > Network Status

 → Home network > Network settings > Network Status

VIERA remote Settings

Sets to control the TV from network equipment (smartphone, etc.).

 → Home network > Network settings > VIERA remote Settings

Network Link Settings

Sets to control the TV with devices connected to the network.

 → Home network > Network settings > Network Link Settings

Other settings

Software Update

Checks for available software updates from the Panasonic website.

 → Internet service > Network settings > Software Update

 → Home network > Network settings > Software Update

New Software Message

(On / Off)

Selects whether to give a notification message when new software is found via network.

 → Internet service > Network settings > New Software Message

 → Home network > Network settings > New Software Message

Timer

Off Timer

Sets the duration of time until the TV automatically goes into Standby mode.

(90 / 75 / 60 / 45 / 30 / 15 / Off (minutes))

 → Watching > Basic > Off Timer

Timer Programming

Sets a timer to record or remind forthcoming programmes.

 → Recording > Timer Programming

- For Digital TV

Clock Settings

Mode

(Auto / Manual)

Selects the clock setting mode for this TV.

- Set to **Auto** to adjust the time automatically using the time information from the digital broadcast. Set to **Manual** to adjust manually.

Date

Sets the current date manually.

Time

Sets the current time manually.

Daylight Saving Time

Selects time offset from the standard time for Summer Time.

(Auto / Off / + 1/2 hour / + 1 hour)

 → Watching > Basic > Adjusting time

Region Select

Selects the region where you live to adjust the standard time.

(NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania)

 → Watching > Basic > Adjusting time

Auto Standby

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

(On / Off)

- Starting [Timer Programming](#) automatically does not affect this function.
- Automatic input switching with the connected equipment affects this function and time-count will be reset.
- The notification message will appear 3 minutes before going into Standby mode.

No signal Power off

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

(On / Off)

- The notification message will appear 3 minutes before going into Standby mode.

Setup

Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

The concerned items and their current settings are displayed. Select [Set to Eco](#) to set them to the energy-saving settings at once.

Voice Control Settings

Settings for Voice Control function.

 → [Functions](#) > [Voice Control](#) > [Preparations](#)

USB Device Setup

Formats the USB HDD or safely removes USB device.

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

Recording Setup

Settings for the recording feature of the USB HDD.

 → [Recording](#) > [Recording current programme](#)

Touch Pen Setup

Pairing

Registers the Electronic Touch Pen (supplied) to this TV.

Unpair

Cancels pairing all the registered Electronic Touch Pen.

Safety Precautions

Displays the precautions for using the Electronic Touch Pen.

VIERA Touch Pad Controller

Pairing

Registers the VIERA Touch Pad Controller (supplied) to this TV.

- Only 1 touch pad controller can be registered.
-

Cursor Settings

Sets for the cursor of the touch pad controller.

Operation Guide

Displays the operation guide of Touch Pad Controller.

Bluetooth Setup

Settings for the specific devices supporting Bluetooth wireless technology

 → Functions > Bluetooth devices > Bluetooth Setup

Child Lock

Applies access control for channels or inputs to prevent unwanted access.

 → Functions > Child Lock

Tuning Menu

Favourites Edit

Creates a list of favourite channels.

 → Watching > Tuning and editing channels > Favourites Edit

- For Digital TV
-

Channel List

Skips unwanted channels or edits channels.

 → Watching > Tuning and editing channels > Channel List

Auto Tuning

Automatically searches for receivable channels.



→ [Watching](#) > [Tuning and editing channels](#) > [Auto Tuning](#)

Manual Tuning

Searches for channels manually.



→ [Watching](#) > [Tuning and editing channels](#) > [Manual Tuning](#)

Update Channel List

Updates the channel list while keeping your settings.



→ [Watching](#) > [Tuning and editing channels](#) > [Update Channel List](#)

- For Digital TV
-

New Channel Message

(On / Off)

Selects whether to give a notification message when a new channel is found.



→ [Watching](#) > [Tuning and editing channels](#) > [New Channel Message](#)

- For Digital TV
-

Signal Condition

Checks the signal condition.



→ [Watching](#) > [Tuning and editing channels](#) > [Signal Condition](#)

- For Digital TV
-

Add TV Signal

Adds the TV mode.

- This function is available if you skip any modes to tune in [Auto Tuning](#) for first using the TV.
-

= Note =

The settings in [Tuning Menu](#) are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([Digital TV Tuning Menu](#) / [Analogue TV Tuning Menu](#))

Display Settings

Teletext

This item is not used for this model.

Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#) or banner.

 → [Watching](#) > [External equipment](#) > [Watching external input](#)

- To name each input mode freely, select [User input](#) and set characters (maximum 10 characters).
 - To skip the input mode, select [Skip](#).
-

Banner Display Timeout

([10](#) / [9](#) / [8](#) / [7](#) / [6](#) / [5](#) / [4](#) / [3](#) / [2](#) / [1](#) / [0](#) (No display) (seconds))

Sets how long the information banner stays on screen.

VIERA Connect Banner

([On](#) / [Off](#))

Sets the VIERA Connect introduction banner display.

- For Full Screen TV
-

Playing Time Display

([On](#) / [Off](#))

Set to [On](#) to display time spent using Game mode on the top right of the screen every 30 minutes.

- This function is available when [Game Mode](#) is set to [On](#).

 → [Settings](#) > [Picture](#) > [Option Settings](#)

VIERA Link Settings

VIERA Link

([On](#) / [Off](#))

Sets to use VIERA Link functions.

 → [Functions](#) > [VIERA Link "HDAVI Control™"](#)

Power on Link

(On / Off)

Sets to use Power on Link functions.

 → Functions > VIERA Link "HDAVI Control™" > Power on Link

Power off Link

(On / Off)

Sets to use Power off Link functions.

 → Functions > VIERA Link "HDAVI Control™" > Power off Link

Standby Power Save

(On / Off)

Controls the connected equipment to reduce power consumption in Standby.

 → Functions > VIERA Link "HDAVI Control™" > Standby Power Save

- This function is available when [VIERA Link](#) is set to [On](#) and [Power off Link](#) is set to [On](#).
-

Intelligent Auto Standby

(On / Off)

Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption.

 → Functions > VIERA Link "HDAVI Control™" > Intelligent Auto Standby

- This function is available when [VIERA Link](#) is set to [On](#).
-

Professional Mode (isfccc)

Enables the professional picture settings.

Set to [On](#) to display the modes of [Professional1](#) and [Professional2](#) in [Viewing Mode](#).

- [isfccc](#) is the picture setting for the certified professional dealer. For details, consult your local dealer.

System Menu

Shipping Condition

Resets all settings to the original condition.

 → Functions > Shipping Condition

System Update

Downloads new software to this TV.



→ [Functions](#) > [Updating the TV Software](#)

Licence Menu

Displays the software licence information.

Other Settings

USB Charge in Standby

([On](#) / [Off](#))

Enables to supply the power from the USB port in Standby mode.

- Available for charging the rechargeable 3D Eyewear (optional accessory)
 - This function is available when in Standby mode.
-

Power Save

([On](#) / [Off](#))

Reduces brightness of the picture to economise on power consumption.

Support

FAQs

Picture

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Black and white picture

- Check that the output of the external equipment matches the input of the TV.
-

Chaotic image, noisy

- Set [Noise Reduction](#) and [MPEG Remaster](#) in the Picture Menu to remove noise.

 → [Settings](#) > [Picture](#) > [Noise reduction settings](#)

- Check nearby electrical equipment (car, motorcycle, fluorescent lamp).
-

Blurry or distorted image (no sound or low volume)

- Reset channels.

 → [Watching](#) > [Tuning and editing channels](#) > [Auto Tuning](#)

White spots or shadow images (noise)

- Check the position, direction, and connection of the aerial.
-

Pixel Statement

- An image on a LCD or Plasma TV screen is created by many small groups of dots known as pixels (which is similar to the image in a newspaper). It also naturally follows that higher panel resolutions contain more pixels. To create a colour image, each pixel consists of three tiny coloured dots (known as sub-pixels), one each of red, green and blue. Each one of these dots is precisely controlled by the electronics of the TV to produce the picture. Whilst Panasonic maintains the highest standards in manufacturing technology and processes in the construction of these panels, there are a number of allowable pixel/subpixel failures that still allow the panel to be defined as a good panel. It is not possible to guarantee absolutely no pixel loss.

Shop appears on screen at switch on

- **Shop** was selected in first time Auto Tuning when the TV is turned on for the first time. Reset settings in **Shipping Condition**, then select **Home** in first time Auto Tuning.



→ **Functions > Shipping Condition > Shipping Condition**

Digital TV

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Connecting devices such as DTV recorder / PVR / VCR etc. that also require an antenna connection to the digital television

- To maintain optimum antenna signal quality, use an 'F' type TV signal splitter when connecting two or more devices to the same antenna socket.

Hint: Some degradation of the DTV signal may occur if you are connecting the aerial through an external device (e.g. DVD Recorder or Set Top Box). In this case it is better to use a splitter and connect the aerial directly to both devices.

After digital TV tuning, (or re-tuning) some or all DTV channels are missing

- Check to ensure your area is covered by DTV transmissions.
- Check that the aerial and antenna cable are designed for DTV reception. If you live within 5-10 km of DTV transmission towers, a combined VHF / UHF Digital TV aerial should be adequate. Outside this area, separate VHF and UHF aerials provide superior reception performance.
- If you live in a unit or apartment, check to ensure the Master Antenna TV (MATV) system is designed for analogue and DTV reception. Please consult your body corporate.

Picture infrequently pixelates on some or all channels

- Electrical interference caused by local or distant lightning storms, heavy rain, high wind etc. may cause picture to break up and / or audio to mute / distort momentarily.
- Impulse noise interference from an infrequently used electrical appliance, or a passing vehicle or lawn mower with a “noisy” ignition system.
- Older style antenna cabling, loose fitting/corroded wall socket connections / terminals etc.

Picture regularly pixelates on some channels, or **No signal** message

- Check **Signal Condition** via TV Setup menu. If **Signal Quality** or **Signal Strength** is red/orange or constantly changing, check aerial/cable/connections. If the problem persists, consult your local TV antenna installer.
- Too much signal; is **Signal Strength** always at full strength? If yes, try attenuating (reducing) the signal strength.
- Check that the aerial and antenna cable are designed for DTV reception.
- The received signal may be too weak to allow the TV to reliably lock to the selected channel to generate a viewable picture. If the problem persists, consult your local TV aerial installer.
- Interference from household appliances (known as impulse noise) such as light switches, fridges etc. may cause picture break up and / or audio distortion. Use high quality quad shielded coaxial cable (RG6Q) fly lead between TV and antenna wall socket to minimise impulse noise pickup. If the problem persists, consult your local TV aerial installer.
- Antenna installation may be using an aerial amplifier that is faulty or an older style aerial amplifier that was not designed for digital TV.
- Older style antenna cabling, loose fitting / corroded wall socket connections / terminals etc.
- Turn the TV off with Mains power On / Off switch, then turn it On again.

= Note =

Digital TV reception is only as good as the antenna and the antenna cabling delivering the DTV signals to the television. Reliable digital TV reception requires high quality, robust DTV signals which can only be achieved when using a TV antenna and cabling designed for digital TV reception.

- For further reading, please visit at the following website where you can download 'The Digital TV Antenna Systems for Homes Handbook' information pdf file:
<http://www.digitalready.gov.au/publications.aspx>
- For your safety, the antenna and cabling should be inspected / installed by a licensed installer that should comply with Australian Standard AS1417.1 for Domestic installations or AS1367 for MATV installations.

Sound

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

No sound is produced

- Is "Sound mute" active? Press **MUTE** to switch sound mute on or off.
- Is the volume set to the minimum?

Sound level is low or sound is distorted

- Sound signal reception may be poor.
- Set **MPX** in the Sound Menu to **Mono**. (Analogue TV)

 → **Settings > Sound > Advanced settings**

Unusual sound from the TV

- When the power is on, whirring sound of cooling fan or drive noise may be heard from inside the TV (not a sign of faulty operation).

3D

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Cannot view 3D images

Cannot register a 3D Eyewear to the TV

- Has the 3D Eyewear been switched on and set to 3D mode?
 - Is the battery installed correctly?
 → [Watching > 3D > 3D Eyewear - Replacing battery](#)
 - Check the remaining battery level of the 3D Eyewear. (Battery status is displayed on the screen when the 3D Eyewear is turned on.) When the battery is running low, replace it with a new one.
 - Use the 3D Eyewear within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the eyewear, or the surrounding environment.)
 - Register again.
 → [Watching > 3D > 3D Eyewear - Registration](#)
 - Does the 3D Eyewear support Bluetooth wireless technology?
 - Ensure that [3D Mode Selection](#) is set to [3D](#).
 → [Watching > 3D > 3D Mode Selection](#)
 - Some 3D image signals may not be automatically recognised as 3D images. Set [3D Mode Selection \(Manual\)](#) to match the picture format.
 → [Watching > 3D > Viewing 3D](#)
 - For some people, the 3D images may be difficult to see, or cannot be seen, especially among users who have a different level of eyesight between the left and right eyes. Take necessary measures (wearing glasses, etc.) to correct your eyesight before use.
-

3D Eyewear is turned off automatically

- Check that there are no obstacles between the TV and the 3D Eyewear.
-

There is something wrong with the 3D images

- Check the setting of [L/R Picture Swap](#) or [Edge Smoother](#).

The indicator lamp does not light up when pressing Power button on the 3D Eyewear

- The battery may be running low or flat. Replace it with a new one.

 → [Watching](#) > [3D](#) > [3D Eyewear - Replacing battery](#)

HDMI

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Sound is unusual

- Set the sound setting of the connected equipment to “2ch L.PCM”.
- Check the [HDMI1 / 2 / 3 Input](#) setting in the Sound Menu.

 → [Settings](#) > [Sound](#) > [Advanced settings](#)

- If digital sound connection has a problem, select analogue sound connection.

 → [Watching](#) > [External equipment](#) > [HDMI features](#)

Pictures from external equipment are unusual when the equipment is connected via HDMI

- Check the HDMI cable is connected properly.
- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment.

 → [Watching](#) > [External equipment](#) > [Valid input signals](#)

- Use equipment compliant with EIA/CEA-861/861D.

Network

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Cannot connect to the network

- Check the LAN cable or wireless LAN is connected properly.
 -  → Internet service > Network connections
 -  → Home network > Network connections
- Check the connections and settings.
 -  → Internet service > Network settings
 -  → Home network > Network connections
 -  → Home network > Network settings
- Check the network equipment and network environment.
- The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually.
 -  → Home network > Network settings
- The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV and set the router to use it.
 -  → Settings > Network > Network Status
- If the problem persists, consult your Internet Service Provider or telecommunications company.

Cannot select the file during DLNA operations

- Is media server of the connected equipment prepared?
 -  → Home network > DLNA > Information
- Check applicable data format.
 -  → Home network > Technical information
- Check the settings of [Network Link Settings](#).
 -  → Home network > Network settings > Network Link Settings

Cannot operate internet content

- Check the connections and settings.
 -  → Internet service > Network connections > Internet connection
 -  → Internet service > Network settings
- The server or connected line may be busy now.

Other

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

VIERA Link function does not work and an error message appears

- Check the connections.



→ [Functions](#) > [VIERA Link “HDAVI Control™”](#) > [Summary of VIERA Link](#)

- Turn the connected equipment on and then switch the TV on.



→ [Functions](#) > [VIERA Link “HDAVI Control™”](#)

Parts of the TV become hot

- Even if the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.
-

Overcurrent error message appears

- The connected USB device may cause this error. Remove the device and turn the TV off with Mains power On / Off switch, then turn it on again.
 - Check foreign objects are not inside the USB port.
-

An error message appears

- Follow the message's instructions.
 - If the problem persists, contact your local Panasonic dealer or the authorised service centre.
-

Built-in Camera does not work

- Ensure the built-in Camera is held up. When the application for camera operation is activated, the built-in Camera automatically pops up.
 - Face recognition may not work properly depending on surrounding environment or condition (for example, darkened room, etc.).
-

The touch pad controller does not work or cannot be registered

- Are the batteries installed correctly?
- The batteries may be running low. Replace them with new ones.
- Register again.



→ Settings > Setup > VIERA Touch Pad Controller

- Use the touch pad controller within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the controller, or the surrounding environment.)

Voice Control function does not work

- Voice Control function may not work properly depending on the pronunciation, noise and network environment.
- For details



→ Functions > Voice Control

Permanently lit spots on screen

- Due to production process involved in this technology this may result in some pixels which are permanently lit or unlit. This is not a malfunction.

Maintenance

Care and Cleaning

First, remove the mains plug from the socket outlet.

■ Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surfaces of the display panel, cabinet, or pedestal using a soft cloth to clean the dirt or fingerprints.

For stubborn dirt:

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Wring the cloth and wipe the surface. Finally, wipe away all the moisture.

= Caution =

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the TV's surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

■ Mains plug

- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

Information

Using Help menu

1. Display the menu with **MENU**
 2. Select **Help** with $\triangle$ / ∇ and press **OK** to access
 3. Select **TV Self Test** / **System Information** / **Device Information** with $\triangle$ / ∇ and press **OK** to access
-

TV Self Test

Makes a diagnosis of picture or sound problems.

Follow the on-screen instructions.

System Information

Displays the system information of this TV.

Device Information

Displays the device information of this TV.

Optional accessories

Electronic Touch Pen

■ Electronic Touch Pen for Plasma TV



- TY-TP10W
 - You can paint and play games on the TV screen with this device.
 → [Functions > Electronic Touch Pen](#)
 - Touch Pen applications of this TV are available only with this device.
 - This TV can be paired with up to 2 pieces of the Touch Pen simultaneously.

3D Eyewear

■ 3D Eyewear



- TY-ER3D4MW, TY-ER3D4SW (Rechargeable type)
 - If you need additional 3D Eyewear, please purchase this optional accessory.
 - Use Panasonic 3D Eyewear supporting Bluetooth wireless technology.
 - For more information (English only):
<http://panasonic.net/viera/asia/>

Wall-hanging bracket

■ Wall-hanging bracket



- TY-WK5P1RW
 - For 55 inches model
 - Tilting angle for the TV:
0 (vertical) to 15 degrees
- TY-WK6P1RW
 - For 65 inches model
 - Tilting angle for the TV:
0 (vertical) to 10 degrees

= Warning =

- Using other wall-hanging brackets, or installing a wall-hanging bracket by yourself have the risk of personal injury and product damage. In order to maintain the unit's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets. Any damage caused by installing without a qualified installer will void your warranty.
- Carefully read the instructions accompanying optional accessories, and be absolutely sure to take steps to prevent the TV from falling off.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause product damage.
- Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

Licence

Licence

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

THX and the THX Logo are trademarks of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

“RealD 3D” is a trademark of RealD.

“Full HD 3D Glasses™” logo and “Full HD 3D Glasses™” word are trademark of Full HD 3D Glasses Initiative.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

SDXC Logo is a trademark of SD-3C, LLC.

“AVCHD”, “AVCHD 3D” and “AVCHD Progressive” are trademarks of Panasonic Corporation and Sony Corporation.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Mac is a trademark of Apple Inc.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

x.v.Colour™ is a trademark.

HDAVI Control™ is a trademark of Panasonic Corporation.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

Speech Powered by Dragon

2002-2013 Nuance Communications, Inc. All rights reserved.

“PlayReady” is a trademark registered by Microsoft. Please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE Version 2.1 (LGPL V2.1) and/or,
- (4) open sourced software other than the software licensed under the LGPL V2.1.

The software categorized as (3) and (4) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the “Software Licence” menu on this product.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: cdrequest@unipf.jp

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/EUIDTV13/>

