

Operating & Installation Instructions

Washing Machine
(Household Use)

Model No. **NA-V11FX2 NA-V10FX2 NA-V90FX2**
NA-V11FG2 NA-V10FG2



EN

Contents

Safety Precautions	2	
Checking Your Washing Machine	6	
Before Washing	7	
Control Panel	8	
Detergent	10	
Washing	12	
Program List	14	
Details of Programs	16	
Washing Tips	18	
Changing Program Settings	20	
Changing Appliance Settings	26	
Maintenance	27	
Troubleshooting	31	
Error Display	37	
Installation	Choosing the Right Location	38
	Moving and Installing	39
	Connecting the Hoses	41
	Test Run	43
Specifications	44	

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.



AWW9901C7QC0-0C5

Safety Precautions



WARNING

May cause serious injury or death

Children must not use it alone.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Setting the Child Lock. (P. 26)



Hold
5 sec.




May cause fire or electric shock

Do not touch it with wet hands.




Do not hold or pull on the cord.

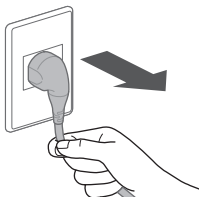


Do not use.




Plug adaptor

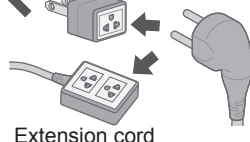

Fully insert it.

 


Do not use.

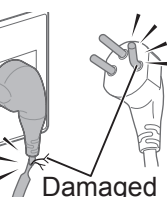


- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

In case of failure or damaged power cord, stop use and ask the electrical technician.

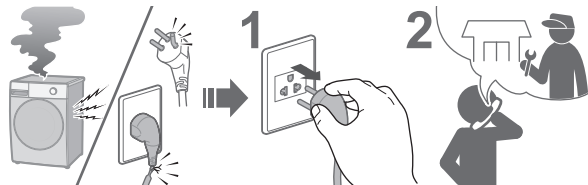

Accumulated dust may cause fire.

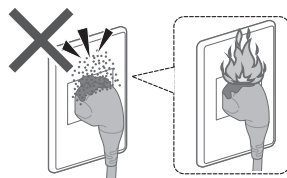


**Securely insert the ground prong.
Ask the electrical technician for a new socket.**



Wipe the power plug periodically.




 Use a socket appropriate for this appliance.



- The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.

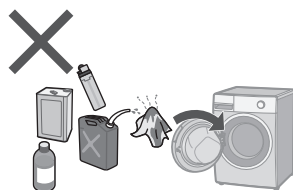

May cause failure

Do not disassemble, repair or modify it by yourself.



Safety Precautions (continued)



CAUTION

May cause injury

 
Be careful not to get your fingers caught.



Do not climb on the appliance.



Do not touch when it is hot.




May cause water leakage

Turn off the water faucet.



Use new hose-sets.

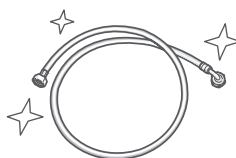


- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.


■ For maximum mass of dry cloth and pressure of tap water, see P. 44.

May cause failure


Keep away from heat and direct sunlight.

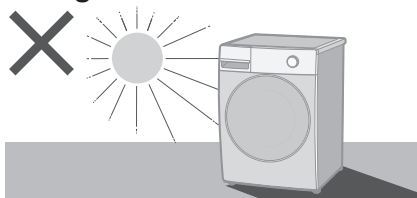

Remove anchor bolts before operation.

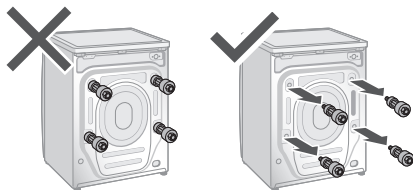


Do not obstruct.

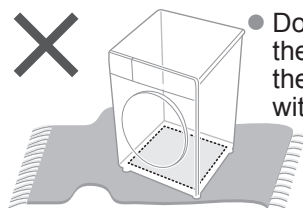


- Do not obstruct the openings of the bottom face with carpet, etc.

Do not use hot water.

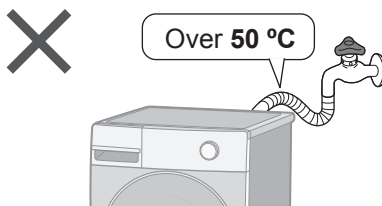

For machine-washable items only.

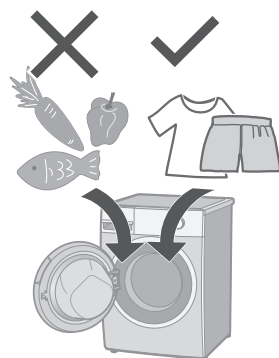

- This appliance is intended to be used in household. This appliance is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in laundrettes.

 
Do not wash excessively oily clothes.



Checking Your Washing Machine

Part names

Detergent drawer (P. 10)



Control panel
(P. 8)

Door

Drum

Hinge

Door seal

Adjustable feet
(P. 40)


Drain filter cover
(P. 30)

Drain hose
(P. 41, 42)

Water inlet (P. 42)

Anchor bolts
(P. 40)

Power cord and plug*
*The plug shape varies
with the region.

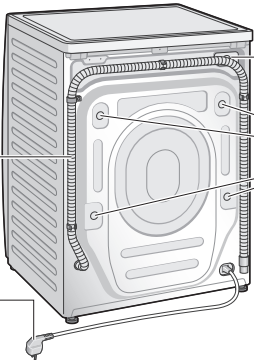

Accessories

☐ Elbow (1) (P. 42)




☐ Cover caps (4) (P. 40)



☐ Water supply hose (1) (P. 41, 42)



☐ Bottom cover (1) /Screw (1) (P. 39)


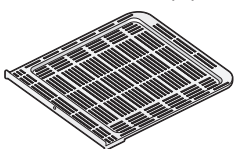


Before Washing


Preparing laundry

Before put clothes in drum

- Remove foreign objects.
- Use laundry nets for delicates and small items.

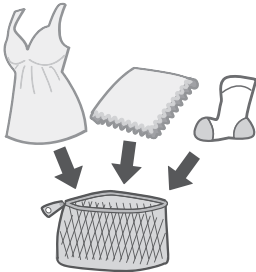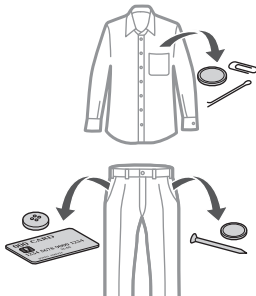



Pre-laundry check

 

Reverse



Clothes likely to pill

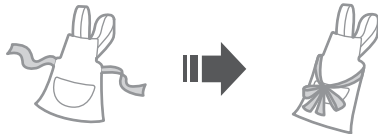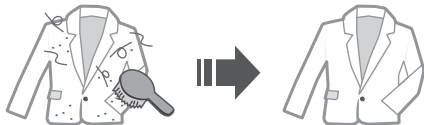


Paper diapers

- Observe care labels.



- Wash separately.

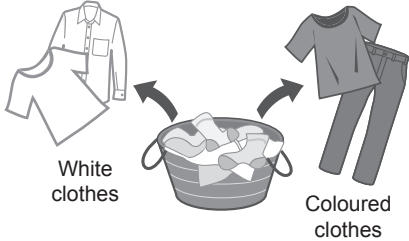

- Pretreat for heavily stains.



- NOTE**
- “Mud / Oily Sauce / Collar & Sleeve” programs (P. 15) are recommended for removing stains.

Control Panel

● Images in these instructions are of the NA-V11FX2, unless otherwise indicated.

Display

Lock

- The door is locked
- The door and buttons are all locked (Child Lock) (P. 26)

Add Wash lamp:
You can add clothes while lit. (P. 12)

Process

- Wash
- Rinse
- Spin

ECONAVI lamp (P. 18)

Optional function lamp

- (P. 24)
- (P. 23)
- (P. 29)
- (P. 23)
- (P. 22)
- (P. 25)

Water temperature

- 90
- 60
- 40
- 30
- Cold

Spin speed

- 1400
- 1200
- 700
- 500

: Drain only (No spin)

Remaining time

1:15

Error display (P. 37)

U **11** (e.g. U11)

■ NA-V11FG2/NA-V10FG2

Temp Spin Mode Timer Rinse+ Easy Iron Auto

Active Speed 38 Rapid 15 Soak Allergy Mud Only Sauce Collar & Sleeve


Normal Daily Wash Synthetic Delicates Bedding Cotton Tub Clean

Power Start/Pause

Auto Tub Care (P. 24)

Control buttons

■ NA-V11FX2/NA-V10FX2/NA-V90FX2

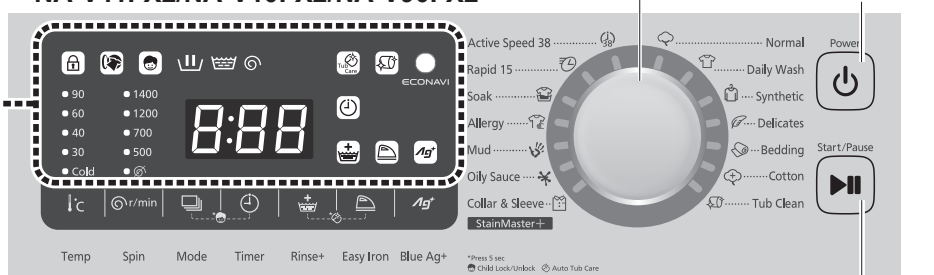

Start/Pause button

Blue Ag+ (P. 25)

Easy Iron (P. 23)

Rinse+ (P. 23)

Press at the same time:
Auto Tub Care (P. 24)

Timer (P. 22)

Mode (P. 21)

Press at the same time:
Child Lock (P. 26)

Spin (P. 21)

Temp (P. 20)

Touch operation

 
Operation buttons are capacitive (Except for /).

- If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)




NOTE

- Turn off back on



- No operation auto power off

 

- In case of a power failure

When the power recovers, operation resumes from where it stopped. (Auto Restart)



Detergent

● Follow the instructions on each package.

Detergent

Use a low foam detergent.

- To prevent powder detergent from remaining in the detergent drawer:

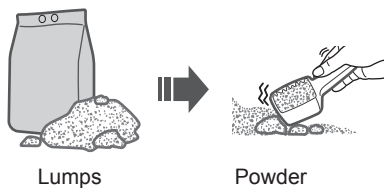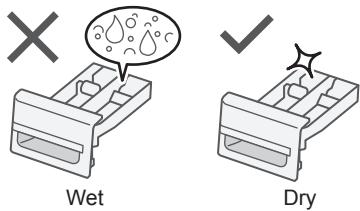

Detergent

Powder detergent




Liquid detergent




Bleach



Fabric softener

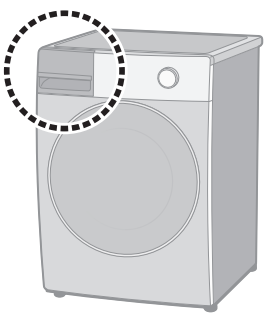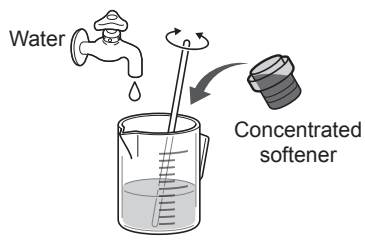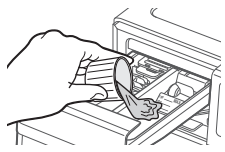


NOTE

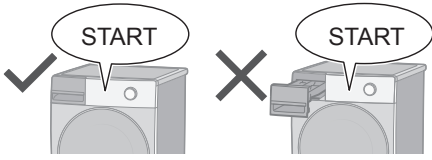

Ag+ case (P. 25, 29)



V11FX2 V10FX2 V90FX2

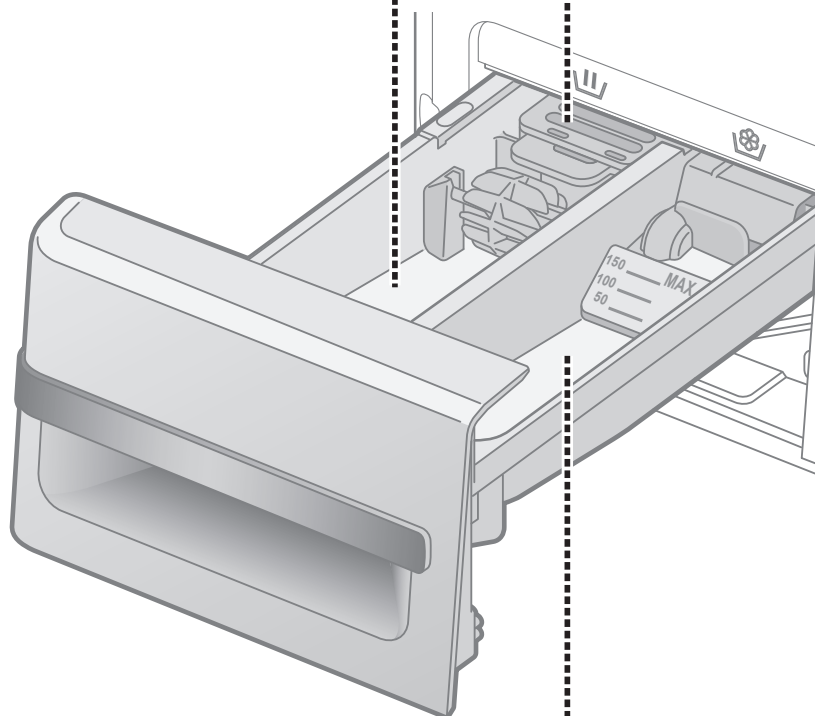

 Fabric softener




  Max. 150 ml



Washing

Basic Method

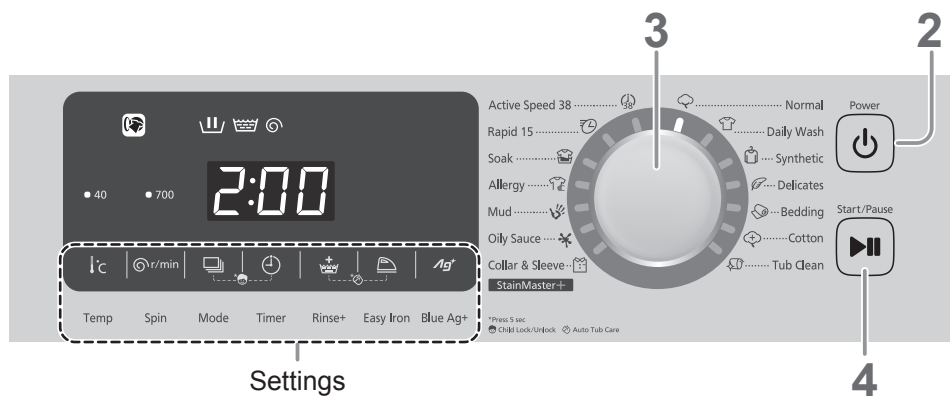

NOTE


■ Do not let laundry get caught in the door.



■ Do not overfill the drum with laundry.



■ To open the door during operation
(You can add clothes when lit.)

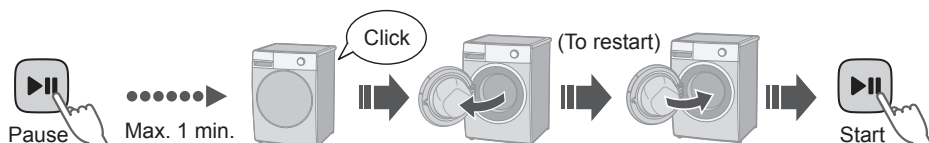


NOTE

● Door does not open ➡ (P. 32)



1

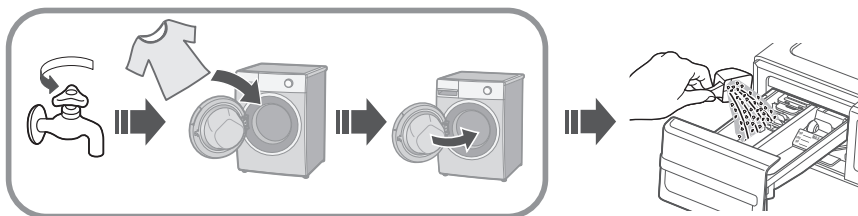

2



3



Select a program.

(P. 14)

■ **Changing the settings.**

Settings

 Temp (P. 20)	 Spin (P. 21)	 Mode (P. 21)	 Timer (P. 22)
 Rinse+ (P. 23)	 Easy Iron (P. 23)	 Blue Ag+ V11FX2 V10FX2 V90FX2 (P. 25)	 Auto Tub Care (P. 24)

4



Measures the amount of laundry



(30 sec.)

● Except programs that do not weigh (P. 14)




Displays the time required (recalculated)



(e.g.)



5

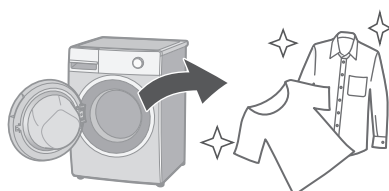

Program List

Program	Description	Max load (kg)			Total time
		V11FX2/ V11FG2	V10FX2/ V10FG2	V90FX2	
 Normal	Everyday clothes 	11.0	10.0	9.0	2:30
 Daily Wash	Everyday clothes (Quicker than "Normal" program) 	11.0	10.0	9.0	1:30
 Synthetic	Chemical fibres 	5.0			1:05
 Delicates	Washing gently 	2.0			0:50
 Bedding	Large items 	3.0			1:30
 Cotton	Gentle wash with extra time 	11.0	10.0	9.0	3:00
 Tub Clean	Cleaning the drum. 	None			3:45

- **Total time is approximate** (When the standard water supply rate is 15 L / min). For each program's default water temperature.
- Programs that the load is not weighed after pressing "Start/Pause": Synthetic, Delicates, Bedding, Rapid 15

Program	Description	Max load (kg)			Total time
		V11FX2/ V11FG2	V10FX2/ V10FG2	V90FX2	
 Active Speed 38	Small loads 	5.0			0:38
 Rapid 15	Small loads of lightly soiled 	2.0			0:15
 Soak	Heavily-soiled clothes 	5.0			2:00
 Allergy	For ticks and pollen 	11.0	10.0	9.0	3:15
 Mud		11.0	10.0	9.0	3:20
 Oily Sauce		11.0	10.0	9.0	3:00
 Collar & Sleeve		11.0	10.0	9.0	3:10

Details of Programs

Settings Program	Auto setting		
	Temp (°C)	Spin (r/min)	
 Normal	40	1200	
 Daily Wash	40	1200	
 Synthetic	30	700	
 Delicates	30	500	
 Bedding	Cold	700	
 Cotton	60	1400	
 Tub Clean	40	1200	
 Active Speed 38	40	1200	
 Rapid 15	Cold	1200	
 Soak	40	1200	
 Allergy	90	1200	
 Mud	40	1200	
 Oily Sauce	40	1200	
 Collar & Sleeve	40	1200	

NOTE

- For normally soiled laundry at the rated capacity, we recommend using the “Cotton, 60 °C, 1400 r/min” which is tested in accordance with IEC 60456 for the energy and water efficiency aspects.
- Actual water temperature may differ from the declared cycle temperature.
- The test results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.


Setting range		Optional functions					
Temp (°C)	Spin (r/min)	Mode	Timer	Rinse+	Easy Iron	Blue Ag+	Auto Tub Care
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
Cold, 30, 40	 500, 700, 1200	✓	✓	✓	✓	✓	✓
Cold, 30, 40	 500	✓	—	✓	—	✓	—
Cold, 30	 500, 700	✓	✓	✓	—	✓	—
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	1200	—	—	—	—	—	—
Cold, 30, 40	 500, 700, 1200, 1400	✓	✓	—	✓	✓	✓
Cold	 500, 700, 1200	—	✓	—	—	—	—
Cold, 30, 40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
60, 90	 500, 700, 1200	—	✓	✓	✓	—	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓

Blue Ag+:
V11FX2 / V10FX2 / V90FX2

Washing Tips

ECONAVI

- “Normal” program only

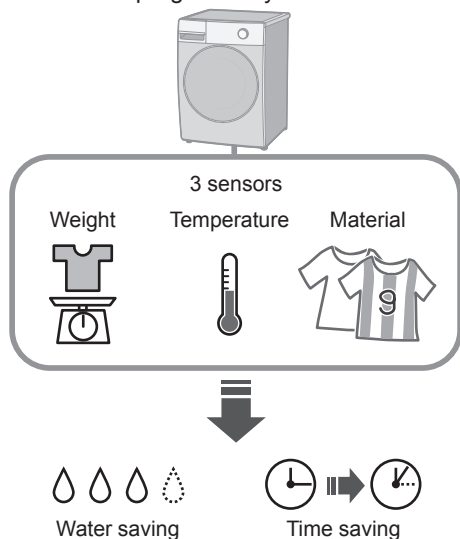

■ Lamp indications



Detecting



ECONAVI enabled



ECONAVI disabled

Delicates

■ When washing

- To rinse fully, use the “Rinse+” function. (P. 23)

NOTE




Bleach



Liquid detergent
for delicates


■ After operation ends

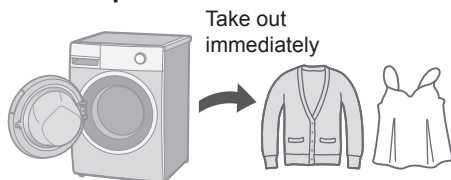

Bedding

■ Washable items

- (Wash) ● (Handwash)
- 100 % cotton or 100 % synthetic

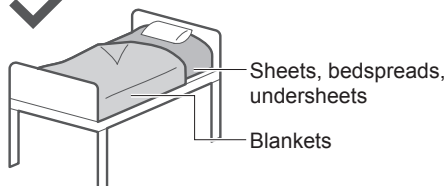

■ Not washable items



Electric blankets



Wool



Silk




Long pile





Fake fur


NOTE

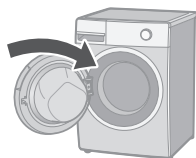

■ Putting blankets into the drum

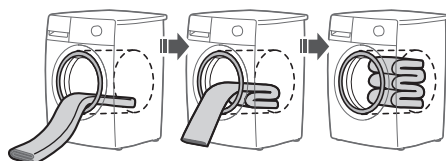 

NOTE

 


Changing Program Settings

■ Preparing

- Sort the laundry and put it into the drum. (P. 7)
- Add the detergent. (P. 10)



3 Change the program's settings.

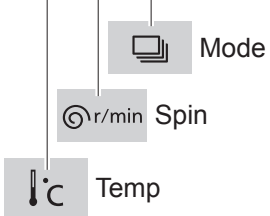

- Available options and setting ranges are different depending on the program. (P. 16)
- An alarm sounds if you select an option that is unavailable.



!c Temp

Change the washing temperature.




■ Setting guide

Low	High
● Colours 	● White 
● Lightly Soiled 	● Heavily Soiled 
● Easily shrinks	● Cotton



r/min Spin

Change the spin speed.

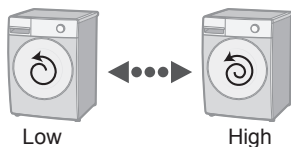

■ Setting guide

 Low	 High
● To reduce wrinkling 	● To dry more thoroughly 

3



(P. 17)

■ To change the setting while washing



Mode

Select a combination of wash, rinse and spin.



3



	*1 Wash
	*2 Rinse
	*2 Spin
	Wash and rinse
	Wash and spin
	*2 Rinse and spin

*1 Water is drained after wash process.

*2 Drains first if there is water in the drum.

Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 7)
- Add the detergent. (P. 10)



3 Change the program's settings.



Timer

Rinse+


Easy Iron

- Available options and setting ranges are different depending on the program. (P. 16)
- An alarm sounds if you select an option that is unavailable.



Timer


Set how many hours later to finish operation. (Up to 24 hours)

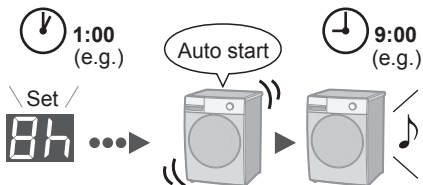


■ To check a preset time



 ■ To cancel settings



NOTE

 

- Not available: P. 17

Rinse+

Add an extra rinse.



Easy Iron

 
Gentle spindry (at 700 r/min or less) makes ironing easier.



3



3




■ To change the setting while washing



1



2

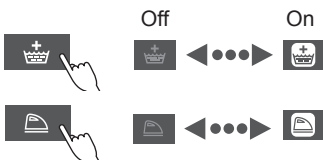


3




NOTE

- After operation ends

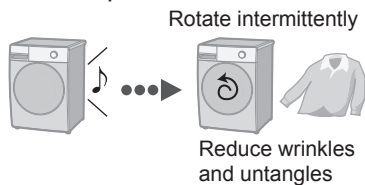

* WASH programs: Up to 30 min.

 (To take out the laundry during operation)



Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 7)
- Add the detergent. (P. 10)



3 Change the program's settings.



Auto Tub Care


Blue Ag+

- Available options and setting ranges are different depending on the program. (P. 16)
- An alarm sounds if you select an option that is unavailable.




Auto Tub Care

Add tub cleaning process.

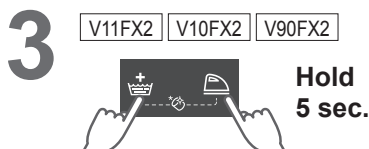

V11FG2 V10FG2

 

NOTE

- The setting is memorized.

Ag⁺ Blue Ag⁺

V11FX2 V10FX2 V90FX2

Bacteria elimination function (Max. 3 kg).



3



Goes out
(Off)

Lights
(On)

■ Service life for Ag⁺ case


- “Blue Ag⁺” works for about 300 to 350 times (for about 7 years if used once a week).
- Replace the case when the contents are decreased.



- Replace
⇒ (P. 29)



- Wash without “Ag⁺”

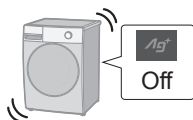

NOTE

- Do not use the water for other purposes.



Drinking



Cooking


 



- The kind of clothes, detergent, softener, and water hardness may affect the result.
- Stop use if itchy, etc.



Changing Appliance Settings

Setting the Child Lock

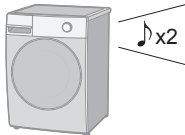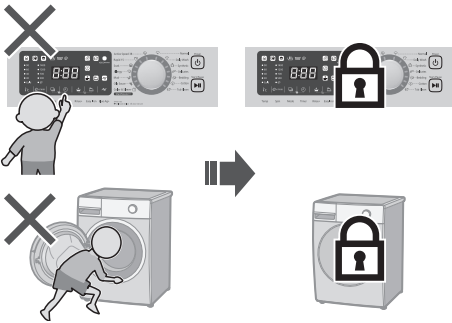

Lights
(On)


■ To cancel:

Same procedure  x4



Goes out
(Off)

Cancelling the buzzer

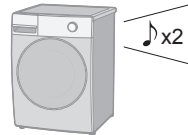


■ To reset:

Same procedure  x4

Maintenance

Water supply filter

If water does not flow smoothly

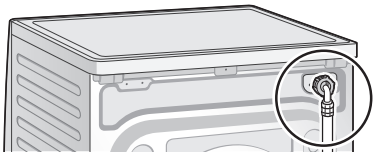

- 1

Empty
- 2


On
- 3

Select
Normal
- 4

Start 1 min. Turn off
- 5
- 6

Water supply filter
- 7
- 8
- 9


Maintenance (continued)

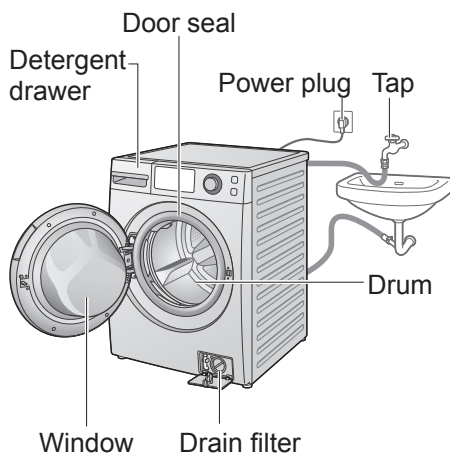

Appliance




Door seal

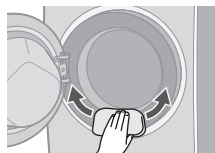

For heavy soil

 Mild kitchen detergent








NOTE



- Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.

Detergent drawer

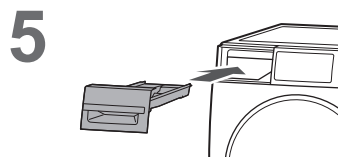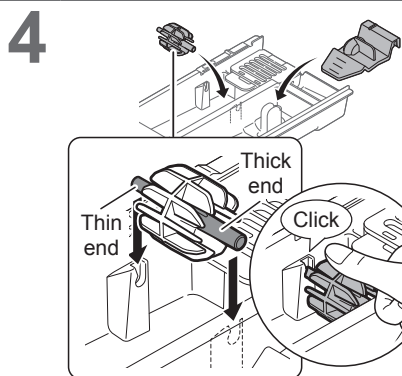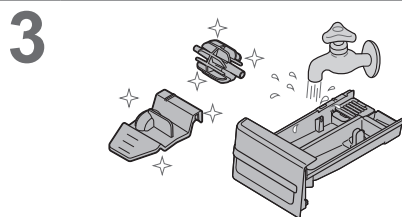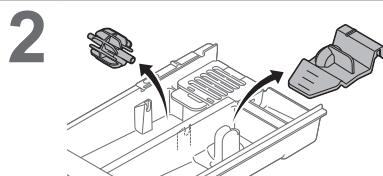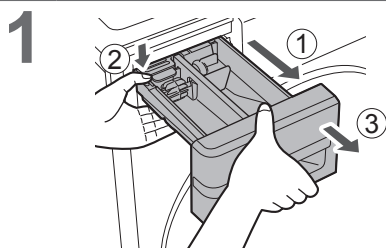


If the contents are decreased

■ Change Ag+ case


V11FX2 | V10FX2 | V90FX2

1

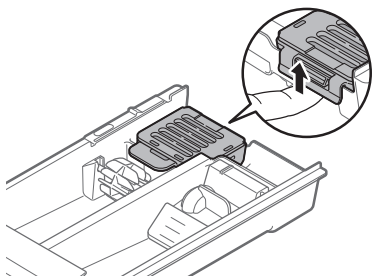

2

Exchange

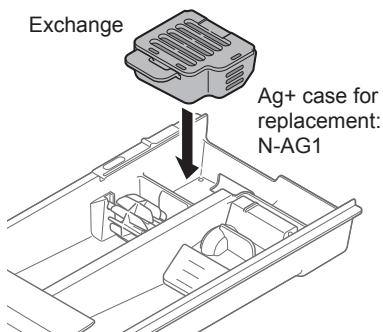

NOTE

- You cannot open Ag+ case.

Drum


Once a month or if  flashes
<Tub Clean>

1



2

Whitening bleach (chlorine bleach)

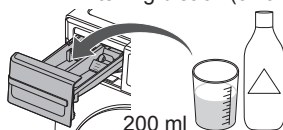

3



No clothing



4



Select

5



Start

Approx.

3:45



NOTE

- If the “Tub Clean” program is not run, the indicator  goes off when other program is run 3 times.

Maintenance (continued)

Drain filter

Be sure to drain water in the drum before this procedure.



CAUTION




Hot water
(possibly scalding water)




Turn off

2

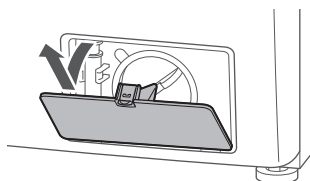


3

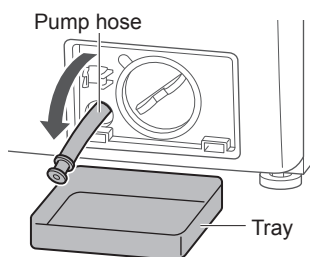

Pump hose

Tray

4

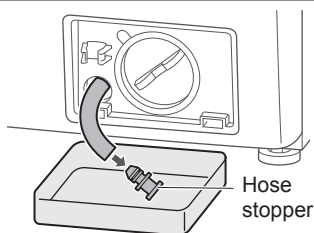


Hose
stopper

5




6

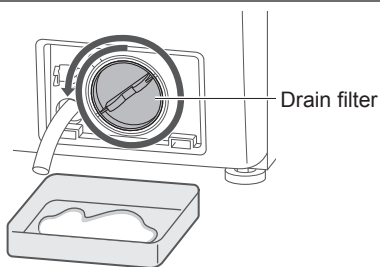

Drain filter

7

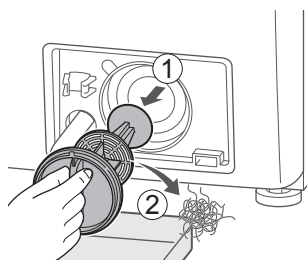


8

Replace


1



 2 Until it is in place







3

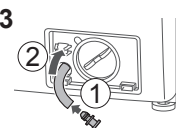




4



Troubleshooting




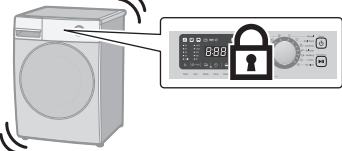
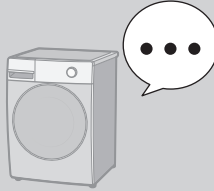
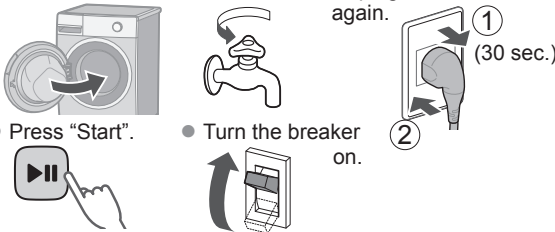
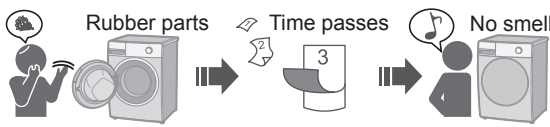
	Symptoms	Points to be checked
Main unit	Touch the buttons  No reaction 	□ Possible cause ● During an operation  □ Try ● Child Lock (P. 26) 
	No operation 	□ Check ● Power cut ● Timer  □ Try ● Close the door. ● Turn on. ● Unplug and insert again. ● Press "Start". ● Turn the breaker on. 
	Odour of rubber 	□ Possible cause  □ Try ● Tub Clean (P. 29)

Troubleshooting (continued)

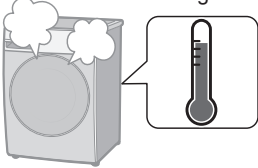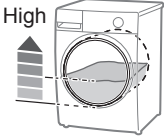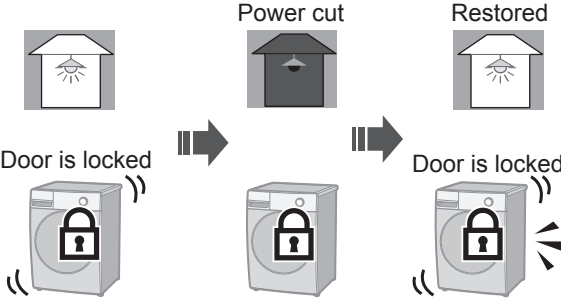	Symptoms	Points to be checked
Main unit	Door does not open 	□ Possible cause ● During an operation  Door is locked. To open the door during operation (P. 12) □ Check ● Temperature  ● Water level  □ Try ● Child Lock (P. 26)  ● During an operation 1  Turn off 2  On 3  (P. 21) Spin 4 Open  (NOTE) 







	Symptoms	Points to be checked
Wash	During a wash   Water drainage	☐ Possible cause Excess foam  Foam ⇒ Foam detection function  Auto drainage ⇒  Auto water supply
	During the spin process  Stop ⇒  Rotates several times	☐ Possible cause Unevenness  Auto correct ⇒ Stop ⇒ Evenness  Auto correct ☐ Try Too light  ⇒ Add 1 or 2  Bath towels
Rinse/Spin	After washing  Foam or water	☐ Try Wipe  ⇒  ⇒ 
	Spin changes to rinse  Spin ⇒  Rinse	☐ Possible cause ● If clothes are uneven, this appliances automatically corrects unevenness using the rinse process.  ⇒ 

  Troubleshooting (continued)

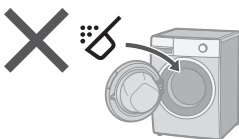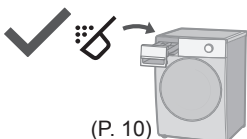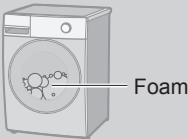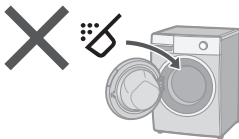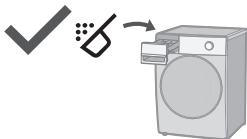

	Symptoms	Points to be checked
Detergent and foam	After washing 	☐ Check   (P. 10)
		☐ Possible cause ● The amount of foam varies. ● Temperature ● Water level ● Water softness   
	Not enough 	☐ Check ● Powder detergent   ● Too little detergent ● Low foam detergent ● Heavily soiled ● Load too large    
	Too much 	☐ Check ● Too much detergent 

	Symptoms	Points to be checked
Laundry	If the laundry yellows  Yellow	☐ Try V11FX2 V10FX2 V90FX2  Off   White  +  60 °C

 Troubleshooting (continued)

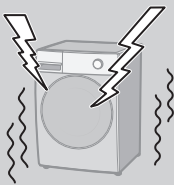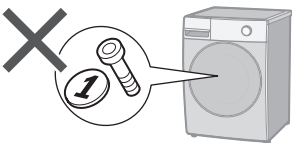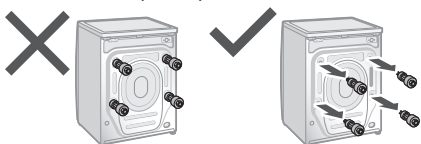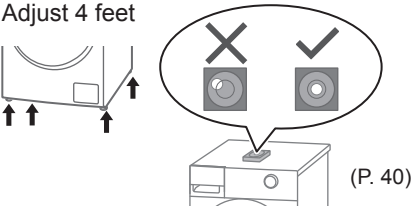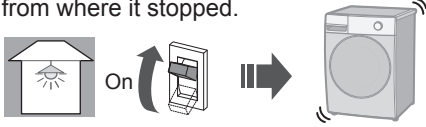	Symptoms	Points to be checked
Noise	Unusual noise (or vibration) 	☐ Check ● Metal items  ● Anchor bolts (P. 40)  ● Slope or an unstable surface  ● Adjust 4 feet  (P. 40)
Others	Power cut  Breaker Off 	☐ Check ● When the power recovers, operation resumes from where it stopped. 

  Error Display

Error Display	Points to be checked		
U 11 Unable to drain	1 Check 	2 	3  Start  (P. 30)
U 12 Door is open	1 	2  Start	
U 13 Unable to spin	1 Check 	2 	3  Start Uneven  Even  Unstable or inclined  Stable  Too much  Reduce  Too little  Add 
U 14 Unable to supply water	1 Check 	2 	3  Start Water outage  Turned off  Water supply filter (P. 27) 


Choosing the Right Location




Make sure to ask a service person for installation.

- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.

Appliance dimensions

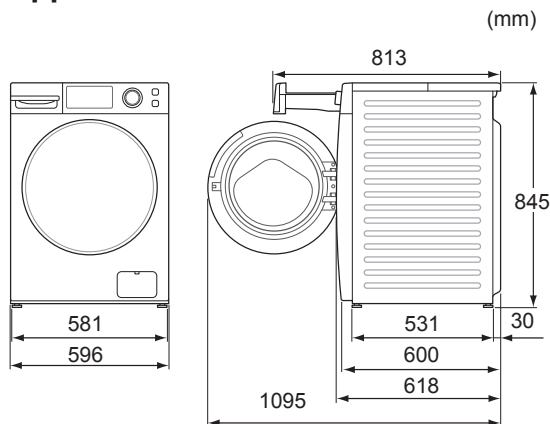


■ Set-in installation

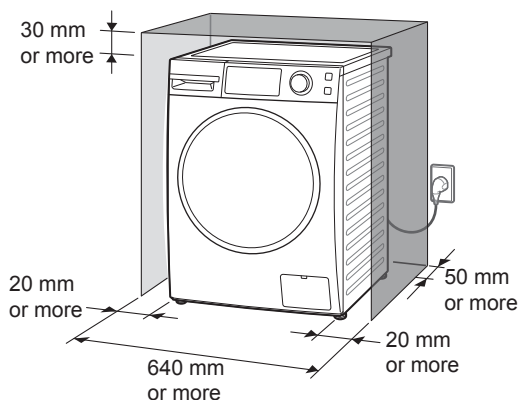

- Do not let the metallic portions of the appliance come into contact with metal sinks or other appliances.


Check the location.

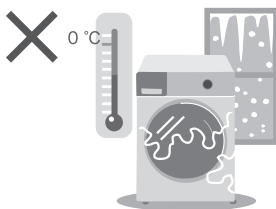



Moving and Installing

Carrying the appliance

Do not do it alone.




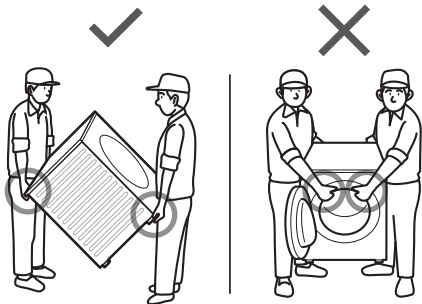


Installation of bottom cover

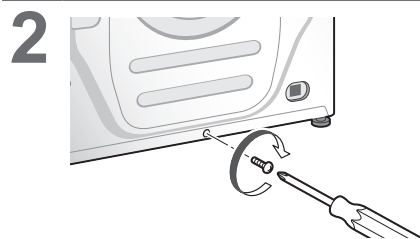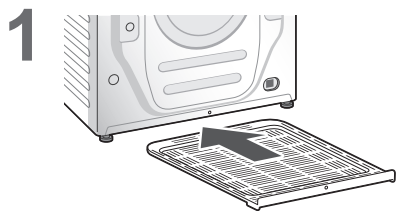


Moving and Installing (continued)


Removing the anchor bolts

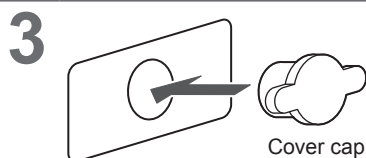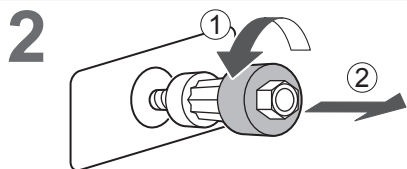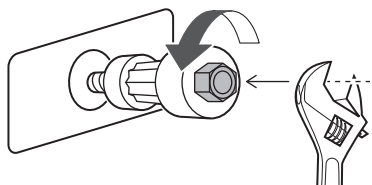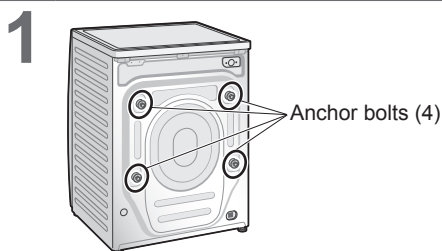




NOTE

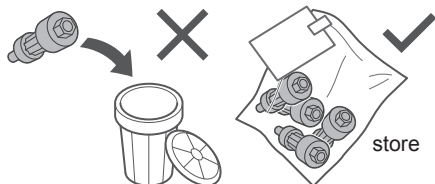


■ Moving the appliance again

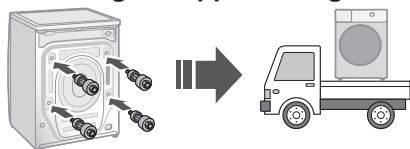

Levelling the appliance

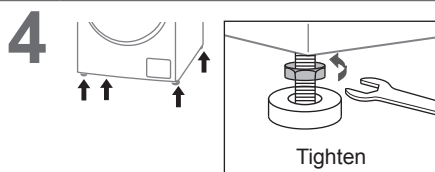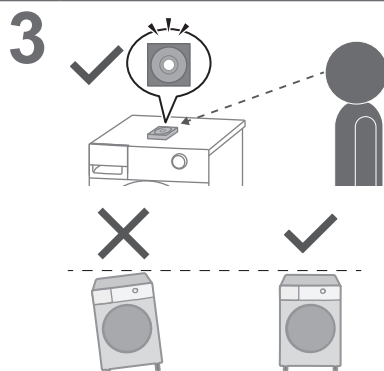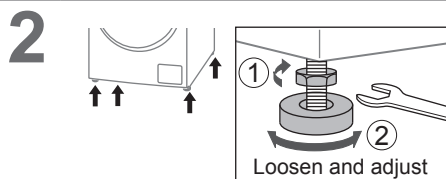

NOTE

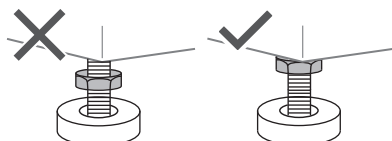


Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord


Right side connection

(cm)

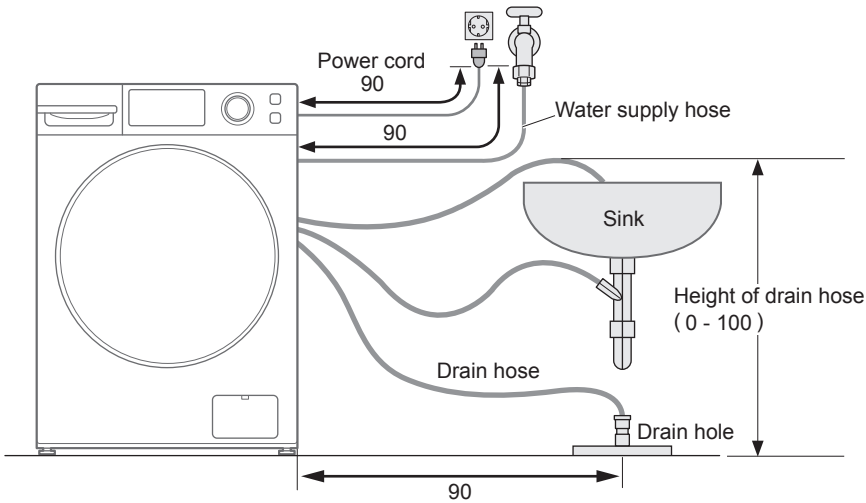

Left side connection

(cm)

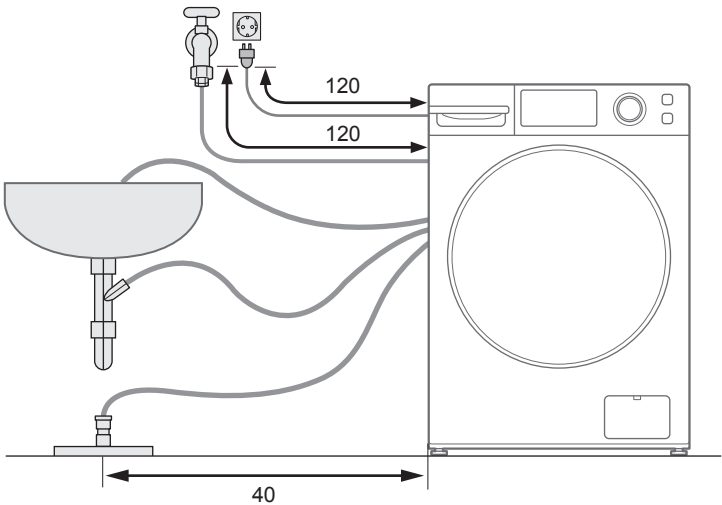




Connecting the Hoses (continued)

Water supply hose

■ Connecting the water supply hose

⚠ CAUTION


- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.

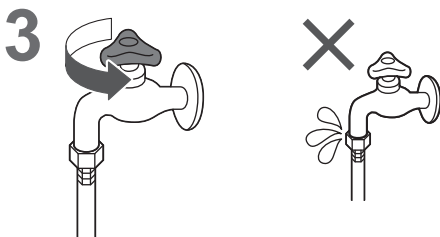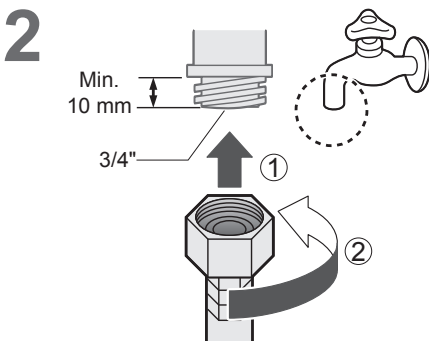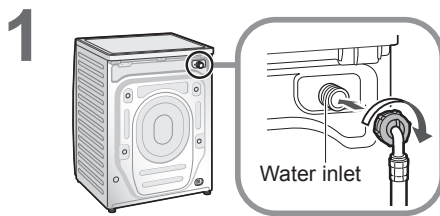


Drain hose

■ Draining to a sink or wash basin

NOTICE

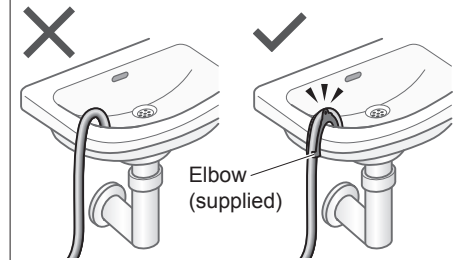


■ Draining to a stand pipe

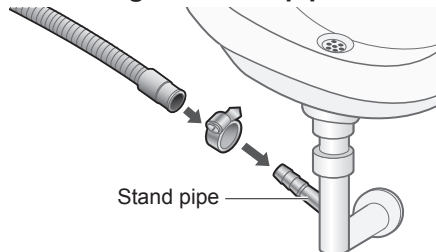

■ Draining to a drain hole



NOTE

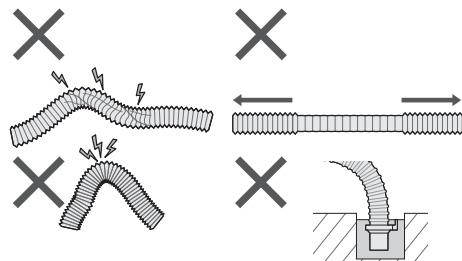


Test Run

1



2

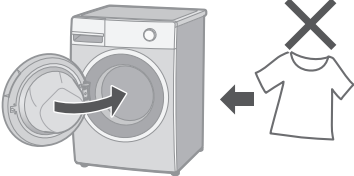

3







4



5

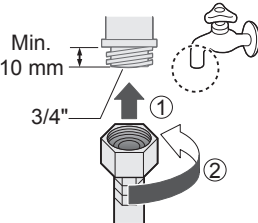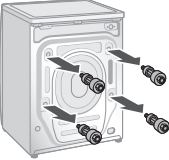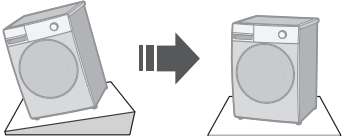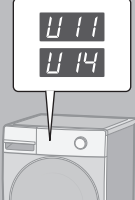

Checking after test run	
Problem	Causes and Measures
Water leaks 	Connect the water supply hose properly 
	- Remove the anchor bolts (P. 40)  - Install stably 
Error display 	See P. 37.


Specifications

	V11FX2	V11FG2	V10FX2	V10FG2	V90FX2
Rated voltage (V)	220 - 240				
Rated frequency (Hz)	50				
Maximum energy rated power input (W)	1740 - 2000				
Maximum spin speed (r/min)	1400				
Product dimensions (W x D x H) (mm)	596 × 600 × 845				
Product weight (kg)	73				
Maximum mass of dry cloth (Wash) (kg)	11.0		10.0		9.0
Pressure of tap water (MPa)	0.01 - 1				

Arahan Pengendalian & Pemasangan

Mesin Basuh
(Penggunaan Rumah)

No. Model **NA-V11FX2 NA-V10FX2 NA-V90FX2**
NA-V11FG2 NA-V10FG2

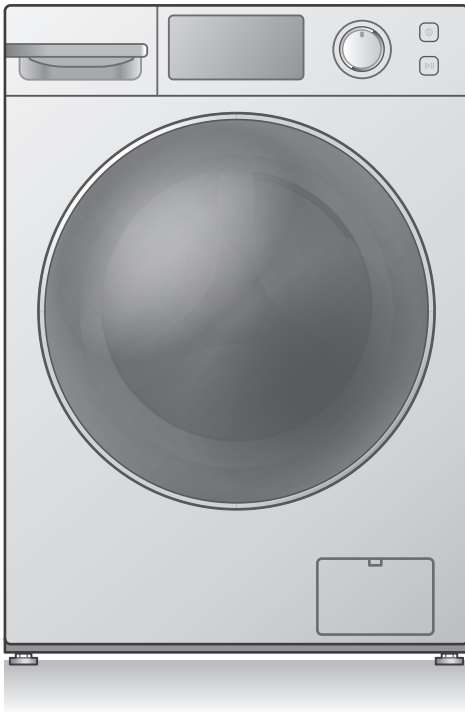

MY

Kandungan

Langkah Berjaga-jaga Keselamatan	2	
Memeriksa Mesin Basuh Anda	6	
Sebelum Mencuci	7	
Panel Kawalan	8	
Detergen	10	
Mencuci	12	
Senarai Program	14	
Butiran Program	16	
Tips Mencuci	18	
Mengubah Tetapan Proses	20	
Mengubah Tetapan Mesin	26	
Penyelenggaraan	27	
Penyelesaian Masalah	31	
Paparan Ralat	37	
Pemasangan	Memilih Lokasi yang Betul	38
	Memindah dan Memasang	39
	Menyambung Hos	41
	Memandu Uji	43
	Spesifikasi	44

Terima kasih kerana membeli produk ini.

- Untuk mendapatkan prestasi dan keselamatan yang optimum, sila baca arahan ini dengan teliti sebelum menggunakan.
- Simpan manual ini untuk rujukan pada masa akan datang.



AWW9901C7QC0-0C5

Langkah Berjaga-jaga Keselamatan



AMARAN

Boleh mengakibatkan kecederaan serius atau kematian

Kanak-kanak tidak boleh menggunakannya keseorangan.



- Perlengkapan ini bukan untuk kegunaan individu (termasuk kanak-kanak) yang kurang keupayaan fizikal, deria atau mental, atau kurang pengalaman atau pengetahuan, kecuali jika mereka telah diberikan penyeliaan atau arahan berkaitan penggunaan perlengkapan ini oleh individu yang bertanggungjawab keatas keselamatan mereka.
- Kanak-kanak harus diperhatikan untuk memastikan yang mereka tidak bermain dengan perlengkapan ini.

Menetapkan Kunci Kanak-kanak. (Hlm. 26)




Boleh menyebabkan api atau kejutan elektrik

Jangan sentuh dengan tangan yang basah.




Jangan pegang atau tarik kabel.

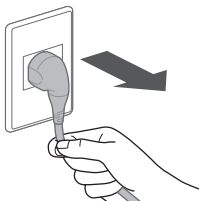

Jangan guna.





Penyesuai palam

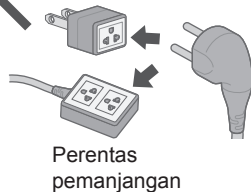

Perentas pemanjangan

 Masukkan sepenuhnya.

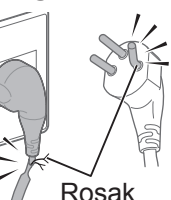


Rosak


Jangan guna.

- Jika kord kuasa rosak, ia mesti diganti oleh pengilang, wakil servisnya, atau orang yang berkeelayakan bagi mengelakkan bahaya.


Jika kegagalan dan rosak pada kabel kord kuasa, berhenti menggunakan dan hubungi juruteknik elektrik.

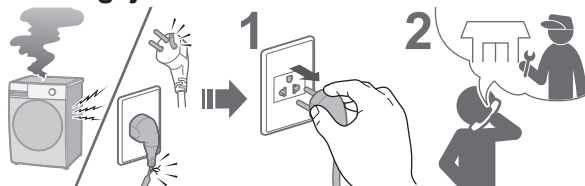

Habuk yang terkumpul boleh menyebabkan kebakaran.

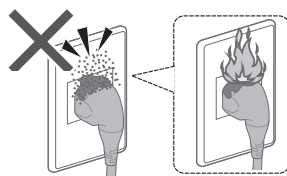


Masukkan palam dengan kemas. Hubungi juruteknik elektrik untuk soket baharu.

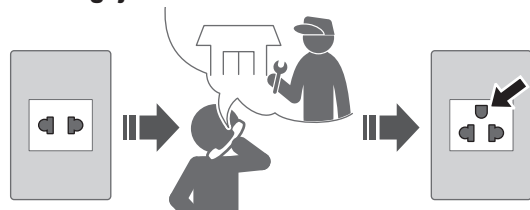

Lap palam kuasa secara berkala.




 Gunakan soket yang bersesuaian untuk peralatan ini.



- Bentuk palam, bentuk soket dan keperluan kadaran adalah berlainan mengikut rantau.

Jauhkan daripada bahan mudah terbakar.

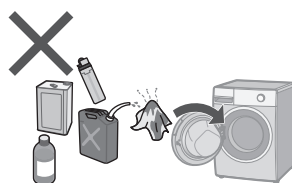

Boleh menyebabkan kegagalan

Jangan buka, baiki atau ubah suai mesin ini sendiri.



Langkah Berjaga-jaga Keselamatan (sambungan)



AWAS

Boleh menyebabkan kecederaan

 
Berhati-hati agar jari anda tidak terperangkap.



Jangan panjat ke atas mesin basuh ini.



Jangan sentuh semasa ia panas.




Boleh menyebabkan kebocoran air

Tutup pili air.



Gunakan set hos baharu.

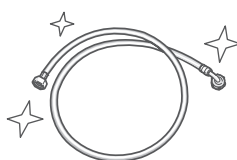


- Anda hendaklah menggunakan set hos baru yang dibekalkan dengan mesin basuh ini dan jangan gunakan semula set hos yang lama.


■ Untuk berat maksimum kain kering dan tekanan air paip, lihat halaman 44.

Boleh menyebabkan kegagalan


Jauhi daripada haba dan sinaran matahari secara langsung.

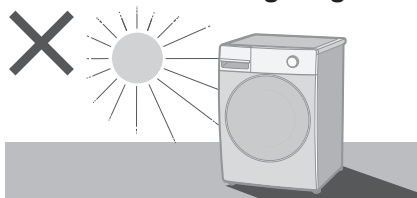

Keluarkan bolt penambat sebelum operasi.

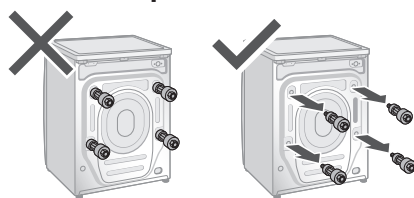

Jangan halang.

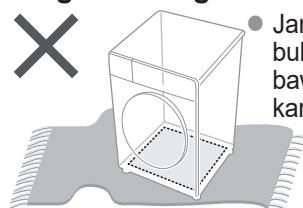


● Jangan halang bukaan muka bawah dengan karpet, dll.

Jangan gunakan air panas.



Untuk pakaian yang boleh dibasuh mesin sahaja.

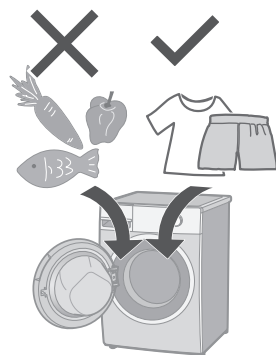

- Perkakas ini adalah untuk kegunaan rumah. Perkakas ini bukan untuk digunakan di:
 - kawasan dapur kakitangan di kedai, pejabat dan persekitaran kerja yang lain;
 - rumah ladang;
 - klien di hotel, motel dan persekitaran jenis tempat tinggal yang lain;
 - persekitaran penginapan dan sarapan;
 - kawasan untuk penggunaan bersama di blok atau rumah pangsa atau di kedai dobi layan diri.

 
Jangan basuh pakaian yang berlumuran dengan banyak minyak.



Memeriksa Mesin Basuh Anda

Nama alat

Laci detergen (Hlm. 10)



Panel kawalan
(Hlm. 8)

Pintu

Dram

Engsel

Penutup pintu

Kaki boleh laras
(Hlm. 40)


Penutup penapis
saliran (Hlm. 30)

Hos saliran
(Hlm. 41, 42)

Saluran masuk air
(Hlm. 42)

Bolt pengikat
(Hlm. 40)

Kabel dan palam kuasa*
*Bentuk palam berbeza
mengikut rantau.

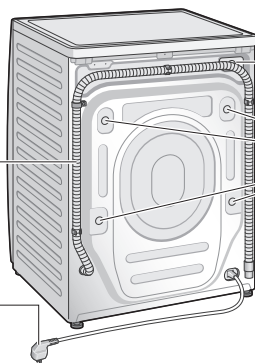

Aksesori


☐ Siku (1) (Hlm. 42)




☐ Tudung penutup (4) (Hlm. 40)



☐ Hos bekalan air (1) (Hlm. 41, 42)

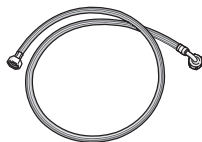

☐ Penutup bawah (1) /Skrus (1) (Hlm. 39)


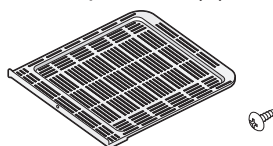


Sebelum Mencuci


Menyediakan pakaian

Sebelum memasukkan pakaian dalam dram

- Keluarkan objek asing.
- Gunakan jaring pakaian untuk pakaian kecil dan yang mudah rosak.

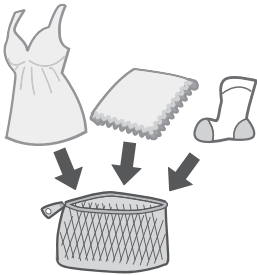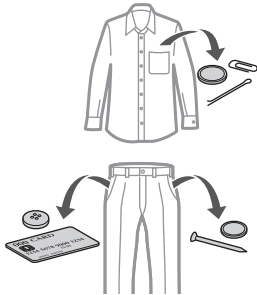


Pemeriksaan pra-cucian

 

Berbalik



Pakaian mungkin menggosok

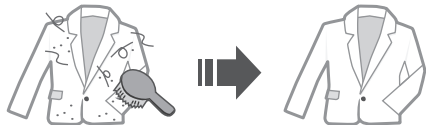


Lampin kertas

- Patuhi label penjagaan.



- Cuci berasingan.

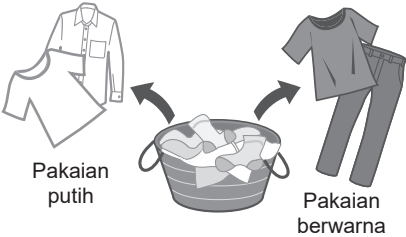

- Prarawat untuk kotoran yang degil.



NOTA

- Program “Mud / Oily Sauce / Collar & Sleeve (Lumpur / Sos Berminyak / Kolar & Lengan)” (Hlm. 15) disyorkan untuk menanggalkan kotoran.

Panel Kawalan

- Imej dalam arahan ini adalah untuk NA-V11FX2, melainkan jika diberitahu.

Paparan


Kunci

- Pintu dikunci
- Pintu dan butang semua dikunci (Child Lock (Kunci Kanak-kanak)) (Hlm. 26)

Proses

- Cuci
- Bilas
- Putar

Lampu Tambah Cucion:
Anda boleh tambah pakaian apabila menyala. (Hlm. 12)

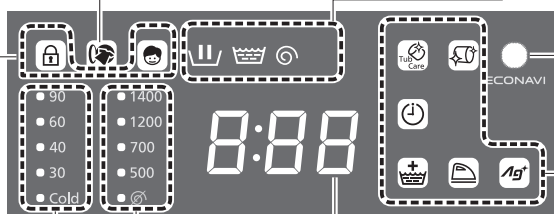

Lampu ECONAVI
(Hlm. 18)

Lampu fungsi pilihan

- (Hlm. 24)
- (Hlm. 23)
- (Hlm. 29)
- (Hlm. 23)
- (Hlm. 22)
- (Hlm. 25)

Kelajuan putaran

: Tus sahaja
(Tanpa putar)

Suhu air

Baki masa



Paparan ralat (Hlm. 37)




■ NA-V11FG2/NA-V10FG2



Auto Tub Care
(Penjagaan Tab Automatik) (Hlm. 24)

Butang Kawalan

■ NA-V11FX2/NA-V10FX2/NA-V90FX2

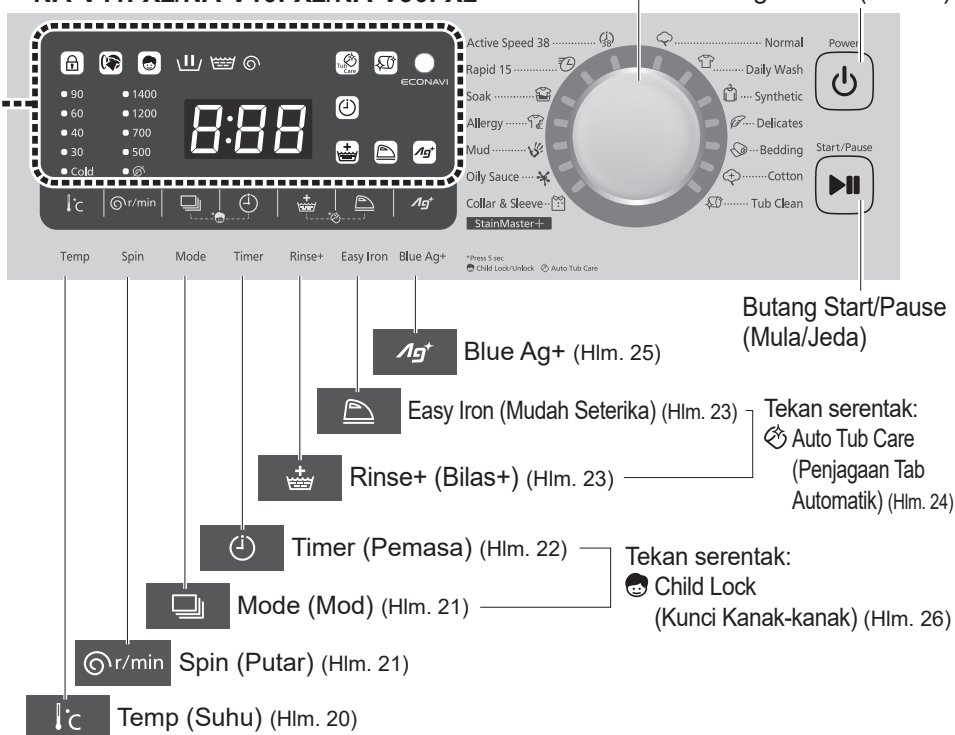

Operasi sentuh

Butang operasi adalah kapasitif (Kecuali /).

- Jika terkena air, detergen atau pelembut, tutup dan lap dengan tuala dsb. serta-merta. (Penyebab kerosakan)



NOTA

- Tutup ➡ buka semula (3 saat) Buka
- Tiada operasi ➡ kuasa ditutup automatik (Tidak ditekan) Kuasa ditutup automatik 10 min.
- Jika berlaku kegagalan kuasa ➡ Jika kuasa pulih, operasi akan bersambung di mana ia terhenti. (Mula Semula Auto)



Detergen

- Ikut arahan di setiap bungkusannya.

Detergen

Detergen buih rendah

- Untuk mencegah serbuk detergen tertinggal di dalam laci detergen:

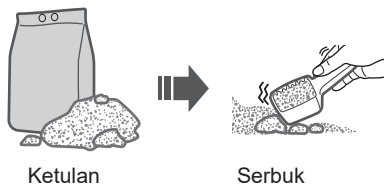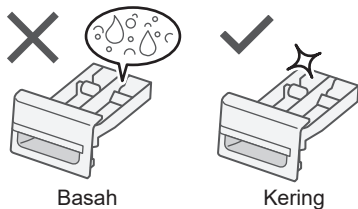

Detergen

Detergen serbuk

Detergen cecair




Peluntur




Pelembut kain



Pelembut terpisah atau berketul

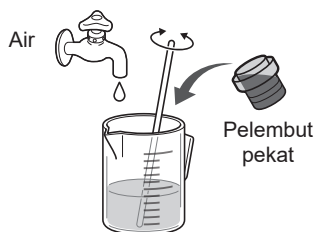

NOTA

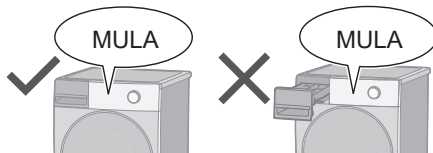


Bekas Ag+ (Hlm. 25, 29)

V11FX2

V10FX2



V90FX2

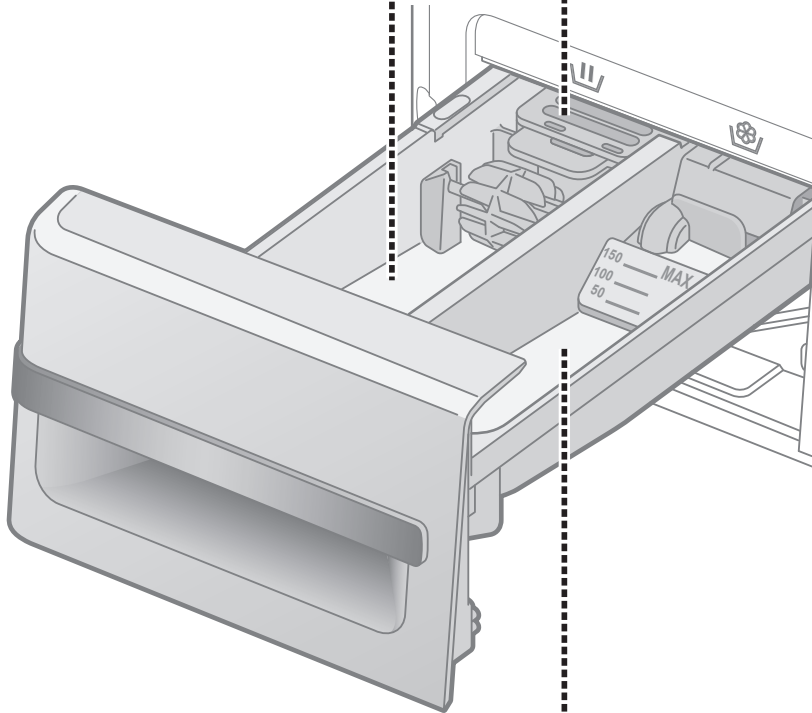

Pelembut kain




  Maks. 150 ml



Mencuci

Kaedah Asas

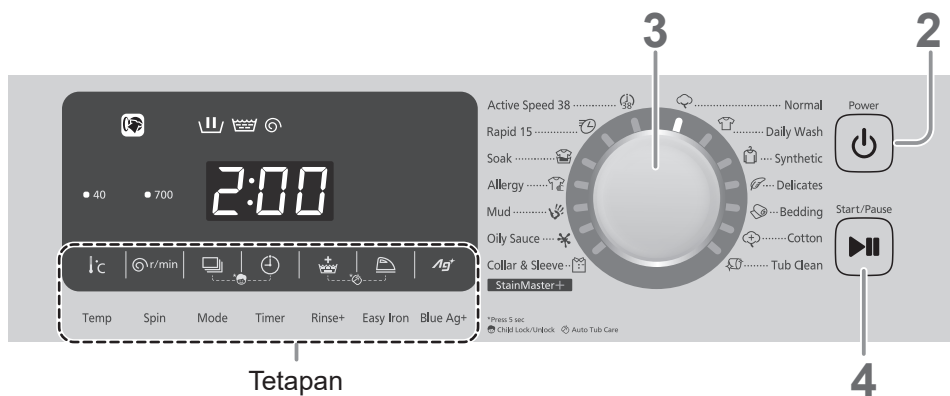

NOTA

■ Jangan biarkan pakaian tersangkut di pintu.




■ Jangan terlebih isi pakaian.



■ Buka pintu semasa operasi

(Anda boleh tambah pakaian apabila menyala.)

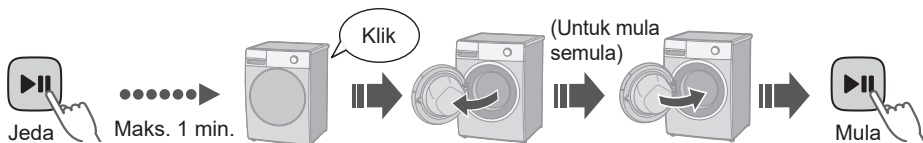


NOTA

● Pintu tidak boleh dibuka (Hlm. 32)



1

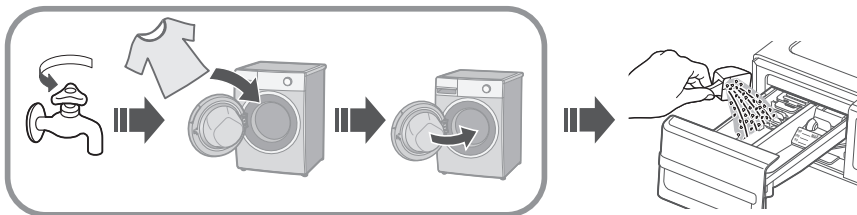

2



3



Pilih program.
(Hlm. 14)

■ **Mengubah Tetapan Proses.**

Tetapan

Temp (Suhu) (Hlm. 20)	Spin (Putar) (Hlm. 21)	Mode (Mod) (Hlm. 21)	Timer (Pemasa) (Hlm. 22)
Rinse+ (Bilas+) (Hlm. 23)	Easy Iron (Mudah Seterika) (Hlm. 23)	Blue Ag+ <u>V11FX2</u> <u>V10FX2</u> <u>V90FX2</u> (Hlm. 25)	Auto Tub Care (Penjagaan Tab Automatik) (Hlm. 24)

4



Mengukur jumlah
cucian



(30 saat)

● Kecuali program yang tidak berat (Hlm. 14)




Memaparkan masa yang
diperlukan (dikira semula)



(cth.)



5

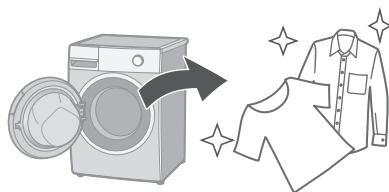

Senarai Program

Program	Huraian	Muatan maks (kg)			Masa keseluruhan
		V11FX2/ V11FG2	V10FX2/ V10FG1	V90FX2	
 Normal (Biasa)	Pakaian harian 	11.0	10.0	9.0	2:30
 Daily Wash (Cucian Harian)	Pakaian harian (Lebih pantas daripada program “Normal (Biasa)”) 	11.0	10.0	9.0	1:30
 Synthetic (Sintetik)	Serat kimia 	5.0			1:05
 Delicates (Mudah rosak)	Mencuci dengan 	2.0			0:50
 Bedding (Cadar)	Item besar 	3.0			1:30
 Cotton (Kapas)	Cucian lembut dengan masa tambahan 	11.0	10.0	9.0	3:00
 Tub Clean (Cucian Tab)	Mencuci dram. 	Tiada			3:45

- **Jumlah masa ialah kira-kira** (Apabila kadar bekalan air standard ialah 15 L / min). Untuk suhu air lalai setiap program.
- Program di mana muatan tidak ditimbang selepas menekan “Start/Pause (Mula/Jeda)”: Synthetic (Sintetik), Delicates (Mudah rosak), Bedding (Cadar), Rapid 15 (Pantas 15)

Program	Huraian	Muatan maks (kg)			Masa keseluruhan
		V11FX2/ V11FG2	V10FX2/ V10FG1	V90FX2	
 Active Speed 38 (Aktif Kelajuan 38)	Muatan kecil 	5.0			0:38
 Rapid 15 (Pantas 15)	Muatan kecil berkotoran ringan 	2.0			0:15
 Soak (Rendam)	Pakaian sangat kotor 	5.0			2:00
 Allergy (Alahan)	Untuk kutu dan debunga 	11.0	10.0	9.0	3:15
 Mud (Lumpur)		11.0	10.0	9.0	3:20
 Oily Sauce (Sos berminyak)		11.0	10.0	9.0	3:00
 Collar & Sleeve (Kolar & Lengan)		11.0	10.0	9.0	3:10

Butiran Program

Tetapan Program	Tetapan auto		
	Temp (Suhu) (°C)	Spin (Putaran) (r/min)	
 Normal (Biasa)	40	1200	
 Daily Wash (Cucian Harian)	40	1200	
 Synthetic (Sintetik)	30	700	
 Delicates (Mudah rosak)	30	500	
 Bedding (Cadar)	Cold	700	
 Cotton (Kapas)	60	1400	
 Tub Clean (Cucian Tab)	40	1200	
 Active Speed 38 (Aktif Kelajuan 38)	40	1200	
 Rapid 15 (Pantas 15)	Cold	1200	
 Soak (Rendam)	40	1200	
 Allergy (Alahan)	90	1200	
 Mud (Lumpur)	40	1200	
 Oily Sauce (Sos Berminyak)	40	1200	
 Collar & Sleeve (Kolar & Lengan)	40	1200	

“Cold” bermaksud “Sejuk”.

NOTA

- Untuk pakaian kotor yang normal pada kapasiti berkadar, kami syorkan untuk guna “Cotton (Kapas), 60 °C, 1400 r/min” yang telah diuji menurut IEC 60456 dalam aspek kecekapan tenaga dan air.
- Suhu air sebenar mungkin berbeza daripada suhu kitaran yang dinyatakan.
- Keputusan ujian bergantung kepada tekanan air, keliatan air, suhu air masuk, suhu bilik, jenis dan jumlah muatan, tahap kekotoran, detergen yang digunakan, naik turun bekalan elektrik dan pilihan tambahan yang dipilih.


Julat tetapan		Fungsi pilihan					
Temp (Suhu) (°C)	Spin (Putaran) (r/min)	Mode (Mod)	Timer (Pemasa)	Rinse+ (Bilas+)	Easy Iron (Mudah Seterika)	Blue Ag+	Auto Tub Care (Penjagaan Tab Automatik)
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
Cold, 30, 40	 500, 700, 1200	✓	✓	✓	✓	✓	✓
Cold, 30, 40	 500	✓	—	✓	—	✓	—
Cold, 30	 500, 700	✓	✓	✓	—	✓	—
Cold, 30, 40, 60	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	1200	—	—	—	—	—	—
Cold, 30, 40	 500, 700, 1200, 1400	✓	✓	—	✓	✓	✓
Cold	 500, 700, 1200	—	✓	—	—	—	—
Cold, 30, 40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
60, 90	 500, 700, 1200	—	✓	✓	✓	—	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓
40	 500, 700, 1200, 1400	✓	✓	✓	✓	✓	✓

Blue Ag+:
V11FX2 / V10FX2 / V90FX2

Tips Mencuci

ECONAVI

- Program “Normal (Biasa)” sahaja

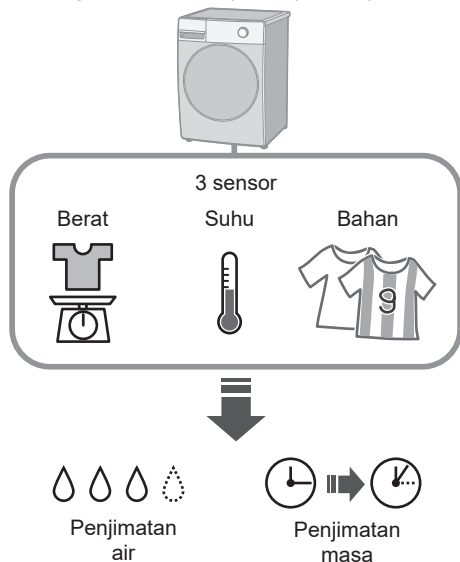

■ Lampu penunjuk



Mengesan



ECONAVI didayakan




ECONAVI dinyahdayakan

Delicates (Mudah rosak)


■ Semasa mencuci

- Untuk membilas dengan lengkap, gunakan fungsi “Rinse+ (Bilas+)”.
(Hlm. 23)

NOTA

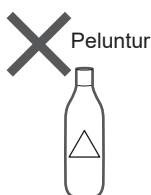

Peluntur

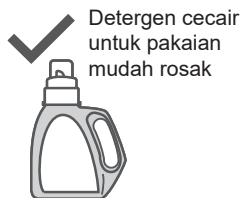

Detergen cecair
untuk pakaian
mudah rosak

■ Selepas operasi tamat




Keluarkan
dengan segera


Bedding (Cadar)

■ Item boleh dicuci


- (Basuh) ● (Basuh tangan)
- 100 % kapas atau 100 % sintetik

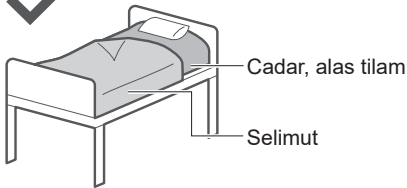

■ Masukkan selimut ke dalam dram

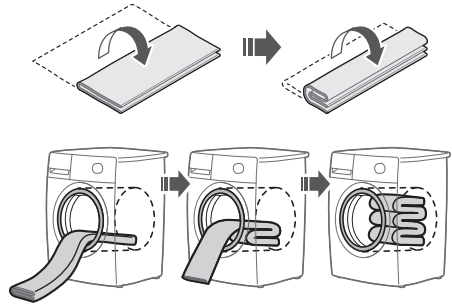

■ Item tidak boleh dicuci

 

Selimut elektrik



Bulu



Sutera

 
 


Longgokan panjang




Bulu tiruan

NOTA





NOTA

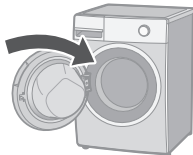

Mengubah Tetapan Proses

■ Menyediakan

- Susun pakaian dan masukkan ke dalam dram. (Hlm. 7)
- Tambah detergen. (Hlm. 10)

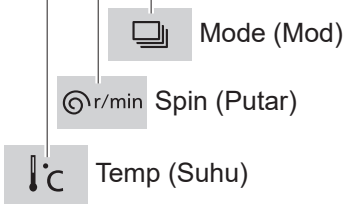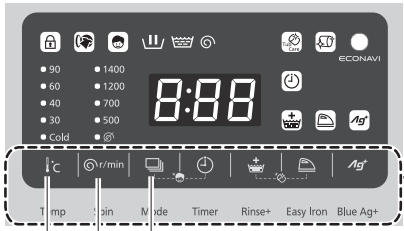

- Pilihan dan julat tetapan yang tersedia adalah berbeza bergantung kepada program. (Hlm. 16)
- Penggera berbunyi jika anda memilih pilihan yang tidak tersedia.



Temp (Suhu)

Mengubah suhu cucian




■ Panduan tetapan

 Rendah	 Tinggi
● Warna 	● Putih 
● Sedikit Kotor 	● Sangat Kotor 
● Mudah kecut	● Kapas



r/min **Spin (Putar)**


Ubah kelajuan putaran

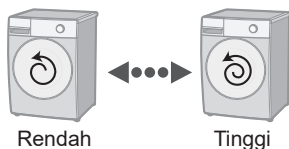

■ Panduan tetapan

 Rendah	 Tinggi
● Mengurangkan kedutan 	● Untuk mengeringkan lebih menyeluruh 

 3



(Hlm. 17)

■ To mengubah tetapan semasa mencuci



Mode (Mod)

Pilih kombinasi cucian, bilas dan putaran.



3



 *1	Cuci
 *2	Bilas
 *2	Putar
	Cuci dan bilas
	Cuci dan Putar
 *2	Bilas dan putar

*1 Air dikeluarkan selepas proses cucian

*2 Keluarkan air dahulu jika ada air di dalam dram.

Mengubah Tetapan Proses (sambungan)

■ Menyediakan

- Susun pakaian dan masukkan ke dalam dram. (Hlm. 7)
- Tambah detergen. (Hlm. 10)



Timer (Pemasa) 

Rinse+ (Bilas+) 


Easy Iron (Mudah Seterika) 

- Pilihan dan julat tetapan yang tersedia adalah berbeza bergantung kepada program. (Hlm. 16)
- Penggera berbunyi jika anda memilih pilihan yang tidak tersedia.



Timer (Pemasa)


Tetapkan berapa jam kemudian untuk selesaikan operasi (Sehingga 24 jam)

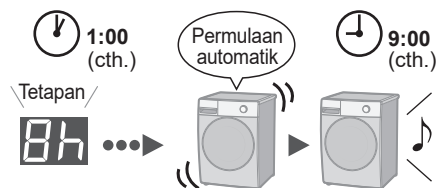

■ Untuk periksa masa pratetap



 ■ Untuk batalkan tetapan



NOTA



Semua petunjuk dimatikan kecuali



- Tidak tersedia: Hlm. 17

 
Rinse+ (Bilas+)

Tambah bilasan ekstra



Easy Iron (Mudah Seterika)

Putar lembut (pada 700 r/min atau kurang) memudahkan seterika.



3



3



■ To mengubah tetapan semasa mencuci



1



2



3



NOTA

- Selepas operasi tamat

Pusingkan sekejap-sekejap



* Program CUCIAN: Sehingga 30 min.

(Untuk mengeluarkan pakaian semasa operasi)



Mengubah Tetapan Proses (sambungan)

■ Menyediakan

- Susun pakaian dan masukkan ke dalam dram. (Hlm. 7)
- Tambah detergen. (Hlm. 10)



Auto Tub Care
(Penjagaan Tab Automatik)

Blue Ag+

Ag+

- Pilihan dan julat tetapan yang tersedia adalah berbeza bergantung kepada program. (Hlm. 16)
- Penggera berbunyi jika anda memilih pilihan yang tidak tersedia.



Auto Tub Care (Penjagaan Tab Automatik)

Tambah proses pembersihan tab.



V11FG2 V10FG2



 Padam
(Tutup)

 Lampu
(Buka)


NOTA

- Tetapan diingati.

Ag+ Blue Ag+

V11FX2 V10FX2 V90FX2

Fungsi membunuh bakteri (Maks. 3 kg).

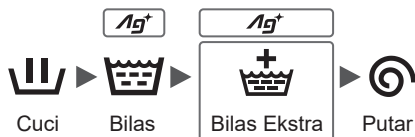

3



Padam
(Tutup)



Lampu
(Buka)

NOTA

- Jangan guna air tersebut untuk tujuan.



Minum



Memasak

■ Hayat perkhidmatan untuk bekas Ag+

- “Blue Ag+” berkesan sehingga kira-kira 300 ke 350 kali (selama kira-kira 7 tahun jika digunakan seminggu sekali).
- Tukar bekas jika kandungan berkurang.

 


- Tukar

⇒ (Hlm. 29)



- Cuci tanpa “Ag+”






- Jenis pakaian, detergen, pelembut, dan keliatan air boleh mempengaruhi hasil.
- Berhenti menggunakan jika rasa gatal, dsb.



Mengubah Tetapan Mesin

 Menetapkan Kunci Kanak-kanak

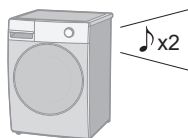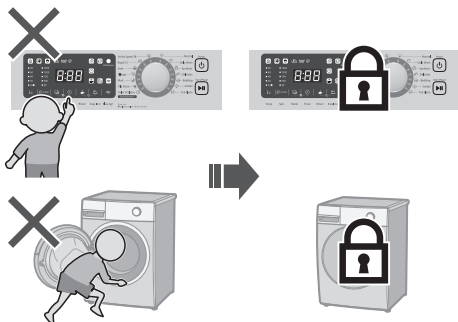

Lampu
(Buka)


■ Untuk batalkan:

Prosedur yang sama



Padam
(Tutup)

Membatalkan pembaz

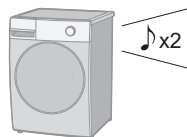







■ Untuk menetapkan semula:

Prosedur yang sama


Penyelenggaraan

Penapis bekalan air

Sekiranya air tidak mengalir dengan lancar

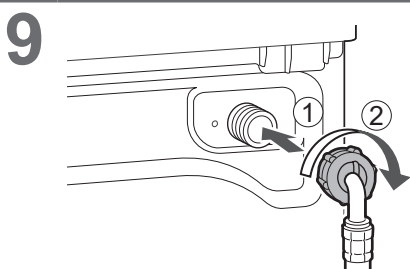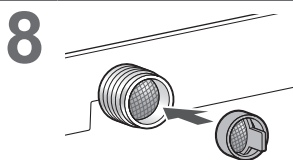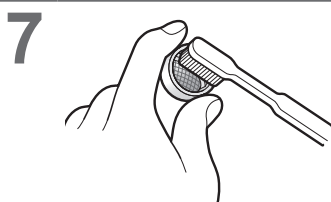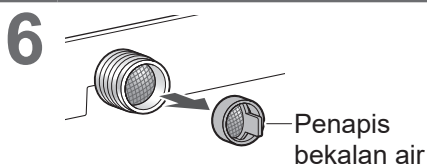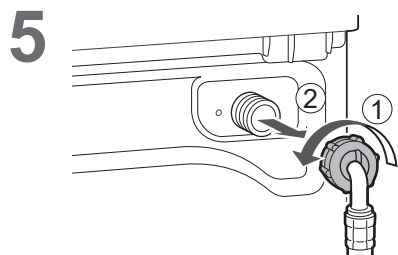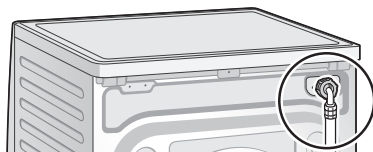


Penyelenggaraan (sambungan)

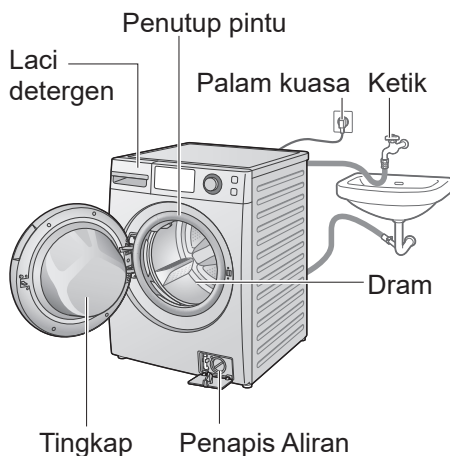

Mesin




Penutup pintu

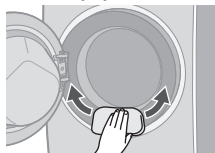

Untuk tanah berat

 Detergen dapur yang sederhana




NOTA




- Do not use detergent atau pencair berpasir, atau produk yang mengandungi alkohol atau minyak parafin.

Laci deterjen


1

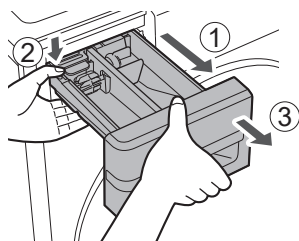


2

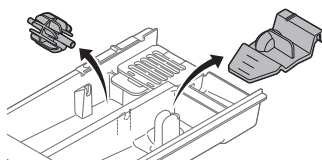


3

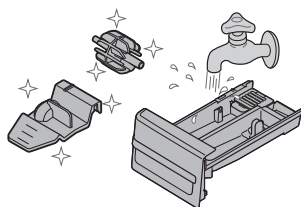

4

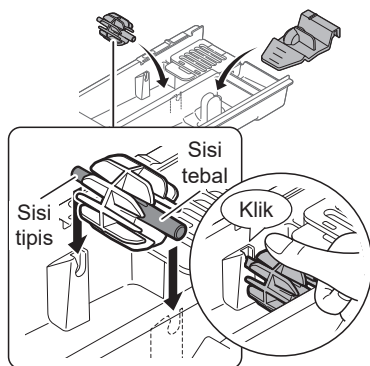

5

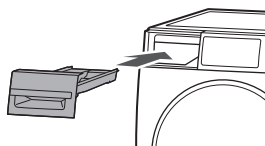


Jika kandungan berkurangan

■ Tukar bekas Ag+


V11FX2 V10FX2 V90FX2

1

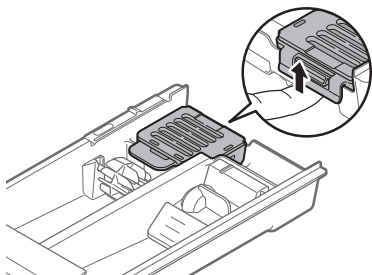

2

Tukar

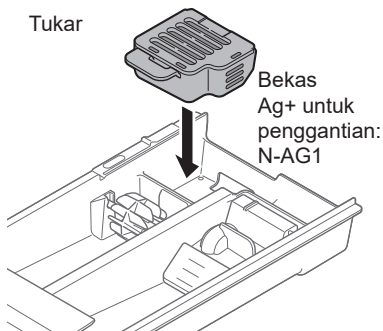

Bekas
Ag+ untuk
pengantian:
N-AG1

NOTA

- Anda tidak boleh buka bekas Ag+.

Dram


Sebulan sekali atau jika menyala
<Tub Clean (Cucian Tab)>

1



2

Peluntur peluntur (peluntur klorin)

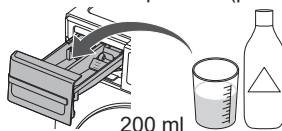

3



Tiada pakaian

4



5

Lebih kurang.
3:45



NOTA





- Jika program “Tub Clean (Cucian Tab)” tidak berjalan, penunjuk berbunyi jika program lain berjalan sebanyak 3 kali.

Penyelenggaraan (sambungan)


Penapis Aliran

Pastikan air di dalam dram
dialirkan sebelum prosedur ini.





! AWAS

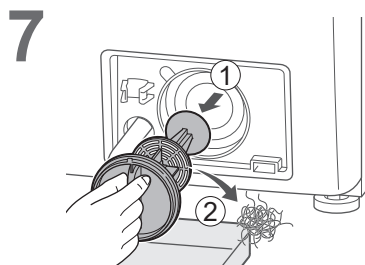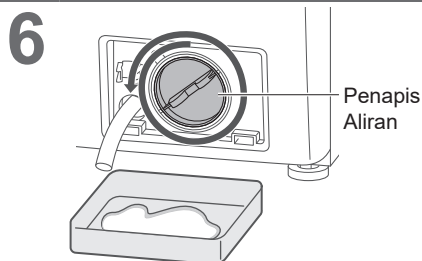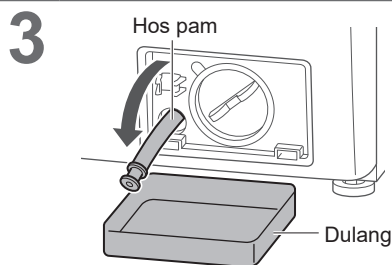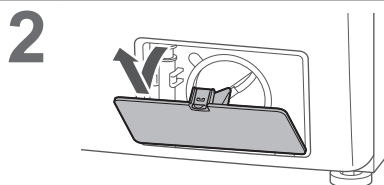

8 Tukar

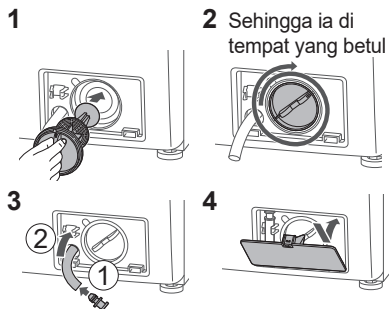


Penyelesaian Masalah



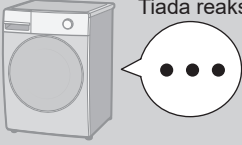
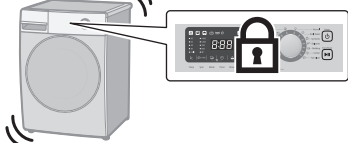
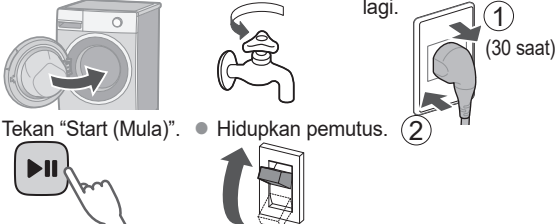
 
	Simptom	Titik untuk diperiksa
Unit utama	Sentuh butang  Tiada reaksi 	☐ Sebab yang mungkin ● Semasa operasi  ☐ Cuba ● Kunci Kanak-kanak (Hlm. 26) 
	Tiada operasi 	☐ Periksa ● Potongan kuasa ● Pemasa  ☐ Cuba ● Tutup pintu. ● Hidupkan. ● Cabut dan masukkan lagi. ● Tekan "Start (Mula)". ● Hidupkan pemutus. 
	Bau getah 	☐ Sebab yang mungkin Bahagian getah Masa berlalu Tiada bau  ☐ Cuba ● Tub Clean (Cucian Tab) (Hlm. 29)




Penyelesaian Masalah (sambungan)

Simptom	Titik untuk diperiksa
Unit utama Pintu tidak boleh dibuka	□ Sebab yang mungkin ● Semasa operasi Pintu dikunci Buka pintu semasa operasi (Hlm. 12) □ Periksa ● Suhu Tinggi ● Paras air Tinggi □ Cuba ● Kunci Kanak-kanak (Hlm. 26) ● Semasa operasi 1 Tutup 2 Buka 3 (Hlm. 21) Putar 4 Buka NOTA Pintu dikunci Potongan kuasa Dipulihkan Pintu dikunci





 
	Simptom	Titik untuk diperiksa
Cuci	Semasa mencuci  	☐ Sebab yang mungkin Buih yang berlebihan  Buih Fungsi pengesanan buih  Saliran automatik Bekalan air automatik 

  Penyelesaian Masalah (sambungan)



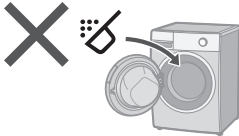
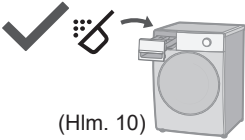
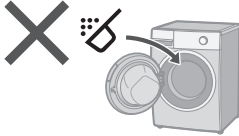
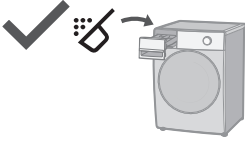


	Simptom	Titik untuk diperiksa
Detergen dan buih	Selepas mencuci 	☐ Periksa   (Hlm. 10)
	 Buih	☐ Sebab yang mungkin - Jumlah buih berbeza-beza. - Suhu  - Paras air  - Kelembutan air 
	Tidak cukup 	☐ Periksa - Detergen serbuk   - Detergen terlalu sedikit  - Detergen buih rendah  - Sangat Kotor  - Muatan terlalu besar 
	Terlalu banyak 	☐ Periksa Detergen terlalu banyak 

   	Simptom	Titik untuk diperiksa
Cucian	Jika pakaian menguning  Kuning	☐ Cuba V11FX2 V10FX2 V90FX2  Tutup    Putih  +  60 °C 
Masa	Semasa mencuci Waktu yang dipaparkan  ...  Perubahan	☐ Sebab yang mungkin ● Masa yang tinggal dibetulkan semasa operasi.    Kira-kira Dibetulkan ● Jika tetapan diubah ● Jika pakaian tidak rata   ➡ Masa yang tinggal boleh bertambah.
Bunyi bising	Semasa saliran air 	☐ Sebab yang mungkin ● Ini adalah normal. Pam saliran
	Bunyi kipas berputar 	☐ Sebab yang mungkin ● Ini adalah normal. Kipas tersebut menyedut alat elektrik.

 Penyelesaian Masalah (sambungan)

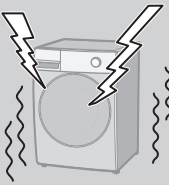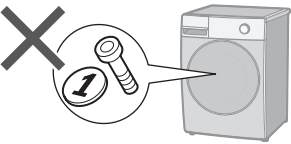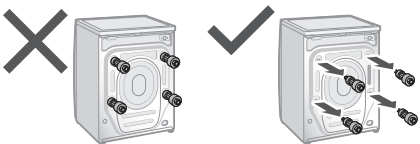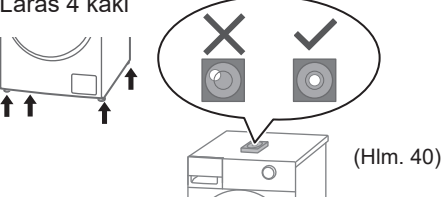	Simptom	Titik untuk diperiksa
Bunyi bising	Bunyi aneh (atau getaran) 	□ Periksa ● Item logam  ● Bolt pengikat (Hlm. 40)  ● Cerun atau permukaan tidak stabil  ● Laras 4 kaki  (Hlm. 40)
	Potongan kuasa Pemutus 	□ Periksa ● Jika kuasa pulih, operasi akan bersambung di mana ia terhenti. 
Lain-lain		

        Paparan Ralat

Paparan Ralat	Titik untuk diperiksa		
U 11 Tidak dapat disalurkan	1 Periksa 	2 	3  Mula      (Hlm. 30)
U 12 Pintu dibuka	1 	2  Mula	
U 13 Tidak dapat berputar	1 Periksa 	2 	3  Mula Tidak rata  Walaupun  Tidak stabil atau cenderung  Stabil  Terlalu banyak  Kurangkan  Terlalu sedikit  Tambah 
U 14 Tidak dapat membekalkan air	1 Periksa 	2 	3  Mula Ketiadaan air  Tutup  Penapis bekalan air (Hlm. 27) 
U 17 Tidak dapat berputar	1 Mula semula  Tutup	2 Jalankan "Rapid 15 (Pantas)"  Buka 	Lain kali:  Detergen buih rendah 
H 00	1 	2 	3 


Memilih Lokasi yang Betul




Pastikan anda minta bantuan juruteknik servis untuk pemasangan.

- Jangan pasang mesin ini sendiri.
- Ikuti kaedah pemasangan ini. Jika tidak, Panasonic tidak akan bertanggungjawab di atas apa-apa kemalangan atau kerosakan.

Ukuran mesin

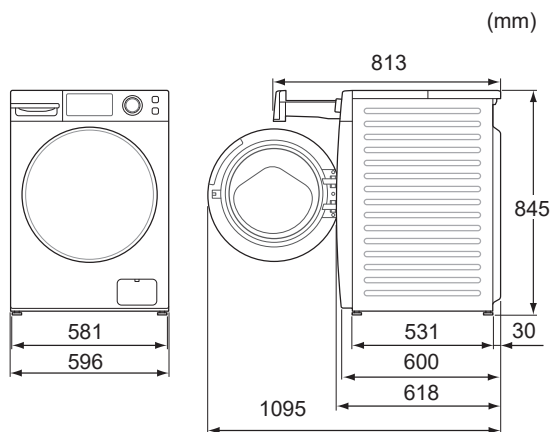


■ Pemasangan tetap

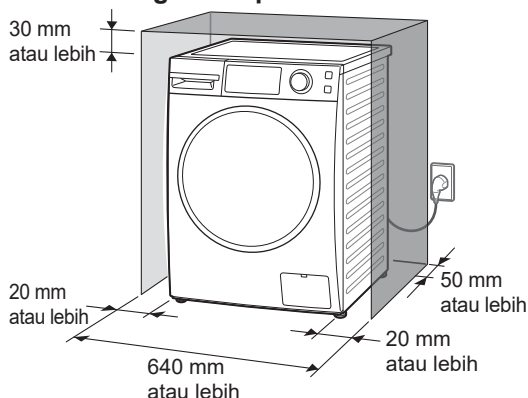

- Jangan biarkan bahagian logam mesin bersentuhan dengan sinki dan mesin lain.


Periksa lokasi.

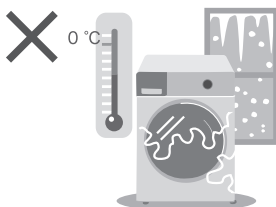



Memindah dan Memasang

Membawa mesin

Jangan melakukannya bersendirian.




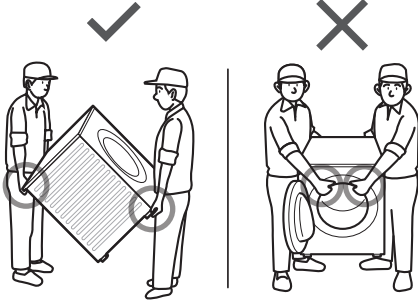


Pemasangan penutup bawah

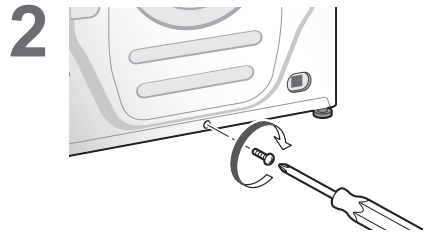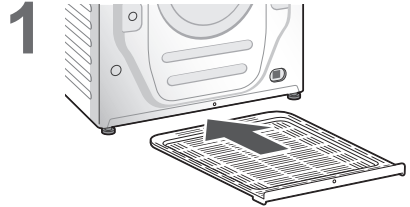


Memindah dan Memasang (sambungan)


Membuka bolt pengikat

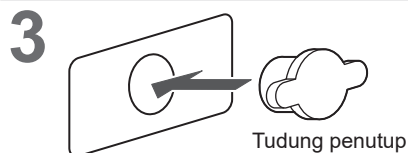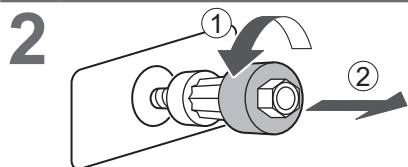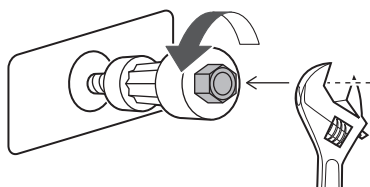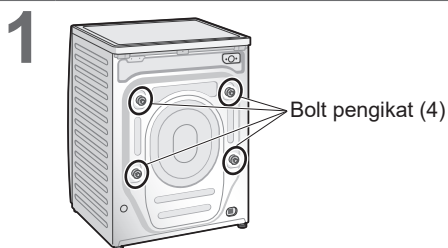





NOTA

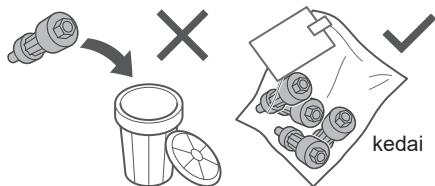


■ Mengalihkan mesin sekali lagi

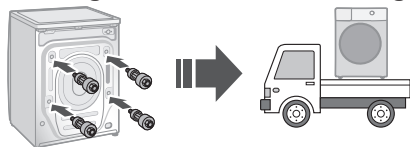

Meratakan mesin

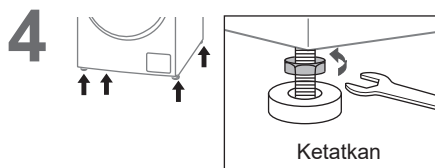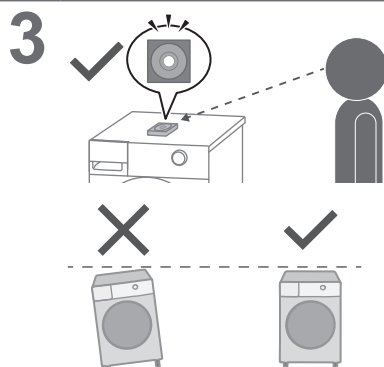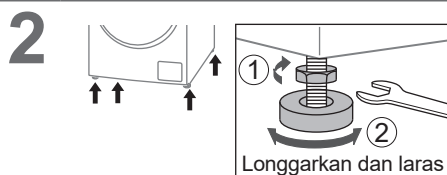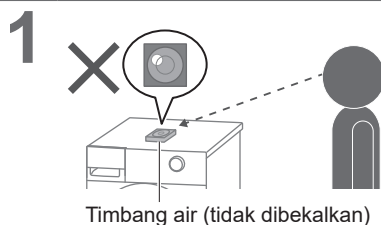

NOTA

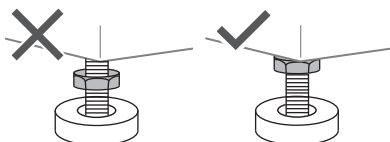


Menyambung Hos

Sambungkan hos dengan betul untuk mencegah kebocoran air.

Jarak sambungan maksimum untuk hos dan kabel kuasa


Sambungan sebelah kanan

(cm)

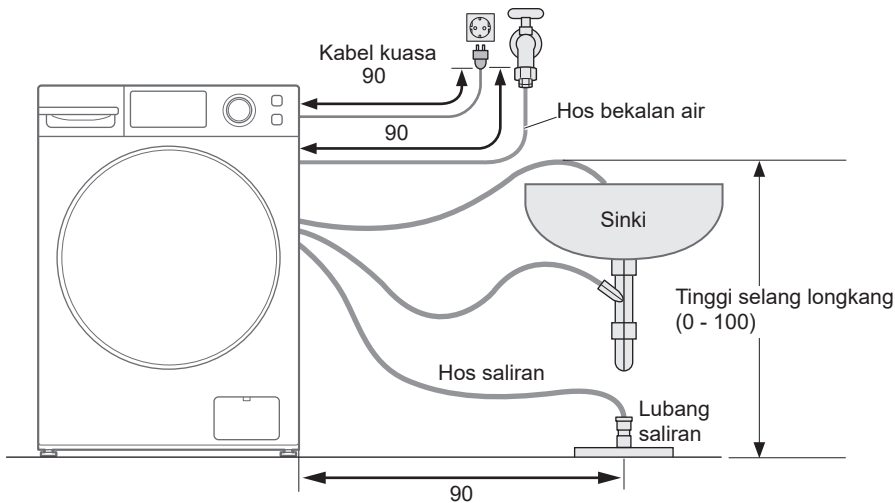

Sambungan sebelah kiri

(cm)

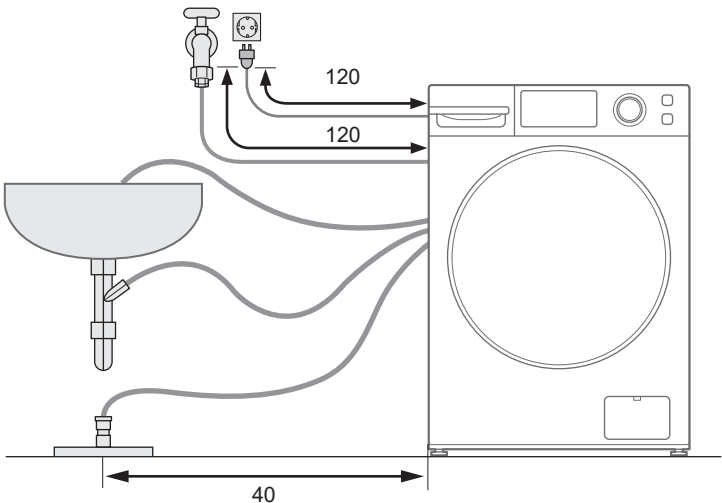

Menyambung Hos (sambungan)

Hos bekalan air

■ Menyambung hos bekalan air




AWAS

- Ketatkan nat dengan rapi.
- Jangan pintal, penyek, ubah suai atau potong hos.



1



2

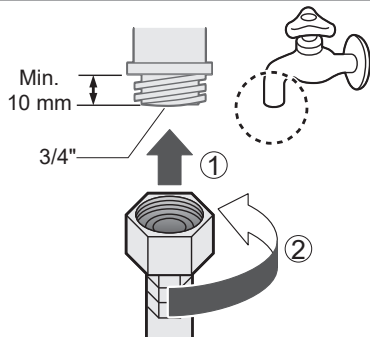


3

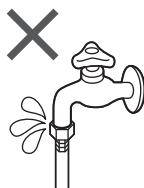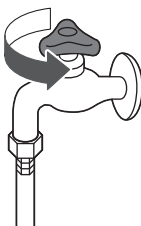


Hos saliran

■ Menyalirkan kepada sinki

KENYATAAN

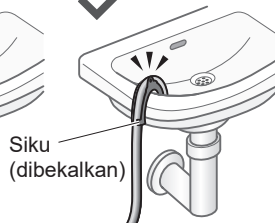



■ Menyalirkan kepada sinki

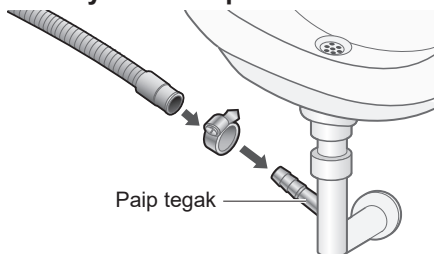

■ Menyalirkan kepada lubang saliran



  NOTA




Memandu Uji

1



2

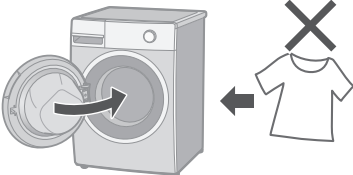

3


Buka




4

 **Rapid 15 (Pantas 15)**

5


Mula

Memeriksa selepas memandu uji

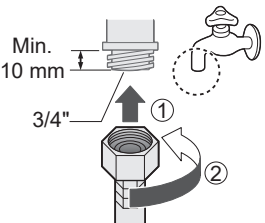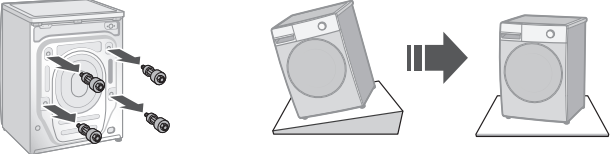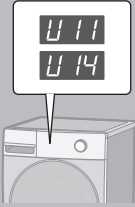Masalah	Sebab dan Langkah
Kebocoran air 	Menyambung hos bekalan air 
	● Membuka bolt pengikat (Hlm. 40) ● Pasang dengan stabil 
Paparan Ralat 	Lihat Hlm. 37.

Spesifikasi

	V11FX2	V11FG2	V10FX2	V10FG2	V90FX2
Voltan terkadar (V)	220 - 240				
Frekuensi terkadar (Hz)	50				
Input kuasa terkadar tenaga maksimum (W)	1740 - 2000				
Putaran perah maksimum (r/min)	1400				
Ukuran produk (L x D x T) (mm)	596 × 600 × 845				
Berat produk (kg)	73				
Berat maksimum kain kering (Cucian) (kg)	11.0		10.0		9.0
Tekanan air paip (MPa)	0.01 - 1				