


2.4 The Comfort of Cool Air for Every Occasion

Comfort Cooling.

Adjust fan speed and vane directions based on your cooling requirements.


Adjust Fan Speed & Air Swing.

*Auto mode must be switched off to manually adjust Fan speed and Air swing.

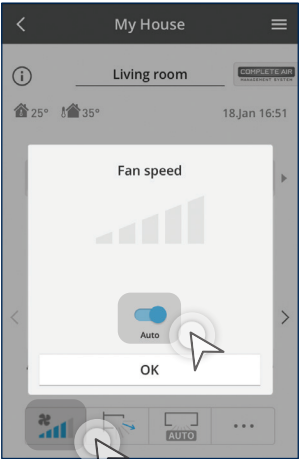


STEP 1

Tap the highlighted area to access "Fan speed".

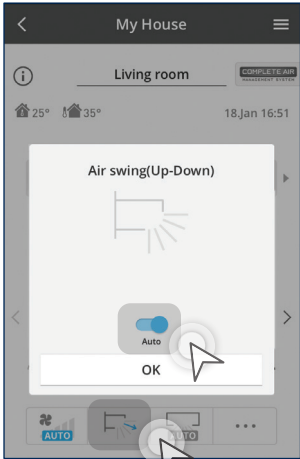

STEP 2

Tap the highlighted area to access "Air swing" (Up - Down).

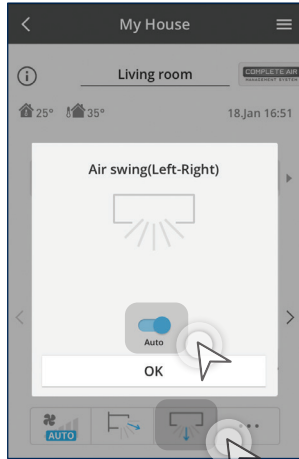

STEP 3

Tap the highlighted area to access "Air swing" (Left - Right).







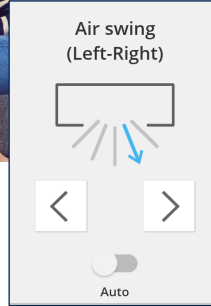
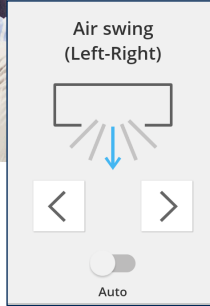

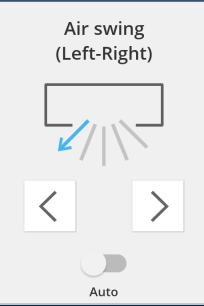
Toggle < or > to choose between 5 fan speed levels.





Toggle ∨ or ∧ to choose between 5 steps of up – down air swing adjustment.

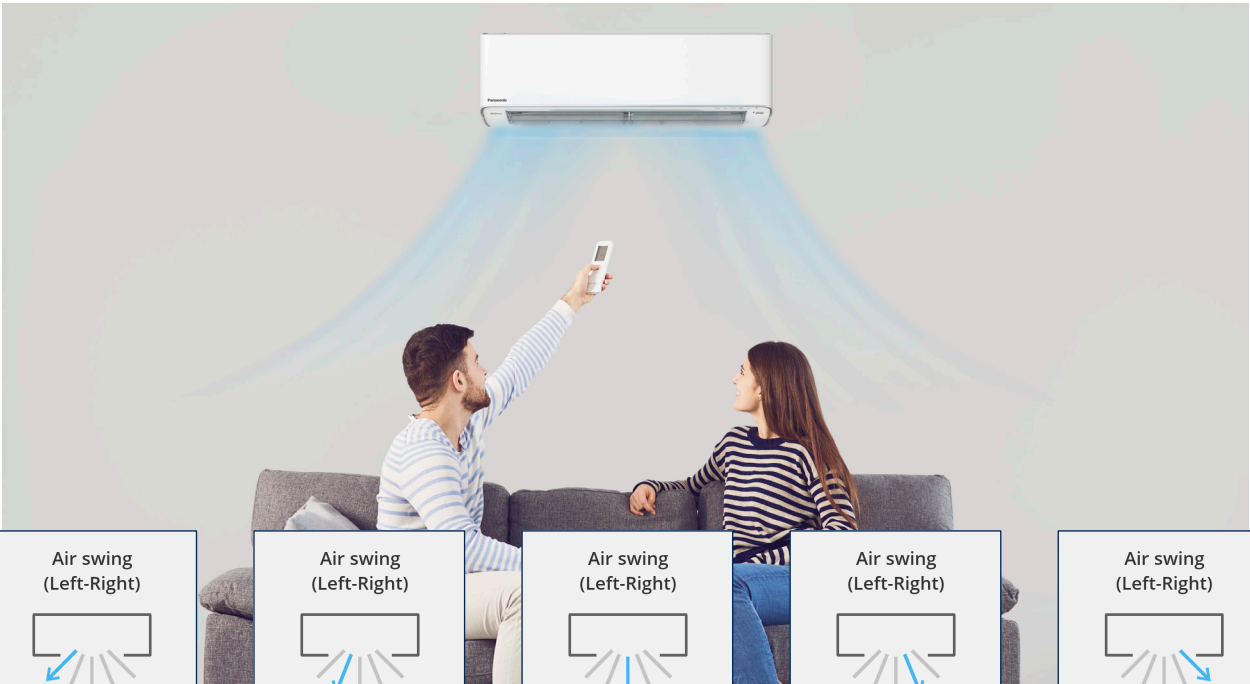



Toggle < or > to choose between 5 steps of left – right air swing adjustment.