

2.4 The Comfort of Cool Air for Every Occasion

# Comfort Cooling.

Adjust fan speed and vane directions based on your cooling requirements.

## Adjust Fan Speed & Air Swing.

\*Auto mode must be switched off to manually adjust Fan speed and Air swing.



**STEP 1**

Tap the highlighted area to access "Fan speed".



**STEP 2**

Tap the highlighted area to access "Air swing" (Up - Down).



**STEP 3**

Tap the highlighted area to access "Air swing" (Left - Right).



Toggle < or > to choose between 5 fan speed levels.



Toggle ∨ or ∧ to choose between 5 steps of up - down air swing adjustment.



Toggle < or > to choose between 5 steps of left - right air swing adjustment.