


2.6 Error Notifications

# Error Codes.

Check notification from Comfort Cloud app whenever there are error codes in the case of a faulty air conditioner.



 25.0 °C ON





Living room

Living room is cool when air conditioner is functioning properly.




When the TIMER LED blinks "CONTINUOUSLY", then, please follow the steps mentioned to check for error.

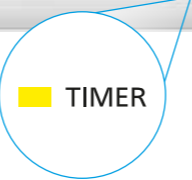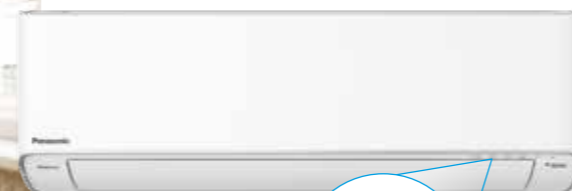


The air conditioner has stopped operating and TIMER LED starts blinking indicating an error has occurred.

## Check Error Codes.

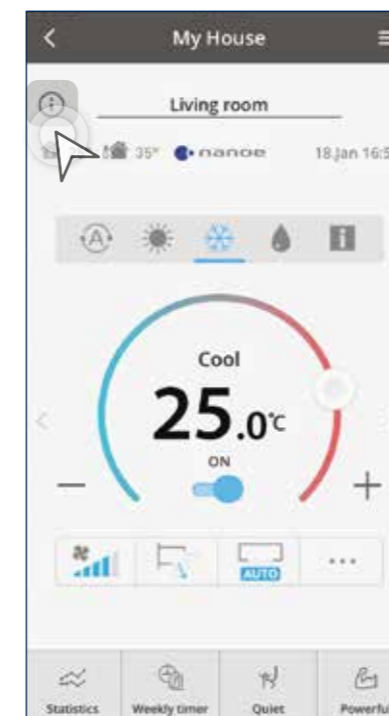

**STEP 1**  
Tap the "i" notification button.

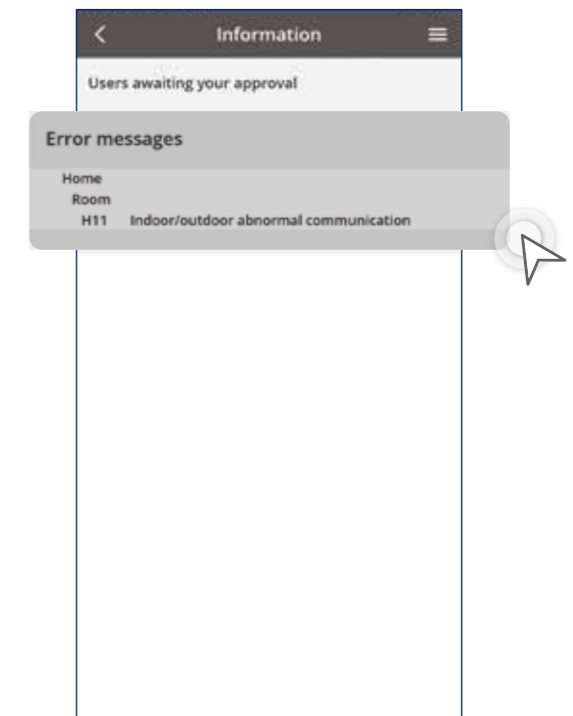

**STEP 2**  
Refer to the "Error messages".