

3.4 Comfort Cooling for Every Occasion


# Comfort Cooling.

How to adjust fan speed and vanes to provide the most comfortable environment for staff and customers.




## Adjust Fan Speed & Air Swing

\*Auto mode must be switched off to manually adjust Fan speed and Air swing.

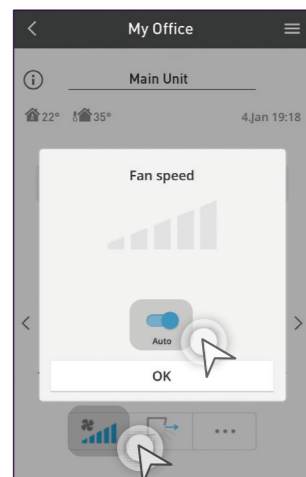


**STEP 1**

Tap the highlighted area to access "Fan speed".

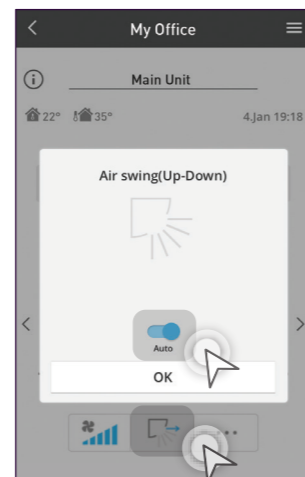


**STEP 2**

Tap the highlighted area to access "Air swing" (Up - Down).

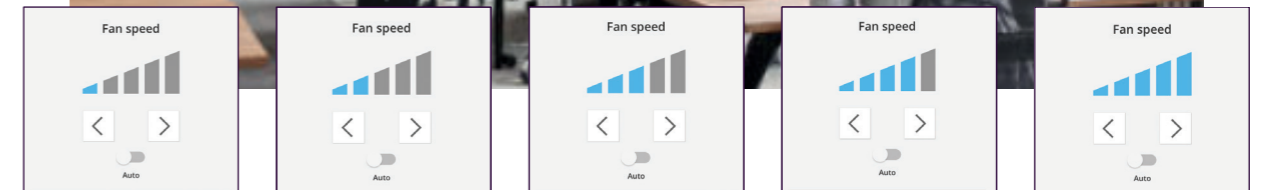

Toggle < or > to choose between 5 fan speed levels.

\*Fan speed steps differ by indoor unit types.

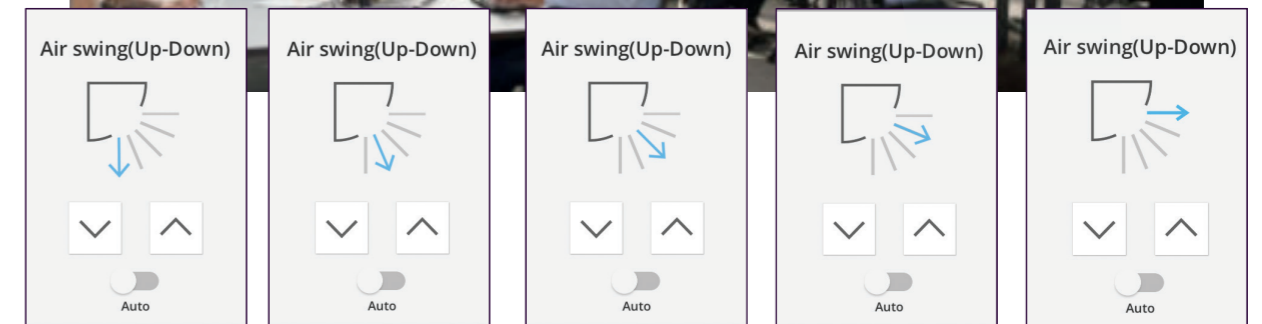

Toggle ^ or v to choose between 5 steps of up - down air swing adjustment.

\*No air swing mode for duct-type indoor units.