



Basic Operating Instructions 基本使用說明書

Digital Wireless Stereo Headphones

數碼無線立體聲頭戴式耳機

Model No. / 型號 RP-HTX90N



Thank you for purchasing this product.
Please read these instructions carefully before using this product, and save this manual for future use.

感謝您購買本產品。
使用本產品前請仔細閱讀這些說明，並保留本說明書供日後使用。

English

More detailed operating instructions are available in "Operating Instructions (PDF format)".
To read it, download it from the website.
http://panasonic.jp/support/global/cs/accessories/oil/rp_htx90n/

• Click the desired language.
在 "使用說明書 (PDF 格式)" 中可找到更詳細的操作說明。
若要閱讀操作說明，請從以下網站進行下載。
http://panasonic.jp/support/global/cs/accessories/oil/rp_htx90n/

• 按一下所需語言。



English Expressions used in this document

• The product illustrations may differ from the actual product.

中文 (繁體) 本文中使用的表示方式

• 產品插圖可能與實際產品不符。



GC

Panasonic Corporation
<http://www.panasonic.com>

© Panasonic Corporation 2019

(En) (Co)
TQBM0329
F0119QK0

English

Accessories

Please check and identify the supplied accessories.

1 x USB charging cord
1 x Detachable cord

中文 (繁體)

附件

請檢查並確認隨附的附件。

1 x USB 充電線纜
1 x 可拆卸式耳機線

Safety precautions

■ Unit

WARNING:

To reduce the risk of fire, electric shock or product damage,
• Do not expose this unit to rain, moisture, dripping or splashing.
• Do not place objects filled with liquids, such as vases, on this unit.
• Use the recommended accessories.
• Do not remove covers.
• Do not repair this unit by yourself. Refer servicing to qualified service personnel.
Avoid the use in the following conditions
• High or low extreme temperatures during use, storage or transportation.
• Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
• Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
• Avoid using or placing this unit near sources of heat.
• Do not listen with this unit at high volume in places where you need to hear sounds from the surrounding environment for safety, such as at railroad crossings, and construction sites.

■ Allergies

• Discontinue use if you experience discomfort with the ear pads or any other parts that directly contact your skin.
• Continued use may cause rashes or other allergic reactions.
■ Precautions for listening with the Headphones
• Excessive sound pressure from earphones and headphones can cause hearing loss.
• Do not use your headphones at a high volume. Hearing experts advise against continuous extended play.
• If you experience a ringing in your ears, reduce volume or discontinue use.
• Do not use while operating a motorised vehicle. It may create a traffic hazard and is illegal in many areas.
• You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.

Use only the supplied USB charging cord when connecting to a computer.

This unit is intended for use in moderate and tropical climates.

For India only

The specifications are exempted for any licensing requirement by Ministry of Communications and Information Technology, G.S.R. 45 (E), dated 28th January, 2005.

Maintenance

Clean this unit with a dry and soft cloth.
• Do not use solvents including benzine, thinner, alcohol, kitchen detergent, a chemical wiper, etc. This might cause the exterior case to be deformed or the coating to come off.

Keeping the battery performance
• During the long period of disuse, full charge this unit once every 6 months to keep the battery performance.

■ 耳機

警告：

為了降低火災、觸電或產品損壞的風險，應注意以下幾點：
• 切勿將耳機暴露於雨水、潮濕、流水或濺水的環境中。
• 切勿將耳機等盛有液體的容器放在耳機上。
• 請使用指標的附件。
• 切勿拆下耳罩。
• 切勿自行修理耳機。請聯繫合格的服務人員進行維修。
避免在以下情況使用產品
• 在極高溫或極低溫下使用、存放或運送。
• 將電池丟入火中或烤箱，或是用機器壓扁或切開電池，都可能導致爆炸。
• 極高溫和/或極低氣壓都會導致爆炸，或是易燃液體或氣體外洩。
• 避免將耳機放置在接近熱源的地方或在此類地方使用。
• 為安全起見，在需要注意周圍環境聲音的場所（如鐵路岔口和建築工地），切勿將耳機音量調得過高。
• 在具有潛在危害的環境中應慎用或停止使用耳機。
■ 使用耳機的注意事項
耳機和頭戴式耳機產生的聲壓過大會導致聽力損害。
• 切勿將耳機音量調得過高。聽力會在長時間連續使用耳機播放。
• 如果您感到耳鳴，請調低音量或停止使用。
• 駕駛機動車輛時請勿使用耳機。這樣可能會造成交通事故；而且在很多地方屬違法行為。
• 在具有潛在危害的環境中應慎用或停止使用耳機。

保養

使用柔軟的乾布清潔耳機。
• 切勿使用溶劑，包括汽油、稀釋劑、酒精、廚房清潔劑、化學擦拭布等。使用這些溶劑可能導致外部變形或塗層脫落。
維持電池效能
• 若長時間不使用，請每 6 個月將本耳機完全充電，以維持電池效能。

English

Specifications

■ General

Power supply	DC 5 V, 1.5 W (Internal battery: 3.7 V (Li-polymer 800 mAh))
Operating time ¹	Approx. 24 hours (Noise cancelling: ON, SBC)
Charging time ² (25 °C)	Approx. 4 hours
Operating temperature range	10 °C to 35 °C
Operating humidity range	0 °C to 40 °C
Operating RH range	35 %RH to 80 %RH (no condensation)
Mass	Approx. 208 g (without cord)

■ Bluetooth® section

Frequency band	2402 MHz to 2480 MHz
Supported profiles	A2DP, AVRCP, HSP, HFP
Supported codec	SBC

■ Headphone section

Impedance	35 Ω (Power off, with cord)
-----------	-----------------------------

¹ It may be shorter depending on the operating conditions.

² The time required to charge the battery from empty to full.

• Specifications are subject to change without notice.

中文 (繁體)

規格

■ 常規參數

電源	DC 5 V-1.5 W (內建電池:3.7 V (鋰聚合物電池 800 mAh))
操作時間 ¹	約 24 小時 (降噪:開・SBC)
充電時間 ² (25 °C)	約 4 個小時
充電溫度範圍	10 °C 至 35 °C
操作溫度範圍	0 °C 至 40 °C
操作濕度範圍	35 %RH 至 80 %RH (無凝結)
重量	約 208 g (不含纜線)

■ Bluetooth® 部分

頻段	2402 MHz to 2480 MHz
支持的配置文件	A2DP, AVRCP, HSP, HFP

■ 耳機部分

阻抗	35 Ω (電源關閉,含纜線)
----	-----------------

*1 會視工作環境的不同而變短。

*2 從空電量到充滿所需的時間。

• 規格如有變更，恕不另行通知。

故障排除

在請求維修之前，請先進行下列檢查。如果您對某些檢查點有疑問，或者所選的解決方法未能解決問題，請諮詢您的經銷商，以獲取相關指導。

無聲音

• 確保耳機與 Bluetooth® 設備正確連接。
• 檢查 Bluetooth® 設備是否正在播放音樂。
• 確保耳機已關閉，且音量未設置得過低。
• 再次配對並連接 Bluetooth® 設備和耳機。
• 檢查 Bluetooth® 相容設備是否支援 A2DP® 配置文件。如需配置文件的詳細資料，請參見 "使用說明書 (PDF 格式)" 中 "聽音樂" 部分。另請參見 Bluetooth® 相容設備的操作手冊。

音量過低

• 調高耳機音量。
• 調高 Bluetooth® 設備的音量。

設備的聲音中斷 / 太多噪音 / 音質較差

• 如果信號品質差，聲音可能中斷。請用手掌或其他物體完全遮蓋耳機。
• 設備可能超出 10 公尺的通訊範圍。將設備靠近耳機。
• 無線區域網路設備之間的障礙物。

無法連接設備

• 從 Bluetooth® 設備中刪除本耳機的配對資訊，然後再次配對。
• 請在 "Rear page, [D]"。

聽不到對方的聲音

• 確認耳機與具備 Bluetooth® 功能的電話都已開啟。
• 檢查耳機與具備 Bluetooth® 功能的電話是否已經建立連接。
• 檢查具備 Bluetooth® 功能的電話的音訊設定。如果通話設備為具備 Bluetooth® 功能的電話，則將切換成本耳機。
• 如果對方的音量過低，請將耳機與具備 Bluetooth® 功能的電話的音量同時調高音量。

不能撥打電話

• 檢查 Bluetooth® 相容設備是否支援 "HSP" 或 "HFP" 配置文件。如需配置文件的詳細資料，請參見 "使用說明書 (PDF 格式)" 中 "聽音樂" 和 "撥打電話" 部分。另請參見具備 Bluetooth® 功能的電話的操作手冊。

耳機沒有反應

• 您當前使用的 USB 連接埠是否正常工作？如果您的電腦有其他 USB 連接埠，請將連接器從當前連接埠拔出，然後插入其他連接埠。
• 如果上述措施不適用，請將 USB 充電線纜拔出，並再次插入。
• 如果充電時間和工作時間變短，電池同樣有可能已經損壞。（自帶電池充電次數：大約 300 次）

充電時 / 電源 / 配對 LED 燈未亮燈 / 充電時間延長

• USB 充電線纜是否與電腦的 USB 端子牢固連接？
• 請務必在 10 °C 至 35 °C 之間的室溫下進行充電。

無法打開電源

• 耳機是否正在充電？在充電期間無法打開電源。
• 連接可拆卸式耳機線（隨附）時，無法開啟電源。
• 給耳機充電。
• 給耳機充電。

語言指派語言已變更

• 可切換語言指派語言。（按住 [– (◀)] 和 [D] [I] (▶) 至少 5 秒。）可以在英文和法文之間切換語言指派。

緊急處理方法


本製品發生冒煙、異味等情形，請立即停止使用，並關閉電源。如在充電中發生上述異狀，請按下 USB 充電線。請勿再繼續使用本產品，並聯絡購買的店家。

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或更換設計之特性及功能。

低功率射頻電機，使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用。並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信；低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

關於醫療

• 請洽詢任何

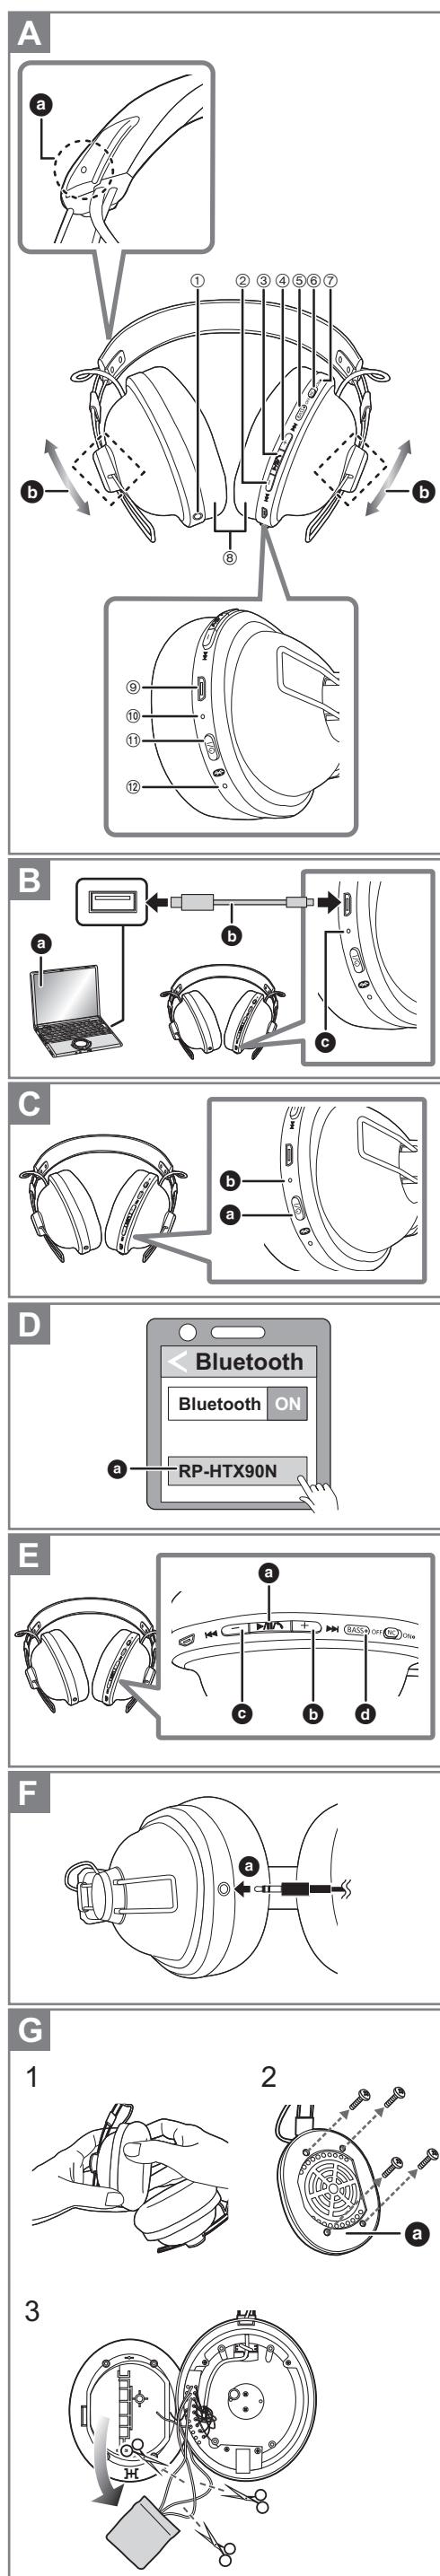

English

A Part names

- ① Raised dot indicating the left side
- ② This allows you to adjust the housing position of the headphones.
- ① Audio input terminal
- ② [- (◀)] button
- ③ [▶/II/◀] button
- ④ [+ (▶)] button
- ⑤ [BASS] button
- ⑥ [NC] (Noise cancelling) switch
- ⑦ Noise cancelling LED
- ⑧ Ear pads
- ⑨ Charging terminal (DC IN)
- ⑩ Power/pairing LED
- ⑪ [II/II/◀] button
- ⑫ Microphone
- * II/II: Standby/ON

B Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect this unit to a computer (⑩) using the USB charging cord (supplied) (⑪).

- The power/pairing LED (⑩) lights in red when charging is in progress. When charging is completed, the power/pairing LED will go out.
- It takes approx. 4 hours to charge the battery from empty to full.
- Check the direction of the terminals and plug in/out straight holding onto the plug. (It may result in malfunction if it is plugged in obliquely or in wrong direction.)
- It is not possible to turn the power on or connect to Bluetooth® devices during charging. In addition, the noise cancelling function cannot be used.
- Make sure the computer is turned on and is not on standby or sleep mode.
- Do not use any other USB charging cords except the supplied one.
- When the battery starts running low during use of the unit, the blinking power/pairing LED will turn from blue to red. A beep will sound every 1 minute. When the battery runs out, an English guidance message will be heard and the power will turn off.
- If you press the [II/II/◀] (⑪) twice quickly, an English guidance message will be heard and you can check the battery level.

Using noise cancelling

Selecting noise cancelling to ON changes the volume and sound quality.

1 Set the [NC] switch to ON.

When noise cancelling is set to ON, the noise cancelling LED (⑦) glows.

2 Adjust the volume of the playback device.

- It is possible to use noise cancelling even with the unit powered off.
- Battery power is consumed even if the unit is powered off when the [NC] switch is ON. We recommend setting the [NC] switch to OFF when not using noise cancelling.
- While using the noise cancelling function, a very small amount of noise which is generated from the circuit that reduces noise may be heard, but this is normal and not indicative of any trouble. (This very-low-level noise may be heard in quiet places or in the blank parts between tracks.)

Using Bluetooth®

C Turning the power on/off

Press and hold [II/II/◀] (⑪) of this unit for approx. 3 seconds until the power/pairing LED (blue) (⑩) blinks.

- A beep will sound, and the power/pairing LED (blue) (⑩) will blink slowly.
- The power cannot be turned on when the detachable cord (supplied) is connected.

To turn the power off

Press and hold [II/II/◀] (⑪) for approximately 3 seconds. An English guidance message will be heard, and the power will be turned off.

- If the unit is not connected to a Bluetooth® device, an English guidance message will be heard and turn off the unit automatically approximately 5 minutes after you have stopped using it. (Auto power off)

D Connecting a Bluetooth® device

■ Bluetooth® pairing

1 In the power-off state, press and hold [II/II/◀] (⑪) of this unit until the power/pairing LED blinks.

- When pairing a device for the first time:
 - approx. 3 seconds
 - When pairing a second or subsequent devices:
 - approx. 5 seconds

The unit starts to search for the Bluetooth® device for connection, and the power/pairing LED will blink in blue and red alternately.

2 Turn on the power of the Bluetooth® device, and enable the Bluetooth® function.

3 Select "RP-HTX90N" (⑩) from the Bluetooth® device's menu.

- If prompted for a passkey, input the passkey "0000 (four zeros)" of this unit.
- When the power/pairing LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established)

If connection to a device is not established within approx. 5 minutes, the unit will be turned off. Perform pairing again.

■ Connecting a paired Bluetooth® device

1 Turn on this unit.

- 2 Perform steps 2 and 3 of "Bluetooth® pairing". (→ above)
- When the power/pairing LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established)

E Using the headphones

■ Listening to music

Select and play the music on the Bluetooth® device.
The unit's headphones will output the music or the audio of the video being played back.

■ Remote controlling (Available only if your Bluetooth® device supports "AVRCP" Bluetooth® profiles)

(Operation example)

Play / Pause: Press [▶/II/◀] (⑪).

Increase the volume: Press [+ (▶)] (②).

Decrease the volume: Press [- (◀)] (③).

Forward to the start of next track: Press and hold [+ (▶)] (②) for approximately 2 seconds.

Return to the start of current track: Press and hold [- (◀)] (③) for approximately 2 seconds.

The volume can be adjusted in 16 levels. When the maximum or minimum volume is reached, a beep will sound.

■ Enhancing the bass (Bass enhancer)

You can enjoy music with enhanced bass.

Press [BASS] (⑤).

To turn off the bass enhancer function
When [BASS] is pressed and held, a beep sound will be heard and the bass enhancer function will turn off.

Even when the power is turned off, the setting before turning it off will be stored to memory.

A notification beep sound will be heard when [BASS] is switched on/off. The effect may not be clear, depending on the music you are listening to.

■ Making a phone call

1 Press [▶/II/◀] (⑪) on the unit and answer the incoming call.

• (HFP only) To reject the incoming call, press [▶/II/◀] (⑪) twice quickly.

2 Start talking.

3 Press [▶/II/◀] to end the phone call.

• (HFP only) It may be difficult to hear phone conversations when the unit is used in locations with loud ambient noise or in outdoor or other locations exposed to powerful winds. In that case, change the calling location or switch the calling device to the Bluetooth® enabled phone to continue the call. (Press [▶/II/◀] on the unit twice quickly to switch.) You can have the Bluetooth® enabled phone make phone calls by using the microphone of the unit and an app of the Bluetooth® enabled phone. (→ right, "Activating voice functions")

1 2 3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109