

Panasonic®

Basic Operating Instructions

Digital Camera

Model No. **DC-TZ300**

LUMIX



Please read these instructions carefully before using this product, and save this manual for future use.

More detailed operating instructions are available in “Operating Instructions for advanced features (PDF format)”. To read it, download it from the website. (→67)



DVQX2953ZA
M0326KZ0

Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

Information for Your Safety

WARNING:

To reduce the risk of fire, electric shock or product damage,

- Do not expose this unit to rain, moisture, dripping or splashing.
- Use the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

Certification and Compliance

Please select as follows:

MENU →  **[Setup]** → **[Approved Regulations]**

■ About the battery pack

CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
 - When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
-
- Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not expose to low air pressure at high altitudes.
 - Do not expose to extremely low air pressure, as this may result in explosions or leakage of flammable liquids and gases.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

■ Cautions for Use

- Use a High Speed HDMI micro cable (Type D–Type A plug) with the length less than 3 m (9.8 feet).

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

-
- To clean your camera, remove the battery, card, or disconnect the power plug from the outlet, and wipe with a soft, dry cloth.
 - Do not press the monitor with excessive force.
 - Do not press the lens with excessive force.
 - Do not allow camera to come into contact with pesticides or volatile substances (can cause surface damage or coating to peel).
 - Do not keep rubber or plastic products in contact with the camera for a long period of time.
 - Do not use solvents such as benzine, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
 - Do not leave the camera with the lens facing the sun, as rays of light from the sun may cause it to malfunction.
 - Do not extend the supplied cord or cable.
 - While the camera is accessing the card (for operations such as picture writing, reading, deletion, or formatting), do not turn off the camera or remove the battery or card.
- Furthermore, do not subject the camera to vibration, impact or static electricity.
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
 - Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation.
-

-
- **The battery is not charged when the camera is shipped. Charge the battery before use.**
 - **The battery is a rechargeable lithium ion battery. If the temperature is too high or too low, the operating time of the battery will become shorter.**
 - The battery becomes warm after using and during and after charging. The camera also becomes warm during use. This is not a malfunction.
 - **Do not leave any metal items (such as clips) near the contact areas of the power plug or near the batteries.**
 - Store the battery in a cool and dry place with a relatively stable temperature. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH)
 - **Do not store the battery for a long time while fully charged.** When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
 - Place the removed battery in a plastic bag, etc., and keep away from metallic objects (clips, etc.) for storage or transport.
 - When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
 - When [Sleep Mode] or [Sleep Mode(Wi-Fi)] in [Power Save Mode] is set to [OFF], the power consumption of this camera may be increased.
-

• **For Australia** **Smart Device Cyber Security Standards**

For software updates, cyber security information and a statement of compliance, please visit the Panasonic website at www.panasonic.com.au

How to use this manual

■ About the symbols in the text

MENU Indicates that the menu can be set by pressing [MENU/SET] button.

Steps for setting a menu item are described as follows:

MENU →  **[Rec]** → **[Quality]** → **[.L.]**

- These operating instructions express the up, down, left, and right of the cursor button as ▲ ▼ ◀ ▶.

Recording mode:   **P** **A** **S** **M**  **SCN** 

- In Recording modes that show icons in black, you can select and execute indicated menus and functions.
- C1** / **C2** (Custom Mode) has different functions depending on the recording mode that is registered.

- The external design and specifications of this product, as described in this document, may differ from the actual product.
- Illustrations used in this document may differ from the actual product and the actual images displayed on the product.
- Images used in this document are sample pictures used to explain the functions and effects.

Contents

■ Information for Your Safety	2
-------------------------------------	---

Preparations/Basics

■ Before use	9
■ Standard accessories	10
■ Names and Functions of Main Parts	11
■ Quick Start Guide	13
Inserting the battery and/or	
SD memory card (optional)	13
Charging the battery	14
Setting the clock	18
Formatting the card (initialisation)	19
Holding the camera	19
Mode dial (Select the recording mode)	20
Shutter button (Taking pictures)	21
■ Basic operations	22
■ Setting the menu	26

Recording

■ Taking pictures with automatic settings (Intelligent Auto Mode)	27
■ Recording with the 4K Photo function	28
■ Adjusting the focus after recording ([Post Focus] / [Focus Stacking])	32
■ Recording Videos	35

Playback

■ Viewing your pictures	39
-------------------------------	----

Menu

■ Menu list	43
-------------------	----

Wi-Fi/Bluetooth

■ What you can do with the Wi-Fi®/Bluetooth® function	47
■ Wi-Fi/Bluetooth Function	48
■ Operating the camera by connecting it to a smartphone	49

Others

■ Downloading software	56
■ List of monitor displays	57
■ Q&A	
Troubleshooting	60
■ Specifications	62
■ Digital Camera Accessory System	66
■ Reading the Operating Instructions (PDF format)	67

Before use

■ Camera handling

Keep the camera away from excessive vibration, force, or pressure.

- Avoid using the camera under the following conditions, which may damage the lens, monitor, or camera body. This may also cause the camera to malfunction or prevent recording.
 - Dropping or hitting the camera against a hard surface
 - Sitting down with the camera in your pants pocket or forcing it into a full bag
 - Adding accessories to the camera strap
 - Pushing with excessive force on the lens or monitor

The camera is not dust resistant, splash resistant, or waterproof.

Avoid using the camera in places with excessive dust or sand, or where water can come into contact with the camera.

If sand, dust, or liquids such as water droplets adhere to the monitor, wipe them off with a dry soft cloth.

- Not doing so may cause the monitor to respond incorrectly to touch operations.

■ Condensation (When the lens or the monitor is fogged up)

- Condensation may occur when the camera is exposed to sudden changes of temperature or humidity. Avoid these conditions, which may make the lens or monitor dirty, cause mould, or damage the camera.
- If condensation does occur, turn off the camera and wait about two hours before using it. Once the camera adjusts to the surrounding temperature, the fogging will clear naturally.

■ About strong light beams such as laser light

- Do not irradiate the camera (lens) directly with strong light beams such as laser beams.
Doing so may damage the image sensor and cause the camera to malfunction.

■ When in use

- Do not keep objects that may be influenced magnetically close to the speaker.
 - Magnetised objects such as bank cards, commuter passes, watches, may be adversely affected by the magnetic influence of the speaker.


Standard accessories

Check that all the accessories are supplied before using the camera. Part numbers are as of April 2026. These may be subject to change.

☐ Battery pack DMW-BLG10E • Charge the battery before use. • Battery pack is indicated as battery pack or battery in the text. 	☐ Hand strap VFC4297 
--	---

- **Cards are optional (commercially available).** (SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as card in the text.)
 - This unit is compatible with UHS-I UHS Speed Class 3 standard SDHC/SDXC memory cards.
 - The following SD standard-based cards can be used.
SD Memory Card/SDHC Memory Card/SDXC Memory Card (Maximum 512 GB)
 - Depending on recording conditions, the required card differs.
- The AC adaptor and USB connection cable for charging do not come with the camera. Please read “Charging the battery” (→14) carefully and use optional or commercially available products.
- Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)
- Please dispose of all packaging appropriately.

Names and Functions of Main Parts

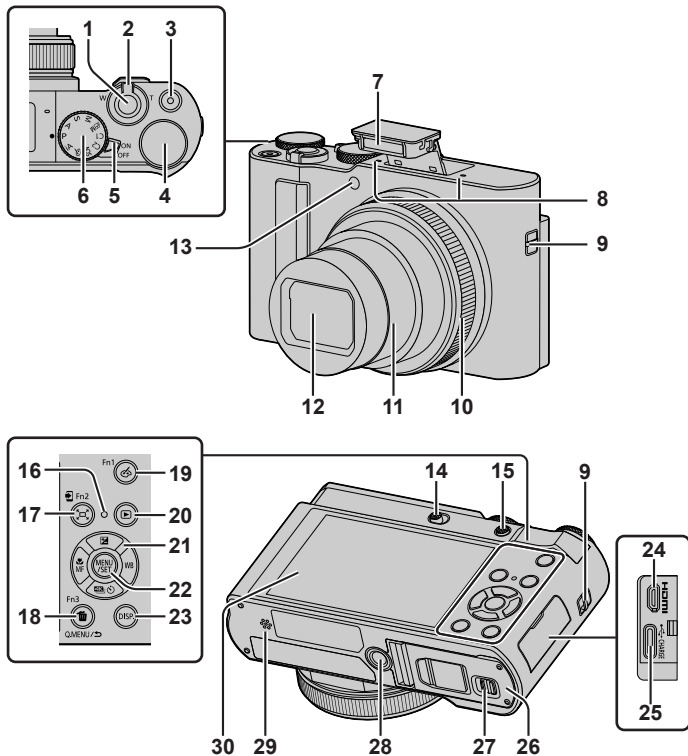

- 1 Shutter button (→21)
- 2 Zoom lever (→22)
- 3 Motion picture button (→35)
- 4 Rear dial (→24)
- 5 Camera [ON/OFF] switch (→18)
- 6 Mode dial (→20)
- 7 Flash (→19)
- 8 Stereo microphone
- 9 Strap eyelet
 - To prevent dropping, be sure to attach the supplied strap and fit it to your wrist.
- 10 Control ring (→24)
- 11 Lens barrel
- 12 Lens
- 13 Self-timer indicator / AF Assist Lamp
- 14 Flash open lever
 - The flash opens, and recording with the flash becomes possible.
- 15 [AF/AE LOCK] button
 - You can take pictures by locking the focus and/or exposure.
- 16 Charging lamp (→15, 16) / WIRELESS connection lamp (→48)
- 17 [] ([Zoom Compose Assist]) button (→24) / [] ([Send Image (Smartphone)]) button / [Fn2] button (→25)
- 18 [] (Delete) button (→39) / [Q.MENU] button /
 - You can easily call some of the menu items and set them during recording.[] (Cancel) button (→26) / [Fn3] button (→25)
- 19 [] ([Filter Effect]) button / [Fn1] button (→25)
- 20 [] (Playback) button (→39)
- 21 Cursor button (→23)
- 22 [MENU/SET] button (→26)
 - Confirmation of setting contents, etc., is performed.
- 23 [DISP.] button
 - Use this to change display.
- 24 [HDMI] socket
 - You can view pictures on a TV screen by connecting your camera to your TV with a HDMI micro cable.
- 25 [USB/CHARGE] socket (→15)
- 26 Card/Battery door (→13)
- 27 Release lever (→13)
- 28 Tripod mount
 - Do not attach this unit to tripods that have screws with a length of 5.5 mm (0.22 inch) or more. Doing so may damage this unit or the unit may not be secured properly on the tripod.
- 29 Speaker
- 30 Touch screen (→25) / monitor (→57)

Function buttons [Fn4] to [Fn8] are touch icons.

They can be displayed by touching the [] tab on the recording screen.

Quick Start Guide

Inserting the battery and/or SD memory card (optional)

Make sure that the camera is turned off.


- 1 Slide the release lever (A) to the [OPEN] position and open the card/battery door**

- 2 Insert the battery and card, making sure that their orientation is correct**

- Battery: Insert the battery all the way firmly and check that it is locked by lever (B).
- Card: Insert the card all the way firmly until it clicks. Do not touch the terminal.

- 3 Close the door**


Slide the release lever to the [LOCK] position.

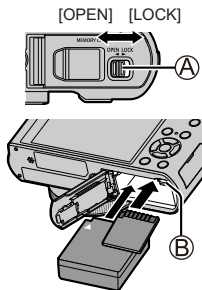

■ To remove


- **To remove battery**

Move lever (B) in direction of arrow.

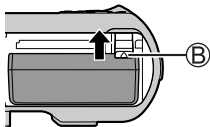

- **To remove card**

Press the centre of the card.

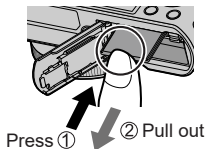

- Always use genuine Panasonic batteries (DMW-BLG10E).
- If you use other batteries, we cannot guarantee the quality of this product.
- Keep the memory card out of reach of children to prevent swallowing.

Charging the battery

Use an AC adaptor (optional/commercially available) and USB connection cable (commercially available) to charge the battery.

- For charging, we recommend using the AC adaptor (DMW-AC11: optional).
- The battery can be charged using a commercially available AC adaptor and USB connection cable.
 - Recommended specifications for AC adaptors (commercially available)
 - Supports DC 5 V / 3 A (15 W) output
 - USB Type-C
 - For charging, use a USB connection cable with an output of 15 W or higher.
- You can also use an AC adaptor of 5 V / 500 mA or higher for charging. However, charging time may be longer than the recommended AC adaptor.
- We do not guarantee operations with all commercially available devices.
- Charge the battery using this camera and the specified method. Using charging methods other than those specified may result in fluid leakage, overheating, combustion, rupturing, etc., and these may cause injury.

 

■ About the battery pack

The battery that can be used with this unit is DMW-BLG10E.

- This battery may present a risk of fire or chemical burn if mistreated.
- To ensure that safe products are used, we recommend that a genuine Panasonic battery pack is used. There is a possibility that other battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack.

- The battery is not charged at the time of purchase. Charge the battery before use.
- We recommend charging in a location where the ambient temperature is between 10 °C and 30 °C (50 °F to 86 °F) (same for the battery temperature).

Insert the battery into the camera.
Make sure that the camera is turned off.

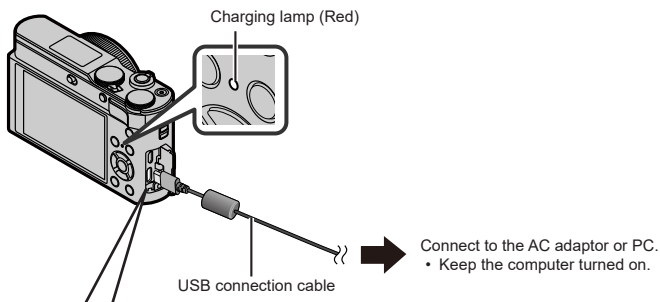

- Always check the direction of the socket, and hold the plug straight to insert or remove it. (Inserting these at an angle may cause deformation or malfunction) Also, do not insert into the wrong socket. Doing so may cause damage to this unit.

Charging from the power outlet

Connect the AC adaptor and this camera with the USB connection cable, and insert the AC adaptor into the power outlet.

- Even when the camera is turned off, it consumes power.
When the camera will not be used for a long time, remove the power plug from the electrical outlet in order to save power.

Charging from a computer

Connect the computer and this camera with the USB connection cable.

- If the computer enters sleep mode during charging, charging may be stopped.
- If a notebook computer that is not connected to an electrical outlet is connected to the camera, the battery of the notebook computer will be depleted. Do not leave the camera and notebook connected for a long period of time.
- Always connect the USB connection cable to the USB connector on your computer. Do not connect the USB connection cable to the USB connector of the monitor, keyboard, printer, or USB hub.

■ Charging lamp indications (Red)

On: Charging in progress

Off: Charging complete (After charging stops, disconnect the camera from the electrical outlet or your computer.)

Flashing: Charging error (→60)

- If the battery indication does not go to  even when charging is complete, the battery may be deteriorating. Try not to use that battery.

■ Charging time

When using the AC adaptor (optional)	Approx. 190 min.
--------------------------------------	------------------

 
- The charging time indicated above is the time required for charging in case when the battery is completely used up. The time required for charging differs depending on conditions of battery usage. Charging takes longer in cases when temperatures are either high or low and when the battery has not been used for a long period of time.
- The time required for charging through the computer varies depending on the power supply capacity of the computer.

Setting the clock

The clock is not set when the camera is shipped.

1 Turn the camera on

2 Press [MENU/SET]



3 Press ◀▶ to select the items (year, month, day, hour, minute), and press ▲▼ to set


4 Press [MENU/SET]

5 When [The clock setting has been completed.] is displayed, press [MENU/SET]

6 When [Please set the home area] is displayed, press [MENU/SET]

7 Press ◀▶ to set your home area and press [MENU/SET]

- Time zones may be revised depending on the country or area, so the place name displayed on the screen may not match the actual time zone. Please also refer to the time difference displayed at the bottom of the screen before setting.

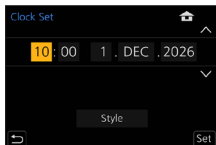

Formatting the card (initialisation)

Format the card before recording a picture with this unit.


Since data cannot be recovered after formatting, make sure to back up necessary data in advance.

MENU →  **[Setup]** → **[Format]**

Holding the camera

- Do not block the flash, AF Assist Lamp, microphone, or speaker with your fingers or other objects.


- Ⓐ AF Assist Lamp
- Ⓑ Flash
- Ⓒ Microphone
- Ⓓ Speaker

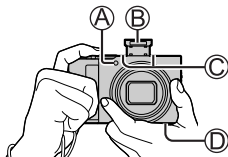

Mode dial (Select the recording mode)

1 Set to the desired recording mode

 - Rotate the mode dial slowly to select the desired mode.
- When you set the mode dial to [iA], the camera automatically optimises the main settings.



iA	Intelligent Auto Mode (→27)
	Intelligent Auto Plus Mode (→27)
P	Programme AE Mode Take pictures with automatic shutter speed and aperture value settings.
A	Aperture-Priority AE Mode Determine aperture, then take pictures.
S	Shutter-Priority AE Mode Determine shutter speed, then take pictures.
M	Manual Exposure Mode Determine aperture and shutter speed, then take pictures.
 M	Creative Video Mode Determine aperture, shutter speed and ISO sensitivity, then record motion pictures. • You cannot take still pictures.
C1/ C2	Custom Mode Take pictures using pre-registered settings.
SCN	Scene Guide Mode Take pictures that match the scene being recorded.
	Creative Control Mode Take pictures by selecting your preferred picture effect.

Shutter button (Taking pictures)

1 Press the shutter button halfway (press lightly) to focus on the subject



Ⓐ Aperture value

Ⓑ Shutter speed

Ⓒ Focus display (Green)

(When focus is aligned: illuminated)

(When focus is not aligned: flashing)

- If the aperture value and shutter speed are shown in red and flashing, you do not have the appropriate exposure, unless you are using the flash.

2 Press the shutter button fully (push the button all the way), and take the picture



- Pictures can be taken only when the image is correctly focused as long as the [Focus/Release Priority] is set to [FOCUS].

■ Estimated number of recordable pictures

2910: When [Aspect Ratio] is set to [3:2], [Quality] is set to [], [Picture Size] is set to [L] (20M), and using a card of 32 GB

■ Check the picture you have taken

Press the [] (Playback) button. (→39)

 
Basic operations

Zoom lever (Use zoom)

Optical zoom:

You can zoom in without degrading the picture quality.

Maximum magnification: 15x



Extra optical zoom:

This function works when picture sizes with [EX] have been selected in [Picture Size]. Extra optical zoom allows you to zoom in using a higher zoom ratio than optical zoom, without degrading the picture quality.

Maximum magnification: 30x*1

*1 Including the optical zoom ratio. The maximum zoom ratio varies depending on the picture size.

[i.Zoom]:

Set the [i.Zoom] in the [Rec] menu to [ON].

You can use the camera's intelligent resolution technology to increase the zoom ratio up to 2x*2 higher than the original zoom ratio with limited deterioration of picture quality.

*2 Up to 1.5x the original zoom ratio when [Picture Size] is set to [S]

[Digital Zoom]:

Set the [Digital Zoom] in the [Rec] menu to [ON].

Zoom 4x further than Optical/Extra optical zoom. When [Digital Zoom] is used simultaneously with [i.Zoom], you can increase the combined zoom ratio up to 4x.

Note that, with Digital Zoom, enlarging will decrease picture quality.

- When [Monitor Display Speed] is set to [30fps], Digital Zoom is not available (setting at the time of purchase).

Cursor button

Selection of items or setting of values etc., is performed.

You can perform the following operations while recording. (Some items or settings cannot be selected depending on the mode or display style the camera is in.)

[] (Exposure compensation) ()

- Corrects the exposure when there is a backlight or when the subject is too dark or too bright.

[WB] (White balance) ()

- Adjusts to the colour of white which is closest to what is seen by the eye in accordance with the light source.

[] (Drive mode) ()

- [] ([Burst])*1
 - Records in succession while the shutter button is pressed.
- [] ([4K PHOTO])*1 (→28)
- [] ([Post Focus])*1 (→32)
- [] ([Self Timer])*1

*1 To cancel drive mode, select [] ([Single]) or [] ([Off]).

[] (Focus mode) ()

- [AF]
 - Focus is set automatically when the shutter button is pressed halfway.
- [AF ] ([AF Macro])
 - You can take pictures of a subject as close as 3 cm (0.098 feet) from the lens by rotating the zoom lever upmost to Wide.
- [] ([Macro Zoom])
 - Use this setting to get close to the subject and then further enlarge when taking the picture. You can take a picture with the Digital Zoom up to 3x while maintaining the distance to the subject for the extreme Wide position (3 cm (0.098 feet)).
- [MF]
 - Manual focus is convenient when you want to lock the focus to take pictures or when it is difficult to adjust focus using auto focus.

■ [Zoom Compose Assist] button (Using the Zoom Compose Assist function)

If you lose the subject while zoomed in:

- ① Press and hold [] ([Zoom Compose Assist]) button
 - A frame indicating the original zoom magnification (angle of view) will appear.

When you find the subject:

- ② Align the frame with the subject and release your finger from the button.

Control ring/Rear dial

You can use the control ring (A)/rear dial (B) to change the settings for recording.



Following are the pre-assigned settings.

Mode dial	Control ring*1	Rear dial
iA	Step Zoom	—
P	Programme Shift	
A	Aperture adjustment	
S	Shutter speed adjustment	
M	Aperture adjustment*2	Shutter speed adjustment*2
M	Aperture adjustment*3 / Shutter speed adjustment*3	
SCN	Aperture adjustment*4 / Shutter speed adjustment*5	
	Picture effects change	

*1 When Manual Focus is set, the control ring is assigned to focus adjustment.

*2 Press to switch between shutter speed adjustment and aperture adjustment.

*3 When [Exposure Mode] is set to [A], [S], or [M], you can change the aperture value and shutter speed in the same way as when the mode dial is set to [A], [S], or [M].

*4 The operation is possible only when the Scene Guide Mode is set to [Appetizing Food].

*5 The operation is possible only when the Scene Guide Mode is set to [Artistic Nightscapes].

- You can change to your preferred settings using [Ring/Dial Set] (→45) from the [Custom] ([Operation]) menu.


Function buttons

- [Fn1] to [Fn3] are buttons on the camera.
- Function buttons [Fn4] to [Fn8] are touch icons. They can be displayed by touching the [Fn] tab on the recording screen.
- You can assign frequently-used functions to particular buttons or icons with [Fn Button Set] (→45) in [Custom] ([Operation]) menu.

Touch screen (Touch operations)

Touch

To touch and release the touch screen.

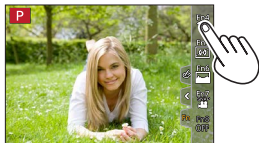


Drag

To touch and slide your finger across the touch screen.



Pinch (spread/pinch)

On the touch screen, spread (pinch out) your 2 fingers to zoom in, and pinch (pinch in) your 2 fingers to zoom out.

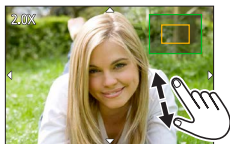

Setting the menu

1 Press [MENU/SET] to bring up the menu

2 Switch the menu type

- ① Press ◀
- ② Press ▲ ▼ to select a tab such as [wrench]
- ③ Press [MENU/SET]




■ Menu types (→43)

- [Camera] [Rec] menu
- [Motion Picture] menu
- [Custom] menu
- [Setup] menu
- [My Menu] menu
- [Playback] menu
- Menus to be displayed in each recording mode

3 Press ▲ ▼ to select the menu item and press [MENU/SET]

4 Press ▲ ▼ to select the setting and press [MENU/SET]

- The setting methods vary depending on the menu item.

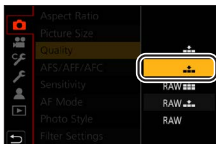

5 Press [Back] button repeatedly until the recording or playback screen reappears

- The menu screen can also be exited by pressing the shutter button halfway. (The screen will return to the recording screen.)
- The menu items that cannot be set are greyed out. In some setting conditions, the reason the setting is disabled is displayed when you press [MENU/SET] if you select a greyed-out menu item.

 
Taking pictures with automatic settings

(Intelligent Auto Mode)

This mode is recommended for those who want to point and shoot as the camera optimises settings to match the subject and recording environment.

1 Set mode dial to [iA]

- At the time of purchase, the mode is set to Intelligent Auto Plus Mode.



2 Point the camera at the subject

- When the camera identifies the optimal scene, the icon switches to the one for that scene. (Automatic Scene Detection)



Switching between Intelligent Auto Plus Mode and Intelligent Auto Mode

MENU → **iA** / **iA+** [Intelligent Auto] → [Intelligent Auto Mode]


Settings: [**iA**] (Intelligent Auto Mode) / [**iA+**] (Intelligent Auto Plus Mode)

- [**iA+**] allows you to adjust some settings such as the brightness and colour tone while also using [**iA**] for other settings so that you can record pictures more suited to your preferences.

Auto Focus (Face/Eye Detection)

[AF Mode] is automatically set to [iA]. If you touch the subject, the camera switches to [iA+] and the AF tracking function starts operating.

- You can also switch to [iA+] by pressing [MENU/SET], going to the [Rec] menu, then going to the [AF Mode] menu and selecting [iA+] (tracking). Align the AF tracking area with the subject and press the shutter button halfway to operate the AF tracking function.

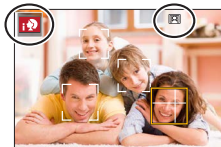

Recording with the 4K Photo function

Recording mode:

You can take burst pictures of approximately 8 million pixels with a burst rate of 30 fps. You can select and save a frame from the burst file.

- To record pictures, use a UHS Speed Class 3 card.

1 Press button (▼)

2 Press ◀▶ to select the 4K photo and press ▲

3 Press ◀▶ to select the recording method and press [MENU/SET]

[4K Burst]	For capturing the best shot of a fast-moving subject Burst recording is performed while the shutter button is pressed and held. • Recording will start approximately 0.5 seconds after you press the shutter button fully. Therefore, press the button fully slightly in advance. (A) Press and hold (B) Recording is performed
[4K Burst(S/S)] "S/S" is an abbreviation of "Start/Stop".	For capturing unpredictable photo opportunities Burst recording starts when the shutter button is pressed and stops when pressed again. (C) Start (First) (D) Stop (Second) (E) Recording is performed
[4K Pre-Burst]	For recording as needed whenever a photo opportunity arises Burst recording is performed for approximately 1 second before and after the moment that the shutter button is pressed. (F) Approximately 1 second (G) Recording is performed

4 Press the shutter button to perform recording

- When you press the [Fn1] button while recording, you can add a marker. (Up to 40 markers for each recording.) When selecting and saving pictures from a 4K burst file, you can skip to the positions where you added markers. ([4K Burst(S/S)] only)
- Burst pictures are saved as a single 4K burst file in the MP4 format.
- When [Auto Review] is enabled, the picture selection screen will be displayed automatically.

■ To cancel the 4K Photo functions

Press [] button (), and then select [] ([Single]) or [] ([Off])

- If the surrounding temperature is high or 4K photos are recorded continuously, [] may be displayed and recording may be stopped halfway through. Wait until the camera cools down.
- **When [] ([4K Pre-Burst]) is set, the battery drains faster and the camera temperature rises. (to protect itself, the camera may switch to [] ([4K Burst]))**
Select [] ([4K Pre-Burst]) only when recording.
- Recording stops when the continuous recording time exceeds 15 minutes. When using an SDHC memory card, files are split into smaller picture files for recording and playback if the file size exceeds 4 GB. (You can continue to record pictures without interruption.)
 If using an SDXC memory card, you can record pictures in a single file even if the size is greater than 4 GB.
- When recording, the angle of view becomes narrower.
- When you perform [Light Composition] or [Sequence Composition], we recommend using a tripod and taking pictures remotely by connecting the camera to a smartphone to prevent camera shake. (→54)

Selecting pictures from 4K burst file and saving

1 Select a picture with the [] on the playback screen, and press ▲

- In the case of recording with [] ([4K Pre-Burst]), proceed to the step 3.



2 Drag the slide bar to perform rough scene selection

- When [] is touched, the marker operation screen appears. (→31)



3 Drag to select the frame you want to save as a picture

- To continuously rewind/forward the scene or frame-by-frame, touch and hold []/[].



4 Touch [] to save the picture


- The selected picture will be saved as a new picture in the JPEG format separate from the 4K burst file.
- If you use [4K PHOTO Bulk Saving] (→46) in the [Playback] menu, you can bulk save 5 seconds' worth of 4K recording.

■ Marker

When selecting and saving pictures from a 4K burst file, you can select pictures easily by skipping between marked positions.

White marker: This is manually set during recording or playback.

Green marker: This is automatically set by the camera during recording.
(Auto Marking function*1)

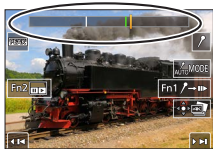

Marker operation screen

- *1 The camera automatically sets markers on scenes in which a face or the movement of a subject is detected. (Up to 10 markers are set for each file.)
(Example: At the scene when a vehicle passes by, a balloon bursts, or a person turns around)
- In the following cases, markers may not be set by the Auto Marking function depending on the recording conditions and the status of subjects.
 - The camera is moving because of panning or jitter
 - The movement of a subject is slow/small, or the subject is small
 - A face is not facing front

■ Skips to the marked positions

When [Fn2 → Fn1] is touched, the marker operation screen appears. You can use ◀▶ to skip to a marked position to select a picture.
Touch [Fn1 → Fn2] to return to the original operation.

■ Switches a marker to be displayed

- ① Touch [MODE]

Settings: [Auto] / [Face Priority] / [Motion Priority] / [Off]*2

*2 Displays manually set markers only

Adjusting the focus after recording

[Post Focus] / [Focus Stacking]

Recording mode:

You can record 4K burst pictures while changing the focus point and then select a focus point after recording. This function is best for non-moving subjects.

- To record pictures, use a UHS Speed Class 3 card.
- We recommend using a tripod to perform [Focus Stacking].

1 Press [4K] button (▼)

2 Press ◀▶ to select [Post Focus] and press [MENU/SET]

3 Determine the composition and press the shutter button halfway



- Auto Focus activates and automatically detects the focus point on the screen. (While the shutter button pressed halfway, shake may be seen on the screen.)
- If there is no focus point on the screen, the Focus indicator (A) blinks and you cannot record.

From halfway pressing the shutter button to completion of recording

- Do not change the distance to subject or the composition.

4 Press the shutter button fully to start recording



- The focus point changes automatically while recording. When the recording progress bar (B) disappears, recording automatically ends.
- The data will be saved as a single file in the MP4 format.
- If [Auto Review] is set, a screen will automatically appear that lets you select the focus point. (→33)

■ Cancelling [Post Focus]

Press [4K] button (▼), and then select [□] ([Single]) or [OFF]

- If the surrounding temperature is high or [Post Focus] recording is performed continuously, [△] may be displayed and recording may be stopped halfway through. Wait until the camera cools down.
- During recording, the angle of view will be narrower.


Select the focus point and save the picture ([Post Focus])

- 1 On the playback screen, select the image with the [] icon and press ▲



- 2 Touch the focus point

- If there are no pictures with the focus on the selected point, a red frame will be displayed, and pictures cannot be saved.
- The edge of the screen cannot be selected.
- To switch to the [Focus Stacking] operations screen, touch []. (→34)
- To highlight in-focus portion with colour, touch [PEAK].
- To enlarge the display, touch [Q].
- You can make fine adjustments to the focus by dragging the slide bar during enlarged display. (The same operation can be performed using ◀▶.)

 

- 3 Touch [] to save the picture

- The selected picture will be saved as a new separate file in the JPEG format.

Select the focus range to combine and create a single picture ([Focus Stacking])

- 1 Touch  on screen in step 2 of “Select the focus point and save the picture ([Post Focus])” (→33)
- 2 Choose a stacking method and touch it

[Auto Merging]

Automatically select photos suitable for stacking and combine them into one picture.

- Choose by giving preference to near-focus pictures.
- Perform the focus stacking and save the picture.

[Range Merging]

Combine the pictures with the selected focus position into one picture.

(When selecting [Range Merging])


3 Touch the focus point

- Select positions at two or more points.
- Focus points between the selected two positions will be selected.
- Positions that cannot be selected, or that would produce an unnatural result will be greyed out.

- Touch a position again to deselect it.

4 Touch to combine and save the picture

- The picture will be saved in JPEG format.

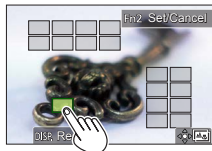

- Only pictures taken using [Post Focus] on this camera are eligible for [Focus Stacking].


Recording Videos

Recording mode:

You can record 4K or high-definition quality motion pictures in MP4 format.

1 Press the motion picture button to start recording

- (A) Red REC frame indicator
- (B) Recording (lights up in red)
- (C) Elapsed recording time
- (D) Remaining recording time

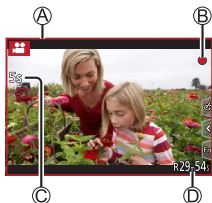

- Recording of motion picture appropriate for each motion picture mode is possible.
- Immediately release the motion picture button after pressing it.
- If you press the shutter button down fully, you can take still pictures while recording motion pictures. (Except for in Creative Video Mode)

2 Press the motion picture button again to end recording

- To record 4K motion pictures, use a UHS Speed Class 3 card.
- When you record 4K motion pictures, the angle of view will be narrower than motion pictures of other sizes.
- To ensure highly accurate focus, 4K motion pictures are recorded at reduced Auto Focus speeds. It may be difficult to focus on the subject with Auto Focus, but this is not a malfunction.
- **With recording in a quiet environment, the sound of aperture, focus and other actions may be recorded in motion pictures. This is not a malfunction.**

The focus operation during recording of motion pictures can be set to [OFF] in [Continuous AF].

- If the surrounding temperature is high, or a motion picture is recorded continuously, [6.1] is displayed and recording may be stopped halfway through. Wait until the camera cools down.

■ Setting the picture size and recording frame rate (MP4)

MENU →  **[Motion Picture]** → **[Rec Quality]**

[4K/100M/30p]*1 / [4K/100M/25p]*1 / [4K/100M/24p]*1 / [FHD/28M/60p] / [FHD/28M/50p] / [FHD/20M/30p] / [FHD/20M/25p] / [HD/10M/30p] / [HD/10M/25p]

- **[FHD] / [HD]:**

Files are split into smaller motion picture files for recording and playback when the file size exceeds 4 GB. (You can continue to record motion pictures without interruption.)

- **[FHD/28M/60p] / [FHD/28M/50p]:**

Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds.

- **[4K]:**

Recording stops when the continuous recording time exceeds 15 minutes.

When using an SDHC memory card, files are split into smaller motion picture files for recording and playback if the file size exceeds 4 GB. (You can continue to record motion pictures without interruption.)

If using an SDXC memory card, you can record a motion picture in a single file even if the size is greater than 4 GB.

*1 4K motion pictures

[4K Live Cropping]

By cropping your motion picture down from the 4K angle of view to Full High Definition, you can record a motion picture that pans and zooms in/out while leaving the camera in a fixed position.

- Hold the camera firmly in place while recording.
- A motion picture will be recorded at [FHD/20M/25p] under [MP4].



Pan



Zoom in

- When you want to zoom in/out, set different angles of view for the cropping start and end frames. For example, to zoom in, set a larger angle of view for the start frame and a smaller angle of view for the end frame.

1 Set mode dial to [CAM]


2 Set the menu

MENU →  **[Creative Video]** → **[4K Live Cropping]**

Settings: [40SEC] / [20SEC] / [OFF]


3 Set the crop start frame and press [MENU/SET] to set

- Set the crop end frame as well.
- When making settings for the first time, a crop start frame of size 1920×1080 is displayed.
- Move the frame by touching it or using the cursor button. You can adjust the frame size by pinching out/pinching in or rotating the rear dial.

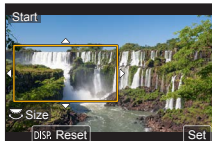

4 Press the motion picture button (or the shutter button) to start recording

- Ⓐ Elapsed recording time
- Ⓑ Set operating time

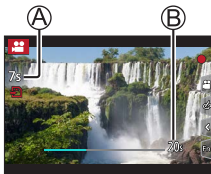

- Immediately release the motion picture button (or the shutter button) after pressing it.
- When the set operating time has elapsed, recording automatically ends. To end recording midway, press the motion picture button (or the shutter button) again.

■ Changing the position and size of a crop frame

Press [Fn3] button while the recording screen is displayed, and perform step 3.

■ To cancel [4K Live Cropping] recording

Set [OFF] in step 2.

- The angle of view narrows.
- [4K Live Cropping] recording cannot be performed when [High Speed Video] is set.
- Focus is adjusted and fixed in the crop start frame.
- [Continuous AF] is set to [OFF].
- [Metering Mode] will be [Ⓐ] (Multi Metering).
- You cannot zoom in/out during [4K Live Cropping] recording.

Viewing your pictures

1 Press [▶] (Playback) button

2 Press ◀▶ to select a picture to be displayed

- When you press and hold ◀▶, the pictures are displayed one after another.

■ Ending Playback

Press [▶] (Playback) button again or press the shutter button halfway.

- The playback screen appears if the camera is turned on while pressing [▶] (Playback) button.
- When [Lens Retraction] is set to [ON], the lens barrel is retracted after approx. 15 seconds as the camera is switched to the playback screen from the recording screen.

■ Viewing motion pictures

This unit was designed to play motion pictures using the MP4 format.

- Motion pictures are displayed with the motion picture icon ([🎬]).

① Press ▲ to start playback

- If you press [MENU/SET] during a pause, you can create a picture from a motion picture.



■ Deleting pictures

Deleted pictures cannot be recovered.

① Press [🗑️] button to delete displayed picture

② Use ▲ to select [Delete Single] and press [MENU/SET]

[Light Composition]

Select multiple frames from 4K burst files that you wish to combine. Parts of the image that are brighter than the preceding frame will be superimposed on the preceding frame to combine the frames into one picture.



MENU → **▶** [Playback] → [Light Composition]

1 Use **◀▶** to select the 4K burst files and press **[MENU/SET]**

2 Choose the combining method and press **[MENU/SET]**

■ [Composite Merging]: Selecting frames to combine

① Drag the slide bar or use **▲▼◀▶** to select the frames to combine

② Press **[MENU/SET]**

- The selected frames are remembered, and the display goes to the preview screen.


- Use **▲▼** to select items and press **[MENU/SET]** to perform the following operations.

- [Next]: Lets you select more frames for combining.

- [Reselect]: Discards the frame selected immediately before and lets you select a different image.

③ Repeat steps ① - ② to select more frames to combine (up to 40 frames)

④ Press **▼** to select **[Save]** and press **[MENU/SET]**

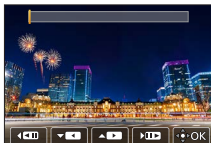

■ [Range Merging]: Selecting a range to combine


- ① Select the frame of the first picture and then press [MENU/SET]
 - The selection method is the same as in step ① of [Composite Merging] setting.
- ② Select the frame of the last picture and then press [MENU/SET]

3 Select [Yes] at the confirmation screen and press [MENU/SET]

- The picture will be saved in JPEG format.

[Sequence Composition]

Select multiple frames from a 4K burst file to create a sequence composition of a moving subject into one picture.

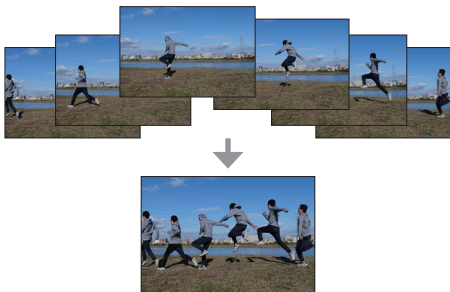


MENU →  **[Playback]** → **[Sequence Composition]**

1 Use ◀▶ to select the 4K burst files and press [MENU/SET]**2 Select frames to combine**

Select the frames so that the moving subject will not overlap on the preceding or subsequent frames. (The sequence composition may not be created properly if the subject overlaps.)

- ① Drag the slide bar or use ▲▼◀▶ to select the frames to combine
- ② Press [MENU/SET]
 - The selected frames are remembered, and the display goes to the preview screen.
 - Use ▲▼ to select items and press [MENU/SET] to perform the following operations.
 - [Next]: Lets you select more frames for combining.
 - [Reselect]: Discards the frame selected immediately before and lets you select a different image.
- ③ Repeat steps ① - ② to select more frames to combine (from 3 to 40 frames)
- ④ Press ▼ to select [Save] and press [MENU/SET]

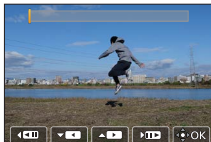

- We recommend using a tripod to take pictures for Sequence Composition.
- Pictures are saved in JPEG format. Recording information (Exif information) of the first frame such as shutter speed, aperture, and ISO sensitivity are also registered.

Menu list

- You can display an explanation on the menu by pressing the [DISP.] button while you select a menu item or setting.



Menus to be displayed in each recording mode

Recording mode:

[Intelligent Auto] menu

[Intelligent Auto Mode]

[iHandheld Night Shot]

[iHDR]

Recording mode:

[Creative Video] menu

[Exposure Mode]

[High Speed Video]

[4K Live Cropping]

Recording mode:

[Custom Mode] menu

You can select your preferred custom setting from [2-1], [2-2], and [2-3].

Recording mode:

[Scene Guide] menu

[Scene Switch]

Recording mode:

[Creative Control] menu

[Filter Effect]

[Simultaneous Record w/o Filter]

 [Rec] menu

[Aspect Ratio]	[i.Dynamic]*1	[Burst Rate]
[Picture Size]	[i.Resolution]*1	[4K PHOTO]
[Quality]	[Flash]	[Self Timer]
[AFS/AFF/AFC]*1	[ISO Auto Upper Limit (Photo)]	[Time Lapse Shot]
[Sensitivity]*1	[Min. Shtr Speed]	[Stop Motion Animation]
[AF Mode]*1	[Long Shtr NR]	[Silent Mode]
[Photo Style]*1	[Diffraction Compensation]*1	[Shutter Type]
[Filter Settings]*1	[Stabilizer]*1	[Bracket]
[Color Space]	[i.Zoom]*1	[HDR]
[Metering Mode]*1	[Digital Zoom]*1	[Multi Exp.]
[Highlight Shadow]*1		

*1 The menu items are common for both [Rec] and [Motion Picture] menus. (Common menu items are indicated in the [Rec] menu list only)

 [Motion Picture] menu

[Rec Quality]	[ISO Auto Upper Limit (Video)]	[Wind Noise Canceller]
[Snap Movie]	[Flkr Decrease]	[Zoom Mic]
[Continuous AF]	[Level Shot]	

 [Custom] menu

 [Exposure]

[ISO Increments]

[Exposure Comp. Reset]

[Exposure Comp. Disp.
Setting]

[Extended ISO]

 [Focus / Release Shutter]

[AF/AE Lock]

[AF Assist Lamp]

[AF Area Display]

[AF/AE Lock Hold]

[Direct Focus Area]

[AF+MF]

[Shutter AF]

[Focus/Release Priority]

[MF Assist]

[Half Press Release]

[Focus Switching for Vert
/ Hor]

[MF Assist Display]

[Quick AF]

[Loop Movement Focus
Frame]

[Pinpoint AF Setting]

 [Operation]

[Fn Button Set]

[Operation Lock Setting]

[Zoom lever]

[Q.MENU]

[Touch Settings]

[Zoom Compose Assist]

[Ring/Dial Set]

[Dial Guide]

 [Monitor / Display]

[Auto Review]

[Guide Line]

[MF Guide]

[Monochrome Live View]

[Center Marker]

[Rec Area]

[Constant Preview]

[Highlight]

[Remaining Disp.]

[Peaking]

[Zebra Pattern]

[Red REC Frame Indicator]

[Histogram]

[Expo.Meter]

[Menu Guide]

 [Lens / Others]

[Lens Position Resume]

[Self Timer Auto Off]

[Face Recog.]

[Lens Retraction]

[Vertical Position Info
(Video)]

[Profile Setup]

 [Setup] menu

[Cust.Set Mem.]	[Power Save Mode]	[No.Reset]
[Clock Set]	[Monitor Display Speed]	[Reset]
[World Time]	[Monitor Display]	[Reset Network Settings]
[Travel Date]	[Monitor Luminance]	[Level Gauge Adjust.]
[Wi-Fi®]	[TV Connection]	[Demo Mode]
[Bluetooth®]	[Language]	[Approved Regulations]
[Wireless Connection Lamp]	[Version Disp.]	[Format]
[Beep]	[Folder / File Settings]	

 [My Menu] menu

[My Menu Setting]

You can register frequently used menus.

 [Playback] menu

[Slide Show]	[4K PHOTO Bulk Saving]	[Rotate]
[Playback Mode]	[Light Composition]	[Video Divide]
[Protect]	[Sequence Composition]	[Time Lapse Video]
[Rating]	[Clear Retouch]	[Stop Motion Video]
[Title Edit]	[Text Stamp]	[Rotate Disp.]
[Face Rec Edit]	[Resize]	[Picture Sort]
[RAW Processing]	[Cropping]	

What you can do with the Wi-Fi®/Bluetooth® function

Operating the camera by connecting it to a smartphone

- Operating the shutter button of the camera using a smartphone (remote recording) (→54)
- Playing back or saving images stored on the camera (→55)
- Combining motion pictures recorded with Snap Movie according to your preference on a smartphone

Expanding the scope of applications by connecting the camera to a smartphone compatible with Bluetooth Low Energy


- Pairing (connection setup) (→50)
 - Turning on/off the camera with a smartphone (→53)
 - [B] (Bulb) recording
 - Transferring recorded images to a smartphone automatically
 - Writing location information of a smartphone on a recorded image
 - Synchronising the camera's clock with a smartphone
- This manual uses the term “smartphone” for both smartphones and tablets unless it is necessary to distinguish between them.
- For details, refer to “Operating Instructions for advanced features (PDF format)”.

Wi-Fi/Bluetooth Function

■ Before Use

- **Complete the date and time settings in advance.** (→18)
- To use the Wi-Fi function on this unit, a destination device equipped with the wireless LAN function is required.

■ Lighting of the WIRELESS connection lamp (Blue)

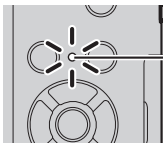

Lit: When the Wi-Fi/Bluetooth function is ON or connected
Blinking: When sending picture data by operating the camera

- In [Wireless Connection Lamp] in the [Setup] menu, you can set the lamp so that it will not light/flash.

■ [Wi-Fi] button

In this Operating Instructions, a function button to which [Wi-Fi] is assigned is referred to as the [Wi-Fi] button. (At the time of purchase, [Wi-Fi] is assigned to [Fn4] in recording mode, and [Fn1] in playback mode.)

- For details on the function button, refer to (→25)

To start up the Wi-Fi function (When in recording mode):

① Touch [Fn]



② Touch [Fn4]



- This camera cannot communicate with other devices via public wireless LAN or your home wireless LAN router.

Operating the camera by connecting it to a smartphone

Installing the smartphone app “Panasonic Image App”

- **Supported OS**

Android™: Android 11 or later

iOS: iOS 16 or later

- ① Connect your device to a network
- ② (Android) Select “Google Play™ Store”
(iOS) Select “App Store”
- ③ Enter “Panasonic Image App” or “LUMIX” into the search box
- ④ Select “Panasonic Image App” and install it



- Use the latest version.
 - Supported OS versions as of April 2026. Supported OS versions may be changed without prior notice.
 - The service may not be able to be used properly depending on the type of smartphone being used.
- For the latest information on the “Image App”, refer to the support site below.
<https://panasonic.jp/support/global/cs/dsc/>
 (This site is available in English only.)

- For details about the operating procedure, etc., refer to [Help] in the “Image App” menu.
- Some of the screens and information provided in this document may be different depending on the supported operating system and “Image App” version.

Connecting the camera to a smartphone compatible with Bluetooth Low Energy

You can connect the camera to a smartphone via a Bluetooth connection.

- **Supported smartphones**

Android: Android 11 or higher equipped with Bluetooth 4.0 or higher
iOS: iOS 16 or higher

 
■ First-time connection

You need to set up pairing (connection) for the first time only. When pairing is set up, a Wi-Fi connection is made automatically.

(On the camera)

MENU →  **[Setup]** → **[Bluetooth]** → **[Bluetooth]**
 → **[SET]** → **[Pairing]**

- The camera enters pairing standby mode and displays its device name.



(On your smartphone)

- ① Start "Image App"
 - If a message is displayed indicating that the smartphone is searching for cameras, close the message.
- ② Select [Bluetooth]
- ③ Turn on the Bluetooth
- ④ Select the device name displayed on the camera's screen from the [Camera enable to be registered] list
 - Bluetooth connection between the camera and the smartphone will be made. A Wi-Fi connection will be made by selecting [Connection].

- To make a connection with the paired smartphone for the second and subsequent times, enable the Bluetooth function of the camera and set the Bluetooth for “Image App” on your smartphone to ON. Then, select a camera (device name) to be connected from the [Camera registered] list.
- [📶] is displayed on the recording screen when a Bluetooth device is connected. If the Bluetooth function is enabled, but the smartphone is not connected, the displayed [📶] is semi-transparent.

Connecting the camera to a smartphone that does not support Bluetooth Low Energy

Connect to a smartphone via Wi-Fi.

- You can also connect via Wi-Fi to a smartphone that supports Bluetooth Low Energy by following the same steps.

(On the camera)

MENU → **[Setup]** → **[Wi-Fi]** → **[Wi-Fi Function]** → **[New Connection]**
→ **[Remote Shooting & View]**


- The information (QR Code, SSID and Password) required for directly connecting your smartphone to this unit is displayed.

- Ⓐ SSID and Password
- Ⓑ QR Code



(On your smartphone)

- Turn on the Wi-Fi function in the setting menu
- Select the SSID displayed on the screen of the camera
- Enter the password displayed on the camera (For first time connection only)
- Start “Image App”

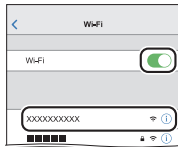

- You can also set up a connection using a QR code.
For details, refer to “Operating Instructions for advanced features (PDF format)”.


Closing the Wi-Fi connection

1 Set the camera to Recording Mode

- Press the shutter button halfway to return to recording mode.

2 Select the camera's menu items to terminate the Wi-Fi connection

MENU →  **[Setup]** → **[Wi-Fi]**
→ **[Wi-Fi Function]** → **[Yes]**

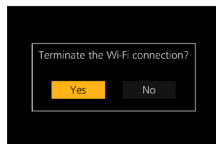

3 On the smartphone, close “Image App”

Turning on/off the camera with a smartphone

Wireless connectivity required: **Bluetooth** **Wi-Fi**

This function allows you to turn on the camera from a distant location and take pictures or view images on the camera even when it is in your bag.

1 Make a Bluetooth connection to the smartphone (→50)

2 Select the camera's menu

MENU →  **[Setup]** → **[Bluetooth]** → **[Remote Wakeup]** → **[ON]**

3 Set the Camera [ON/OFF] switch to [OFF]

4 On the smartphone, start up the “Image App”, and set the Bluetooth function to a state in which a connection can be made (standby state)

5 Operate the smartphone

① Select []

② Select [Remote operation]



- The camera automatically turns on, allowing it to make a Wi-Fi connection automatically.

Depending on the connection status of the smartphone, you may need to change the connected device on the Wi-Fi setup screen. Follow the on-screen message on the smartphone to change the setting.

■ Turning off the camera with the smartphone

① Select []

② Select [ OFF]

- When [Remote Wakeup] is set to [ON], the Bluetooth function continues to operate even after the camera is turned off, thus causing the battery to drain.

Operating the shutter button of the camera using a smartphone (remote recording)

Wireless connectivity required: Wi-Fi

1 Connect to a smartphone (→52)

2 Operate the smartphone

If the camera is already connected to the smartphone via Bluetooth, select [] → [Remote operation].

When you need to change the connected device on the Wi-Fi setup screen, follow the on-screen message to change the setting.

① Select []

② Take pictures

- The recorded images are saved in the camera.
- Some settings are not available.



①

Using the smartphone to operate the shutter button via a Bluetooth connection only

Wireless connectivity required: **Bluetooth**

1 Make a Bluetooth connection to the smartphone (→50)

2 Operate the smartphone

- ① Select [
- ② Select [Shutter Remote Control]
- ③ Take pictures



- Read the [Help] in the “Image App” menu for further details on how to operate [Shutter Remote Control] of “Image App”.

Playing back or saving images stored on the camera

Wireless connectivity required: **Wi-Fi**

1 Connect to a smartphone (→52)

2 Operate the smartphone

If the camera is already connected to the smartphone via Bluetooth, select [] → [Remote operation].

When you need to change the connected device on the Wi-Fi setup screen, follow the on-screen message to change the setting.

- ① Select []
 - You can switch a device of pictures to be displayed using the icon at the top left on the screen. Select [LUMIX] to display a picture saved in the camera.

(Playing back a picture)

- ② When the picture is touched, it is played back at a larger size

(Saving pictures)

- ③ Press and hold the picture and drag it



Downloading software

Download and install software to edit and play back images with a PC.

- To download the software, your PC must be connected to the Internet.
It may take time to download the software in some communication environments.
- Supported OS versions as of April 2026. Supported OS versions may be changed without prior notice.

PHOTOfunSTUDIO 10.0 AE (Windows® 8.1 / 10 / 11)

You can capture still pictures or motion pictures to your PC, or organise captured pictures by categorising by recording date, model name of the digital camera used to record, etc. You can also correct still pictures, edit motion pictures, or write to DVD.

The software is available for download until the end of May 2031.

https://panasonic.jp/support/global/cs/soft/download/d_pfs10ae.html

- For details about information such as the operating environment or operating method, refer to the “Operating Instructions for advanced features (PDF format)” or the operating instructions of “PHOTOfunSTUDIO” (PDF format).

SILKYPIX Developer Studio SE (Windows® 10 (64 bit) / 11, macOS 10.13 - 10.15 / 11 / 12 / 13 / 14)

This software develops and edits RAW file pictures. Edited pictures can be saved in a file format such as JPEG or TIFF that can be displayed on a PC, etc.

<http://www.isl.co.jp/SILKYPIX/english/p/>


- For details on the operating environment and how to use the SILKYPIX Developer Studio, refer to the “Help” or the Adwaa’s support website.

List of monitor displays

The screen display of the monitor indicates the camera's operating state.

- For details about the playback screen, refer to "Operating Instructions for advanced features (PDF format)".

In recording

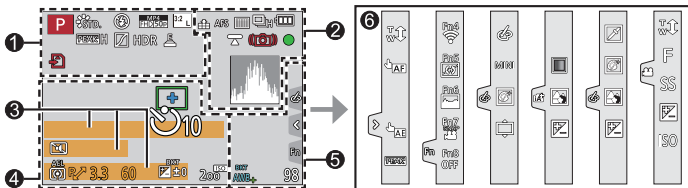

1	P	Recording mode (→20)
	STD.	[Photo Style]
	Flash	Flash setting
	MP4 FHD/50p	[Rec Quality]
	SNAP 4SEC	[Snap Movie]
	3:2 L	[Aspect Ratio]/ [Picture Size]
	Filter	Picture effect (Filter) adjustment display
	EXPS	Types of picture effects (Filter)
	Card	Card (displayed only during recording)

XXhXXmXXs	Elapsed recording time
Camera	Simultaneous recording indicator (When taking still pictures while recording a motion picture)
PEAK H	[Peaking]
Highlight	[Highlight Shadow]
HDR	[HDR]/[iHDR]
Multi Exp.	[Multi Exp.]
E	Electronic shutter
Overheat	Overheat indicator (→29, 33, 35)

2

	[Quality]
100fps	[High Speed Video]
AFS	[AFS/AFF/AFC]/MF
BKT AFS	Focus Bracket
	[AF Mode]
	[Pull Focus] ([Snap Movie])
	[Face Recog.]
AFL	AF Lock
	Burst
	[4K PHOTO] (→28)
	[Post Focus] (→32)
	[Self Timer]
	Battery indicator
AF	Macro recording (→23)
	[Level Shot]
	[Stabilizer]
	Jitter alert
	Focus (Lights green.) (→21)/ Recording state (lights up in red) (→35)
	Focus (Under low illumination)
	Focus (Starlight AF)
	Wi-Fi connection status
	Bluetooth connection status (→51)
GPS	Location Logging
	Histogram

3

Name*1
Travel elapsed days*2
Age in years/months*1
Location*2
Current date/time*2
Travel destination setting*2:
Exposure meter
Zoom (→22)

4

	AF area
+	Spot metering target
+	[Center Marker]
	[Self Timer]
	[Zoom Mic]
	[Silent Mode]
AEL	AE Lock
	[Metering Mode]
	Programme Shift
3.3	Aperture value
BKT 3.3	Aperture Bracket
60	Shutter speed
BKT ± 0	Exposure compensation
	Exposure Bracket
	Brightness (exposure)
Manual Exposure Assist	
200	ISO sensitivity

5

	[Dial Guide]
AWBc	White Balance
BKT AWB+	White Balance Bracket
	White Balance Fine Adjustment
	Colouring
98	Number of recordable pictures
r20	Maximum number of pictures that can be taken continuously
RXXmXXs	Available recording time

6

Touch tab

	Touch zoom
	Touch Shutter
	Touch AF
	[Touch AE]
	[Peaking]

	Function buttons (→25)
	Colouring
	Defocus control function
	Brightness (exposure)
	Type of defocus ([Miniature Effect])
	[One Point Color]
	[Sunshine]
	Picture effect (Filter) adjustment display
	Picture effects ON or OFF
MINI	Picture effects (Filter)
F	Aperture value
SS	Shutter speed
ISO	ISO sensitivity

*1 This is displayed for about 5 seconds when the camera is turned on if the [Profile Setup] setting is set.

*2 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from Playback Mode to Recording mode.

- The information displayed, such as histograms, magnifications, and numeric values, are only for the purpose of reference.

Q&A Troubleshooting

- Performing [Reset] in the [Setup] menu may resolve the issue.
- Further information is provided in the “Operating Instructions for advanced features (PDF format)”. Check it together with the information in this section.

The charging lamp blinks.

- Charging is being performed in a place with extremely high or low temperature.
→ **Reconnect the USB connection cable and retry charging in a place where ambient temperature is 10 °C to 30 °C (50 °F to 86 °F) (temperature conditions also apply to the battery itself).**
- Charging is not possible if the power supply capacity of the computer is low.

Focus not aligned correctly.

- Subject outside of focus range.
- [Focus/Release Priority] is set to [RELEASE]. (→45)
- [Shutter AF] is set to [OFF]. (→45)
- AF Lock is set inappropriately.
- If there are fingerprints or dirt on the lens, the focus may be set to the lens and not the subject.

Subject appears skewed in pictures.

- If you take a picture of a moving subject in the electronic shutter mode, motion picture recording mode, or 4K photo recording mode, the subject in the picture may be skewed in some cases. This is characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.

No flash emitted.

- The flash becomes unavailable in the following cases.
 - The flash is closed.
 - Flash set to [⊙] (Forced Flash Off).
- Set [Shutter Type] to [AUTO] or [MSHTR]. (→44)
- Set [Silent Mode] to [OFF]. (→44)

Striping or flicker may appear under lighting such as fluorescent lighting and LED lighting fixture.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.
- If you are taking still pictures using the electronic shutter, the striping may be reduced by setting a slower shutter speed.
- When noticeable flicker or striping is seen under lighting such as a fluorescent or LED lighting fixture in the motion picture recording mode, you can reduce the flicker or striping by setting up [Flkr Decrease] (→44) and fixing the shutter speed. You can set the shutter speed manually in the Creative Video Mode. (→20)

A connection cannot be established. Radio waves get disconnected. (Wi-Fi)

- Bring the device (smartphone, etc.) you want to connect to closer to the camera to communicate. (The communication distance varies greatly depending on the usage environment, etc.)
- If any device, such as a microwave oven, cordless phone, etc., that uses 2.4 GHz frequency are used nearby this unit simultaneously, radio waves may get interrupted.
→ Use them sufficiently away from the device.
- If the device (smartphone, etc.) you want to connect to is connected to a wireless access point other than the camera, you will not be able to connect the device to the camera. Change the Wi-Fi settings of the device you want to connect to so that the access point to be used is set to the camera.
- When the battery indicator is flashing red, the connection with other equipment may not start or the connection may be disrupted. (A message such as [Communication error] is displayed.)
- When this unit is placed on a metal table or shelf, the connection may not be established easily because the camera is affected by radio waves. Use the camera away from metal surfaces.

The lens makes a clicking noise.

- When the camera is turned on or off, the lens is moved, or an aperture operation is performed, such a noise may be heard. This is not a malfunction.
- When the brightness changes after a zooming operation or moving the camera, the lens may make a noise while adjusting the aperture. This is not a malfunction.

Specifications

Digital Camera: Information for your safety

Power Source	7.2 V ===
Power	1.9 W (When recording)
Consumption	1.6 W (When playing back)

Camera effective pixels	Approx. 20,100,000 pixels
Image sensor	1.0" Back-illuminated (BSI) CMOS image sensor, total pixel number 20,900,000 pixels (Approx.) Primary colour filter
Lens	Optical 15x zoom f=8.8 mm to 132 mm (35 mm film camera equivalent: 24 mm to 360 mm) Max. Wide: F3.3 to F8.0 Max. Tele: F6.4 to F8.0
Image Stabiliser	Optical method
Focus range	AF: 50 cm (1.6 feet) (Max. Wide)/ 1 m (3.3 feet) (Max. Tele) to ∞ AF Macro/MF/Intelligent Auto/Motion picture: 3 cm (0.098 feet) (Max. Wide)/ 1 m (3.3 feet) (Max. Tele) to ∞
Shutter system	Electronic shutter + Mechanical shutter
Minimum Illumination	Approx. 10 lx (when i-Low light is used, the shutter speed is 1/25th of a second)

Shutter speed	Still picture: [T] (Time) (Max. approx. 120 seconds)*1, 60 seconds to 1/2000th of a second (When the mechanical shutter is used), 1 second to 1/16000th of a second (When the electronic shutter is used) *1 [B] (Bulb) recording is available when using [Shutter Remote Control] (via Bluetooth connection). Motion picture: 1/2 second to 1/16000th of a second (When [Exposure Mode] is set to [M] in Creative Video Mode and [MF] is selected), 1/25th of a second to 1/16000th of a second (Other than the above)
Exposure (AE)	Programme AE (P)/Aperture-priority AE (A)/ Shutter-priority AE (S)/Manual exposure (M) Exposure Compensation (1/3 EV steps, -5 EV to +5 EV)
Metering Mode	Multiple/Centre weighted/Spot
Monitor	3.0" TFT LCD (3:2) (Approx. 1,840,000 dots) (field of view ratio about 100%) Touch screen
Flash	Built-in pop up flash AUTO, AUTO/Red-Eye Reduction, Forced ON, Forced ON/Red-Eye Reduction, Slow Sync., Slow Sync./Red-Eye Reduction, Forced OFF

Microphones	Stereo
Speaker	Monaural
Recording media	SD Memory Card/SDHC Memory Card*2/ SDXC Memory Card*2 *2 UHS-I UHS Speed Class 3
Recording file format	
Still picture	RAW/JPEG (based on Design rule for Camera File system, based on Exif 2.31 standard)
4K Photo	MP4 (H.264/MPEG-4 AVC)
Motion picture	MP4 (H.264/MPEG-4 AVC, Audio compression format: AAC (2ch))
Interface	
[HDMI]	Micro HDMI Type D
[USB/CHARGE]	USB 2.0 (High Speed)/USB Type-C®
Dimensions	Approx. 111.2 mm (W) × 66.4 mm (H) × 45.2 mm (D) [4.38" (W) × 2.61" (H) × 1.78" (D)] (excluding the projection part)
Mass	With card and battery: Approx. 337 g (0.75 lb) Excluding card and battery: Approx. 295 g (0.65 lb)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10%RH to 80%RH

■ Wireless transmitter

Wireless LAN

Compliance standard	IEEE 802.11b/g/n (standard wireless LAN protocol)
Frequency range used (central frequency)	2412 MHz to 2462 MHz (1 to 11 ch)
Encryption method	Wi-Fi compliant WPA™/WPA2™
Access method	Infrastructure mode

Bluetooth function

Compliance standard	Bluetooth v5.0 (Bluetooth Low Energy (BLE))
Frequency range used (central frequency)	2402 MHz to 2480 MHz

■ Battery pack (lithium-ion)

(Panasonic DMW-BLG10E): Information for your safety

Voltage/capacity:	7.2 V/1025 mAh
--------------------------	----------------

The symbols on this product (including the accessories) represent the following:

---	DC
-----	----

Specifications are subject to change without notice.

Digital Camera Accessory System

Description	Accessory#
Battery pack	DMW-BLG10
Battery charger*1	DMW-BTC12
AC adaptor*2	DMW-AC11

*1 Supplied with an AC adaptor and a USB connection cable.

*2 Supplied with an AC mains lead and a USB connection cable.

- Part numbers are as of April 2026. These may be subject to change.
- Some optional accessories may not be available in some countries.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic,
- (2) the software owned by third party and licensed to Panasonic,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof displayed by selecting [MENU/SET] → [Setup] → [Version Disp.] → [Software info]. At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0 or LGPL V2.1, as well as the respective copyright notice thereof.

Contact Information: oss-cd-request@gg.jp.panasonic.com

The source code and the copyright notice are also available for free in our website below.

<https://ospo.panasonic.com/oss>

Reading the Operating Instructions (PDF format)

More detailed operating instructions are available in “Operating Instructions for advanced features (PDF format)”. To read it, download it from the website.

<https://panasonic.jp/support/dsc/oi/TZ300/index.html>



- Click the desired language.
- You will need Adobe Reader to browse or print the Operating Instructions (PDF format). You can download and install a version of Adobe Reader that you can use with your OS from the following website. (As of April 2026)
<http://www.adobe.com/products/acrobat/readstep2.html>

Panasonic Warranty

LUMIX Camera, Digital Video Camera & Camera Accessories, 24 Month Warranty from Date of Purchase ("Warranty Period")

1. This warranty does not exclude, restrict or modify in any way other rights and remedies under the law which relates to the product, including any non-excludable statutory guarantees in Australia.
2. Subject to the conditions of this warranty and during the Warranty Period, Panasonic or its Authorised Service Centre will perform the necessary service on the product without charge for parts or labour, if in the opinion of Panasonic, the product is found to be faulty within 24 months (the "Warranty Period") from the date of purchase appearing on your purchase receipt.
3. This warranty only applies to Panasonic products purchased in Australia and sold by Panasonic Australia or its Authorised Distributors or Dealers and only where the products are used and serviced within Australia or its territories. Warranty cover only applies to service carried out by a Panasonic Authorised Service Centre and only if valid proof of purchase is presented when warranty service is requested.
 - (a) Panasonic and LUMIX branded products purchased from other sources (including 'grey', 'parallel' or 'direct' imports) are not covered by this warranty.
4. This warranty only applies if the product has been used in accordance with the manufacturer's recommendations (as noted in the Operating Instructions) under normal use and reasonable care (in the opinion of Panasonic). The warranty covers normal, intended use only and does not cover damage, malfunction or failure resulting from:
 - (a) misuse, abuse, neglect, accidental damage or modifications;
 - (b) infestation by insects or vermin;
 - (c) incorrect installation, assembly, improper voltage, or mains supply problems;
 - (d) natural disaster or acts of God (e.g. lightning, flood, fire, earthquakes etc);
 - (e) rust or damage caused by exposure to abnormally corrosive conditions;
 - (f) an accessory, component or other equipment not supplied by Panasonic Australia;
 - (g) improper maintenance by the customer (refer to the maintenance section of the Operating Instructions) which includes but is not limited to the failure to undertake regular cleaning; and maintenance.
 - (h) incorrect operation of the product; and
 - (i) where no actual fault of the product is determined to have occurred, during a customer-initiated service call, and where the perceived problem is explained within the Operating Instructions (including the troubleshooting section) warranty service is not applicable.
5. This warranty does not cover the following items unless the fault or defect existed at the time of purchase:
 - (a) Casing Parts
 - (b) Noise or vibration that is considered normal
 - (c) User replaceable Batteries
6. You will be responsible for costs associated with making the warranty claim where there are costs associated with shipping or handling or travelling outside of the area normally serviced by Panasonic or any repair agent authorised by Panasonic.
7. To the extent permitted by law and subject to your non-excludable statutory rights and guarantees, Panasonic excludes all warranties and liabilities (other than those contained in this warranty) including any liability for loss or damage whether direct or indirect arising from your purchase, use or non-use of the product.

8. In addition to your rights under this warranty, Panasonic products come with consumer guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any reasonably foreseeable loss or damage. You are also entitled to have the product repaired or replaced if the product fails to be of an acceptable quality and the failure does not amount to a major failure.
9. To claim warranty service, when required, you should:
- Contact Panasonic's Customer Care Centre on 132 600 for Authorised Service Centre information
 - Send or take the product to a Panasonic Authorised Service Centre together with your purchase receipt as a proof of purchase date.

**THIS WARRANTY CARD AND THE PURCHASE DOCKET (OR SIMILAR PROOF OF PURCHASE)
SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES**

If you require assistance regarding warranty conditions or any other enquiries, please visit the **Panasonic Australia** website **www.panasonic.com.au** or contact by phone on **132 600**
If phoning in, please ensure you have your operating instructions available.

Panasonic Australia Pty. Limited

ACN 001 592 187 ABN 83 001 592 187

1 Innovation Road, Macquarie Park NSW 2113
www.panasonic.com.au

PRO-031-F49 Issue: 1.0

01.04.2024

- SDXC Logo is a trademark of SD-3C, LLC.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- HDAVI Control™ is a trademark of Panasonic Holdings Corporation.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Pentium is a trademark of Intel Corporation in the U.S. and/or other countries.
- Windows is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc.
- Google, Android and Google Play are trademarks of Google LLC.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.
- “Wi-Fi®” is a registered trademark of Wi-Fi Alliance®.
- “WPA™”, and “WPA2™” are trademarks of Wi-Fi Alliance®.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Other names, company names, and product names mentioned in these instructions are trademarks or registered trademarks of the companies concerned.





**Disposal of Old Equipment and Batteries
Only for European Union and countries
with recycle systems**

These symbols are only valid in the European Union and countries with recycle systems. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Panasonic Corporation

Web Site: <http://www.panasonic.com>

© Panasonic Corporation 2026