



CONVECTION MICROWAVE OVEN COOKING GUIDE

NN-CD87K

AUTO PROGRAMS

To allow for Auto Weight Program operation, ensure the oven is in Clock Mode. Select the desired program by turning the dial. Some menus require Preheat.

Program	AUTO WEIGHT - REHEAT BEVERAGE			AUTO WEIGHT - RE-BAKE BREAD		
	Tea/Coffee	Milk/Hot Chocolate/Milky Coffee	Soup	Baguette/Crusty Rolls	Croissants	
Weight Range	200g-400g or 2 beverages	200g-600g	200g-1000g	100g-500g	50g-350g	
Menu	Menu 2	Menu 3	Menu 4	Menu 5 (preheat required)	Menu 6 (preheat required)	
Recommended Oven Accessory	Glass turntable.	Glass turntable.	Microwave safe bowl on glass turntable.	Place Baguette/Crusty Rolls on enamel tray on glass tray.	Place Croissants on enamel tray on glass tray.	

AUTO SENSOR MENUS

Program	Fresh Vegetables	Frozen Vegetables	Jacket Potatoes	Casserole	Fresh Fish	Rice	Dried Pasta	Fresh Pasta
Weight Range	200g-1000g	200g-800g	200g-1500g	900g-2000g	200g-800g	100g-400g	100g-500g	200g-800g
Menu	Menu 7	Menu 8	Menu 9	Menu 10	Menu 11	Menu 12	Menu 13	Menu 14
Recommended Oven Accessory	Microwave safe glass dish, cover with cling wrap. Place on glass turntable.	Microwave safe glass dish, cover with cling wrap. Place on glass turntable.	Enamel tray on glass tray.	Casserole dish with lid. Place on glass turntable.	Enamel tray on wire rack on glass tray.	Microwave safe glass dish with lid. Place on glass turntable.	Microwave safe glass dish with lid. Place on glass turntable.	Microwave safe glass dish with lid. Place on glass turntable.

AUTO WEIGHT - JUNIOR MENUS

Program	Puree Vegetables	Puree Fruits	Junior Pasta Bake	Chilled Breaded Products	Frozen Breaded Products	Fresh Vegetable Fries	Mug Cake
Weight Range	100g-400g	100g-400g	250g-800g	100g-500g	100g-500g	100g-500g	1 Mug
Menu	Menu 15	Menu 16	Menu 17	Menu 18	Menu 19	Menu 29 (Preheat required)	Menu 21
Recommended Oven Accessory	Microwave safe glass dish, cover with cling wrap. Place on glass turntable.	Microwave safe glass dish, cover with cling wrap. Place on glass turntable.	Enamel tray on glass tray.	Casserole dish with lid. Place on glass turntable.	Enamel tray on wire rack on glass tray.	Microwave safe glass dish with lid. Place on glass turntable.	Microwave safe glass dish with lid. Place on glass turntable.

AUTO WEIGHT - COMBINATION MENUS

Program	Frozen Pizza	Frozen Potato Products	Roast Pork	Fish and Chips	Whole Chicken	Beef Rare	Beef Medium	Lamb Medium	Lamb Well Done
Weight Range	200g-450g	200g-500g	500g-2000g	200g-500g	9200g-2000g	500g-2000g	500g-2000g	1000g-2000g	1000g-2000g
Menu	Menu 22	Menu 23 (Preheat required)	Menu 24	Menu 25 (Preheat required)	Menu 26 (Preheat required)	Menu 27	Menu 28	Menu 29	Menu 30
Recommended Oven Accessory	Wire rack on enamel tray on glass tray.	Enamel tray on wire rack on glass tray.	Enamel tray on wire rack on glass tray.	Enamel tray on wire rack on glass tray.	Enamel tray and place on glass tray.				

REHEAT AND DEFROST

One Push Reheat

Turn Dial so Clock Mode is displayed

Press Dial to start.

Dial

Turn Dial to select desired program.

Weight range 200g-1000g

Food in original microwave container - pierce covering a few times.
Food in microwave safe dish - cover with cling wrap and pierce cling wrap a few times.

Turn dial to select time (up to 1 hour 30 minutes).

Press Start.

Press Dial to confirm program selection.

Press Start.

GRILL

Recommended Oven Accessory

Press x1

Grill 1 (High)

Toasting bread, muffins & teacakes etc.

Press x2

Grill 2 (Medium)

Thin seafood.

Press x3

Grill 3 (Low)

Slices of poultry or meat.

Set cooking time by using Dial (max 1 hour 30 mins).

Press Dial to Start.

Wire rack, on enamel tray on glass tray or enamel tray, on wire rack on glass tray.

Wire rack, on enamel tray on glass tray or enamel tray, on wire rack on glass tray.

Wire rack, on enamel tray on glass tray or enamel tray, on wire rack on glass tray.

CONVECTION (without Preheat)

Recommended Oven Accessory

Press CONVECTION button to select desired temp.

40°C and 100°C - 220°C.

Set cooking time by using Dial (Max 9 hours).

Press Dial to Start.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

CONVECTION (with Preheat)

Recommended Oven Accessory

100°C - 220°C.

Press Dial to Start Preheat.

When Preheat is over, oven will beep and "P" will flash.

Set cooking time by using Dial (Max 9 hours).

Press Dial to Start.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

Wire rack, on enamel tray, on glass tray Food or Baking dish on enamel tray.

COMBINATION

Press Combination button to select desired cooking mode	Type of Food	Recommended Oven Accessory
Combi 1 Grill 1 (High + MW 440W)	Breaded Fish, Breaded Chicken, Toasted Sandwiches, Frozen Croquettes, Samosas, Spring Rolls.	
Combi 2 Convection (180°C + MWO 100W)	Stews, Casseroles and slow cooking Roast Meats.	
Combi 3 Convection (220°C + MWO 440W)	Frozen Potato products, Quiches, part-baked Rolls and Baguettes, thin based Pizzas, Chilled Gratin, Fruit Pies, Crumbles.	
Combi 4 Convection (200°C + MWO 440W)	Pasties, Meat Pies, Whole Chicken, Turkey Crown, Frozen Gratin.	
Combi 5 Convection (160°C + MWO 440W)	Joints of Meat, Croissants, thick based Pizzas.	
	Set cooking time by using Dial (Max 9 hours). Press Dial to Start.	

Please refer to the Operating Instructions booklet for further details, tips and techniques. Specifications are subject to change without notice. Food images are for the purpose of explanation. Publication date October 2020.