

# Precautions for Safe and Effective Charging

- To help protect the product and ensure safe use, please make sure the socket cover is firmly closed when using or washing the shaver.
- Do not charge the product if the appliance socket is wet. Charging while the socket is wet may cause overheating, posing a risk of burns or fire.
- For best performance and safety, always use the USB cable provided with the product.

If the socket is wet, we recommend wiping it with a dry cloth and ensuring it is completely dry before charging.

Appliance socket

Socket cover  
-inner side

