

- Do not put the wet clothes on washing machine lid or panel .
- Always fill the detergent in detergent case , Do not put directly in the tub.
- Do not put water directly into the tub , always use water inlet to fill water.
- Do not place the machine on uneven surface , use leg adjustment for machine balance.
- Always use desired program for different clothes type.
- Do not wash items (such as paper or diapers) other than laundry.
- Remove coins, pins, paper clips, nails etc from clothes before wash.
- Do not use whiten bleach (chlorine bleach) for colour clothes to prevent loss of colour.
- Load laundry evenly in the tub for balance operation.
- Clean the lint filter & detergent drawer periodically.(Do not wash laundry without filter)
- Always put the clothes in tub as per machine capacity, Do not overload.