

Guidelines For Installations

Panasonic

- Do not install the machine on unstable and uneven floor location like blocks, timber or table with wheels, Always install the machine on even surface.
- Do not install the machine on place if there is a chance of freezing.
- Always install the bottom cover to prevent water and rodent entry.
- Attach the external drain water hose:
 - Do not put the hose tip under water.
 - Do not raise the hose higher than 10 cm above the floor
 - Do not extend the overall length to more than 3 m.
- Fix the adjustable leg , as it stabilize and not create any abnormal noise
- Always connect the grounding.

