

## Elenco serie TV Panasonic compatibili con l'app Netflix



2019	2018	2017	2016	2015	2014	2013	2012
<b>LCD:</b> GX942 GX830 GX810 GX710 GX700 GX555	<b>LCD:</b> FX780 FX740 FX700 FX633 FX623 FX613 FX550 FS503	<b>LCD:</b> EX780 EX703 EX633 EX613 EX603 ES513 ES403	<b>LCD:</b> DX900 DX800 DX780 DX730 DXE720 DXM710 DX700 DX653 DX600 DS503 DS500 DS400	<b>LCD:</b> CZ950 CX800 CX750 CX740 CXW704 CX700 CXE720 CXM710 CX680 CS630 CS620 CS610 CS600 CS520 CS510 CS500 CSW504 CSW514 CSW524 CR850 CR730 CR433 CRW434 CXW414 CXW404 C320	<b>LCD:</b> AX900 AX800 AX630 AS800 AS750 AS740 AS650 ASM651 ASE650 AS640 AS600 AS520 AS500	<b>PDP:</b> ZT60 VT60 GT60 ST60	<b>PDP:</b> VT50 GT50 ST50 UT50 XT50
<b>OLED :</b> GZ2000 GZ1500 GZ1000 GZ960 GZ950	<b>OLED :</b> FZ950 FZ800	<b>OLED :</b> EZ1000 EZ950				<b>LCD:</b> WT600 WT60 DT60 FT60 EW5 EW6 BL6 ETW60 ET60 E6	<b>LCD:</b> WT50 DT50 ET50 ET5 E5 EWT5

