 


Panasonic

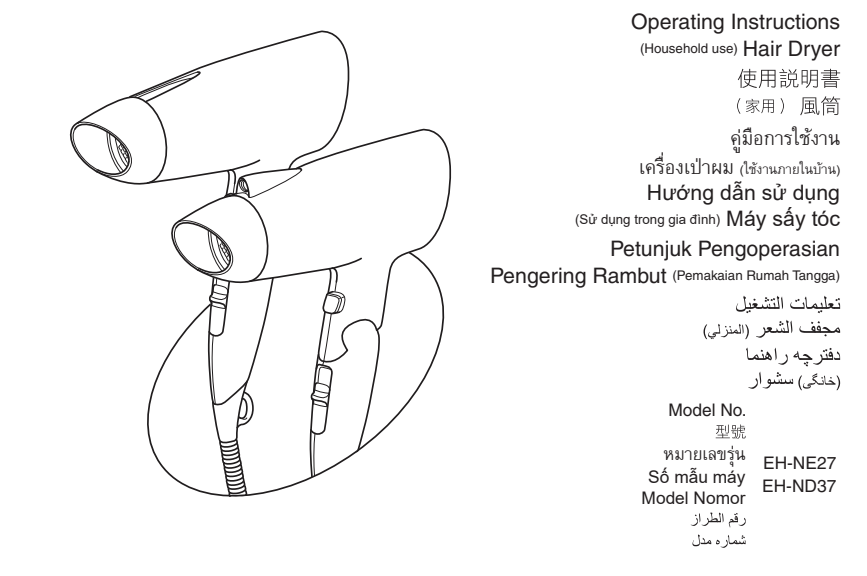

Thank you for purchasing this Panasonic product.
Before operating this unit, please read these instructions completely and save them for future use.

感謝購買 Panasonic 產品。

使用本產品之前，請仔細閱讀本說明書，並妥善保存以供未來使用。

ขอขอบคุณที่ซื้อเครื่องใช้ของ Panasonic

ก่อนใช้งานเครื่องนี้ โปรดอ่านคู่มือการใช้งานโดยละเอียดและเก็บไว้สำหรับในอนาคต

Cảm ơn bạn đã mua sản phẩm Máy sấy tóc của Panasonic.
Trước khi vận hành thiết bị, xin vui lòng đọc toàn bộ hướng dẫn sử dụng và lưu lại thật kỹ lưỡng.

Terima kasih telah membeli produk Panasonic ini.

Sebelum menggunakan alat ini, harap baca instruksi secara menyeluruh dan simpanlah untuk penggunaan di masa mendatang.

تشكركم على شراء هذا المنتج من باناسونيك.

 
قبل تشغيل هذه الوحدة، يرجى قراءة هذه التعليمات بعناية وحفظها لتتلافح في المستقبل.

از حسن بخت شما خرید این محصول باناسونیک متشکرم.

قبل از راه اندازی این دستگاه، لطفاً این دستورالعمل را با دقت کامل مطالعه کنید و آنها را برای استفاده در آینده نگه دارید.

Panasonic Corporation
https://www.panasonic.com
© Panasonic Corporation 2022
© EN, HK, TH, VN, IND, AUS, F&E

Printed in Thailand
EH9210NE279591 1/05/22-0

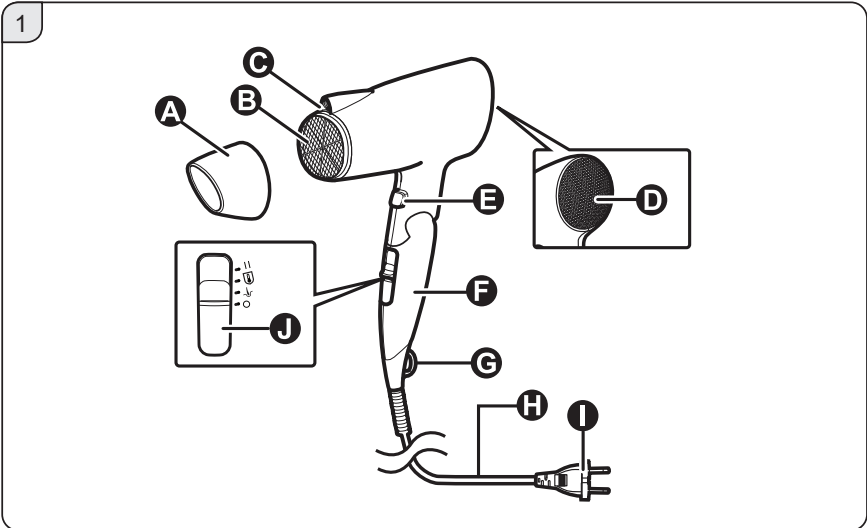

English
Safety precautions
Make sure to follow these instructions.
To prevent accidents, injuries or damage to property, please follow the instructions below.
⚠ WARNING Indicates potential hazard that could result in serious injury or death.
⚠ CAUTION Indicates potential hazard that could result in minor injury or property damage.
Some parts of the safety precaution illustrations differ from the actual product.
⚠ WARNING
▶ Plug and Cord - Do not use with the cord bundled. - Do not damage the cord or plug. - Do not defuse, modify, forcefully bend or pull the cord or plug. Also, do not place anything heavy on, twist or pinch the cord. - Do not use when the plug or cord is damaged or hot. - Do not wrap the cord tightly around the main body when storing. - Do not store or use the cord in a twisted state. - Disconnect the plug by holding onto it instead of pulling on the cord. - Always turn off the power switch and disconnect the plug from the household outlet after use. - Insert the plug into the household outlet directly. - Do not use with an extension cord. - Fully insert the plug into a household outlet. Never use the appliance if the plug fits loosely. - Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance. - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice. - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent (described in the warranty), or similarly qualified persons in order to avoid a hazard.
▶ In case of an abnormality or malfunction - Immediately stop using and remove the plug if there is any abnormality or malfunction. <Abnormality or malfunction cases> - Air is not emitted - Unit stops sporadically - Interior becomes red-hot and smoke is emitted - The appliance is damaged or deformed, or strange noise is emitted. - Immediately request inspection or repair at an authorized service center.
▶ Maintenance When you see sparks around the air outlet while using the hot air setting, stop using and remove the lint on the air outlet and air inlet.
▶ This appliance - Do not block, or insert hair pins or other foreign objects into the air inlet, air outlet, or ion outlet. - Do not leave the product with the power switch on. - Do not keep within the reach of infants or young children. - Do not let them use the appliance. - Do not use in proximity of flammable materials (such as alcohol, benzine, thinner, spray, hair care product, nail polish remover). - Never modify, disassemble, or repair. - Doing so may cause ignition or injury due to abnormal operation. - Contact an authorized service center for repair. - Do not handle any part of the plug or appliance with hands. - This appliance is not designed for commercial use, and is not intended for use without appropriate maintenance. - Do not immerse the appliance in water. - Do not use or store the appliance near water. - Do not use or store the appliance near bathtubs, showers, basins or other vessels containing water. - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. - Children should be supervised to ensure that they do not play with the appliance.
⚠ CAUTION
▶ To protect your hair - Be sure to keep a distance of over 3 cm between the air outlet and your hair. - Be sure to keep your hair at least 10 cm away from the air inlet to avoid hair getting tangled.
▶ Note the following precautions - Do not drop or subject to shock. - Do not use on children under 6 years old. - Do not touch the air outlet and set nozzle which will become very hot. - Do not use the appliance for any other purpose than drying hair.
▶ Note This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to cool air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair, etc. is in the air inlets and outlets before switching it on again.

Parts identification (Fig. 1)

❶ Set Nozzle ❷ Air outlet ❸ Ion outlet EH-NE27 only ❹ Air inlet ❺ Cool-shot button The air remains cool while the cool-shot button is held down. ❻ Handle ❼ Ring for hanging ❽ Cord ❿ Plug The shape of the plug differs depending on the area.	⓫ Power switch II Turbo (Strong hot airflow) II Heat Protection (Strong warm airflow) II Scalp Care (Gentle warm airflow) O Off
--	--

(Some instructions only use the illustrations of EH-NE27 model to explain the product.)

How to use

- Before using the hair dryer, confirm that the power switch is at position "O", then plug into a household outlet and turn on the power switch.
- Select the airflow with the power switch, and then dry your hair.
- Set the power switch to position "O", and then remove the plug from the household outlet.

- ▶ Set nozzle**
For easy styling and blow drying of hair, attach the set nozzle to the hair dryer.
- Set nozzle helps to direct the airflow onto a specific area of the hair.

About ion (EH-NE27 only)

Ions are particles that combine negatively charged oxygen and moisture in the air, and cannot be seen through the naked eye. (Ion generation method: High-voltage discharge)

- ▶ Notes**
 - You may notice a specific odor when using this hair dryer. This is not harmful to the human body.
 - The effects of ion might not be felt by the following people.
 - People with curly hair, strong curly hair, very smooth hair, short hair, or who have had a hair straightening perm in the last three or four months.

About Heat Protection

This mode provides constant and warm temperature to protect hair from heat.

About Scalp Care

This mode provides gentle warm air for scalp care blows.

Maintenance

Always turn the power switch off and disconnect the plug from the household outlet. (Except when performing maintenance on the air outlet)

Maintaining the air inlet

Clean the air inlet once a month or over.

- Clean lint, hair, or other matter from the air inlet with a toothbrush or a vacuum cleaner.

Maintaining the air outlet

Clean the air outlet once a month.

Scrub to remove any dust, hair, etc. blocking the mesh.

- The hair dryer should be plugged into the household outlet only in case of maintenance for a long period.
- Use commercially available cotton swabs. (We recommend the thin cotton swabs made for babies.)
- Insert the cotton swab softly until it tips (approximately 10 mm), then rotate it softly 2 or 3 times.

- ▶ Notes**
 - During maintenance, do not block the air inlet with your hands, etc.
 - During or after maintenance of the air outlet, dust, etc. may scatter. Ensure that the hair dryer does not blow out any dust from the air outlet before using. (Do not look into the air outlet.)

Maintaining the ion outlet (EH-NE27 only)

Clean the ion outlet about once every 1 month.

This maintenance allows the hair dryer to sustain the generated level of ion over a long period.

- Use commercially available cotton swabs. (We recommend the thin cotton swabs made for babies.)
- Insert the cotton swab softly until it tips (approximately 10 mm), then rotate it softly 2 or 3 times.

Maintaining the hair dryer

- Clean the housing only with a soft cloth slightly dampened with tap water or soapy tap water.
- ▶ Notes**
 - Do not use substances such as alcohol, nail polish remover or detergent (hand soap).
 - Doing so may result in malfunction, cracks or discoloration.
 - Do not leave the appliance with hairdressing products or cosmetics on it.
 - Doing so will cause deterioration of the plastic, leading to discoloration or cracks.

Troubleshooting

Problem	Possible cause	Action
Sparks can be seen inside the product. (These sparks are caused by a protective device (thermostat switch). They are not dangerous.)	Lint has accumulated on the air inlet or air outlet.	Remove accumulated lint.
The hot air repeatedly turns into cool air.	Hair or something is blocking the air inlet.	Do not block the air inlet.
The hot air is abnormally hot.		
The plug is abnormally hot.	The connection to the household outlet is loose.	Use a household outlet that fits securely.
Sparks are generated inside the ion outlet. (EH-NE27 only)	The needle portion in the inner part of the ion outlet is dry.	Perform maintenance of the ion outlet.
The ion outlet emits a noise (crackling noise). (EH-NE27 only)		

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorized by Panasonic for repair.

Specifications

Power source	220 V～ 50 - 60 Hz	230 V～ 50 - 60 Hz	240 V～ 50 - 60 Hz
Power consumption	1500 W	1650 W	1800 W
Accessory	Set Nozzle		

This product is intended for household use only.

繁體中文（香港）

安全須知

請務必遵從說明。

为防止事故、受傷或財產損失，請遵從以下說明。

⚠ 警告 指明可能導致嚴重受傷或死亡的潛在危險。

⚠ 注意 指明可能導致輕微受傷或財產損失的潛在危險。


安全注意事項圖示的某些部分可能與實際產品不同。

⚠ 警告

- ▶ 插頭與電源線**
 - 切勿在使用時將電源線綁在一起。
 - 切勿損壞電源線或插頭。
 - 切勿拉線、改裝、用力彎曲或拉扯電源線或插頭。此外，切勿將任何重物置於電源線上，扭曲或擠壓電源線。
 - 當插頭或電源線接觸或發熱時，切勿使用。
 - 儲藏時，切勿將電源線纏繞住本機主體。
 - 接線電源插頭時，請蓋住插頭，不要拉扯電源線。
 - 使用後，請務必關閉電源開關並從家用插座拔除電源插頭。
 - 將電源插頭直接插入家用插座：
 - 切勿將延長電源線使用。
 - 將插頭完全插入家用電源插座。如果無法完全插入，切勿使用本產品。
 - 請務必確保在符合本產品上指定的額定電壓的電源上操作本產品。
 - 若在浴室中使用本產品，使用完畢後請拔下電源插頭，因為即使本產品已經關閉，它在接近水時仍然存在危險。
 - 為了保護您的安全，建議您在浴室的供電電路中安裝一個額定漏電動作電流不超過 30 mA 的漏電保護開關（RCD）。請諮詢專業人員以獲得建議。
 - 如果本機的電源線已經損壞，務必立即停止使用，並送交 Panasonic 直屬服務站進行更換。
- ▶ 如出現異常或故障**
 - 如果出現異常或故障，請立即停止使用並拔除電源插頭。
 - <異常或故障情況>
 - 無法送風
 - 本機出現異响停止的現象
 - 內部發出火紅炙熱及冒煙
 - 產品出現損壞或變形，或發出奇怪的聲音。
 - 請立即將產品帶往 Panasonic 直屬服務站。
- ▶ 保養**
 - 使用熱風定時，如果您看到出風口處出現火花，請停止使用並清除出風口與入風口的堵塞物。
- ▶ 產品**
 - 切勿堵塞或插入髮夾或其他異物到入風口、出風口或負離子出口。
 - 切勿將已開啟電源的產品置之不顧。
 - 請勿置於幼童或兒童可觸及的地方。
 - 請勿讓兒童使用本產品。
 - 切勿在易燃物質（例如：酒精、揮發油、稀釋劑、噴霧、護髮產品、洗甲水）附近使用。
 - 切勿改裝、拆卸或修改本產品。
 - 否則可能會導致着火，或因異常操作而造成傷害。
 - 請聯絡 Panasonic 直屬服務站進行維修。
 - 請勿在手潮時觸碰插頭或電源的任何部位。
 - 本產品並非設計用於商業用途，請在適當的保養下使用。
 - 切勿將本產品浸入水。
 - 請勿在近水處使用或存放本產品。
 - 請勿在浴缸、淋浴設備、洗臉盆或其他盛水容器附近使用或存放本產品。
 - 「性能」感會或質量減少，或缺乏經驗和知識之人士（含小孩），在無人監護或未被告知如何使用的情況下，不應使用本產品。
 - 請監督兒童，以便確保其不會將本產品當作玩具玩耍。

⚠ 注意

- ▶ 保護您的頭髮**
 - 確保出風口與頭髮之間保持 3 cm 以上的距離。
 - 確保您的頭髮距離入風口至少 10 cm，以避免頭髮被卷入入風口。
- ▶ 請注意以下注意事項**
 - 切勿將產品掉落或使其受到衝擊。
 - 6 歲以下兒童切勿使用。
 - 切勿接觸出風口及造型風罩，這些部位溫度非常高。
 - 本產品僅可用於吹乾頭髮，切勿作他用途。
- ▶ 註**
 - 此款風扇配有自動過熱保護裝置。如風扇出現過熱，將轉為冷風模式。如發生此情況，請關閉風扇並從家用插座拔出電源插頭，讓風扇冷卻數分鐘後再使用。再次開啟前，請檢查入風口及出風口是否有毛髮、灰塵等雜物。

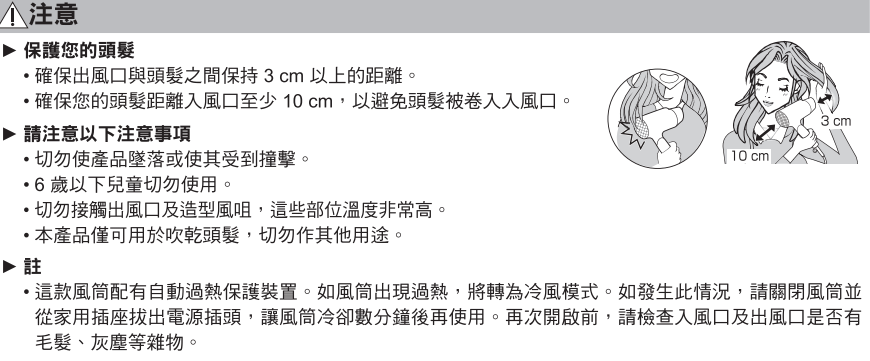

零件說明（圖 1）	❶ 電源開關
❶ 出風口	II 強風渦輪（強熱風）
❷ 負離子出口 僅限 EH-NE27 型產品	II 高溫防護（強暖風）
❸ 入風口	II 頭皮護理（輕柔暖風）
❹ 冷風按鈕	○ 關閉
❺ 手柄	
❻ 掛環	
❼ 電源線	
❽ 插頭	

電源插頭的形狀視地區而異。

（一些說明書僅使用 EH-NE27 型號插頭來解釋產品。）

使用方法

- 使用風扇前，確認電源開關位於“O”位置，然後將插頭插入家用插座並打開電源開關。
- 使用電源開關選擇風力強度，然後將頭髮吹乾。
- 將電源開關調整至“O”位置，然後從家用插座上拔除插頭。

- ▶ 造型風扇**
 - 為了方便造型和吹乾頭髮，可於風扇上安裝造型風扇。
 - 造型風扇有助於將風力集中在頭髮的特定區域。

關於負離子（僅限 EH-NE27 型產品）

負離子是帶負電荷的氧氣與空氣中的濕氣結合所產生的分子，並且無法以肉眼看見。（負離子產生方法：高壓放電）

- ▶ 註**
 - 使用風扇時可能會聞到一種特別的氣味。這對人體無害。
 - 以下類型的人可能感覺不到負離子的效果：
 - 有波浪形的頭髮、平頭的捲髮、特別平順的頭髮、短髮，或三四個月前曾燙直過頭髮的人。

關於高溫防護

此模式能夠提供恆溫暖風，防止頭髮過熱。

關於頭皮護理

頭皮護理模式利用溫和的熱風柔和地吹乾頭皮。


保養

務必關閉電源開關並從家用插座拔出插頭。（保養出風口時除外）

入風口的保養

清潔入風口，每月一次或以上。

- 用牙刷或真空吸塵器清除入風口的棉絮、頭髮或其他東西。

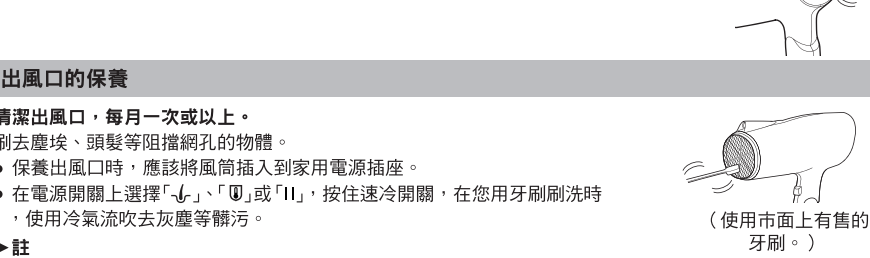

出風口的保養

清潔出風口，每月一次或以上。

除去棉絮、頭髮等阻礙氣流的物體。

- 保養出風口時，應將風扇插頭插入家用電源插座。
- 在電源開關上選擇“❺”、“❻”或“❼”，按下連冷開關，在您用牙刷刷洗時，使用冷氣吹去灰塵等雜物。

- ▶ 註**
 - 保養期間，切勿以手或其他物件阻塞入風口。
 - 在保養出風口期間之後，灰塵等可能會吹入四周。在使用前確保風扇不會從出風口吹出灰塵等。（切勿向出風口內看。）
- 負離子出口的保養（僅限 EH-NE27 型產品）**
 - 約每月一次清潔負離子出口。
 - 這項保養可使風扇長期保持產生負離子的水平。
 - 使用市面上有售的棉花棒。（我們建議使用嬰兒適用幼身棉花棒。）
 - 輕輕插入棉花棒至最深處（大約 10 毫米），然後輕輕旋轉 2 或 3 次。

（使用市面上有售的牙刷。）

