



# Panasonic®

## Operating Instructions Refrigerator

For Household Use

Model No.: **NR-BW530HW**

### Contents

• Safety Precautions.....	2	• Prime Fresh+ .....	16
• Usage Precautions.....	4	• Quick Ice Making .....	17
• Highlighted Features.....	6	• Auto Ice Off and Auto Ice Clean.....	17
• Installation.....	8	• Fridge compartment.....	18
• Parts Identification .....	11	• Prime Fresh case.....	19
• Operation Panel .....	13	• Freezer compartment.....	20
• Temperature Control .....	14	• How to clean the Refrigerator .....	23
• ECONAVI Operation .....	15	• Troubleshooting .....	28
• nanoe™ X.....	15	• Specifications.....	31
• Quick Freezing.....	16		

#### ■ NON-CFC

**NON-CFC MATERIALS** have been used for the refrigerant (R600a) and for the insulation (Cyclopentane), making this product better for the Earth's Ozone Layer.

Thank you for purchasing the Panasonic product.

- Please read these instructions carefully and follow safety precautions on page 2-5 before using this product.
- Please make sure the date and name of store of purchase are stamped in warranty card and keep it with this operating instructions.

DBD

ARAH1E204130  
P0825-0  
Printed in Vietnam

## Safety Precautions

Please be sure to follow these instructions.



### WARNING

This sign means: It may lead to a serious injury or death.



These signs mean prohibited action.



This sign means required action.



This sign means the appliance must be earthed to prevent electric shock.



### CAUTION

This sign means: It may result in injury or property damage.



**iso-butane**

Risk of fire/flammable materials.

Otherwise, it may cause a fire, injury, electrical shock.



### WARNING

#### In case of emergency:



- Maintenance work should only be carried out by a qualified technician.



- **Do not** store explosive substances, such as aerosol cans with a flammable propellant, etc. in the refrigerator.
- **Do not** use electrical appliances such as a deodorizer in the refrigerator. Leaked refrigerant may catch fire from a spark of the electrical contacts and may cause an explosion.
- **Do not** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



- **Do not** disassemble, repair or modify the refrigerator by yourself. If you want to repair the refrigerator, please consult your dealer or authorized service center.
- **Do not** use mechanical device or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

#### When recycling the product:



- Before taking the refrigerator to be recycled, please remove all the door opening seal to prevent locking a child in it.
- The warning labels mentioned above should be kept throughout the life of the refrigerator.
- The operating instructions should be handed over to any person who would use or handle the refrigerator whenever the refrigerator would be transferred to another location and delivered to a recycling plant.
- In regards to local laws, Cyclopentane is used for insulation of this refrigerator. When you throw away this unit, please discard it by proper method and do not dispose it by burning.

Otherwise, it may  
cause a fire, injury,  
electrical shock.



## WARNING

### For power plug and cord:



- **Do not** plug or unplug with wet hands.
- **Do not** let the power cord or power plug be damaged.



- Disconnect power plug when cleaning.
- Only plug into a wall outlet of the correct rated voltage and current, and fully insert the power plug on its own.
- Reserve one socket for the refrigerator only. Avoid connecting many appliances to the same socket and unroll the full length of the cord.
- Remove dust periodically from the power plug.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If you detect burning smell, disconnect the power plug and ventilate the kitchen.
- **Stop** using the refrigerator and unplug the unit immediately if there is an abnormality or failure. Abnormality and failure examples:
  - Power cord or plug is abnormally hot.
  - Power cord is deeply cut or deformed.
  - There is burning smell.
  - You can feel tingling electricity when you touch the refrigerator body.

### When using:



- **Do not** damage the cooling circuit (piping on the back).
- **Do not** touch the compressor and pipes, because of high temperature, that there is a risk of burn injury.
- **Do not** let any children hang onto the refrigerator's door, it may fall and injure the child.
- **Do not** place or store open containers of water on top of the refrigerator. Spilled water can cause electrical shocks or combustion.
- **Do not** place multiple socket-outlets or portable power supplies at the rear of the appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of using the appliance, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the refrigerator.

### When installing:



- Danger can occur when the appliances is unbalanced, make sure the feet are secure and appliance is level.
- When positioning the appliance, ensure the power cord is not trapped or damaged.



- Ensure that the refrigerator is plugged into an earthed main socket.

## Safety Precautions

Please be sure to follow these instructions.

Otherwise it may cause injury, accidents.



### CAUTION

#### When opening/closing the doors:



- While opening the refrigerator, be careful not to pinch other one's hand holding the door.
- Mind the gap between the doors. They may nip your hand while closing the door.



#### When storing food:



- **Do not** freeze glass bottles, that there is a risk of injury. (If the liquid in a glass bottle is frozen, then the bottle may break and you may be injured.)
- **Do not** add a high impact on glass trays. (Otherwise those glass trays may break and you may be injured.)



#### When moving the refrigerator:



- Hold the refrigerator tightly when transporting.
- Apply protective covering, etc. to floors with a fragile surface.

## Usage Precautions

#### When opening/closing the doors:

- **Do not** refrigerate items which are bigger than tray or shelf, as the door will not close completely causing leakage of cool air.
- **Do not** open refrigerator frequently or leave it open for long time in order to prevent water dripping inside and waste energy.
- Frequently check the door opening seal, it must be closed to the refrigerator's body completely.

#### When cleaning:

- **Do not** clean the refrigerator with chemical substance or liquid. It will cause damage and have corrosion on the surface.





## Usage Precautions

### When using:

- When the power plug is disconnected, leave it for 7 minutes before plugging again. If not, the compressor may not work.
- Adjust the temperature according to the actual operating condition for energy saving.
- The humidity inside the fresh case may condense so wipe it with a cloth periodically. Clean the fresh case once a month.
- If you will not be at home for several days and there are nothing refrigerated in the refrigerator, the power plug should be disconnected for energy saving. When the refrigerator is not used for several days, it is necessary to take out all remaining food inside the refrigerator, clean and open the doors for a few hours to let the moisture inside the refrigerator dry out, avoiding mold and oxidation of components.
- The outside wall of refrigerator cabinet may sometimes get warm, especially just after installation. This is quite normal, and is due to the built-in Mullion Dryer Pipe which prevents sweating and radiates heat.
- When humidity is high, e.g. during rainy-season, condensation may appear on the surface of cabinet, especially around the door seal gasket. Wipe off the condensed water with a clean cloth.
- **Do not** keep the door open any longer than necessary, particularly in hot, humid weather.
- The top of the refrigerator is made of steel in order to prevent fire caused by external influences. **Do not** put things on top of the refrigerator to ensure this factor.



### When storing food:

- **Do not** overload the refrigerator. Gaps must be provided between foodstuffs to maintain the cooling effect.
- Store fruits and vegetables in Vegetable case, where trapped moisture helps preserve food quality for longer time periods.
- Drinking water and beverage bottles should be sealed to prevent odor contamination.
- Food stuff such as vegetables, fruits and fresh food should be wrapped or packed in a box or storage container before freezing.
- Meat and Fish should be put in the Freezer compartment if you want to store them for an extended period.
- Cover juicy food with tight lids, plastic film or foil.



## Highlighted Features

### ■ High-end design suitable for luxury kitchens



Borderless surface with modern handle design.

### ■ Energy saving

- Panasonic's INVERTER technology increases energy saving and reduces noise.
- Panasonic's exclusive ECONAVI technology allows identification of changes in user's lifestyle habits, helping the refrigerator to automatically adjust to reduce energy consumption.

### ■ nanoe™ X technology and Ag Clean



Panasonic's exclusive nanoe™ X technology and Ag Clean help to deodorize and neutralize bacteria, keeping food fresh for longer.

### ■ Quick Freezing

Quick Freezing makes the temperature in the refrigerator cool down quickly, so as to retain the foodstuffs original flavor.

### ■ Compressor located on top of the refrigerator (Top Unit)

Panasonic's exclusive design moves the compressor from traditional position at the bottom of the refrigerator to the top of the refrigerator, optimizing the space inside the refrigerator.

### ■ Auto Ice Making system



- The refrigerator is equipped with an Auto Ice Making system to meet the demand for ice usage at all times.
- The 5 L large-capacity water supply tank is made of BPA-free and antibacterial material that is safe for health.
- There is a Quick Ice Making mode.
- There is an Auto Ice Off mode to stop ice making and Auto Ice Clean mode to automatically clean the Ice maker.

**ANTI BACTERIA**

🌿 BPA FREE

## ■ Prime Fresh case and Prime Fresh+



- The temperature of Prime Fresh case can be changed from  $-5^{\circ}\text{C}$  ~  $4^{\circ}\text{C}$ <sup>(\*)</sup>.
  - Temperature  $-5^{\circ}\text{C}$  ~  $-1^{\circ}\text{C}$ : Soft freeze temperature for food preservation, which helps to save time and effort in defrosting food, while keeping their flavor and freshness for longer.
  - Temperature  $0^{\circ}\text{C}$  ~  $4^{\circ}\text{C}$ <sup>(\*\*)</sup>: Same as Fridge compartment temperature when you want more space for food preservation in the Fridge compartment.

- Prime Fresh case makes it easier to remove and clean, helps avoid mixing unpleasant odor or cross-infection.

<sup>(\*)</sup> The default temperature setting of Prime Fresh case is  $-3^{\circ}\text{C}$ .

<sup>(\*\*)</sup> Depending on the type of food, such as a large block of meat or a large fish, the storage conditions and the ambient temperature, the cooling performance may be effected. In this case, the temperature of Prime Fresh case should be set to the lowest temperature  $-5^{\circ}\text{C}$ .

## ■ Fresh Safe Vegetable case



The large-capacity Fresh Safe Vegetable case is equipped with a Moisture control filter, which keeps vegetables fresh and prolongs their shelf life.

## ■ Convenient Operation Panel



- It is possible to adjust the temperature and modes of the Fridge compartment, the Prime Fresh case, the Freezer compartment and according to the user's intended purpose.
- The Fridge compartment and Freezer compartment have doors alarm to remind closing the refrigerator doors.
- The LED display and Operation Panel appear clearly and easy to use.

# Installation

## The distance requested for installation

- 5 cm
- The top of the refrigerator is at least 5 cm from the ceiling.




- 5 cm
- The left and right sides of the refrigerator are at least 5 cm from the walls.


- The back of the refrigerator is at least 5 cm from the wall.

## Caution

- In case the refrigerator is placed near to walls, it is necessary to ensure that the space between the right side of the refrigerator and the wall is at least 50 cm. If this space is less than 50 cm, the doors may not be fully opened and the glass trays, Vegetable case, etc. could not be taken out.

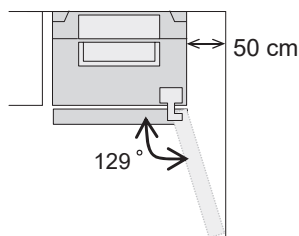

- Do not place any objects on top of the refrigerator. It may become hot due to heat generated by the compressor at the top of the refrigerator. If it is difficult to release heat, the cooling capacity may be lowered.

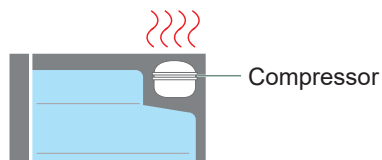

- When using for the first time: clean the inside of the refrigerator.
  - Use a soft damp cloth to clean the refrigerator.
  - Rinse the Water tanks, Water filters and Ice trays.
  - The smell of plastic could be smelt during the first time using the refrigerator. If the smell is a concern, it is recommended to ventilate the room.
- **Do not** place the refrigerator in a humid place as rust may form and may cause electric leakage.
- **Do not** place the refrigerator exposing to direct sunlight as the heat and sunlight will increase the temperature affecting the cooling capacity.
- **Do not** place the refrigerator near heat sources such as cooking stove or oven.
- **Do not** block the openings around the refrigerator.
- The refrigerator must be placed in an area where there is good air circulation.
- If the refrigerator is to be placed on an uneven surface, please adjust the adjuster bolts to ensure that the refrigerator is stable.

### LED lamp and grounding

- The refrigerator LED lamp, specifically designed for this refrigerator. Do not replace it by yourself. If the LED lamp needs to be replaced, please contact Panasonic service center.
- If there is no grounding wiring plug in the refrigerator, it should be connected with a grounding connection to prevent electrical hazards from electrical leakage.

### Moving or transporting

#### ※ Before moving and transporting

- 1 Remove any food items and dispose of any ice cubes or water that remain in the refrigerator.
- 2 Unplug the refrigerator.
- 3 Adjust the adjuster bolts (left and right) so that they do not touch the floor.
- 4 Place a container underneath the drainage hole, then slowly tilt the refrigerator backward to drain water from the drainage hole. This action requires 4 or more people, of which 2 people lift the front of the refrigerator to prevent the refrigerator from sliding and avoiding the risk of accidents.

#### ※ How to move and transport

- At least 4 people are required to transport the refrigerator.
- Each person lifts a corner of the refrigerator.
- Do not transport by holding the refrigerator doors.

#### Caution


- When transporting, use tape to secure the refrigerator doors and avoid letting the doors open by itself.
- Do not place the refrigerator on its side when transporting, as this may cause damage to the refrigerator.
- After installation, wait at least 4 hours before plugging in the power to ensure that the gas and oil in the compressor are in a stable state.



# Installation


## Have any measures taken against tipping due to earthquakes?

In order to prevent the refrigerator from tipping due to earthquakes, permanently fix it by using belts, etc.

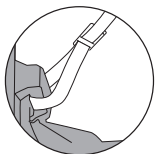

## Fix the refrigerator.

Turn the adjuster bolts (right and left) until they reach the floor to stabilize the refrigerator.

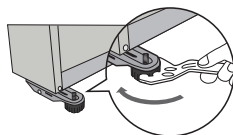

## Refrigerator doors should not be opened during the interior cooling process.



The doors should not be opened until the interior has been cooled down sufficiently. (Warm air flowing into the interior will block the cooling function.)

### Please wait until the interior has cooled down.

- The refrigerator may take at least 4 hours (or longer especially in summer when the ambient temperature is high) of continuous running to cool down the interior, in the condition of no food items inside and the doors are not opened.
- Depending on ambient temperature and usage condition, it may take 24 hours to cool down the interior and achieve the correct temperatures.



# Parts Identification

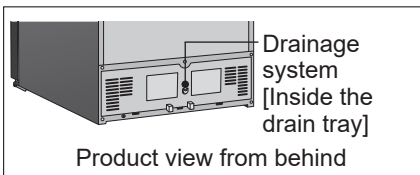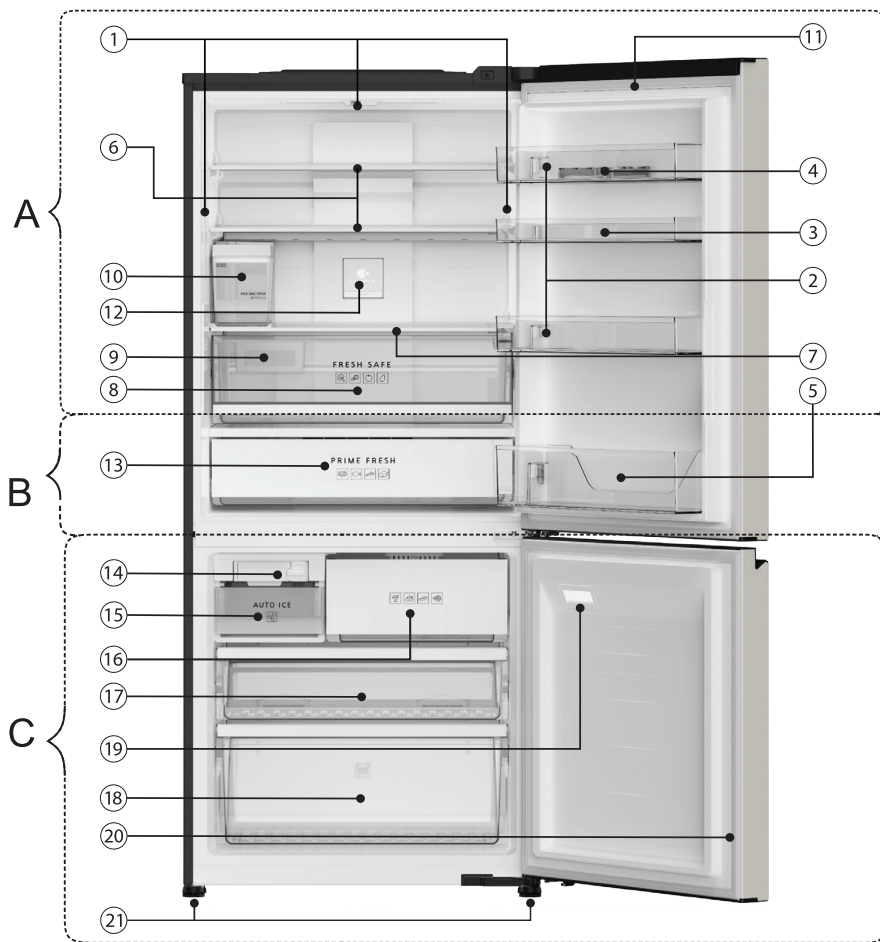


# Parts Identification

## A-Fridge compartment

- ① LED of Fridge compartment  
(Quantity: 3 pcs)
- ② Large door shelf (Quantity: 2 pcs)
- ③ Small door shelf
- ④ Egg tray
- ⑤ Bottle shelf
- ⑥ Glass tray of Fridge compartment  
(Quantity: 2 pcs)
- ⑦ Glass tray of Vegetable case
- ⑧ Vegetable case
- ⑨ Moisture control filter for Vegetable case
- ⑩ Water tank of Auto Ice maker
- ⑪ Door gasket of Fridge compartment
- ⑫ nanoe™ X icon

## B-Prime Fresh case

- ⑬ Prime Fresh case

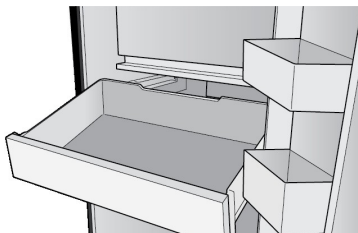


## C-Freezer compartment

- ⑭ Auto Ice maker
- ⑮ Ice box
- ⑯ Upper Freezer case
- ⑰ Middle Freezer case
- ⑱ Lower Freezer case
- ⑲ LED of Freezer compartment
- ⑳ Door gasket of Freezer compartment
- ㉑ Adjuster bolts



# Operation Panel

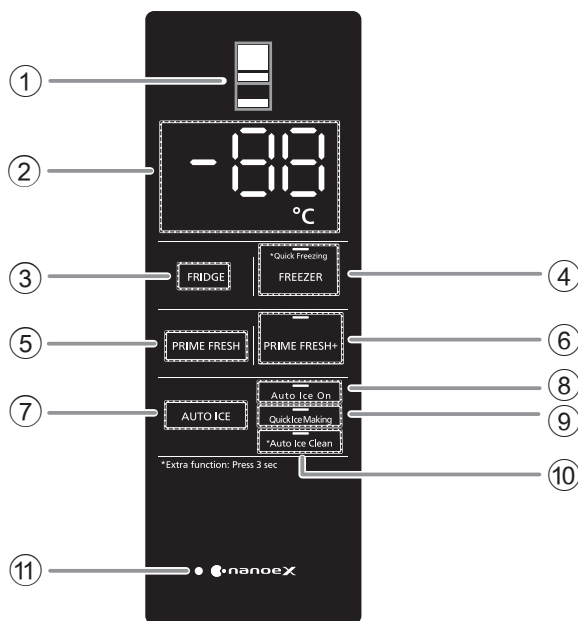

- ① LED of compartments: the icon of the respective compartment will light up when the compartment is selected.
- ② Temperature display area: display the temperature of Fridge compartment, Freezer compartment, Prime Fresh case.
- ③ Temperature control button of Fridge compartment.
- ④ Temperature control button of Freezer compartment and LED of Quick Freezing.
- ⑤ Temperature control button of Prime Fresh case.
- ⑥ Control button and LED of Prime Fresh+.
- ⑦ Control button of Auto Ice.
- ⑧ LED of Auto Ice On.
- ⑨ LED of Quick Ice Making.
- ⑩ LED of Auto Ice Clean.
- ⑪ Icon and LED of nanoe™ X: display the current status of nanoe™ X mode.

## Remark

- On the Operation Panel: “\*Extra function: Press 3 sec”, means that you need to press and hold the button beginning with “\*” mark for 3 seconds when you want to start the extra functions.
- Under normal conditions, the LED of Operation Panel will turn off. When you press the buttons, the LED of Operation Panel will turn on. The LED of Operation Panel will turn off and all the buttons will not be operated when the refrigerator door is opened.
- In summer, when the temperature is high, if you put uncooled food in the refrigerator or open/close the refrigerator doors repeatedly, the temperature inside will increase. Therefore, it is necessary to reduce doors opening times.
- When first plugged in, the Operation Panel will display the introduction of modes and the temperature of compartments for about 10 seconds. Buttons will not be active during this period of time. After 10 seconds, the Operation Panel can be adjusted normally.




# Temperature Control

- Default setting temperature for Fridge compartment is 4 °C, Prime Fresh case is -3 °C and Freezer compartment is -20 °C. The temperature setting for each compartment can be adjusted.
- The temperature setting range of the Fridge compartment is 1 °C ~ 7 °C, the Prime Fresh case is -5 °C ~ 4 °C (the temperature for soft freezing is -5 °C ~ -1 °C, and the temperature to use the Prime Fresh case as the Fridge compartment is 0 °C ~ 4 °C), the Freezer compartment is -23 °C ~ -15 °C.
- The temperature inside the refrigerator will vary depending on the ambient temperature, installation status, usage conditions and amount of food.
- Due to different testing methods and tools, the actual temperature may differ from the displayed temperature.
- This refrigerator is equipped with a processor to control the temperature inside the refrigerator. When the ambient temperature changes, the compressor runs or stops, the doors are opened or closed, the temperature inside the refrigerator and the temperature setting will have a slight difference.

## ■ Temperature setting instructions

### 1. Display the current temperature

Press the following icons to display the current temperature of these compartments: Fridge compartment, Prime Fresh case, and Freezer compartment. The LED indicates position and the LED indicates temperature of the compartment will light on when selected.

Icon	Compartment	LED indicates position of the compartment	LED indicates temperature of the compartment
FRIDGE	Fridge compartment		4 °C
PRIME FRESH	Prime Fresh case		-3 °C
FREEZER	Freezer compartment		-20 °C

### 2. Temperature setting

After pressing the icon of compartment (Fridge, Prime Fresh, Freezer) to display the current temperature, press again to start the temperature setting process. Then, LED indicates position of the compartment and LED indicates temperature of the compartment will flash. Continue to press the icon of that compartment to select the desired temperature level. Each time the button is pressed, the temperature will increase by 1 °C within temperature setting range of the compartment. If the selection exceeds the compartment temperature range, the Operation Panel will display the temperature return to the lowest level in the above range.

### 3. Complete temperature setting

After completing the temperature setting, press another button to finish or wait for 5 seconds, the Operation Panel will save the setting that you have just made.

## ECONAVI Operation

The refrigerator detects the opening and closing of the refrigerator door to control operations automatically to ensure maximum energy saving.<sup>(\*)</sup>

### ■ ECONAVI Operation

- The refrigerator learns the lifestyle patterns of your family from door opening and time periods of infrequent use to maximize energy efficiency.
- The refrigerator learns your lifestyle patterns from the previous 3 weeks of use and uses that data from the 4<sup>th</sup> week onwards.

### ■ Settings for enabling ECONAVI Operation

- ECONAVI Operation is enabled automatically when the temperature control for both the Fridge compartment and the Freezer compartment is set to 4 °C and -20 °C, respectively.
- ECONAVI Operation does not operate if the Quick Freezing or Quick Ice Making mode is in operation.
- It is not possible to force start the ECONAVI mode.

<sup>(\*)</sup> The effectiveness of the ECONAVI mode is dependent on the ambient temperature, and the number of times the refrigerator door is opened and closed and the state in which food is stored.

 
## nanoe™ X

- A nanoe™ is a nano-sized ion particle coated with water particles. nanoe™ X are nano-sized electrostatic atomized water particles with 10 times the OH radicals of nanoe™.
- nanoe™ X will start when the refrigerator is plugged in and always run when the refrigerator is in use. However, nanoe™ X requires moisture when operating, the effectiveness of this mode will be reduced if the humidity inside the Fridge compartment is reduced (such as when storing a few of vegetables, or tubers).
- The nanoe™ X device may cause a small sound during operation.
- After the doors have been closed a long time, when open the doors of the refrigerator, it is possible to smell the odor of ozone generated during nanoe™ X operation, this is a normal phenomenon.

## Quick Freezing

When Quick Freezing is set, the refrigerator will reduce the temperature quickly for better performance of preserving food.

### ■ How to operate the Quick Freezing mode



LED is on: Quick Freezing is operated.  
LED is off: Quick Freezing is not operated.

- Press and hold the “Freezer” icon for 3 seconds to start the Quick Freezing. Then, the LED of Quick Freezing will turn on.
- If you want to stop the Quick Freezing operation immediately, press and hold the “Freezer” icon for 3 seconds until the LED turns off.

### Remark

- The Quick Freezing operation will stop automatically after running for 150 minutes and return to normal mode. (The LED of Quick Freezing turns off.)
- The flashing of LED of Quick Freezing means that the defrosting system is currently working. The Quick Freezing mode will start right after the defrosting operation is finished.
- The temperature of the Freezer compartment will return to its previous setting when the Quick Freezing mode ends.
- The following modes will be stopped when Quick Freezing is turned on: Prime Fresh+ ; Quick Ice Making.

## Prime Fresh+

When Prime Fresh+ is set, the Prime Fresh case will reduce the temperature quickly for better performance of preserving food.

### ■ How to operate the Prime Fresh+ mode



LED is on: Prime Fresh+ is operated .  
LED is off: Prime Fresh+ is not operated.

- Press the “Prime Fresh+” icon twice in a row to start Prime Fresh+. Then, the LED of Prime Fresh+ will turn on.
- If you want to stop the Prime Fresh+ operation immediately, press the “Prime Fresh+” icon once until the LED turns off.

### Remark

- Prime Fresh+ will stop automatically after running for 105 minutes (when the ambient temperature is 18 °C or less) or between 145 ~ 150 minutes (when the ambient temperature is higher than 18 °C) and return to normal mode. (The LED of Prime Fresh+ turns off.)
- The flashing of LED of Prime Fresh+ means that the defrosting system is currently working. Prime Fresh+ will start right after the defrosting operation is finished.
- The temperature of the Prime Fresh case will return to its previous setting when Prime Fresh+ ends.
- The following modes will be stopped when Prime Fresh+ is turned on: Quick Freezing; Quick Ice Making.
- Prime Fresh+ will not start when the temperature of the Prime Fresh case is being set at 0 °C ~ 4 °C.

## Quick Ice Making

When setting Quick Ice Making, the refrigerator will increase its capacity to reduce ice making time.

### ■ How to operate Quick Ice Making

#### Quick Ice Making

LED is on: Quick Ice Making is operated.  
LED is off: Quick Ice Making is not operated.

- **Case 1:** Press the “Auto Ice” icon twice in a row to start the Quick Ice Making.
- **Case 2:** If the Auto Ice Off is in process (LED of Auto Ice On is off), press the “Auto Ice” icon three times until the LED of Quick Ice Making turns on.
- After starting the Quick Ice Making, the LED of Quick Ice Making will flash, and the refrigerator will have a notification sound. The LED of Quick Ice Making will remain on during this time.
- If you want to stop the Quick Ice Making operation immediately, press the “Auto Ice” icon twice in a row until the LED of Quick Ice Making turns off.

#### Remark

- The following modes will be stopped when Quick Ice Making is turned on: Quick Freezing, Prime Fresh+, Auto Ice Off.

## Auto Ice Off and Auto Ice Clean

When the refrigerator is in operation, the Auto Ice Making mode will automatically operate without any setting. When setting the Auto Ice Off and Auto Ice Clean, the refrigerator will stop the Auto Ice Making and clean the Auto Ice maker automatically.

### ■ How to operate the Auto Ice Off

#### Auto Ice On

LED is on: Auto Ice Off  
is not operated.  
LED is off: Auto Ice Off is  
operated.

- **Case 1:** Press the “Auto Ice” icon three times until the LED of Auto Ice On turns off.
- **Case 2:** If the Quick Ice Making is in process (LED of Quick Ice Making is on), press the “Auto Ice” icon twice until the LED Auto Ice On turns off.
- After starting the Auto Ice Off, the LED of Auto Ice On will flash, and the refrigerator will have a notification sound, then the LED Auto Ice On turns off.
- If you want to stop the Auto Ice Off operation immediately, press the “Auto Ice” icon once until the LED of Auto Ice On turns on.

#### Remark

- When the Auto Ice Off is on, Quick Ice Making, if active, will be stopped.
- In the default state, LED of Auto Ice On is always on.

# Auto Ice Off and Auto Ice Clean

## ■ How to operate the Auto Ice Clean

\*Auto Ice Clean

LED is on: Auto Ice Clean is operated.  
LED is off: Auto Ice Clean is not operated.

- Press and hold “Auto Ice” icon for 3 seconds to enable the Auto Ice Clean. At the end of the automatically cleaning process, the refrigerator will have a notification sound.

### Remark

- Cannot stop/disable the operation of Auto Ice Clean mode when it is in processing.

For details on the cleaning operation of Auto Ice maker, please refer to Page 22.

## Fridge compartment

The temperature range of the Fridge compartment is 1 °C ~ 7 °C

If the temperature of the Freezer compartment is set to 1 °C during a long period of time, your food may be frozen.

### Vegetable case

The Vegetable case is equipped with a large-capacitor and the guide rail with a maximum opening angle, making it easier to take out food and increasing its load-bearing capacity, allowing the user to gently pull the case out with just one hand. The Moisture control filter will control the humidity inside the Vegetable case, helping the vegetables retain moisture and stay fresh.

### Note

- Due to high humidity, water drops may appear on the Vegetable case. Wipe droplets off with a soft cloth.
- Do not place food higher than the height of the Vegetable case to avoid the risk that the Vegetable case does not close completely, causing frost and damaging vegetables and fruits.

### Tips for food preservation

#### ■ Do not over stock too many food items

When there are too many food items and there is no space for cool air circulation inside the refrigerator, the cooling capacity will be affected. Provide sufficient space between foods inside Prime Fresh case.




No wasting cool air inside the refrigerator is the key to keeping food fresher for longer!

#### ■ Do not block the cool air outlet with food items

If the cool air does not spread into every corner of compartments, then the interior will not be sufficiently cooled and more electricity will be consumed.

Therefore, food should not be placed in front of the cooling air vents<sup>(\*)</sup> and block the air circulation.

<sup>(\*)</sup>The cooling air vents are located on the duct inside the Fridge compartment.

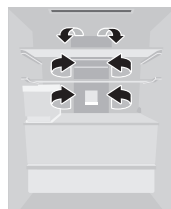

# Prime Fresh case

The temperature in the Prime Fresh case can be selected as below:

- The temperature for soft freeze is  $-5^{\circ}\text{C} \sim -1^{\circ}\text{C}$ .
- The temperature to use the Prime Fresh case as the Fridge compartment is  $0^{\circ}\text{C} \sim 4^{\circ}\text{C}$ .


When using the refrigerator, the temperature can be adjusted according to your usage.

The default temperature setting of Prime Fresh case is  $-3^{\circ}\text{C}$ .

## Using Prime Fresh case

Approx.  $-5^{\circ}\text{C} \sim -1^{\circ}\text{C}$

- This compartment is suitable for storing fresh food, such as meat or fish. Compared to storing in the Fridge compartment, the storage life of meat or fish is extended.
- When food is too frozen.  
Sliced raw fish or meat may be too frozen. Set the temperature to higher than  $-3^{\circ}\text{C}$  to prevent food from over frozen.
- When food is not partially-frozen.  
Depending on the type of food, such as a large block of meat or a large fish, or the food fullness of the case, the storage conditions, and the ambient temperature, food may not be partially frozen as it intended. If this is the case, then set to the lowest temperature of  $-5^{\circ}\text{C}$ .
- Do not over stock with too many food items. When there are too many food items and there is no space for cool air circulation inside the refrigerator, the cooling capacity will be affected. Provide sufficient space between foods inside Prime Fresh case.
- When storing food in large amount, e.g. a large block of meat, a large fish or a chicken, it is advisable to place the food at the center of the Prime Fresh case to optimize the cooling performance.
- When the temperature of the Prime Fresh case is set at  $0^{\circ}\text{C} \sim 4^{\circ}\text{C}$ , the Prime Fresh+ mode will not operate in order to prevent food spoilage.
- Do not block the cool air outlet with food items inside the Prime Fresh case.  
If the cool air does not spread into every corner of Prime Fresh case, then the interior will not be sufficiently cooled and the food may be affected. Therefore, food should not be placed in front of the Cooling air guide (on the Prime Fresh case) to prevent blocking the air circulation inside the compartment.

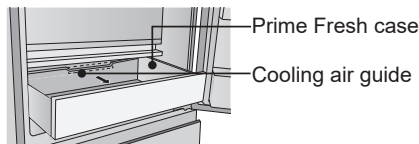

## Freezer compartment

Storing frozen food, cooked meal and freezing food.


The temperature range of the Freezer compartment is  $-23^{\circ}\text{C}$  to  $-15^{\circ}\text{C}$ .



### Three tips for freezing food and locking in the flavour

1. Freeze thin and small items of food quickly
2. Fully sealed
3. Do not refreeze

## Auto Ice Making

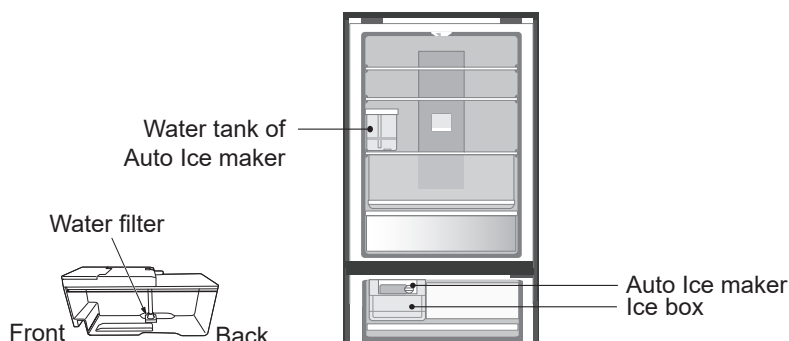

### To use the Auto Ice maker in comfort



Please use only drinking water for Auto Ice Making.



Do not put liquids such as the following into the Water tank.  
(These liquids may damage the Auto Ice maker).

The hardness of water must be 100 mg/L or less.



Drinking water



Juice, etc.



Sports drinks



Carbonated beverages



 
Hot water

### Tips

- The hardness of water must be 100 mg/L or less. The minerals may appear as white floating particles. They are not harmful.
- When using the Auto Ice maker for the first time, odor or dust may be on the Ice tray, etc. Please throw away the first lot of ice.
- Remember to regularly use the Auto Ice Clean function of the Auto Ice maker. (Page 22)


### Attention

When the Ice box is full and the ice cubes touch the ice detection lever, the Auto Ice Making will stop automatically.



Ice detection lever

 The pile of ice cubes will touch the ice detection lever.  
(Then, the Auto Ice Making will stop).



Distribute the ice cubes evenly inside the Ice box for making more ice.



## Request


- Do not pour water directly into the Ice box to make ice.  
(Otherwise, the Ice box may be broken).
- Do not put food or other things into the Ice box.  
(Otherwise, the amount of ice cannot be correctly detected and Auto Ice Making may be stopped or the Ice box cannot be pulled out.)

### Ice maker cycle time will be longer in the following cases.

- The first time using the refrigerator.  
(It will take at least 24 hours since the Auto Ice Making function only starts after the inside of the refrigerator is cool enough).
- When the refrigerator doors are frequently opened.
- When the refrigerator doors are ajar.
- When a large amount of food is stored at once.
- When the ambient temperature is low during winter or high during summer
- When a power failure occurs.


### How to use Water tank of Auto Ice maker<sup>(\*)</sup>

#### 1 Take the Water tank out.

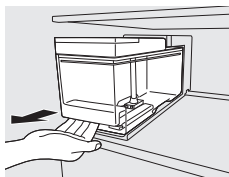

Pull out the Water tank until it is blocked.

#### 2 Fill with water.

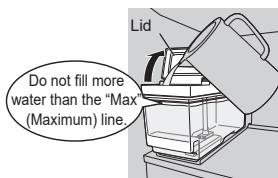

Open the lid and fill the Water tank with water, then put the lid back in place.

#### 3 Install the Water tank.



Confirm the direction of the tank and install until the tank reached the end lock.  
(If the Water tank does not reach the end lock, the Auto Ice maker could not operate)

<sup>(\*)</sup>Ice could be made in approx. 2 hours, with the temperature in the Fridge compartment is 4 °C, Prime Fresh case is -3 °C, and Freezer compartment is -20 °C.

### How to make ice quickly

#### ■ In the Quick Ice Making mode, the ice making speed will be increased.

Ice can be made within 90 minutes<sup>(\*\*)</sup> at the quickest.

#### Remark

- After about 6 hours, the refrigerator will automatically return to normal Auto Ice Making.
- The flashing of LED of Quick Ice Making means that the defrosting system is currently working. Quick Ice Making will start right after the defrosting operation is finished.
- In Quick Ice Making, energy consumption increases more than usual.
- ECONAVI operation does not work during the setting of Quick Ice Making.

<sup>(\*\*)</sup>Ambient temperature of 20 °C, the temperature of the Fridge compartment, the Prime Fresh case, and the Freezer compartment are 4 °C, -3 °C, and -20 °C, respectively.

# Freezer compartment

## How to clean the Auto Ice maker

When using for the first time or when not being used after a long time, the Water tank may smell unpleasantly or collect dust. Remember to clean the Water tank before proceeding to clean the Ice maker.

After selecting the Auto Ice Clean mode, water will be automatically poured into the Ice tray and water supply pipe 3 times (for about 2 minutes) to drain the water.

When selecting Auto Ice Clean mode, make sure there is enough water in the Water tank.

- ❶ Pull out the Ice box, remove all ice cubes from the Ice box (after the ice cubes are fully formed), and then install the Ice box back.
- ❷ Fill the Water tank with water.
- ❸ Select the Auto Ice Clean mode (Page 18).
  - At the same time, the refrigerator will sound a notification and begin to clean the ice maker.
  - During the cleaning process, the sound cannot be turned off.
  - After the beeping sound to inform the completion of the cleaning process, the LED of Auto Ice Clean on the Operation Panel will turn off, the ice maker cleaning process will end and the Auto Ice Making will be started.
- ❹ Pull out the Ice box from the Freezer compartment, throw away the water in the Ice box and wipe the water off.

If you do not clean all water on the Ice box, the Ice box may be broken.

## How to turn off Auto Ice maker

You can enable/disable the Auto Ice Making mode according to your needs.

### ■ Turn off Auto Ice Making

- ❶ Select the Auto Ice Off mode, the LED of Auto Ice On on the Operation Panel will turn off, the refrigerator will stop making ice (Page 17).
- ❷ No need to pour water in the Water tank. The remaining water inside the Water tank will keep making ice, and ice cubes will be available after 2 hours. Or when the Ice box is full, the Auto Ice Making will be stopped.
- ❸ When you want to continue making ice automatically, please select the Auto Ice Off mode, and the LED of Auto Ice On on the Operation Panel will turn on (Page 17).

### ■ Turn off Auto Ice Making for a long period of time

- ❶ Empty the Water tank and remove all ice cubes from the Ice box.
- ❷ Clean the Water tank, Water filter, Water tank seal rubber and Ice box; dry and put them back to their place.
- ❸ When using again, please refill the Water tank and put it back.

### ■ When transporting the refrigerator

- ❶ Remove all ice cubes from the Ice box.
- ❷ Select the Auto Ice Clean, the LED of Auto Ice Clean on the Operation Panel will turn on and the refrigerator will start cleaning the ice maker.  
(At this time the ice cubes and water in the process of making ice will fall into the Ice box)
- ❸ The cleaning process will stop after 2 minutes. Take out the Ice box and empty the ice cubes and water in the Ice box.
- ❹ Clean the Water tank, Water filter and Ice box; dry and put them back to their place.

# How to clean the Refrigerator

Before cleaning or conducting maintenance, be absolutely sure to disconnect the power plug from the power outlet. Do not connect or disconnect the power plug with wet hands. When the plug is disconnected, leave it for 7 minutes before plugging again. If not, the compressor may not work.

## Clean the detachable items after it is stained!

Wipe off stains on the interior surfaces quickly before they harden. In particular, cooking oil or lard may cause plastic to crack and citrus juice may cause the refrigerator to become discolored. When stains cannot be removed easily, wipe them with a cloth lightly soaked in neutral kitchen detergent. Then, wipe with a cloth lightly dipped in water.

## Clean the detachable items occasionally.

Clean the Ice tray once a week. As a guide, remove the trays, door shelves, etc. and wash them by immersing them in lukewarm water every three months.

## Clean the door gasket at least once a month.


Clean by wiping with a soft damp cloth. Lubricated gel has been applied to the door gasket on the hinge side of the refrigerator, be careful not to wipe it off.



Rub the door surface with a soft damp cloth.



Point where lubricated gel was applied

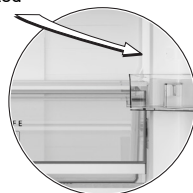

## Notices

The door gasket is replaceable by an authorised service agent. If the door gasket comes off while cleaning, it can be pushed back into the groove.

## Requests

Do not use the following items for cleaning. (Otherwise, the surface will be scratched or corroded.)



Kitchen detergents  
(They crack plastic!)

Alkaline or weak Alkaline



Cleanser or soap powder



Benzene, thinner, alcohol, acid, petroleum



Scrubber



Hot Water

# How to clean the Refrigerator

## Tray

Once every 3 months

### ■ Removing

Lift up the back of the tray and pull it forward. Once the protrusions of the tray are unhooked from the rails, tilt the tray and remove it.



### ■ Attaching

Push the tray until it reaches the end lock.



### Remark

- To easily take out the glass trays from the refrigerator, please remove Door shelves and Bottle shelves first.
- The Glass tray of Vegetable case is cleaned by directly cleaning inside the refrigerator. (Due to its fixed design.)
- In case of attaching the tray and it does not lock, make sure that you did not attach it into it the wrong tray.
- Trays made of glass are heavy.  
Please handle them with care so that they do not fall and cause any damage or injury.  
For attaching trays, hold them with the protrusion side down and firmly insert.

## Vegetable case/Freezer cases


Once every 3 months

### ※ Vegetable case




### ■ Removing

- 1 Fully open the door of Fridge compartment.
- 2 Remove the Large door shelf ② (According to Parts Identification in Page 11 ~ Page 12) before removing the Vegetable case.
- 3 Pull the case forward until it reaches the end and gently lift the front of the case to remove it completely.

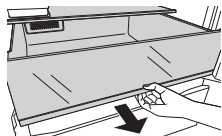

### ■ Attaching

- 1 Insert the Vegetable case into the shelf.
- 2 Gently lift the case and push forward until it reaches the end.
- 3 Install the Large door shelf ②.

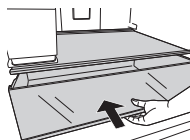


## ※ Freezer cases

Skip the steps of removing and installing the Large door shelf ②. Remove and install Freezer cases in steps same as Vegetable case.

### Moisture control of Vegetable case

Once every 3 months

- ① After pulling out the Vegetable case, the Moisture control is located at the back of the Vegetable case.
- ② Slide the Moisture control upward to remove it.

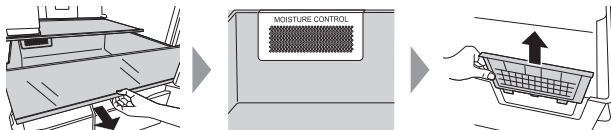

#### Remark

- After cleaning by water, wipe it or let it dry.
- For tough stains, dilute (neutral) kitchen detergent, and gently wash with a soft toothbrush, then rinse thoroughly with water.


### Prime Fresh case

Once every 3 months




#### ■ Removing

- ① Fully open the door of the Fridge compartment.
- ② Remove the Bottle shelf ⑤ (According to Parts Identification in Page 11 ~ Page 12) before removing the Prime Fresh case.
- ③ Pull the case forward until it reaches the end and gently lift the front of the case to remove it completely.

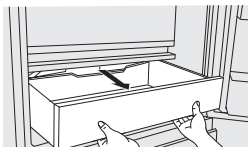

#### ■ Attaching

- ① Insert the Prime Fresh case into the shelf.
- ② Gently lift the case and push forward until it reaches the end.
- ③ Install the Bottle shelf ⑤.

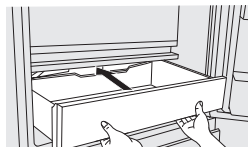

### Door shelf/Bottle shelf


Once every 3 months

#### ■ Removing

- ① Lift it upward, alternating between the right and left side.

#### ■ Attaching

- ② Placing it on both supporters, and then press until it reaches the end of supporters.

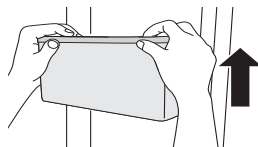

# How to clean the Refrigerator

## Ice tray

 
 
 
Once every 3 months

The Ice tray can be cleaned by using the Auto Ice Clean function (Page 18). In addition, the Ice tray can be removed and cleaned manually.

How to clean the Ice tray manually.

### ■ Remove and clean the Ice tray

- 1 Select the Auto Ice Off (Page 17).
- 2 Turn the knob on the Auto Ice maker to the unlocked position.
- 3 Pull the protruding side forward to remove the Ice tray.
- 4 Clean it with water. (Do not use sharp scouring pads to scrub the surface of Ice tray. If the Ice tray is scratched, ice may not be properly released, leading to a malfunction.)



### Remark

- The Ice tray and its frame cannot be separated.
- Do not clean with dishwashers or dish drying rack.

### ■ Attaching

- 1 Push the Ice tray in until you hear a "click".
- 2 Turn the knob into the locked position.
- 3 Disable the Auto Ice Off (Page 17) to restart the Auto Ice Making.

### Remark


- Ice will not be made automatically when the Auto Ice Off is turned on.
- Do not pour water directly into the Ice tray after manual cleaning. That may cause ice cubes sticking together or a malfunction.)
- Turning the knob into the locked position after cleaning and checking the lock position of the Ice tray regularly is essential to ensure that the Auto Ice maker is working properly. If the knob is unlocked, the Auto Ice maker may not work.

## Ice box

Once every 3 months


### ■ Removing

Lift and pull the Ice box forward until it is completely removed.

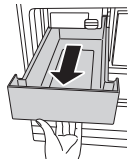

### ■ Attaching

Push the Ice box until it reaches the end of the Ice box holder.

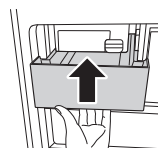


### Remark

- Stop the Auto Ice Making function before cleaning the Ice box (Page 17).

- 1 Open the lid and clean the Water tank with water.
- 2 Rotate the Water filter to remove the hook and remove the Water filter.
- 3 Gently wash the Water filter in water.
- 4 Remove the seal rubber on the edge and clean it with water.
- 5 Put the Water filter and rubber back into place.

**Remark**

- If there is water deposits or pipe blockages in the Water filter, ice may not be made properly.

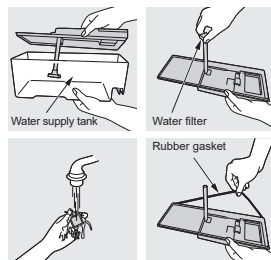

# Troubleshooting

Before you call for service, please check the following steps:

**The refrigerator does not operate.**

- Check that the power plug and its socket are in good condition.
- Check if there is any problem on main fuse and electrical system of the house.
- Check by unplug and wait for 7 minutes before plugging it back in.

**The refrigerator does not cool enough.**

- Check to be sure that LED in Operation Panel is displayed at proper position.
- Check to see if the refrigerator is overloaded with stuff or there is any hot foodstuff refrigerated inside.
- Is the refrigerator exposed directly to sunlight or heat source?
- Is the refrigerator door completely closed?
- Is the refrigerator door opened frequently?

**Dew, frost appears.**

**Outside**

- When the air humidity is high, there is a chance that moisture will condense on the refrigerator surface, around the door gasket or on the door surface. This situation will stop if the air humidity decreases. Please wipe it up with dry cloth.



**Inside**

- Is the door closed firmly?
- Is the door being opened and closed too frequently?
- Condensation inside the refrigerator can also be caused by leaving high-humidity foods uncovered or unwrapped.
- When the humidity is high, the door is open for a long time, or when the refrigerator contains too much food or makes too much ice, frost may form inside the Freezer compartment at the location of the Freezer cases, Ice box. This is normal. Please wipe with dry and soft cloth.

**The refrigerator generates noise.**

- Check if the refrigerator is located on a stable floor or is installed properly.
- Check if there is any object in contact with the refrigerator.
- Cracking sound within caused by the parts adjusting temperature which is normal.
- After installation, the refrigerator may make loud noise. The noise will be less when the refrigerator has been cooled.
- There may be a whistling sound inside the refrigerator when opening and closing the door. This is caused by the air outside being drawn in through the pipe on the backside of the refrigerator to better balance the air circulation inside the unit.



# Troubleshooting

## Auto Ice Making.

**The refrigerator does not make ice.**

- If the water in the tank does not decrease after a while, the Ice maker is not working.
- The ice making process begins after the inside of the refrigerator is cold enough. (It may take more than 24 hours to start the process)
- Check if the Auto Ice Off is set. (Page 17)
- Be sure to fully push the Water tank and Ice tray into place.
- Do not leave food in the Auto Ice maker.
- Do not install or remove the Ice tray frequently.
- Check if the Water tank is almost empty.
- If water spills on the Ice box, clean it up.
- Please contact Panasonic service center.

**The ice does not form any ice cube**

- Is the temperature of Freezer compartment set to a higher temperature than -20 °C?  
→ Adjust to a lower temperature. (Page 14)

**Unusual shape of ice cubes.**

- There are protrusions.  
→ The grooves of the Ice tray may be frozen.
- The ice cubes are round or connected to other ice cubes.  
→ Ice has been stored for a long time. (Ice cubes get round of connected by sublimation.)
- The ice is small.  
→ Small ice cubes are made when there is no water left in the tank.

**The back and sides of the refrigerator are warm and hot.**

- Because the refrigerator is equipped with the dew prevention and heat radiation tubes, the back and sides of the refrigerator get warmer when operating.
- The back and side plates may get warmer especially when starting up or if the door is frequently opened and closed.

**The normal sounds of refrigerator.**

- When the refrigerator starts operation, the sound like water flowing and boiling water is created. This is the sound of the cooling liquid.
- The noise is generated when the automatic defrost system operates.
- The dilatation of the details inside the refrigerator in the cooling process can cause sound "crack-crack".
- You may feel that the operation sound is larger because the compressor operates in high-speed under the following conditions: the refrigerator does not cool fully on the occasion such as using it for the first time, opening/closing the door too frequently, the surrounding temperature is high. The sound becomes more quiet after cooling fully.

# Troubleshooting

**The inside is smelling.**

- Do you store food with dry odor without wrapping it?

**LED does not turn on.**

- Please contact Panasonic service center.

**The Operation Panel flashes.**

- Are you adjusting the temperature of your refrigerator?  
→ Flashes during adjusting. Please complete the setting or the Operation Panel will stop flashing after 5 seconds.

**Food becomes frozen.**

- Do you put the food near cold air holes?
- Do you adjust the temperature control to less than 4 °C for the Fridge compartment and/or -3 °C for the Prime Fresh case?  
→ Adjust to a higher temperature.
- Do you put food in Prime Fresh case?

**Error display on Operation Panel.**

- U10: Warning if doors are opened too long.  
→ Check that the doors are closed properly.
- The letter "H" and two digits are displayed on Operation Panel.  
For example: H01  
→ Please contact the Panasonic service center for support.

**Food is over-frozen or not frozen.**

- When the food in Prime Fresh case is over-frozen.  
→ Please set to a higher temperature than -3 °C.
- When the food in Prime Fresh case is not partially frozen.  
→ Set the temperature to as low as -5 °C.

**Not cool, not freezing.**


- Cooling or freezing may not be sufficient depending on the type of food, packaging condition, storage capacity, and how often the door is opened and closed.  
→ Create space between foods for cold air circulation, arrange similar sized food in a Prime Fresh case and adjust the temperature accordingly.

**Not fully sealed.**

- When there is too much food, it may overflow from Prime Fresh case and enter the gap behind Prime Fresh case, causing it not to be fully sealed.  
→ Check the back of Prime Fresh case contains food items?  
If so, remove them before attaching Prime Fresh case.  
→ Arrange food properly to avoid overflowing.

Prime Fresh case

## Specifications

Model No.		NR-BW530HW
Freezer Star Rating		
Capacity (L) (IEC 62552:2015+A1:2020)	Total	506
	Freezer	188
	Fridge, Prime Fresh	318
Outside Dimensions Width x Depth x Height (mm)		750 x 750 x 1730
Net Weight (kg)		85
Refrigerant Type		R600a
Cooling System		Non-frost cooling.
Rated Voltage (V) Rated Frequency (Hz)		Refer to the rating label attached inside the cabinet.

## Memo

This image shows a full page of white paper with horizontal blue or grey ruling lines, typical of notebook paper. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

<https://www.panasonic.com>

© Panasonic Appliances Vietnam Co., Ltd. 2025



規格

型號		NR-BW530HW
冷凍等級		***
(IEC 62552:2015+A1:2020) 容量 (公升)	合計	506
	冷凍室	188
	冷藏室, 主保鮮格	318
	外型尺寸 闊 × 深 × 高 (毫米)	750 x 750 x 1730
淨重 (kg)		85
製冷劑類型		R600a
製冷系統		無霜製冷。
額定電壓 (伏特) 額定頻率 (赫茲)		請參考雪櫃門上的額定標籤。

內部出現異味。	● 是否放置沒有包裹，會發出氣味的食物？
LED無法打開。	● 請聯繫 Panasonic 服務中心。
操作面板閃爍。	● 是否正在調整雪櫃或冷凍箱的溫度？ → 安裝過程中閃爍。請完成設置，或操作面板將在5秒後停止閃爍。
食物被凍結。	● 是否把食物放在冷風管附近？ ● 是否把溫度控制器調到較低的溫度，冷藏室為 4℃，主保鮮格為 -3℃？ → 請調整為更高的溫度。 ● 是否把食物放在主保鮮格？
操作面板顯示的錯誤。	● U10：警報開門時間過長。 → 請檢查各室的門是否閉合。 ● 操作面板上顯示字母“H”和兩位數字。 例如：H01 → 請聯繫Panasonic服務中心尋求支持。
食物冷凍過度或未冷凍。	● 當主保鮮格中的食物冷凍過度時。 → 請設置高於 -3℃ 的溫度。 ● 當主保鮮格中的食物未部分冷凍時。 → 將溫度設置為低至 -5℃。
不冷，不凍結。	● 根據食物的類型、包裝條件、存儲容量以及門打開和關閉的頻率，冷卻或冷凍可能不夠。 → 在食物之間留出空間讓冷空氣流通，將大小相似的食物放。入主保鮮格中，並相應地調節溫度。
沒有完全密封。	● 當食物過多時，可能會從主保鮮格溢出，進入主保鮮格後面的縫隙，造成密封不全。 → 檢查主保鮮格的背面是否有食品？如果是這樣，請在安裝主保鮮格之前將其取下。 → 妥善擺放食物，以免溢出。

自動製冰

雪櫃不製冰。

冰塊不會凍結成冰。

冰塊形狀異常。

雪櫃的背面和側面溫暖而灼熱。

雪櫃的正常聲音。

- 如果一段時間後水箱中的水沒有減少，即製冰模式不運行。
- 雪櫃內部足夠冷後開始製冰過程。（開始使用可能需要24小時以上。）
- 檢查是否設置為自動製冰停止模式（Auto Ice Off）？（第17頁）
- 務必將水箱和冰盤完全推入到位。
- 請勿將食物存放在製冰機中。
- 請勿頻繁安裝或取下冰盤。
- 檢查水箱中的水是否充足。
- 如果水溢在製冰室，請清潔乾淨。
- 請聯系Panasonic服務中心。

- 冷凍室的溫度是否設置為高於-20℃？  
→ 請調整為較低的溫度。（第14頁）

- 有突出部分。→ 冰盤的凹槽可能被凍結。
- 冰塊是否呈圓形或與其他冰塊粘在一起。
- 冰塊已存放很長時間。
- （由固體變成蒸汽，冰塊變成圓形或粘黏。）
- 小冰塊。→ 當水箱沒有水時，就會形成小冰塊。

- 解熱系統位於櫃壁內部，雪櫃運行時櫃體背面和側面溫度較高。
- 當製冷啟動會櫃門經常關閉時，背部和兩側發熱會更易明顯。

- 當雪櫃開始運行時，會聽見像流水或沸水的聲音。這其實是冷媒流動的聲音。
- 當自動除霜系統工作時會產生噪聲。
- 雪櫃內附件在製冷過程中膨脹會發出「劈啪」破裂聲。
- 當壓縮機在以下情況下高速運作時，您可能感覺運作聲音變大：雪櫃在首次使用，過於頻繁地開櫃門或環境溫度過高等情況下未完全冷卻。當雪櫃完全冷卻後，聲音會變得更為安靜。



## 雪櫃使用說明指引

在要求服務前，請檢查下列事項：

雪櫃不能操作。

- 檢查並確保插頭及其插座的狀況良好。
- 檢查屋內的主保險絲和電力系統有否出問題。
- 檢查時請拔除插頭，7分鐘後再重新插回。

雪櫃溫度不夠低。

- 檢查確保操作面板上的指示燈在正確位置顯示。
- 檢查雪櫃是否負荷過多或冷藏了任何熟食。
- 雪櫃是否直接曝曬在陽光下或靠近熱源？
- 雪櫃門是否完全關上？
- 是否過於頻繁打開雪櫃？

外部

- 當環境濕度過高時，門墊圈可能出現水珠。空氣濕度降低時，這種情形將消失。請用乾布將水珠擦掉。

出現水珠、結霜。


內部

- 門是否緊密關閉？
- 開關門是否太過頻繁？
- 雪櫃內的露水凝結還可能是由於存放高濕度的食物而無蓋好或包裝好。
- 空氣濕度高時，開門時間長，當雪櫃內裝有大量食物或製冰時，冷凍室收納盒的冷凍室、冰盒。這種現象是正常的。

用柔軟的幹布擦拭幹淨。

雪櫃發出噪聲。

- 檢查雪櫃是否已穩固放回位置或正確安裝。
- 檢查是否有任何物體與雪櫃接觸。
- 相應部件溫度調整導致雪櫃內的碎裂聲音屬正常現象。
- 安裝後，雪櫃可能會發出較大的噪聲。
- 當雪櫃製冷後，噪聲將降低。
- 打開和關閉門時，雪櫃內部可能會發出嘯叫聲。這是由於外部空氣通過雪櫃背面的管道吸入，以更好地平衡設備內部的空氣流通所致。

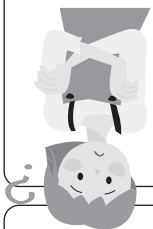

1 打開蓋子，用水沖洗自動製冰機水箱。

2 旋轉濾水器以取下呆鈎並將其取下。


3 用水輕輕沖洗過濾水器。

4 取下蓋子側面的橡膠墊圈，用水沖洗乾淨。

5 將濾水器和橡膠墊圈安裝到位。

### 注意

● 如果濾水器中的管道有積水或堵塞，可能無法正確地製冰。

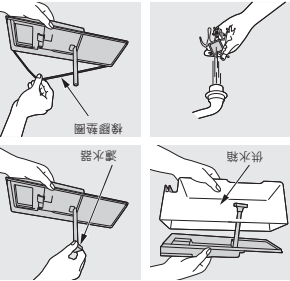

## 冰托

每三個月清洗一次

可以使用自動製冰機清潔模式 (Auto Ice Clean) 功能清潔冰盤 (第18頁)。  
此外，可以取下進行手動清潔。

冰盤手動清潔方法

## ■ 取下和清洗冰盤

- 1 選擇自動製冰模式 (Auto Ice Off) (第17頁)。

- 2 將製冰室的把手轉到解鎖位置。

- 3 向前拉突出部分，以取下冰盤。

- 4 用水沖洗。(請勿使用鋒利的擦洗工具擦洗冰盤表面。

如果冰盤被劃傷，冰塊將無法正常落下，導致冰盤損壞。)

## 注意

- 冰盤和框架不能分開。
- 請勿使用洗碗機或烘乾機。

## ■ 裝上

- 1 推入冰盤直至發出咔嚓聲為止。

- 2 將把手轉到鎖定位置。

- 3 關閉自動製冰停止模式 (Auto Ice Off) (第17頁)，以重新啟動製冰。

## 注意

- 僅在關閉自動製冰停止模式 (Auto Ice Off) 時，方可製冰。

- 手動清潔後，請勿將水直接倒入冰盤。(這可能會導致冰塊粘在一起或造成損壞。)

- 清潔後將旋鈕轉到鎖定位置並定期檢查製冰盤的鎖定位置對於確保自動製冰機正常工作至關重要。如果旋鈕未鎖定，自動製冰機可能無法工作。

## 冰盒



每三個月清洗一次

## ■ 取出

提起並向前拉製冰盒直到它被完全移除。

## ■ 裝上

推動製冰盒，直到它到達製冰盒支架的末端。

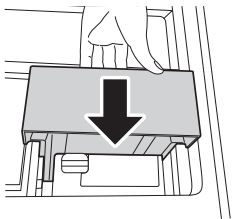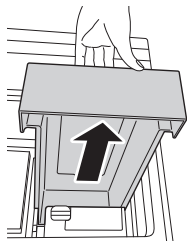

## 注意


- 在清洗冰盒前，選擇停止自動製冰功能 (第17頁)。

跳過拆卸和安裝的步驟大門架 ②，如同蔬果格取下和安裝冷凍室收納盒。

### 蔬果格濕度控制過濾器

每三個月清洗一次

- 1 拉動並取下蔬果格，濕度控制過濾器位於蔬果格的背面。
- 2 請拆下兩個掛鉤，然後向上滑動蔬果格濕度控制過濾器以將其取出。

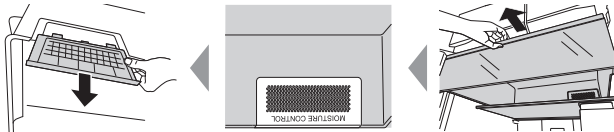

注意

- 用水沖洗後，擦拭幹淨或烘幹。
- 對於頑固汙漬，稀釋廚房清潔劑（中性），用軟牙刷輕輕刷落，然後用水徹底沖洗。

### 主保鮮格

每三個月清洗一次

#### ■ 裝上


- 1 完全打開冷藏室的個門。
- 2 先取瓶架 ⑤（根據各部名稱，第11頁～第12頁，再取下主保鮮格）。
- 3 向前拉動主保鮮格直到碰到終點為止，然後輕輕擡起主保鮮格的前部，以將其完全取出。
- 4 將主保鮮格安裝到支架上。
- 5 輕輕擡起主保鮮格並向前推，直到碰到終點為止。
- 6 安裝瓶架 ⑤。



#### ■ 取出



- 1 取出
- 1 向上抬起，在左右側間交替更換。
- 2 裝上

- 2 置于兩邊的支架上，向裡推入，直至到達盡頭。

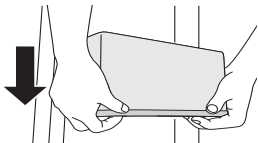

### 門架/瓶架

每三個月清洗一次

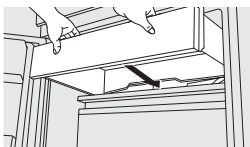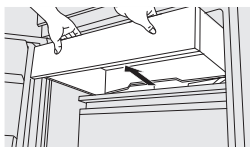


## 如何清洗雪櫃

### 托盤

每三個月清洗一次

#### ■ 取出

向上抬起托盤並往前拉。打開托盤與滑軌間的鉗扣，傾斜托盤並取出。

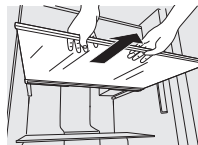

#### ■ 裝上

托盤向裡推入，直至到達盡頭。



### 注意

- 在取下冷藏室內的玻璃攔板之前，應先取下門上的門架/瓶架，以方便取下玻璃攔板。
- 可直接在雪櫃裏清潔果蔬盒上方的玻璃攔板。（因此玻璃攔板的設計為固定的。）
- 萬一在裝回盤子時卡不住，請檢查確認是否裝錯了托盤。
- 玻璃製成的托盤很重。

請小心處理它們，以免它們掉落並造成任何損壞或傷害。要裝托盤時，將突出側朝下握住並牢固插入。


### 蔬果格/冷凍室收納盒

每三個月清洗一次

### ※ 蔬果格


#### ■ 取出

- 1 完全打開冷藏室的個門。
- 2 取大門架②（根據各部名稱，第11頁～第12頁），再取下蔬果格。
- 3 向前拉動蔬果格直到碰到終點為止，然後輕輕擡起蔬果格的前部，以將其完全取出。

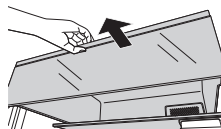

#### ■ 裝上

- 1 將蔬果格安裝到支架上。
- 2 輕輕擡起蔬果格並向前推，直到碰到終點為止。
- 3 安裝製大門架②。

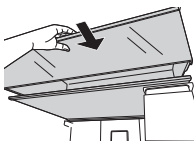

## 如何清洗雪櫃

清潔或進行維護之前，請務必確保從電源插座上拔下電源插頭。請勿用濕手連接或斷開電源插頭。拔下插頭後，請放置7分鐘再重新插入。否則，壓縮機可能無法運作。

### 弄髒後立即清潔雪櫃！

在污漬變硬之前，迅速擦去內側表面的污漬。

特別是食用油或豬油可能會導致塑料破裂，柑橘汁可能會導致雪櫃變色。當污漬無法輕鬆擦除時請使用溫水。請用濕軟布擦拭門表面。用乾布擦拭操作面板。當污漬無法輕易清除時，用蘸有中性廚房清潔劑的布擦拭。然後，用蘸有少量水的布擦拭。

### 偶爾清潔可拆卸部件。

製冰裝置，一周清理一次。根據指引，請每三個月取下托盤，門架等，然後將其浸入溫水中清洗。

### 每個月至少清理門襯墊一次。



用軟濕布擦拭清潔門襯墊。注意不要擦拭門較鏈上的石油膠。

### 注意


門襯墊可由授權的服務代理商進行更換。清潔時，如果門襯墊脫落，可將其推回到凹槽內。

### 要求

請勿使用以下物品清潔。(否則，表面會被刮花或侵蝕。)

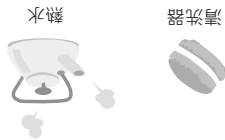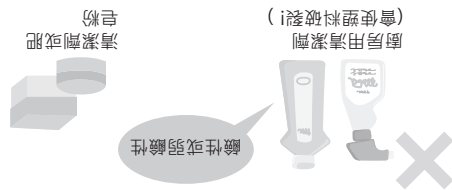

使用石油凝膠的點。

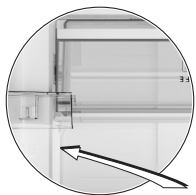

取出並沖洗!

請使用溫水!

請用濕軟布擦拭門表面。



## 自動製冰機對於清潔方法

- 第一次使用或長時間不使用時，冰盤可能有異味或積聚灰塵。進行清潔製冰機前，請先清潔冰盤。
- 選擇自動製冰機清洗模式 (Auto Ice Clean) 後，會自動將水倒入冰盤和供水管三次 (約2分鐘) 以排出水。
- 選擇自動製冰機清洗模式 (Auto Ice Clean) 後，請確保水箱內是否有足夠的水。
- 1 從製冰室中取出冰盒，取清冰盒中的全部冰塊 (當已形成冰塊時)，然後將冰盒放回原位。
  - 2 將水箱填充足夠量的水。
  - 3 選擇自動製冰機清潔模式 (Auto Ice Clean) (第18頁)。
  - 水箱同時發出斷斷續續的聲音，並開始清潔自動製冰機。
  - 製冰機清潔過程中，聲音無法關閉。
  - 當聲音結束時，操作面板上自動製冰機清潔模式 (Auto Ice Clean) LED熄滅，自動製冰機清潔結束，自動製冰過程開始。
  - 4 從製冰室中取出冰盒，將水從冰盒中倒出並擦去冰盒上的水。
- 如果不把冰盒上的水擦乾淨，冰盒可能會破裂。

## 自動製冰機停止方法

您可以根據需求啟用或停用自動製冰模式。

## ■ 關閉自動製冰

- 1 選擇自動製冰停止模式 (Auto Ice Off)，操作面板上的自動製冰開啟模式 (Auto Ice On) LED 指示燈將熄滅，冰箱將停止製冰 (第17頁)。
- 2 無需向水箱加水。水箱內剩餘的水仍會繼續製冰，約 2 小時後可取得冰塊。或者當冰盒已滿時，自動製冰將停止。
- 3 若您希望繼續自動製冰，請選擇自動製冰停止模式 (Auto Ice Off)，操作面板上的自動製冰開啟模式 (Auto Ice On) LED 指示燈將亮起 (第17頁)。

## ■ 長時間關閉自動製冰

- 1 長時間關閉自動製冰
- 2 清空水箱並取出冰盒中的所有冰塊。清潔水箱、水濾器、水箱橡膠墊圈及冰盒，擦乾後放回原位。
- 3 再次使用時，請重新加水至水箱並放回。

## ■ 搬運冰箱時

- 1 清空水箱並取出冰盒中的所有冰塊。
- 2 選擇自動製冰機清潔模式 (Auto Ice Clean)，操作面板上的自動製冰機清潔模式 (Auto Ice Clean) LED燈將亮起，冰箱將開始清潔自動製冰機。(此時正在製冰的冰塊與水將掉入冰盒中)
- 3 清潔過程約2分鐘後結束。取出冰盒並倒掉其中的冰塊與水。
- 4 清潔水箱、水濾器及冰盒，擦乾後放回原位。


- 請勿將水直接倒入存冰盒製冰。
- (否則，冰盒可能會破裂)
- 請勿將食物或其他物品倒入存冰盒。
- (否則無法正確檢測冰量，自動製冰機可能會停止工作或無法拉出存冰盒)

在以下情況下，製冰時間會更長。

- 第一次使用雪櫃。
- (至少需要24小時，因為自動製冰功能僅在雪櫃內部夠冷時方啟動。)
- 經常打開雪櫃門時。
- 雪櫃門未關時。
- 雪櫃裝滿食物時。
- 室內溫度冬天較低或夏天較高時。
- 發生電氣故障時。


## 自動製冰機水箱使用方法<sup>(\*)</sup>

1 取出自動製冰機水箱。

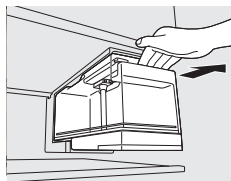


將水箱拉出直到被堵住為止。

2 裝滿水。

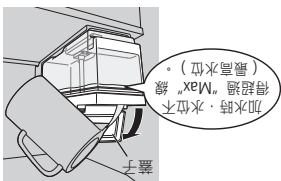

打開蓋子，將水箱裝滿水，然後將蓋子放回原位。

3 蓋好蓋子。

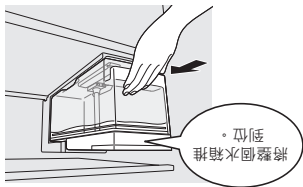

確認水箱的方向並安裝，直到到位為止。  
(如果不把水箱安裝到位，則無法製冰)

## 如何快速製冰


■ 當設置為快速製冰模式 (Quick Ice Making) 時，製冰速度會增加。  
僅需90分鐘即可製冰<sup>(\*\*)</sup>。

注意

- 約6小時後，該模式將自動恢復正常自動製冰模式。
- 當雪櫃處於除霜模式時，快速製冰模式 (Quick Ice Making) 的LED將閃爍。除霜完成後，快速製冰模式 (Quick Ice Making) 將立即啟動。
- 在快速製冰模式 (Quick Ice Making) 下，消耗能量會比正常增加更多。
- 在設置快速製冰模式 (Quick Ice Making) 時，ECONAVI模式不會運行。
- <sup>(\*\*)</sup> 室內溫度為20°C時，冷藏室、主保鮮格、冷凍室的溫度分別為4°C、-3°C、-20°C。



## 冷凍室

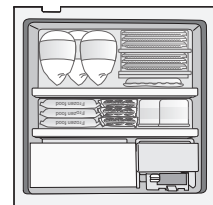


冷凍食品長期儲存。  
冷凍室的溫度範圍為-23℃~-15℃。


### 冷凍食物和鎖定風味的三個技巧

1. 快速冷凍薄且小的食物
2. 完全密封
3. 不要重新急凍

## 自動製冰

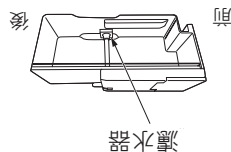

自動製冰機水箱

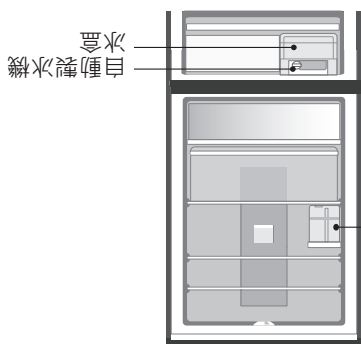

### 為方便使用自動製冰機

○ 自動製冰時，請僅使用飲用水。



請勿將以下液體倒入自動製冰機水箱。  
(以下液體可能會損壞自動製冰系統)



水硬度應為  
100mg/L 及以下。



果汁等



運動飲料




汽水



熱水

### 小貼士

- 水硬度應為100mg/L 及以下。礦物質呈白色漂浮顆粒。這些礦物質是無害的。
- 第一次使用自動製冰機時，製冰機等處可能有異味或積聚灰塵。
- 請放棄第一次製冰的冰塊。
- 定期使用自動製冰機清潔功能。(第22頁)

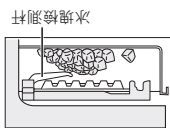


冰塊檢測杆

冰塊形成一堆，將接觸冰塊檢測杆。(此時，自動製冰模式會停止)

當冰滿時，觸動冰塊檢測杆，自動製冰模式將自動停止。

### 注意

 將冰塊均勻地鋪在存冰盒，以製出更多的冰塊。



## 主保鮮格

主保鮮格中的溫度可以按以下選擇：

 
- 軟冷凍溫度為  $-5^{\circ}\text{C} \sim -1^{\circ}\text{C}$ 。
- 使用主保鮮格作為冷藏室的溫度為  $0^{\circ}\text{C} \sim 4^{\circ}\text{C}$ 。
- 使用雪櫃時，溫度可以根據您的使用方式進行調節。

主保鮮格的預設溫度為  $-3^{\circ}\text{C}$ 。

### 使用主保鮮格

大約  $-5^{\circ}\text{C} \sim -1^{\circ}\text{C}$

易於切開  
冷凍食物易於  
切開！  
更為方便。



- 適用儲存魚、肉等新鮮食物。與冷藏室相比、魚、肉的儲藏壽命會延長。
- 食物冷凍過度時  
魚片或肉片可能會過度冷凍將溫度設定為高於  $-3^{\circ}\text{C}$ ，避免食物過度冷凍。
- 食物無法完全冷凍時。  
視乎食物類型，如肉塊和體型較大的魚，以及儲存條件和周圍溫度等，食物可能無法達到預期的冷凍效果。此時可將溫度控制最低設定為  $-5^{\circ}\text{C}$ 。

- 切勿儲存過多的食品。當食品過多且雪櫃內沒有冷氣循環的空間時，製冷效果會受影響。
- 在主保鮮格內儲存的食物之間保持充分的間隔。
- 當大量儲存食物時，例如大塊肉、魚或雞肉，建議將食物放在主保鮮格的中心，以優化製冷效果。


- 當主保鮮格的溫度設定為  $0^{\circ}\text{C} \sim 4^{\circ}\text{C}$  時，新主保鮮制模式 (Prime Fresh+) 模式將不會運行，以避免食物變質。


- 切勿用主保鮮格內的食物堵塞冷氣出口。

如果冷氣沒有擴散主保鮮格的每個角落，雪櫃內將無法充分製冷，食物保鮮可能受影響。

因此，食物不應放在主保鮮格上方（位於主保鮮格上方）前面，以免阻塞內部的冷氣循環。

食物可能會變質。因此，食物不應放置在進風口位置（位於主保鮮格上方）前，會阻礙主保鮮格的空氣流通。

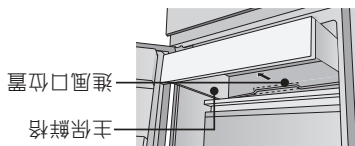

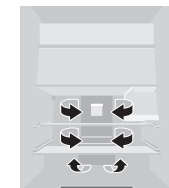

■ 請勿放置阻礙雪櫃內的空氣流通的食物

如果冷氣不擴散，雪櫃內部很難下降溫度，需要消耗更多的電力來冷凍。因此，食物不應阻塞通風口<sup>(\*)</sup>前，阻礙雪櫃內的空氣流通。  
<sup>(\*)</sup>通風口位於冷藏室的空氣吹送裝置。



不浪費使用雪櫃的冷氣  
氣是保持食物新鮮的時  
間更長的關鍵！

■ 請勿把雪櫃裝得太滿

裝得太滿時，雪櫃內的冷風無法流通，  
會影響冷凍性能。在各種食物之間留出空間！

### 食物保存小貼士

- 由於濕度高，水滴會粘附在蔬果格壁上。如果有水或水滴殘留，請用軟布擦掉。
  - 請勿把食物放置高於蔬果格的高度，很容易導致門關不上的情況，導致結霜，蔬菜和水果可能會被卡住並變質。
- 大蔬果格備大開口導軌系統，有助於輕鬆拉出蔬果格處的食物，並增加受力能力，讓使用者只需一隻手即可拉動蔬果格。蔬果格濕度調節器有助於控制蔬果格內的濕度，幫助蔬菜保持濕潤和新鮮。

### 蔬果格

冷藏室溫度設定範圍為 1℃ ~ 7℃。  
如果冷藏室的溫度長時間設置在 1℃，食物可能會凍結。

## 冷藏室

- 自動製冰機清潔模式 (Auto Ice Clean) 正在運行時，不能中途停止/關閉該模式。自動製冰機清潔操作詳見第22頁。

### 注意

LED亮起：自動製冰機清潔模式 (Auto Ice Clean)  
 正在運行。  
 LED熄滅：自動製冰機清潔模式 (Auto Ice Clean)  
 不運行。

\*Auto Ice Clean

- 按一下 "Auto Ice" 圖示，然後長按 "Auto Ice" 圖示 3 秒鐘以啟用自動製冰機清潔模式 (Auto Ice Clean) 功能。在自動清潔程序結束時，冰箱將發出提示音。
- 自動製冰機清潔模式 (Auto Ice Clean) 運行方法
  - 在預設狀態下，自動製冰開啟模式 (Auto Ice On) LED 指示燈會持續亮起。
  - 當自動製冰停止模式 (Auto Ice Off) 啟動時，若快速製冰模式 (Quick Ice Making) 功能正在運作，將會被停止。

### 注意

自動製冰停止模式 (Auto Ice Off) 和自動製冰機清潔模式 (Auto Ice Clean)

快速製冰模式 ( Quick Ice Making )

設置快速製冰模式 ( Quick Ice Making ) 時，冰箱將增加其容量以減少製冰時間。

■ 快速製冰模式 ( Quick Ice Making ) 運行方法

- 情況一：連續二次點擊 "Auto Ice" 圖標，以啟動快速製冰模式 ( Quick Ice Making )。
- 情況二：若正在進行自動製冰停止模式 ( Auto Ice Off ) ( 行自動製冰開啟模式 ( Auto Ice On ) LED指示燈熄滅 )，請按 "Auto Ice" 圖示三次，直到快速製冰模式 ( Quick Ice Making ) LED 指示燈將閃爍，冰箱會發出提示音。此期間，快速製冰模式 ( Quick Ice Making ) LED 指示燈將保持亮起。
- 想立即停止快速製冰模式 ( Quick Ice Making ) 時，請連續按 "Auto Ice" 圖示兩次，直到快速製冰模式 ( Quick Ice Making ) LED 指示燈熄滅。

注意

- 當快速製冰模式 ( Quick Freezing ) 啟動時，以下模式 ( 如果處于工作狀態 ) 將停止：  
速凍模式 ( Quick Freezing )，新主保鮮制模式 ( Prime Fresh+ )，自動製冰停止模式 ( Auto Ice Off )。

自動製冰停止模式 ( Auto Ice Off ) 和自動製冰機清潔模式 ( Auto Ice Clean )

雪櫃運行時，自動製冰模式 ( Auto Ice ) 將自動運行，而無需任何設置。當設置自動製冰停止模式 ( Auto Ice Off ) 和自動製冰機清潔模式 ( Auto Ice Clean ) 製時，雪櫃將停止自動製冰機並自動清潔製冰機。

■ 自動製冰停止模式 ( Auto Ice Off ) 運行方法

- 情況一：請按 "Auto Ice" 圖示三次，直到自動製冰開啟模式 ( Auto Ice On ) LED 指示燈熄滅。
- 情況二：若正在進行快速製冰模式 ( Quick Ice Making ) ( 行快速製冰模式 ( Quick Ice Making ) LED 指示燈亮起 )，請按 "Auto Ice" 圖示兩次，直到自動製冰開啟模式 ( Auto Ice On ) 指示燈熄滅。
- 當開始自動製冰停止模式 ( Auto Ice Off ) 時，自動製冰開啟模式 ( Auto Ice On ) LED 指示燈會閃爍，冰箱會發出提示音，然後自動製冰開啟模式 ( Auto Ice On ) LED 指示燈熄滅。
- 想立即停止自動製冰停止模式 ( Auto Ice Off ) 時，請連續按 "Auto Ice" 一次，直到自動製冰開啟模式 ( Auto Ice On ) LED 指示燈亮起。

Auto Ice On

LED亮起：自動製冰停止模式 ( Auto Ice Off )  
停止。  
LED熄滅：自動製冰停止模式 ( Auto Ice Off )  
運行。

Quick Ice Making

LED亮起：快速製冰模式 ( Quick Ice Making )  
運行。  
LED熄滅：快速製冰模式 ( Quick Ice Making )  
停止。

 
## 速凍模式 (Quick Freezing)

設置為速凍模式 ( Quick Freezing ) 時，雪櫃將快速降低溫度，以更好地保存食物。

### ■ 如何操作速凍模式 ( Quick Freezing )

- 觸摸並按住 "Freezer" 圖標三秒，以啟動速凍模式 ( Quick Freezing )。此時，速凍模式LED會亮起。
- 想立即停止速凍模式 ( Quick Freezing ) 時，再次觸摸並按住 "Freezer" 圖標三秒，直到指示LED滅為止。

LED亮起：  
速凍模式 (Quick Freezing) 運行。  
LED熄滅：  
速凍模式 (Quick Freezing) 停止。



注意

- 速凍模式 ( Quick Freezing ) 運行150分鐘後自動停止並返回正常模式。
- ( 速凍模式 ( Quick Freezing ) LED熄滅。 )
- 速凍模式 ( Quick Freezing ) LED閃爍表示除霜系統正在運行。除霜完成後，速凍模式 ( Quick Freezing ) 將立即啟動。
- 當速凍模式 ( Quick Freezing ) 結束時，冷凍室的溫度將恢復到先前設定的狀態。
- 當速凍模式啟動時，以下模式 ( 如果處於工作狀態 ) 將停止：新主保鮮制模式 ( Prime Fresh+ )，快速製冰模式 ( Quick Ice Making )。


## 新主保鮮制模式 (Prime Fresh+)

 設置為新主保鮮制模式 ( Prime Fresh+ ) 時，主保鮮格將快速降低溫度，以更好地保存食物。

### ■ 如何操作新主保鮮制模式 (Prime Fresh+)

- 連續二次點擊 "Prime Fresh+" 圖標，以啟動新主保鮮制模式 ( Prime Fresh+ )。此時，新主保鮮制模式 ( Prime Fresh+ ) LED會亮起。
- 想立即停止新主保鮮制模式 ( Prime Fresh+ ) 時，觸摸 "Prime Fresh+" 圖標一次，直到指示LED熄滅為止。

LED亮起：  
新主保鮮制模式 (Prime Fresh+) 運行。  
LED熄滅：  
新主保鮮制模式 (Prime Fresh+) 停止。



注意

- 新主保鮮制模式 ( Prime Fresh+ ) 會在運行105分鐘 ( 環境溫度為 18℃及以上 ) 後自動停止，並返回正常模式。( 新主保鮮制模式 ( Prime Fresh+ ) LED熄滅。 )
- 新主保鮮制模式 ( Prime Fresh+ ) 將立即啟動。
- 當新主保鮮制模式 ( Prime Fresh+ ) 結束時，主保鮮格的溫度將恢復到先前設定的狀態。
- 當新主保鮮制模式 ( Prime Fresh+ ) 啟動時，以下模式 ( 如果處於工作狀態 ) 將停止：速凍模式 ( Quick Freezing )，快速製冰模式 ( Quick Ice Making )。
- 新主保鮮制模式 ( Prime Fresh+ ) 在主保鮮製冰模式溫度設置為 0℃ ~ 4℃ 時不會啟動。

## ECONAVI操作

檢測門的打開和關閉以及雪櫃周圍的亮度，並自動操作控制，從而節約能源。(\*)

### ■ ECONAVI操作

- 雪櫃在開啟及偶爾執行使用期間，可以學習您的家庭生活方式，以最大程度地提高能源效率。
- 雪櫃前3周學習您的生活方式，從第4周開始可按您的生活方式來執行工作。

### ■ 啟用 ECONAVI 操作的設定

- 當冷藏室和冷凍室的溫度控制器設置為冷藏室溫度 4°C和冷凍室溫度 -20°C時，ECONAVI運行模式會自動激活。
- 速凍模式 ( Quick Freezing ) 和快速製冰模式 ( Quick Ice Making ) 正在運行，則 ECONAVI模式不會運行。
- 不能強行啟動 ECONAVI 操作。

(\*) ECONAVI模式的效力視乎環境溫度、次數和門打開和關閉狀態，以及食品存儲狀態而不同。

## nanoe™ X

- nanoe™ X是被水粒子包圍的超細微離子粒子的集合。
- nanoe™ X是具有超細微的帶電水粒子，其OH自由基是nanoe™的10倍。
- nanoe™ X模式將在雪櫃通電時啟動，並在使用雪櫃時始終運行。然而，由於nanoe™ X運行時需要濕度，因此如果雪櫃內濕度降低（如存放少量果菜等），此模式的有效性可能會降低。
- 在運行過程中，nanoe™ X設備可能發出微小的聲音。
- 長時間關閉雪櫃門後，打開雪櫃門時，會感覺到運行過程中產生的臭氣特有氣味，這是正常現象。

溫度控制

- 雪櫃出廠時，冷藏室為 4℃、主保鮮格為 -3℃、冷凍室的設定溫度為 -20℃。如想調整冷凍功率，可以更改溫度設置。






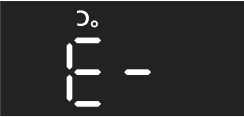
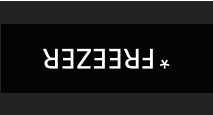


- 冷藏室的設定溫度範圍為 1℃ ~ 7℃，主保鮮格為 -5℃ ~ 4℃（主保鮮格溫度為 -5℃ ~ -1℃，如冷凍室一樣使用的主保鮮格溫度為 0℃ ~ 4℃），冷凍室為 -23℃ ~ -15℃。

- 雪櫃內的溫度會根據環境溫度、安裝狀態、使用條件和食物數量而有所不同。
- 由於測試方法和工具不同，實際測試溫度可能與顯示溫度有所不同。
- 本雪櫃配備了處理器來控制雪櫃內的溫度。當環境溫度變化、壓縮機運行或停止、門打開或關閉、室內溫度波動時，導致雪櫃內溫度與設定溫度略有差異。

■ 溫度設置及溫度設置說明

1、顯示當前溫度

觸摸下面的圖標以顯示：冷藏室、主保鮮格、冷凍室的當前溫度。選擇時，當前溫度相應的每個室的指示燈都會亮起。

圖標	室別	位置LED	溫度指示燈
	冷藏室		
	主保鮮格		
	冷凍室		


2、溫度設置

觸摸要設置的室（冷藏室、主保鮮格、冷凍室）圖標，以顯示當前溫度後，再次觸摸開始溫度設置過程。此時，位置LED和溫度LED會閃爍。

繼續觸摸該室圖標，以選擇所需的溫度。每次按下按鈕，溫度就會升高或降低 1℃。如果選擇超出室內溫度範圍，操作面板將顯示溫度返回到上述範圍內的最低水準。

3、溫度設置完畢

溫度設置完畢後，再按一個按鈕完成或等待5秒，操作面板將保存您剛剛所做的設置。

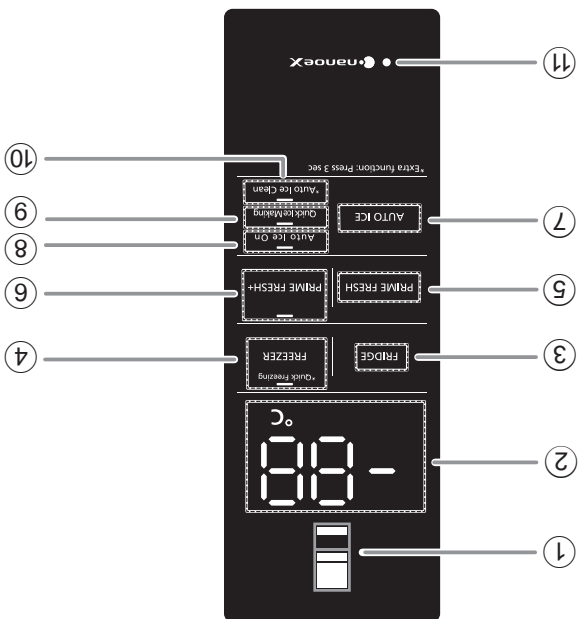

注意

- ① 顯示各室的LED：選擇不同的室時，相應的室的圖標將亮起。
  - ② 溫度顯示區：顯示冷藏室、冷凍室、主保鮮格的溫度。
  - ③ 冷藏室溫度控制按鈕。
  - ④ 冷凍室溫度控制按鈕和速凍模式LED。
  - ⑤ 主保鮮格溫度控制按鈕。
  - ⑥ 新主保鮮模式控制按鈕及LED。
  - ⑦ 自動製冰模式控制按鈕。
  - ⑧ 自動製冰模式及LED。
  - ⑨ 快速製冰模式及LED。
  - ⑩ 自動製冰機清潔模式LED。
  - ⑪ 顯示nanoex™ X模式的圖標和LED：顯示nanoex™ X模式的當前狀態。
- 在顯示操作面板上：“\*Extra function: Press 3 sec”，即要啟動附加功能時，需要長按前面板有“\*”的按鈕3秒。
  - 在正常情況下，操作面板燈熄滅。當您按下按鈕時，操作面板燈將亮起。冰箱門關閉時，操作面板燈會熄滅，所有按鈕都不會被操作。
  - 夏季溫高，放置未冷凍的食物或頻繁開門時，雪櫃內溫度會升高，因此請減少開門次數。
  - 接通電源後，操作面板將顯示各模式介紹和各室的溫度約10秒。在此期間，各按鈕尚未工作。10秒後，可以正常調整操作面板。




A-冷藏室

- ① 冷藏室LED (數量：3)
- ② 大門架 (數量：2)
- ③ 小門架
- ④ 蛋托
- ⑤ 瓶架
- ⑥ 冷藏室玻璃托板 (數量：2)
- ⑦ 蔬果格玻璃托板
- ⑧ 蔬果格
- ⑨ 蔬果格濕度調節器
- ⑩ 自動製冰機水箱
- ⑪ 冷藏室封條
- ⑫ nanoE™ X圖標



B-主保鮮格

- ⑬ 主保鮮格

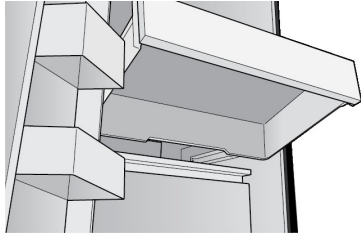


C-冷凍室


- ⑭ 自動製冰機
- ⑮ 冰盒
- ⑯ 上方冷凍室收納盒
- ⑰ 中間冷凍室收納盒
- ⑱ 下方冷凍室收納盒
- ⑲ 冷凍室LED
- ⑳ 冷凍室封條
- ㉑ 可調節螺栓

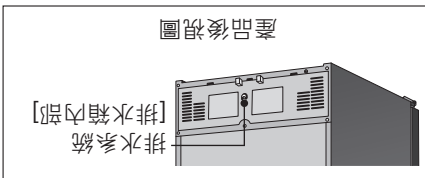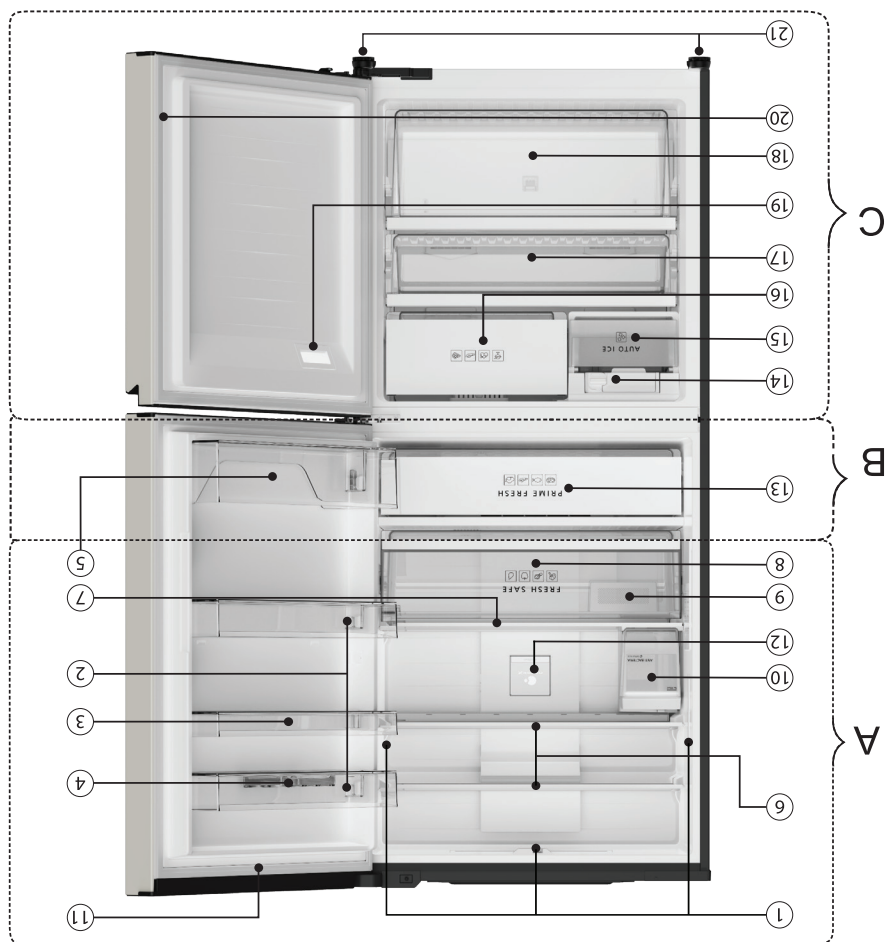

是否已採取措施預防地震  
時出現傾側？  
為避免雪櫃傾側，請使用  
固定帶等物件將其永久  
固定。

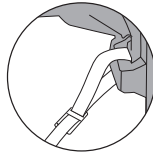

固定雪櫃。  
旋轉可調節櫃腳  
(左右兩側)，  
直至其觸及地面  
以穩定雪櫃。

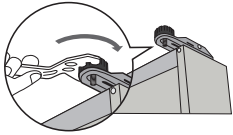

在雪櫃內部冷卻期間，請勿打開/關閉雪櫃門。  
在雪櫃內部充分冷卻下來之前，請勿打開/關閉雪櫃門。  
(暖空氣流入雪櫃內將阻斷製冷功能。)  
請等待直至雪櫃內部冷卻下來。  
● 在雪櫃內沒有食物且門未打開的情況下，雪櫃可能需要連續  
運行至少 4 小時 (或更長，尤其是在環境溫度較高的夏季)  
以冷卻內部。  
● 根據環境溫度和使用條件，可能需要 24 小時才能使內部冷卻  
並達到平衡。



## LED 和接地

- 專為本雪櫃設計的雪櫃內 LED，無法由個人進行更換。
- 若您需要更換時，請聯絡服務中心。
- 如果雪櫃沒有接地插頭，須將其連接至接地端以防漏電。

## 移動及搬運

### ※在移動和搬運之前

- 1 從製冰盤和製冰盒中取出冰塊。
- 2 拔下插頭。
- 3 扭轉調整腳（左右），使它不接觸地板。
- 4 將雪櫃背面托盤的水倒掉。將一個容器放在雪櫃背面的托盤後面，然後將托盤向後傾斜，讓水從托盤中流出。



操作需要4人以上，其中2人擡起雪櫃前面，避免雪櫃滑動造成受傷。

### ※移動和搬運方法

- 至少需要4人搬運。
- 每個人擡起雪櫃的一角。
- 搬運雪櫃時，請勿抓著雪櫃門。

## 注意

- 搬運時，用膠帶固定雪櫃門，避免雪櫃門自行打開。
- 搬運時，請勿將雪櫃側放，這可能會損壞雪櫃。
- 安裝完成後，至少等待4小時後再接通電源，以確保壓縮機內的氣體和油液處於穩定狀態。

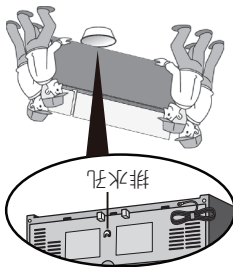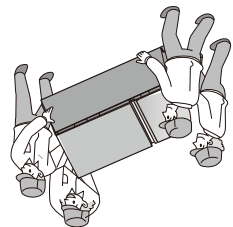


## 安裝位置與牆壁間的距離

- 雪櫃頂部和天花板之間必須至少留有5厘米的空隙。


- 雪櫃側面與牆壁之間必須至少留有5厘米的空隙。

- 雪櫃背面與牆壁之間必須至少留有5厘米的空隙。

- 第一次使用時：請清潔雪櫃內部。
- 用柔軟的濕布擦拭。
- 用水沖洗水箱和冰盤。
- 第一次開始使用時，會聞到塑料的味道。如果擔心，對整個房間進行通風換氣。
- 切勿把雪櫃放置在潮濕的地方。因為這樣容易生鏽可能導致漏電。
- 切勿把雪櫃直接放置在陽光下照射。因為熱和陽光將使雪櫃溫度上升。
- 切勿將雪櫃靠近熱源，例如廚灶或烤箱。
- 切勿堵塞雪櫃四周的空隙。
- 雪櫃必須放置在空氣流通的位置。
- 如果雪櫃沒有接地插頭，須將其連接至接地端，以防止漏電的危險。

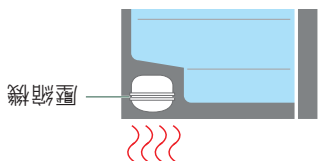

- 請勿在雪櫃頂部放置任何物品。它會干擾壓縮機的散熱，導致各部件變形或損壞。

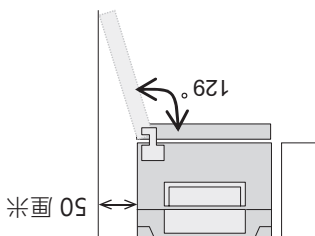

- 如果雪櫃靠近牆壁安裝，必須確保雪櫃右側與牆壁之間的距離至少為50厘米。如果這個空間不夠50厘米，門可能無法完全打開，玻璃隔板、蔬果格等可能無法取出。

## 注意

■ 主保鮮格和新主保鮮制模式 (Prime Fresh+)

- 主保鮮格的溫度可以在  $-5^{\circ}\text{C} \sim 4^{\circ}\text{C}^{(*)}$  之間變化。
  - 溫度  $-5^{\circ}\text{C} \sim -1^{\circ}\text{C}$ ：用於食物保存的較冷凍溫度，有助於節省解凍時間和精力，同時更長時間地保持食物的風味和新鮮度。
  - 溫度  $0^{\circ}\text{C} \sim 4^{\circ}\text{C}^{(**)}$ ：與冷藏室溫度相同，當您需要更多空間在冷藏室中保存食物時。
- 主保鮮格房間更易于拆卸和清洗，避免了难闻的气味或交叉污染。



(\*) 出廠默認設置溫度為  $-3^{\circ}\text{C}$ 。  
(\*\*) 當主保鮮格隔間已滿，放置大量食物時，或根據儲存和環境條件，冷卻性能可能會降低。在這種情況下，主保鮮格的溫度應設置為最低  $-5^{\circ}\text{C}$ 。

■ 蔬果格

大容量蔬果格配備保濕過濾器，讓蔬菜保持新鮮，延長保管時間。



■ 方便的控制屏幕



- 冷藏室、主保鮮格、冷凍室和急凍格都可以根據用戶的用途調節溫度及其模式。
- 冷藏室和冷凍室有關閉雪櫃提醒模式。
- LED 顯示和操作面板清晰且易于操作。

## 特點

### ■ 適合豪華廚房的高端設計



無邊框玻璃表面帶現代設計精致到每一個細節的手柄。

### ■ 高效節能

- Panasonic的INVERTER技術可提高節能效果並降低噪音。
- Panasonic獨家的ECONAVI技術，有助於識別用戶生活習慣的變化，雪櫃可自動調節，節省能源消耗。

### ■ nanoe™ X技術和 Ag Clean 銀膜過濾器

Panasonic 獨家的 nanoe™ X 技術和 Ag Clean 銀膜過濾器有助於除臭和中和細菌，保持食物新鮮。



### ■ 速凍 ( Quick Freezing )

速凍 ( Quick Freezing ) 使冰箱內的溫度迅速降溫，以保持食品的原味，提高製冰速度。

### ■ 頂部壓縮機 ( Top Unit )

Panasonic的獨家設計，將壓縮機從傳統的底部位置移至頂部，優化了內部使用空間。

### ■ 自動製冰系統 ( Auto Ice Making )



### ANTI BACTERIA BPA FREE

- 配備自動製冰系統，隨時滿足製冰需求。
- 5升大容量雪櫃，由無BPA抗菌材質製成，配備抗菌過濾網，對健康具有良好的安全性。
- 帶快速製冰模式 ( Quick Ice Making ) 。
- 帶自動製冰停止模式 ( Auto Ice Off ) 和自動製冰機清潔模式 ( Auto Ice Clean ) 。

## 使用時:

- 當拔掉插頭後，請等 7 分鐘，然後再插上。否則，壓縮機可能無法正常運作。
- 根據實際操作狀態調校溫度以節省能源。
- 若您將外出一段時間，或是雪櫃裡沒有冷藏任何物品，應拔出插頭以節約能源。注意當多日不使用雪櫃時，一定要把雪櫃裡剩餘的食物全部取出，清潔並打開雪櫃門幾個小時，讓雪櫃內的水分變乾，避免發霉和氧化雪櫃的組件。
- 雪櫃外壁有時會發熱，特別是在剛剛安裝之後。這種情況屬於正常，這是由於內置的豎乾乾燥機管防止雪櫃凝結水汽和散發熱能。
- 當濕度很高時（例如在雨季）在雪櫃機身外部可能有水汽，特別是在櫃門密封墊周圍。請用乾淨的布片擦掉凝結的水汽。
- 新鮮盒里面的濕氣可能會凝結成水汽，所以需要布片定期進行擦拭。每月對新鮮盒清潔一次。
- 切勿長時間打開櫃門，特別是在炎熱潮濕的天氣裡更需注意。
- 雪櫃頂部採用鋼材製成的原因之一是為了防止外部撞擊引起火災。請勿在雪櫃上面放東西。



## 儲存食物時:

- 切勿放置過多的東西。
- 食品之間必須要有間隙以保持冷卻效果。
- 將水果和蔬菜儲存在蔬果格，鎖緊水份，令食物長時間保鮮。
- 應蓋緊飲水瓶，飲料瓶，以防止異味進入瓶內。
- 用緊蓋，塑料膜或箔片蓋住多汁食品。
- 將蔬菜，水果及新鮮食品等食物放進雪櫃急凍或冷藏前，應使用保鮮紙包好或放入保鮮盒中。
- 如要長時間儲存，應將肉或魚等食物放入冷凍室。





否則可能導致燙傷或意外事故。

小心



開/關櫃門時:

- 在打開雪櫃時，注意不要夾到手。
- 注意門的間隔。關門時可能夾住您的手。



儲存食物時:

- 切勿急凍玻璃瓶，否則可能導致傷害事故發生。
- (若玻璃瓶內的液體凍結，玻璃瓶可能破裂而對您造成傷害。)
- 切勿在玻璃托架上放置較重物品或施加較大衝擊力。

(否則，玻璃托架可能會破碎，您可能會因此而受傷。)



移動雪櫃時:

- 搬運時請牢牢抓緊雪櫃。
- 表面容易受損的地面應使用防護罩等。



使用須知

開/關櫃門時:

- 切勿冷藏比托架或托盤更大的物品，否則雪櫃門無法完全關閉，從而造成冷氣洩漏。
- 切勿頻繁打開雪櫃或打開很長一段時間，以防雪櫃內部形成水滴，因而浪費能源。
- 經常檢查櫃門密封條，它必須與雪櫃櫃身完全貼合。

清潔時:

- 切勿使用化學物質或液體清理雪櫃。這些物體將會損壞和侵蝕雪櫃表面。



否則可能導致火災，  
燙傷，爆炸或觸電。

警告



#### 適用於電源插頭和電源線：

- 切勿用濕手插拔插頭。
- 切勿讓電源線或插頭受損。



- 清潔時請拔下電源插頭。
- 完全插入符合雪櫃額定電流及額定電壓的牆上電源插座。
- 專為雪櫃預留一個插頭。
- 請完全展開電源線，避免將過多電器連接到供雪櫃使用的同一插頭上。
- 定期清除電源插頭上的灰塵。
- 如果電源線損壞，必須由廠家，服務代理或相關的合格人員進行更換，以防發生危險。
- 若您聞到一股燒焦的氣味，請斷開電源插頭，並對廚房進行通風。
- 若出現任何異常現象或故障，請立即停止使用並拔掉電源插頭。異常及故障範例：

- 電源線或插頭異常滾燙。
- 電源線被深切或變形。
- 聞到燒焦氣味。
- 觸摸櫃體時會感到刺痛的電擊感。

#### 使用時：



- 切勿損壞製冷電路（位於機背的管道）。
- 切勿觸摸壓縮機或管道，此區域溫度較高。
- 切勿讓孩童攀在雪櫃門上玩耍，雪櫃可能會因此翻倒壓在孩童身上。
- 不要將任何水容器放在雪櫃頂部以防止溢出來的水引起電擊或燃燒。
- 切勿在設備後部放置多個便携式插座或便携式電力供應。
- 保持設備外殼或內置結構中的通風口暢通無阻。



- 本設備不適合身體、感官或精神上有缺陷的人（包括兒童）使用，或者缺乏使用本設備的經驗和知識，除非他們得到負責人的監督或有關使用本設備的指導為了他們的安全。
- 應對孩童進行監督，確保其不使用雪櫃玩耍。

#### 安裝時需注意：



- 設備不平衡時可能會發生危險，確保支腳穩固且設備水平。
- 放置設備時，請確保電源線沒有被困或損壞。



- 確保雪櫃插入已接地線的電源插座。

## 安全使用須知

請確保遵循這些說明。

**警告**



這個標識表示  
可能導致嚴重傷害或者死亡。]

這些標識表示禁止。



這個標識表示需要採取行動。



這個標誌表示雪櫃必須接地以防止電  
擊。



否則可能導致火災、  
燙傷、爆炸或觸電。

**警告**



火災危害/易燃物品

iso-butane



這個標識表示  
可能導致傷害或故障。]

**小心**



在緊急情況下:



維護工作只能由合格的技術人員執行。



勿在設備中存放易爆物品如有易燃推進劑的噴霧罐，化學藥品或科學  
標本。

請勿在雪櫃中使用除臭劑等電器。洩漏的製冷劑可能會因電觸點火花而  
著火併可能引起爆炸。  
勿在雪櫃內使用電器,除非是製造商推薦的類型。



切勿自行嘗試拆解、維修或改裝雪櫃。  
需要維修雪櫃時，請諮詢您的零售商或授權服務中心。  
切勿使用機械裝置或製造商建議以外的方式加速除霜過程。



回收產品時:

在將雪櫃做再生資源利用之前，請拆除所有的門上密封條，以防止孩童  
被關閉在裏面。  
務必在雪櫃的使用壽命全程保存好上述警告標籤。  
如果雪櫃被搬遷到其他地點以及被運送到回收廠，必須將使用者手冊轉  
交給任何可能使用或處理雪櫃的人。  
根據當地相關法律，本雪櫃使用異丁烷作為製冷劑。  
丟棄本機時，請以適當的方法處理之，切勿以火焚化。



內容

● 安全使用須知..... 2	● 新主保鮮制模式 (Prime Fresh+ ) ..... 16
● 特點..... 6	● 快速製冰模式 (Quick Ice Making ) .... 17
● 安裝..... 8	● 自動製冰停止模式 (Auto Ice Off ) 和自動製冰機清潔模式 (Auto Ice Clean ) ..... 17
● 各部名稱..... 11	● 冷藏室..... 18
● 操作面板..... 13	● 主保鮮格..... 19
● 溫度控制..... 14	● 冷凍室..... 20
● ECONAVI 操作..... 15	● 如何清洗雪櫃..... 23
● nanoe™ X..... 15	● 雪櫃使用說明指引..... 27
● 速凍模式 (Quick Freezing ) ..... 16	● 規格..... 31

■ NON-CFC

本機的製冷劑 (異丁烷(R600a)) 和隔熱劑 (Cyclopentane) 都使用完全無氟的材料。所以使用該雪櫃不會傷害地球的臭氧層。

- 非常感謝您購買 Panasonic 產品。
- 使用本產品前請仔細閱讀這些說明並遵照第 2-5 頁的安全使用須知。
- 請確保保用證上的購買日期和零售商名稱蓋有印章，並將它和本操作指南一同收妥。