



**IN THE BOX**

SC-GN01

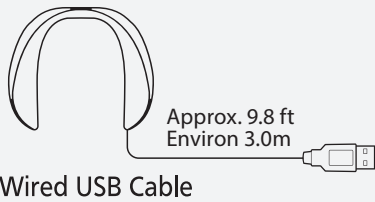


Audio cable

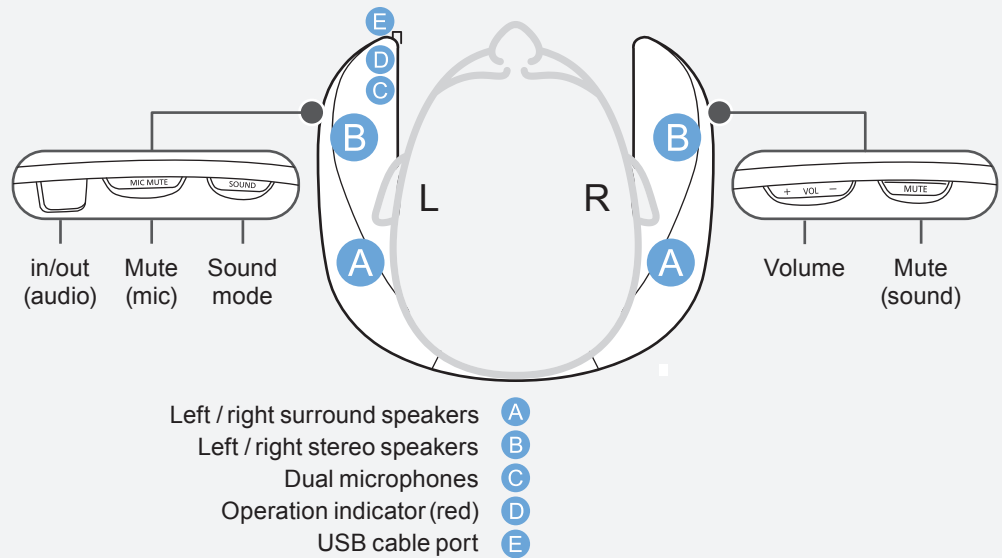

**CONNECTING TO A CONSOLE**


For **PC • PS4 • PS5**  
**Nintendo Switch** (TV mode)

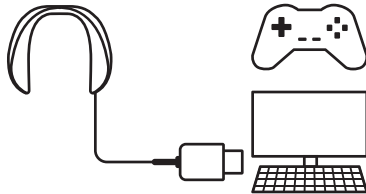

\*Connection to USB3.0 port is recommended.

Please note: The audio output For PS4/PS5 must connect to a USB port on the back of the console.


For **Xbox One. Series S/X**  
**Nintendo Switch** (Tabletop / Handheld mode / Portable)

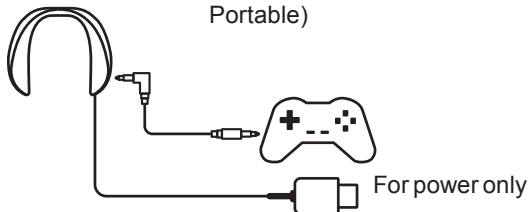

**POSITIONING**



**BASIC OPERATION**

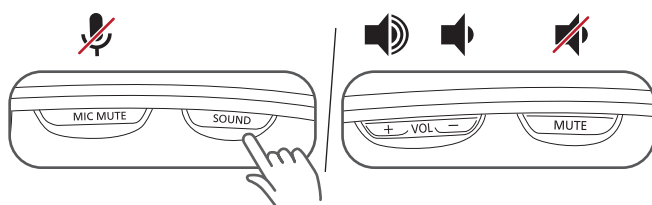

- Role-playing games **RPG** x1
- First-person shooter games **FPS** x2
- Enhances voice/easier to hear **Voice** x3
- 2 channel stereo sound for music **Music** x4
- Immersive surround sound and power **Cinema** x5
- Stereo output **STEREO** x6

**WHEN CONNECTING TO A PC (1st time only)**


The default Windows setting is SC-GN01 (Chat)\*.  
 In order to experience surround sound, change setting to "Game"

\*SC-GN01 (Chat) setting will optimise voice playback for clear communication during video calls.


Click the Volume icon on the taskbar notification area.



Click the expansion arrow above the master volume control.

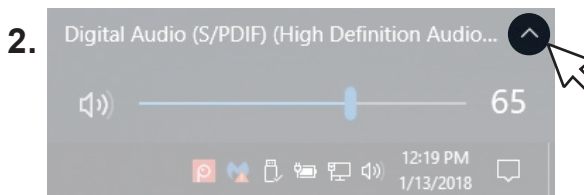

Select **Panasonic SC-GN01 (Game)**.

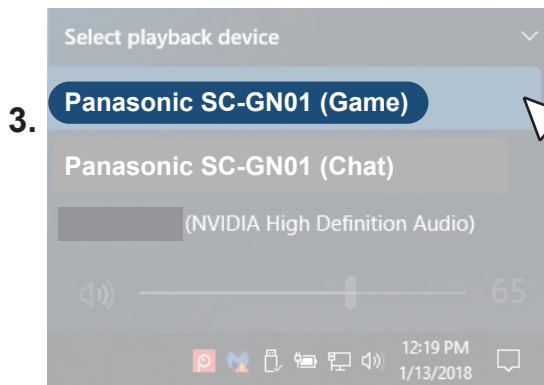

**SPEAKER SOUND ADJUSTMENT**

Adjust speaker sound positioning forwards or backwards for a custom surround audio experience

1. Press the [MIC MUTE] and [MUTE] button at the same time
2. Press [+ VOL] to set sound position forwards  
 Press [VOL -] to set sound position backwards
3. Press any button other than [+ VOL -] to save settings

**LOW VOLUME LEVELS**  
 (Console Troubleshooting)

Please ensure you have followed steps 1-3. If volume levels are still low, please check headset volume in the audio settings of your console.

FOLD

FOLD