

# Panasonic®

## Operating Instructions

### Dehumidifier

Model No. **F-YCL27N**

This product is for indoor use only

### Contents

< Page >

Safety Precautions .....	2~4	Preparing for use
Part Names .....	5~6	
Dry Clothes mode .....	7	Operation
Dehumidifying mode .....	8	
Fan mode .....	9	
Air Swing / Louver Direction .....	10	
● Air Direction Setting Examples .....	11	
Using the Timer/ Removing a Full Tank .....	12	
Continuous Drainage .....	13	
Maintenance .....	14~15	Troubleshooting
● Drying Clothes .....	16	
● Effectiveness of the filter .....	16	
Fault ! ? .....	17~18	
Memo .....	19	
Specifications .....	20	

Correct use will help you save electricity

Warranty card included Separately

Thank you for purchasing this Panasonic product.



- Please read these operating instructions carefully, in order to use the product correctly and in a safe manner.
- Also, be sure to read the “Safety precautions” section (pages2~4), before use.
- Keep the warranty documentation in a safe place along with the operating instructions for future reference.

# Safety precautions




Always pay attention to these precautions

To prevent users and others bodily harm or property losses, we are explaining the precautions that must be observed.






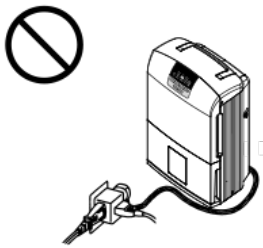
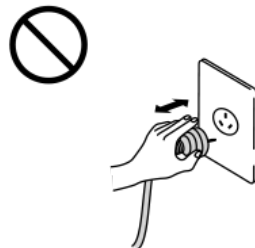
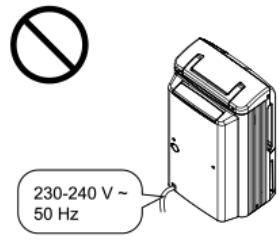
■ Ignoring the symbols denoting incorrect operation, can result in harm or level of damage, described in the following two categories.

	<b>WARNING:</b> This symbol indicates the "Possibility of death or serious injury".
	<b>CAUTION:</b> This symbol indicates the "Possibility of injury or damage to property".

■ Meanings of symbols that always observed are as shown below.


	This symbol indicates an action that "requires caution".
	This symbol indicates a "never do this" action.
	This symbol indicates an "always do this" action.

## WARNING
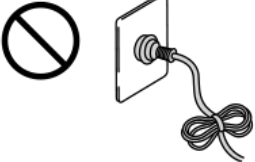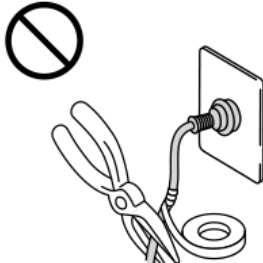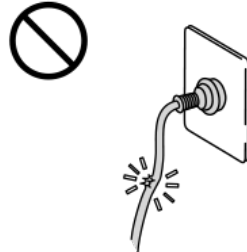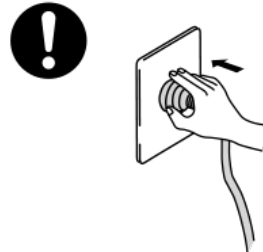
<p>■ Do not do anything that may damage the power cord or power plug.</p>  <p>Please do not cut, modify, bend strongly, pull, place heavy objects on top of or tie the power plug with nylon straps or wires; continual use of damaged power plugs may result in electric shock, short circuit or fire.</p> <p>● If the included power cord is damaged, it must be replaced by the manufacturer, the manufacturers authorized service agent or registered electrician in order to avoid a safety hazard.</p>	<p>■ Avoid the power cord if it is damaged or modified</p>  <p>Damage from heavy objects placed on the power cord or pulling on the power cord may cause fire or electric shock.</p>	<p>■ Do not use a damaged power cord</p>  <p>Using a damaged power cord may result in short circuit or fire. Please consult with the manufacturer or an authorized service agent.</p>	<p>■ Insert the power plug completely</p>  <p>If the power plug is not inserted securely, fire due to overheating may occur.</p> <p>● Do not use damaged power plugs or loose wall sockets.</p>
<p>■ Do not disconnect the power plug with wet hands.</p>  <p>Electric shocks may occur.</p>	<p>■ Do not use overloaded the rated current of the power outlet and wiring equipment.</p>  <p>Use too many branch lines will exceed the rated current, it may cause a fire by overheating.</p>	<p>■ Do not start or stop the unit by inserting or pulling out the power plug.</p>  <p>It may cause fire or electric shock by overheating.</p>	<p>■ Do not use the voltage other than as specified for unit.</p>  <p>230-240 V ~ 50 Hz</p> <p>It may cause fire or electric shock by overheating.</p>


## ⚠ WARNING

- Do not insert fingers or other objects into the air inlet or outlet.

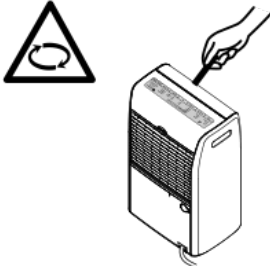

The rotating fan inside the unit could cause injury.

- Do not place the unit near a heater.

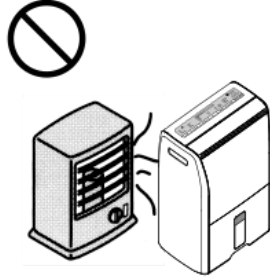

Plastic parts may melt and cause fire.

- Never try to repair the unit by yourself.



Fire or electric shock may occur.  
 ● Consult the manufacturer or the manufacturers authorized service agent.

- Switch off the unit and pull out the power plug if smoke or an abnormal smell is detected.



It may cause fire or electric shock by overheating.  
 ● Consult the manufacturer or the manufacturers authorized service agent.

- Do not unplug roughly.




Unplugging roughly may damage the power cord and may cause electric shock, short circuit or fire.

- Periodically clean the dust and dirt on the power plug.



Dust may accumulate on the power plug in humid conditions and may cause the insulation to fail and cause a fire.  
 ● Disconnect the power plug and wipe it with dry cloth. If not using the unit, disconnect the power plug.

- Do not stretch the power cord.

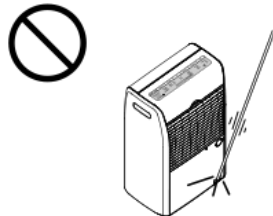

Trapping the power cord as in the above illustration, may cause a short circuit or broken wires (which may cause a fire or an electric shock.)


- Do not pull on the power cord when carrying or storing the unit.



Pulling on the power cord as in the above illustration may damage the wires inside the cord and fire or electric shock may result.


## ⚠ CAUTION

- Please monitor indoor temperature during prolonged operation.

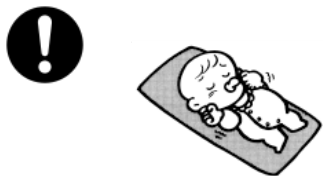


During operation, heat from the unit can cause indoor temperature to rise, upsetting homeostasis, potentially making people feel unwell.

- Place the unit on a level and sturdy floor.

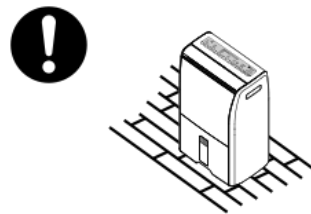


If the unit tilts water will overflow, and wet the furniture potentially causing fire or electric shock.

- Do not use in confined spaces such as closets.

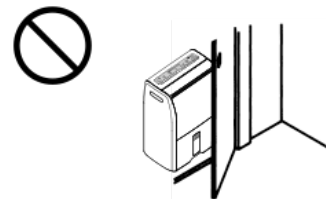


If there is insufficient ventilation, overheating and fire may occur.

- Do not use in places where water may splash onto the unit.

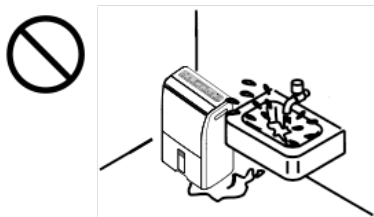


Fire or electric shock may occur.

- Do not use the unit near flammable gas.

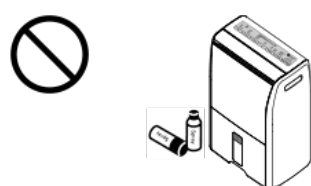

If flammable gases permeate the surrounding space, it may cause fire.

- Do not use in places exposed to direct sunlight, wind or rain.

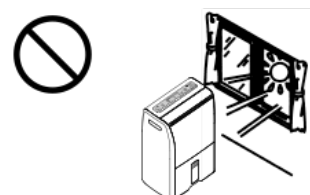


Resulting heat may cause fire or electric shock.

# Safety Precautions

This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experiences and knowledge, unless they have been given supervision or instruction concerning use of the unit by a person responsible for the safety. Children should be supervised to ensure that they do not play with the unit.

## CAUTION

Do not use in place where there are artworks or academic documents.

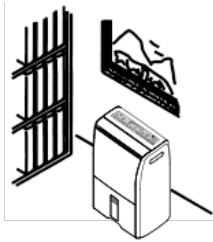


Deterioration of stored articles may occur.

Do not place flower vases or other water container on top of the unit.



Water may spill into the unit and fire or electric shock may occur.

Do not wash the unit directly with water.

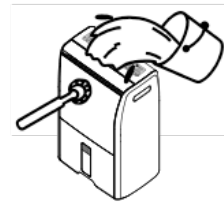

Water leakage may cause electric shock.

Do not place any heat or flame producing instrument in air outlet of the unit.



Incomplete combustion may cause carbon monoxide poisoning.

Do not cover the air inlet or air outlet with cloths or towels.



Air circulation will decrease and overheating or fire may occur.

Do not sit or climb on the unit.



You may fall over, and injury may occur.

Do not hold the unit by the louver when moving or lifting it.



The unit may fall down and injury may occur.

Before moving the unit, turn off the power and empty the tank.



Before cleaning the unit, the unit must be powered off and unplugged from the electrical outlet.



Failure to empty the tank may result in water leakage resulting in fire, electric shock or water damage to furniture.

The high-speed rotation of the fan inside may cause injury.

If the unit will remain unused for a long period, disconnect the power plug, for safety.



Accumulation of dust and foreign objects may occur and may lead to overheating and fire may occur.

After prolonged use, perform periodic inspection.



Particularly the air filter and drains should be checked routinely to avoid overheating and leakage, resulting in house fires and items wetted.



# Part Names

## Front

Handles(left and right)

### Note

**Remove the padding from underneath the dehumidifying louver before use.**  
(If it is not removed, air circulation will decrease and this causes capacity down.)

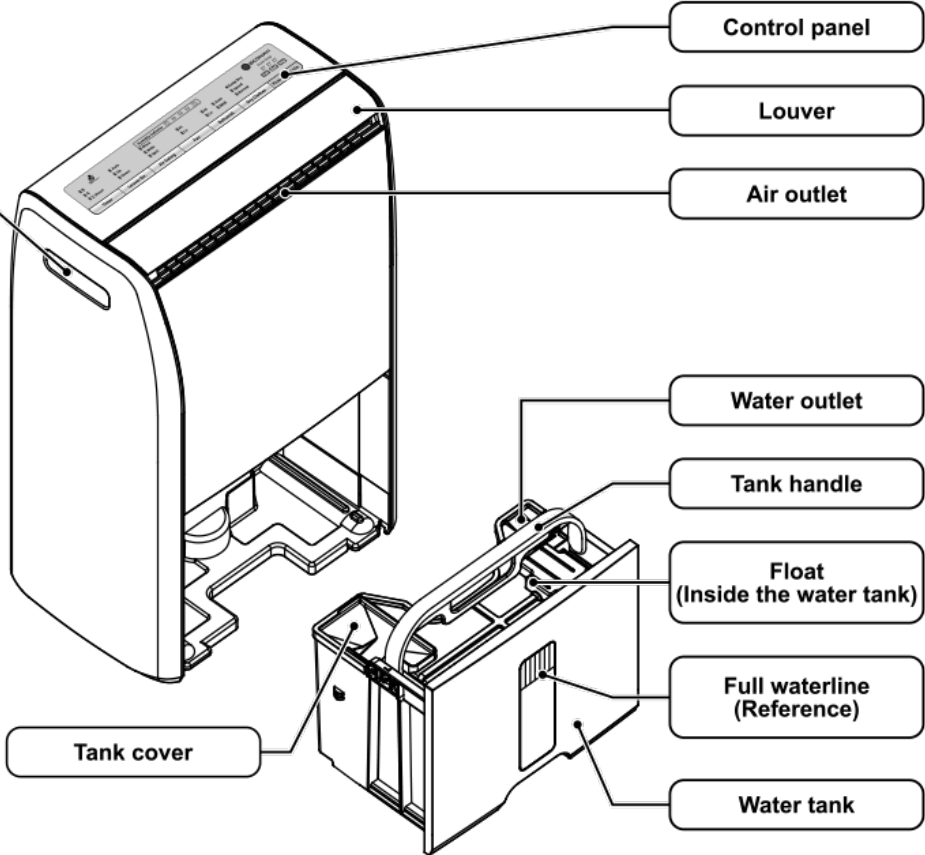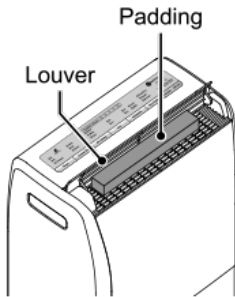

## Back



### Note

**Caster(On the bottom of unit/4 pieces)**

- Casters only move laterally

### CAUTION

- Use care when moving the unit over carpet, or when the tank is filled with water. (The unit may fall over causing spills, which may result in electrical shock, fire or damage to furniture.)

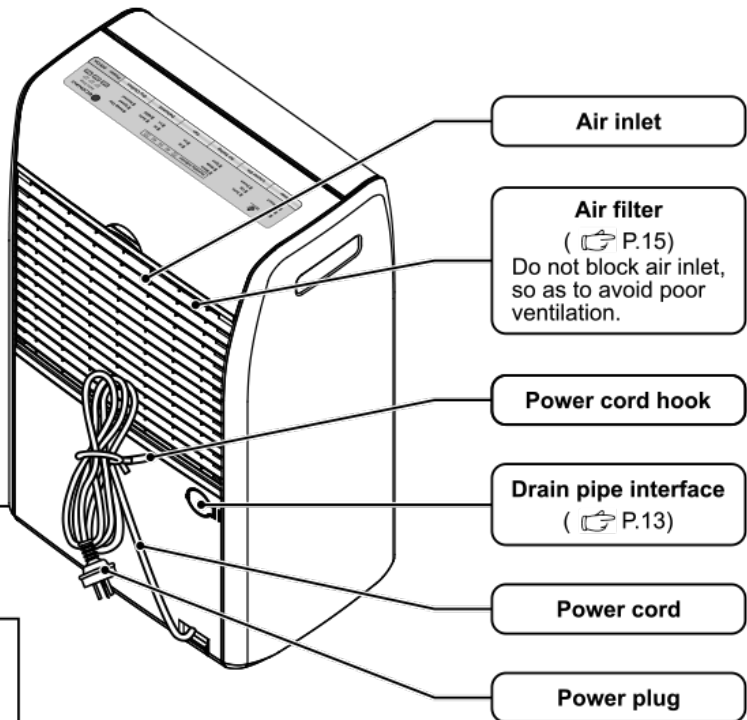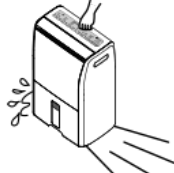

### Where to use


- At least 20 cm distance from the wall. (Walls and furniture near the unit, may be stained by electrostatic.)
- At least 1 Meter distance from any TV, radio (To prevent screen interference, noise)

※Remove cover from plug before use.

# Part Names

## Control panel

- The display indicators only illuminate when the corresponding item is selected.

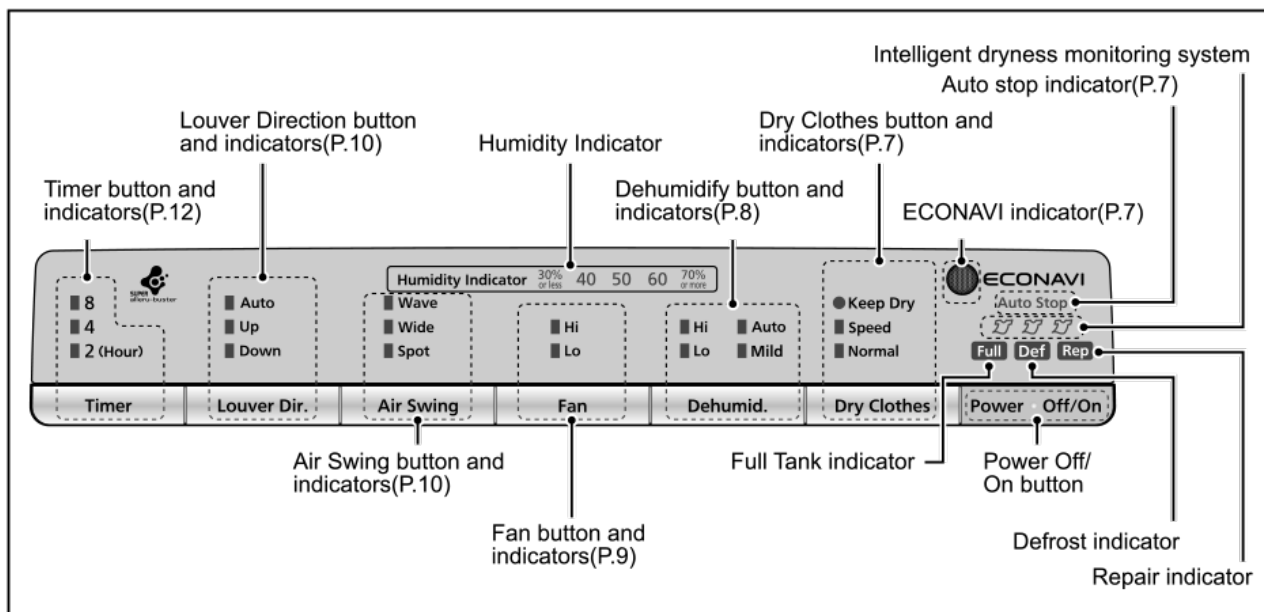

## Note

- \* When humidity is 30 % or less, the humidity indicator will display a red light.
- \* When humidity is 70 % or more, the humidity indicator will display a red light.
- \* When humidity is 40 %~60 %, the humidity indicator will display a green light.

\* Please check the following when the "Repair" indicator is flashing.

### ● When unit is tipped over

- ① Disconnect the power plug.
- ② Set the unit back upright.(wipe away any spilled water.)
- ③ Let the unit stand for half a day without using it.  
(to let the inside of the unit out completely in case any water has spilled inside)
- ④ insert the power plug again and restart the unit.


### ● Does the unit tilt?

- Disconnect the power plug and ensure that the unit is sitting level.  
Reconnect the power cord and start dehumidification.

\* When Full Tank Indicator is flashing, the unit will cease operation until the water tank is emptied.

\* When Defrost indicator is flashing, the unit is defrosting.  
In Defrost condition, the unit will only respond to the "Power Off / On" button.  
All other button operations are invalid until the Defrost operation has completed.

# Dry Clothes mode

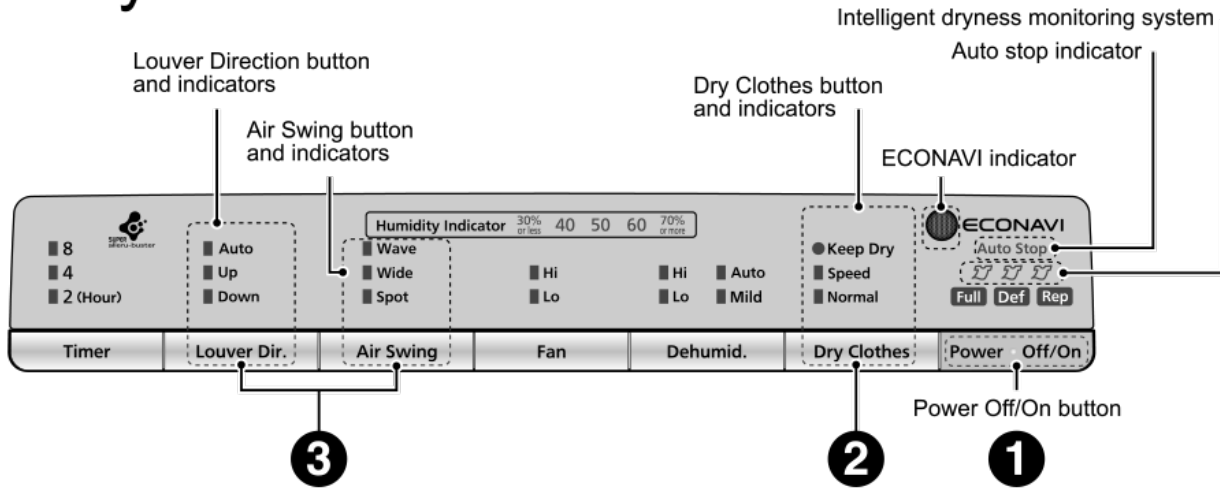

## 1 Insert the power plug Turn on the unit

 


## 2 Dry Clothes

Press to select

## 3 Select the air direction

→ P.10



### To stop operation



### When using timer (P.12)



### When Full Tank indicator is flashing (P.12)

- Operation will stop automatically  
→ Please empty the tank.

#### Note

- If no button pushes are detected in a 24 hour period, the unit will automatically cease operation.
- The compressor will stop operating if the indoor temperature exceeds the range of 5-35°C. (But the fan motor will continue to operate)

- After drying clothes, select the keep Dry operation to prevent clothes from getting wet again.
- Once the operation schedule is finished, the indicator light will turn off and the indicator light for Auto Operation will illuminate.
- When choosing this mode the ECONAVI indicator light and the Auto Stop indicator light will not illuminate.

### ECONAVI


- The ECONAVI function will only operate when in [Normal] or [Speed] mode.
- The dryness sensor detects the temperature and humidity of the surroundings and uses this to judge the level of dryness required. Once this level of dryness is achieved, the unit will automatically stop operation.
- See page 16 for further information on the ECONAVI function.

### Intelligent dryness monitoring system (👕 👕 👕)

- Will only work when [Dry Clothes] function is selected.
- Dryness notification

- Degree of dryness may vary depending on factors such as the type and amount of clothing, hanging method, and environmental conditions


# Dehumidifying mode

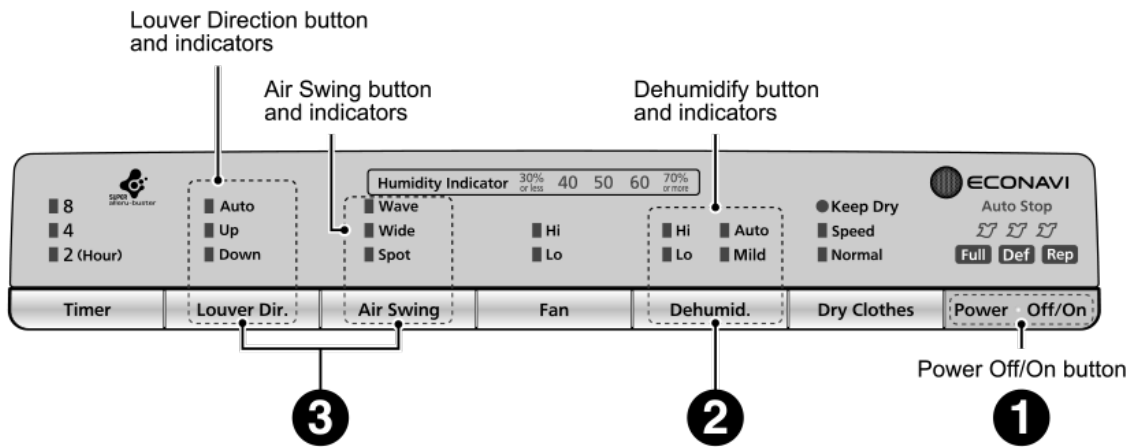


## 1 Insert the power plug Turn on the unit


 
## 2 Dehumid. Press to select



## 3 Select the air direction → P.10

 

## To stop operation



## When using timer (P.12)



## When Full Tank indicator is flashing (P.12)

- Operation will stop automatically  
→ Please empty the tank.


Mild	Automatically maintain humidity (around 65%)
Hi	To dehumidify quickly and continuously (You will be unable to control the humidity level in this mode.)
Lo	To dehumidify slowly and continuously (You will be unable to control the humidity level in this mode.)
Auto	To Keep humidity at a comfortable level ● Humidity sensor detects the ambient level and keeps indoor humidity at the most suitable for the human body. ● The Dehumidifier operates during high ambient humidity, and stop operation at low ambient humidity. (around 57%)

### Note

- If no button pushes are detected in a 24 hour period, the unit will automatically cease operation.
- The compressor will stop operating if the indoor temperature exceeds the range of 5-35°C.  
(But the fan motor will continue to operate)



# Fan mode

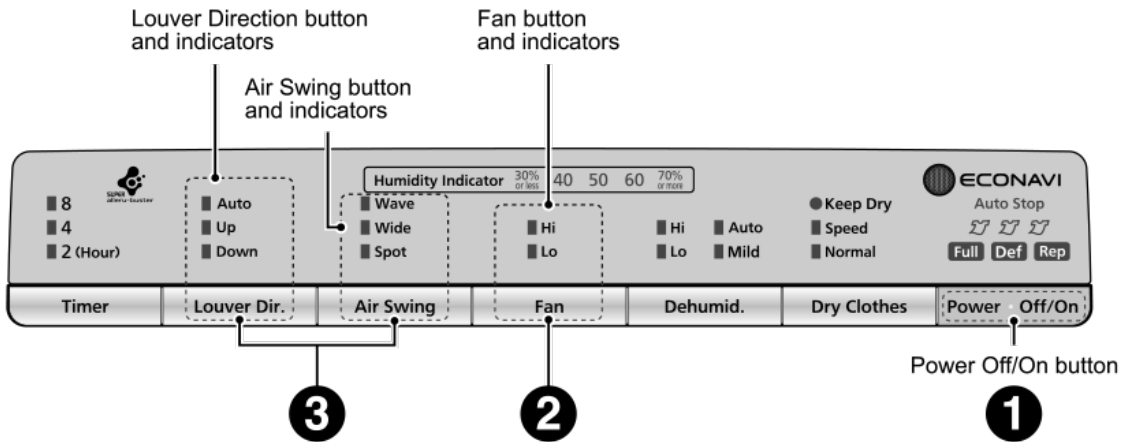


## 1 Insert the power plug Turn on the unit



## 2 Fan



Press to select

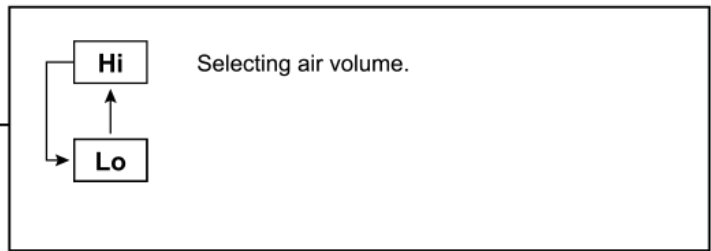

## 3 Select the air direction → P.10




## Note

- This product can only be operated within an indoor temperature range of 5~ 35 °C.
- Using the unit in an environment where the ambient temperature is outside this range may cause the unit to operate abnormally.
- The dehumidifier is used for daily life, such as the removal of unpleasant humidity and help to dry laundry, but if ambient humidity is under 50 %, unit can not help maintain a comfortable humidity environment.
- The unit will stop operation when power failure occurs, and return to standby mode after power recovery. To ensure compressor life, do not operate within 3 minutes after the unit shutdown.

### If louver has been removed

#### ■ Installing the louver


- 1 Insert the left side hole into the projection at the left side in the main unit.

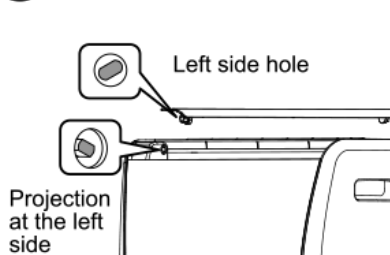

Turn louver up and down to make it easier to be inserted

- 2 Set the louver so that it is horizontal, then bend it out slightly at the middle.

- 3 Insert the right side into the unit.

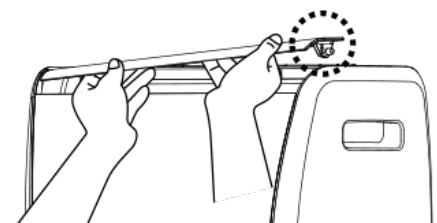


# Air Swing / Louver Direction



You can select the air direction while referring to the next page!

P.11

After selecting the operation mode (P.7~P.9), set the air direction.

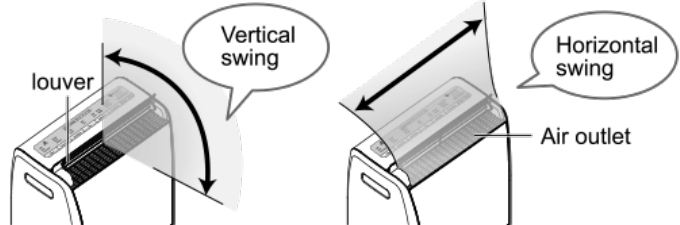


## ■ Operation

### Vertical swing

The swing can be set to match the height of the place where you would like the air to reach.

 - To make the louver swing  
While operation is in progress



- To stop swinging and choose the air direction.

⇒ Select 「Auto」, the louver keeps swinging.  
When the louver is at the desired position, press (Louver Dir.) again.



- The Louver Direction indicator will turn off and swinging will stop.


### Note

- Do not manually move the louver while the swinging operation is in process.  
(The swing range will change.)

### Horizontal swing

The swing can be set to match the width of the place where you would like the air to reach.

While operation is in progress

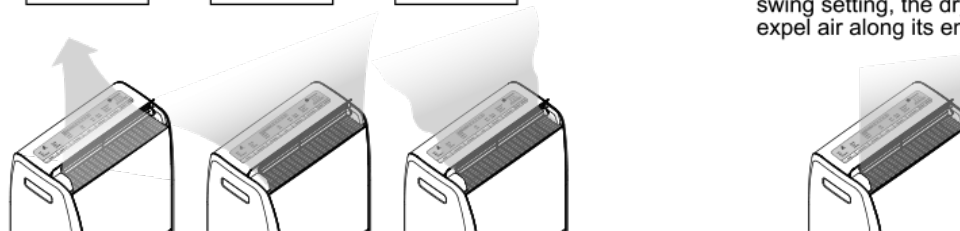

- Concentrated on a small area
- Left / right side wide horizontal area
- Concentrated on the middle, but with left / right side wide area

- If you do not select a horizontal swing setting, the dry air outlet will expel air along its entire width.

**Air Direction Setting Examples**

- Tips for drying effectively**
- ① Place the dehumidifier at a place that all clothes can be reached evenly.
  - ② Leave space between each item of clothing so that air can circulate freely.
  - ③ Leave a distance of 40 cm or more between the dehumidifier and the clothes, depending on the amount of clothes.

<b>Drying clothes</b>	To Dry Downward	Louver Dir. <b>Down</b> Air Swing <b>Wide</b> *1	
	To Dry Upward	Louver Dir. <b>Up</b> Air Swing <b>Wide</b> *1	
	To Dry Upward and Downward	Louver Dir. <b>Auto</b> Air Swing <b>Wide</b> *1	
	To Dry Small Amounts	Louver Dir. <b>Auto</b> *2 Air Swing <b>Spot</b>	


<b>Dehumidifying</b>	Closets and Shoe Racks, etc.	Louver Dir. <b>Auto</b> *2 Air Swing <b>Wide</b>	<ul style="list-style-type: none"> <li>● Leather items such as shoes can not be dried with a dehumidifier. (They will become warped or damaged.)</li> </ul>
	Ceilings and Walls, etc.	Louver Dir. <b>Up</b> Air Swing <b>Wide</b>	

\* 1: If there are items which are difficult to be dried, placed in between other items, use the "Wave" setting to make drying more effective.

\* 2: Choose either "Up" or "Down" depending on how high the clothes are hanging and how high the closet is.

# Using the Timer / Removing a Full Tank

## Using the Timer

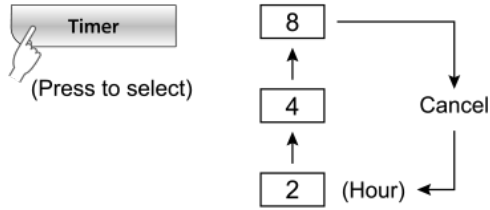


- After setting the timer, it will show the remaining time. For example, you set the timer switch off the unit after 8 hours, the indicator will show 4 hours when there are 4 hours left, and so on.
- When the timer has been set, it will continue to count down even if the tank fills with water and dehumidifier stops operation.
- When using timer in laundry mode, the ECONAVI indicator, Auto Stop Indicator will not illuminate and the Intelligent dryness monitoring system cannot be activated.

## How to remove a full tank

- When the tank water level reaches the full waterline (around 5 litres), operation will stop automatically. (The Full Tank indicator is flashing)
- Please follow the steps


# 1

- Remove the tank slowly with one hand
- Do not touch the inner part of the unit. (May cause breakdown)

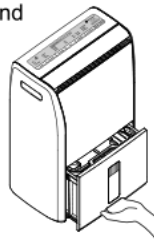


# 2

- Carry tank carefully by the tank handle.

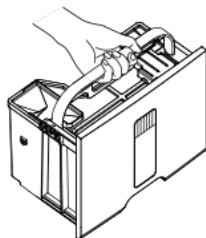


# 3

- Push the tank cover and open the water outlet.

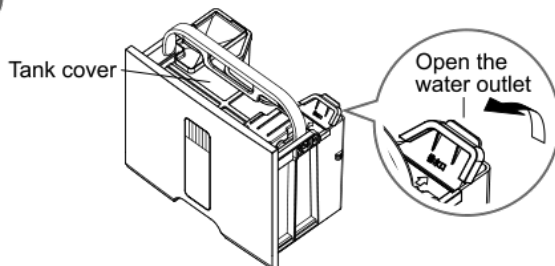


# 4

- While holding the tank by the handle and the base, empty the water in the tank.

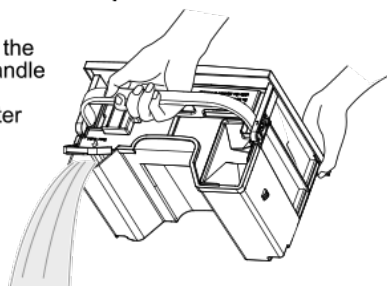

If the Full Tank indicator illuminates...

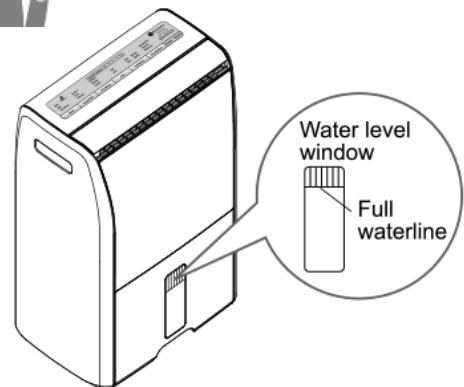

### ■ Installing the tank

Close the water outlet, and then fully re-insert the tank.

- Close the tank cover and water outlet securely. (Or the water tank will not fit in the unit correctly and may result in water leakage.)
- Please reinsert the water tank completely. If the water tank is not correctly reinserted, the unit will not operate when the "Power Off / On" button is pressed. Remove the water tank and carefully reinsert again.

# Continuous Drainage

■ If there is adequate drainage nearby, the unit can be connected directly to the drain pipe and use the continuous drainage function.

## CAUTION

■ **Drainage hose must be securely installed**



Please avoid bending or kinking the drain hose, make the drainage go as far as it will go. Poor drainage may result in leakage, this in turn may cause damage to furniture.


■ **The ambient temperature of drain pipe must not fall below 0°C**




Water in drain pipe may freeze and block drainage, resulting in leakage and damage to furniture.

## Install the hose

### Correct example

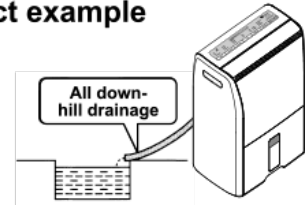

### Incorrect example

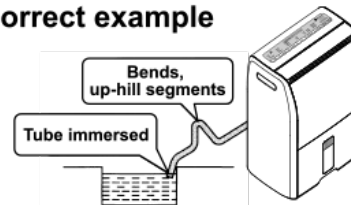

## Items to be purchased

### ● Hose


**Length:** 30cm longer than the distance between dehumidifier and the drain.

**Internal diameter:** 15mm

### Note


When the temperature of water in the drain pipe is much cooler than the ambient temperature, the surface of drainage pipe may develop condensation. Please take insulation measures if necessary.

## 1 Disconnect the power plug and remove the water tank.

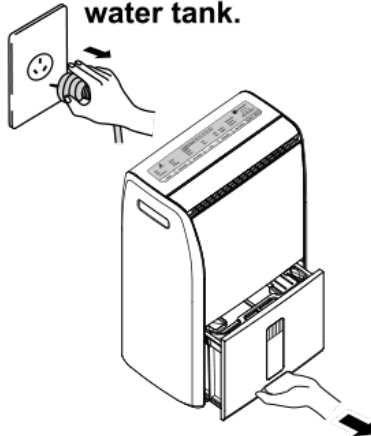


## 2 Open the drain pipe interface

(Perform in 90 degree to the right, do not remove it)

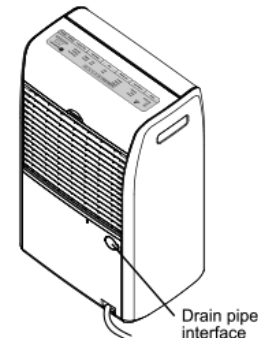


● Clean the drain pipe interface.

## 3 Remove the sealing device

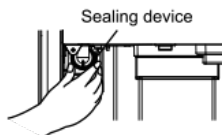


Follow the arrow ① direction clamped, then follow the arrow ② direction remove

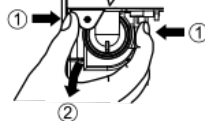

## 4 Connect the hose to the drain pipe


Insert one side of the hose to the drain pipe as far as it will go.

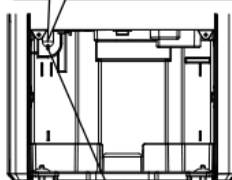

Drain pipe

① Secure the hose onto the drain elbow with a hose clip. (Available in hardware stores.)


② Pull the hose to make sure it will not come off. If it is loose, water will leak.

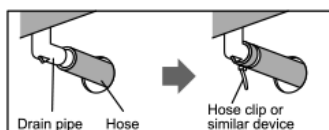

Drain pipe Hose

Hose clip or similar device

## 5 Insert the Water Tank

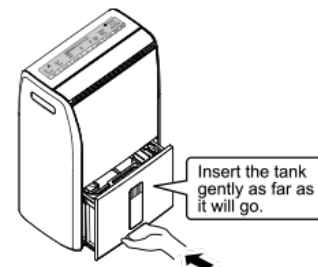

● Improper installation may cause the unit to operate incorrectly.

Note: ● When restoring to the normal drainage mode, improper installation may result in water overflow. Please contact the manufacturer or authorized service agent.

● If no buttons are pressed for 24 hours, operation will stop automatically to prevent unintended continuous operation.

# Maintenance



Be sure to unplug the unit from the wall and empty the tank before maintenance.

## CAUTION

■ Do not clean the product with solvents such as benzine or thinner, and do not apply insect sprays.

(This product may become cracked and injury may occur. This may cause damage to the product resulting in injury, furniture damage, short circuit, electrical fire or electrical shock.)




- Cleaning agents such as those shown at left should not be used.
- If using a chemically treated cloth, please read the manufacturers instructions that came with the cloth.

- Always be sure to disconnect the power plug and empty the tank. (See Removing a Full Tank. P.12)

### Water Tank (Suggest once a month)




- Rinse the tank and the tank cover about 2~3 times in water.
- Rinse off any slime in water without removing the float.

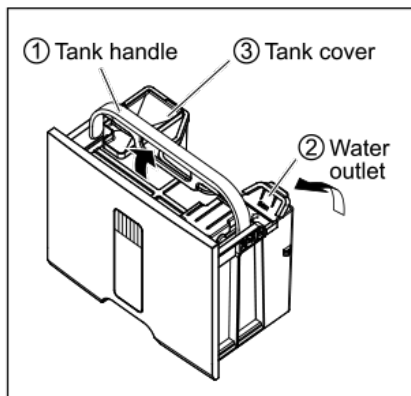

#### ■ Removing the tank cover

- ① Lift up the tank handle.
- ② Open the water outlet.
- ③ Pull up the tank cover.

- Do not strongly pull on the water outlet.

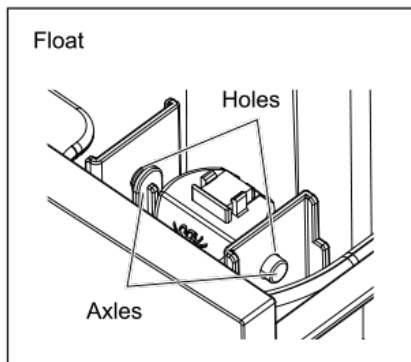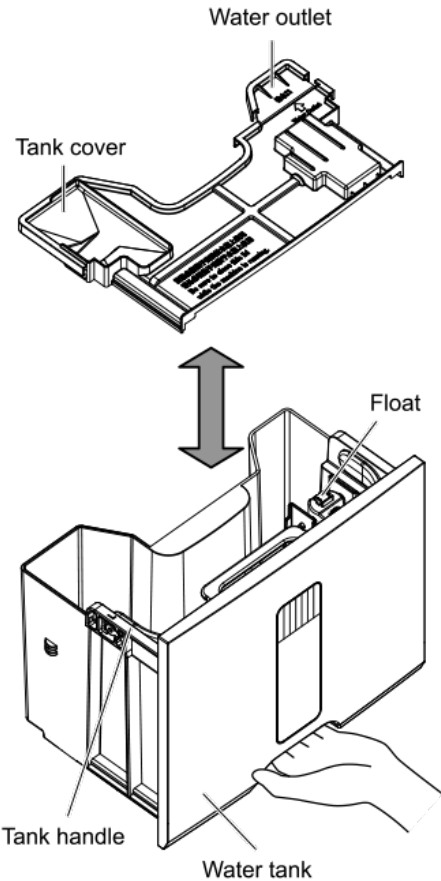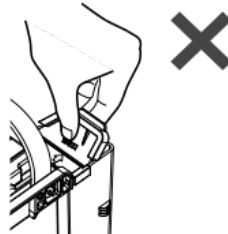

#### ■ Float


- Rinse the area around the two axles with water to remove any dirt, this will prevent the float from malfunctioning.

- Never remove the float. (If the float is not attached properly, the unit will not operate correctly and water may leak.)

→ If the float comes off, insert the two axles into the holes as shown in the illustration at left.


- For stubborn stains, clean with water mixed with diluted kitchen detergent.
- Depending on conditions in the room, the tank may become blackened. (This is caused by impurities in the air dissolving into the water collected by the dehumidifier.)

- Dampen a cloth, wring it out firmly, and then use it to wipe the outside of the unit.
- Do not lay down the unit. (Water leakage will occur.)
- For stubborn stains, use water mixed with diluted kitchen detergent.
- Do not operate the unit with a wet air filter inserted.

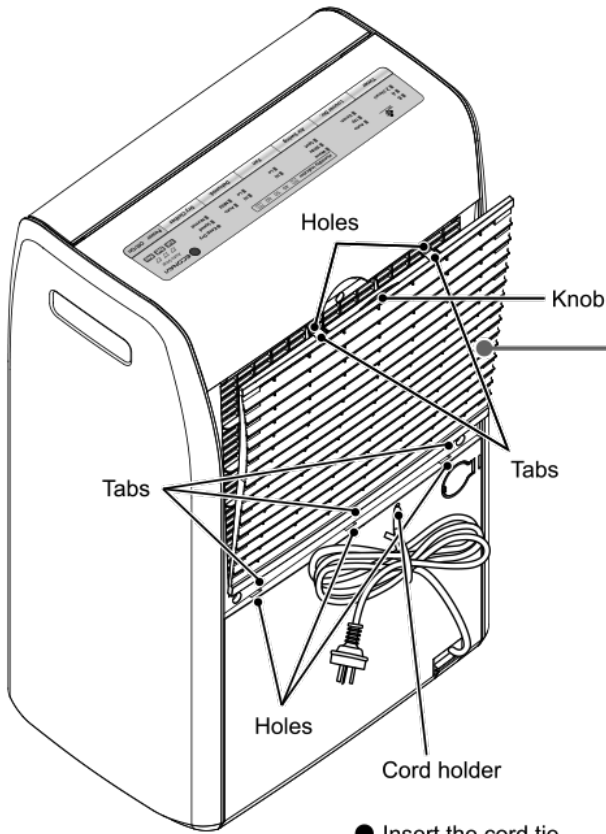


- Insert the cord tie

 Insert into the hole and then slide down.




#### Air filter (Suggest once every two weeks)

Remove dust and dirt using a vacuum cleaner etc.

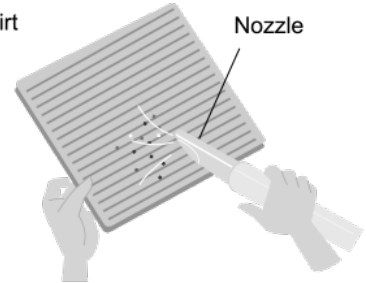


#### ■ Removal

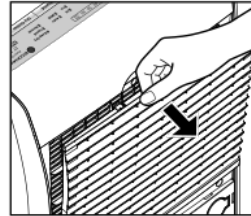


- Pull the knob toward you.

#### ■ Installation

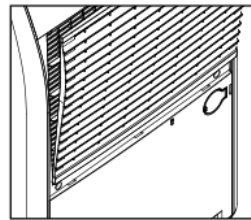


- ① Insert the tabs (there are 3) on the bottom into the holes in the unit.

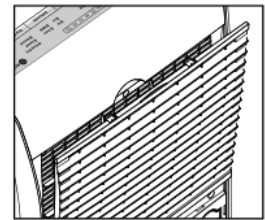

- ② Push the top of the filter to inset the tabs (there are 2) into the holes in the unit.

- If the filter becomes damaged, it should be replaced.
- Regular maintenance (If the unit becomes blocked with dust and dirt, dehumidifying performance will be affected and the unit will use excess power)

### If not using the unit for long periods of time

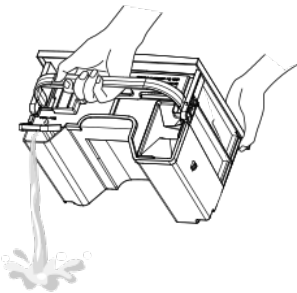

- ① Please select mode "Fan" and set timer to shut down for around four hours.
- ② Disconnect the power plug, let the unit stand for one day, and then empty the water tank. (P.12)
- ③ Clean the unit, tank and filter.
- ④ Cover the unit with a plastic bag.
- ⑤ Store the unit upright in a dry and well-ventilated place which is flat and stable. (Laying it down may result in a breakdown, or cause any water remaining inside the unit to leak out.)

## Drying clothes

### About ECONAVI

Econavi mode operates when operating mode is set to 「Normal」 or 「Speed」 modes.

The dryness sensor detects the temperature and humidity, and uses this as a reference to judge the level of dryness in order to stop operation automatically.

- Operation running time for reference.

Model No.	F-YCL27N	
Clothes Amount	Drying operation running time	
	Normal	Speed
About 2 kg ~ 4 kg	4.3 ~ 6.4 hr	3.5 ~ 5.3 hr
About 4 kg ~ 6 kg	6.4 ~ 8.3 hr	5.3 ~ 7.5 hr

Test conditions: Temperature: 20 °C  
Humidity: 80%  
Room space: 20 m<sup>2</sup>  
(Manufacturer's results)

- Running time and consumption of electric power for the actual state of dryness may vary depending on factors such as the type and amount of clothing, the hanging method, and environmental conditions.
- The dehumidifier will stop after a maximum operation time of 10 hours.

## Effectiveness of the filter

The Super alleru-buster and anti-bacterial agents contained in the filter help inhibit allergens, bacteria and mold.

### Super alleru-buster

Inhibits allergens (such as pollen and house dust mites) accumulated by the filter.

Testing facility: Osaka Municipal Technical Research Institute

Testing method: Application of the enzyme immunoassay method to confirm the reduction of refined mite allergens.

Testing results: Inhibition of activity confirmed

### Anti-bacteria

Inhibits bacteria\*3 and mold\*4 accumulated by the filter.

\*3 Testing facility: Japan Food Research Laboratories

Testing method: Confirmation by means of an agar cultivation method using a standard agar culture.

Testing results: Activity inhibited by 99% or more

\*4 Testing facility: Japan Food Research Laboratories

Testing method: Based on anti-mold testing (halo method)

Testing results: Anti-mold effectiveness of halo method confirmed.

- The filter has a unique fragrance of catechin. This is normal and is not harmful to the human body.
- The original filter has a light brown color. Some light brown dots may appear on the filter after use. This is normal and does not affect the filter performance.



# Fault!?

First, check the following.

If problems cannot be solved, be sure to disconnect the power plug, and then consult authorized service agent to repair the unit.

Problems	What to check?
① Buttons do not operate.	<ul style="list-style-type: none"> <li>● Is the Full Tank indicator is flashing (P.12), or is Repair indicator flashing? (P.6), Does the Defrost indicator is flashing? (P.6)</li> </ul>
② The Full Tank indicator is flashing even though the tank is not full.	<ul style="list-style-type: none"> <li>● Are the tank and float correctly installed inside the unit? (P.12,P.14) Was the tank banged against the unit during insertion? (P.12) → Please reinsert the water tank completely. If the water tank is not correctly reinserted, the unit will not operate when the "Power Off / On" button is pressed. Remove the water tank and carefully reinsert again.</li> </ul>
③ Water is leaking	<ul style="list-style-type: none"> <li>● Has the unit been tilted or tipped over?</li> <li>● Was the unit moved while there was still water in the tank? (P.4)</li> <li>● Has the float come off? (P.14)</li> </ul>
④ The tank does not fill up with water. (The unit is not dehumidifying very well.)	<ul style="list-style-type: none"> <li>● Is the filter clogged (P.15), or is something blocking the air inlet or air outlet? (P.4)</li> <li>● Are the room temperature and humidity low? (The unit dehumidifies less as the room temperature and humidity become lower.)</li> <li>● Is the unit set to operate in "Auto" or "Mild" mode? (P.8) If the temperature is outside the range of 5 °C ~ 35 °C , dehumidifier operation will stop and become blower operation. (P.9)</li> </ul>
⑤ No water remains inside the unit.	<ul style="list-style-type: none"> <li>● Is the Fan mode set? → Fan mode will not retain water.</li> </ul>
⑥ It takes a long time to dry clothes.	<ul style="list-style-type: none"> <li>● Is wet, cold air entering the room? → Keep doors and windows closed as much as possible while drying clothes.</li> </ul>
⑦ Clothes do not dry completely.	<ul style="list-style-type: none"> <li>● Did prior clothes drying cycle complete?</li> <li>● Is wet, cold air entering the room? → Avoid open doors and windows as much as possible while drying clothes.</li> <li>● Is there a heater in use near the unit? (If the surrounding temperature is too high, the sensor will be unable to accurately judge the drying time.)</li> <li>● Is the air blowing onto the all clothes?</li> <li>● Are the clothes hung too closely together or in layers?</li> </ul>
⑧ The humidity does not go down.	<ul style="list-style-type: none"> <li>● Is wet, cold air entering the room? → Avoid opening doors and windows while drying clothes.</li> </ul>
⑨ Condensation forms all the time, even during dehumidifying.	<ul style="list-style-type: none"> <li>● It may not be possible for dehumidifying to be fully effective if you place the dehumidifier in some places such as near windows, or behind furniture where air circulation is poor.</li> </ul>

# Fault!?

First, check the following.

If problems cannot be solved, be sure to disconnect the power plug, and then consult authorized service agent to repair the unit.

Problems	What to check?
⑩ The Repair indicator is flashing	<ul style="list-style-type: none"> <li>● Does the unit lay down?                             <ul style="list-style-type: none"> <li>→ 1. Disconnect the power plug and set the unit back upright. (Wipe away any spilled water.)</li> <li>2. Let the unit stand for half a day or more without using it (to dry the unit completely in case any water has spilled inside)</li> <li>3. Insert the power plug again and restart the unit.</li> </ul> </li> <li>● Does the unit tilt?                             <ul style="list-style-type: none"> <li>→ Disconnect the power plug and then reconnect it.</li> </ul> </li> <li>● Have any magnets or metallic objects been placed on top of the unit?                             <ul style="list-style-type: none"> <li>→ Disconnect the power plug, remove the magnets or metallic objects from on top of the unit. Reinsert the power cord and begin dehumidification.</li> </ul> </li> </ul>
⑪ Operation stops at the time of continuous drainage.	<ul style="list-style-type: none"> <li>● If no buttons are pressed for 24 hours, operation will stop automatically to prevent unintended continuous operation.</li> </ul>
⑫ It generate "click" sound when changing the wind speed.	<ul style="list-style-type: none"> <li>● Do not worry about that, it's a normal phenomenon for generating "click" sound when changing the Fan mode</li> </ul>

If the following happens, please disconnect the power plug, and contact the manufacturer or authorized service agent.

Problems	What to check?
⑬ The Repair indicator, other indicators flash.	<ul style="list-style-type: none"> <li>● Wet machine malfunction, please contact your manufacturer or authorized service agent.</li> </ul>



## WARNING

If the supplied power cord is damaged, it must be replaced by the manufacturer, authorized service agent or registered electrician.

Kind Reminder	If the dehumidifier is used for an extended period of time!	
	<p><b>Did these symptoms occur?</b></p> <ul style="list-style-type: none"> <li>● Unable to operate or stops suddenly during operation when power is connected.</li> <li>● Power is only sometimes connected when the power cord is moved.</li> <li>● Abnormal sounds or vibrations occur when the fan is rotating.</li> <li>● The unit itself overheats abnormally, and smells like something is burning.</li> <li>● Other abnormalities or malfunctions.</li> </ul>	<p>When these symptoms occur, in order to prevent accidents from happening, please turn off the power, disconnect the power plug and contact your purchasing manufacturer or authorized service agent by our company for repairs.</p>



# Specifications

Model No.		F-YCL27N	
Power supply		230-240 V ~ 50 Hz	
Power plug shape		☺	
Operating condition	Temperature	30 °C	
	Relative humidity	80 %	
Water removal (L/Day)	Hi	27	
Power consumption (W)	Hi	355	
Water tank capacity (L)		5	
Weight (kg)		16.5	
Dimensions (WxHxD) (mm)		370X605X250	

\* The unit consumes approximately 2.0 W of power when operation is off. ( While power plug is inserted)

# Customer's record

For model name and production number of this product, please refer to the back side of machine.  
Please record them in the space provided and keep for future reference.

MODEL NO. F-YCL27N	SERIAL NO.
DATE OF PURCHASE	MANUFACTURER NAME
MANUFACTURER ADDRESS	
MANUFACTURER TELEPHONE NUMBER	

## Panasonic Corporation

Web Site : <http://www.panasonic.com>

©Panasonic Ecology Systems Co., Ltd. 2015 All Rights Reserved.