

## Operating Instructions HDD Recorder

Model No. **DMR-HST270**



Thank you for purchasing this product.  
Please read these instructions carefully before using this product, and save this manual for future use.

### Software (Firmware) Update



To support the latest features, it's very important you install the latest updates to maintain proper operation of your unit. For details, refer to "Software (Firmware) Update" (⇒ 50) or <http://panasonic.jp/support/global/cs/> (This site is in English only.)



Getting started

Watching broadcasts

Recording

Playing back video

Editing video

Copying video

Photo and Music

Network

With Other Equipment

Other functions

Setup

Reference

# Safety precautions

## WARNING

### Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.
  - Do not let metal objects fall inside this unit.
  - Do not place heavy items on this unit.

### AC mains lead

- To reduce the risk of fire, electric shock or product damage,
  - Ensure that the power supply voltage corresponds to the voltage printed on this unit.
  - Insert the mains plug fully into the socket outlet.
  - Do not pull, bend, or place heavy items on the lead.
  - Do not handle the plug with wet hands.
  - Hold onto the mains plug body when disconnecting the plug.
  - Do not use a damaged mains plug or socket outlet.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

## CAUTION

### Unit

- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate climates.

### Placement

- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.

## Batteries

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
  - Do not mix old and new batteries or different types at the same time.
  - Do not heat or expose to flame.
  - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
  - Do not take apart or short circuit.
  - Do not recharge alkaline or manganese batteries.
  - Do not use batteries if the covering has been peeled off.
  - Remove batteries if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

## Supplied accessories

Please check and identify the supplied accessories.

(Product numbers are correct as of December 2017. These may be subject to change.)

**Remote control** (N2QAYB001077): 1 pc.

**Batteries for remote control:** 2 pcs.

**AC mains lead:** 1 pc.


**HDMI cable:** 1 pc.

- Do not use AC mains lead with other equipment.

---

### Insert batteries

Insert so the poles (+ and -) match those in the remote control.

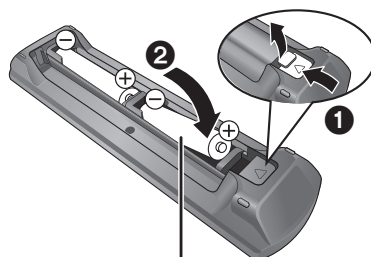

R6/LR6, AA  
(Alkaline or manganese batteries)

# Table of contents

Safety precautions .....	2
Supplied accessories .....	3

## Getting started

Unit care .....	5
Main unit .....	6
Remote Control .....	8
Connection .....	9
Settings .....	11

## Watching broadcasts

Watching broadcasts .....	14
---------------------------	----

## Recording

Recording TV programmes .....	17
Timer recording .....	19
FUNCTION MENU screen .....	23
Keyword Recording .....	24
Using the external HDD (USB HDD) .....	26

## Playing back video

Playing contents on the HDD .....	27
Playing contents on the media .....	30
Operation during play .....	31
4K Networking .....	32
Playback menu .....	33

## Editing video

Deleting/Editing programmes .....	35
-----------------------------------	----

## Copying video

Copying programmes .....	38
--------------------------	----

## Photo and Music

Photo .....	40
Music .....	43

## Network

Network Service .....	45
TV Anytime .....	45
Home Networking (DLNA) .....	46

## With Other Equipment

Copying the HD Video (AVCHD) .....	49
------------------------------------	----

## Other functions

VIERA Link .....	50
Software (Firmware) Update .....	50
Other operations .....	51

## Setup

Basic Settings .....	52
----------------------	----

## Reference

Troubleshooting guide .....	60
HDD and media information .....	64
Specifications .....	67
Licenses .....	69
Index .....	71

### About descriptions in these operating instructions

- Pages to be referred to are indicated as "⇒ ○○".
- Images are for illustration purpose, contents may change without notice.

# Unit care

## HDD/USB HDD handling care

- The HDD is a high precision recording instrument and is easily susceptible to damage. Therefore, be careful of the following points while the unit is turned on, especially during operation, otherwise the HDD and the recorded content may be damaged:
  - Do not subject the unit to any vibration and shock.
  - Do not remove the AC mains lead from the household mains socket.
- **The HDD is a temporary storage device**  
This unit cannot save (backup) the HDD programmes to media. You have to be very careful when handling the unit and editing the programme.
- **If the HDD or USB HDD is damaged, the recorded content cannot be recovered.**

## Setup precautions

- **Do not place on anything that generates heat like a Set Top Box, etc.**  
When condensation occurs, **without turning the unit on**, let the unit adjust to the room temperature and wait 2–3 hours until condensation is gone.

## When moving the unit

- 1 Switch the unit to standby mode. (Wait until "BYE" disappears from the display.)
- 2 Remove the AC mains lead from the household mains socket.
- 3 Move only after the unit has come to a complete stop (approx. 3 minutes) in order to avoid subjecting to vibration and shock. (Even after the unit is switched to standby mode, the HDD continues operating for a short time.)

## Cleaning

- Wipe with a soft, dry cloth.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

## When requesting this unit for repair

The registration of the USB HDD may be cancelled in the process of repairing this unit. You can use the USB HDD again by re-registering, but all recorded content already on the USB HDD will be lost. In such cases, the recorded content (data) cannot be recovered.

 

## To dispose or transfer this unit

This unit may contain private information. Before disposing of or transferring this unit, perform the following to delete the data:

- Format HDD (⇒ 54)
- Perform "Shipping Condition" (⇒ 59)

# Main unit

## Front

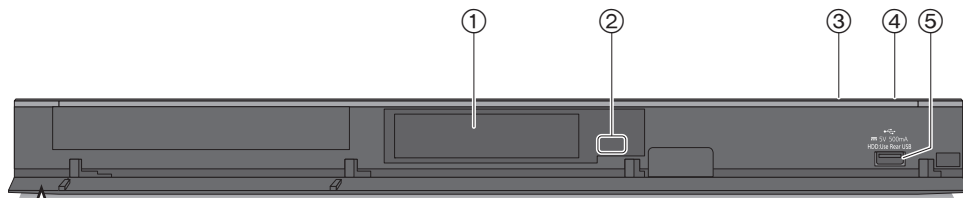


Pull to flip down  
the front panel.

Getting started

- ① Display (⇒ 7)
- ② Remote control signal sensor
  - Angle: Approx. 20° up and down, 30° left and right
  - Distance: Within approx. 7 m in front of the unit
- ③ Play
- ④ **Standby/on switch (⏻)**  
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ⑤ USB port (⚡ DC 5 V 500 mA)


## Inserting or removing media

### ■ USB device

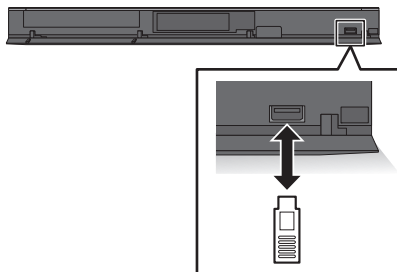


- When inserting the media, ensure that it is facing the right way up.
- While writing to/reading from the media, do not switch the unit to standby mode or remove the media. Such action may result in loss of the media contents.
- The USB port on the front side does not support USB HDDs. Connect a USB HDD to the USB port on the rear side. (⇒ 26, Connecting the USB HDD)

## Display

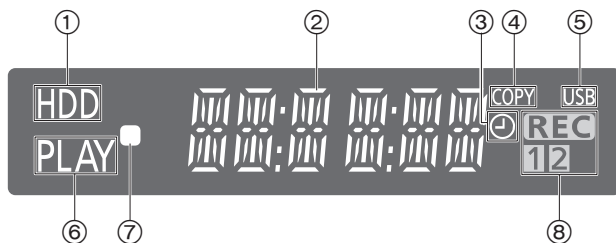

- ① Drive (HDD) indicator
- ② Main display section indicator
  - Messages and other information are displayed. (⇒ 63)
- ③ Timer recording indicator
  - This indicator lights up when the timer recording standby or Keyword Recording standby is activated.
- ④ Copying indicator
- ⑤ USB port indicator
- ⑥ Playback indicator
- ⑦ Remote control signal indicator
- ⑧ Recording indicator
  - “REC” lights up while recording is in progress.
  - “1” flashes when the first timer recording standby is activated or recording is paused, and lights up while recording is in progress. (In the same way as “1”, “2” lights up or flashes for the second recording.)

## Rear

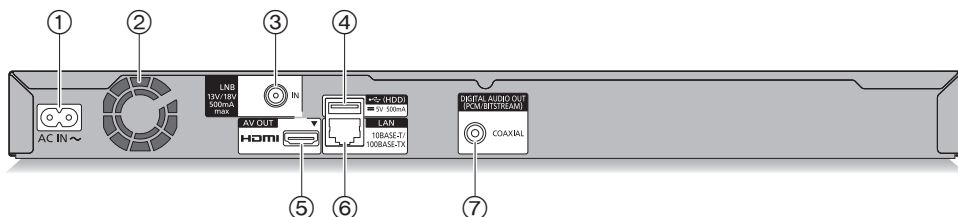

- ① AC IN ( ~ ) terminal (⇒ 9)
- ② Cooling fan
- ③ LNB IN terminal (⇒ 9)
  - Connect the satellite dish.
- ④ USB port ( ≡ DC 5 V 500 mA )
  - Connect a USB HDD to this USB port.
- ⑤ HDMI terminal (⇒ 9, 10)
- ⑥ LAN port
- ⑦ COAXIAL terminal (⇒ 10)
  - Connect a receiver etc.


The symbols on this product represent the following.

~	AC	□	Class II equipment (The construction of the product is double-insulated.)
≡	DC		

# Remote Control

Instructions for operations are generally described using the remote control.

Getting started

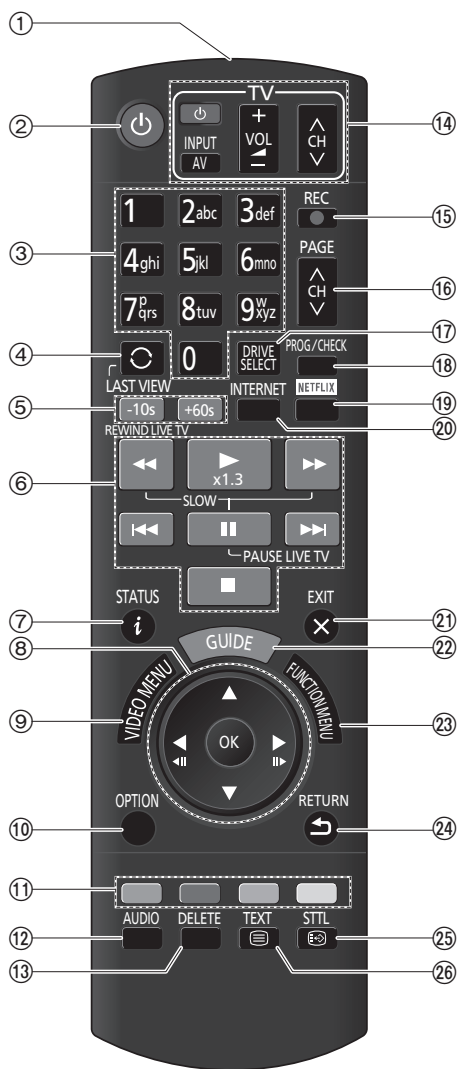


- ① Transmit the remote control signal
  - Point it at remote control signal sensor on this unit. (⇒ 6)
- ② Switch the unit from on to standby mode or vice versa
- ③ Select channels numbers, etc./Enter numbers or characters
- ④ Switch to the previously watched channel (⇒ 14)
- ⑤ Manual skip when playing back Video (MP4 etc.) (⇒ 31)
  - 10s: Skip approx. 10 seconds backward
  - +60s: Skip approx. 1 minute forward
- ⑥ Basic operations for recording and play, REWIND LIVE TV/PAUSE LIVE TV (⇒ 16)
- ⑦ Show Information (⇒ 14, 28, 31)
- ⑧ Selection/OK, Frame-by-frame (⇒ 31)
- ⑨ Show Video Menu (⇒ 27)
- ⑩ Show OPTION menu (⇒ 33, 35, 42)
- ⑪ Colour buttons (red, green, yellow, blue) (Use in accordance with instruction on the screen.)
- ⑫ Select audio (⇒ 15, 31)
- ⑬ To delete unwanted recorded programmes, timer programmes, video, photo or music (⇒ 35)
- ⑭ TV operation buttons (⇒ 13)
- ⑮ Start recording (⇒ 17)
- ⑯ Channel select (⇒ 14)/Change pages in the Video Menu screen etc.
- ⑰ Select drive (HDD or USB)
- ⑱ Show the Timer Recording screen (⇒ 20)
- ⑲ Show NETFLIX screen (⇒ 45)
- ⑳ Show the Network Service screen (⇒ 45)
- ㉑ Exit the menu screen
- ㉒ Show the TV Guide screen (⇒ 15)
- ㉓ Show the FUNCTION MENU screen (⇒ 23)
- ㉔ Return to previous screen
- ㉕ Show subtitles (⇒ 14, 31)
- ㉖ Show Teletext (⇒ 14)




# Connection

- Before making any connections, please disconnect all the units from AC power.  
(Connect the AC mains lead after making all connections.)
- When the unit is not to be used for a long time  
To save power, unplug it from the household mains socket. This unit consumes a small amount of power, even when the unit is in standby mode. (⇒ 67)

## Basic connections

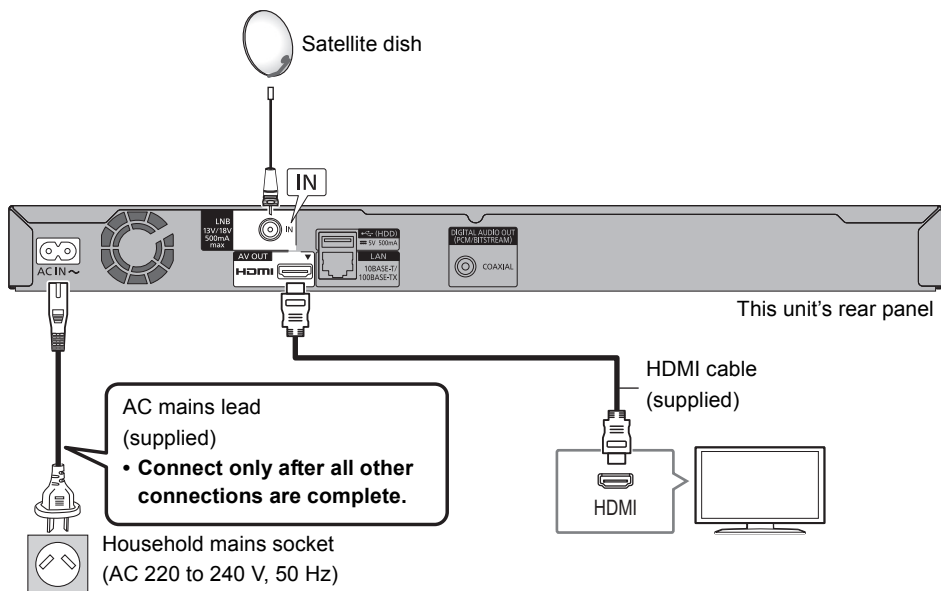

- **When connecting the antenna to the unit and TV with a splitter**  
Be sure to use an all ports power pass splitter.

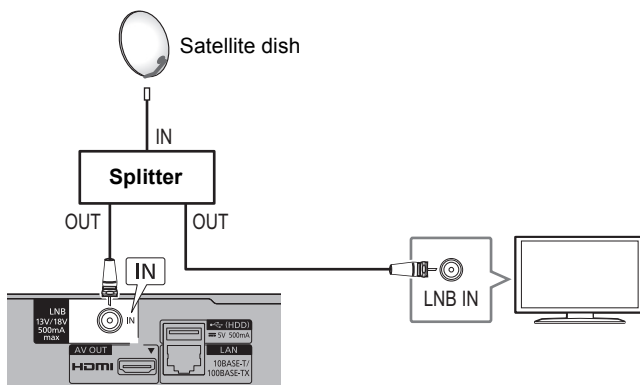


- With a one port power pass splitter, the TV may not display picture or the unit may not be able to perform recording while only either the TV or the unit is turned on.

## Amplifier/receiver connections


### HDMI terminal

Getting started

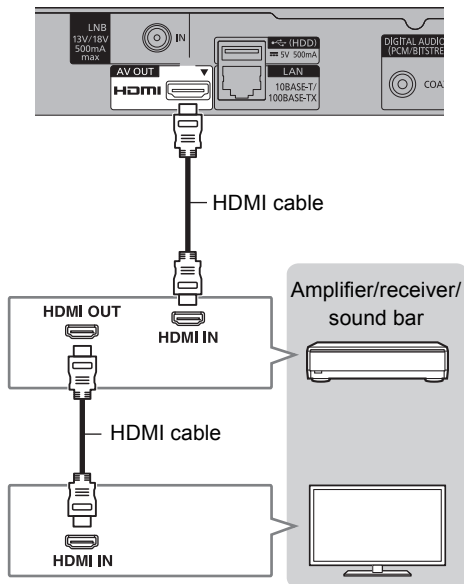

- When using a TV or an amplifier/receiver that does not display "ARC" on the HDMI terminal, it is necessary to connect the TV and the amplifier/receiver with a digital audio cable to enjoy the TV audio on the amplifier/receiver.

### DIGITAL AUDIO OUT terminal

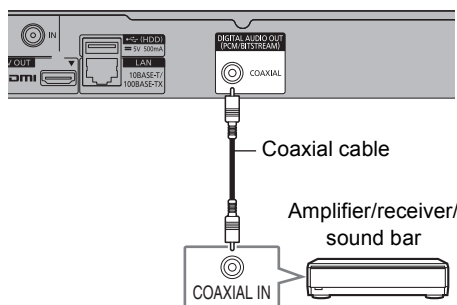

- To listen to only the sound from the amplifier/receiver/sound bar, set "Audio Output" to "Off" to turn the TV sound off. (⇒ 56)


## Network connection

When this unit is connected to the network, you can enjoy network functions (DLNA function, Network Service, TV Anytime, etc.).

For details about connection method, refer to the instructions supplied with the connected equipment.

After you make the LAN cable/Wireless LAN connection, the network setting is needed. (⇒ 11, Easy Network Setting)

### LAN cable connection

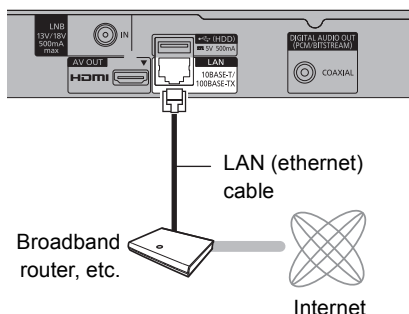

- Use category 5 or above straight LAN cables (STP) when connecting to peripheral devices.

### Wireless LAN connection

About wireless LAN connection (⇒ 11, Easy Network Setting)



- The unit is not compatible with public wireless LAN services.

# Settings

Before use, perform the initial setup of the unit.

## Easy Setting

- 1 Turn on the TV, then select the appropriate AV input to suit the connections to this unit.
- 2 Press [⏻] on the remote control or [⏻/I] on this unit.
  - The Easy Setting will start at the initial power on.
- 3 Select the region you live in, and press [OK]. Auto Setup starts.  
(This operation may take some time.)

Auto Setup			
Satellite		Optus D1 160°E (Freeview)	
Progress		0%	100%
This will take about 3 minutes.			
No.	Channel Name	Type	Quality
1	○○○○	Free TV	10
2	○○○○	Free TV	10
Free TV: 2	Pay TV: 0	Radio: 0	
Searching			

- If tuning has failed, check the antenna connection first, and then press [OK]. Auto Setup will restart.  
If tuning fails repeatedly, refer to "When using a DiSEqC1.0 antenna system" (⇒ 13).

- 4 Clock is set automatically.  
If the clock setting screen appears, set the time manually. (⇒ 59, Clock)
- 5 Set "Quick Start" to "On", "Off" or "Timer Setting for Quick Start", then press [OK].  
For details, refer to "Quick Start". (⇒ 58)

When "Easy Setting has been completed." appears, Easy Setting is completed.

- Select "Yes" to proceed to Easy Network Setting.
- Select "No" to finish the Easy Setting.

### To stop partway

Press [RETURN ⊖].

### To restart setup (⇒ 52, Auto Setup)



- If tuning is cancelled partway through, it may not be possible to receive the channels. Restart setup again.

## Easy Network Setting

After completing "Easy Setting", you can continue with "Easy Network Setting".

Follow the on-screen instructions to establish your connection settings.

Select "Wired" or "Wireless", then press [OK].

Easy Network Setting

Select a connection mode.

Wired

Wireless

### LAN cable connection ("Wired")


Follow the on-screen instructions to apply your connection settings.

### Wireless LAN connection ("Wireless")

Before beginning wireless connection setup

- Obtain your network name (SSID\*1).
- If your wireless connection is encrypted, please be sure that you know your encryption key.
- The default SSID, Password (Key) etc., may be printed on the router.

e.g.,

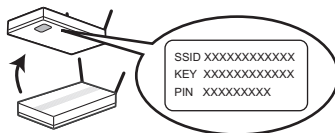

Then follow the on-screen instructions and apply the settings.

### Search for wireless network:

The available wireless networks will be displayed. Select your network name and press [OK].

- If your Network name is not displayed, search again by pressing the red button on the remote control.
- Stealth SSID\*2 will not be displayed. Enter manually by using "Wireless Settings". (⇒ 56)
- If your wireless network is encrypted, Encryption Key Input Screen will be displayed.  
Input the encryption key of your network.


## WPS (PUSH button):

If your Wireless router supports WPS (PUSH button), you can easily perform the settings by pressing WPS button on it.

WPS (Wi-Fi Protected Setup™) is a standard that facilitates settings relating to the connection and security of wireless LAN devices.

- 1 Press the green button on the remote control.
- 2 Press WPS button or corresponding button of Wireless router until the lamp starts flashing.
  - For details, refer to the operating instructions of Wireless router.
- 3 Press [OK].

e.g.,

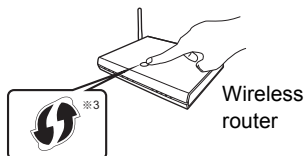

- Refer to the operating instructions of the hub or router.
  - Do not use this unit to connect to any wireless network for which you do not have usage rights.
  - After performing network settings on this unit, the settings (encryption level, etc.) of the Wireless router might change. When you have trouble getting online on your PC, perform the network settings on your PC in accordance with the settings of Wireless router.
  - If you set "Home Network function" or "TV Anytime" to "On", the setting for "Quick Start" is fixed to "On".
- ※1 SSID:  
An SSID (Service Set Identification) is a name used by wireless LAN to identify a particular network. Transmission is possible if the SSID matches for both devices.
- ※2 Depending on the settings of the wireless router, its SSID may not be found. For details, refer to the operating instructions for the wireless router.
- ※3 The wireless router compatible with Wi-Fi Protected Setup™ may have the mark.

## To restart Easy Network Setting

- 1 Press [FUNCTION MENU]. (⇒ 23)
- 2 Select "Basic Settings" in "Setup", then press [OK].
- 3 Select "Easy Network Setting" in "Network", then press [OK].

## To redo settings individually

If "Easy Network Setting" did not work properly or when you change the settings individually, perform the following steps:

- 1 Press [FUNCTION MENU]. (⇒ 23)
- 2 Select "Basic Settings" in "Setup", then press [OK].
- 3 Select "Network Settings" in "Network", then press [OK].
- 4 Refer to "Network Settings". (⇒ 56)

## Check security before using Home Network function

If you set "Home Network function" to "On", all connected devices on the same network can access this unit. Ensure that the router for your home network has adequate security system to prevent unauthorised access.

## When using a DiSEqC1.0 antenna system

With a DiSEqC1.0 antenna system, you will need to change the Antenna System setting first, and then perform tuning.

After tuning fails in step 3 in Easy Setting (⇒ 11), press [RETURN ⊕] to proceed to Easy Setting and Easy Network Setting. Complete these settings first, and then perform tuning in the next step.

- 1** Press [FUNCTION MENU].
- 2** Select “Basic Settings” in “Setup”, then press [OK].
- 3** Select “Settings for Channels” in “Digital TV Tuning”, then press [OK].
- 4** Press [◀, ▶] to select “DiSEqC1.0” in “Antenna System”.
- 5** Perform Auto Setup. (⇒ 52)

## TV operation buttons

The TV can be operated from the TV operation buttons of the remote control.

- Perform the setting if you cannot operate the TV with the TV operation buttons.

**While pressing [TV ⏻], enter the code with the number buttons.**

### Manufacturer and Code No.

Manufacturer	Code	Manufacturer	Code
Panasonic	01/02/03/04	NEC	36
AIWA	35	NOBLEX	33
AKAI	27/30	NOKIA	25/26/27/60/61
BEKO	05/71/72/73/74	NORDMENDE	10
BENQ	58/59	OLEVIA	45
BRANDT	10/15	ONWA	30/39/70
BUSH	05	ORION	05
CENTREX	66	PEONY	49/69
CURTIS	05	PHILCO	41/48/64
DAEWOO	64/65	PHILIPS	05/06/46
DESMET	05	PHONOLA	05
DUAL	05	PIONEER	37/38
ELEMIS	05	PROVIEW	52
FERGUSON	10/34	PYE	05
FINLUX	61	RADIOLA	05
FISHER	21	SABA	10
FUJITSU	53	SALORA	26
FUNAI	63/67	SAMSUNG	32/42/43/65/68
GOLDSTAR	05/50/51	SANSUI	05
GOODMANS	05	SANYO	21/54/55/56
GRADIENTE	36	SCHNEIDER	05/29/30
GRUNDIG	09	SEG	05/69/75/76/77/78
HITACHI	05/22/23/40/41	SELECO	05/25
IRRADIO	30	SHARP	18
ITT	25	SIEMENS	09
JVC	17/30/39/70	SINUDYNE	05
KDS	52	SONY	08
KOLIN	45	TCL	31/33/66/67/69
KONKA	62	TELEFUNKEN	10/11/12/13/14
LG	05/50/51	TEVION	52
MAG	52	THOMSON	10/15/44
METZ	05/28/79	TOSHIBA	16/57
MITSUBISHI	05/19/20/47	WHITE WESTINGHOUSE	05
MIVAR	24	YAMAHA	18/41



- If your TV brand has more than one code listed, select the one that allows correct operation.
- If the brand of your TV is not listed or the code number is invalid for your TV, this remote control is not compatible with your TV.

# Watching broadcasts

## Press [CH ^ v] to select the channel.

- You can also select the channel by the following operations
  - Using number buttons.
  - Using Channel Information (⇒ below)
  - Using TV Guide (⇒ 15)
  - Using Channel List (⇒ 16)

You can restrict the viewing of channels unsuitable to children. (⇒ 53)

## LAST VIEW

You can switch to the channel you have previously watched.

Press [LAST VIEW ○].

## If this unit requests a PIN

If you have set a ratings level (⇒ 53, Child Lock ( Parental Rating )), you may be asked to enter the PIN. In that case, enter the 4-digit PIN with the number buttons by following the on-screen instructions.


- **Make a note of the PIN you have decided on in case you forget it.**
- PIN can be changed via "PIN Entry". (⇒ 59)

## Using Channel Information

While watching a programme  
Press [STATUS ⓘ].

Channel Information appears.

e.g.,

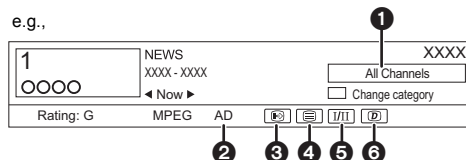

- 1 Current Category
- 2 Audio Description
- 3 Subtitle
- 4 Teletext
- 5 Multiple audio
- 6 Catch Up TV (⇒ 15)

## To show detailed information

Press [STATUS ⓘ] again.

## To hide the information screen

Press [EXIT ⊗].

## To change Category

Press the blue button.

- To register your favourite channels (⇒ 52)

## To check the current programme and the next programme

Press [◀, ▶].

## To switch to another channel

Press [▲, ▼], then press [OK].

## To show subtitle

When "ⓘ" appears in Channel Information

Press [STTL ⓘ].

- Press again to hide subtitle.

## To show Teletext

When "ⓘ" appears in Channel Information

- 1 Press [TEXT ⓘ].
- 2 Use [▲, ▼, ◀, ▶], number buttons or colour buttons, etc. according to on-screen instructions.



- You can change the display mode. (⇒ 55, Teletext)

## Switching audio

Press [AUDIO].

- Audio will switch according to the contents of the programme every time it is pressed.

**To listen to the Audio Description**

## When “AD” appears in Channel Information (⇒ 14)

Audio Description adds an additional soundtrack to describe events on screen (narration) and aids understanding and enjoyment, particularly for visually-impaired viewers.

Press [AUDIO] to select the soundtrack of Audio Description.



- If “Audio Description” is set to “Automatic”, Audio Description will be given priority when watching, if available. (⇒ 53)

### To use Catch Up TV

To use the data service function (Catch Up Service), network connection is necessary.  
(⇒ 10, 11)

Set "Freeview Guide" to "On". (⇒ 53)

To select the data service, follow the on-screen instructions. ("Press colour button." etc.)



- Operations may vary depending on the broadcaster.
- For information about other disclaimers.  
(⇒ 68. About Network Service in "Disclaimer")

## Using TV Guide

**1** Press [GUIDE].

e.g. Landscape view

		Landscape TUE 02.01.18 XXXXXX				Category: All Channels	
		XXXXXX - XXXXXX				Skillful workman	
TUE 02.01		XXXXXX	XXXXXX	XXXXXX	XXXXXX	XXXXXX	▶
1	○○○○	Skillful workman			Penguin		
2	○○○○	Kitten		House dog		Will	
3	○○○○	Vacation		Hunting			
4	○○○○	Pampas grass		News		Top run	
5	○○○○	News		Com/Shopping		Area 91	
6	○○○○	Venus		Moon			
7	○○○○	Construction				Hippopotamus	
8	○○○○	Great river		Mr. Otter		Dodge	
OPTIONAL DISCREETURE		SIZE		Information		Page Up	
Timer Rec		+ 24 hours		Keyword Recording		Page Down	

**2** Select the programme, then press [OK].

**3** Select “View”, then press [OK].

## Page up/down

Press [CH  $\wedge$  v].

**To view a programme list for another day**

Press the green button (Previous) or the yellow button (Next).

**To see programme information**

Press [STATUS

### To change TV Guide view

Press [GUIDE] to switch between “Landscape” view and “Portrait” view.

## To set a timer recording using the TV Guide

Press the red button.

(⇒ 19, Timer recording)

**To find programmes [Keyword Search, Category Selection (e.g., “Arts/Culture”), etc.]**

Press [OPTION].

(⇒ 20, To find the programmes quickly)




- If you press [REC ●], the unit will start recording the programme displayed in the top-left window. (⇒ 17)

## Using Channel List

You can select from the list of channel names.

- 1 Press [OK].

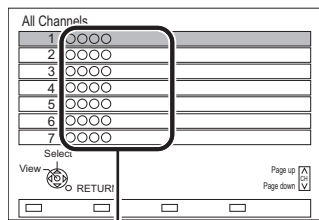

Channel names

- 2 Select the channel, then press [OK].

### To edit the channel list

Refer to "Channel List". (⇒ 52)

## REWIND LIVE TV/PAUSE LIVE TV

This unit temporarily saves a live TV programme you are watching with this unit's tuner on HDD.

### REWIND LIVE TV

You can rewind live TV programme to the point where temporary save has started (up to 1.5 hours).

While watching TV

Press [◀◀] to rewind.

### PAUSE LIVE TV

You can pause live TV programme and restart watching from the paused position.

While watching TV

Press [||] to pause.

- The maximum amount of the temporary save is 1.5 hours.

### To resume watching TV

Press [▶ ×1.3].

- You can perform search or Quick View, etc.
- If temporary save stops (⇒ right), playback will be performed by that point.

## To stop REWIND LIVE TV or PAUSE LIVE TV

- 1 Press [■].
- 2 Select "Yes", then press [OK].

 


- Temporary save stops in the following cases:
  - When switching to other channels or other screen
  - When the unit has started recording using all tuners
- These functions do not work in the following cases:
  - While watching a programme being recorded
  - When a radio programme is selected

## Display information

While pausing or rewinding a broadcast:

Press [STATUS ⓘ].



- 1 The time that you can rewind the live programme.
- 2 The amount of time temporarily saved on HDD.
- 3 The time of the current playback position.

## To hide the display information

Press [EXIT ⊗].




# Recording TV programmes

**The programmes can only be recorded to built-in HDD and cannot be copied from built-in HDD to the media other than USB HDD.**

This unit can record two programmes being broadcasted at the same time.



- 1 Select the channel to record.**
- 2 Press [REC ●].**  
Recording will start.
- 3 Select "Automatic Stop", then press [OK].**  
• **One touch recording (OTR)**  
Recording stops automatically when the programme ends.

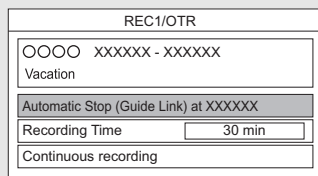

## To record two programmes simultaneously

While recording, perform steps 1–3. (⇒ above)

## To delete recorded programmes (⇒ 35)



- If a timer recording reaches its start time when all tuners are being used for recording, the recording (OTR) of one of the programmes terminates.
- Copying cannot be performed while recording.
- Teletext will not be recorded.
- When "Automatic Standby after OTR" is set to "On", refer to page 58.
- Following contents or media cannot be played back while recording.
  - Video file
  - Photo
  - USB HDD (For data files, ⇒ 66) and USB memory

## To set the recording time

- 1 Select "Recording Time" or "Continuous recording" in step 3 (⇒ left).

### Recording Time:

You can set the length of recording time from 30 minutes to 4 hours.

- You can select the recording time with [◀, ▶].

- 2 Press [OK].

## To change the recording mode (picture quality)

This unit can record programmes in DR mode and then automatically change their recording mode (picture quality) to another setting while in standby mode.

- The picture quality for satellite broadcasts is SD. (As of December 2017) Since the DR mode can record broadcasts while maintaining their original picture quality, we recommend recording in DR mode.

- 1 Press [OPTION].
- 2 Select "Recording Mode".
- 3 Select the recording mode (picture quality), then press [OK].

- Recording mode (Picture Quality) (⇒ 66)
- The recording mode set here is used as the default value for the next recording.

## To check to see if the recording mode change is finished (⇒ 37)

## To cancel the recording mode change (⇒ 37)



- Programmes in the original picture quality (DR mode) will be deleted after their recording mode is changed.
- When the HDD does not have enough remaining space, the recording mode change function does not operate.
- It takes about the same amount of time as recording to change the recording mode.
- A recording mode change stops when this unit is turned on. The process will start from the beginning again after the unit is switched to standby mode.
- Even if you change the recording mode of a programme, its audio, subtitle and Audio Description settings will remain the same as those at the start of recording.

## Operation during Recording

 
### To check the recording programme

Press [STATUS ①].

e.g., While recording two programmes simultaneously



Recording programme displayed on the TV




Recording programme not displayed on the TV

### To stop recording

Press [■].

#### When recording one programme:


If the following screen appears

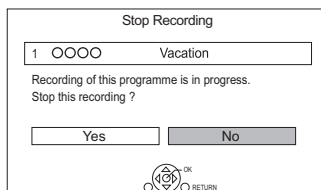

Select "Yes", then press [OK].

#### When recording two programmes:

Following screen appears

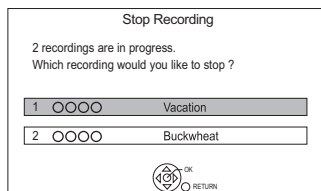

1 Select the programme, then press [OK].

2 Select "Yes", then press [OK].

### To pause recording

After displaying the recording programme, press [II].

- Press again to restart recording.  
(A programme is not split into separate programmes.)



- Timer recording programme cannot be paused.

### Simultaneous rec and play

You can play back the programme being recorded to the HDD.

1 Press [VIDEO MENU].

	Channel	Date	Programme Name
	○○○○	04.10	Birds
	○○○○	04.10	World news
	○○○○	29.10	Football
	○○○○	29.10	Dogs and Cats
		XXXXX	Duration 0:10(XXXXX

"●" (red) is displayed on the recording programme.

2 Select the programme, then press [OK].

# Timer recording

You can enter up to 32 programmes within a month in advance. (Each daily, weekly or series programme is counted as one programme.) This unit can record two programmes being broadcast at the same time.



- 1 Press [GUIDE].**  
TV Guide screen appears.
- 2 Select the programme, then press the red button.**  
The timer icon "Ⓢ" (red) is displayed.
  - If on-screen instructions are displayed, follow them.

In addition, depending on the programme you have missed to watch or record, you may be able to catch up on it later. (⇒ 15)



- You can set the start and finish time to make the timer recording work successfully. (⇒ 54, Timer Record Start Buffer, Timer Record Stop Buffer)
- Timer recordings set for two consecutive programmes will be treated as simultaneous timer recordings set for two programmes. If you set a timer recording for an additional channel, the Overlapped Timer Recording screen may be displayed. After selecting "Keep" to close the Overlapped Timer Recording screen, adjust the recording start and end times on the Timer Recording screen. (⇒ 20, Manual timer recording)
- Some broadcasters may not send programme information correctly. In such cases, use manual timer recording. (⇒ 20)

## To use TV Guide system (⇒ 15)

## Operation during Recording (⇒ 18)

## To edit the timer programme (⇒ 21)

### If the screen for selecting single or series timer recording appears

Select "Single Timer Rec." or "Series Timer Rec." (⇒ 20), then press [OK].


### To edit the timer recording on the TV Guide screen

- 1 Select the programme to edit, then press the red button.
- 2 Select "Timer Rec Edit", then press [OK].
- 3 Go to step 3 on page 20, "Manual timer recording".

### To cancel a timer recording on the TV Guide screen


- 1 Select the programme to cancel, then press the red button.
- 2 Select "Timer Rec Cancel", then press [OK]. ("Ⓢ" disappears.)

### If "Overlapped Timer Recording" screen appears

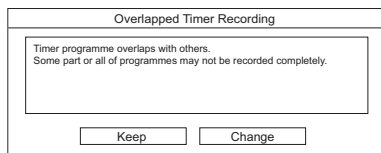

You can eliminate the overlapping or may change with repeat event for the duplicated programme.

- 1 Select "Change", then press [OK].
- 2 Follow the on-screen instructions.

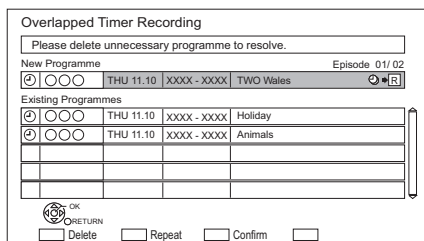

- The overlapped programmes are displayed with if their repeat programmes (the same programmes broadcast at different times) are available for timer recording.

Red: Delete programme  
 Green: Record repeat programme  
 Yellow: Exit (Overlapping is not resolved)

## To find the programmes quickly

- On the TV Guide screen:  
Press [OPTION].
- Select the item below, then press [OK].  
**Keyword Search**  
Displays programmes including the input keyword.
  - Refer to "Entering text". (⇒ 51)**Programme Type Search**  
Displays programmes of the selected type.  
If, for example, you select "Arts/Culture", only the programmes related to arts and culture are displayed.
  - Select the programme type, then press [OK].**Category Selection**  
Displays channels in the selected category. (Radio etc.)
  - To return to the previous TV Guide list  
Select "All Channels".
- Select the programme, then press the red button for timer recording.



- Category may not be assigned correctly depending on the programme information.

## Various functions with TV Guide

This unit has several functions that enable timer recordings to be controlled by the signal sent from the broadcaster.

### Guide Link

The recording's start and stop times can be controlled by the broadcaster, e.g. delayed start.

- The Guide Link function may not work if you manually change the start time or the stop time over 10 minutes.
- The Guide Link function may not work, depending on the programme.

### Series Timer Recording

You can record all the episodes of a series by setting just one timer recording.

### Split Programme

You can record a programme separated into two or more parts by some other programmes, e.g. news.



- If the signal is not sent correctly, the recording may lack the beginning or the ending part of the programmes.
- If the same episode has already been set for series timer recording at a different time or on another channel (Repeat programmes), "Series Timer Rec." will not be selectable.
- Programmes recorded using "Series Timer Rec." are bundled and displayed as a "group" in the Video Menu screen (⇒ 27).
- The series recording will be cancelled if there has been no episode of the series for 13 weeks.

## Manual timer recording

- Press [PROG/CHECK].

Timer Recording		Time Remaining		TUE 02.01.2018 XXXXX	
		400:00 DR			
Channel Name	Schedule	Mode	Space		
New Timer Programme					

- Select "New Timer Programme", then press [OK].
- Select the items and change the settings. (⇒ 21, Timer recording options)
- Press [OK].  
The timer programme is stored.

Timer Recording		Time Remaining		TUE 02.01.2018 XXXXX	
		400:00 DR			
Channel Name	Schedule	Mode	Space		
○○○○ Programme Name	SAT 06.01 XXXXX - XXXXX	DR	OK		
New Timer Programme					

**To confirm and edit the timer programme (⇒ 21)**

**Operation during Recording (⇒ 18)**

## Timer recording options

Select the items and change the settings.

Timer Recording Time Remaining 400:00 DR TUE 02.01.2018 XXXXX

Channel Day/Date Start Stop Mode Subtitles

1 TUE 02.01 XXXXX XXXXX DR → XP OFF ▶

Programme Name Vacation ▶

○○○○

### Channel

You can select Category with the red button.

### Day/Date

You can select “Date” or “Weekly” by pressing the green button, when “Day/Date” selected.

### Auto Renewal Recording

(Only daily/weekly/series timer recording)

The unit will record the new programme over the old one.

Press the yellow button.

“Renew : ON” is displayed.

- About displayed icon (⇒ 22)

### Start/Stop

Press and hold [▲, ▼] to alter in 15-minute increments.

### Mode

Refer to “To change the recording mode (picture quality)”. (⇒ 17)

### Subtitles

You can choose whether or not to record subtitles when the picture quality is changed.

(Only when item other than “DR” is selected in “Mode”)

### Programme Name

- 1 Select “Programme Name”, then press [OK].
- 2 Refer to “Entering text”. (⇒ 51)

## To confirm and edit a timer programme

### 1 Press [PROG/CHECK].

e.g.,

Timer Recording Time Remaining 400:00 DR TUE 02.01.2018 XXXXX

Channel Name	Schedule	Mode	Space
World news	MON 08:01 XXXX - XXXX	DR	OK
Football	MON 08:01 XXXX - XXXX	→HG	OK
Star	MON 08:01 XXXX - XXXX	DR	1
Dogs and Cats	TUE 09:01 XXXX - XXXX	DR	1

New Timer Programme

OK RETURN Total 3/32 Info Page Up Page Down

☐ Delete ☐ Resolve overlap ☐ Turn Off ☐ Keyword List

### 2 Select the programme, then perform the operations.

- Red: To delete a timer programme
- Green: To resolve an overlap timer programme
  - The overlapped timer recording list will appear. (⇒ 19)
- Yellow: To deactivate a timer programme
  - The timer icon “⊖” will change from red to grey.
  - Press the yellow button again to activate timer recording standby. (The timer icon “⊖” will change to red.)
- [STATUS ①]: Show programme information













### To edit a timer programme

- 1 Press [OK].
- 2 Change the timer recording options.
  - Refer to “Timer recording options”. (⇒ left)
- 3 Press [OK].

### To exit the timer recording list

Press [EXIT ⊗].

## Screen icons

	Red : Timer recording standby is activated. Grey: Timer recording standby is deactivated.
 (Red)	Currently recording programme
	A part or all of the programme will not be recorded since the programme is overlapping.
	The HDD is full.
	Copy-protected programme It was not recorded.
	The recording of the programme was not completed because of some reason.
	Auto Renewal Recording is set. (⇒ 21)
	Guide Link (⇒ 20)
	Series Timer Recording (⇒ 20)
OK	Displayed if the recording can fit in the remaining space
--> (Date)	Daily or weekly timer programme is set. • The timer remains set until the date indicated below -->.
	It may not be possible to record because: - there is not enough space left. - programmes are deactivated, etc. - the number of possible programmes has reached its maximum. (⇒ 65)
	Split Programme (⇒ 20)
	<ul style="list-style-type: none"> <li>Programmes to be recorded with Keyword recording (⇒ 24) are not displayed.</li> </ul>


## Notes on recording

- When you programme successive timer recordings to start, about last 1 minute of earlier programme will not be recorded.
- Timer recording will not start while:
  - copying HD Video (AVCHD) from USB device
  - changing the recording mode (picture quality) of a programme in "Picture Quality Change" (Only when "Now" is selected)
  - copying video/photos/music files
  - formatting
- When the recording mode (picture quality) of a programme recorded in DR mode is changed, its new audio and subtitle language settings will be determined by the following settings:
  - "Audio Type for Digital Broadcast" (⇒ 55)
  - "Multi Audio", "Subtitles" of "Preferred Language" (⇒ 53)
  - "Audio Description" (⇒ 53)

# FUNCTION MENU screen

You can easily access the desired functions, such as playback, timer recording, the unit's settings etc. via the FUNCTION MENU.

**1** Press [FUNCTION MENU].

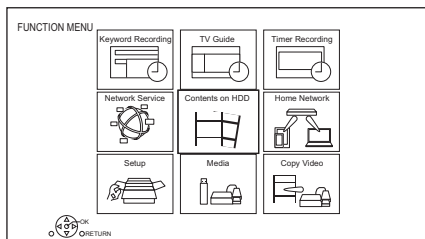

**2** Select the item, then press [OK].

## FUNCTION MENU list

### Keyword Recording (⇒ 24)

Your favourite programmes can be recorded by entering keywords.

### TV Guide (⇒ 15)

You can display the TV Guide.

### Timer Recording (⇒ 19, 20)

You can enter up to 32 programmes within a month in advance.

All the episodes of a series can be recorded by using Series Timer Recording. (⇒ 20)

### Network Service (⇒ 45)

Network Service allows you to access some specific websites supported by Panasonic, and enjoy Internet contents such as photos, videos, etc. from Network Service home screen.

## Contents on HDD

Play back programmes and other content recorded on the HDD.

- Recorded Programmes (⇒ 27)
- Video ( AVCHD ) (⇒ 27)
- Video ( MP4 / MKV ) (⇒ 29)
- Photo (⇒ 40)
- Music (⇒ 44)

## Home Network

Home Networking (DLNA) allows you to watch the contents and broadcasts.

This unit can be used both as Server and Client.

- Miracast (⇒ 48)
- DLNA Client (⇒ 46)
- Media Renderer (⇒ 47)
- Wi-Fi Direct (⇒ 48)

## Setup

You can change the unit's settings of Digital TV Tuning, Sound, Display, Connection, Network etc. in the menu.

- Basic Settings (⇒ 52)
- TV Anytime (⇒ 45)
- Wallpaper

Personalise a background of the FUNCTION MENU.

## Media

Play back content stored on media.

- USB device
- USB HDD

## Copy Video

The unit can copy programmes between the HDD and USB-HDDs.

# Keyword Recording

The unit can find programmes that include specified keywords from programme names and programme information on TV Guide, and record the programmes automatically.

- This unit can record two programmes being broadcasted at the same time.
- Notes on recording (⇒ 22)



- 1 On the TV Guide screen:**  
**Select the programme for keyword recording and press the blue button.**
- 2 Select the items and change the items if necessary.**
  - Refer to "Keyword Recording conditions". (⇒ right)

e.g.,

Keyword Recording		FRI 05.01.2018 XXXXXX
Please specify Search Conditions and Recording Settings. To activate, select "Set".		
Search Conditions.		
Keyword1	Olympic	
Search Target	Programme Name only	
Extra Word Settings		
Category	All Channels	
Detail Search Condition		
Recording Settings		

- 3 Select "Set", then press [OK].**
- 4 Press [OK].**  
The Keyword Recording icon "Ⓢ" (blue) is displayed on the TV Guide screen.



- Programmes that are set to be recorded automatically with Keyword Recording are not displayed on the Timer Recording confirmation screen (⇒ 21). (⇒ 25, To display the list of programmes found with the set keyword)
- On the TV Guide screen, up to 128 programmes are displayed with the Keyword Recording icon "Ⓢ" (blue).

## Keyword Recording conditions

When a search brings up too many programmes, we recommend revising the search conditions.

### Search Conditions:

#### Keyword 1-16

Input the keyword to be registered.

- Refer to "Entering text". (⇒ 51)
- Default keyword is the programme name selected on the TV Guide screen.  
If the programme name includes its episode number, etc., delete the number before registering the name.

#### Search Target

Select the search target.

#### Extra Word Settings

- 1 Add up to two keywords and two excluded words to refine search conditions.
- 2 Select "Set", then press [OK].

#### Category

Narrow down the channels to be searched.

#### Detail Search Condition

Set the detailed search condition. Narrow down programmes with specified criteria to search for only the programme you want to record.

#### Programme Type

Select the programme type. If, for example, you select "Arts/Culture", only the programmes related to arts and culture are searched.

#### Video Format

Select whether to include HD and/or SD programmes in the search.

#### Remove Duplicates

When there are multiple programmes with the same name, start time and length, only the programme closest to the top of the channel list will be recorded.

### Recording Settings:

#### Recording Mode (Picture Quality) (⇒ 17)

#### Subtitle

[Only when item other than "DR(Original)" is selected in "Recording Mode (Picture Quality)"]



**To display the list of programmes found with the set keyword**  
Press the yellow button in “Keyword Recording” screen.

SAT 27.01	Schedule	Programme Name
2 0000	XXXXXX - XXXXXX	Olympic opening ceremony
23 0000	XXXXXX - XXXXXX	Olympic opening ceremony
22 0000	XXXXXX - XXXXXX	Olympic Soccer
2 0000	XXXXXX - XXXXXX	Olympic Judo
22 0000	XXXXXX - XXXXXX	Olympic Boxing

- ⓐ Blue: Recording has already been set with a different Keyword.
- ⓑ Red: Timer recording standby is activated.

**Priority order of Keyword Recording**

Recording takes place in the following order of priority:

- 1 A programme that is already being recorded
- 2 Timer Recording
- 3 Keyword Recording (programmes will be recorded in ascending order from keyword number 1 to 16)
- 4 A programme that starts first

Keyword Recording may not work in some cases. To avoid recording failure, we recommend using Timer Recording instead of Keyword Recording.

**Changing the recording method**  
Select the programme marked “ⓐ” (Blue), then press the red button on the Keyword Recording status screen (⇒ above) or TV Guide screen.

- Programmes set for timer recordings are not treated as Keyword Recording programmes.

**Automatic deletion of Keyword Recording**

By default, when the HDD capacity is low, the unit automatically deletes programmes recorded with Keyword Recording, starting from the one with the oldest recording date.  
Perform the following not to delete them as necessary. (⇒ 29)


- Protect programmes.
- Change automatic delete settings.
- Remove programmes from “Keyword Record”.
- Copy programmes before deleting them.

**Keyword List operations**

**Displaying the Keyword List**

You can also set keywords from FUNCTION MENU.

- 1 Press [FUNCTION MENU].
- 2 Select “Keyword Recording”, then press [OK].

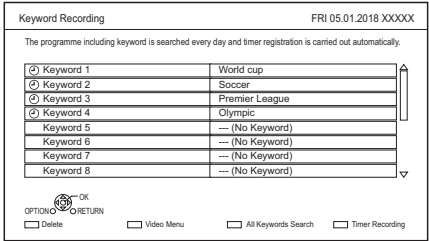

**To add/edit the Keyword**

Select the Keyword and press [OK], then make required settings.

- Refer to “Keyword Recording conditions” (⇒ 24)

**To deactivate the Keyword Recording**

- 1 Select the Keyword, then press [OPTION] button.
  - 2 Select “Turn Keyword Off”, then press [OK].
- Select “Turn Keyword On” in step 2 to return to Keyword Recording standby mode.

**To search programmes matched with any of the registered keywords**

Press the yellow button.

**To play programmes recorded with Keyword Recording**

Press the green button.

**To delete the registered Keyword**

- 1 Select the Keyword, then press the red button.
- 2 Select “Yes”, then press [OK].

**To change the recording priority of keywords**

- Refer to “Priority order of Keyword Recording” (⇒ left)
- 1 Press [OPTION].
  - 2 Select “Change Priority”, then press [OK].
  - 3 Press [▲, ▼] to shift the position, then press [OK].

# Using the external HDD (USB HDD)

If you intend to move recorded programmes to a USB HDD, the USB HDD must be registered to this unit first.



\* "For recorded programmes (⇒ 66)" only

## Limitation information


- Registering of a USB HDD will format the USB HDD and all the content already recorded will be deleted.
- Up to eight USB HDDs can be registered on this unit.
- Registered USB HDDs cannot be used with devices other than this unit.

## Regarding the external HDD (USB HDD)

- Certain non-recommended USB HDDs cannot be used with this unit.
- If a problem occurs with the USB HDD, please contact the manufacturer of the device.

## Connecting the USB HDD

Connect this unit with optional USB HDD.

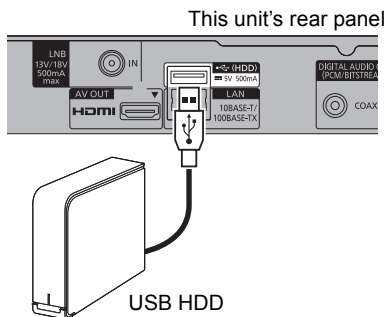

- Only one USB HDD can be connected.
- The USB HDD can be connected to the USB port on the rear of this unit.

## Registering the USB HDD

- If the registering screen appears when connecting the USB HDD, go to step 5.

- 1 Press [FUNCTION MENU].
- 2 Select "Basic Settings" in "Setup", then press [OK].
- 3 Select "Settings for USB HDD" in "HDD / USB HDD", then press [OK].
- 4 Select "USB HDD Registration", then press [OK].
- 5 Select "Yes", then press [OK].
- 6 When the registering is complete, message screen appears. Press [OK].
- 7 The confirmation screen appears. Press [OK].

## To cancel all USB HDD registrations (⇒ 54)



- It is not possible to play back the content on the USB HDD whose registration has been cancelled.
- You can check the registration number of the USB HDD on the Video Menu. (⇒ 27)

## Disconnecting the USB HDD

Disconnecting without following this procedure may result in the loss of recorded content from the USB HDD or the internal HDD.

- 1 Press [FUNCTION MENU].
- 2 Select "Basic Settings" in "Setup", then press [OK].
- 3 Select "Settings for USB HDD" in "HDD / USB HDD", then press [OK].
- 4 Select "USB HDD Disconnection", then press [OK].
- 5 Select "Yes", then press [OK].
- 6 Disconnect the USB HDD from this unit.


# Playing contents on the HDD



\* “For recorded programmes (⇒ 66)” only

- 1 Press [FUNCTION MENU].
- 2 Select “Contents on HDD”, then press [OK].


e.g.,

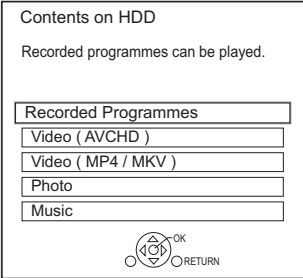

- 3 To play recorded programmes:  
Select “Recorded Programmes”, then press [OK].  
The Video Menu screen appears (⇒ right).  
  
To play HD Video (AVCHD):  
Select “Video ( AVCHD )”, then press [OK].  
The AVCHD tab appears on the Video Menu screen (⇒ right).  
  
To play video files:  
Select “Video ( MP4 / MKV )”, then press [OK].  
The video list screen appears (⇒ 29).
- 4 Select the programme, then press [OK].

## Video Menu screen


e.g.,

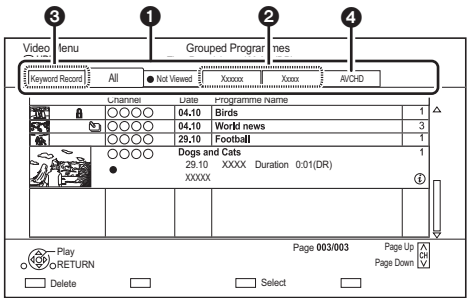

- 1 Tab (⇒ 28)
- 2 Programme type
- 3 Keyword Recording  
Refer to “Playing Keyword Recording programmes” (⇒ 29)
- 4 AVCHD tab

 **USB HDD** When connecting registered USB HDD, “USB HDD” tab and registration number appears. Select “USB HDD” tab.











e.g.,



## Screen icons

	Currently recording programme
	Protected programme
	<ul style="list-style-type: none"><li>Programme was not recorded due to recording protection.</li><li>Recording did not complete as the timer recording has started.</li></ul>
	Programme cannot be played. (When data is damaged etc.)
	Grouped programmes
	Programme has not yet been played.
	Programme is recorded using a different system from that of the unit.
	Change the “TV System” (⇒ 56).
	Radio programme
	3D contents

Playing back video

	Recorded in 1080/50p contents
	Recorded in 1080/60p contents
	Programme is restricted by Child Lock ( Parental Rating ) (⇒ 53).
	Programme has been recorded in Series timer recording.
	Programme has been recorded in Series timer recording and has not yet been played.
	Keyword recording programme which has not yet been played
	Grouped Keyword recording programmes
	Keyword recording programme which has already been played
	Notification icon for a new Keyword Recording
	Programme cannot be played from DLNA client not compatible with DTCP-IP. (⇒ 46)

## Tab

You can quickly find the recorded programmes by selecting the tab.

### To select the tab

Press [◀, ▶].

### To change the displayed programme type tab

- 1 Select the programme type, then press the green button.
- 2 Select the item, then press [OK].

## Showing Information

Select the programme, then press [STATUS ⓘ].

## Showing grouped programmes



- 1 Press [OPTION].
- 2 Select "Grouped Programmes" or "All Programmes", then press [OK].

### Grouped Programmes:

- Two or more programmes recorded in the daily/weekly/series timer recording mode are bundled and displayed as one item.
- Two or more Keyword recording programmes recorded from the same Keyword.

### All Programmes

## Playing back grouped programmes

- 1 On the Grouped Programmes screen:  
Select the item marked with  or .
- 2 **When playing all programmes:**  
Press [▶ × 1.3].

### When playing the individual programme:

Press [OK] and select the programme, then press [OK].

## Editing the grouped programmes

- 1 Select the programme or the group, then press the yellow button.
  - A check mark is displayed. Repeat this step.
  - Press the yellow button again to cancel.
- 2 Press [OPTION].
- 3 Select the item below, then press [OK].

### Create Group:

Selected programmes are bundled to form a group.

### Release Grouping:


All the programmes in the group are released.

### Remove:

Selected programmes are removed from the group.

## Playback from Chapter View

- 1 Select the programme, then press [OPTION].
- 2 Select "Chapter View", then press [OK].  
e.g., **HDD**

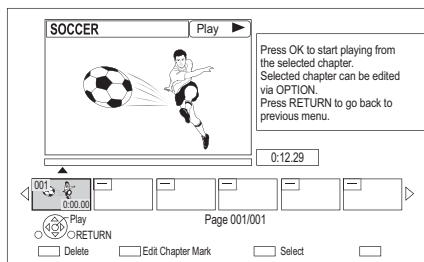


- 3 Select the chapter, then press [OK].

### To edit the chapter in Chapter View

Refer to "Editing chapters". (⇒ 37)

# Playing Keyword Recording programmes

## 1 Select “Keyword Record” tab.

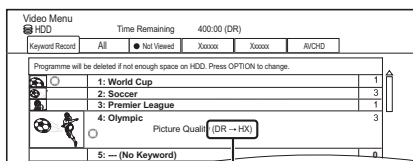

Recording mode (picture quality) to change (⇒ 36)

## 2 Select the Keyword, then press [OK].

## 3 Select the programme, then press [OK].

### To protect Keyword Recording programmes

- 1 Select the programme, then press the green button in step 3. (⇒ above)
- 2 Select “Set up Protection”, then press [OK].

### To delete Keyword Recording programmes

You can delete all programmes found with the keywords.

- 1 Press the red button in step 2. (⇒ above)
- 2 Select “Delete”, then press [OK].

### To remove Keyword Recording programmes from “Keyword Record”

Keyword Recording programmes removed from “Keyword Record” will be treated as normal programmes.

- 1 Select the programme, then press [OPTION] in step 3. (⇒ above)
- 2 Select “Remove from Keyword Record”, then press [OK].
- 3 Select “Remove”, then press [OK].


### To copy Keyword Recording programmes

If you select keywords before copying, you can copy all the programmes containing the keywords.

- For information on copy operations, refer to “Copying programmes”. (⇒ 38)

# Video list screen

e.g.,

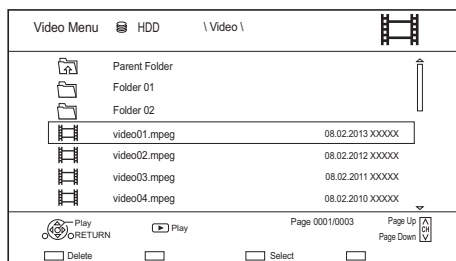

### Screen icons



Folder



Video files



Video files (4K)





Move to the parent folder



- When video playback has ended, the next video will be played back continuously if there is another video in the same folder.
  - When the following conditions are met, videos are played back in 4K regardless of the image quality:
    - When this unit is connected to a TV that is 4K and 24p/25p compatible
    - When “Video Format” is set to “Automatic” (⇒ 56)
    - When “24p / 25p Conversion” is set to “Auto” (⇒ 34)
- This unit can not output 4K image when playing back in 3D.

# Playing contents on the media

Play back content stored on media.

\* "For data files (⇒ 66)" only

**1 Insert the media.**

- AVCHD: If the menu screen is not displayed Press **[▶ × 1.3]**.

**2** When the menu screen etc., appears: **Select the item or content, then press [OK].**

- Repeat this step if necessary.




- When the following conditions are met, videos are played back in 4K regardless of the image quality:
    - When this unit is connected to a TV that is 4K and 24p/25p compatible
    - When "Video Format" is set to "Automatic" (⇒ 56)
    - When "24p / 25p Conversion" is set to "Auto" (⇒ 34)
- This unit can not output 4K image when playing back in 3D.

## Menu screen

Selecting screen for each operation is displayed when the media is inserted, and you can access the operation screen easily.

e.g.,

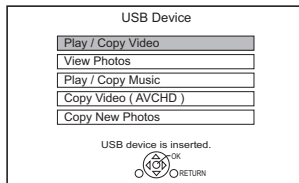


- Display items differ depending on what is recorded in each media.

**If the menu screen is not displayed, display it by performing the following operation.**

- 1 While stopped Press **[FUNCTION MENU]**.
- 2 Select "Media", then press **[OK]**.
- 3 Select the media, then press **[OK]**.

## Video list screen

e.g.,

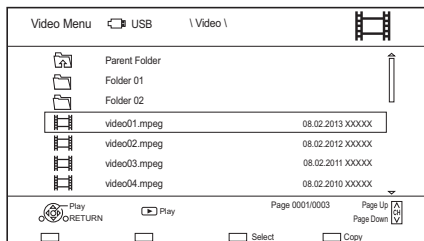

**About screen icons (⇒ 29)**

# Operation during play

Some operations may not work depending on the media and contents.



 
\* For information about the intended uses of a USB HDD (⇒ 66)

## Basic operations

### Status messages

Press [STATUS ⓘ] twice.

e.g.,



### Stop

Press [■].

### Resume play function

Press [▶ × 1.3] to restart from the stopped position.

### Quick View

Press and hold [▶ × 1.3].

- Press again to return to normal speed.



• **MKV, MP4 and MPEG2:** Quick View is not effective.

### Search

Press [◀◀] or [▶▶].

- Press [▶ × 1.3] to restart play.



• The speed increases up to 5 steps.

• **MKV, MP4 and MPEG2:** Audio is not heard during all levels search.

### Pause

Press [⏸].

- Press [▶ × 1.3] to restart play.

### Slow-motion

While paused, press [◀◀] or [▶▶].

- Press [▶ × 1.3] to restart play.



• The speed increases up to 5 steps.

• **MKV, MP4 and MPEG2:** Slow-motion is not effective.

## Frame-by-frame

While paused, press [◀] (◀◀) or [▶] (▶▶).

- Each press shows the next frame.
- Press and hold to change in succession forward or backward.
- Press [▶ × 1.3] to restart play.



• **MKV, MP4 and MPEG2:** Frame-by-frame is not effective.

## Manual Skip

### Skip forward 1 minute:

Press [+60s].

### Skip backward 10 seconds:

Press [-10s].



- Depending on the content that you play back, this function is not available.
- This function does not work for programmes containing recorded broadcasts.

## Skipping the content or chapter

Press [◀◀] or [▶▶].



- **[HDD] [USB HDD]** (For recorded programmes): It will not skip the programme. But the programme in the grouped programmes will be skipped. (⇒ 28)

## Changing audio

Press [AUDIO].

- It will switch depending on the contents recorded every time it is pressed.
- If “Audio Description” is set to “Automatic”, Audio Description will be given priority when playing, if available. (⇒ 53)

## Switching subtitles

**[HDD] [USB HDD]** (For recorded programmes)

- 1 Press [STTL ⓘ].
  - 2 Press [OK].
  - 3 Select “On” or “Off”, then press [OK].
- If you want to switch the subtitle language, select it in the Basic Operation menu (⇒ 33).

### MKV:

Display with “Subtitles” in the Basic Operation menu (⇒ 33).

## 3D video playback

### Preparation

Connect 3D compatible TV to this unit. (⇒ 9)

- Perform the necessary preparations for the TV.

**Play back following the instructions displayed on the screen.**

### Preparatory 3D settings

#### 3D AVCHD Output

If 2D AVCHD video is recognised as 3D video and cannot be played back correctly, you may be able to play it by changing the setting. (⇒ 56)

#### 3D Playback Message

Hide the 3D viewing warning screen. (⇒ 56)

### 3D settings during playback

Change this setting when the screen is not correctly displayed for 3D compatible programmes.

- 1 Press [OPTION].
- 2 Select "Playback Settings" in "Playback Menu", then press [OK].
- 3 Select "3D Settings", then press [OK].
- 4 Select the item below, then press [OK].

#### Signal Format

- Original:  
Keep original picture format.
- Side by side:  
3D picture format comprising of left and right screens.

#### Graphic Display Level


Adjust the 3D position for the playback menu or message screen etc.



- Please refrain from viewing 3D images if you do not feel well or are experiencing visual fatigue.  
In the event that you experience dizziness, nausea, or other discomfort while viewing 3D images, discontinue use and rest your eyes.
- Depending on the connected TV, the video being played back might switch to 2D video due to changes in resolution etc. Check the 3D setting on the TV.
- 3D video might not output the way it is set in "Video Format" (⇒ 56).
- It may display as Side-by-Side (2 screen structure) when playback of the 3D video is started. Select "Side by side" in "Signal Format". (⇒ above)
- This unit only guarantees the playback of the Frame Sequential and the Side-by-Side (Half) programme types.

## 4K Networking

You can save 4K videos/photos recorded with digital cameras and other 4K-compatible devices to the HDD of this unit and play them back.

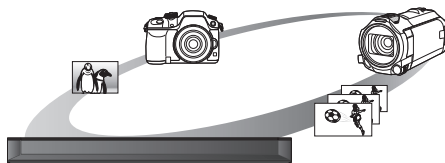

### Compatible 4K content

- MP4/MOV (4K/24p, 25p and 30p)
  - bit rate up to 100 Mbps
  - resolution up to 3840×2160 25p/30p, 4096×2160 24p
- JPEG, MPO
  - resolution 3840×2160

Photos with a resolution greater than 3840×2160 are played back in 3840×2160.

### Preparation

- Connect a 4K-compatible TV to this unit. (⇒ 9)

### Playing back 4K content

#### ■ 4K videos

##### HDD

Refer to "Playing contents on the HDD". (⇒ 27)

##### USB

Refer to "Playing contents on the media". (⇒ 30)

#### ■ Photos

Refer to "Playing photos". (⇒ 40)



- Video may not be played back smoothly depending on the USB device.
- You can also watch the 4K contents stored in the DLNA Certified media server. (⇒ 46, Home Networking (DLNA))

### Copying 4K content

#### ■ 4K videos

Refer to "Copying video files". (⇒ 39)

#### ■ Photos

Refer to "Selecting and copying the photos". (⇒ 42)




# Playback menu

A variety of playback operations and settings can be performed from this menu.  
Available options differ depending on the playing contents and the condition of the unit.

- 1 Display the Playback menu.
  - 1 Press [OPTION].
  - 2 Select "Playback Settings" in "Playback Menu" or select "Playback Settings", then press [OK].

e.g.,

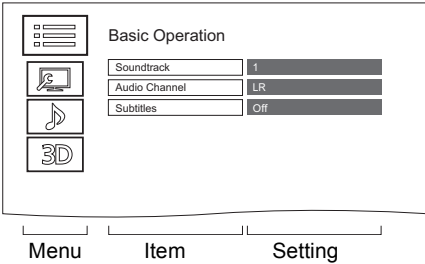

- 2 Select the menu, then press [OK].
- 3 Select the item, then press [OK].
- 4 Change the setting.

## To clear the Playback menu

Press [RETURN] until the Playback menu disappears.

Basic Operation

Soundtrack

Show or change the soundtrack.

Audio Selection/AD

Switch in the case of multiple audio and Audio Description.

Audio Channel

Change audio (LR/L/R) during playback.

Subtitles

Turn the subtitle on/off, and change the language depending on the media.

Subtitle Language

Select the subtitle language in the case of multiple languages.

Repeat Play

Select the item which you want to repeat.

Shuffle

Select whether to play shuffle or not.

Video

The original video recording method (MPEG-4 AVC etc.) appears.

Reception

The radio wave status during the playback of Home Networking (DLNA) is displayed. (Only when a wireless connection is used)

## Picture Settings

### Picture Type

Select the picture quality mode during play.

### Sharpness Adjustment

### Noise Reduction

### Luminance/Colour Adjustment

Adjust the contrast, brightness, tone curve (white/black) colour saturation and hue.

### Bandwidth Limitation

Adjusts the bandwidth limitations.

### 24p / 25p Conversion

Plays back videos with film-like motion.

- This function is available on the following conditions:
  - “Video Format” set to “Automatic”, “1080i”\* or “1080p”\* (⇒ 56)
  - \* Only for 24p Conversion
  - Connect 24p/25p compatible TV.
- Noise may appear on the image when you switch the setting.

### Progressive

Select the method of conversion for progressive output to suit the type of content being played.

#### • Auto

Automatically detects the film and video content, and appropriately converts it.

#### • Video

Select this setting when the content is distorted if “Auto” is selected.

#### • Film

Select this if the edges of the film content appear jagged or rough when “Auto” is selected. However, if the video content is distorted, then select “Auto”.

### Reset to Default Picture Settings

Restores the default settings of the Picture Settings menu.

## Sound Effect Settings

### DSD Decode Sampling Frequency

Select the settings that suit your sound quality preferences.

### DSD LPF Setting

Select the settings that suit your sound quality preferences.

## Sound Settings

### Sound Effects

- This function is effective when “Digital Audio Output” is set to “PCM”. (⇒ 55)

#### Night Surround

Enjoy a movie with powerful sound even when the volume is kept low at night.

#### Remaster 1/Remaster 2

Sound becomes more natural by adding higher frequency signals not recorded on the track.

### Dialogue Enhancer

The volume of the centre channel is raised to make dialogue easier to hear.

## 3D Settings (⇒ 32)

### Signal Format

### Graphic Display Level



- The menu is not displayed when playing photos.

## Display language list

ENG	English	JPN	Japanese	ARA	Arabic
FRA	French	CHI	Chinese	HIN	Hindi
DEU	German	KOR	Korean	PER	Persian
ITA	Italian	MAL	Malay	IND	Indonesian
ESP	Spanish	VIE	Vietnamese	MRI	Maori
NLD	Dutch	THA	Thai	BUL	Bulgarian
SVE	Swedish	POL	Polish	RUM	Romanian
NOR	Norwegian	CES	Czech	GRE	Greek
DAN	Danish	SLK	Slovak	TUR	Turkish
POR	Portuguese	HUN	Hungarian	*	Others
RUS	Russian	FIN	Finnish		

# Deleting/Editing programmes

Once deleted, divided or partially deleted, content cannot be restored to its original state. Make certain before proceeding.




\* "For recorded programmes (⇒ 66)" only



- PIN is required to edit the programmes with **R** in some functions. (⇒ 28)

## Deleting recorded programmes

- On the Video Menu screen:  
Select the programme.

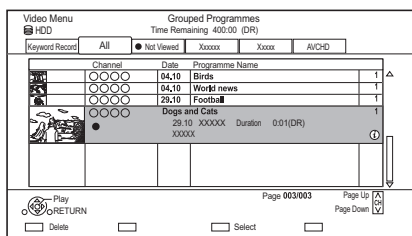

- Press the red button.
- Select "Delete", then press [OK].

### Multiple selection

Select the programme, then press the yellow button.


- A check mark ☒ is displayed. Repeat this step.
- Press the yellow button again to cancel.

### Deleting during play

- Press [DELETE] while playing.
- Select "Delete", then press [OK].

## Editing recorded programmes

- On the Video Menu screen:  
Select the programme.  
• Multiple selection (⇒ left)
- Press [OPTION].
- Select the item, then press [OK].  
e.g.,

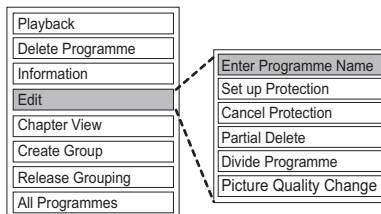

### Entering programme name

- Select "Enter Programme Name" in "Edit", then press [OK].
- Refer to "Entering text". (⇒ 51)

### Setting protection

Protection setting prevents the programme from accidental deletion.

- Select "Set up Protection" or "Cancel Protection" in "Edit", then press [OK].
- Select "Yes", then press [OK].

**A** appears when setting the protection.

### Partial deleting

- Select "Partial Delete" in "Edit", then press [OK].
- Press [OK] at the start point and end point to delete.  
• You can find the desired point by using play, search, etc. (⇒ 31)
- Select "Continue", then press [OK].  
• Select "Next", then press [OK] to delete other sections. Up to 20 sections can be set. (⇒ go to step 2)
- Select "Delete", then press [OK].
- Press [RETURN ].



- Chapter Mark is generated in the scene that was partially deleted.

## Dividing programme

- 1 Select "Divide Programme" in "Edit", then press [OK].
- 2 Press [OK] at the point to divide the programme.
  - You can find the desired point by using play, search, etc. (⇒ 31)
- 3 Select "Continue", then press [OK].
- 4 Select "Divide", then press [OK].

### To confirm the division point

After performing step 2.

Select "Preview", then press [OK].

- The unit plays 10 seconds before and after the division point.

### To change the division point

After performing step 2.

Restart play and select "Divide", then press [OK] at the division point.




- Divided programmes will become a group of programmes.

## Picture Quality Change

The Picture Quality Change function changes the recording mode of programmes in DR mode or AVCHD format. It takes about the same amount of time as recording to change the mode.

- 1 Select "Picture Quality Change" in "Edit", then press [OK].

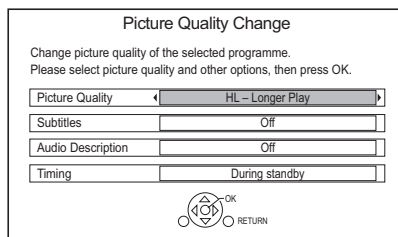

- 2 Set the picture quality change options, then press [OK].

### Picture Quality (⇒ 66):

- **USB HDD** You cannot select XP, SP and LP mode.

### Subtitles:

#### • Automatic

Subtitles will be recorded if they are included in the programme.

#### • Off

Subtitle will not be recorded.

### Audio Description:

#### • Automatic

Audio Description will be recorded if they are included in the programme.

#### • Off

Audio Description will not be recorded.

### Timing:

#### • Now

A picture quality change starts immediately after step 4.

- Timer recordings cannot be performed while a picture quality change is in progress.

#### • During standby

A picture quality change starts after the unit is switched to standby mode.

- 3 Select the item below, then press [OK].

### Delete:

The original programme will be deleted to save the storage capacity of the HDD after the picture quality is changed.

### Keep:

The original programme is retained even after the picture quality is changed.

- 4 If you have selected "Now":

Select "Start", then press [OK].

### If you have selected "During standby":

Press [OK].

- Picture quality change will be performed after the unit is switched to standby mode.

"COPY" or "CONV" on the front panel display stay lit while a picture quality change is in progress.

## To cancel a picture quality change if you selected “Now”

Press and hold [RETURN ⊖] for more than 3 seconds.

## To cancel a picture quality change if you selected “During standby”

After performing steps 1–2 (⇒ 35, Editing recorded programmes)

- 1 Select “Picture Quality Change” in “Edit”, then press [OK].
- 2 Select “Yes”, then press [OK].

## To check to see if a picture quality change is finished

Press [VIDEO MENU].

e.g.,

Channel	Date	Programme Name	
○○○○	04.10	Birds	1
○○○○	04.10	World news	1
○○○○	29.10	Football	1
○○○○	29.10	Dogs and Cats	1
●	29.10 XXXXX	Duration 0:01(DR→HL)	①
	XXXXX		

When “○○ → ○○” (Picture quality change display) is displayed, the process has not finished yet.



- To use “Picture Quality Change”, the HDD needs enough storage capacity.
- If “During standby” is set for the Picture Quality Change function, the change being applied stops when this unit is turned on. The process will start from the beginning again once the unit is switched to standby mode.
- When the picture quality is changed, 3D information may be lost.
- When the picture quality of a programme is changed, its new audio and subtitle language settings will be determined by the following settings:
  - “Audio Type for Digital Broadcast” (⇒ 55)
  - “Multi Audio” and “Subtitles” of “Preferred Language” (⇒ 53)

## Editing chapters

- 1 Select “Chapter View”, then press [OK].
- 2 Perform the editing operations.

### Edit Chapter Mark:

Select the point where you want to start a new chapter while viewing the programme.

- 1 Press the green button.
- 2 Press [OK] at the point you want to divide.
  - Repeat this step.
- 3 Press [RETURN ⊕] to go to Chapter View screen.

## To delete the chapter:

- 1 Select the chapter, then press the red button.
  - Multiple selection (⇒ 35)
- 2 Select “Delete”, then press [OK].

## To combine chapters (Delete chapter mark):

- 1 Select the chapter, then press [OPTION].
  - 2 Select “Combine Chapters”, then press [OK].
  - 3 Select “Combine”, then press [OK].
- The selected chapter is combined to the next chapter.

## Playback from Chapter View

Refer to “Playback from Chapter View”. (⇒ 28)




- The maximum number of chapters: (Depends on the state of recording.)  
Approx. 1000 per programme
- When the programme has the maximum number of chapters, you cannot perform the Resume play function (⇒ 31) with the programme.

## Deleting video files on the HDD

- 1 On the video list screen:  
Select the file or folder.

e.g.,

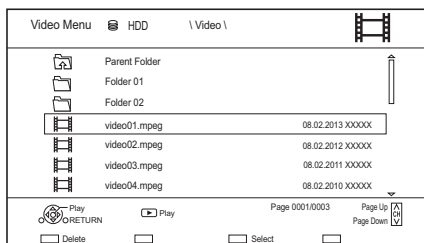

- Multiple selection (⇒ 35)

- 2 Press the red button.
- 3 Select “Yes”, then press [OK].



- All files in the folder will be deleted.

# Copying programmes

The unit can copy programmes between the HDD and USB-HDDs.



- \* "For recorded programmes (⇒ 66)" only
- The programme in the source media will be deleted.

- 1 Connect the USB HDD.**
- 2 Press [FUNCTION MENU].**
- 3 Select "Recorded Programmes" in "Contents on HDD", then press [OK].**
- 4 Select the programme.**
  - **Multiple selection**  
Select the programme, then press the yellow button.  
A check mark ☒ is displayed. Repeat this step.
    - Press the yellow button again to cancel.
- 5 Press the blue button.**
- 6 Select "Yes", then press [OK].**
  - If you select "No", you can change the selection. (⇒ right, To change the selection)
- 7 Set other settings, then press [OK].**  
(⇒ right, "Setting the copying options")
- 8 Select "Yes", then press [OK].**

## To change the selection

- 1 Select "No", then press [OK] in step 6 (⇒ left).
- 2 Select the programme, then press the yellow button.  
Repeat this step to select programmes.
- 3 Press the blue button.
- 4 Go to step 6 (⇒ left).

## About screen icons on the Video Menu

Refer to "Screen icons". (⇒ 27)

## Setting the copying options

- 1 Select the item in step 7 (⇒ left).
- 2 Press [◀, ▶] to change the settings.

### • Automatic Standby after Copy On:


This unit is turned to standby mode when it is not operated for approximately 5 minutes after completing copy.

To register the external HDD (USB HDD)  
(⇒ 26)

To copy video files (⇒ 39)

## Copying programmes with copying list

- 1 Press [FUNCTION MENU].
- 2 Select "Copy Video", then press [OK].

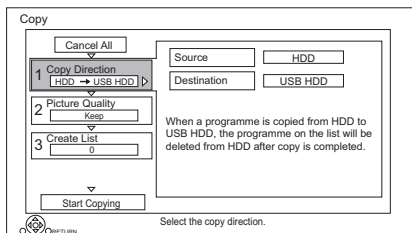

Cancel All: To cancel all registered copying settings and lists

- 3 Make the copying settings. (Copy Direction etc.)
- 4 Select "Start Copying", then press [OK].
- 5 Select "Yes", then press [OK].



- Programmes in the grouped programmes and other programmes cannot be registered simultaneously.

### Screen icons



Programmes that cannot be copied



(NTSC)

Programme recorded using a different encoding system from that of the unit.



(PAL)

- Programmes displaying these marks cannot be selected.

### About other screen icons (⇒ 27)

## Copying video files


USB



HDD

- 1 On the video list screen:  
Select the file or folder.

e.g.,

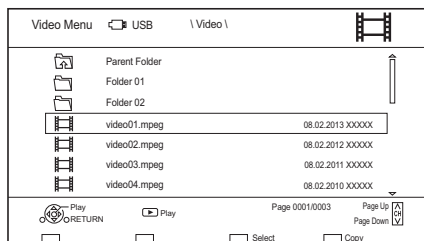

Multiple selection (⇒ 38)

- 2 Press the blue button.
- 3 Select "Yes", then press [OK].

### To stop copying

Press and hold [RETURN] for 3 seconds.

### About the screen icons

Refer to "Screen icons". (⇒ 29)



- All files in the folder will be copied.
- The names of folders/files cannot be changed after they are copied to the HDD. We recommend that you create a folder with an easily identifiable name on a PC or other device first and use the folder to perform copying.
- Up to 1000 files can be copied at once.
- While copying, no other operations can be performed. Timer recordings will not proceed.

# Photo

You can play back pictures recorded on the HDD of the unit and various media.



\* "For data files (⇒ 66)" only (JPEG, MPO)

## Playing photos

- 1** **HDD**:
  - 1 Press [FUNCTION MENU].
  - 2 Select "Photo" in "Contents on HDD", then press [OK].Except **HDD**:
  - 1 Insert or connect the media.  
The menu screen appears. (⇒ 30)
  - 2 Select "View Photos", then press [OK].
- 2** Select the folder, then press [OK].
  - Photo menu screen appears. (⇒ 41)
- 3** Select the photo, then press [OK].
  - Press [◀, ▶] to display the previous or next photo.



- When the following conditions are met, photos are played back in 4K regardless of the image quality:
  - When this unit is connected to a TV that is 4K and 30p compatible
  - When "Video Format" is set to "Automatic" (⇒ 56)This unit can not output 4K image when playing back in 3D.

## Photo play option

- 1** While displaying a photo:  
Press [OPTION].
- 2** Select the item below, then press [OK].


### Graphic Display Level

You can change the 3D position of the screen display, etc., during the 3D photo playback.

### Photo Menu

- **Start Slideshow**  
You can start a slideshow.
- **Rotate RIGHT/Rotate LEFT**
  - The information of the rotated photos will not be stored depending on the media.
  - This function is not available during the 3D photo playback.
- **Information**  
Information (shooting date etc.) is shown.
- **Wallpaper**  
A photo being played back is registered as wallpaper on the FUNCTION MENU screen. (⇒ 23)

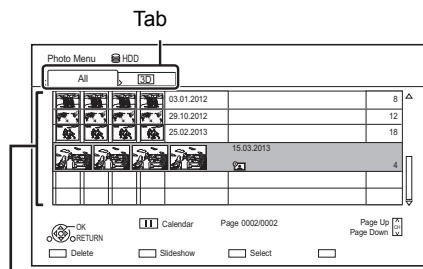

e.g., **HDD**

Photos imported to the HDD (⇒ 42) are managed using folders.

Folders and photos can be edited by pressing [OPTION]. (⇒ 42)

### To select the tab

Press [◀, ▶].

### To start Slideshow


Refer to "Slideshow settings". (⇒ right)

**HDD** To display or exit the Calendar screen


Press [■].

### Screen icons

**3D** 3D photos (MPO)  
(Tab) Select from this tab to play back in 3D.

 New photo which is not viewed

- 1 On the Photo Menu screen:  
Press the green button.

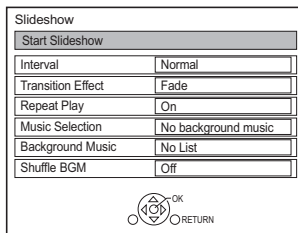

- 2 Select the item below, then press [OK].

### Start Slideshow

#### Interval

Set up the time until the next photo is to display.

#### Transition Effect\*

Effect for the next photo to display can be set.

#### Repeat Play

#### Music Selection\*

Select background music on (either from HDD or USB) or off.

#### Background Music\*

Select background music from HDD or USB (Folder).

#### Shuffle BGM\*

Play back the BGM (Background Music) in shuffle order.

\* This function is not available during the 3D photo playback.

### To pause the Slideshow

Press [■].

- Press [■] again to restart.

### To stop the Slideshow

Press [RETURN ⊖].

## Editing photos

**HDD**

### 1 On the Photo Menu screen:

#### To edit the folder:

Select the folder.

#### To edit the photo:

- 1 Select the folder, then press [OK].
- 2 Select the photo to edit.

#### • To select multiple folders or photos

Press the yellow button when selecting the folder or photo.

A check mark ☒ is displayed. Repeat this step.

- Press the yellow button again to cancel.

### 2 Press [OPTION].

- Selectable items will change depending on the type of file.

### 3 Select the item below, then press [OK].

#### Enter Folder Name

Refer to "Entering text". (⇒ 51)

#### Combine Folders

#### Delete Folder

#### Move Photos

Select "Move to new folder" or "Move to another folder", then press [OK].

- If "Move to another folder" is selected, set a destination folder.

#### Delete Photos

## Selecting and copying the photos

**USB HDD** **USB**

→ **HDD**

### 1 On the Photo Menu screen:

#### To copy the folder:

Select the folder, then press the blue button.

#### To copy the photo:

- 1 Select the folder, then press [OK].
- 2 Select the photos to copy, then press the blue button.

#### • To select multiple folders or photos

Press the yellow button when selecting the folder or photo.

A check mark ☒ is displayed. Repeat this step.

- Press the yellow button again to cancel.

### 2 Select "Yes", then press [OK].

Copying will start.

#### To stop copying

Press and hold [RETURN ⌫] for 3 seconds.




- The name of the copied photos will be changed.

## Copying automatically

USB HDD USB → HDD

Newly added photos will automatically be copied to the HDD.

- 1 Insert the media.  
The menu screen appears. (⇒ 30)
- 2 Select “Copy New Photos”, then press [OK].  
e.g., **USB**

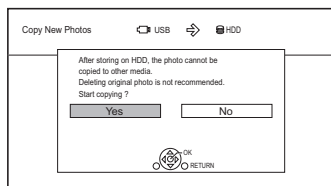

- 3 Select “Yes”, then press [OK].  
Copying will start.
- 4 Once the copy is completed, select “Yes” or “No”, then press [OK].

### To stop copying

Press and hold [RETURN ⊕] for 3 seconds.



- Photos without shooting date will be categorised using the creation date.
- The name of the copied photos will be changed.

## Music

You can play back music recorded on the HDD of the unit and various media.




\* “For data files (⇒ 66)” only

### Playing music file on the media

USB HDD USB

- 1 Insert or connect the media.  
The menu screen appears. (⇒ 30)
- 2 Select “Play / Copy Music”, then press [OK].  
The music list screen appears.

e.g.,

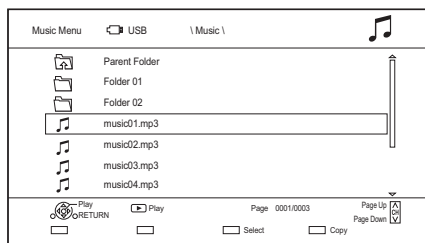

- 3 Select the item, then press [OK].
  - Repeat this step if necessary.Playback will start.



- The track/artist/album name will be displayed if the information is contained in music file.

### Screen icons



Folder



Music



Move to the parent folder

## Playing music file on the HDD

- 1 Press [FUNCTION MENU].
- 2 Select "Music" in "Contents on HDD", then press [OK].  
The music list screen appears.
- 3 Go to step 3 (⇒ 43, Playing music file on the media).

## Operations during music play

### Stop

Press [■].

### Pause

Press [⏸].

- Press [▶ × 1.3] to restart play.

### Search

Press [◀◀] or [▶▶].

- Press [▶ × 1.3] to restart play.

### Skip

Press [◀◀] or [▶▶].

### Repeat Play/Shuffle

Refer to "Repeat Play" or "Shuffle" in Basic Operation menu (⇒ 33).

### Sound Effects

Refer to "Sound Effects" in Sound Settings menu (⇒ 34).

## To play music continuously even if the Power off link works


Refer to "Playing music continuously even after turning off power to the TV". (⇒ 50)

## Copying music

USB HDD USB → HDD

- 1 On the music list screen:  
Select the file or folder.

e.g.,

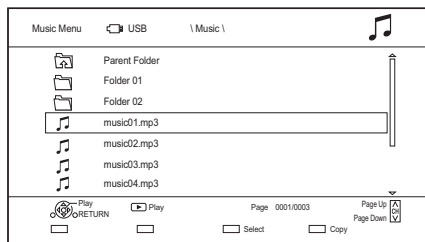

- 2 Press the blue button.
- 3 Select "Yes", then press [OK].

## To stop copying

Press and hold [RETURN ⊕] for 3 seconds.

## Multiple selection

Select the file or folder, then press the yellow button.

A check mark ✓ is displayed. Repeat this step.

- Press the yellow button again to cancel.



- While copying, no other operations can be performed.  
Timer recordings will not proceed.
- All files in the folder will be copied.
- Up to 1000 files can be copied at once.

## Deleting music

HDD

- 1 On the music list screen:  
Select the file or folder.  
• Multiple selection (⇒ above)
- 2 Press the red button.
- 3 Select "Yes", then press [OK].




- All files in the folder will be deleted.

# Network Service

Network Service allows you to access some specific websites supported by Panasonic, and enjoy Internet contents.

e.g.,

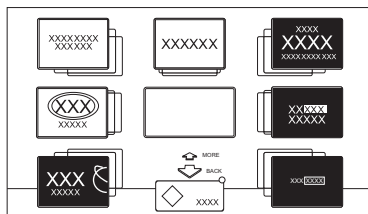

## Preparation

- Perform network connection and settings. (⇒ 10, 11)

### 1 Press [INTERNET].

- When a message is displayed, read it carefully and then press [OK].
- NETFLIX can be accessed directly by pressing [NETFLIX] button.

### 2 Select the item, then press [OK].

- Operable buttons:  
[▲, ▼, ◀, ▶], [OK], [RETURN ⊕], colour buttons and number buttons.

## To exit

Press [EXIT ⊗].




- In the following cases, settings are possible using "Network Service Settings". (⇒ 57)
  - When restricting the use of Network Service.
  - When the audio is distorted.
- For information about other disclaimers. (⇒ 68, Disclaimer)

# TV Anytime

Operations such as the ones below can be performed from anywhere with a smartphone or tablet installed with Media Center App.

- Setting a recording
- Watching TV with this unit's tuner
- Playing back programmes recorded on this unit

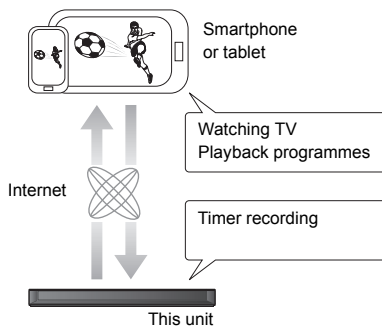

Use the Media Center App to complete user registration to use these functions.

## Preparation

- Perform network connection and settings. (⇒ 10, 11)
- TV Anytime Settings (⇒ 57)



- This unit will always be connected to the Internet when this function is activated.
- For details, please check the following website.  
<http://panasonic.jp/support/global/cs/av/mediacenter/>  
(This site is in English only.)
- For information about other disclaimers. (⇒ 68, Disclaimer)

# Home Networking (DLNA)

Home Networking (DLNA) allows you to watch the contents and broadcasts on Server equipment connected on the same network from Client equipment.

This unit can be used both as Server and Client.

## Preparation


- Perform network connection. (⇒ 10, 11)
- Perform Home Network settings of the DLNA compatible equipment.



- Ensure that the router for your home network has adequate security system to prevent unauthorised access.
- If using slow network connection, the video may not be displayed correctly. A high-speed home network with a speed of at least 20 Mbps is recommended.
- Some video or broadcasts cannot be enjoyed depending on the DLNA (Client) compatible equipment, the condition of this unit, or the file type.

## Using this unit as Server

You can watch broadcasts received by this unit (Multiroom TV Streaming), videos and photos saved on HDD of this unit on DLNA (Client) compatible equipment.

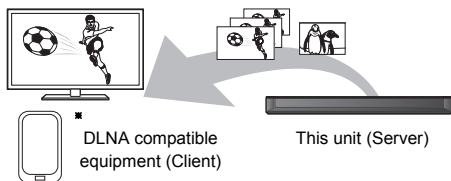

\* DLNA function compatible software should be installed.

## Preparation

- Perform Home Network settings. (⇒ 57)


- 1 Operate the playback equipment (Client) to display the list of contents on this unit.
- 2 Select the item, then press [OK].



- The programmes with access restriction (e.g., copy restriction) are not available.
- If video frames are dropped, change the following settings.
  - Conversion Setting for DLNA (⇒ 57)
  - Resolution Setting for DLNA (⇒ 57)
- Files not on the HDD cannot be played back.
- Playing back 3D video recorded on this unit may not work properly.
- 3D photos copied to this unit cannot be played back in 3D.

## Using this unit as Client

You can share videos, photos and music stored in the DLNA Certified media server.

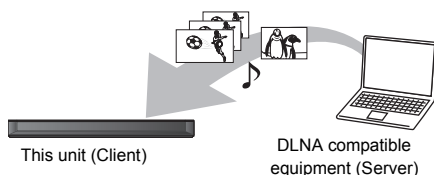

- 1 Press [FUNCTION MENU].
- 2 Select "DLNA Client" in "Home Network", then press [OK].  
A list of equipment connected via the network is displayed.
  - This list can be updated by pressing the green button.
- 3 Select the equipment, then press [OK].
- 4 Select the item, then press [OK].
  - Convenient functions can be used by pressing [OPTION] depending on the contents.
  - **Control Panel**  
Control Panel is displayed once the playback starts.
    - Press [OK] if the Control Panel is not displayed. (It may not be displayed depending on the conditions of use.)
    - (While playing video or photo) Press [RETURN ⊕] to hide the Control Panel.



- Playlist of Windows Media® Player can play back only the contents that are stored in the libraries.
- While playing back the 3D programme, you cannot set "3D Settings". (⇒ 32)

## Playable contents

When this unit works as a DLNA client, following contents are playable.

### Video (Recorded programmes)

Container	Video codec	Audio codec	Example of file extension
XP/SP/LP/FR <sup>※1</sup>	MPEG2	Dolby® Digital Linear PCM	—
DR/HG/HX/HE/ HL/HM <sup>※1</sup>	MPEG2 H.264	MPEG HE-AAC Dolby® Digital	—

### Video

Container	Video codec	Audio codec	Example of file extension
AVCHD <sup>※1</sup>	H.264	Dolby® Digital	.mts
MP4	H.264	AAC	.mp4
PS	MPEG2	Dolby® Digital Linear PCM	.mpg .mpeg
TS	MPEG2 H.264	Dolby® Digital AAC	.m2ts .ts
MKV	H.264	AAC-LC MP3 Dolby® Digital PCM Vorbis FLAC	.mkv

### Photo

Format	Example of file extension
JPEG	.jpg
MPO <sup>※1, 2</sup>	.mpo

※1 Only when the server is another Panasonic Blu-ray Disc Recorder, etc.

※2 2D playback only.



### Audio

Audio codec	Example of file extension
MP3	.mp3
WAV	.wav
AAC	.m4a, .adts
WMA	.wma
FLAC	.flac
DSD	.dsf, .dff
ALAC	.m4a
Linear PCM	—

- Depending on the server, the contents other than stated above can be played back.

## Using this unit as Media Renderer

This unit works as Media Renderer, which allows you to play back the contents on DLNA Server by operating a Digital Media Controller (a smartphone, etc.).

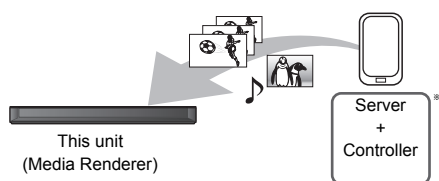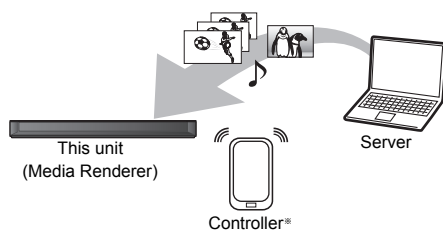

\* Digital Media Controller compatible software should be installed.

- 1 Press [FUNCTION MENU].
- 2 Select "Media Renderer" in "Home Network", then press [OK].
- 3 Operate the Digital Media Controller compatible equipment.


### To exit

Press [RETURN ⊙].

## Wi-Fi Direct®

Wi-Fi Direct is a standard that enables wireless LAN devices to communicate each other directly without a wireless broadband router.

This unit can be connected wirelessly and directly to other DLNA compatible equipment on a temporary basis, regardless of the network connection and settings of this unit.

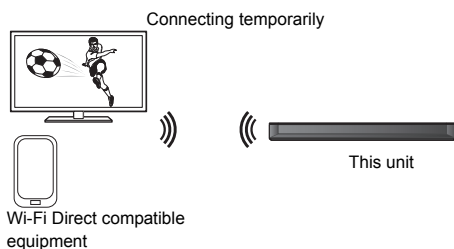

- 1** Press [FUNCTION MENU].
- 2** Select "Wi-Fi Direct" in "Home Network", then press [OK].
- 3** Select the item, then press [OK].
  - Set up the device to be connected so that a Wi-Fi Direct connection can be made. For details, refer to the operating instructions for the device to be connected.
- 4** Select the device to be connected, then press [OK].
  - If the device you want to connect to is not displayed, switch the connection method by pressing the yellow button.

### **5** When selected "DLNA Client":

Go to step 4 on page 46.


### When selected "DLNA Server":

Operate the playback equipment (Client).


### When selected "Media Renderer":

Operate the Digital Media Controller.

## When no devices are found

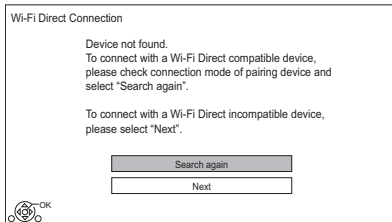

If the corresponding device is not found even after the search is run again, select "Next" and change the connection method.

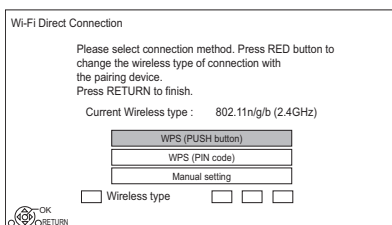


Select the connection method according to the device to be connected.

## Using Miracast®

You can enjoy the content you are viewing on a Miracast-compatible smartphone, etc. on the big screen of your TV.

- Compatible with Android™ device, ver. 4.2 and above and Miracast certified.

Miracast compatible equipment

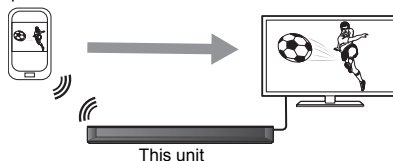

- 1** Press [FUNCTION MENU].
- 2** Select "Miracast" in "Home Network", then press [OK].
- 3** Operate the Miracast compatible equipment.


### To exit

 Press [EXIT ⏻].



# Copying the HD Video (AVCHD)


You can import HD videos (AVCHD) recorded with a video camera to the unit.



\* "For data files (⇒ 66)" only

**This unit cannot copy the videos in the HDD to the media. Be careful when deleting the original video after copying to the HDD.**

e.g.,

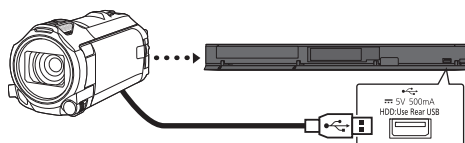

**USB connection cable (optional)**

- 1** Connect a video camera that has been turned on or insert a media.
  - Make the video camera ready for data transfer.

The menu screen of this unit appears.  
(⇒ 30)
- 2** Select "Copy Video ( AVCHD )", then press [OK].
- 3** Select the video stored on the video camera, then press the yellow button.
 

A check mark ☒ is displayed. Repeat this step.

  - Press the yellow button again to cancel.
- 4** Press [OK].
- 5** Select "Start", then press [OK].

## To stop copying

Press and hold [RETURN ⊖] for 3 seconds.



- Videos recorded in a signal format different from the TV System setting of the unit cannot be copied to the unit.

## Screen icons

### About other screen icons

Refer to "Screen icons". (⇒ 27, 39)

# VIERA Link

## What is VIERA Link?

VIERA Link is a convenient function which will link the operations of this unit and a Panasonic TV (VIERA) or an amplifier/receiver. You can use this function by connecting the equipment with the HDMI cable. See the operating instructions for connected equipment.

### Easy control only with Panasonic TV's remote control

You can operate this unit using the TV remote control.

### Automatic input switching

When the following operations are performed, the input channel of the TV will be automatically switched and the screen of this unit will be displayed. Additionally when the TV is off, the TV will automatically turn on.

- When play starts or when Video Menu etc, is performed

### Power off link

When you set the TV to standby mode, this unit is also automatically set to standby mode.

- Power off link function does not work when recording, copying etc.

### Playing music continuously even after turning off power to the TV

When the unit is directly connected to an amplifier/receiver.

- 1 While playing music Press [OPTION].
- 2 Select "TV Power Off", then press [OK].



- These functions may not work normally depending on the equipment condition.
- Use the remote control supplied with this unit if you cannot operate this unit using buttons on the TV remote control.
- The information provided on this page is correct as of December 2017 and is subject to change.

# Software (Firmware) Update

**You cannot operate the unit until the update is complete. Don't remove the AC mains lead during the update. Removing the AC mains lead while the update is in progress may damage the unit.**

## Update software (firmware) of this unit

Software of this unit can be updated automatically by the following methods at the specified time.

- **From broadcasts**  
(Default setting is 3 a.m. ⇒ 59, Software Update in Standby)
- **From Internet**  
Network connection and setting are required.  
(⇒ 10, 11)

**If a software (firmware) update is available, a notification is displayed.**

New software version has been found.  
The software will be updated automatically after this unit is switched to standby.  
Do not disconnect the AC mains lead.

- It is displayed on the Channel Information (⇒ 14) when the Software (firmware) can be updated immediately.  
e.g.,



To execute, press the red button while the Channel Information is displayed, and follow the instructions on the screen.

Update of the software (firmware) will start when the unit is turned to standby mode.

### To update the software (firmware) immediately

Use the “Software Update Now ( Broadcast )” function or “Software Update Now ( Internet )” function. (⇒ 59)




- It may take up to a few hours until the update is completed depending on the network or broadcast environment.
- The timer recording always takes preference over the software (firmware) download; if the timer recording is scheduled to start, the downloading will be performed at the next opportunity.
- You can also download the latest software (firmware) from the following website.  
<http://panasonic.jp/support/global/cs/>

## Other operations

### Entering text

- 1 Select a character, then press [OK].  
Repeat this step to enter other characters.

e.g.,

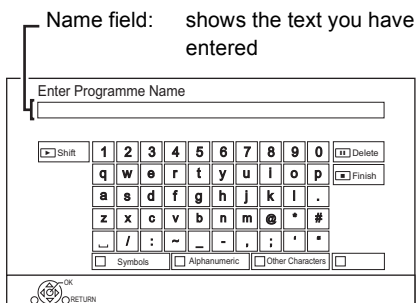

- Red: Enter Symbols
- Green: Enter Alphanumeric characters
- Yellow: Enter Other Characters, such as umlaut mark or accent grave
- [■]: Delete a character
- [▶ × 1.3]: Shift the alphabetic characters on the screen to upper case/lower case

- 2 Press [■] (Finish).  
“Writing...” appears then the screen returns to the previous screen and so on.

### To end partway

Press [RETURN ⊖]. (Text is not added.)



- The maximum number of characters depends on the media.

### HOLD function

The HOLD function disables all controls on the remote control and the unit.

Press and hold [OK] and [RETURN ⊖] simultaneously until “X HOLD” appears on the front panel display.


### To cancel the HOLD function

Press and hold [OK] and [RETURN ⊖] simultaneously until “X HOLD” disappears.

# Basic Settings

You can change the unit's settings of Digital TV Tuning, Sound, Display, Connection, Network etc. in the menu.

- 1 Press [FUNCTION MENU].
- 2 Select "Basic Settings" in "Setup", then press [OK].

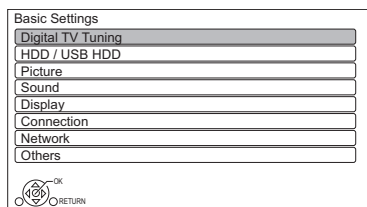

- 3 Select the menu, then press [OK].
- 4 Select the item, then make the setting.

## To return to the previous screen

Press [RETURN ⇨].

## Digital TV Tuning

### Favourites Edit

You can create four favourites of channels for making viewing and recording easier.

#### After editing as follows, save the Favourites.

Press [RETURN ⇨], then press [OK].

- To select the other Favourites list:  
Press the green button.
- To add channels to the Favourites list:  
Select the channel in the "All Channels" column, then press [OK]. Repeat this step.
- Yellow: Add all the available channels to the Favourites. (This function is available only when there are no channels in the "Favourites".)
- To change the order of the channels list:
  - 1 Select the channel in the "Favourites" column to move, then press the green button.
  - 2 Select the new position, then press the green button.

- To delete channels:  
Select the channel in the "Favourites" column, then press [OK].
- Yellow: Delete all channels.
- To change the name of the Favourites list:
  - 1 Press the red button in the "Favourites" column.
  - 2 Press [▲, ▼, ◀, ▶] to select a character, then press [OK].  
Repeat this step to enter other characters.
  - Red: Delete a character.
  - Blue: Delete all characters.
- 3 Press [RETURN ⇨].

## Auto Setup

You can restart the Auto Setup. (⇒ 11)

- 1 Select "Yes", then press [OK].
- 2 Select "Start Tuning", then press [OK].



- The timer recording programmes are cancelled.

## Settings for Channels

### Channel List

You can edit the channel list.

- To hide unwanted channels
  - 1 Select the channel.
  - 2 Press [OK].  
The check mark is removed.
  - Yellow: Reveal all channels.
- To move the channel number assignment
  - 1 Select the channel to move, then press the green button.
  - 2 Enter the channel number to reassign with the number buttons.
  - 3 Press [OK].
- To set the channel manually
  - 1 Press the red button.
  - 2 Refer to "Manual Tuning". (⇒ below)

### Manual Tuning

You can add new channels manually.

- This setting is displayed only when Auto Setup is run with "Search Mode" set to anything other than "Freeview Channels". (⇒ above)

## Update Channel List

You can update the channel list to the latest one.

- 1 Select the method and settings.
- 2 Select "Start Tuning", then press [OK].
- 3 Select the region you live in, then press [OK].

The unit starts searching for newly available satellite digital channels.

## Signal Condition

You can check the quality and strength of signals.

Press [CH ^ v] to select the channel.



- The channels you can receive are affected by weather conditions, seasons, time (day/night), region, length of the cable that is connected to the aerial, etc.
- When the signal is too strong (red bar), reduce the signal amplification at your aerial.
- When the signal is weak:
  - adjust the position and direction of the dish.
  - check that the current digital broadcast channel is correctly broadcasting.

## Antenna System

You can set the antenna system to use plural LNBs for receiving several satellites.

- One LNB
- Compatible with single LNB.
- Dual LNB
  - Up to 2 LNBs can be controlled.
- DiSEqC1.0
  - Up to 4 LNBs can be controlled.

After changing the setting, run Auto Setup.  
(⇒ 52)

## LNB Configuration

You can set LNB setting when necessary.

- If you do not know the connected satellite, select "No Satellite" in "Satellite". (Available satellite will be searched in Auto Setup.)
- If you select "Other satellite" in "Satellite", set "Test Transponder Frequency" manually.

## Dual Polarisation Mode

This setting should be changed in a case like when Freeview broadcast operation is changed.

Start Auto Setup again after this setting is changed. (⇒ 52)

## Child Lock ( Parental Rating )

You can restrict the viewing of channels unsuitable to children.

Set a ratings level to limit broadcast viewing and playback.

- PIN is required to change. (⇒ 14)

## Preferred Language

Select the language for multi broadcast.

If the selected language is not available, the original language will be selected.

## Audio Description

(When Audio Description is available in the programme)

When "Automatic" is selected, Audio Description will be set as default while watching. When timer recording and copying, Audio Description will be recorded.

## Freeview Guide

Turn on/off the Freeview Guide service.

- When "On" is selected, Freeview Guide services are available.

## Settings for Recording

### Timer Record Start Buffer

This function sets the timer recording to start earlier than the TV Guide time.

### Timer Record Stop Buffer

This function sets the timer recording to stop later than the TV Guide time.

### REWIND LIVE TV

Turn on/off the REWIND LIVE TV function.

### Aspect for Recording

Sets the aspect ratio when recording or copying except in DR mode.

- “HG”, “HX”, “HE”, “HL” or “HM” mode:  
If “Automatic” is selected, the programme will be recorded with the original aspect ratio.
- “XP”, “SP” or “LP” mode:  
If “Automatic” is selected, the programme will be recorded with the original aspect ratio at the time when recording started (including when recording started at a commercial, etc.).

## HDD Management

Press and hold [OK] for 3 seconds to show the following settings.

### Delete all programmes

Delete all recorded programmes and AVCHD on the built-in HDD.

- Delete does not work if one or more programmes are protected.

### Delete all videos ( MP4 / MKV )

Delete all videos (MP4/MKV) on the built-in HDD.

### Delete all photos

Delete all photos on the built-in HDD.

### Delete all music

Delete all Music on the built-in HDD.

## Format HDD

**Formatting deletes all contents on the built-in HDD, and they cannot be restored. Check carefully before proceeding.**

## Settings for USB HDD

### USB HDD Registration

Register the USB HDD. (⇒ 26)

### USB HDD Disconnection

This function puts the USB HDD in a state in which it can be safely disconnected. (⇒ 26)

### USB HDD Management

Press and hold [OK] for 3 seconds to show the following settings.

#### Delete all programmes

Delete all programmes on the USB HDD.

- Delete does not work if one or more programmes are protected.

#### Format USB HDD

**Formatting deletes all contents, and they cannot be restored. Check carefully before proceeding.**

### Cancellation of all USB HDD Registrations

This function cancels the registrations of all the USB HDDs registered on this unit.

Only do this if you are going to dispose of this unit.



- Before operation, perform “USB HDD Disconnection” (⇒ above) and remove the USB HDD.

## Picture

### Still Mode

Select the type of picture shown when you pause play.

- Field:

Select if jittering occurs when “Automatic” is selected. (The picture is coarser.)

- Frame:

Select if small text or fine patterns cannot be seen clearly when “Automatic” is selected. (The picture is clearer and finer.)

### Dynamic Range Compression

To lower the dynamic range for playback (e.g., at night).

- This does not work depending on broadcasts and recorded programmes.

### Downmix

Select the downmix system of multi-channel to 2-channels sound.

- Select "Surround encoded", when the connected equipment supports the virtual surround function.
- There is no effect on "Bitstream" via HDMI AV OUT and DIGITAL AUDIO OUT terminal.
- The audio will be output in "Stereo" in the following case.
  - AVCHD playback

### Bilingual Audio Selection

Select whether to record the audio type ("M1" or "M2") when performing Picture Quality Change (⇒ 36).

### Digital Audio Output

#### PCM Down Conversion

Select how to output audio with a sampling frequency of 96 kHz.

- On:  
Signals are converted to 48 kHz.  
(Choose when the connected equipment cannot process signals with a sampling frequency of 96 kHz.)
- Off:  
Signals are output as 96 kHz.
  - The signals will be converted to 48 kHz, when the signals have a sampling frequency of over 96 kHz.

#### Dolby Digital / Dolby Digital Plus

##### MPEG

Select the audio signal to output.

- Select "PCM" when the connected equipment cannot decode the respective audio format.
- Not making the proper settings may result in noise.

### System Volume Adjustment

If the volume of a programme being watched through this unit is different than the volume of a programme being watched directly on the TV, the gap may be reduced by switching this setting to Mode 1 or Mode 2. (This function works only while you are watching a programme or playing back a programme recorded in DR mode with this unit.)

### Audio Delay

Mis-sync between the video and audio is corrected by delaying the audio output.

### Audio Type for Digital Broadcast

If the programme has more than one track (Dolby Digital, etc.), you can set priorities.

- This setting will give effect in the following conditions.
  - The default setting when watching broadcasts.
  - The default setting when playing back the programme recorded in DR mode.
  - Picture Quality Change (⇒ 36)

## Display

### On-Screen Information

Select the time until the Channel Information screen (⇒ 14) disappears automatically.

### Front Panel Display

Changes the brightness of the front panel display.

### Screen Saver

This is to prevent image retention on the screen.

### Teletext

Select the Teletext (⇒ 14) display mode.

## Connection

### 3D Settings

#### 3D AVCHD Output

If 2D AVCHD video is recognised as 3D video and cannot be played back correctly, you may be able to play it by changing the setting.

#### 3D Playback Message

Set to display or hide the 3D viewing warning screen.

### VIERA Link

Select "Off" when you do not want to use VIERA Link.

### Aspect for 4:3 Video

To play a 4:3 content, set how to show pictures on a 16:9 TV.

- 4:3:  
Picture output expands left or right.
- 16:9:  
Picture is output as original aspect with side panels.

### TV System

Set in accordance with the TV System for the connected TV.

### HDMI Connection Settings

#### Video Format

You can only select items compatible with the connected equipment.

- If "Automatic" is selected, the output resolution best suited to the connected TV (4K, 1080p, 1080i, 720p or 576p/480p) is automatically selected.

#### Deep Colour Output

Set the output method to be used when this unit is connected to a TV that supports Deep Colour.

#### Audio Output

Select "Off" when connected to an amplifier/receiver with a DIGITAL AUDIO OUT terminal.

## Contents Type Flag

If "Automatic" is selected, the optimal method of playback depending on the TV (e.g. cinema) will automatically be selected (only when the TV supports Contents Type Flag).

## Network

### Easy Network Setting

Press [OK] to start Easy Network Setting. (⇒ 11)

### Network Settings

#### LAN Connection Mode

Select the LAN connection method.

- When not using wireless LAN (when turning it off), select "Wired".

#### Wireless Settings

This allows to set and check the connection settings of the Wireless router.

#### Search for wireless network

##### WPS (PUSH button)

##### WPS (PIN code)

##### Manual setting

Select a connection method to wireless access point.

### IP Address / DNS Settings

Check the connection of the network or set the IP address and DNS.

- To set the IP address and DNS
  - 1 Set "IP Address Auto-Assignment" and "DNS-IP Auto-Assignment" to "Off".
  - 2 Select the item, then press [OK] to show the respective setting.
- When the router's DHCP server function is not activated, check the numbers of other connected devices such as personal computers, then assign a number different from those of other devices for the "IP Address" and assign the same number for "Subnet Mask" and "Gateway Address".

### Proxy Server Settings

Check and set the connection to the Proxy server.

- Press [OK] to show the respective setting.



## Network Service Settings

---

### Second Screen Browsing

---

When this function is set to "On", you can enjoy the content you are viewing on a Network Service application of smartphone, etc. with the home network on the big screen of your TV.

### Lock

---

You can restrict using Network Service.

- PIN is required to change. (⇒ 14)

### Automatic Volume Control

---

Volume is adjusted automatically to the standard volume while using Network Service.

- Depending on contents, this function will not work.
- Select "Off" when the audio is warped.

### Notice

---

Displays the terms of service for the cloud services.

- You must agree to the terms of use for the Internet function and the privacy policy.

## TV Anytime Settings

---

You must register to a service to use this function. (⇒ 45)

### TV Anytime

---

When you control this unit from a smartphone or a tablet away from home, set this function to "On".

### Device ID

---

This is the device ID and device password required for registering to and using a service.

### Initialize Device Password

---

The device password for this unit is initialized.

- When you initialize the device password, you will not be able to use TV Anytime. To use the TV Anytime again, you must re-register to the service.

## Home Network Settings

---

You can set the DLNA (Server) function. (⇒ 46)

### Home Network function

---

You can switch between enable/disable of the DLNA (Server) and DMR (Media Renderer) function.

- If "On" is selected, the setting for "Quick Start" is fixed to "On". (⇒ 58)
- This cannot be set to "On" if the connection with the wireless broadband router is not encrypted in the wireless connection.

### Setting device name

---

It is also possible to change the name of this unit on the network.

### Conversion Setting for DLNA

---

- On:

When playing back on DLNA (Client) compatible equipment, this setting reduces the chance of break-ups and freezing of an image by lowering the image quality.



- When this is set to "On", switching the channel or starting playback will take longer.

### Resolution Setting for DLNA

---

When "Conversion Setting for DLNA" is set to "On", select the image quality.

### Registration type for remote devices

---

- Automatic:

All connected devices on the same network can access this unit.

- Manual:

Only registered devices can access this unit.

## Remote device list

- To register equipment manually
  - 1 Select the device name or the MAC Address for the device you want to register, then press [OK].
  - 2 Select "Yes", then press [OK].
- To deregister equipment
  - 1 Select the registered equipment, then press [OK].
  - 2 Select "Yes", then press [OK].



- This function cannot be enabled when "Automatic" is selected in "Registration type for remote devices". (⇒ 57)
- The maximum number of equipment that can be registered is 16.

## Others

### Standby Settings

#### Quick Start

- On:
 

It is possible to start quickly from standby mode.
- Off:
 

Power consumption in standby mode is minimised. (⇒ 67)

However, startup time from standby mode will be longer.
- Timer Setting for Quick Start:
 

"Quick Start" is activated when the set time comes.



- If you set "Home Network function" (⇒ 57) or "TV Anytime" (⇒ 57) to "On", the setting for "Quick Start" is fixed to "On".

#### Automatic Standby

Set the time to turn the unit to standby mode automatically.

When the unit is not operating, the unit will be turned to standby mode once the set time has passed.

#### Automatic Standby after OTR

- On:
 

This unit is turned to standby mode when it is not operated for approximately 5 minutes after completing "Automatic Stop" or "Recording Time" (⇒ 17).

#### Automatic Standby after Copy

- On:
 

This unit is turned to standby mode when it is not operated for approximately 5 minutes after completing copy (⇒ 39, Copying programmes with copying list).

#### Power Save for Network Standby

You can minimise power consumption in standby mode even when the "Quick Start" function is activated. (⇒ 67)

## Remote Control

Change the remote control code on the main unit and the remote control if you place other Panasonic products close together.

- Use “Set Code1”, the factory set code, under normal circumstances.
- 1 Select the code, then press [OK].
  - 2 While pressing [OK], press and hold the number button ([1] to [6]) for more than 5 seconds.
  - 3 Press and hold [OK] for more than 5 seconds.
  - 4 Press [OK].

## Clock


If the time is not set correctly, use the settings listed in the method below.

- Automatic  
This unit usually obtains time and date information from digital broadcasts.
- Daylight Saving Time  
Select time offset from the standard time for Summer Time.
  - If there is a gap between displayed time and actual time, set this function.
- Manual Setting
  - 1 Select “Off” or “Automatic”, then press [OK].
  - 2 Select the item you want to change.
  - 3 Change the setting.
  - 4 Press [OK] when you have finished the settings.

## PIN Entry

You can set/change the PIN for parental control.

- 1 Enter your 4-digit PIN with the number buttons.
  - 2 Enter the new 4-digit PIN with the number buttons.
    - **Make a note of PIN in case you forget it.**
- e.g.,

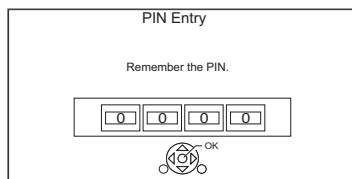

- 3 Press [OK].

## System Update

### Software Update in Standby

When you set this unit to standby mode, software (firmware) updates (⇒ 50) are downloaded automatically at the time you have specified.

### Software Update Now ( Broadcast )

Refer to “Software (Firmware) Update”.  
(⇒ 50)

### Software Update Now ( Internet )

Refer to “Software (Firmware) Update”.  
(⇒ 50)

### Software Licence

Information about the software licence is displayed.

## System Information

Display Software (firmware) version and Wireless Module version (When using wireless connection only) of this unit.

## Initialize

### Shipping Condition

All the settings except for some settings return to the factory preset.

- The timer recording programmes are also cancelled.
- The device password is also initialized.  
(⇒ 57)

### Default Settings

All the settings other than the tuning settings, clock settings, rating PIN, remote control code, device password, etc. return to the factory presets.

# Troubleshooting guide

**Before requesting service, make the following checks. If the problem still persists, consult your dealer for instructions.**

**Updating to the latest software (firmware) may solve the problem. (⇒ 50)**

## The followings do not indicate a problem with this unit:

- HDD rotating sounds.
- Poor reception due to atmospheric conditions.
- When you switch the unit on or to standby mode, there may be an unexpected sound.

## General operation

### The unit does not work.

- Check the connections. (⇒ 9)
- One of the unit's safety devices may have been activated.

Reset the unit as follows:

 
- 1 Press [⏻/I] on the main unit to switch the unit to standby.
  - If the unit does not switch to standby, press [⏻/I] on the main unit for about 3 seconds. The unit is forcibly switched to standby. Alternatively, disconnect the AC mains lead, wait one minute, then reconnect it.
- 2 Press [⏻/I] on the main unit to switch it on. If the unit still cannot be operated, consult the dealer.

### The remote control does not work.

- The remote control and main unit are using different codes. Change the code on the remote control.

"Remote Control □" appears on the right side of the screen.

("□" stands for a number.)



Front panel display

Press and hold [OK] and the indicated number button at the same time for more than 5 seconds. (⇒ 59)

### Startup is slow.

- Startup takes time in the following situations:
  - The clock is not set.
  - Immediately after a power failure or the AC mains lead is connected.
  - When the "Quick Start" is not activated. (⇒ 58)

## Displays

### "0:00" is flashing on the front panel display.

- Set the clock. (⇒ 59)

### The clock does not display on the unit when switched to standby.

- The clock does not display when "Quick Start" is not activated. (⇒ 58)

## TV screen and video

### Screen size is wrong.

- Check the "Aspect for 4:3 Video". (⇒ 56)
- Adjust the aspect ratio setting on TV.
- Check "Aspect for Recording" before recording or picture quality change. (⇒ 54)

### The black screen appears on the TV.

- This phenomenon may occur, depending on the TV setting, when "Quick Start" is activated. Depending on the TV, this phenomenon may be prevented by reconnecting to a different HDMI input terminal.

### The screen changes automatically.

- If "Screen Saver" is set to "On", the screen saver function will be activated when there is no operation for 5 minutes or more. (⇒ 55)

### There is a lot of image lag when playing video.

- Set to "0" (zero) all items in the "Noise Reduction". (⇒ 34)
- Set "Audio Delay". (⇒ 55)

### **The images do not appear on the TV.**

#### **The picture is distorted during play, or video is not played correctly.**

- Check the connections. (⇒ 9)
- Check the settings of the connected TV, etc.
- An incorrect resolution is selected in "Video Format". (⇒ 56) Reset the setting as follows:
  - 1 While the unit is on, press and hold [OK], the yellow button and the blue button at the same time for more than 5 seconds.
    - "00 RET" is displayed on the front panel display.
  - 2 Repeatedly press [▶] (right) until "04 PRG" is displayed on the front panel display.
  - 3 Press and hold [OK] for at least 3 seconds. Set the item again.
- The picture may be distorted or a black screen may appear between scenes recorded with different aspect ratios.

### **3D video is not output correctly.**

- 3D video may be output correctly by changing the following setting:
  - "Signal Format" (⇒ 32, 3D settings during playback)
- Check the settings of the connected TV.
- When a non-3D compatible amplifier/receiver is connected between this unit and a TV, 3D video is not output. (⇒ 10)
- When "Audio Output" is set to "Off", 3D video may not be output correctly. (⇒ 56)

## **Sound**

### **No sound.**

#### **Distorted sound.**

- Check the connections. (⇒ 9)
- Check the settings of the connected TV, etc.
- Press [AUDIO] to select the audio. (⇒ 15, 31)
- To output audio from a device connected with an HDMI cable, set "Audio Output" to "On". (⇒ 56)

### **Cannot change audio channel.**

- You cannot change the audio channel if "Digital Audio Output" is set to "Bitstream". (⇒ 55)

## **Recording, timer recording and copying**

### **Cannot record.**

#### **Cannot copy.**

- Some broadcasts are copyright protected.

### **Timer recording does not work properly.**

- When  is displayed on the screen. (⇒ 22)

### **Auto Renewal Recording does not work properly.**

- The programme will not be overwritten in the following cases:
  - the programme is protected
  - any programme is being played back or copied
  - a screen such as Video Menu is displayedInstead, the programme will be saved as a separate programme and that will be overwritten.

### **A part or whole of a recorded programme has been lost.**

- If there is a power failure or the AC mains lead is disconnected from the household mains socket while recording or editing, the programme may be lost or the HDD may become unusable. We cannot offer any guarantee regarding lost programmes.

### **Keyword Recording does not work properly.**

- The unit may not record a Keyword Recording programme when part of its broadcast time overlaps with that of another timer recording programme. When this occurs, the Keyword Recording does not start even after the timer recording has finished.
- The unit cannot run a search correctly if Search Conditions are not appropriate. Revise the Search Conditions. (⇒ 24)

## Play

### **You have forgotten your rating PIN.**

- The rating level returns to the factory preset.
  - 1 When the unit is on and no media is loaded or inserted, press and hold [OK] and the yellow and blue buttons simultaneously for more than 5 seconds.
    - “00 RET” is displayed on the front panel display.
  - 2 Repeatedly press [▶] (right) until “03 VL” is displayed on the front panel display.
  - 3 Press [OK].
    - “INIT” is displayed on the front panel display.

### **Image for the Quick View is not smooth.**

- Image may not be played back smoothly in case of high definition contents.

## Edit

### **Cannot edit.**

- You may not be able to edit on the HDD if there is no available space. Delete any unwanted programmes to create empty space. (⇒ 35)

## Photo

### **Photos do not play back normally.**

- The images that were edited on the PC, such as Progressive JPEG, etc., may not play back. (⇒ 65)

## USB

### **This unit does not recognise the USB device correctly.**

- If inserted during playback the USB device may not be recognised by this unit. Disconnect and reconnect the USB device. If it still does not recognise the connection, switch the unit to standby mode and turn it on again.
- USB devices connected using a USB extension cable other than a dedicated one or a USB hub may not be recognised by this unit.
- Two USB devices cannot be used simultaneously. If you insert a USB device while watching TV, the USB device detection screen is displayed. Use this screen to select the device you want to use.

## TV Guide

### **The TV Guide information is not displayed properly.**

- Set the clock correctly. (⇒ 59, Clock)
- There was a programme change, or TV Guide information from a broadcast station was possibly not correctly transmitted.
- If signal quality is bad, the TV Guide system may not be able to receive any data.
- It may take time until the TV Guide screen is displayed correctly. Wait for about a day.

## Broadcast

### **The channel which was once selectable cannot be selected.**

- Reveal the channel on the channel list. (⇒ 52)

### **Digital broadcasts cannot be received.**

- The dish may not be pointing in the direction of the satellite. If problem persists consult your local TV aerial installer.

### **Picture very infrequently breaks up on some or all channels.**

- Electrical atmospheric interference caused by bad weather may cause pictures to break up and audio to mute or distort momentarily.

## Network

### **You cannot access this unit from DLNA compatible equipment on the network.**

- Check the network connection and the network settings. (⇒ 10, 11)
- It may not be possible to connect depending on the types of the equipment or the status of the equipment.

### **When using this unit as a server, video frames are dropped.**

- Change the following settings:
  - Conversion Setting for DLNA (⇒ 57)
  - Resolution Setting for DLNA (⇒ 57)

**You cannot play contents properly from DLNA compatible equipment on the network.**

- There may be some video that cannot be played back on DLNA compatible equipment depending on the equipment.
- Following programmes may not be played back:
  - A programme with access restriction
  - A programme with incompatible format
- Playback via DLNA compatible equipment may not be performed when this unit is in the following conditions:
  - While simultaneously performing Copy (Keep Picture Quality) and recording
  - While displaying the Basic Settings menu
  - While executing functions using a network, such as Network Service
- If the DLNA compatible equipment is not capable of outputting HE-AAC audio format, etc., sound may not be played back.

**When using Wireless LAN connection, video from the DLNA Certified media server is not played back or video frames are dropped during playback.**

- Use 802.11n (2.4 GHz or 5 GHz) Wireless router. Simultaneous use with a microwave, cordless telephone etc. at 2.4 GHz may result in connection interruptions or other problems.
- On the "Wireless Settings" screen (⇒ 56), the continuous lighting of at least four "Reception" indicators is the target for a stable connection. If three or fewer indicators are lit or the connection is being interrupted, change the position or angle of your Wireless router. If there is no improvement, connect to a wired network and perform the "Easy Network Setting" (⇒ 11, 56) again.

**Reset**

**To return all the settings to the factory preset**  
Perform "Shipping Condition" or "Default Settings". (⇒ 59)

**Messages on the front panel display**

The following messages or service numbers appear on the front panel display when something unusual is detected.

**CONV**  
The picture quality of the selected programme stored in the USB HDD is being changed.  
Do not disconnect the USB HDD from this unit.

**GUIDE**  
TV Guide data is being downloaded.

**PLEASE WAIT**

- Displayed when the unit is started and is switched to standby mode.
- There was a power failure or the AC plug was disconnected while the unit was on. The unit is carrying out its recovery process. Wait until the message disappears.

**PROG FULL**

There are already 32 timer programmes. Delete unnecessary timer programmes. (⇒ 21)

**REMOVE**

The USB device is drawing too much power. Remove the USB device.

**SET □ ("□" stands for a number.)**

The remote control and main unit are using different codes. Change the code on the remote control. (⇒ 60)

**START**

Update of the software (firmware) is started. You cannot operate the unit until the update is complete. (⇒ 50)

**SW-DL**

Software (firmware) is downloading.  
Download will stop when the unit is turned on, or the timer recording starts. (⇒ 50)  
When "FINISH" is displayed, update of the software (firmware) has completed.

**UNSUPPORT**

The media is not supported.

**UPD □□ ("□" stands for a number.)**

The software (firmware) is being updated. You cannot operate the unit until the update is complete. (⇒ 50)

**U50**

An error has occurred in the antenna's power supply. Check to see if the antenna's cable core and braided wire shield are in contact with each other.

**U59**

The unit is hot. The unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears. Install or place this unit with good ventilation.

**U61**

A malfunction has occurred. The unit is trying to restore to the normal operation. Once the message disappears you can use the unit again. If it remains displayed, consult the dealer.

**U76**

HDMI cannot be output because it is connected to a model that does not support copyright protection.

**U99**

The unit fails to operate properly. Press [⏻/I] on the main unit to switch the unit to standby mode. Now press [⏻/I] on the main unit again to turn the unit on.

**X HOLD**







The HOLD function is activated. (⇒ 51)

# HDD and media information

For more details, refer also to the specifications. (⇒ 67)

## Recordable/playable contents

(-: Impossible)

Media type	Standard symbol		Recordable contents	Playable contents
Built-in hard disk drive (HDD)			<ul style="list-style-type: none"><li>• Video</li><li>• AVCHD/AVCHD 3D</li><li>• MKV</li><li>• MP4</li><li>• MPEG2</li><li>• JPEG</li><li>• MPO (3D photo)</li></ul>	<ul style="list-style-type: none"><li>• AAC</li><li>• ALAC</li><li>• DSD</li><li>• FLAC</li><li>• MP3</li><li>• WAV</li><li>• WMA</li></ul>
External hard disk drive (USB HDD) (⇒ 66)			<div>• Video<sup>※1</sup></div> <div>-</div>	<div>• AVCHD/AVCHD 3D<sup>※2, 3</sup></div> <div><ul style="list-style-type: none"><li>• AAC</li><li>• ALAC</li><li>• DSD</li><li>• FLAC</li><li>• MP3</li><li>• WAV</li><li>• WMA</li></ul></div>
USB memory			<div>-</div>	<div>• AVCHD/AVCHD 3D<sup>※2, 3</sup></div> <div><ul style="list-style-type: none"><li>• AAC</li><li>• ALAC</li><li>• DSD</li><li>• FLAC</li><li>• MP3</li><li>• WAV</li><li>• WMA</li></ul></div>

- ※1 It cannot be recorded directly. (Only compatible with copying from the built-in HDD)
- ※2 Recorded with AVCHD format compatible devices (Panasonic video camera, etc.). It may not be able to play back depending on the device.
- ※3 It cannot be played back directly from the USB HDD or USB memory. Playback is possible by copying to the built-in HDD. (⇒ 49)



- With certain recording states and folder structures, the play order may differ or playback may not be possible.
- It may not be possible to play the above media in some cases due to the type of media, the condition of the recording, the recording method, and how the files were created.



## Information about contents

### ■ Broadcast Recordings

Numbers of programmes that can be recorded:

Media	Maximum programmes
HDD	3000

- Maximum numbers of programmes are including recordings of HD CAMCORDER.

### ■ HD CAMCORDER Recordings

MPEG-4 AVC/H.264 (based on AVCHD)

Numbers of programmes that can be recorded:

Media	Maximum programmes
HDD	3000

- Maximum numbers of programmes are including recordings of Broadcast.

### ■ Photo files

Compatible pixels:

Between 34×34 and 8192×8192 pixels

Sub sampling: 4:2:2, 4:2:0

(Motion JPEG is not supported.)

Maximum numbers of contents:

Media	Folders	Files
HDD	—	20000
USB device	500	10000

### ■ Video files/Audio files

Numbers of contents that can be copied to internal HDD:

Contents	Maximum numbers of folders and files
Video*	20000
Audio	20000

- \* Bit rate up to 100 Mbps/resolution up to 3840×2160 25p/30p, 4096×2160 24p. (MP4 only)

USB device:

- A maximum of 1000 files can be copied to the HDD at once.
- We recommend that you limit the depth of folder trees to about five levels.

## About extension of files

Contents	Example of file extension
MKV	“.mkv”
MKV (Subtitle text files)	“.srt” “.sub” “.txt”
MP4	“.mp4” “.mov”
MPEG2	“.mpg” “.mpeg” “.m2ts” “.mts” “.ts”
JPEG	“.jpg”
MPO	“.mpo”
AAC	“.m4a”
ALAC	“.m4a”
DSD	“.dsf” “.dff”
FLAC	“.flac”
MP3	“.mp3”
WAV	“.wav”
WMA	“.wma”



- The video file and subtitle text files are inside the same folder, and the file names are the same except for the file extensions.
- Some files may not be played back even if they have these extensions.

## Recording mode (Picture Quality)

Picture Quality	DR	HG/HX/HE/HL/HM	XP/SP/LP
<b>Feature</b>	Programmes can be recorded in their original quality.	Recording can be done with reduced recording volume in High definition (HD) quality <sup>*1</sup> .	Recording can be done with reduced recording volume in Standard definition (SD) quality <sup>*1</sup> .
<b>Multiple audio, Audio Description</b>	Record all multiple audio	Record only one audio <sup>*2</sup>	
<b>Subtitles</b>	Can be recorded	Can be recorded (only one subtitle) <sup>*3</sup>	
<b>Surround audio</b>	Surround audio as the broadcast	Stereo audio	

<sup>\*1</sup> The picture quality for satellite broadcasts is SD. (As of December 2017) The SD quality programme cannot be changed to HD quality.

<sup>\*2</sup> You cannot select during play whether it activates or deactivates.

<sup>\*3</sup> You cannot select during play whether it appears or disappears.

### Approximate recording times

Refer to "Recording modes (picture quality) and approximate recording times". (⇒ 67)

## Notes

### Notes for the USB device

You can use an external HDD (USB HDD) in the following two ways. (A single HDD cannot handle those two ways simultaneously.)

#### For recorded programmes

Move recorded programmes on the built-in HDD to a USB HDD to save the space of the built-in HDD.

- The USB HDD must first be registered on this unit. (⇒ 26)
- USB HDDs with a capacity smaller than 160 GB or greater than 3 TB cannot be used.
- Do not connect additional HDDs using a USB hub.
- For details about connection method, refer to the instructions supplied with the USB HDD.

#### For data files

Playing back MP4, JPEG, MP3, etc. in a USB device with this unit.

- The USB device must be formatted in FAT12, FAT16, FAT32 or NTFS file system.
- The USB device over 2 TB is not usable.



- This unit supports USB 2.0 High Speed.
- This unit can use USB 3.0 devices as USB 2.0 devices.
- This unit does not recognise USB HDDs other than those in which the size of one sector is 512-bytes or 4096-bytes. (For details, consult the dealer of your USB HDD.)
- This unit supports USB mass storage device class.
- This unit does not guarantee connection with all USB devices.

# Specifications

Specifications are subject to change without notice.

■ **General**

Dimensions:	430 mm (W) 41.5 mm (H) (including the projecting parts) 193 mm (D)
-------------	-----------------------------------------------------------------------------

Mass:	Approx. 1.8 kg
-------	----------------

Power supply:	AC 220 V to 240 V, 50 Hz
---------------	--------------------------

Power consumption:	Approx. 36 W
--------------------	--------------

Power consumption in standby mode:	Approx. 0.2 W (Quick Start: Off)
------------------------------------	----------------------------------

Operating temperature:	5 °C to 40 °C
------------------------	---------------

Operating humidity range:	10 % to 80 % RH (no condensation)
---------------------------	--------------------------------------

■ **TV system**

Tuner System:	DVB-S/DVB-S2
---------------	--------------

Country:	New Zealand
----------	-------------

Antenna receive frequency:	950 MHz to 2150 MHz
----------------------------	---------------------

Input impedance:	Nominal 75 Ω
------------------	--------------

Demodulation:	QPSK, 8PSK
---------------	------------

LNB input:	F shape terminal female, power supply 13 V/18 V max. 500 mA
------------	----------------------------------------------------------------

DiSEqC:	Version 1.0 or Tone burst A/B, 22 kHz 0.65 Vp-p
---------	----------------------------------------------------

■ **Output terminal**

Digital audio output (coaxial):	1 pc.
---------------------------------	-------

HDMI output (19 pin type A):	1 pc.
------------------------------	-------

■ **Internal HDD capacity**

1 TB

■ **Other terminal**

USB Port (Type A):	USB2.0 2 pcs.
--------------------	------------------

LAN (Ethernet) Port:	1 pc. 10BASE-T/100BASE-TX
----------------------	------------------------------

■ **Wireless LAN**

Standard compliance:	IEEE802.11a/b/g/n
----------------------	-------------------

Frequency range:	2.4 GHz / 5 GHz band
------------------	----------------------

Security:	WPA™/WPA2™ (Encryption type: TKIP/AES, Authentication type: PSK)
WEP	(64 bit/128 bit)

**Recording modes (picture quality) and approximate recording times**

Depending on the content being recorded, the recording time may become shorter than indicated.

Recording Mode (picture quality)	HDD (1 TB)
DR (SD quality)	423 hours
HG	157 hours
HX	235 hours
HE	353 hours
HL	472 hours
HM	684 hours
XP	215 hours
SP	431 hours
LP	862 hours

- Recording time of DR mode may vary depending on the bit rate of broadcasting:
  - Standard Definition (SD) quality: estimated bit rate is 5 Mbps

**Audio information**

The audio output differs depending on which terminals (HDMI AV OUT/DIGITAL AUDIO OUT) are connected to the amplifier/receiver, and the setting on this unit. (⇒ 55, Digital Audio Output)

- The maximum possible number of Dolby sound is 2ch in "PCM" mode.

**About copyright**

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. Panasonic has no authority to and does not grant you that permission and explicitly disclaims any right, ability or intention to obtain such permission on your behalf. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights in the content you wish to record or playback.

**Personal information handling**

To provide functions and services of this unit, a device ID, device password and usage history information are stored and managed securely in an appropriate security environment of Panasonic.

Please note that usage history and other information may be collected for purposes such as improving products and services in such a way that individuals cannot be identified.

**Indemnity concerning recorded content**

Panasonic does not accept any responsibility for damages directly or indirectly due to any type of problems that result in loss of recording or edited content (data), and does not guarantee any content if recording or editing does not work properly. Likewise, the above also applies in a case where any type of repair is made to the unit (including any other non-HDD related component).

**About the viewing of broadcasts**

- It is not possible to view HEVC content.
- Functions such as Guide Link and Keyword Recording may not work depending on the programme.

**About data service (Catch Up TV)**

- On-screen instructions may not correspond to the remote control buttons.
- It may take some time to show the data service.
- Some functions of the data service may be deactivated during recording.
- Some features of websites or content of the service may not be available.

**About Network Service**

- Some features of websites or content of the service may not be available.
- This unit does not support 4K streaming.
- If using slow Internet connection, the video may not be displayed correctly. A high-speed Internet service with a speed of at least 6 Mbps is recommended.
- The services through Network Service are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- A separate subscription is required to watch Netflix.

**About TV Anytime**

- Please note that a regular maintenance or unexpected trouble may interrupt the service, and that the service content may be changed or revoked and operation menu screens may be changed with or without a prior notice.
- We recommend that you use a high-speed connection, such as LTE or Wi-Fi®.
- TV Anytime services may be discontinued temporarily or permanently without notice.

# Licenses


"AVCHD", "AVCHD 3D", "AVCHD Progressive" and "AVCHD 3D/Progressive" are trademarks of Panasonic Holdings Corporation and Sony Corporation.

DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

DVB and the DVB logos are trademarks of the DVB Project.

DiSEqC™ is a trademark of EUTELSAT.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.


The logo consists of a stylized 'D' symbol above the words 'DOLBY AUDIO' in a sans-serif font.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

This product is licensed under the AVC patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC Video.  
No license is granted or shall be implied for any other use.  
Additional information may be obtained from MPEG LA, L.L.C.  
See <http://www.mpegla.com>

This product is licensed under the VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the VC-1 Standard ("VC-1 Video") and/or (ii) decode VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide VC-1 video.  
No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.  
See <http://www.mpegla.com>

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.  
The Wi-Fi Protected Setup™ Logo is a certification mark of Wi-Fi Alliance®.

The image shows two logos side-by-side. On the left is the 'Wi-Fi CERTIFIED' logo, which includes the 'Wi-Fi' text in a rounded rectangle and the word 'CERTIFIED' below it. On the right is the 'Wi-Fi Protected Setup' logo, which features a circular arrow icon and the text 'Wi-Fi PROTECTED SETUP'.

"Wi-Fi®", "Miracast®", and "Wi-Fi Direct®" are registered trademarks of Wi-Fi Alliance®.  
"Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Windows is a trademark or a registered trademark of Microsoft Corporation in the United States and other countries.
Android is a trademark of Google Inc.
<p>This product incorporates the following software:</p> <ul style="list-style-type: none"> <li>(1) the software developed independently by or for Panasonic Entertainment &amp; Communication Co., Ltd.,</li> <li>(2) the software owned by third party and licensed to Panasonic Entertainment &amp; Communication Co., Ltd.,</li> <li>(3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),</li> <li>(4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or</li> <li>(5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.</li> </ul> <p>The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the Basic Settings menu.</p> <p>At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.  Contact Information: <a href="mailto:oss-cd-request@gg.jp.panasonic.com">oss-cd-request@gg.jp.panasonic.com</a></p> <p>The source code and the copyright notice are also available for free in our website below.  <a href="https://panasonic.net/cns/oss/">https://panasonic.net/cns/oss/</a></p>
<p>MS/PlayReady/Final Product Labeling</p> <p>This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.</p> <p>MS/PlayReady/End User Notices</p> <p>Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content.</p> <p>Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.</p>
<p>Vorbis, FLAC, WPA Supplicant</p> <p>The software licenses are displayed when "Software Licence" in the Basic Settings menu is selected. (⇒ 59)</p>

# Index

## 1 2 3...

**4K Networking** ..... 32

## A

**Audio** ..... 15, 31, 67

**Audio Description (AD)** ..... 15, 33

**Auto Setup** ..... 11, 52

**AVCHD** ..... 27, 30, 49

## B

**Basic Settings** ..... 52

## C

**Catch Up TV** ..... 15

**Channel Information** ..... 14

**Channel List** ..... 16, 52

**Chapter** ..... 28, 37

**Child Lock** ..... 53

HOLD function ..... 51

**Clock** ..... 59

**Connection** ..... 9

Network ..... 10

**Copy** ..... 38

HD Video (AVCHD) ..... 49

## D

### Delete

Music ..... 44, 54

Photo ..... 42, 54

Video ..... 35, 54

## E

**Easy setting** ..... 11

**Entering text** ..... 51

## F

**Favourites** ..... 52

### Format

HDD ..... 54

USB HDD ..... 54

**FUNCTION MENU** ..... 23

## H

### HDD

Format ..... 54

Media information ..... 64

**Home Networking (DLNA)** ..... 46, 57

Client ..... 46

Media Renderer ..... 47

Server ..... 46

## K

**Keyword Recording** ..... 24, 29

## M

**Manual Tuning** ..... 52

**Media Renderer** ..... 47

**Menu screen** ..... 30

**Miracast®** ..... 48

**MKV** ..... 30

**MP4** ..... 30

**Music** ..... 43

## N

### Network

Connection ..... 10

Easy Network Setting ..... 11, 56

Home Networking (DLNA) ..... 46, 57

Miracast® ..... 48

Network Service ..... 45

Wi-Fi Direct® ..... 48

## P

**PAUSE LIVE TV** ..... 16

**Photo** ..... 40

**Picture Quality** ..... 36, 66, 67

**PIN** ..... 14, 59

**Playback menu** ..... 33

### Protection

Video ..... 35

## Q

**Quick Start** ..... 58

## R

**Recording** ..... 17

Timer recording ..... 19

**Recording mode (picture quality)** ..... 36, 66, 67

**Recording time** ..... 67

**Remote control** ..... 8

HOLD function ..... 51

Remote control code ..... 59

TV operation ..... 13

**Reset** ..... 59, 62, 63

**REWIND LIVE TV** ..... 16, 54

## S

### Setting

Auto Setup ..... 11, 52

Easy setting ..... 11

**Slideshow** ..... 41

**Software (Firmware) Update** ..... 50

## T

**Timer recording** ..... 19

**Troubleshooting guide** ..... 60

Messages ..... 63

### Tuning

Channel List ..... 52

Manual Tuning ..... 52

Parental Rating ..... 53

Signal Condition ..... 53

**TV Anytime** ..... 45

### TV Guide

Operation ..... 15

Timer recording ..... 19

**TV System** ..... 56

## U

### USB HDD (External HDD)

Cancellation of all USB HDD

Registrations ..... 54

Disconnection ..... 26, 54

Format ..... 54

Media information ..... 64, 66

Registration ..... 26, 54

### USB memories

Media information ..... 64, 66

## V

### Video

AVCHD ..... 27, 30

Copy ..... 38

Delete ..... 35

MKV ..... 30

Playback ..... 27, 30

Recording ..... 17

Video Menu ..... 27

## W

Wi-Fi Direct® ..... 48

Panasonic Entertainment & Communication Co., Ltd.

<https://www.panasonic.com>

En

TQBS0165-1  
F1217SR1072

© Panasonic Entertainment & Communication Co., Ltd. 2018-2022