

EDITED

Maintenance and Cleaning

English

Do not use a steam cleaner or a high-pressure steam cleaner to clean the appliance.

External surfaces

Clean the surfaces with non-abrasive detergents and a soft cloth. Apply the detergent on the cloth and wipe off the dirt; then, rinse with water. Do not use abrasive cleaners, sharp objects or steel wool, as these will scratch the appliance.

Door handle

Door handle should be cleaned with non-abrasive detergent. Apply the detergent on a wet cloth and clean the surface; then, rinse the surface with water. Do not apply the cleaner directly on the aluminium surface. Do not use abrasive cleaners or abrasive sponges.

Stainless steel front panels

Clean the surface with a mild cleaner and a soft sponge that will not scratch the material. Do not use abrasive or solvent-based cleaners.



WARNING

Before performing cleaning and maintenance tasks, use isolating switch to disconnect the power supply and wait for the appliance to cool down.

Children should not clean the appliance or perform maintenance tasks.

The surfaces should never come into contact with oven cleaning sprays, as these may cause permanent damage.

ORIGINAL

Maintenance and Cleaning

English

Do not use a steam cleaner or a high-pressure steam cleaner to clean the appliance.

External surfaces

Clean the surfaces with non-abrasive detergents and a soft cloth. Apply the detergent on the cloth and wipe off the dirt; then, rinse with water. Do not use abrasive cleaners, sharp objects or steel wool, as these will scratch the appliance.

Door handle

Door handle should be cleaned with non-abrasive detergent. Apply the detergent on a wet cloth and clean the surface; then, rinse the surface with water. Do not apply the cleaner directly on the aluminium surface. Do not use abrasive cleaners or abrasive sponges.

Stainless steel front panels

Clean the surface with a mild cleaner and a soft sponge that will not scratch the material. Do not use abrasive or solvent-based cleaners.



WARNING

Before performing cleaning and maintenance tasks, unplug the appliance from the power supply and wait for the appliance to cool down.

Children should not clean the appliance or perform maintenance tasks.

The surfaces should never come into contact with oven cleaning sprays, as these may cause permanent damage.

Maintenance and Cleaning

Replacing the bulb

 
 
The bulb is a consumable and therefore not covered by warranty. Before changing the bulb, remove the trays, the wire shelf, and the guides.



WARNING

Before replacing the light bulb, make sure the appliance has been disconnected from the mains power via the isolating switch, in order to prevent an electric shock.


(Halogen lamp: G9, 230 V, 25 W)

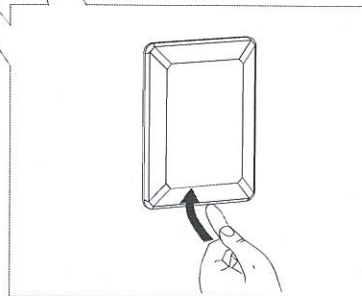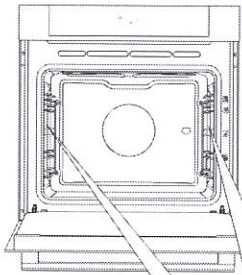

 Unplug the appliance from the power supply and wait for the appliance to cool down.

1 Use a flat screwdriver to release the bulb cover and remove it.

 NOTE: Take care not to damage the enamel.

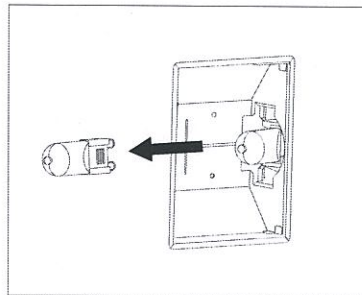

2 Remove the halogen bulb.

ORIGINAL

Maintenance and Cleaning

Replacing the bulb

 
 
The bulb is a consumable and therefore not covered by warranty. Before changing the bulb, remove the trays, the wire shelf, and the guides.



WARNING

Before replacing the light bulb, make sure the appliance has been disconnected from the mains power, in order to prevent an electric shock.


(Halogen lamp: G9, 230 V, 25 W)

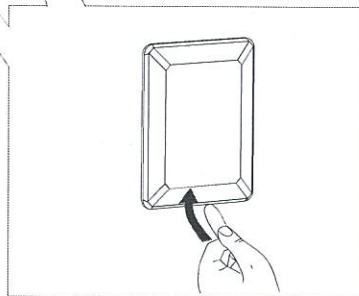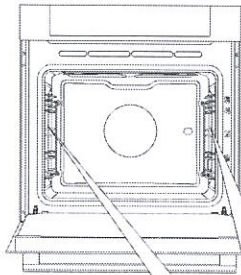

 Unplug the appliance from the power supply and wait for the appliance to cool down.

1 Use a flat screwdriver to release the bulb cover and remove it.

 NOTE: Take care not to damage the enamel.

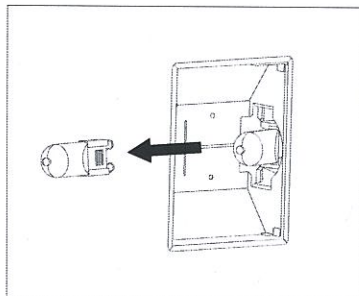

2 Remove the halogen bulb.

EDITED

Installation Instructions

Installation and Connection

Please fully observe the following safety precautions.



IMPORTANT

- Unpack the appliance, remove all packing material, and examine for any damage. If the appliance is damaged DO NOT install and notify your dealer immediately.
- Install the appliance in accordance with the Installation Instructions. Otherwise, the performance of the appliance may be affected.
- After installation perform a test run and explain to the customer how to operate the appliance advising location of isolating switch.
- Correct installation is the responsibility of the installer. Any malfunction or accident resulting from the failure to follow the Installation Instructions is not covered by the warranty.
- The rating plate indicating the basic information of the appliance is attached to the inside of the oven and is visible when you open the door. Do not remove.

Safety Instructions

- When the appliance is installed with another suitable appliance, it must be fitted above a fixed shelf in the housing unit that is able to support the weight of both appliances.
- When built in directly above a warming drawer, an interim shelf between the two appliances is not necessary.
- The appliance must be installed in a position where it can be fully opened and the contents can be clearly viewed. This is to avoid burns and other injuries.

ORIGINAL

Installation Instructions

Installation and Connection

Please fully observe the following safety precautions.



IMPORTANT

- Unpack the appliance, remove all packing material, and examine for any damage. If the appliance is damaged DO NOT install and notify your dealer immediately.
- Install the appliance in accordance with the Installation Instructions. Otherwise, the performance of the appliance may be affected.
- After installation perform a test run and explain to the customer how to operate the appliance.
- Correct installation is the responsibility of the installer. Any malfunction or accident resulting from the failure to follow the Installation Instructions is not covered by the warranty.
- The rating plate indicating the basic information of the appliance is attached to the inside of the oven and is visible when you open the door. Do not remove.

Safety Instructions

- When the appliance is installed with another suitable appliance, it must be fitted above a fixed shelf in the housing unit that is able to support the weight of both appliances.
- When built in directly above a warming drawer, an interim shelf between the two appliances is not necessary.
- The appliance must be installed in a position where it can be fully opened and the contents can be clearly viewed. This is to avoid burns and other injuries.

EDITED

Installing the Appliance



WARNING

Electrical work must be performed by a legally qualified electrician.

Electrical connection

- Before connection, check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the appliance. This data must correspond in order to avoid the risk of damage to the appliance.
- This appliance is not fitted with other means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection in under overvoltage category III conditions. Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules and regulations.
- Single-phase AC 200-240, 50 Hz electrical system must be used.
- Check the local utilities for electrical codes applied in the area. Failure to wire the appliance according to governing rules may result in a hazardous condition.
- After installation show the customer where the isolating switch for the appliance is located. This must be easily accessible with the installed appliance.

Installation

- Veneer or other finish of the furniture the appliance is being built into should be processed with heat-resistant glue (100°C); otherwise, high temperatures may cause them to deform.
- There must be no rear wall fitted to appliance housing.
- There must be a gap of at least 40 mm between the wall and the back of the unit to enable adequate air circulation.
- Level the piece of furniture the appliance was built into with a spirit level.
- The piece of kitchen furniture the appliance is built into must be secured against movement, e.g. Attached to the adjacent pieces of kitchen furniture.
- Align the appliance flush with the units and screw it in place.
- When attaching the appliance, make sure the screws are not fastened too strongly as this may damage the furniture or the appliance enamel coating.
- The ventilation slots and air intake points must not be covered. To ensure that they remain uncovered also observe the installation instructions of any appliance installed with this oven.



NOTE

- Ensure that the connector lead does not become trapped or bent.
- After installation the connector lead must not be in contact with the back or the base of the appliance.

ORIGINAL

Installing the Appliance

Electrical connection

- Before connection, check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the appliance. This data must correspond in order to avoid the risk of damage to the appliance.
- Check that the domestic power supply guarantees adequate earthing.
- Once installed, it should be easy to isolate the appliance from the electricity supply by pulling out the plug or operating a circuit breaker.
- The appliance must only be connected with the power cable provided.
- DO NOT use multi-plug adaptors power strips or extension leads. There is a risk of fire in the event of overloading.
- The socket the oven is plugged into must be connected to the household Main Circuit Board (MCB).

Installation

- Veneer or other finish of the furniture the appliance is being built into should be processed with heat-resistant glue (100°C); otherwise, high temperatures may cause them to deform.
- There must be no rear wall fitted to appliance housing.
- There must be a gap of at least 40 mm between the wall and the back of the unit to enable adequate air circulation.
- Level the piece of furniture the appliance was built into with a spirit level.
- The piece of kitchen furniture the appliance is built into must be secured against movement, e.g. Attached to the adjacent pieces of kitchen furniture.
- Align the appliance flush with the units and screw it in place.
- When attaching the appliance, make sure the screws are not fastened too strongly as this may damage the furniture or the appliance enamel coating.
- The ventilation slots and air intake points must not be covered. To ensure that they remain uncovered also observe the installation instructions of any appliance installed with this oven.



NOTE

- Ensure that the connector lead does not become trapped or bent.
- After installation the connector lead must not be in contact with the back or the base of the appliance.