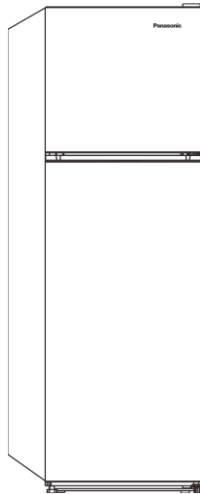


Panasonic

Model No.: NR-TC221BUSA



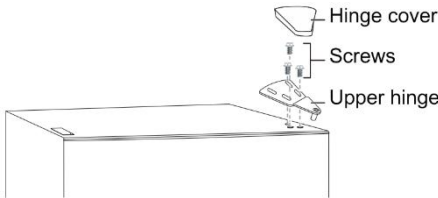
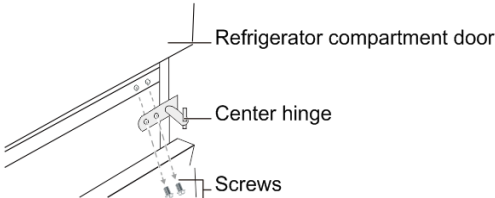
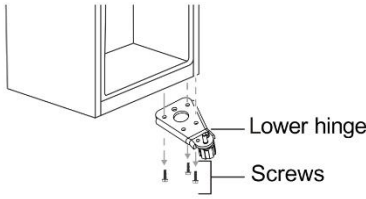
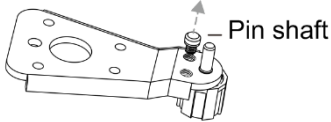
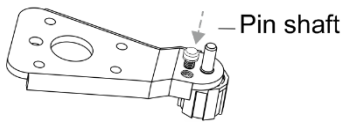
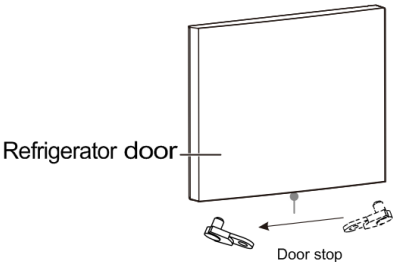
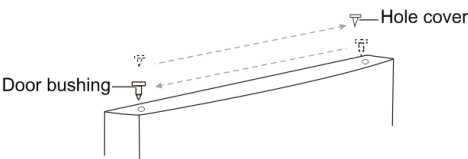
REVERSING THE DOOR HINGE

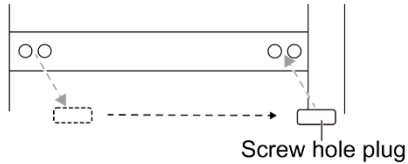
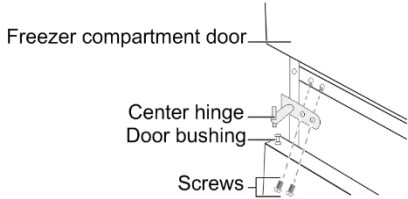
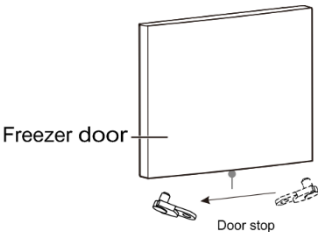
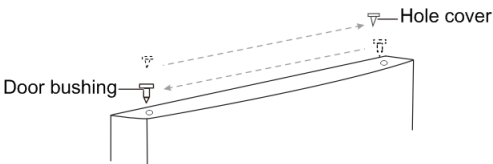
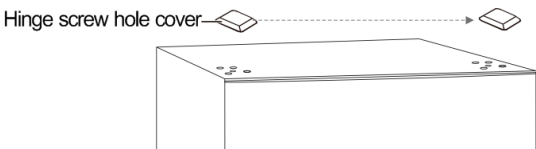
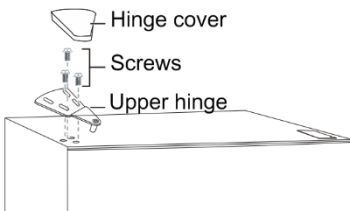
WARNING – Personal Safety

- Always ensure the refrigerator is unplugged before starting any work
- Empty all contents from the doors and remove glass shelves to avoid damage
- Keep fingers clear from any moving parts that may become trapped
- Wear closed-toe shoes and protective gloves
- Avoid overreaching or straining during repositioning
- Keep children and pets away during the process
- Work in a well-lit, uncluttered area
- Fridge will need to be laid down — use proper lifting techniques
- Always have a second person to assist when moving or laying down the fridge
- Do not attempt to change the doors if you are unsure—please reach out to an installer

Installation Tips

- Place refrigerator on a flat, stable surface away from water or heat sources
- Use appropriate tools (e.g., screwdriver, spanner); avoid makeshift alternatives
- Wear gloves to protect hands from sharp edges
- Handle doors and hinge parts carefully to prevent scratches or injury
- Keep screws and hinge components in a secure place during disassembly
- Do not force any part and follow all instructions for assembly
- Ensure doors are properly aligned and sealed after reassembly
- Plug in only after final checks are complete and all tools are cleared

1. Making sure you do not damage the locking tabs, using a small flat-head screwdriver to pry the hinge cover up and off.	
2. Remove the three screws that secure the upper hinge to the door, then remove the hinge.	
3. Lift the upper door off the center hinge and set it aside in a safe place. To avoid scratching place on a soft surface such as a towel.	
4. Remove the two screws that secure the center hinge and remove the hinge.	
5. Lift the lower compartment door off the lower hinge and set it aside in a safe place. To avoid scratching place on a soft surface such as a towel.	
6. If required lay the fridge down on the left side remove the screws that secure the lower hinge to the right side of the cabinet, then remove the hinge. ⚠ If the fridge is laid down at any point, allow it to stand upright for at least 2 hours before switching it on.	
7. Remove the washer and nut that secure the pin shaft to the right hole on the lower hinge, then remove the shaft.	
8. Insert the pin shaft into the left hole on the lower hinge, then secure the shaft with the washer and nut.	
9. On the lower left-hand side, install the lower hinge in the allocated space.	
10. Remove the screw that secures the door stop from the bottom right of the refrigerator compartment door, then remove the door stop and install to the bottom left side.	
11. Install the refrigerator compartment door.	
12. Move the door bushing from the top right side of the freezer door to the top left side of the door. And move the left hole cover to the right side.	

<p>13. Remove the center hinge screw hole plug on the left side of the cabinet, then install in the screw holes on the right side of the cabinet.</p>	 <p>Screw hole plug</p>
<p>14. Install the center hinge to the left side with the two screws you removed previously.</p>	 <p>Freezer compartment door Center hinge Door bushing Screws</p>
<p>15. Remove the screw that secures the door stop from the bottom right of the freezer compartment door, then remove the door stop and install to the bottom left side.</p>	 <p>Freezer door Door stop</p>
<p>16. Install the Freezer compartment door.</p>	
<p>17. Move the door bushing from the top right side of the freezer door to the top left side of the door. And move the left hole cover to the right side.</p>	 <p>Door bushing Hole cover</p>
<p>18. Remove the hole cover from the top left side of the cabinet and replace the cover with supplied cover on top of the refrigerator. Fix in place with the single screw.</p>	 <p>Hinge screw hole cover</p>
<p>19. Secure the upper hinge to the top left side of the cabinet with the three screws you removed previously. Before you tighten the upper hinge screws, make sure that the top of the door is level with the cabinet and that the rubber gasket makes a good seal.</p>	 <p>Hinge cover Screws Upper hinge</p>
<p>20. Install the hinge cover over the hinge on the top left side of the cabinet.</p>	
<p>Ensure the rubber gaskets make a good seal all the way around the Refrigerator doors before tightening the hinge screws.</p> <p>Make sure all seals are free from any dust or dirt that may have accumulated during installation.</p> <p>⚠ To avoid damage to the refrigerator, if it has been laid down at any point, allow it to stand upright for at least 2 hours before switching it on.</p>	