



Panasonic®

Operating Instructions

Refrigerator For Household Use

(Fridge compartment and Frost-free Freezer compartment)

Model No.: NR-S621BB-PH

- Please read these instructions and Warranty Card carefully, and keep them for use when needed.

Please read “Safety Precautions” carefully before using this product.

- If you need repairing or consulting service, please contact Panasonic service center or visit Panasonic official website (<https://panasonic.com/ph/>).
We are always delighted to serve you!
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Contents

Highlighted Features	3
Safety Precautions	4
Installation	7
The best ways for food preservation	11
Operation Panel.....	12
Temperature Control.....	13
Function Settings.....	14
Door Alarm.....	15
Part Identification.....	16
Fridge compartment	17
Freezer compartment	18
How to disassemble components.....	19
How to defrost and maintain the refrigerator	20
Question & Answer	22
List of accessories.....	23
Specifications	24

Environmental protection

When disposing of the packaging



Packaging materials are reusable, so that it should be handled properly when disposing. Bags, cartons or plastic packaging should be kept out of the reach of infants and children, to avoid injury or asphyxiation.

When disposing of the refrigerator

- Unplug from the power source.
- Cut off the power cord, dispose of the refrigerator with the power plug.
- Remove the doors and the door gasket of the refrigerator to prevent accidents to children.
- The refrigerator uses flammable refrigerant and Cyclopentane is used for insulation of this refrigerator. When you dispose this unit, please contact a competent scrap collection company to avoid affecting the environment or causing other hazards.

Highlighted Features

◆ **Using Air-cooling technology, no freezing, saving time and effort**

No manual defrosting, fast cooling speed, uniform temperature, better food preservation.

◆ **Energy Saving**

Using Panasonic's inverter compressor technology to save power consumption and reduce noise emissions.

◆ **Compressor located on top of the refrigerator (Top Unit)**

Panasonic's exclusive design moves the compressor from traditional position at the bottom of the refrigerator to the top of the refrigerator, optimizing the space inside the refrigerator.

◆ **Convenient Operation Panel**

- Temperature of Fridge compartment and Freezer compartment are respectively controlled by computer systems, with precise in units of 1°C, which is beneficial to food preservation.
- Holiday function.
- Door Alarm.

◆ **Quick Freezing**

Quick Freezing makes the temperature in the refrigerator cool down quickly, so as to retain the foodstuffs original flavor.

Safety Precautions

Please be sure to follow these instructions.

To prevent the risk of injury and property damage, please observe the following safety precautions.

- The extent of damage and harm caused by improper use are clearly classified as follows.



WARNING

This sign means: It may lead to a serious injury or death.



CAUTION

This sign means: It may lead to injury or property damage.



This sign means prohibited action.



This sign means required action.



Risk of fire/flammable materials.



WARNING

Otherwise, it may cause a fire, injury, electrical shock.

For the plugs and cord, etc.



Prohibited action

- Do not plug or unplug with wet hands.
- Do not let the cord or plug be damaged.
- Do not use if the power cord or plug is damaged.
- Do not reattach the power cord.
- Do not unplug by pulling on the power cord.
- Do not use a loose electrical outlet.
- Do not press on the plug at the back of the refrigerator.



Required action

- Use 230 V, 13 A power for the refrigerator.
- Plug the plug firmly with the power cord down.
- Unplug the power plug when maintaining and cleaning the cabinet.
- Keep the plug in a location that is easy to clean.
(Regularly remove dirt from the plug. Dusty plugs will cause poor contact or fire due to dampness.)
- If the power cord is damaged, it must be replaced by the manufacturer, a service center or a qualified person to avoid a hazard.
- Stop using the refrigerator and unplug the unit immediately if there is an abnormality or failure. Abnormality and failure examples:
 - Power cord or plug is abnormally hot.
 - Power cord is deeply cut or deformed.
 - There is burning smell.
 - You can feel tingling electricity when you touch the refrigerator body.

When using:



Prohibited
action

- Do not disassemble and repair the refrigerator yourself.
- Do not damage the refrigerant circuit, to avoid fire and explosion caused by refrigerant leakage.
- Do not touch the compressor or pipes, as the temperature in this restricted area is very high.
- Do not use other mechanical devices or other means to accelerate defrosting other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not remove the Back Cover part of the refrigerator.
- Do not spray water inside and outside the refrigerator.
- Do not allow children to swing on the refrigerator door.
- Do not keep flammable items such as spray cans near the refrigerator.
- Do not keep medicine and medical laboratory items in the refrigerator.
- Do not hit the glass tray hard.



Required
action

- The glass tray is very heavy, be careful when removing it to avoid falling.
- If there is a leak of flammable gas, open the window for ventilation, do not touch the refrigerator.
- If you smell burning, unplug the refrigerator to turn off the power.
- If the LED does not work, please contact a Panasonic service center, do not replace it yourself.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of using the appliance, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the refrigerator.

When installing:



Prohibited
action

- Do not place the refrigerator where there is a high risk of splashing water.
- Do not place items such as buckets filled with water, electrical outlets, voltage stabilizers, microwave ovens and similar lit candles on top of the refrigerator.



Required
action

- Ensure a well-ventilated space for placing the refrigerator, with no obstructions around the refrigerator or in the plug-in structure.
- When the refrigerator is placed in a humid place, it must be grounded and a leak-proof switch installed.

When disposing...



Required
action

- Before taking the refrigerator to be recycled, please remove all the door gasket to prevent locking a child in it.
- Flammable refrigerants and Cyclopentane are used for insulation of this refrigerator. When you throw away this unit, please discard it by proper method and do not dispose it by burning.



CAUTION

Otherwise it may cause injury, accidents.

When using...



Prohibited
action

- Do not place glass bottles in the Freezer compartment. (The liquid in the bottle will expand after freezing, which can lead to cracking of the bottle and injury.)
- Do not place bottles beyond the edge of the glass tray. (If large bottles are placed in the refrigerator, opening/closing the door may cause them to fall and cause injury.)
- Do not touch food and other items, especially metal containers with wet hands in the Freezer compartment. (It can cause frostbite.)
- Do not eat food that has bad smell or color changed. (Using spoiled food can cause illness.)

When cleaning...



Prohibited
action

- Do not reach into the bottom of the refrigerator. (When cleaning, if you touch the bottom of the refrigerator, you may scratch your hands)



Required
action

- If you need to move the refrigerator during cleaning, apply protective covering, etc. to floors with a fragile surface.

When opening/closing the doors...



Prohibited
action

- Do not put your finger on top of the compartment to open/close the compartment. (It may cause handgrip)
- Do not open/close the refrigerator door forcefully. (You may be injured by food falling out of the refrigerator.)
- Make sure no one else touches the refrigerator. (Avoid clamping the fingers when holding the door)

Installation

Please ensure that the refrigerator is installed in proper and safe manner for effective reduction of energy and noise

Unpack

Remove the carton, foam sheet and fixed adhesive tape.

Prepare a suitable installation location


Do not place the refrigerator near sources of hot air or direct sunlight, as it will reduce cooling capacity and consume more power. Install in a dry, ventilated place, help prevent mold and save electricity.

Install on a flat and stable surface

Turn and secure the adjuster bolts (to prevent vibration and noise). If placing on carpets and PVC floors, a sturdy wooden board should be placed at the bottom of the refrigerator. (Avoid discoloration caused by heat resistance)

Ensure heat dissipation space

The refrigerator will dissipate heat during work, so to ensure the normal operation of the refrigerator, there should be a space for air circulation around the refrigerator. As shown in the picture, it is necessary to ensure that the space between the left or right side of the refrigerator and the wall is at least 27 mm and between the top of the refrigerator and the wall above at least 20 mm (if the refrigerator makes noise and vibration, pull it out slightly). The space to open the refrigerator door should be 120 degrees.

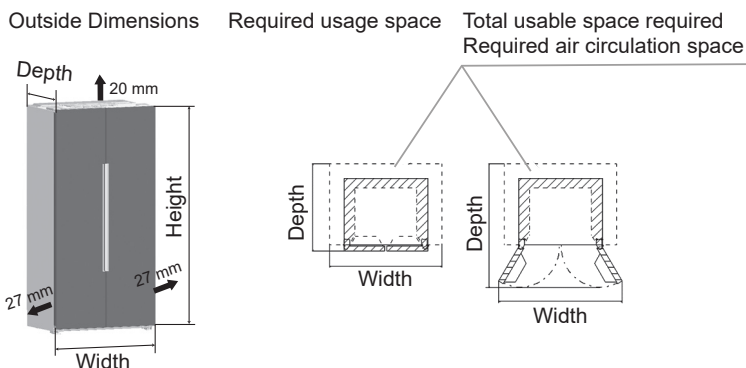

Outer Dimensions (mm): Width x Depth x Height	906x648x1890
Required usable space (mm): Width x Depth x Height	960x648x1910
Total usable space required to open the door at a 90 degree angle (mm): Width x Depth x Height	960×1076×1910
Total usable space required to open the door at a 120 degree angle (mm): Width x Depth x Height	1398×1076×1910

REMARK

The above is the design size, there may be differences due to different measurement, please adjust according to actual needs.

How to adjust the refrigerator (the refrigerator is placed on level ground)

- The refrigerator has 04 wheels, which can be moved easily.
- Please read the following content carefully, put the refrigerator in the best position, once the installation position has been determined, place the refrigerator steady and adjust it to balance.

Keep the refrigerator in a steady state

Turn the adjuster bolts in the direction of the arrow and lower them to level.

Balance the refrigerator

Two (02) adjuster bolts are aligned so that the refrigerator is balanced with the floor. If the left and right doors are misaligned, adjust one of the bolts to align the 2 doors.

If the left door is lower than the right door

Turn the left adjustment bolt in the direction of the arrow and adjust (as shown in Figure 1).

If the right door is lower than the left door

Turn the right adjustment bolt in the direction of the arrow and adjust (as shown in Figure 2)

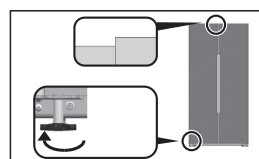
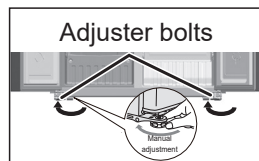


Figure 1

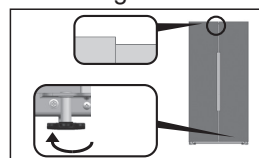


Figure 2

* When using the refrigerator for the first time, after installation and adjustment is completed, do not power on first, instead, leave the refrigerator inactive for at least 30 minutes, then turn on the power to ensure the best operation of the refrigerator.

If there is no grounding wiring plug in refrigerator, it should be connected with grounding connection to prevent electrical hazard from electric leakage.


※ **For safety, the ground connection should be done**

(For refrigerators with plug (2-pin plug) and without a ground wire)

The ground connection will allow prevention of danger resulted from electricity leakage.

The ground connection can be performed in 2 ways as follows:

1. In case the power outlet (socket) already has a grounded outlet, connect the ground wire to the screw used for ground connection on the back of the refrigerator (for the screw used for ground connection, please notice the ⚡ symbol).
Then connect the other end to the ground outlet.
2. In case the power outlet (socket) does not have a grounded outlet, connect the ground wire to the screw located on the back of the refrigerator
(for the screw used for ground connection, please notice the ⚡ symbol).
Then connect the other end to the earth bar.

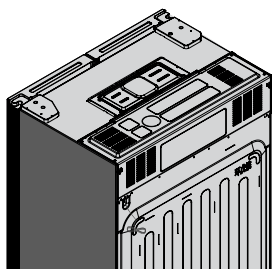


※ **Prohibited spots for ground connection**

- Gas pipes and water supply pipes (dangers due to electric shock or explosion).
- The ground wires of telephone cords and lightning rods (dangers due to lighting).

Before moving the refrigerator


- 1 Remove the food and water or ice cubes from the Ice maker out.
- 2 Unplug the refrigerator.
- 3 Align the adjustment bolts, push the refrigerator forward.
- 4 Drain the water from the drainage hole at the back.
Place a container underneath the drainage hole, then slowly tilt the refrigerator backward to drain water from the drainage hole.

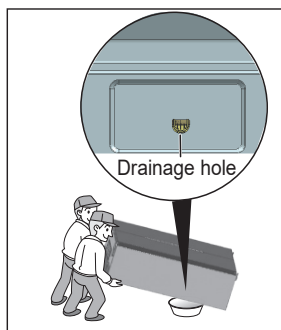

How to move and transport

At least 4 people are required to transport the refrigerator.

- Each person lifts a corner of the refrigerator.
- Do not transport by holding the refrigerator doors.
- Secure the refrigerator door firmly with tape, so that the doors do not open.

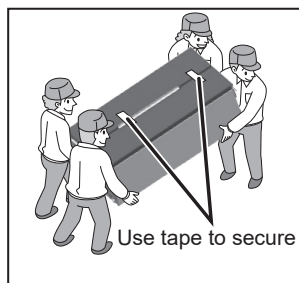

REMARK

- Do not place the refrigerator on horizontal side when transporting, as this may cause damage to the refrigerator.
- After installation, wait at least 30 minutes before plugging in the power to ensure the best operation of the refrigerator.

When the following cases occur:

- Do not use an electrical outlet with an extension cord to connect to the plug of the refrigerator. If an extension outlet must be used, choose a dedicated outlet with 230 V, 13 A specifications or higher. At the same time, periodically check whether the pins are loose, the power cord is hot or not.
- When there is a power failure, the door opening of the refrigerator should be reduced and new foods should not added in it (To prevent the temperature in the refrigerator from rising)
- After unplugging, wait for 10 minutes before plugging it back in.
(If plugged directly into an electrical outlet, it will increase the load on the compressor and may cause problems)

The best ways for food preservation

After installation

- Clean the inside of the refrigerator.
- Wait until it is fully cooled before putting the food in. (Even if it is plugged in, it will not cool down immediately. In summer when the outside temperature is high, it sometimes takes 4 hours to cool down)

Storing food

- Wipe food clean

Due to many stains, please clean the food before putting it in the refrigerator, sort and store it according to the function of the compartment, to avoid cross-contamination from keeping raw and cooked food together.

- Wrapping food

To prevent food from drying out and cross-odor, it is best to wrap food before freezing, so that the surface of the food is always dry. Do not let food waiting to be frozen come into contact with frozen food, if it is necessary to freeze food daily, reduce the amount of frozen food.

- Cooling food

Hot food can increase the temperature inside the refrigerator, wasting electricity.

Food storage location

- Fridge compartment


Used to preserve cooked foods, eggs, beverages, condiments, canned and bottled foods, etc.

- Multi-functional storage box

Used to preserve vegetables, fruits, etc.


- Freezer compartment

Used to preserve ice cream, frozen food, and long-term food preservation.

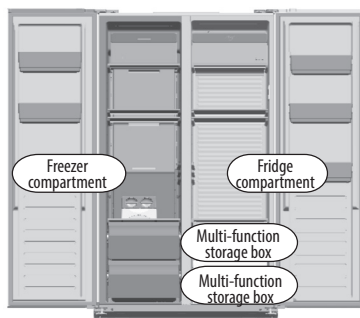

Operation Panel

- After the refrigerator is powered on, the display shows the set temperature of the Fridge compartment
(The default temperature setting of Fridge compartment is 4 °C).

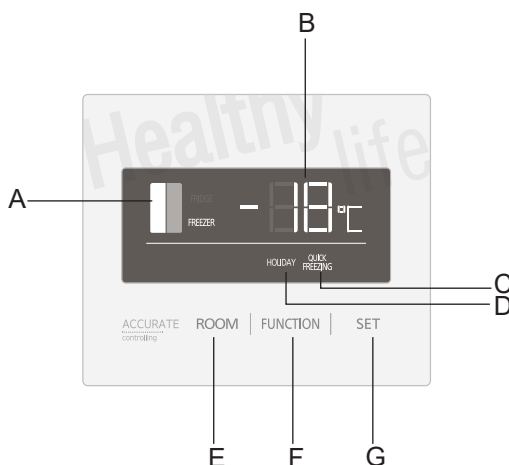

- A. The status of Fridge compartment or Freezer compartment displayed through icons, when the mode of Fridge compartment or the Freezer compartment is selected, the respective compartment icon lights are on.
- B. The set temperature of Fridge compartment and Freezer compartment will be displayed in the Temperature display area.
- C. Quick Freezing icon shows the current state of the Quick Freezing mode.
- D. Holiday mode icon shows the current state of Holiday mode.
- E. The key for compartment selection is used to select the Fridge compartment and Freezer compartment when setting the temperature.
- F. The key for selection mode is used to select the Quick Freezing and Holiday mode.
- G. The key for selection setting is used to set the temperature value, set or cancel the mode.

REMARK

- In the hot summer, the temperature inside the refrigerator can rise due to uncooled food storage or repeated opening and closing of the refrigerator door. Therefore, the doors should be opened appropriately.

Temperature Control

- Default setting temperature for Fridge compartment and Freezer compartment are “4 °C” and “-20 °C” respectively. The temperature setting for each compartment can be adjusted.
- The temperature inside the refrigerator will vary depending on the ambient temperature, installation status, usage conditions and amount of food.
- This refrigerator is equipped with a processor to control the temperature inside the refrigerator. When the ambient temperature changes, the compressor runs or stops, the doors are opened or closed, the temperature inside the refrigerator and the temperature setting will have a slight difference.

How to set the temperature for Fridge compartment

Open the door of Fridge compartment, at this time, the display icon of the Fridge compartment lights up, press the setting key, the temperature display area will flash to show the set temperature of the Fridge compartment, you can proceed to adjust the temperature of Fridge compartment, each press of the temperature setting key will decrease 1 °C.

After completing the temperature setting 5 seconds, the temperature display area stops flashing.

The temperature setting range of the Fridge compartment is 7 °C ~ 1 °C, the Fridge compartment temperature ranges from “7 °C” - “6 °C” - “5 °C” - “4 °C” - “3 °C” - “2 °C” - “1 °C”.

How to set the temperature for Freezer compartment

Open the door of Freezer compartment, at this time, the display icon of the Freezer compartment lights up, press the setting key, the temperature display area will flash to show the set temperature of the Freezer compartment, you can proceed to adjust the temperature of Freezer compartment, each press of the temperature setting key will decrease 1 °C.

After completing the temperature setting 5 seconds, the temperature display area stops flashing.

The temperature setting range of the Freezer compartment is -17 °C ~ -25 °C, the Freezer compartment temperature ranges from “-17 °C” - “-18 °C” - “-19 °C” - “-20 °C” - “-21 °C” - “-22 °C” - “-23 °C” - “-24 °C” - “-25 °C”.

Function Settings

Quick Freezing

Open the door of the Fridge compartment, the display icon of the Fridge compartment is light on, press the key for selection mode, at this time the temperature display area will turn off. Quick Freezing mode selection icon flashes, press the key for selection setting, the light of Quick Freezing mode icon is on, Quick Freezing mode is successfully selected. The same operation to cancel the Quick Freezing mode set.

To freeze food quickly, use the Quick Freezing.

After selecting Quick Freezing mode, the temperature of the Freezer compartment will drop quickly, helping fresh food to be frozen quickly.

After selecting the Quick Freezing mode, if the temperature of Freezer compartment is lowered to a current level, the Quick Freezing can be canceled.

If you forget to cancel the Quick Freezing, the refrigerator will automatically cancel after the default Quick Freezing time (50 hours) under time control.

Holiday mode

Open the door of Fridge compartment, the display icon of the Fridge compartment will light up, press the key for selection mode, at this time, the light of the temperature display area will turn off, the selected Holiday mode icon will flash. Press the key for setting, the light of Holiday mode icon is on, Holiday mode is successfully selected. The same operation to cancel the Holiday mode set.

This mode can be used when the refrigerator is not in use.

After selecting the Holiday mode, the light in the Fridge compartment is off and the refrigerator temperature cannot be set.

After selecting the Holiday mode, remove fruits, vegetables and perishable foods to prevent spoilage or mold from contaminating the inside of the refrigerator.

After selecting Holiday mode, door opening alarm prompts will remain active.

REMARK


- If the refrigerator is unplugged or there is a power outage, Quick Freezing mode will cancel automatically, and Holiday mode will not cancel automatically.
 - When Quick Freezing is selected, the refrigerator may not stop for a long time or stop briefly. The Freezer compartment temperature may be lower than the set temperature.
-

Door Alarm

- To remind you whether the Fridge compartment and Freezer compartment door are closed, this refrigerator is designed with a Door Alarm mode.

		Temperature display	LED
Time of opening the Fridge compartment door	After 1 minute	Display U10	once flashing
	After 3 minutes	Display U10	twice flashing
	After 5 minutes	Display U10	continuous flashing
		Temperature display	LED
Time of opening the Freezer compartment door	After 1 minute	—	once flashing
	After 3 minutes	—	twice flashing
	After 5 minutes	—	continuous flashing

Part Identification

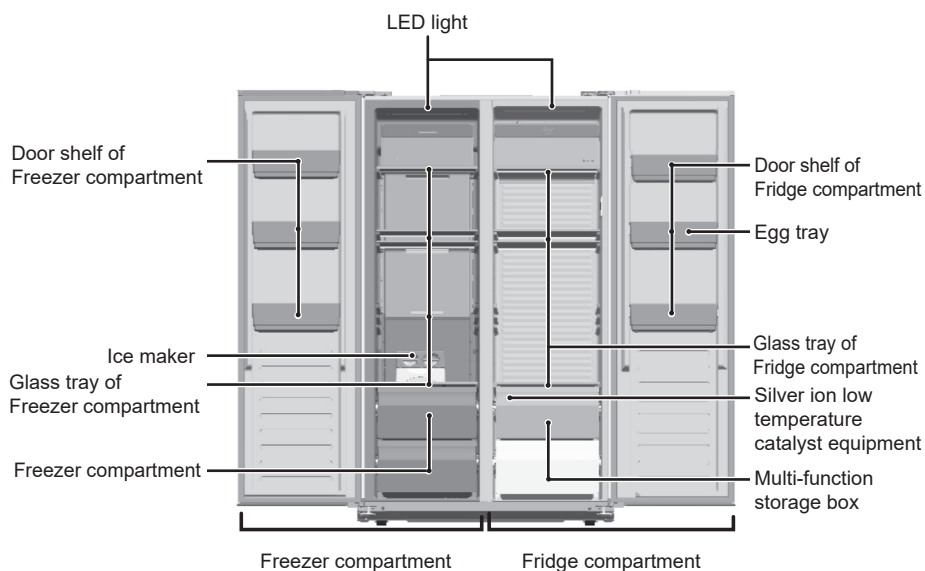


(The diagram in this Instruction manual can be different from the actual product)

Fridge compartment

HOW TO USE THE MULTI-FUNCTION STORAGE BOX

- The Multi-function storage box must be pulled to the front before use. After pulling out the front and using the Multi-function storage box, please push it back to its original position. If the door is closed without pushing the Multi-function storage box in, the Multi-function storage box or the door of Multi-function storage box shall be damaged.

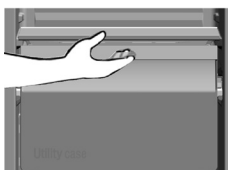


REMARK

- If temperature of Fridge compartment is set at 2 °C ~ 1 °C for a long time, food can be frozen.
- For foods with strong odors, place them in an airtight container or plastic wrap, before putting them in the refrigerator.
- Reduce the time opening the doors in case of power failure, and avoid adding the new food in.

Freezer compartment


HOW TO USE THE FREEZER COMPARTMENT

- The Freezer compartment should be pulled to the front before using. After pulling out the front, please push it back to its original position. If the door is closed without pushing the Freezer compartment in, the Freezer compartment or the door of Freezer compartment shall be damaged.

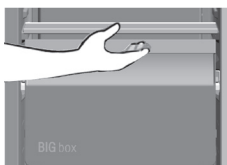

HOW TO MAKE ICE CUBES

- 1 Fill water in the Ice tray till the Water level line.
- 2 Put the Ice tray inside Freezer compartment, wait until ice is made.
- 3 To remove the ice cubes, press on the frame with your left hand and turn the circular Ice tray clockwise with your right hand. Ice cubes will fall into the Ice box.

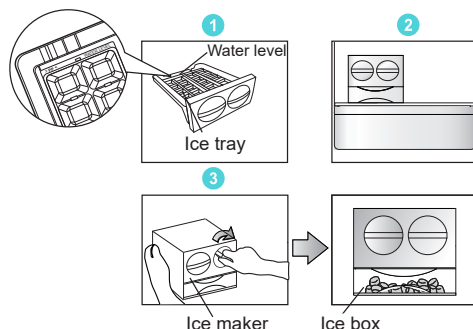

REMARK

Do not pour water into Ice box for ice making, otherwise the Ice box may crack.

How to disassemble components


Tray of Fridge compartment and Tray of Freezer compartment

- 1 Carefully lift the back of the tray.
- 2 Then pull out the tray.
When attaching the tray, align the tray with the left and right rails, and then push it back to its original position.




Multi-function storage box and Freezer compartment

- 1 Pull out the box/compartment.
- 2 At the same time, carefully lift up the rear of the box/compartment.
- 3 Then pull out the box/compartment completely.
When attaching the box/compartment, align the box/compartment with the left and right rails, then push it back to its original position.

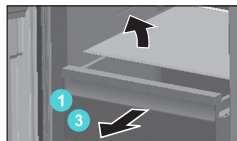

Door shelf of Fridge compartment and Freezer compartment

 Push the door shelf up from the bottom and take it out.
When attaching the door shelf, align the door shelf with the protruding claw on the left and right ends, and then insert the door shelf until it stops moving.



REMARK

Before moving any part, make sure there is no food left in the box/compartment.
If possible, remove all food to avoid unintended problems.

How to defrost and maintain the refrigerator

Defrosting

- This refrigerator defrosts automatically, eliminating the need for manual defrost. The frost on the evaporator will automatically melt and flow to the evaporator to evaporate.

Before maintenance

- Please disconnect the power before servicing the refrigerator.

During maintenance

● Outside the refrigerator

Wipe clean with a soft cloth containing warm water or neutral detergent, then dry with a clean soft cloth.

● Door gasket

Door gasket easily cling to dirt such as soup, juice, easily damaged causing cold air leakage when dirty. Therefore, wipe it frequently with a wet soft cloth, and again with a dry cloth.

● Inside the refrigerator

Parts are easily soiled such as trays, door trays, drawers, bottle shelf, etc. , need to be cleaned in a timely manner.

● Do not use the following items to clean the refrigerator

Weak alkaline or alkaline detergent, detergent powder, washing powder, abrasive paste, kerosene, boiling water, acid, organic solvent, toothpaste, straw broom, etc. that easily damage the refrigerator.

● When grease gets on the refrigerator, be sure to wipe it off.

Grease can crack plastic components.

After maintenance

Please check:

- Is the power cord damaged?
- Is the plug hot or not?
- Have you plugged in the correct plug?

When the refrigerator stops working

- Under normal circumstances, do not stop the operation of the refrigerator, so as not to affect the life of the refrigerator.
- If you need to stop using the refrigerator, please clean the refrigerator according to the above maintenance methods, and open the refrigerator door from 2 to 3 days to dry the inside to avoid odor or mold.

REMARK

- The time for using the frozen foods will be shortened because the temperature in the Freezer compartment increases during maintenance or cleaning.
- If you have any question, please promptly contact the Panasonic service center.

Question & Answer

After checking the following items and the refrigerator is still not working properly, unplug it and promptly contact the Panasonic service center.

The refrigerator generates noise.

- Refrigerant makes noise when it flows through the pipeline. This is a normal phenomenon.
- Radiator fan makes noise when it runs at high speed. This is a normal phenomenon.

The compressor generates noise.

- After selecting the Quick Freezing mode, the compressor runs at high speed, so the sound of the compressor is louder than the normal operation. This is a normal phenomenon.
- When putting a large amount of food in at once or the ambient temperature is high, the speed of the compressor will increase, and the sound of the compressor is louder than the normal operation. This is a normal phenomenon.

The sound is too loud.
There is a strange sound.

- Is the installation ground flat and solid or not?
- Is the back of the refrigerator too close to the wall?
- Are there other items on top of the refrigerator?
- The refrigerator makes a loud noise when starting or stopping. This is a normal phenomenon.

The compressor runs in a long time.

- Is the Quick Freezing mode selected?
- It is normal for the refrigerator to run for a long time when used for the first time.
- It is normal for the refrigerator to run for a long time when the ambient temperature is high in summer.
- Regularly open the refrigerator door.
- The refrigerator door is not closed tightly.
- Store large amounts of food in the refrigerator to chill or freeze at the same time.

The Fridge compartment is not cool.

- Do you choose Holiday mode or not?
- In winter or when the seasons change, the outside temperature drops significantly, and the difference between the temperature outside and inside the refrigerator is smaller. You may sometimes feel the Fridge compartment is less cool. This is a normal phenomenon.

There is dew condensation outside the refrigerator.	<p>When air humidity is high, moisture will condense on the refrigerator surface, around the door gasket or on the door surface.</p> <p>This phenomenon will disappear when air humidity decreases. Wipe clean with a soft dry cloth.</p>
There is dew condensation inside the Fridge compartment	<p>Check if the refrigerator door is closed.</p> <ul style="list-style-type: none"> Do you open/close the refrigerator door too often? Do you put the high humidity and uncovered food inside the refrigerator? <p>This phenomenon is normal. Wipe clean with a dry, soft cloth.</p>
There is dew condensation on the Multi-function storage box	<ul style="list-style-type: none"> Humidity inside the box is deliberately high to keep the vegetables fresh and store for several days. Wipe off the dew accumulated on the bottom of the Multi-function storage box.
The outside surface of the refrigerator heats up.	<p>The refrigerator is equipped with a cooling pipe inside to prevent condensation. It will heat up when using, especially in the summer. This is a normal phenomenon.</p>
Food in the Fridge compartment becomes frozen.	<ul style="list-style-type: none"> Is temperature of Fridge compartment set too low? Is the food placed near the ductwork?
Refrigerator door is hard to open.	<p>After opening/closing the door, the air pressure will change, after a while it will be easy to open.</p>
The letter "H" and "number" are displayed in the display area at the same time. Example: H 01	<p>The refrigerator is in abnormal condition.</p> <ul style="list-style-type: none"> Restore the normal state by the following operations: <ol style="list-style-type: none"> Unplug. (wait for 10 minutes then plug it back in) Continue using after abnormal display disappears. If the refrigerator is still abnormal after following the above steps, contact the Panasonic service center.

List of accessories

<div> <div>Quantity</div> <div>Model</div> </div> <div>Name</div>	NR-S621BB-PH
Refrigerator	1
Tray of Fridge compartment	4
Egg tray	1
Door shelf of Fridge compartment	3
Multi-function storage box	2
Tray of Freezer compartment	4
Door shelf of Freezer compartment	3
Components of manual Ice tray	1
Freezer compartment drawer	2
Instruction Manual	1
Warranty card	1

Specifications

Product's name	Refrigerator For Household Use (Fridge compartment and Frost-free Freezer compartment)
Model	NR-S621BB-PH
Climate class	T
Class of protection against electric shock	Class 0I
Total capacity	570 L
Fridge compartment capacity	315 L
Freezer compartment capacity	255 L
Rated voltage	230 V
Rated frequency	60 Hz
Rated current	1.4 A
Refrigerant type and refrigerant charge	R600a, 90 g
Blowing agent	Cyclopentane
Weight	95 kg
Dimensions (WxDxH)	906 x 648 x 1890 (mm)

Remark: The contents of this Instruction Manual are subject to change without notice.