

Panasonic®

Operating & Installation Instructions

Washing Machine (Household Use)

Model No. **NA-22VDG1**
NA-20VDG1



It is essential to read these instructions.

EN

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

Contents

	Safety Precautions	2
	Checking Your Washing Machine	6
	Before Washing	7
	Control Panel	8
	Detergent	10
	Washing	12
	Program List	14
	Details of Programs	16
	Washing Tips	18
	Changing Program Settings	20
	Changing Appliance Settings	24
	Maintenance	25
	Troubleshooting	29
	Error Display	35
Installation	Choosing the Right Location	36
	Moving and Installing	37
	Connecting the Hoses	39
	Test Run	41
	Specifications	42



AWW9901CJAC0-0C0

Safety Precautions



WARNING

 
May cause serious injury or death

Children must not use it alone.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Setting the Child Lock. (P. 24)



Hold
3 sec.




May cause fire or electric shock

Do not touch it with wet hands.




Do not hold or pull on the cord.

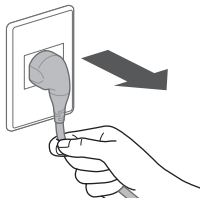


Do not use.



Plug adaptor

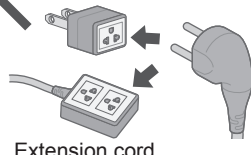

Fully insert it.

 


Do not use.




- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

In case of failure or damaged power cord, stop use and ask the electrical technician.

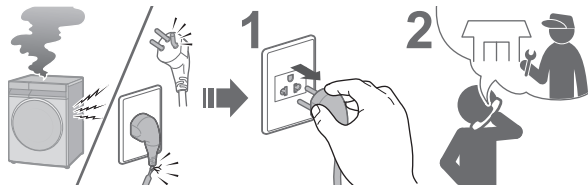

Accumulated dust may cause fire.

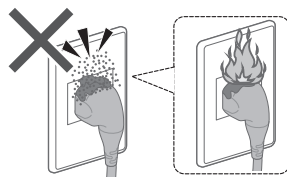


**Securely insert the ground prong.
Ask the electrical technician for a new socket.**



Wipe the power plug periodically.




Use a socket appropriate for this appliance.

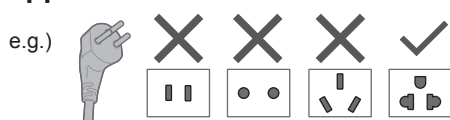

- The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.

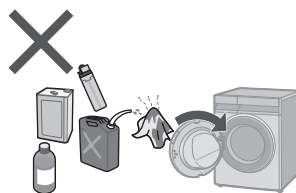

May cause failure

Do not disassemble, repair or modify it by yourself.




Safety Precautions (continued)




CAUTION

May cause injury


Be careful not to get your fingers caught.

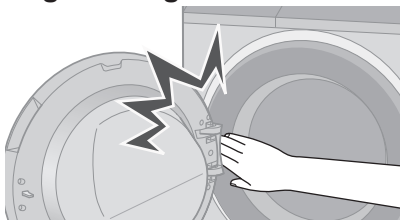

Do not climb on the appliance.

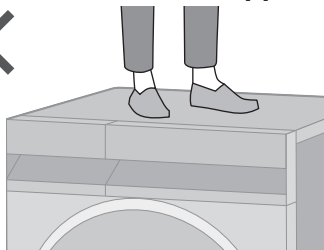

Do not touch when it is hot.

 


May cause water leakage

Turn off the water faucet.



Use new hose-sets.

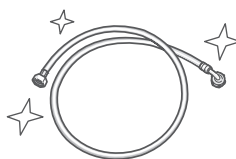


- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.


■ For maximum mass of dry cloth and pressure of tap water, see P. 42.

May cause failure


Keep away from heat and direct sunlight.

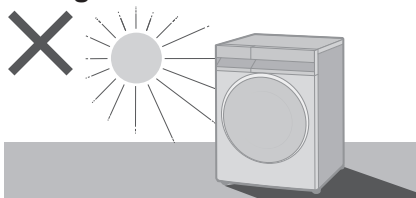


Remove anchor bolts before operation.

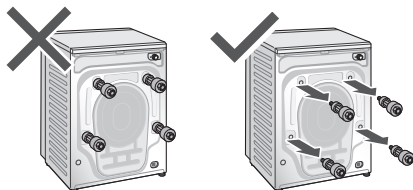


Do not obstruct.

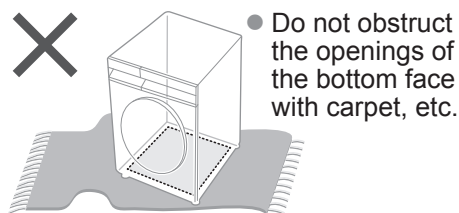

Do not use hot water.

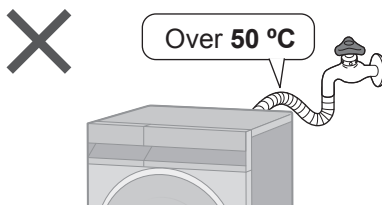


For machine-washable items only.

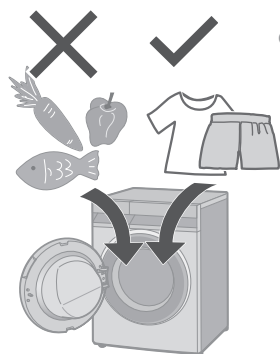

- This appliance is intended to be used in household. This appliance is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in laundrettes.


Do not wash excessively oily clothes.

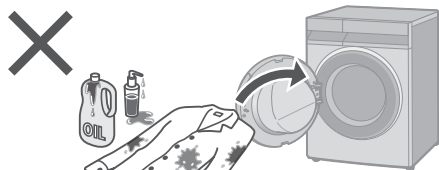

Checking Your Washing Machine

Part names

Detergent drawer (P. 10)

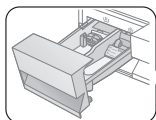

Control panel
(P. 8)

Door

Drum

Hinge

Door seal

Adjustable feet
(P. 38)


Drain filter cover
(P. 28)

Drain hose
(P. 39, 40)

Water inlet (P. 40)

Anchor bolts
(P. 38)


Power cord and plug*
*The plug shape varies
with the region.

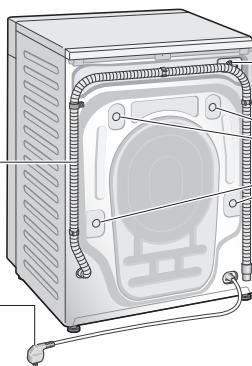


Accessories

☐ Water supply hose* (1) (P. 39, 40)

* The hose supplied depends on the region the unit is sold in.
(Joint type) (Screw type)

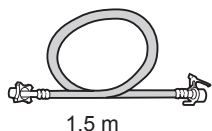


1.5 m

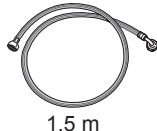

1.5 m

☐ Bottom cover (1)
/ Screw (1) (P. 37)

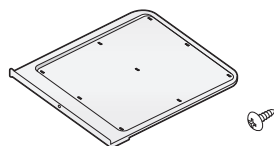

☐ Water tap adaptor* (1) (P. 39, 40)



☐ Elbow (1) (P. 40)



☐ Cover caps (4) (P. 38)





* For Joint type only

Before Washing

Preparing laundry

Before put clothes in drum

- Remove foreign objects.
- Use laundry nets for delicates and small items.

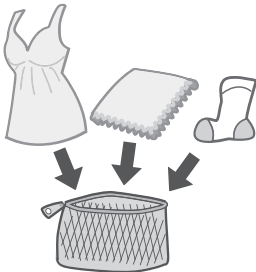
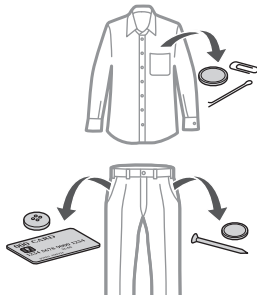


Pre-laundry check



Reverse


Clothes likely to pill

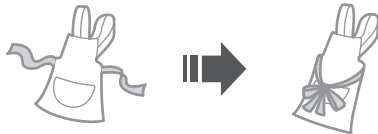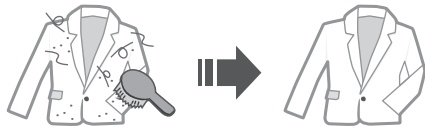

- Wash separately.



White clothes

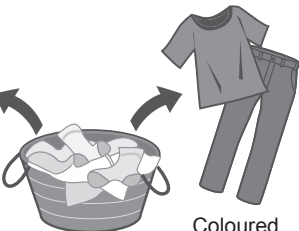

Coloured clothes


- Pretreat for heavily stains.




- Observe care labels.



Control Panel

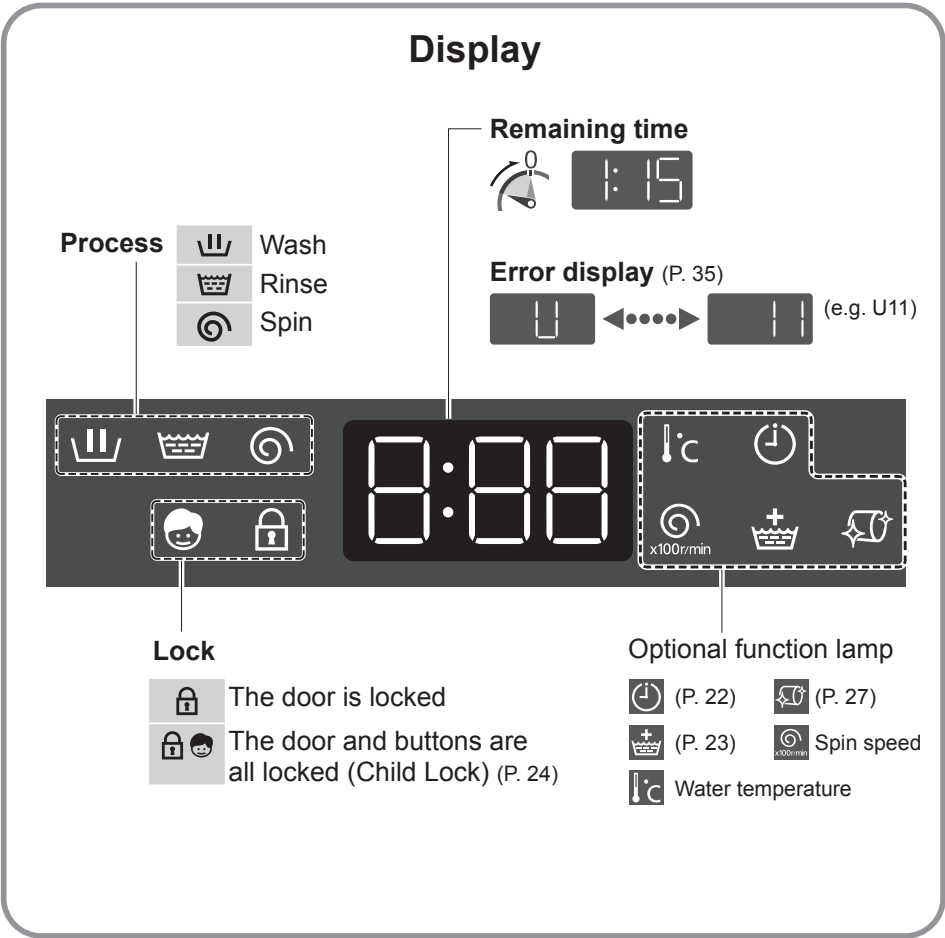


Control buttons

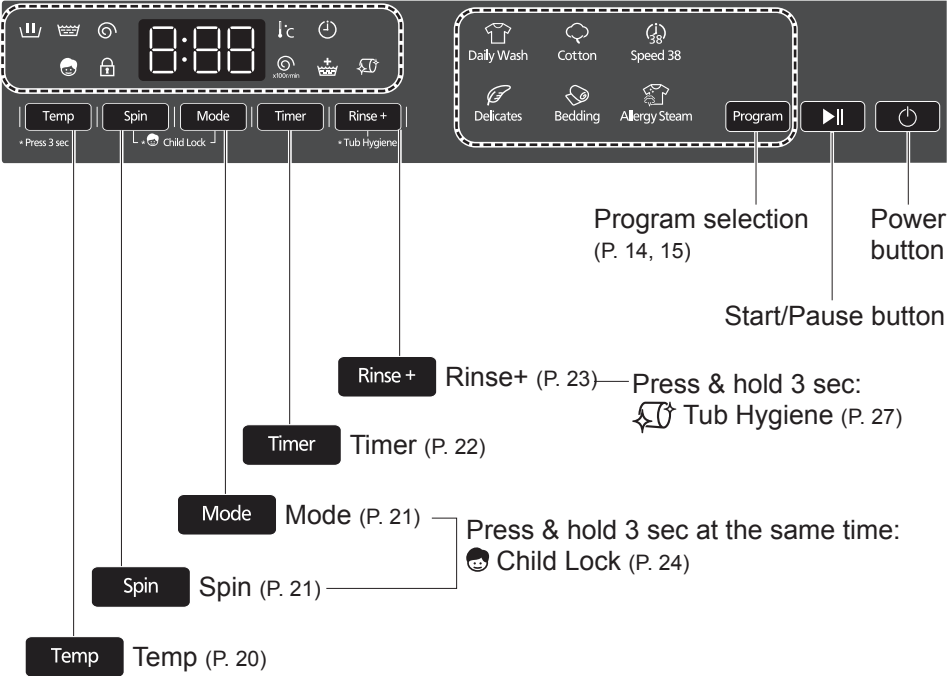

Touch operation

 - If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



NOTE

- Turn off back on () On (Not pressed) Auto Power off
- In case of a power failure When the power recovers, operation resumes from where it stopped. (Auto Restart)



Detergent

● Follow the instructions on each package.

Detergent

Use a low foam detergent.

● To prevent powder detergent from remaining in the detergent drawer:

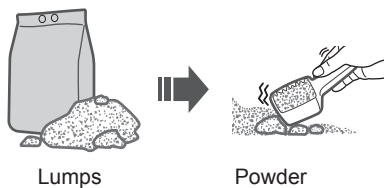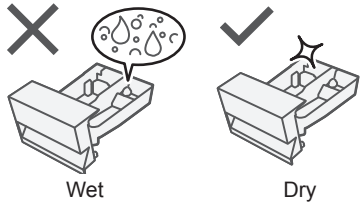

Detergent

Powder detergent




Liquid detergent




Bleach




Fabric softener

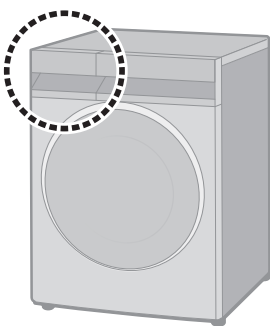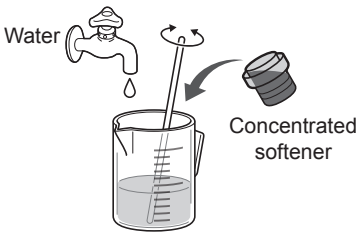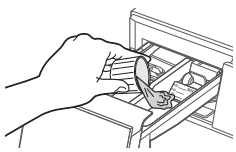

NOTE


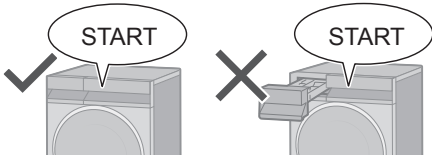


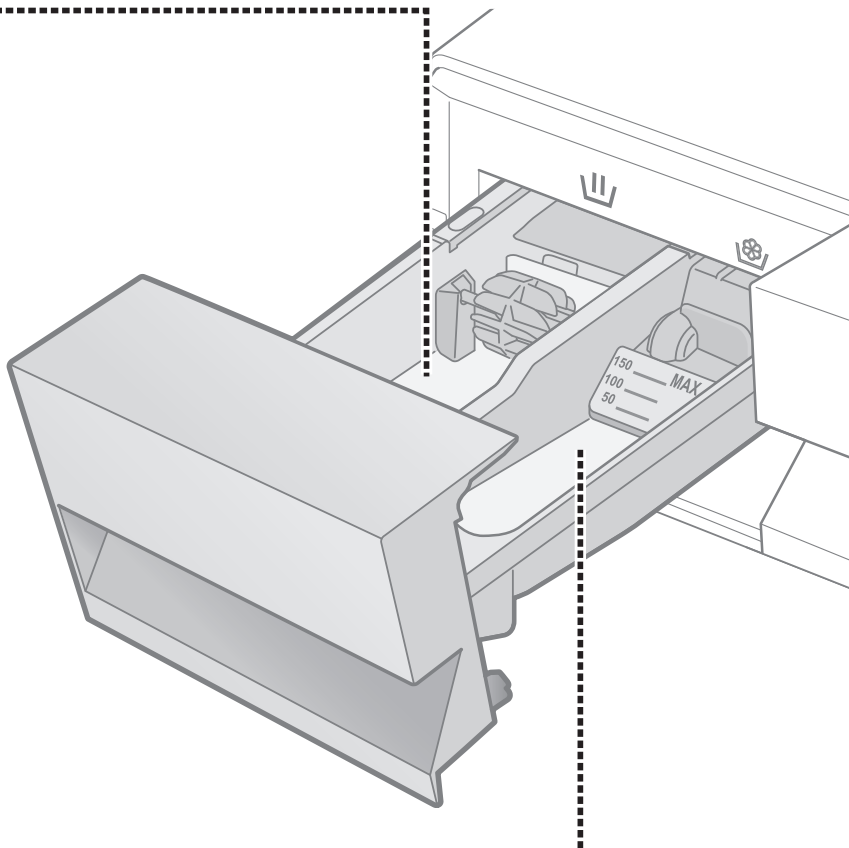

 Fabric softener




  Max. 150 ml



Washing

Basic Method

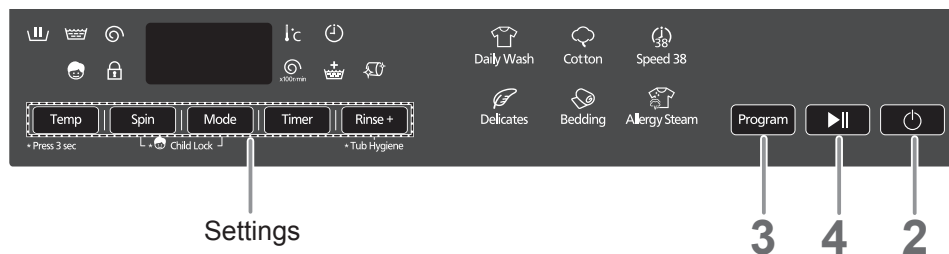


NOTE


■ Do not let laundry get caught in the door.



■ Do not overfill the drum with laundry.

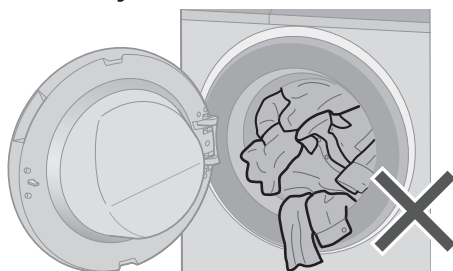

■ To open the door during operation

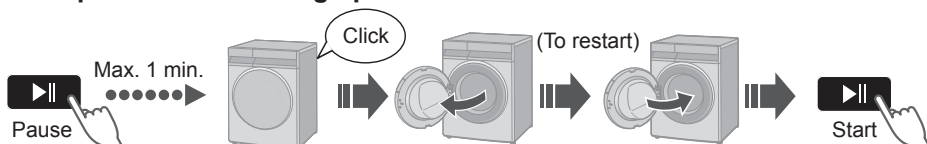


NOTE

● Door does not open ➡ (P. 30)



1

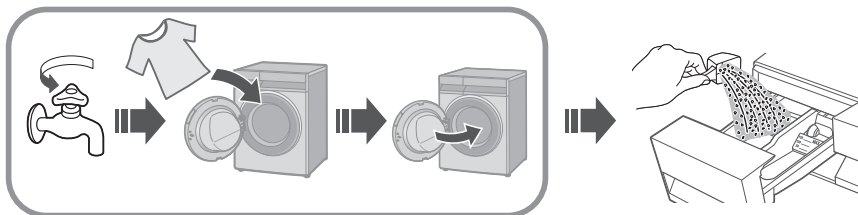

2



NOTE

The displayed program may vary depending on your washing history. (My Smart Memory) (P. 24)

3



Select a program. (P. 14)

■ Changing the settings.

Settings

Temp	Spin	Mode
Temp (P. 20)	Spin (P. 21)	Mode (P. 21)
Timer	Rinse +	
Timer (P. 22)	Rinse+ (P. 23)	

4



Measures the amount of laundry

(30 sec.)




Displays the time required (recalculated)

(e.g.)



5

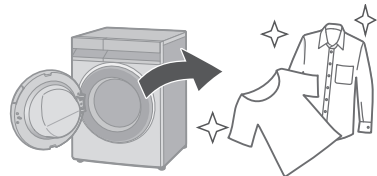

Program List

Program	Description	Max load (kg)		Total time
		NA-22VDG1	NA-20VDG1	
 Daily Wash	● Everyday clothes 	11.0	10.0	1:30
 Cotton	● Everyday clothes with extra time (more water savings than “Daily Wash” program) 	11.0	10.0	3:00
 Speed 38	● Small loads 	5.0		0:38
 Bedding	● Large items 	3.0		1:30

Program	Description	Max load (kg)		Total time
		NA-22VDG1	NA-20VDG1	
 Delicates	● Washing gently 	2.0		0:50
 Allergy Steam	● For mites 	5.0		2:05
 Tub Hygiene	● Cleaning the drum. 	None		3:45

- **Total time is approximate** (When the standard water supply rate is 15 L / min).
For each program's default water temperature.

Details of Programs

Settings Program	Auto setting		
	Temp (°C)	Spin (r/min)	
 Daily Wash	40	1200	
 Cotton	60	1400	
 Speed 38	40	1200	
 Bedding	Cold	700	
 Delicates	30	500	
 Allergy Steam	60	1400	
 Tub Hygiene	40	1200	

NOTE

- For normally soiled laundry at the rated capacity, we recommend using the “Cotton, 60 °C, 1400 r/min” which is tested in accordance with IEC 60456 for the energy and water efficiency aspects.
- “Cotton, 40 °C, 1400 r/min” program is recommended for Philippines to achieve better energy efficiency.
- Actual water temperature may differ from the declared cycle temperature.
- These results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.

Setting range		Optional functions			
Temp (°C)	Spin (r/min)	Mode	Timer	Rinse+	Auto Tub Clean
Cold, 30, 40, 60	0, 500, 700, 1200, 1400	✓	✓	✓	✓
Cold, 30, 40, 60	0, 500, 700, 1200, 1400	✓	✓	✓	✓
Cold, 30, 40	0, 500, 700, 1200, 1400	✓	✓	—	✓
Cold, 30	0, 500, 700	✓	✓	✓	—
Cold, 30, 40	0, 500	✓	—	✓	—
60	0, 500, 700, 1200, 1400	—	✓	—	✓
40	1200	—	—	—	—


Washing Tips

Delicates

■ When washing

- To rinse fully, use the “Rinse+” function. (P. 23)

NOTE

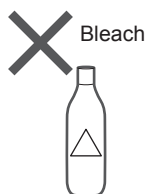

Bleach



Liquid detergent
for delicates


■ After operation ends



Take out
immediately

Auto Tub Clean

Automatically add a tub cleaning process to certain programs. (P. 17)

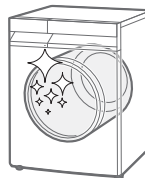

■ To turn on/off

1



2



3




4



Bedding

■ Washable items

- (Wash) ● (Handwash)
- 100 % cotton or 100 % synthetic

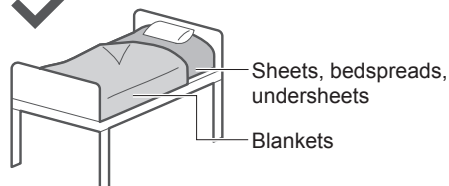

■ Not washable items



Electric blankets



Wool



Silk




Long pile





Fake fur



NOTE

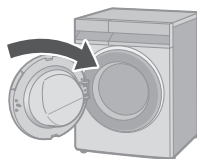

■ Putting blankets into the drum

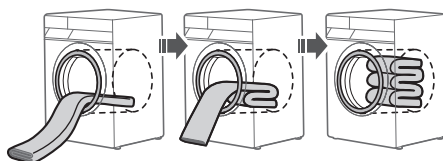 

NOTE

  

Changing Program Settings

■ Preparing

- Sort the laundry and put it into the drum. (P. 7)
- Add the detergent. (P. 10)

1




2

Select a program. (P. 14)



3

Change the program's settings.

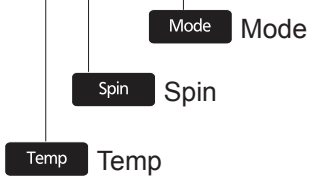

- Available options and setting ranges are different depending on the program. (P. 16)
- An alarm sounds if you select an option that is unavailable.

4



Temp


Change the washing temperature.



■ Setting guide

 Low	 High
● Colours 	● White 
● Lightly Soiled 	● Heavily Soiled 
● Easily shrinks	● Cotton

 
3



(P. 17)

r/min **Spin**

Change the spin speed.

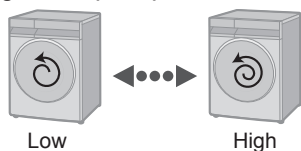

Setting guide

 Low	 High
To reduce wrinkling 	To dry more thoroughly 

3

Spin

(P. 17)

To change the setting while washing



1



Pause

2



Spin

3



Start

Mode

Select a combination of wash, rinse and spin.

(e.g.)



3

Mode

 *1	Wash
 *2	Rinse
 *2	Spin
	Wash and rinse
	Wash and spin
 *2	Rinse and spin

*1 Water is drained after wash process.

*2 Drains first if there is water in the drum.

Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 7)
- Add the detergent. (P. 10)

1




2

Select a program. (P. 14)



3

Change the program's settings.

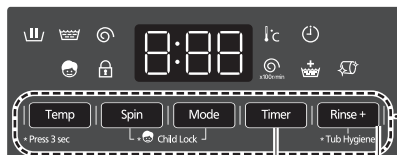

Timer

Timer

Rinse+

Rinse +


- Available options and setting ranges are different depending on the program. (P. 16)
- An alarm sounds if you select an option that is unavailable.

4



⌚ Timer

Set how many hours later to finish operation. (Up to 24 hours)

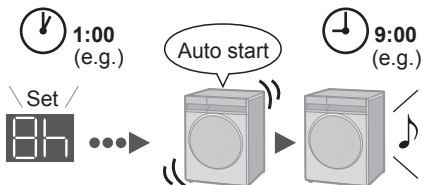

3



Press or hold



■ To check a preset time



■ To cancel settings



(All settings are cancelled)

NOTE



All indications turn off except



- Not available: P. 17

 
Rinse+

Add an extra rinse.



3

Rinse +





■ To change the setting while washing



Changing Appliance Settings

Setting the Child Lock

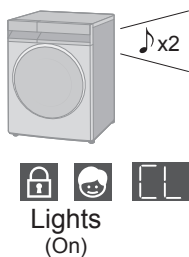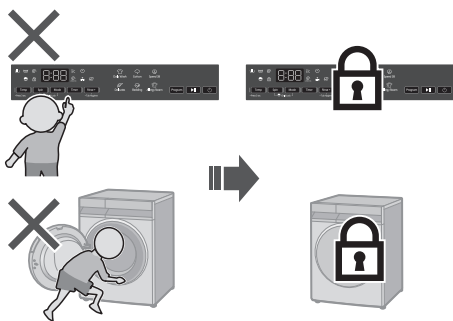


■ To cancel:

Same procedure  x4



Goes out (Off)

Cancelling the buzzer

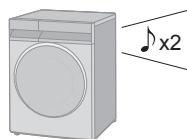


■ To reset:

Same procedure  x4

My Smart Memory

Automatically suggests the most frequently used program based on the last 10 wash cycles. When the power is turned on, the indicator of suggested program lights up.

 
■ To turn on/off




Maintenance

Water supply filter

If water does not flow smoothly

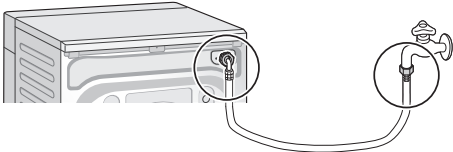

1

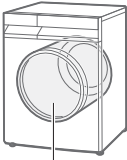

Empty

2



On

3



Select



Daily Wash

4



Start

1 min.



Turn off


5

For Screw type only


Remove and clean the filter



6

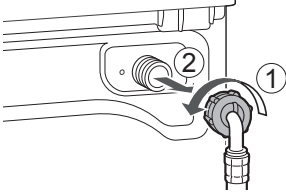


7

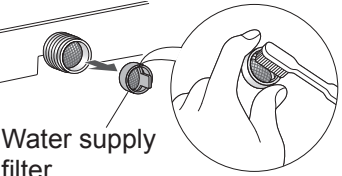


Water supply filter

 
8




9

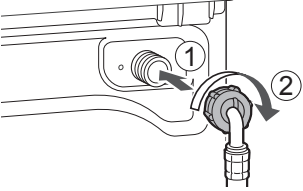

10

 


Maintenance (continued)

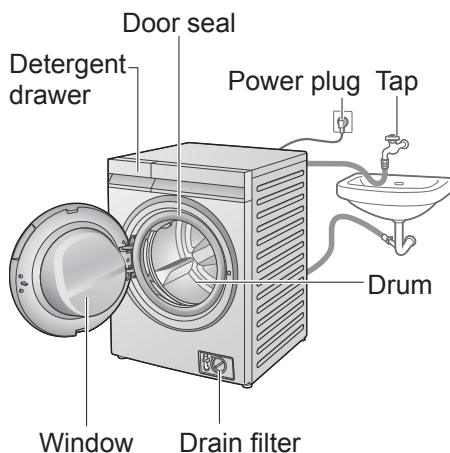

Appliance



Door seal

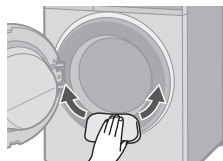

For heavy soil

Mild kitchen detergent









NOTE






- Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.

Detergent drawer

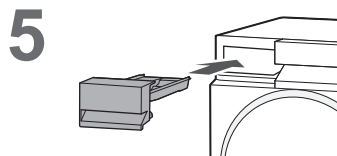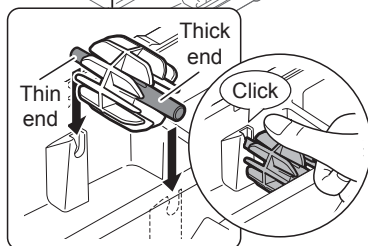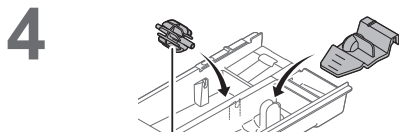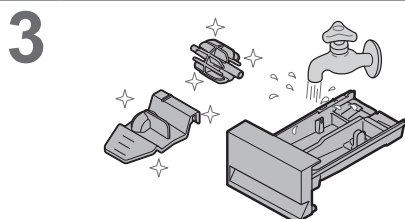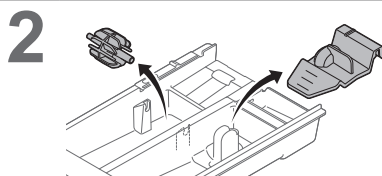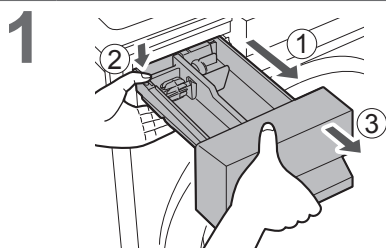

Drum

Once every 6 months or
if  flashes <Tub Hygiene>

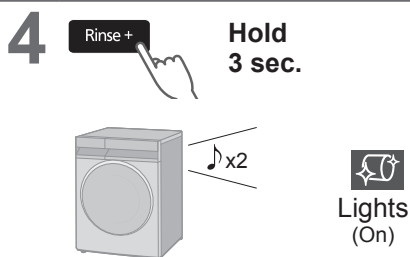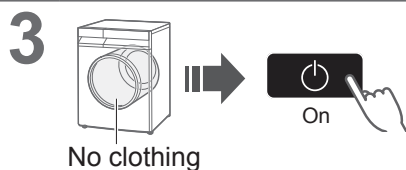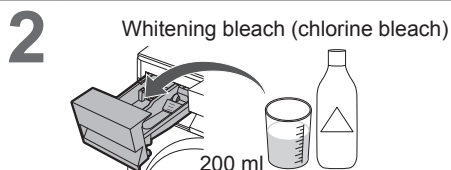

NOTE

- If the “Tub Hygiene” program is not run, the indicator  goes off when other program is run 3 times.

Maintenance (continued)


Drain filter

Once a month

Be sure to drain water in the drum before this procedure.



CAUTION

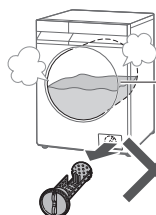

Hot water
(possibly scalding water)




1




Turn off

2

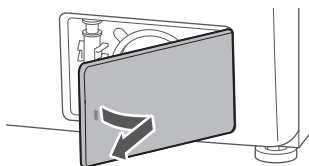


3

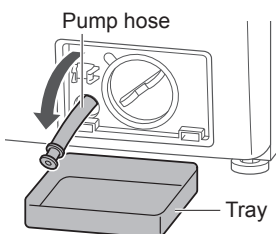

Pump hose

Tray

4

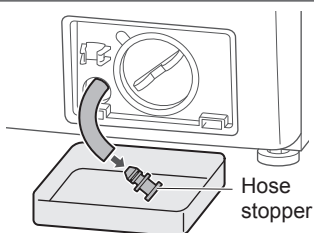


Hose
stopper

5




6

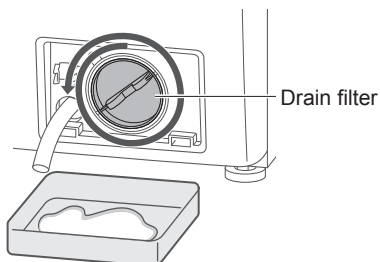

Drain filter


7

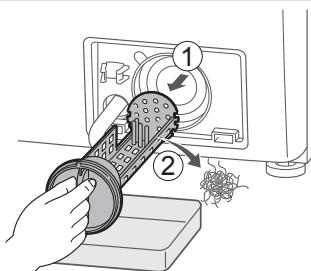

8

Replace


1

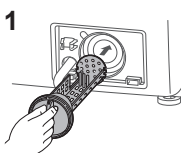


2 Until it is in place








3

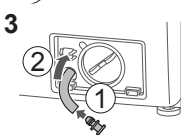



4







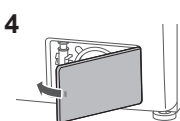


Troubleshooting


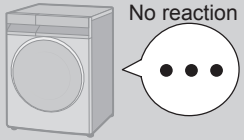
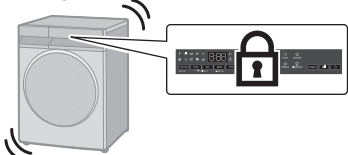
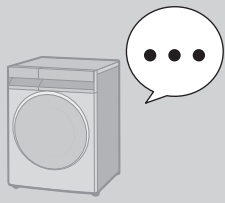
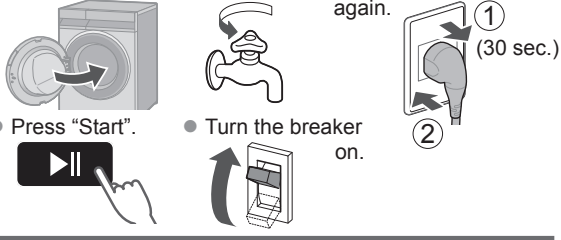
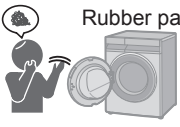
	Symptoms	Points to be checked
Main unit	Touch the buttons  ↓ 	☐ Possible cause ● During an operation  ☐ Try ● Child Lock (P. 24) 
	No operation 	☐ Check ● Power cut ● Timer  ☐ Try ● Close the door. ● Turn on. ● Unplug and insert again. ● Press "Start". ● Turn the breaker on. 
	Odour of rubber 	☐ Possible cause  Time passes  No smell  ☐ Try ● Tub Hygiene (P. 27) 




Troubleshooting (continued)

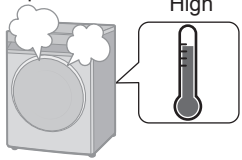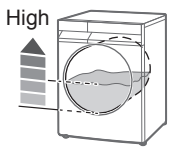	Symptoms	Points to be checked
Main unit		☐ Possible cause ● During an operation  Door is locked. To open the door during operation (P. 12) ☐ Check ● Temperature  ● Water level 
	Door does not open 	☐ Try ● Child Lock (P. 24)  ● During an operation 1  Turn off 2  On 3  Mode (P. 21) Spin 4  Open NOTE  Door is locked  Power cut   Restored  Door is locked 

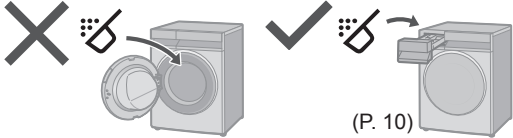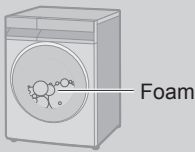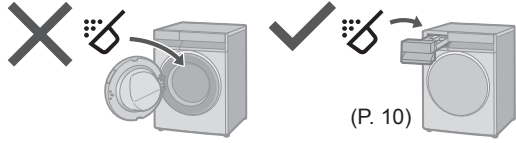
 
 
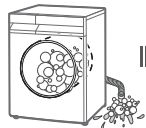
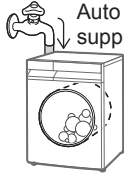
	Symptoms	Points to be checked
Detergent and foam	After washing 	☐ Check  (P. 10)
		☐ Possible cause • The amount of foam varies. • Temperature • Water level • Water softness 
	Not enough 	☐ Check • Powder detergent  (P. 10) • Too little detergent • Low foam detergent • Heavily soiled • Load too large 
	Too much 	☐ Check • Too much detergent 
Wash	During a wash 	☐ Possible cause Excess foam  Foam Foam detection function  Auto drainage  Auto water supply

 Troubleshooting (continued)

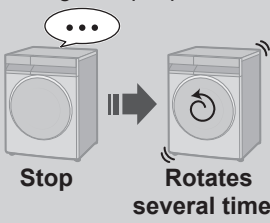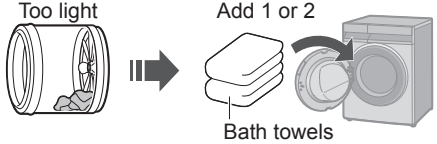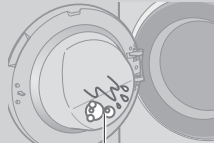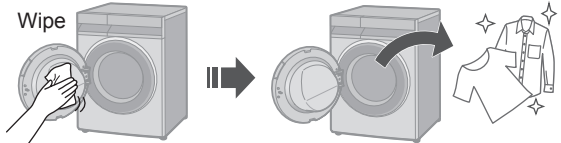
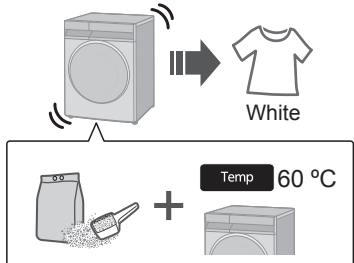
	Symptoms	Points to be checked
Rinse/Spin	During the spin process  Stop → Rotates several times	☐ Possible cause Unevenness  ☐ Try Too light  Add 1 or 2 Bath towels
	After washing  Foam or water	☐ Try  Wipe
Laundry	Spin changes to rinse  Spin → Rinse	☐ Possible cause ● If clothes are uneven, this appliances automatically corrects unevenness using the rinse process. 
	If the laundry yellows  Yellow	☐ Try  White Temp 60 °C

 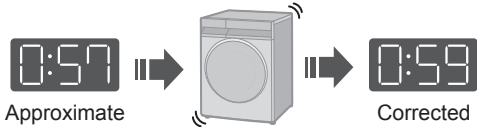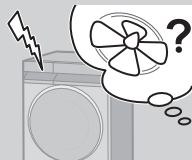	Symptoms	Points to be checked
Time	During a wash Displayed time  ... →  Changes	☐ Possible cause ● Remaining time is corrected during operation.  ● If the settings changed  ● If clothes are uneven  ➡ The remaining time may increase.
	During water drainage 	☐ Possible cause ● This is normal. The drain pump is working.
Noise	Sound of fan rotating 	☐ Possible cause ● This is normal. The fan cools electric parts.
	Motor emits a sound 	☐ Possible cause ● This is normal. The motor will make a short sound when the drum engages.

Troubleshooting (continued)

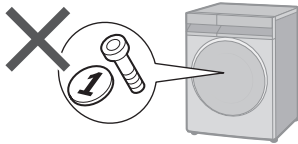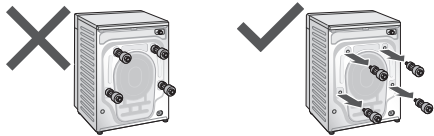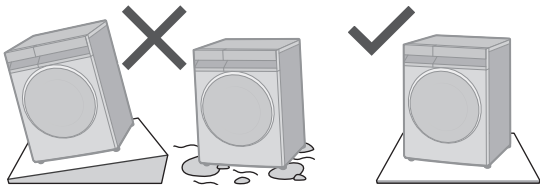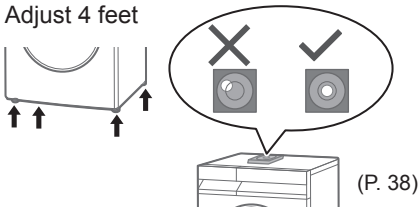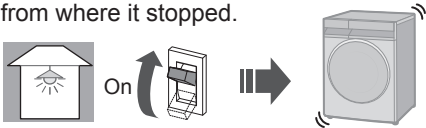	Symptoms	Points to be checked
Noise	Unusual noise (or vibration)	☐ Check ● Metal items  ● Anchor bolts (P. 38)  ● Slope or an unstable surface  ● Adjust 4 feet 
Others	Power cut  Breaker Off 	☐ Check ● When the power recovers, operation resumes from where it stopped. 

  Error Display

Error Display	Points to be checked		
U 11 Unable to drain	1 Check 	2 	3  Start  (P. 28)
U 12 Door is open	1 	2  Start	
U 13 Unable to spin / dry	1 	2 Check	3  Start Uneven  Even  Unstable or inclined  Stable  Too much  Reduce  Too little  Add 
U 14 Unable to supply water	1 Check	2 	3  Start Water outage  Turned off  Water supply filter (P. 25) 
U 17 Unable to spin	1 Restart  Turn off  On	2 Run Rinse and Spin of "Speed 38" program	Next time:   Low foam detergent
H 00	1 	2 	3 


Choosing the Right Location



Make sure to ask a service person for installation.


- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.

Appliance dimensions

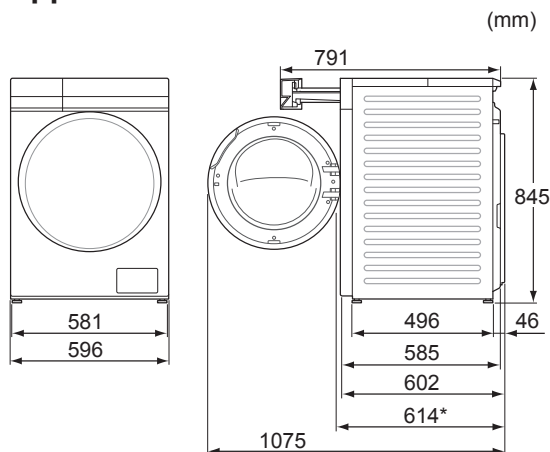



* 614 mm: Product depth, measured from the rear to the furthest protruding point of the door when closed.

■ Set-in installation

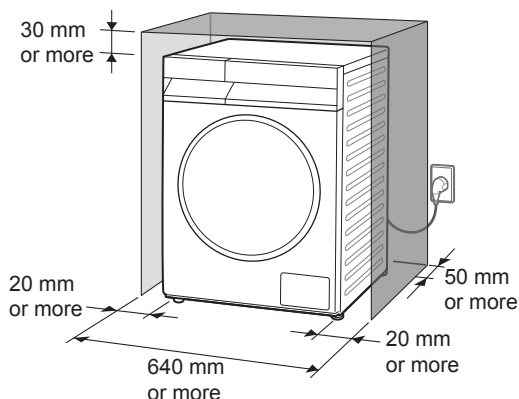

- Do not let the metallic portions of the appliance come into contact with metal sinks or other appliances.



Check the location.

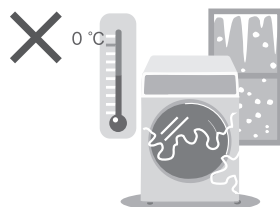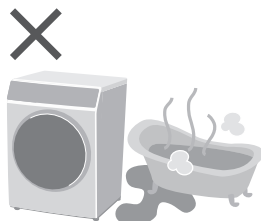

Moving and Installing



Carrying the appliance

Do not do it alone.



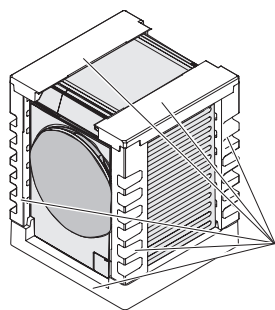
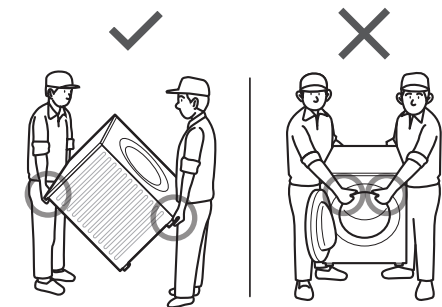


Remove all packing cushions before starting to use the appliance.


Installation of bottom cover

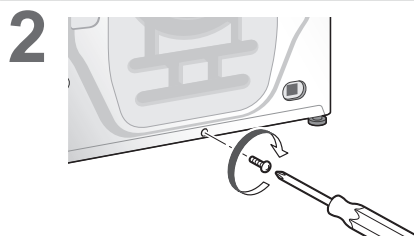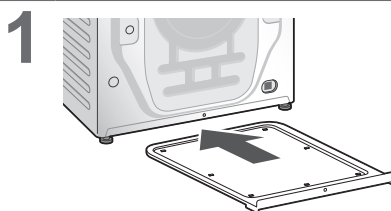


Removing the anchor bolts

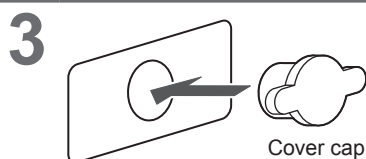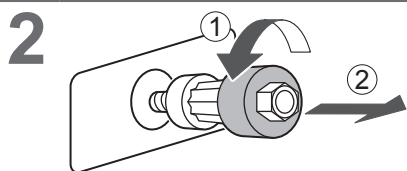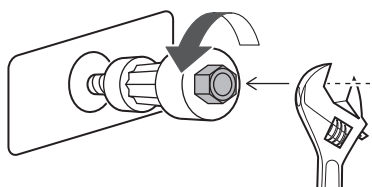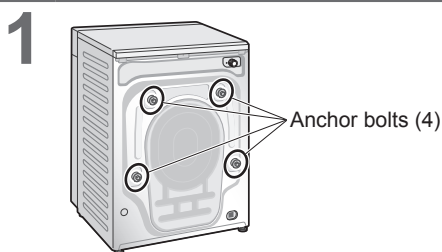





NOTE

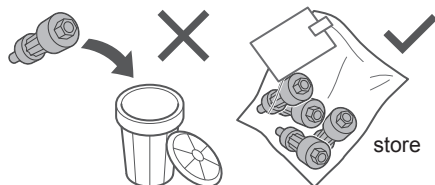


■ Moving the appliance again

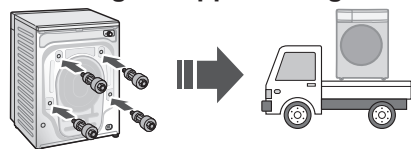

Levelling the appliance

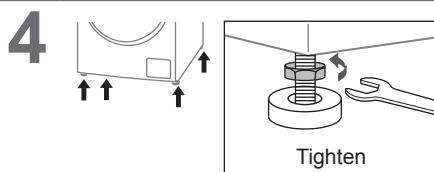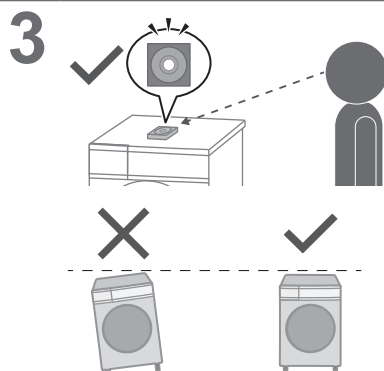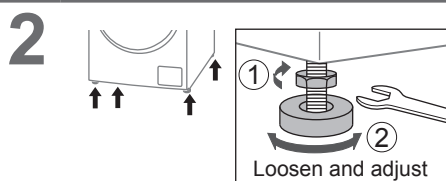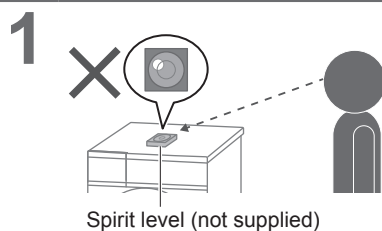

NOTE

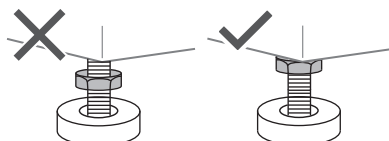


Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord


Right side connection

(cm)

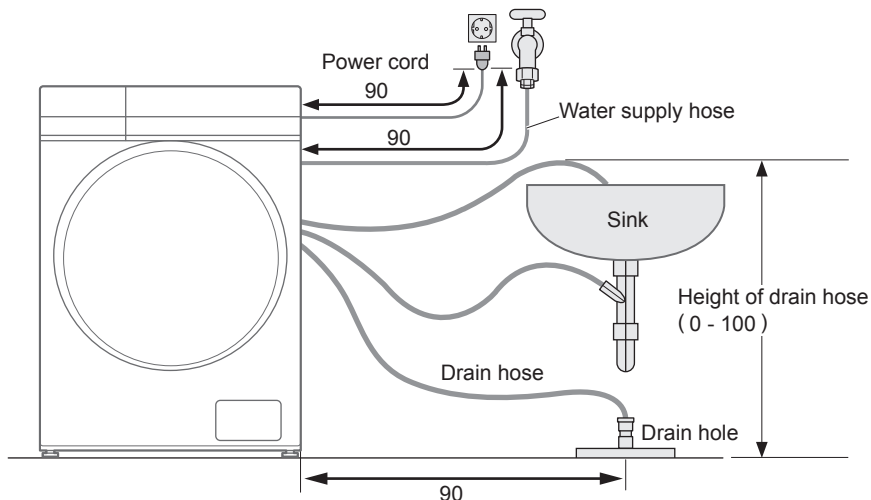

Left side connection

(cm)

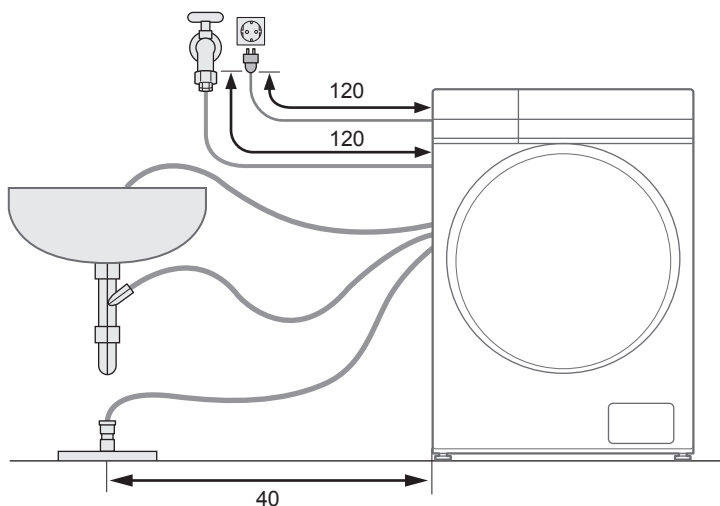

Connecting the Hoses (continued)

Water supply hose


■ Connecting the water supply hose



CAUTION


- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.

1

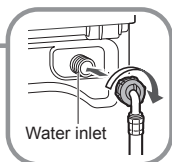


2

■ Screw type

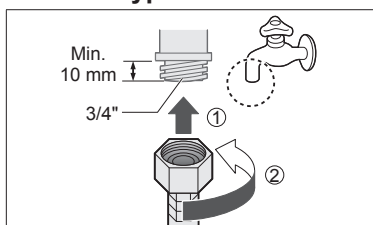


■ Joint type

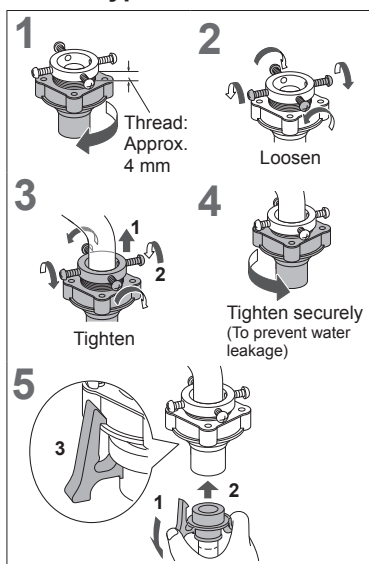


Drain hose

■ Draining to a sink or wash basin

NOTICE

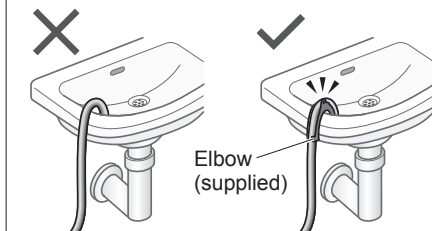


■ Draining to a stand pipe

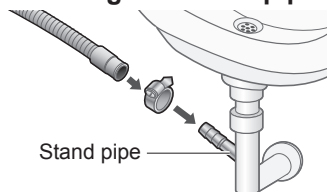

■ Draining to a drain hole




NOTE

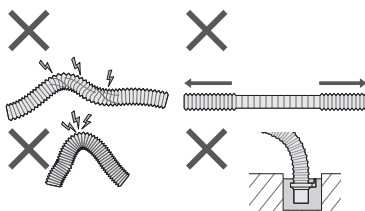

NOTE


- Do not cut/remove this belt. Otherwise the machine will display U14. (P. 35)

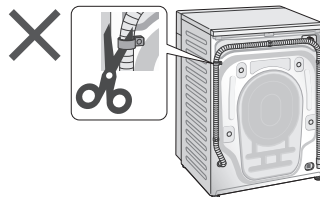

1



2

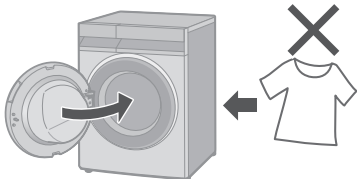

3



4



 **Speed 38**

5



Checking after test run

Problem

Causes and Measures

Water leaks




Connect the water supply hose properly (P. 40)




Abnormal
sounds

- Remove the anchor bolts (P. 38)

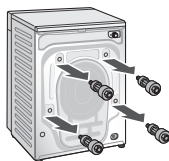

- Install stably

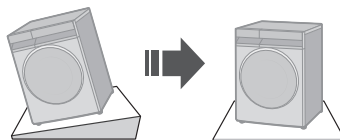

Error display



See P. 35.

Specifications

■ For Singapore

	NA-20VDG1
Rated voltage (V)	220 - 240
Rated frequency (Hz)	50
Maximum energy rated power input (W)	1600 - 1900
Heating energy rates power input (W)	1445 - 1710
Maximum spin speed (r/min)	1400
Product dimensions (W x D x H) (mm)	596 × 585 × 845
Product weight (kg)	66
Maximum mass of dry cloth (Wash) (kg)	10.0
Pressure of tap water (MPa)	0.01 - 1

■ For Philippines

	NA-22VDG1
Rated voltage (V)	230
Rated frequency (Hz)	60
Maximum energy rated power input (W)	1700
Heating energy rates power input (W)	1570
Maximum spin speed (r/min)	1400
Product dimensions (W x D x H) (mm)	596 × 585 × 845
Product weight (kg)	66
Maximum mass of dry cloth (Wash) (kg)	11.0
Pressure of tap water (MPa)	0.01 - 1



