

Panasonic

Operating Instructions Air Conditioner

Indoor Unit CS-E15HKR Outdoor Unit CU-E15HKR







Before operating the unit, read these operating instructions thoroughly and keep them for future reference.



QUICK GUIDE

© 2008 Panasonic HA Air-Conditioning (M) Sdn. Bhd. (11969-T). All rights reserved. Unauthorized copying and distribution is a violation of law.

SAFETY PRECAUTIONS

DEFINITION

The instructions to be followed are classified by the following symbols:



This symbol denotes an action that is PROHIBITED.





These symbols denote actions that are COMPULSORY.

To prevent personal injury, injury to others, or property damage, please observe the following. Incorrect operation due to failure to follow instructions may cause harm or damage, the seriousness of which is classified as below:



This sign warns of death or serious injury. **Warning**



Caution

This sign warns of injury or damage to property.

Remote Control



- Do not use rechargeable (Ni-Cd) batteries.
- Do not allow infants and small children to play with the remote control to prevent them from accidentally swallowing the batteries.



- · Remove the batteries if the unit is not going to be used for a long period of time.
- · New batteries of the same type must be inserted following the polarity stated to prevent malfunction of the remote control.

Indoor Unit



- Do not insert your fingers or other objects into the indoor or outdoor unit.
- · Do not attempt to repair the unit by yourself.

Indoor Unit



- · Do not install the unit in a potentially explosive atmosphere. Do not wash the unit with water.
- benzene, thinner or scouring powder.
- Do not use for other purposes such as preservation of food.
- Do not use any combustible equipment in front of the airflow outlet.
- · Do not expose directly to cold air for a long period.



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- Aerate the room regularly.

Air inlet

Power Supply



- · Do not share the same power outlet with other equipment.
- Do not modify power cords.
- Do not use extension cords.
- Do not operate with wet hands.



· Use the specified supply cord. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



This equipment must be earthed and strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock or fire in case of malfunction.



In case of emergency or abnormal conditions (burnt smell, etc), turn off the power supply, and consult your nearest dealer

Air outlet



Air inlet



Power Supply

- Switch off the power supply before cleaning or servicing.
- Turn off the power supply if the unit is not used for a long period of time
- This air conditioner is equipped with a built-in surge protective device. However, in order to further protect your air conditioner from being damaged by abnormally strong lightning activity, you may want to disconnect it from the power supply. Do not touch the air conditioner during lightning, it may cause electric shock.

Outdoor Unit



- · Do not sit or place anything on the indoor or outdoor unit.
- - Do not touch the sharp aluminium



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- After long periods of use, make sure the installation rack is not damaged.

Outdoor Unit



Do not insert your fingers or other objects into the unit.

REGULATORY INFORMATION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

OPERATION CONDITION

Use this air conditioner under the following temperature range

| Temperature (°C) | | Indoor | | Outdoor | |
|------------------|---------|--------|------|---------|------|
| | | *DBT | *WBT | *DBT | *WBT |
| COOLING | Maximum | 32 | 23 | 43 | 26 |
| | Minimum | 16 | 11 | 16 | 11 |
| HEATING | Maximum | 30 | - | 24 | 18 |
| | Minimum | 16 | - | -5 | -6 |

* **DBT**: Dry bulb temperature

* WBT: Wet bulb temperature

Thank you for purchasing **Panasonic** Air Conditioner

| TABLE OF CONTENTS | 3 |
|----------------------------------|----|
| SAFETY PRECAUTIONS | 2 |
| REGULATORY INFORMATION | 3 |
| PRODUCT OVERVIEW & OPERATIONS 4~ | -5 |
| CARE & CLEANING | 6 |
| TROUBLESHOOTING | 7 |
| QUICK GUIDE BACK COVE | R |

NOTE:

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without notice for future improvement.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.




Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



- . Do not switch ON the unit when waxing the floor. After waxing, aerate the room properly before operating the unit.
- · Do not install the unit in oily and smoky areas.

PRODUCT OVERVIEW & OPERATIONS

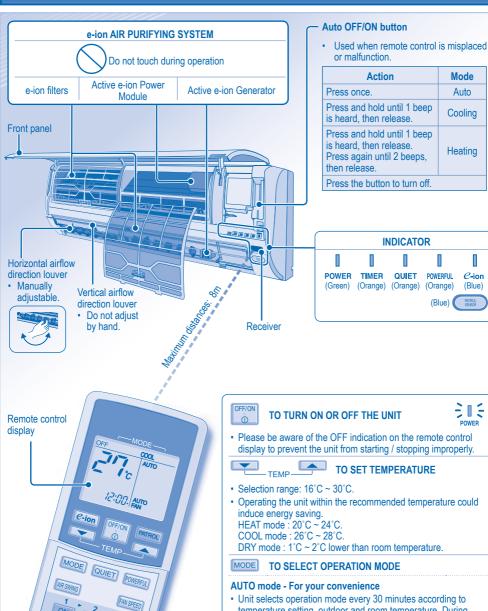

 Unit selects operation mode every 30 minutes according to temperature setting, outdoor and room temperature. During operation mode selection the power indicator blinks.

HEAT mode - To enjoy warm air

 Unit takes a while to warm up. The power indicator blinks during this operation.

COOL mode - To enjoy cool air

DRY mode - To dehumidify the environment

• Unit operates at low fan speed to give a gentle cooling operation.

TO SELECT FAN SPEED (5 OPTIONS)



• For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.

TO ADJUST VERTICAL AIRFLOW DIRECTION (5 OPTIONS)



- · Keeps the room ventilated.
- If AUTO is set, the louvers swing up/down automatically.
- In heat mode, the air blows horizontally for a while, then starts to blow downwards.

TO MONITOR AIR QUALITY



- · Patrol sensor detects air quality.
- When air quality is unsatisfactory, e-ion operation will start automatically.

C-ion TO ENJOY CLEAN & FRESH AIR



 Generates negative ions to produce fresh air effect and attract dust which will then be captured at the positively charged e-ion filters.

TO ENJOY QUIET ENVIRONMENT



· This operation reduces airflow noise.

TO ACHIEVE TEMPERATURE QUICKLY



- PATROL, C-ion, QUIET and POWERFUL can be activated in all modes and can be cancelled by pressing the respective button again.
- PATROL and @-ion or QUIET and POWERFUL can not be activated at the same time.
- PATROL and e-ion can be activated even when the
 unit is turned off. In this condition, once e-ion indicator
 is ON, the unit will operate with AUTO fan speed and
 air swing.

TO SET THE TIMER

To turn ON or OFF the unit at a preset time.





Select ON or OFF timer.

Set the time.

Confirm

- To cancel ON or OFF timer, press ON or OFF then press ONCE.
- When ON Timer is set, the unit may start earlier (up to 30 minutes) before the actual set time in order to achieve the desired temperature on time.
- Timer operation is based on the clock set in the remote control and repeats daily once set. For clock setting, please refer to Remote Control Preparation at back
- If timer is cancelled manually or due to power failure, you can restore the previous setting (once power is resumed) by pressing [SET].

OPTIONAL SETTINGS

PATROL

Patrol starts automatically with the unit switched on with $^{\text{OFF/ON}}$.

Press and hold for 5 seconds, then release to disable or restore this setting.



Press and hold for 5 seconds to dim or restore the unit's indicator brightness.



Press and hold for approximately 10 seconds to show temperature setting in °C or °F



Press and hold for approximately 5 seconds to show 12-hour (am/pm) or 24-hour time indication



Press to restore the remote control's default setting.



Not used in normal operations.

Set the temperature 1°C higher in cool mode or 2°C lower in heat mode than the desired temperature to achieve a 10% power saving.

Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

CARE & CLEANING




- Switch off the power supply before cleaning.
- Do not touch the aluminium fin, sharp part may cause injury.

WASHING INSTRUCTIONS

- · Do not use benzene, thinner or scouring powder.
- Use only soap (≥ pH7) or neutral household detergent.
- Do not use water hotter than 40°C

HINTS

- · Clean the filter regularly for best performance and to reduce power consumption.
- Please consult your nearest dealer for seasonal inspection.

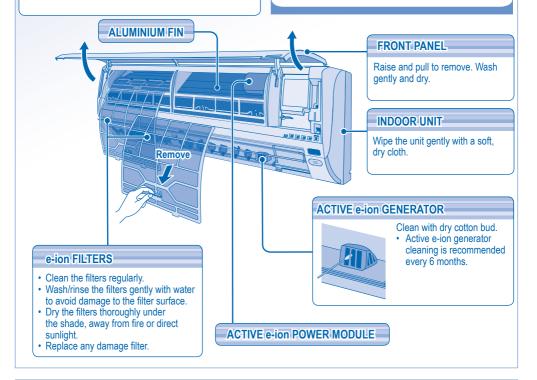

FOR SEASONAL INSPECTION AFTER EXTENDED **NON-USE**

- · Checking of remote control batteries.
- No obstruction at air inlet and air outlet vents.
- After 15 minutes of operation, it is normal to have the following temperature difference between air inlet and air outlet vents: Cooling: ≥ 8°C

Heating: ≥ 14°C

FOR EXTENDED NON-USE

- Activate heat mode for 2~3 hours to remove moisture left in the internal parts thoroughly.
- · Turn off the power supply.
- · Remove the remote control batteries.

NON SERVICEABLE CRITERIAS

TURN OFF POWER SUPPLY then CALL Authorized Distributor under the following conditions:

- Abnormal noise during operation.
- Water/foreign particles have entered the remote control.
- · Water leaks from Indoor unit.
- · Circuit breaker switches off frequently.
- · Power cord becomes unnaturally warm.
- Switches or buttons are not functioning properly.

TROUBLESHOOTING

The following symptoms do not indicate malfunction.

| Symptom | Cause |
|--|---|
| Mist emerges from indoor unit. | Condensation effect due to cooling process. |
| Water flowing sound during operation. | Refrigerant flow inside the unit. |
| The room has a peculiar odour. | This may due to damp smell emitted by the wall, carpet, furniture or clothing. |
| Indoor fan stops occasionally during automatic fan speed setting. | This helps to remove the surrounding odours. |
| Operation is delayed a few minutes after restart. | The delay is a protection to the unit's compressor. |
| Outdoor unit emits water/steam. | Condensation or evaporation occurs on pipes. |
| Timer indicator is always on. | The timer setting repeats daily once set. |
| Power indicator blinks during operation and the indoor fan is stopped. | The unit is in defrost mode, and the melted frost is drained from the outdoor unit. |
| Indoor fan stops occasionally during heating operation. | To avoid unintended cooling effect. |
| Power indicator blinks before the unit is switched on. | This is a preliminary step in preparation for the operation when the ON timer has been set. |
| Cracking sound during operation. | Changes of temperature cause the expansion/contraction of the unit. |

Check the following before calling for servicing.

| Symptom | Check |
|--|---|
| Heating/Cooling operation is not working efficiently. | Set the temperature correctly. Close all doors and windows. Clean or replace the filters. Clear any obstruction at the air inlet and air outlet vents. |
| Noisy during operation. | Check if the unit has been installed at an incline. Close the front panel properly. |
| Remote control does not work. (Display is dim or transmission signal is weak.) | Insert the batteries correctly. Replace weak batteries. |
| The unit does not work. | Check if the circuit breaker is tripped. Check if timers have been set. |
| The unit does not receive the signal from the remote control. | Make sure the receiver not obstructed. Certain fluorescent lights may interfere with signal transmitter. Please consult your nearest dealer. |
| Patrol sensor or e-ion indicator on the indoor unit is blinking. | Press PATROL or C-ion twice. If the patrol sensor or e-ion indicator still blinking, please consult your nearest dealer. |

The unit stops and the timer indicator blinks.



Press until you hear beep sound, then jot down the error code.

 The unit may be operable (with 4 beeps) on a limited basis, depending on the error

NOTE:

• Turn the unit off and reveal the error code to your nearest dealer.


QUICK GUIDE

Remote Control Preparation



- 1 Press and pull out
- 2 Insert AAA or R03 batteries (can be used ~ 1 year)
- 3 Press CLOCK
- 4 Set time
- 5 Confirm
- 6 Close the cover



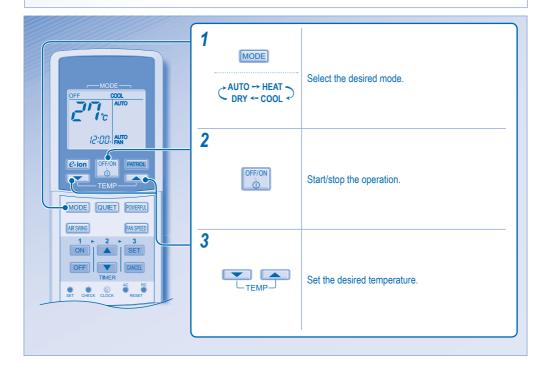

Matsushita Electric Industrial Co., Ltd.