


Operating Instructions

Blu-ray Disc Player

Model No. **DMP-BDT300**

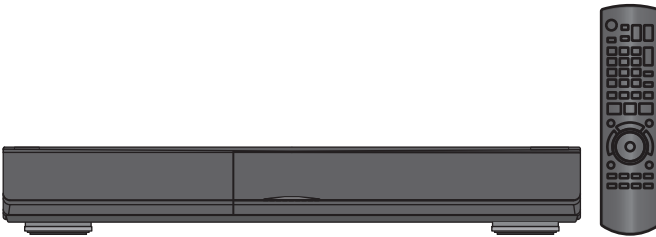

Dear customer

Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read the instructions completely.

Please keep this manual for future reference.



- The Wi-Fi CERTIFIED Logo, the DLNA Logo and DivX Plus™ HD Logo are applicable to models for Australia and New Zealand only.



- DivX™ HD Logo is for Middle East and Asia only.

- VIERA CAST Logo is for Australia, New Zealand and Asia only.



CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE
OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN
MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF.
REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR
PRODUCT DAMAGE,
● DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE,
DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED
WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON
THE APPARATUS.
● USE ONLY THE RECOMMENDED ACCESSORIES.
● DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO
USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE,
BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE.
ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK
OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO
OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER
MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS
WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND
SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS
LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY
FRIENDLY MANNER.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type
recommended by the manufacturer. Dispose of used
batteries according to the manufacturer's instructions.

This product may receive radio interference caused by
mobile telephones during use. If such interference is
apparent, please increase separation between the product
and the mobile telephone.

The socket outlet shall be installed near the equipment and
easily accessible.
The mains plug of the power supply cord shall remain
readily operable.
To completely disconnect this apparatus from the AC Mains,
disconnect the power supply cord plug from AC receptacle.

For Australia and New Zealand

 

THIS UNIT IS INTENDED FOR USE IN MODERATE
CLIMATES.

For Asia and Middle East

THIS UNIT IS INTENDED FOR USE IN TROPICAL
CLIMATES.

Caution for AC Mains Lead

(For Saudi Arabia)

For your safety, please read the following text carefully.
This appliance is supplied with a moulded three pin mains
plug for your safety and convenience.
A 5-ampere fuse is fitted in this plug.
Should the fuse need to be replaced please ensure that the
replacement fuse has a rating of 5-ampere and that it is
approved by ASTA or BSI to BS1362.
Check for the ASTA mark  or the BSI mark  on the body
of the fuse.

If the plug contains a removable fuse cover you must ensure
that it is refitted when the fuse is replaced.
If you lose the fuse cover the plug must not be used until a
replacement cover is obtained.
A replacement fuse cover can be purchased from your local
dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR
THE SOCKET OUTLET IN YOUR HOME THEN THE
FUSE SHOULD BE REMOVED AND THE PLUG CUT
OFF AND DISPOSED OF SAFELY.
THERE IS A DANGER OF SEVERE ELECTRICAL
SHOCK IF THE CUT OFF PLUG IS INSERTED INTO
ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as
stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT

 
The wires in this mains lead are coloured in accordance with
the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings
identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal
which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the
terminal which is marked with the letter L or coloured Brown
or Red.

**WARNING: DO NOT CONNECT EITHER WIRE TO
THE EARTH TERMINAL WHICH IS MARKED WITH
THE LETTER E, BY THE EARTH SYMBOL  OR
COLOURED GREEN OR GREEN/YELLOW.**

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use


Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC
mains plug (figures A and B). Confirm the AC mains plug
fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

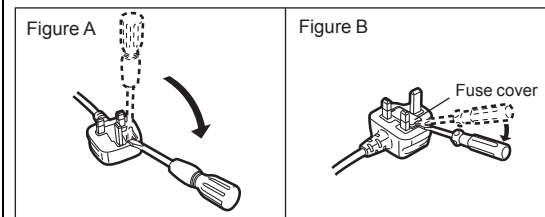

2. Replace the fuse and close or attach the fuse cover.

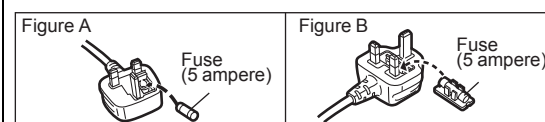


Table of contents

Getting started

| | |
|--|---|
| Caution for AC Mains Lead | 2 |
| Accessory | 4 |
| Unit and media care | 4 |
| Control reference guide | 5 |
| Playable discs/Cards/USB devices | 6 |

Connections and settings

| | |
|---|----|
| STEP 1 : Connecting to a TV | 8 |
| STEP 2 : Connecting to an amplifier/receiver | 10 |
| STEP 3 : Connecting to a broadband network | 12 |
| STEP 4 : Connecting AC mains lead .. | 13 |
| STEP 5 : Setting | 14 |
| STEP 6 : Reprogramming the remote control | 16 |

Playback

| | |
|--|----|
| Inserting or removing a media | 17 |
| FUNCTION menu | 17 |
| Playing video contents | 18 |
| Enjoying Blu-ray 3D™ video | 22 |
| Playing still pictures | 23 |
| Playing music | 24 |
| Enjoying VIERA CAST | 24 |
| DLNA feature | 25 |
| Linked operations with the TV (VIERA Link “HDAVI Control™”) | 27 |

Settings

| | |
|---------------------|----|
| Playback menu | 28 |
| Setup menu | 30 |

Reference

| | |
|--|-----------|
| Troubleshooting guide | 34 |
| Messages | 37 |
| Audio Information | 38 |
| About MP3/JPEG/DivX/AVCHD/MPEG2 files | 40 |
| Specifications | 42 |
| Supplemental information | 43 |
| Glossary | 44 |
| Safety precautions | 46 |
| Index | Backcover |

About descriptions in these operating instructions

- Instructions for operations are generally described using the remote control.
- These operating instructions are applicable to models for Australia, New Zealand, Middle East and Asia. Unless otherwise indicated, illustrations in these operating instructions are for Australia and New Zealand.

Firmware updating (⇒ 16)

Accessory

Check the supplied accessories before using this unit.

For Australia and New Zealand

- 1 Remote control (N2QAYB000510)
- 2 Batteries for remote control
- 1 AC mains lead
- 1 Audio/Video cable
- 1 Wireless LAN Adaptor (DY-WL10^{*2}) (C5ZZZ0000049)
- 1 USB extension cable (DY-WL10^{*2}) (K2KYYYY00064)

For Middle East

- 1 Remote control (N2QAYB000511)
- 2 Batteries for remote control
- 1 Audio/Video cable
- 2 AC mains lead^{*1}

For Asia

- 1 Remote control (N2QAYB000510)
- 2 Batteries for remote control
- 1 Audio/Video cable
- 3 AC mains lead^{*1}

^{*1} See page 13 for more information.


^{*2} DY-WL10 is supplied as a kit containing Wireless LAN Adaptor (C5ZZZ0000049) and USB extension cable (K2KYYYY00064), also available for sale as an optional accessory.



- Product numbers correct as of April 2010. These may be subject to change.
- Do not use AC mains lead and Wireless LAN Adaptor with other equipment. Wireless LAN Adaptor is not designed to use with PC.
- MAC address is stated on the bottom of Wireless LAN Adaptor.

Using the remote control

Insert so the poles (+ and -) match those in the remote control.

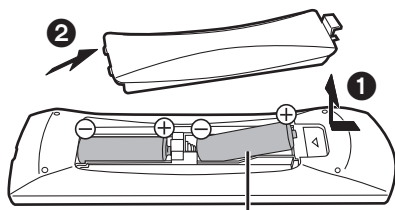

R6/LR6, AA

(Alkaline or manganese batteries)

Point it at remote control signal sensor on this unit. (⇒ 5)



Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

- Do not mix old and new batteries or different types at the same time.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.
- Do not take apart or short circuit.
- Do not attempt to recharge alkaline or manganese batteries.
- Do not use batteries if the covering has been peeled off.

Remove batteries if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

Unit and media care

■ Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

 
■ Clean the lens with the lens cleaner

Lens cleaner: RP-CL720E

- This lens cleaner may not be for sale depending on the region.
- This lens cleaner is primarily for use on Panasonic DVD recorders (DIGA), but it is also suitable for use on this unit.

■ Clean discs

DO



DO NOT



Wipe with a damp cloth and then wipe dry.

■ Disc and card handling precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Clean any dust, water, or foreign matter from the terminals on the rear side of the card.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.





■ To dispose or transfer this unit

The unit may keep the user settings information in the unit. If you discard this unit either by disposal or transfer, then follow the procedure to return all the settings to the factory presets to delete the user settings. (⇒ 34, "To return all settings to the factory preset.")

- The operation history may be recorded in the memory of this unit.

Control reference guide

e.g. **For Australia, New Zealand and Asia**

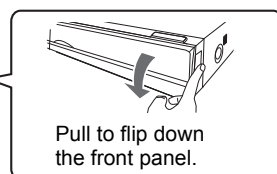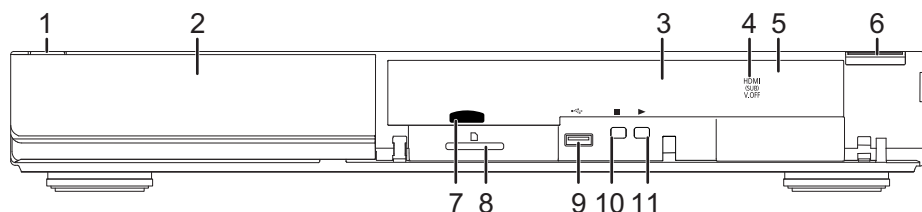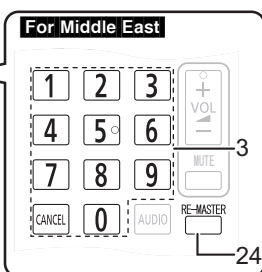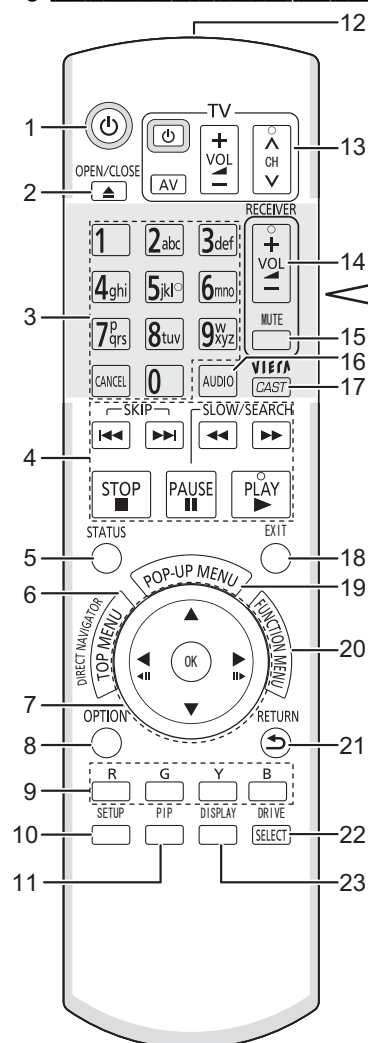

- 1 **Standby/on switch** (⏻/⏻) (⇒ 14)
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- 2 Disc tray (⇒ 17)
- 3 Display

| | | |
|----------------|-------------------|----------------------|
| | | |
| Disc indicator | SD card indicator | USB device indicator |

- 4 **V.OFF LED** (Video off LED)
 - It is possible to set the LED to turn on/off. (⇒ 31)

- 1 Turn the unit on and off (⇒ 14)
- 2 Open or close the disc tray (⇒ 17)

CAUTION

Do not place objects in front of the unit. The disc tray may collide with objects when it is opened, and this may cause malfunction.

- 3 **[CANCEL] : Cancel**

For Australia, New Zealand and Asia

Select title numbers, etc./Enter numbers or characters (⇒ 16, 24)

For Middle East

Select title numbers, etc./Enter numbers (⇒ 16)

- 4 Basic playback control buttons (⇒ 18)
- 5 Show status messages (⇒ 18)
- 6 Show Top menu/DIRECT NAVIGATOR (⇒ 18)
- 7 Selection/OK, Frame-by-frame (⇒ 18)
- 8 Show OPTION menu (⇒ 19)
- 9 Coloured buttons (red, green, yellow, blue)
These buttons are used when;
 - Operating a BD-Video disc that includes Java™ applications (BD-J).
 - Displaying "Title View" and "Album View" screens. (⇒ 23)
 - Operating contents of VIERA CAST. (⇒ 24)
- 10 Show Setup menu (⇒ 30)
- 11 Switch on/off Secondary Video (Picture-in-picture) (⇒ 20)
- 12 Transmit the remote control signal
- 13 **TV operation buttons** (⇒ 16)
You can operate the TV through the unit's remote control.
[⏻ TV] : Turn the television on and off
[AV] : Switch the input select
[+ - VOL] : Adjust the volume
[^ v CH] : Channel select
- 14 Adjust the volume of an amplifier/receiver. (⇒ 16)
- 15 Mute the sound of an amplifier/receiver.
- 16 Select audio (⇒ 18)
- 17 **For Australia, New Zealand and Asia**
Displays the Home screen of the VIERA CAST (⇒ 24)
- 18 Exit the menu screen
- 19 Show Pop-up menu (⇒ 18)
- 20 Show FUNCTION menu (⇒ 17)
- 21 Return to previous screen
- 22 Select drive (BD/DVD/CD, SD card or USB device) (⇒ 17)
- 23 Show playback menu (⇒ 28)
- 24 **For Middle East** Reproduce more natural audio (⇒ 29)









- 5 Remote control signal sensor
Distance: Within approx. 7 m
Angle: Approx. 20° up and down, 30° left and right
- 6 Open or close the disc tray (⇒ 17)
- 7 SD Card LED
 - It is possible to set the LED to turn on/off. (⇒ 31)
- 8 SD card slot (⇒ 17)
- 9 USB port (⇒ 17)
 - There is another port at the back of the main unit. Two USB ports cannot be used simultaneously.

For Australia and New Zealand

USB ports can be used simultaneously only with the supplied Wireless LAN Adaptor (⇒ 12).

- 10 Stop (⇒ 18)
 - 11 Start play (⇒ 18)
- Rear panel terminals (⇒ 8–13)

Playable discs/Cards/USB devices

| Type | Logo examples | Type detail | Playable contents* |
|------|---|---|--|
| BD |  | BD-Video | Video |
| | | BD-RE | Video JPEG |
| | | BD-R | Video DivX® |
| DVD |  | DVD-Video | Video |
| |  | DVD-RAM | Video AVCHD JPEG |
| |  | DVD-R | Video AVCHD DivX® MP3 JPEG |
| |  | DVD-R DL | |
| |  | DVD-RW | Video AVCHD |
| | — | +R/+RW/+R DL | |
| CD |  | Music CD | Music [CD-DA] |
| | — | CD-R CD-RW | DivX® Music [CD-DA] MP3 JPEG |
| SD |  | SD Memory Card (from 8 MB to 2 GB) (Including miniSD Card and microSD Card) SDHC Memory Card (from 4 GB to 32 GB) (Including microSDHC Card) SDXC Memory Card (48 GB, 64 GB) (Including microSDXC Card) | MPEG2 AVCHD JPEG |
| USB | — | USB device (up to 128 GB) | DivX® MP3 JPEG |

* See page 7, 40–41 for more information on the types of content that can be played.








■ Discs that cannot be played in this unit

Any other disc that is not specifically supported or previously described.








- 2.6 GB and 5.2 GB DVD-RAM
- DVD-RAM that cannot be removed from their cartridges
- Super Audio CD
- Photo CD
- DVD-Audio
- Video CD and Super Video CD
- WMA discs
- HD DVD

■ Region management information








For Australia and New Zealand

| | |
|--|--|
| BD-Video: This unit plays BD-Video marked with labels containing the region code "B". | Example:     |
| DVD-Video: This unit plays DVD-Video marked with labels containing the region number "4" or "ALL". | Example:    |

For Middle East

| | |
|--|--|
| BD-Video: This unit plays BD-Video marked with labels containing the region code "B". | Example:     |
| DVD-Video: This unit plays DVD-Video marked with labels containing the region number "2" or "ALL". | Example:    |

For Asia

| | |
|--|--|
| BD-Video: This unit plays BD-Video marked with labels containing the region code "A". | Example:     |
| DVD-Video: This unit plays DVD-Video marked with labels containing the region number "3" or "ALL". | Example:    |

■ Finalize

DVD-R/RW/R DL, +R/+RW/+R DL and CD-R/RW recorded by a recorder, etc. needs to be finalized by the recorder to play on this unit. Please refer to the recorder's instructions.

■ BD-Video

- 3D videos can be played back when this unit is connected to a 3D compatible TV using an HDMI cable.
- This unit supports high bit rate audio (Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio and DTS-HD Master Audio) adopted in BD-Video. In order to enjoy these audio formats, refer to page 38.

■ Music CD

Operation and sound quality of CDs that do not conform to CD-DA specifications (copy control CDs, etc.) cannot be guaranteed.

■ SD card

- MiniSD Cards, microSD Cards, microSDHC Cards and microSDXC Cards can be used, but must be used with an adaptor card. These are usually supplied with such cards, or otherwise customer provided.
- Keep the Memory Card out of reach of children to prevent swallowing.
- To protect the card's contents, move the record prevention tab (on the SD card) to "LOCK".
- This unit is compatible with SD Memory Cards that meet SD Card Specifications FAT12 and FAT16 formats, as well as SDHC Memory Cards in FAT32 format (Does not support long file name.) and SDXC Memory Cards in exFAT.
- If the SD card is used with incompatible computers or devices, recorded contents may be erased due to the card being formatted etc.
- Useable memory may be slightly less than the card capacity.



■ USB device

- This unit does not guarantee connection with all USB devices.
- This unit does not support USB device charging.
- FAT12, FAT16 and FAT32 file systems are supported.
- This unit supports USB 2.0 High Speed.

■ BD-RE, BD-R

Discs recorded in DR mode using Panasonic Blu-ray Disc recorders may not playback the audio etc., correctly.




- It may not be possible to play the above media in some cases due to the type of media, the condition of the recording, the recording method and how the files were created.
- The producers of the disc can control how discs are played. So you may not always be able to control play as described in these operating instructions. Read the disc's instructions carefully.

STEP 1 : Connecting to a TV

- Do not place the unit on amplifiers/receiver or equipment that may become hot. The heat can damage the unit.
- Before making any connections we suggest you temporarily disconnect all the units from AC power.
- Do not connect video signals through a video recorder. Due to copy guard protection the picture may not be displayed properly.
- Refer to page 39, about recommended settings for each piece of connected equipment.
- Please use High Speed HDMI Cables that have the HDMI logo (as shown on the cover). It is recommended that you use Panasonic's HDMI cable. When outputting 1080p signal, please use HDMI cables 5.0 meters or less.


Recommended part number (High Speed HDMI Cable):
RP-CDHS15 (1.5 m), RP-CDHS30 (3.0 m),
RP-CDHS50 (5.0 m), etc.

**Highest Quality
(VIDEO)**

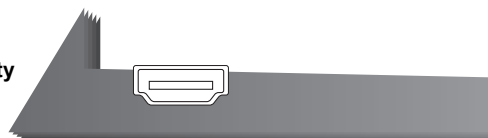


■ Via an HDMI MAIN AV OUT terminal

- It is possible to playback 3D videos by connecting this unit with a 3D compatible TV.

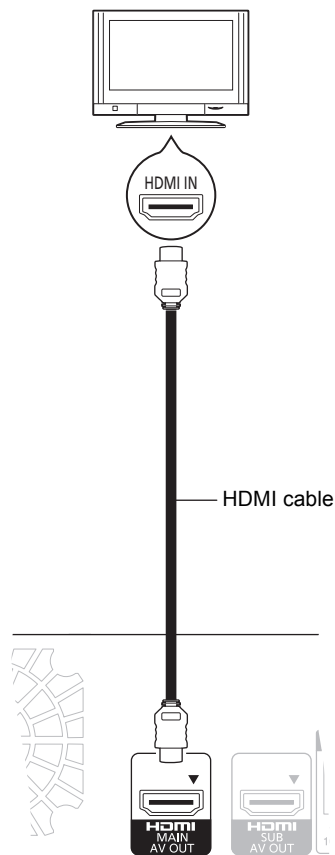


- Set “HDMI Video Mode” and “HDMI Audio Output” to “On” (⇒ 32).
- The HDMI connection using HDMI MAIN AV OUT supports VIERA Link “HDAVI Control” (⇒ 27).

■ Via a COMPONENT VIDEO OUT terminal

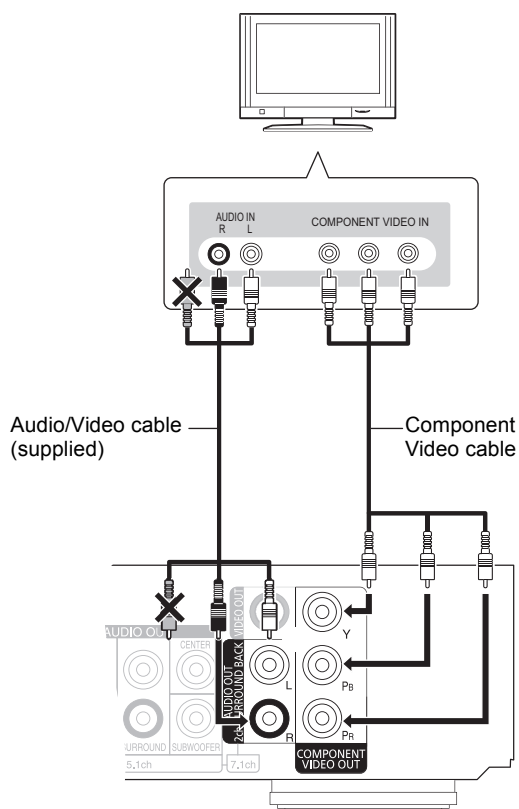

- Connect terminals of the same colour.
- Set "Component Resolution" to "576p/480p", "720p" or "1080i". (⇒ 32)
- Set "HDMI Video Mode" to "Off" (⇒ 32).

■ Via a VIDEO OUT terminal

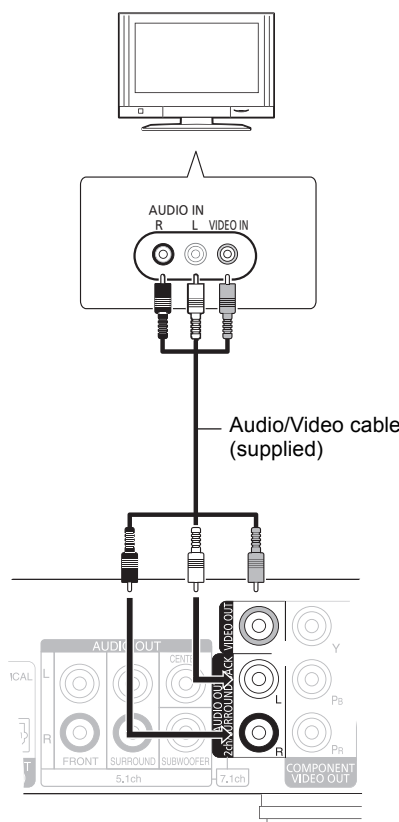


- Connect terminals of the same colour.

STEP 2 : Connecting to an amplifier/receiver

Digital Audio

■ Via an HDMI MAIN AV OUT terminal


- It is possible to playback 3D videos when the connected TV and amplifier/receiver are 3D compatible.

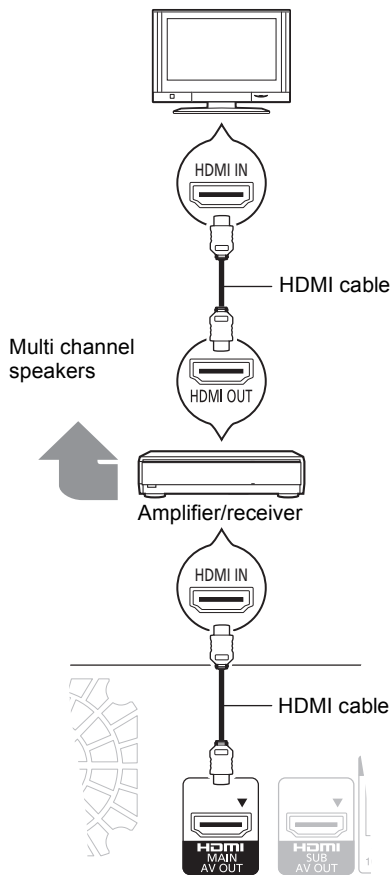

- Set "HDMI Video Mode" and "HDMI Audio Output" to "On" (⇒ 32).
- Set "Digital Audio Output" depending on the connected amplifier/receiver (⇒ 31).
- The HDMI connection using HDMI MAIN AV OUT supports VIERA Link "HDAVI Control" (⇒ 27).

■ Via an HDMI MAIN AV OUT and HDMI SUB AV OUT terminal


- It is possible to playback 3D videos when the connected TV is 3D compatible, even if the amplifier/receiver is not 3D compatible.

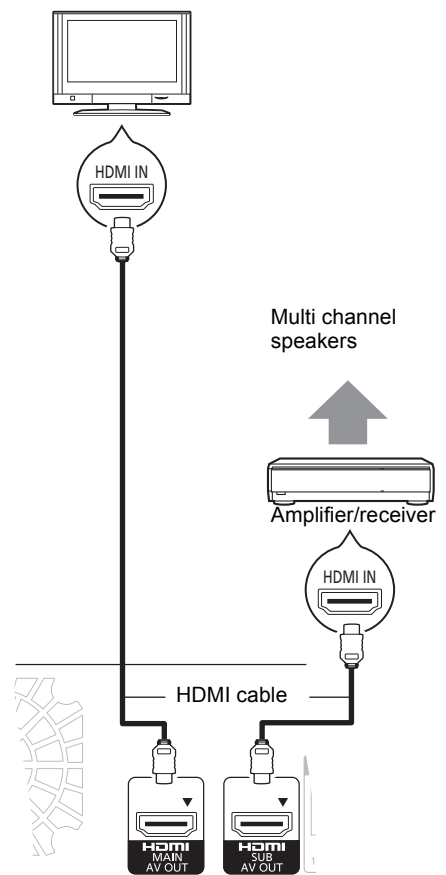

- Set "HDMI Video Mode" and "HDMI Audio Output" to "On" (⇒ 32).
- Set "HDMI(SUB) Output Mode" to "V.OFF(Video Off)". (⇒ 22)
 - Audio is output in high resolution regardless of compatibility of the amplifier/receiver with 3D.
- The HDMI connection using HDMI MAIN AV OUT supports VIERA Link "HDAVI Control" (⇒ 27). The HDMI SUB AV OUT terminal is not compatible with the VIERA Link "HDAVI Control".


Analog Audio

■ Via a COAXIAL or OPTICAL terminal

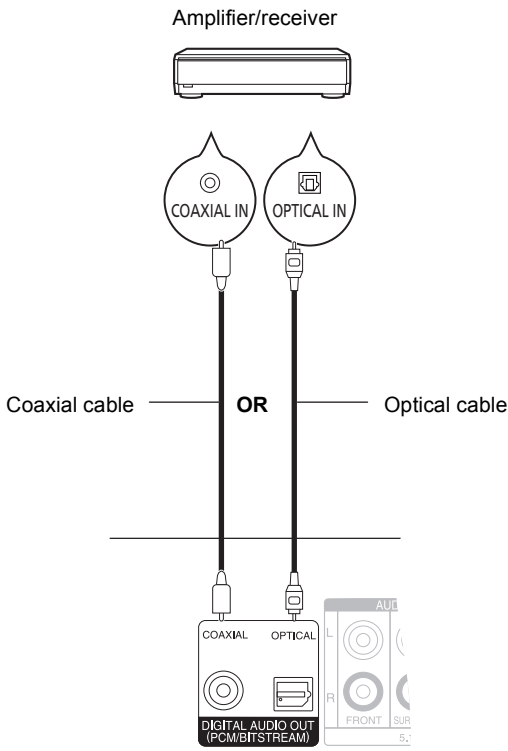

- When connecting a TV (⇒ 8) with HDMI AV OUT terminal, set "HDMI Audio Output" to "Off" (⇒ 32).
- Set "Digital Audio Output" depending on the used terminal and connected amplifier/receiver (⇒ 31).

■ Via a 5.1/7.1ch AUDIO OUT terminal

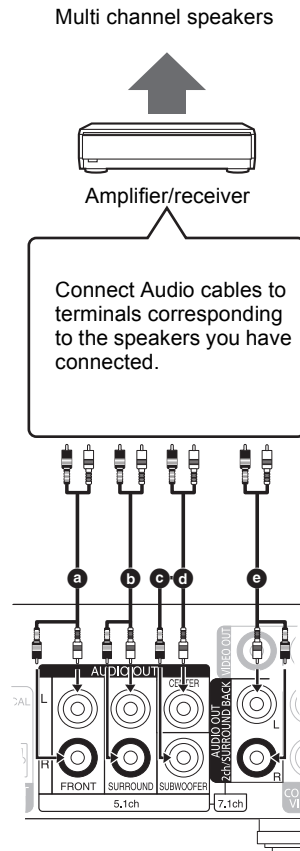

Cable connections

- a** Front speaker (L/R)
 - b** Surround speaker (L/R)
 - c** Subwoofer
 - d** Centre speaker
 - e** Surround back speaker (L/R)
(Only for 7.1ch AUDIO OUT)
- Set "Analog Audio Output" to "7.1ch" or "2ch (Downmix) + 5.1ch", depending on the used terminal (⇒ 32).
 - You can set the "Analog Audio Output" from the "Easy Setting" (⇒ 14).
 - When connecting equipment with HDMI AV OUT terminal, set "HDMI Audio Output" to "Off" (⇒ 32).


STEP 3 : Connecting to a broadband network

The following services can be used when this unit is connected to broadband.

- Firmware can be updated (⇒ 16)
- You can enjoy BD-Live (⇒ 20)
- You can enjoy VIERA CAST (⇒ 24) **Except For Middle East**
- DLNA feature (⇒ 25) **For Australia and New Zealand**

For details about connection method, refer to the instructions supplied with the connected equipment.


■ Using LAN (ethernet) cable

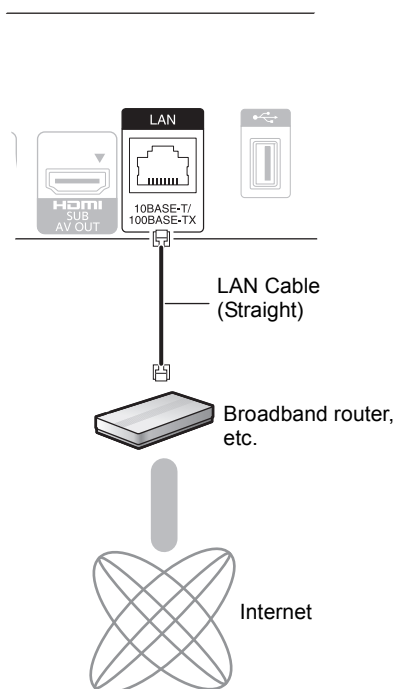

- Use shielded LAN cables when connecting to peripheral devices.
- Inserting any cable other than a LAN cable in the LAN terminal can damage the unit.

For Australia and New Zealand

■ Using Wireless LAN Adaptor DY-WL10

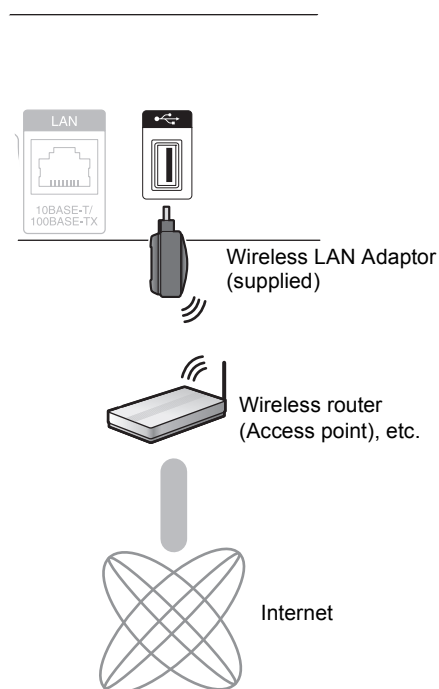

- Wireless LAN Adaptors other than the supplied Wireless LAN Adaptor cannot be used.
- When connection conditions are poor, use the supplied USB extension cable to connect the Wireless LAN Adaptor provided with this unit.
- Do not use any other USB extension cables except the supplied one.
- For up to date compatibility information on your Wireless router (Access Point) refer to <http://panasonic.jp/support/global/cs/>
- The unit is not compatible with public wireless LAN services provided in airports, stations, cafes etc.

For Australia and New Zealand

Precautions of Wireless LAN Adaptor

The following limits are in place regarding the usage of this device. You must be aware of these limits before using this device. Panasonic will in no way be responsible for any incidental damage which may arise due to a failure to obey these limits, or to any condition of use or disuse of this device.


- **Do not use this device to connect to any wireless network for which you do not have usage rights.**

During automatic searches in a wireless network environment, wireless networks (SSID*) for which you do not have usage rights may be displayed; however, using these networks may be regarded as illegal access.

* An SSID (Service Set IDentification) is a name used by wireless LAN to identify a particular network. Transmission is possible if the SSID matches for both devices.

- **Data transmitted and received over radio waves may be intercepted and monitored.**
- **This wireless LAN adaptor contains delicate electronic components.** Please use this adaptor in the manner in which it was intended and follow the following points.
 - Do not expose the adaptor to high temperatures or direct sunlight.
 - Do not bend, or subject the adaptor to strong impacts.
 - Keep the adaptor away from moisture.
 - Do not disassemble or alter the adaptor in any way.
 - Do not attempt to install the adaptor in any incompatible device.

STEP 4 : Connecting AC mains lead

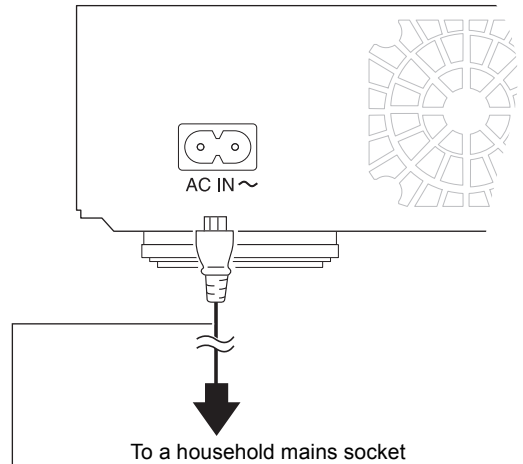

AC mains lead (supplied)

For Middle East

Use the AC mains lead that matches the socket for the area you live in.

For Saudi Arabia




BE SURE TO READ THE CAUTION FOR THE AC MAINS LEAD ON PAGE 2 BEFORE CONNECTION.

For Asia


Use the AC mains lead that matches the socket for the area you live in.

For Taiwan

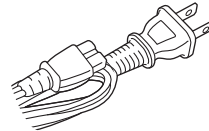


For Thailand

- AC mains lead with a label is for Thailand.

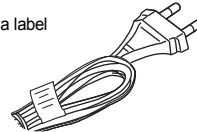

For other areas

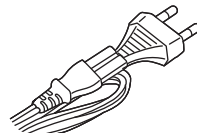

- This unit consumes a small amount of AC power ("Quick Start": "Off", approx. 0.2 W) even when turned off. In the interest of power conservation, if you will not be using this unit for an extended period of time, it can be disconnected.

STEP 5 : Setting

Easy Setting

After connecting your new player for the first time and pressing [⏻], a screen for the basic settings will appear.

Preparation

Turn on the television and select the appropriate video input on the television.

1 Press [⏻].

Setup screen appears.

If this unit is connected to a Panasonic TV (VIERA) supporting HDAVI Control 2 or later via an HDMI cable, then the setting information on the TV is acquired by this TV.


2 Follow the on-screen instructions and make the settings with [▲, ▼] and press [OK].

"On-Screen Language" **For Asia**, "TV Aspect", "Analog Audio Output" and "Quick Start" are set. (⇒ 31 – 33)

After completing "Easy Setting", you can perform "Network Easy Setting".



- You can perform this setup anytime by selecting "Easy Setting" in the Setup menu. (⇒ 33)
- You can also change these settings individually. (⇒ 31 – 33)
- Initial setting is set to "2ch (Downmix) + 5.1ch", so you will need to select "7.1ch" if using the 7.1ch output.

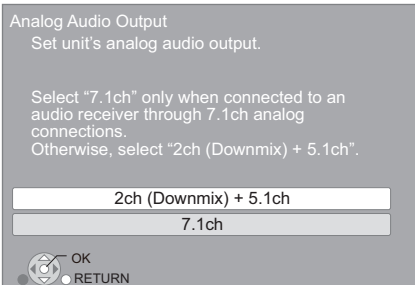


Network Easy Setting

For Australia and New Zealand

After completing "Easy Setting", you will be asked to perform "Network Easy Setting".

Select "Wired" or "Wireless" and press [OK].

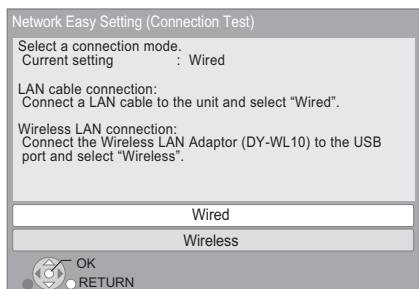

■ "Wired" connection


Follow the on-screen instructions to make your connection settings.

- When you experience problems (⇒ 15)

■ "Wireless" connection

If you select "Wireless" and "Wireless LAN Adaptor is not connected." is displayed, check that the Wireless LAN Adaptor is fully inserted. Alternatively, disconnect and reconnect it. If there is still no change in the display, consult your dealer for advice.

Select "WPS (PUSH button)" or "Search for access point" and then follow the on-screen instructions and make the settings.

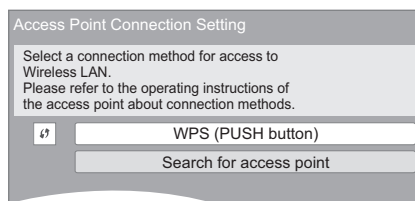

WPS (PUSH button):

If your Wireless router (Access point) supports WPS (PUSH button), you can easily perform the settings by pressing WPS button on it.


WPS (Wi-Fi Protected Setup) is a standard that facilitates settings relating to the connection and security of wireless LAN devices.

- ① Press WPS button or corresponding button of Wireless router (Access point) until the lamp starts flashing.
 - For details, refer to the operating instruction of Wireless router (Access point).

- ② Press [OK].

* Wi-Fi Protected Setup-compatible Wireless router (Access point) may have the mark.


e.g.

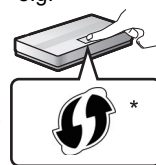


Search for access point:

Available Wireless routers (Access points) are searched and listed. You can select the one to use from the list.

- ① Press [▲, ▼] to select SSID of Wireless router (Access point) you want to connect with. Then press [OPTION] to show information of the selected router, make a note of the authentication and encryption type.

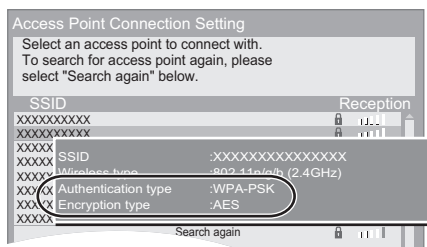

- If you can not find the SSID, select "Search again".
- ② Press [RETURN] and then press [OK]. Then select an item on the following screen which corresponds to the authentication type noted down in step ① above.

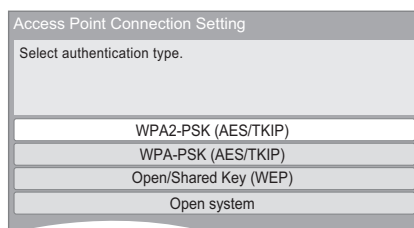


Follow the on-screen instructions to make the settings.

- Input your encryption key code in "Encryption Key" supplied with your Wireless router (Access point).


When you experience problems with settings

Access Point Connection Setting

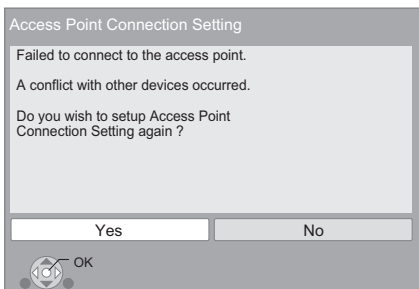

| Display | Check the following |
|---|---|
| A conflict with other device occurred. | <ul style="list-style-type: none"> Please wait a few moments, and then try again. |
| A time out error occurred. | <ul style="list-style-type: none"> Setting of the Wireless router (Access point) for MAC Address etc. The signal may be weak. Using the supplied USB extension cable, adjust the position of the Wireless LAN Adaptor. Do not use any other USB extension cables except the supplied one. |
| An authentication error or a time out error occurred. | <ul style="list-style-type: none"> The SSID and the encryption key of the Wireless router (Access point). Please wait a few moments, and then try again. |
| A device error occurred. | <ul style="list-style-type: none"> Connection of Wireless LAN Adaptor If there is no improvement in symptom, consult your dealer. |


Network Easy Setting (Connection Test)

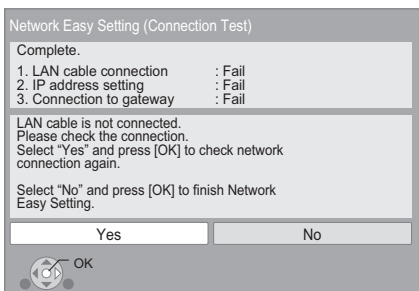

| Display | Check the following |
|---|---|
| 1. LAN cable connection or Connection to access point :Fail | <ul style="list-style-type: none"> Connection of the LAN cables (⇒ 12) |
| 2. IP address setting :Fail | |
| 3. Connection to gateway :Fail | |

| | |
|---|---|
| 1. LAN cable connection or Connection to access point :Pass | <ul style="list-style-type: none"> Connection and settings of the hub and router Settings of "IP Address / DNS Settings" (⇒ 33) |
| 2. IP address setting :Fail | |
| 3. Connection to gateway :Fail | |
| 1. LAN cable connection or Connection to access point :Pass | |
| 2. IP address setting :Home network available | |
| 3. Connection to gateway :Fail | |
| 1. LAN cable connection or Connection to access point :Pass | |
| 2. IP address setting :Pass | |
| 3. Connection to gateway :Fail | |

Network Easy Setting (Internet Connection Test)

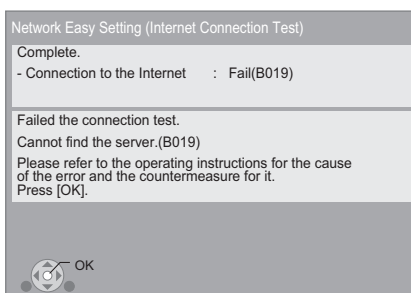

| Display | Check the following |
|---|--|
| Cannot find the server. (B019) | <ul style="list-style-type: none"> "Primary DNS" and "Secondary DNS" settings of "IP Address / DNS Settings" (⇒ 33) |
| Failed to connect to the server. (B020) | <ul style="list-style-type: none"> The server may be busy or the service may have been suspended. Please wait a few moments, and then try again. Settings of "Proxy Server Settings" (⇒ 33) and the router |




- Refer to the operating instructions of the hub or router.
- You can perform this setup anytime by selecting "Network Easy Setting" in the Setup menu. (⇒ 33)
- You can redo these settings individually using "Network Settings". (⇒ 33)
- After performing network settings on this unit, the settings (encryption level, etc.) of the Wireless router (Access point) might change. When you have trouble getting online on your PC, perform the network settings on your PC in accordance with the settings of Wireless router (Access point).

Network Easy Setting

For Middle East and Asia

After completing "Easy Setting", you can continuously perform "Network Easy Setting".

Follow the on-screen instructions and make the settings with [◀, ▶] and press [OK].

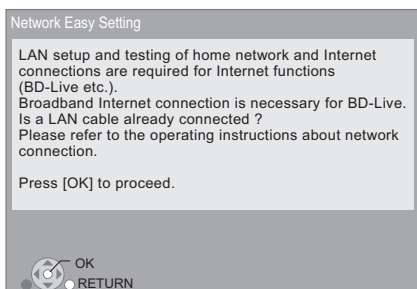

- When you experience problems (⇒ 15)


Firmware updating

Occasionally, Panasonic may release updated firmware for this unit that may add or improve the way a feature operates. These updates are available free of charge.

This unit is capable of checking the firmware automatically when connected to the Internet via a broadband connection. When a new firmware version is available, the following screen is displayed.



DO NOT DISCONNECT the unit from the AC power or perform any operation while the update takes place. After the firmware is installed, "FINISH" will be displayed on the unit's display. Unit will restart and the following screen will be displayed.

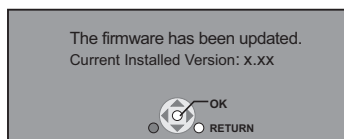

- You can perform update anytime by selecting "Firmware Update" in the Setup menu. (⇒ 33)
- If downloading on this unit fails or this unit is not connected to the Internet, then you can download the latest firmware from the following website and burn it to a CD-R to update the firmware. <http://panasonic.jp/support/global/cs/> (This site is in English only.) To show the firmware version on this unit. (⇒ 33, "System Information")
- Downloading will require several minutes. It may take longer or may not work properly depending on the connection environment.
- If you do not want to check for the latest firmware version, set "Automatic Update Check" to "Off". (⇒ 33)

STEP 6 : Reprogramming the remote control

For other Panasonic products

If you have more than one Panasonic player/recorder and the remote control operates both products at once, you will need to change the remote control code on one product to prevent this occurrence. After changing the remote control code on this product, you will need to change the code of the remote control. (⇒ 33, "Remote Control")

For TV or amplifier/receiver

You can operate the TV or amplifier/receiver using the unit's remote control.

- 1 For televisions**
Input the 2-digit code (⇒ 43) with the number buttons while pressing [TV].

For amplifiers/receivers

Input the 2-digit code (⇒ 43) with the number buttons while pressing [RECEIVER – VOL].


e.g., 01: [0] ⇒ [1]

- 2 Test by turning on the television or adjusting the volume of the amplifier/receiver.**



- If your television or amplifier/receiver brand has more than one code listed, select the one that allows correct operation.

Inserting or removing a media

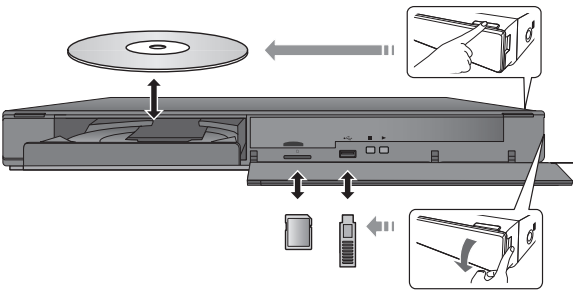

- When inserting a media item, ensure that it is facing the right way up.
- When the indicator on this unit's display blinks, do not turn off the unit or remove the media. Such action may result in loss of the media's contents.
- When removing the SD card, press on the centre of the card and pull it straight out.
- If you connect a Panasonic product with a USB connection cable, the setup screen may be displayed on the connected equipment. For details, refer to the instructions for the connected equipment.

■ To switch drives

Press [DRIVE SELECT] to select “BD/DVD/CD”, “SD card” or “USB device”.


- If media is inserted while the unit is stopped, the drive switches automatically depending on the inserted media.

FUNCTION menu

Major functions of this unit can be operated from the FUNCTION menu.

Press [▲, ▼] to select the item and press [OK].

e.g.

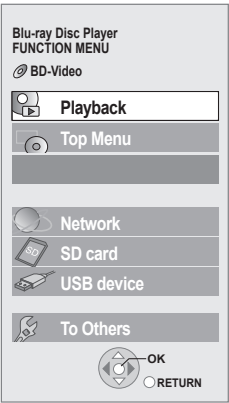

| | | |
|-----------------------------------|--------------------|--|
| Playback | | Play back the contents. |
| Top Menu | | (⇒ 18) |
| Menu | | (⇒ 18) |
| Viewing Picture | | (⇒ 23) |
| Viewing Video | | (⇒ 18) |
| Listening Music | | (⇒ 24) |
| Network Except For Middle East | | For Australia and New Zealand Home Network (DLNA)(⇒ 25) Internet Content: Displays the Home screen of the VIERA CAST (⇒ 24) |
| | | For Asia Displays the Home screen of the VIERA CAST (⇒ 24) |
| BD/DVD/CD | | Switches to each drive. |
| SD card | | |
| USB device | | |
| To Others | Playlists | You can play playlists created on DVD-VR. |
| | Setup | (⇒ 30) |
| | Card Management | (⇒ 20) |

To exit the screen

Press [FUNCTION MENU].




- Items to be displayed may vary with the media.
- If FUNCTION screen is not displayed, press [FUNCTION MENU].

Playing video contents

BD DVD CD SD USB

Preparation

Turn on the television and select the appropriate video input on the television.

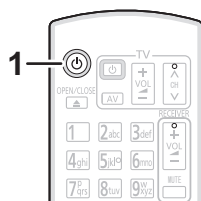

1 Press [⏻] to turn on the unit.

2 Insert the media.

Play starts.

- If the menu is displayed, press [▲, ▼, ◀, ▶] to select the item and press [OK].
- When a message screen is displayed while playing back 3D compatible video software, play back in accordance with the instructions.
- If play does not start, press [▶] (PLAY).

■ To show menus

You can display Top Menu, DIRECT NAVIGATOR or Pop-up Menu.

Press [TOP MENU/DIRECT NAVIGATOR] or [POP-UP MENU].

- Press [▲, ▼, ◀, ▶] to select the item and press [OK].
- Pop-up menu also appears by pressing [OPTION] and selecting "Pop-up Menu".


■ To show the status messages

While playing, press [STATUS].

The status messages give you information about what is currently being played. Each time you press [STATUS], the display information may change or will disappear from the screen.

e.g. BD-Video

T: Title, C: Chapter, PL: Playlist

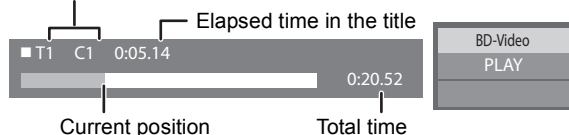

- Signal from PAL discs is output as PAL. Signal from NTSC discs is output as "NTSC" or "PAL60". You can select "NTSC" or "PAL60" in "NTSC Contents Output" for NTSC discs. (⇒ 30)
- DISCS CONTINUE TO ROTATE WHILE MENUS ARE DISPLAYED. Press [■] when you have finished playback to protect the unit's motor, your television screen and so on.
- Depending on media and contents, the display may change or may not appear.
- DivX: Successive play is not possible.
- It is not possible to playback AVCHD and MPEG2 video which have been dragged and dropped, copied and pasted to the media.

Other operations during play

These functions may not work depending on the media and contents.

Stop

Press [■].

The stopped position is memorized.

Resume play function

Press [▶] (PLAY) to restart from this position.

- The position is cleared if the tray is opened or you press [■] several times to display "STOP" on the unit's display.
- **On BD-Video discs including BD-J (⇒ 44), the resume play function does not work.**

Pause

Press [II].

- Press [II] again or [▶] (PLAY) to restart play.

Search/Slow-motion

Search

While playing, press [◀◀] or [▶▶].

- Music and MP3: The speed is fixed to a single step.

Slow-motion

While paused, press [◀◀] or [▶▶].

- BD-Video and AVCHD: Forward direction [▶▶] only.

The speed increases up to 5 steps.

- Press [▶] (PLAY) to revert to normal playback speed.

Skip

While playing or paused, press [◀◀] or [▶▶].

Skip to the title, chapter or track you want to play.

- Each press increases the number of skips.

Frame-by-frame

While paused, press [◀] (◀II) or [▶] (II▶).

- Press and hold to change in succession forward or backward.
- Press [▶] (PLAY) to revert to normal playback speed.
- BD-Video and AVCHD: Forward direction [▶] (II▶) only.

Changing audio

Press [AUDIO].

You can change the audio channel number or soundtrack language (⇒ 28), etc.

Useful functions

- 1 Press [OPTION].
- 2 Select an item, then press [OK].

While DIRECT NAVIGATOR screen is displayed

| | |
|---------------------|--|
| Properties | To display the title properties (recording date, etc.) |
| Chapter View | To select the chapter |
| To Picture | Playing still pictures (⇒ 23) |
| Folder | To switch to another folder. |
| View Titles | For Australia and New Zealand To select the title. |

While playing

| | |
|----------------------|--|
| Screen Aspect | When black bars are shown at the top and bottom or left and right sides of the screen, you can enlarge the image to fill the screen. |
| Top Menu | To display Top Menu. |
| Pop-up Menu | To display Pop-up Menu. |
| Menu | To display Menu. |

- Depending on the played contents if you perform "Screen Aspect", there may be no effect.
- When "TV Aspect" (⇒ 32) is set to "4:3 Pan & Scan" or "4:3 Letterbox", the "Zoom" effect in "Screen Aspect" is disabled.



- Depending on the media and contents, displayed items are different.

Enjoying BD-Live or BONUSVIEW in BD-Video

What is BONUSVIEW?

BONUSVIEW allows you to enjoy functions such as picture-in-picture or secondary audio etc.

What is BD-Live?


In addition to the BONUSVIEW function, BD-Live allows you to enjoy more functions such as subtitles, exclusive images and online games by connecting this unit to the Internet.

- The usable functions and the operating method may vary with each disc, please refer to the instructions on the disc and/or visit their website.

Playing picture-in-picture

To turn on/off secondary video

Press [PIP].

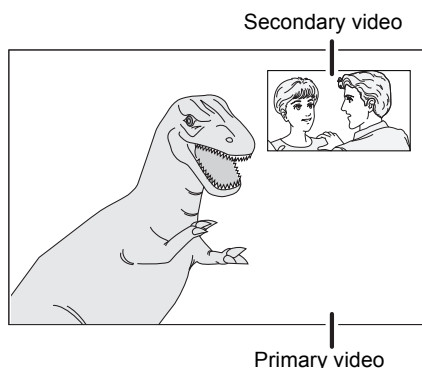

To turn on/off secondary audio

[DISPLAY] ⇒ select "Disc" ⇒ [▶] ⇒ select "Signal Type" ⇒ [OK] ⇒ set "Soundtrack" in "Secondary Video" to "On" or "Off"



- During search/slow-motion or frame-by-frame, only the primary video is displayed.
- When "BD-Video Secondary Audio" in "Digital Audio Output" is set to "Off", secondary audio will not be played (⇒ 31).

Enjoying BD-Live discs with Internet

Some BD-Live content available on the Blu-ray discs may require an Internet account to be created in order to access the BD-Live content. Follow the screen display or instruction manual of the disc for information on acquiring an account.

1 Connect to the network. (⇒ 12)


2 Insert an SD card (with 1 GB or more free space). SD card is used as the local storage (⇒ 44).

3 Insert the disc.

Deleting data/Formatting SD cards

There are various functions in BD-Video that you can enjoy by copying data to the SD card. If you no longer need data recorded on the SD card, you can delete data with the following operation.

- ① Insert an SD card.
- ② Press [FUNCTION MENU].
- ③ Press [▲, ▼] to select "To Others" and press [OK].
- ④ Press [▲, ▼] to select "Card Management" and press [OK].
- ⑤ Press [▲, ▼] to select "BD-Video Data Erase" or "Format SD Card" and press [OK].

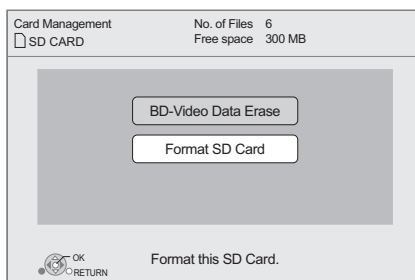

- ⑥ Press [◀, ▶] to select "Yes" and press [OK].
- ⑦ Press [◀, ▶] to select "Start" and press [OK].



- To use the above functions, it is recommended that you format the card on this unit. If the SD card you use is formatted, all data on the card will be erased. It cannot be recovered.
- "BD-Live Internet Access" may need to be changed for certain discs (⇒ 30).
- When discs supporting BD-Live are played back, the player or disc IDs may be sent to the content provider via the Internet.

Regarding DivX

ABOUT DIVX PLUS™ HD: **For Australia and New Zealand**

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video, including DivX Plus™ HD video (H.264/.MKV) up to 1080p and premium content. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO: **For Middle East and Asia**

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu.

Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

- Video images of the DivX VOD contents stored on USB device can be output only through the HDMI output terminal.

Display the unit's registration code.

(⇒ 33, "DivX Registration" in "General")



10 alphanumeric characters

- After playing DivX VOD content for the first time, the registration code is not displayed.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content.

Cancel the unit's registration.

(⇒ 33, "DivX Registration" in "General")

Press [◀, ▶] to select "Yes" in "DivX Registration".

Use the deregistration code to cancel the registration in www.divx.com.

Regarding DivX VOD content that can only be played a set number of times

Some DivX VOD contents can only be played a set number of times. When you play this content, the number of times already played and initially playable number of times is displayed.

- The remaining number of plays decreases each time a programme is played. However, when playing from the point where play was previously stopped, the remaining number of plays does not decrease due to the resume play function.

■ Displaying subtitle text

Except for Asia

You can display subtitle text on the DivX video disc on this unit.

This function has no relation to the subtitles specified in DivX standard specifications and has no clear standard. The operation might be different or it may not operate properly depending on the way the file was made or the state of this unit (playing, stopped, etc.).

Set "Subtitle" in "Disc" (⇒ 28)



- DivX video files that do not display "Text" do not contain subtitle text.
- If the subtitle text is not displayed correctly, try changing the language settings. (⇒ 30)
- You may not display subtitle text depending on a file.

Enjoying Blu-ray 3D™ video

BD

You can enjoy powerful videos with realistic sensations of the Blu-ray 3D™ compatible video software by connecting this unit with a High Speed HDMI Cable to a 3D compatible TV.



When playing back a disc that has recorded titles with a 2 screen structure (Side by side) etc. which can be enjoyed in 3D, it will playback in accordance with the 3D settings on the TV, regardless of the settings mentioned to the table below (except for "HDMI(SUB) Output Mode" ⇒ 32).

- Screen displays, such as Playback menu, will not display correctly.

Preparation

Connect 3D compatible TV to an HDMI MAIN AV OUT terminal of this unit using a High Speed HDMI Cable. (⇒ 8, 10)

- Perform the necessary preparations for the TV.

Method of playback is the same as normal disc playback.
(⇒ 18)

- Playback following the instructions displayed on the screen.

3D settings

Perform the following settings as necessary.

| | |
|-----------------------------|---|
| Playback method for 3D disc | It is also possible to playback 3D discs in 2D (conventional video). (⇒ 30) |
| 3D Type | If you cannot playback in 3D, change the settings as required by the connected TV format. (⇒ 32) <ul style="list-style-type: none">• Change the settings for 3D on the TV also when "Side by side" is selected. |
| HDMI(SUB) Output Mode | If the amplifier/receiver is connected to the HDMI SUB AV OUT terminal (⇒ 10), set to "V.OFF(Video Off)". (⇒ 32) <ul style="list-style-type: none">• HDMI (SUB) V.OFF LED on this unit will light. (⇒ 31) |
| 3D Playback Message | Hide the 3D viewing warning screen. (⇒ 30) |
| Graphic Display Level | Adjust the pop-up position for the playback menu or message screen etc. (⇒ 29) |




- Please refrain from viewing 3D images if you do not feel well or are experiencing visual fatigue.
In the event that you experience dizziness, nausea, or other discomfort while viewing 3D images, discontinue use and rest your eyes.
- Depending on the connected TV, the video being played back might switch to 2D video due to changes in resolution etc. Check the 3D setting on the TV.
- 3D video might not output the way it is set in "HDMI Video Format" (⇒ 32) or "24p Output" (⇒ 32).

Playing still pictures


BD DVD CD SD USB

(BD-RE, DVD-RAM/-R/-R DL, CD-R/RW, SD Card, USB device)

- 1 Insert a disc, SD card or USB device.
If the menu is displayed, press [▲, ▼] to select the item and press [OK].
- 2 BD-RE, DVD-RAM
Press [▲, ▼, ◀, ▶] to select the album and press [OK].

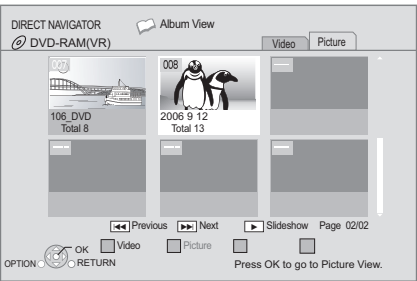

- 3 Press [▲, ▼, ◀, ▶] to select the still picture and press [OK].

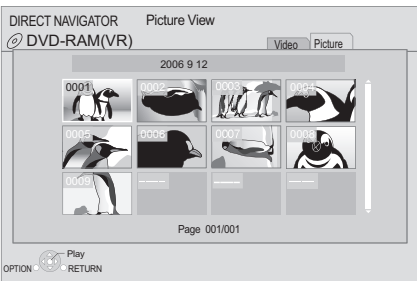

Press [◀, ▶] to display the previous or next still picture.

To show DIRECT NAVIGATOR screen or exit the screen
Press [TOP MENU/DIRECT NAVIGATOR].

To show the picture properties

While playing, press [STATUS] twice.

e.g. JPEG on DVD-RAM
Shooting date



To exit the screen
Press [STATUS].

Useful functions

- 1 Press [OPTION].
- 2 Select an item, then press [OK].

While "Album View" or "Picture View" screen is displayed

| | |
|-------------------|---|
| Start Slideshow | You can display still pictures one by one at a constant interval. |
| Slideshow Setting | Display interval Change the display interval. Transition Effect Set display method. Repeat Play Repeat slideshow. Soundtrack The MP3 that is recorded on the USB device or the music CD can be played back as background music during the slideshow. Soundtrack Folder A folder to playback can be selected when a USB device with recorded MP3 is connected to this unit. Press [▲, ▼, ◀, ▶] to select "Set" and press [OK]. |
| Select Folder | To switch to another higher folder <ul style="list-style-type: none">Only if there is a multiple number of higher folders recognizable |
| Folder | To select the still pictures in another folder |
| To Video | Playing video contents (⇌ 18) |
| To album view | To display album view. |

While playing (except for slideshow)

| | |
|--------------|--|
| Rotate RIGHT | Rotate the still picture. |
| Rotate LEFT | |
| Zoom out | Reduce the still picture <ul style="list-style-type: none">This function is only available for small-sized still pictures. |
| Zoom in | Cancel "Zoom out" |



- Depending on the media and contents, displayed items are different.
- When a still picture with large number of pixels is played, the display interval may become longer. Even if the setting is changed, the display interval may not become shorter.
- When both the music CD and the USB device with recorded MP3 is inserted to this unit, the music CD has a priority to be played back as background music.

Playing music


DVD CD USB

(DVD-R/-R DL, music CD, CD-R/RW, USB device)

1 Insert a disc or USB device.

If the menu is displayed, press [▲, ▼] to select the item and press [OK].

2 Press [▲, ▼] to select the track and press [OK].

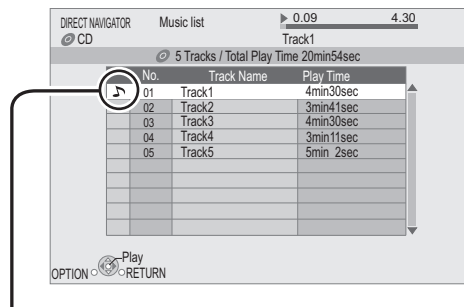

“” indicates the track currently playing.

To show DIRECT NAVIGATOR screen or exit the screen
Press [TOP MENU/DIRECT NAVIGATOR].

■ Playing a track in another folder

While the “Music list” is displayed

Press [OPTION], press [▲, ▼] to select “Select Folder” and press [OK].



- You cannot select folders that contain no compatible tracks.

Enjoying VIERA CAST

Except For Middle East

You can access a selection of Internet services from the Home screen with VIERA CAST, for example YouTube, Picasa Web Albums. (Current as of December 2009)

Preparation

- Network connection (⇒ 12)
- Network setting (⇒ 14)

1 Press [VIERA CAST].


Message is displayed. Please read these instructions carefully and then press [OK].

2 Press [▲, ▼, ◀, ▶] to select the item and press [OK].

Operable buttons:

[▲, ▼, ◀, ▶], [OK], [RETURN], coloured buttons, number buttons

VIERA CAST Home screen;

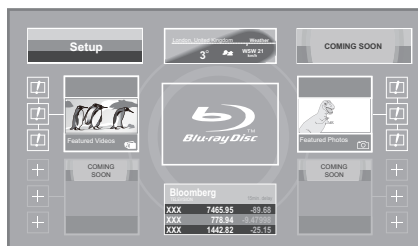

Images are for illustration purposes, contents may change without notice.

To return to VIERA CAST Home screen

Press [VIERA CAST].

To exit from VIERA CAST

Press [EXIT], [FUNCTION MENU] or [TOP MENU/DIRECT NAVIGATOR].



- In the following cases, settings are possible using “Internet Content Settings” (⇒ 33)
 - When restricting the use of VIERA CAST.
 - When the audio is distorted.
 - When wrong time is displayed
- If using slow Internet connection, the video may not be displayed correctly. A high-speed Internet service with a speed of at least 6 Mbps is recommended.
- Be sure to update the firmware when a firmware update notice is displayed on the screen. If the firmware is not updated, you will not be able to use the VIERA CAST function. (⇒ 16)
- VIERA CAST home screen is subject to change without notice.
- The services through VIERA CAST are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- All features of websites or content of the service may not be available.
- Some content may be inappropriate for some viewers.
- Some content may only be available for specific countries and may be presented in specific languages.

DLNA feature

For Australia and New Zealand

You can enjoy viewing video and pictures saved on a DLNA Certified media server (such as a PC with Windows 7 installed etc.) connected to the home network with this unit. You also can enjoy viewing them with Panasonic DLNA compatible recorders (DIGA).


- The countries where DIGA is available are limited. Refer to following site for availability.

<http://panasonic.jp/support/global/cs/>

- For the operation of equipment connected to the network, refer their respective operating instructions.

Preparation

- ① Perform network connection (⇒ 12) and network setting (⇒ 14).
- ② Connect a DLNA Certified media server to the network.

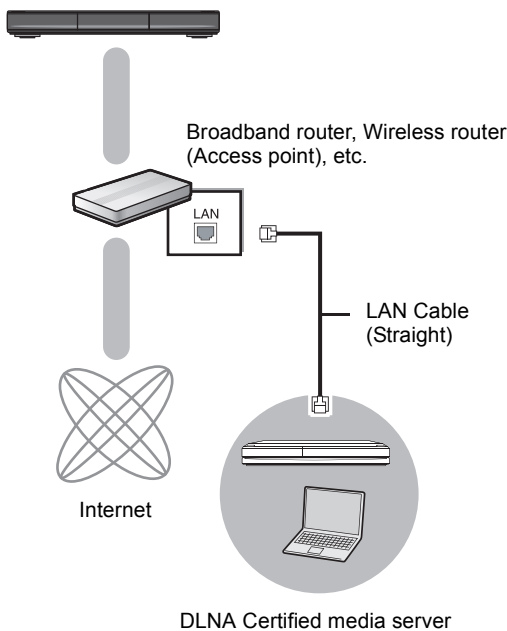

When connected to a Panasonic DLNA compatible recorder (DIGA)


Perform the Home Network (DLNA) setup.

When a message requesting operation of the equipment to be registered is displayed, perform the operations in steps 1-4 of "Viewing of video and pictures on the equipment connected to this unit via the network" (⇒ right).

Viewing of video and pictures on the equipment connected to this unit via the network

- 1 Press [FUNCTION MENU].
- 2 Press [▲, ▼] to select "Network" and press [OK].
- 3 Press [▲, ▼] to select "Home Network (DLNA)" and press [OK].
 - A list of equipment connected via the network is displayed.
 - This list can be updated by pressing the red button on the remote control.

e.g.

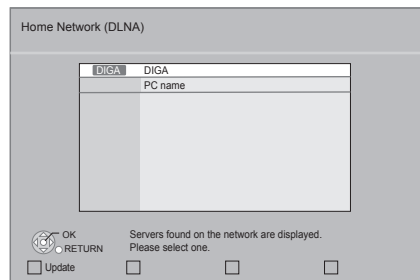


- 4 Press [▲, ▼] to select the equipment to playback the contents, and press [OK]

- 5 Press [▲, ▼, ◀, ▶] to select the item to playback (folder), and press [OK]

- Menu structure will be different depending on the equipment connected to this unit. Select the contents by repeating the operation.
- Control Panel is displayed once the playback starts. Operation can be performed with [▲, ▼, ◀, ▶], [OK], [RETURN] and [EXIT].

Control Panel

e.g.

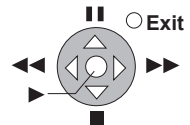

- Press [OK] if the Control Panel is not displayed.



- Discs or music cannot be played back. Also, depending on the equipment, playback of pictures may not be possible.
- Items displayed in grey on the display cannot be played back by this unit.
- This unit cannot be played back via connected equipment.
- Depending on the performance of the connected PC, video frames may be dropped during playback, or video may not playback at all.

Useful functions for when playing back pictures

The following operations are possible when playing back pictures from connected equipment.

While contents list is displayed

- ① Press [OPTION].
- ② Select an item, then press [OK].

| | |
|---------------------------|---|
| Start Slideshow | You can display still pictures one by one at a constant interval. |
| Slideshow Settings | Display interval Change the display interval. Repeat Play Repeat slideshow. Press [▲, ▼, ◀, ▶] to select “Set” and press [OK]. |

While playing

- ① Press [OPTION].
 - If OPTION menu is not displayed, press [OPTION] again.
- ② Select an item, then press [OK].

| | |
|--|-------------------------------------|
| Status | Show the picture properties (⇒ 23). |
| Rotate RIGHT (except for slideshow) | Rotate the still picture. |
| Rotate LEFT (except for slideshow) | |

Linked operations with the TV

(VIERA Link “HDAVI Control™”)

What is VIERA Link “HDAVI Control”?

VIERA Link “HDAVI Control” is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) or other device under “HDAVI Control”.

You can use this function by connecting the equipment with an HDMI cable*. See the operating instructions for connected equipment for operational details.

* Only when connecting via an HDMI MAIN AV OUT terminal on this unit.

Preparation

- ① Set “VIERA Link” to “On” (⇒ 32).
(The default setting is “On”.)
- ② Set the “HDAVI Control” operations on the connected equipment (e.g., TV).
- ③ Turn on all “HDAVI Control” compatible equipment and select this unit’s input channel on the connected TV so that the “HDAVI Control” function works properly.
Also when the connection or settings are changed, repeat this procedure.

Automatic input switching Power on link

When the following operations are performed, the television will automatically switch the input channel and display the corresponding action. When the television is off, the television will automatically turn on.

- When play starts on the unit
- When an action that uses the display screen is performed (e.g., DIRECT NAVIGATOR screen)
- When “HDMI(SUB) Output Mode” (⇒ 32) is set to “Normal” and the power of the device connected to the HDMI SUB AV OUT is turned on, the Power on link to the device connected to the HDMI MAIN AV OUT will not work.

Power off link

All connected equipment compatible with “HDAVI Control”, including this unit, automatically turns off when you switch the television off.

Playing music continuously even after turning off power to the television

When the unit is connected to a Panasonic TV (VIERA) that supports HDAVI Control 2 or later and an amplifier/receiver supports VIERA Link.


- ① While playing music
Press [OPTION].
- ② Press [▲, ▼] to select “TV Power” and press [OK].

Easy control only with VIERA remote control

Only TV supports “HDAVI Control 2” or later

By using the TV remote control, you can play discs using the “Control Panel” and display the Top Menu or Pop-up Menu, etc.

- 1 Press [OPTION].
- 2 Select an item, then press [OK].

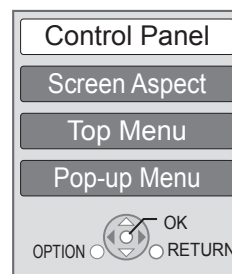

- The OPTION menu may not appear while the Top Menu for BD-Video or DVD-Video is displayed.




- The buttons that you can use for this unit vary depending on the TV. For details, refer to the operating instructions of the TV.
- The operation of this unit may be interrupted when you press incompatible buttons on the TV remote control.
- This unit supports “HDAVI Control 5” function.
“HDAVI Control 5” is the newest standard (current as of December, 2009) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.
- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for other manufacturers’ equipment supporting VIERA Link function.

Playback menu

1 Press [DISPLAY].

e.g., BD-Video

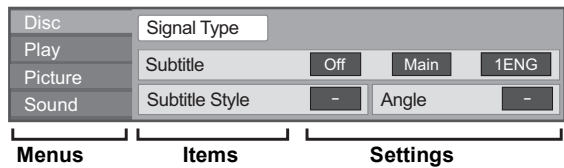

2 Press [▲, ▼] to select the menu and press [▶].

3 Press [▲, ▼, ◀, ▶] to select the item and press [▶].

4 Press [▲, ▼] to select the setting.

Some items can be changed by pressing [OK].

To exit the screen

Press [DISPLAY].

Depending on the condition of the unit (playing, stopped, etc.) and media contents, there may be some items that you cannot select or change.

Regarding Language, Audio attribute and video attribute:
(⇒ 43)

Disc

Signal Type

Primary Video

| | |
|------------|---|
| Video | The recording method of original video appears. |
| Soundtrack | Select the type of audio or language. |

Secondary Video

| | |
|------------|--|
| Video | Select on/off of images. The recording method of original video appears. |
| Soundtrack | Select on/off of audio and the language. |

Video

The recording method of original video appears.

Soundtrack

Show or change the soundtrack.

Subtitle

Turn the subtitle on/off, and change the language depending on the media.

Subtitle Style

Select the subtitle style.

Audio channel

Select the audio channel number. (⇒ 18, Changing audio)

Angle

Select the number of the angle.

Some items may be changed only on the disc specific menu.
(⇒ 18)

Play

Repeat Play

(Only when the elapsed time is being displayed on the unit's display.)

Select the item which you want to repeat. The items displayed differ depending on the type of media.

Select "Off" to cancel.

Random

Select whether or not to play random.

Playback Information Window

Displays the following.

| | |
|--|--|
| | Audio/video attribute information of disc. |
| | Settings status of "Digital Audio Output"(⇒ 31). |
| | HDMI output information. (First: HDMI(MAIN), Second: HDMI(SUB)) |

Press [RETURN] to exit.

Graphic Display Level

(Only when "Full HD" is selected in "3D Type" (⇒ 32).)

Pop-up position for the play back menu or message screen etc. can be adjusted during 3D playback.

Picture

Mode

Select the picture quality mode during play.

- If you select "User", you can make further adjustments.
Press [►] to select "Picture Adjustment" and press [OK].
- 3D NR: Reduces the rough noise in the background to give a greater feeling of depth.
When "24p Output" is set to "On", this function may not operate. (⇒ 32)
- Integrated NR: Smoothes block noise and reduces the smudging that appears around contrasting sections of the picture.

Advanced Settings

Chroma Process

The high-resolution processing of HDMI chroma signals produces a high-resolution picture with rich picture quality.

Detail Clarity

The picture is sharp and detailed.

Super Resolution

Pictures of normal image quality are corrected to sharp and detailed images when output as 1080i/1080p from HDMI AV OUT or COMPONENT VIDEO OUT.

Progressive

Select the method of conversion for progressive output to suit the type of material being played.

- If the video is disrupted when "Auto" is selected, select either "Video" or "Film" depending on the material to be played back.

24p

Movies and other material recorded on DVD-Video at 24p are output at 24p.

- Only when you have selected "On" in "24p Output" (⇒ 32) and play discs recorded at a rate of 60 fields per second.

Sound

Sound Effects^{*1 *2}

Select the sound effect.

- **Digital Tube Sound:**
This feature gives you warm sound, like that produced by a vacuum tube amplifier.
- **Re-master:**
This feature gives you brighter sound by increasing the high frequency portion of the audio. (Discs recorded at 48 kHz or less)

Recommended setting

| | |
|-------------|--------------|
| Re-master 1 | Pop and rock |
| Re-master 2 | Jazz |
| Re-master 3 | Classical |

For Middle East

You can also change settings by pressing [RE-MASTER].

- **Night Surround:**

Enjoy a movie with powerful sound even when the volume is kept low at night. The audio is set in such a way that it can be heard easily.

Dialog Enhancer^{*2}

The volume of the centre channel is raised to make dialog easier to hear.

High Clarity Sound

When connected to TV via the HDMI terminal for outputting image, it produces clearer sound.

- Only when you have selected "Enable" in "High Clarity Sound". (⇒ 31)


^{*1} Not every function can be set individually.

^{*2} This function is effective for audio from the HDMI terminal or the COAXIAL /OPTICAL terminal only when "Digital Audio Output" is set to "PCM" (⇒ 31). (However, in this case, audio is output as 2ch from the COAXIAL / OPTICAL terminal.)

Setup menu

Change the unit's settings if necessary. The settings remain intact even if you switch the unit to standby.

- 1 While stopped
Press [SETUP].

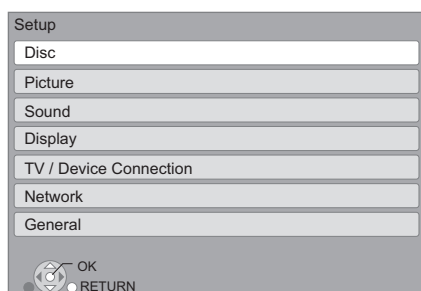

- 2 Press [**▲**, **▼**] to select the menu and press [**OK**].
- 3 Press [**▲**, **▼**] to select the item and press [**OK**].
If there are any other items, repeat these steps.
- 4 Press [**▲**, **▼**, **◀**, **▶**] to select the option and press [**OK**].

To exit the screen

Press [SETUP].

- There may be differences in operation methods. If this happens, follow the on-screen instructions for the operation.

About the password

The following items use the same password.
Don't forget your password.

- "DVD-Video Ratings"
- "BD-Video Ratings"
- "Lock" (⇒ 33)

Disc

DVD-Video Ratings

Set a ratings level to limit DVD-Video play.

- Follow the on-screen instructions. Enter the 4-digit password with the number buttons when the password screen is shown.

BD-Video Ratings

Set an age limit of BD-Video play.

- Follow the on-screen instructions. Enter the 4-digit password with the number buttons when the password screen is shown.

Playback method for 3D disc

Select the playback method of 3D compatible video software.

3D Playback Message

Set to display or hide the 3D viewing warning screen when playing back the 3D compatible video software.

Soundtrack Preference

Choose the language for audio.

- If "Original" is selected, the original language of each disc will be selected.
- Enter a code (⇒ 43) with the number buttons when you select "Other * * * *".

Subtitle Preference

Choose the language for subtitle.

- If "Automatic" is selected and the language selected for "Soundtrack Preference" is not available, subtitles of that language will automatically appear if available on that disc.
- Enter a code (⇒ 43) with the number buttons when you select "Other * * * *".

Menu Preference

Choose the language for disc menus.

- Enter a code (⇒ 43) with the number buttons when you select "Other * * * *".

BD-Live Internet Access (⇒ 20)

You can restrict Internet access when BD-Live functions are used.

- If "Limit" is selected, Internet access is permitted only for BD-Live contents which have content owner certificates.

DivX Subtitle Text

Except for Asia

Select a suitable item according to the language used for DivX subtitles text (⇒ 21).

- This item is displayed only after playing back a file.

Picture

Still Mode

Select the type of picture shown when you pause playback.

| | |
|------------------|--|
| Automatic | Automatically selects the type of picture shown. |
| Field | Select if jittering occurs when "Automatic" is selected. |
| Frame | Select if small text or fine patterns cannot be seen clearly when "Automatic" is selected. |

Seamless Play

The chapter segments in playlists are played seamlessly.

- Select "On", when the picture freezes for a moment at the chapters segment in playlists.

NTSC Contents Output

Select PAL60 or NTSC output when playing NTSC discs.

Sound

Dynamic Range Compression

You can listen at low volumes but still hear dialog clearly. (Dolby Digital, Dolby Digital Plus and Dolby TrueHD only)

- "Auto" is effective only when playing Dolby TrueHD.

Digital Audio Output (⇒ 38)

Press [OK] to show the following settings.

Dolby D/Dolby D +/Dolby TrueHD DTS/DTS-HD MPEG Audio

Select the audio signal to output.

- Select "PCM", when the connected equipment cannot decode the respective audio format.
- Not making the proper settings may result in noise.

BD-Video Secondary Audio

Select whether to mix or not mix the primary audio and secondary audio (including the button click sound). (⇒ 20)

- If "Off" is selected, the unit outputs the primary audio only.

PCM Down Conversion

Select how to output audio with a sampling frequency of 96 kHz for the PCM output from the DIGITAL AUDIO OUT.

- If "On" is selected, the signals that are converted to 48 kHz are output.
- If "Off" is selected, and the connected equipment does not support 96 kHz, the sound will not be output normally.
- Signals are converted to 48 kHz despite the settings in the following cases:
 - when the signals have a sampling frequency of 192 kHz
 - when the disc has copy protection
 - when "BD-Video Secondary Audio" is set to "On"

Downmix

Select the downmix system of multi-channel to 2-channels sound.

- Select "Surround encoded", when the connected equipment supports the virtual surround function.
- There is no effect on "Bitstream" via HDMI AV OUT and DIGITAL AUDIO OUT.
- The audio will be output in "Stereo" in the following cases.
 - AVCHD playback
 - Playback of secondary audio (including the button click sound).

7.1ch Audio Reformatting

Surround sound with 6.1ch or less is automatically expanded and played back at 7.1ch.

- If "Off" is selected, sound is played over the original number of channels.
(Note that in the case of 6.1ch audio, playback will be at 5.1ch.)

Audio reformatting is enabled in the following cases:

- When you have selected "PCM" in "Digital Audio Output".
- When the audio is Dolby Digital, Dolby Digital Plus, Dolby TrueHD or LPCM.

High Clarity Sound

When connected to TV via the HDMI terminal for outputting image, it produces clearer sound.

- Set to "Enable" and then set "High Clarity Sound" on the playback menu to "On". (⇒ 29)

Audio Delay

Synchronisation between picture and sound is corrected by adjusting the delay time of the audio output.

Display

On-Screen Messages

Choose whether to show status messages automatically.

For Asia

On-Screen Language

Choose the language for menus and on-screen messages.

Screen Saver Function

This is to prevent burn-in on the screen.

- When this is set to "On":
 - If there is no operation for 10 minutes or more, DIRECT NAVIGATOR screen switches to FUNCTION screen automatically.
- While playing and pausing, etc., this function is not available.
- While playing music (CD-DA or MP3), after about 2 minutes DIRECT NAVIGATOR screen switches to a blank screen with "Screen Saver" message.

FL Display

Changes the brightness of the unit's display.

- If "Automatic" is selected the display is dimmed during playback and bright except during playback.

SD Card LED Control

Set the lighting method for the SD card LED.

- If "SD inserted" is selected, and this unit is turned on and SD card is inserted, the lamp is lit.

HDMI(SUB) V.OFF LED Control

Set to light the HDMI (SUB) V.OFF LED or not.

- This will light when "HDMI(SUB) Output Mode" (⇒ 32) is set to "V.OFF(Video Off)", and the power of the connected equipment to the HDMI SUB AV OUT is on.

Software Licence

Information about the software used by this unit is displayed.

TV / Device Connection

3D Type



Select the format of the connected TV.

- Change the settings for 3D on the TV also when "Side by side" is selected.

TV Aspect

Set to match the type of television connected.

When connected to a 4:3 aspect television and playing 16:9 ratio image:

| | | |
|---------------------------|---|---|
| 4:3 Pan & Scan | The sides are cut off so the picture fills the screen. When playing BD-Video, video is output as "4:3 Letterbox". |  |
| 4:3 Letterbox | Black bands appear at the top and bottom of the picture. |  |

When connected to a 16:9 widescreen television and playing 4:3 ratio image:

| | |
|------------------|--|
| 16:9 | Video is displayed as a 4:3 ratio image in the centre of the screen. |
| 16:9 full | Video is displayed as a horizontally stretched 16:9 image. |

HDMI Connection

Press [OK] to show the following settings.

HDMI Video Mode

Select "On" when video is output from HDMI AV OUT terminal.

| | |
|------------|--|
| On | Images are output from the HDMI terminal in the resolution set in "HDMI Video Format". |
| Off | Images are output in the resolution set in "Component Resolution". |

HDMI(SUB) Output Mode

Set to output the video from the HDMI SUB AV OUT terminal or not.

HDMI Video Format

The items supported by the connected devices are indicated on the screen as "✱". When any item without "✱" is selected, the images may be distorted.

- If "Automatic" is selected, automatically selects the output resolution best suited to the connected television.
- To enjoy high-definition video up-converted to 1080p, you need to connect the unit directly to 1080p compatible HDTV (High Definition Television). If this unit is connected to an HDTV through other equipment, the other must also be 1080p compatible.

24p Output

When this unit is connected to a TV supporting 1080/24p output using an HDMI cable, movies and other material recorded at 24p are output at 24p.

- When playing DVD-Video, set to "On" and then set "24p" in "Picture" (⇒ 29) to "On"
- When BD-Video images other than 24p are played, images are output at 60p.

HDMI Colour Mode

This setting is for selecting colour-space conversion of the image signal when the unit is connected using an HDMI cable.

HDMI Audio Output

This setting selects whether or not to output audio from HDMI.

- Select "Off" when the TV is connected to this unit via an HDMI terminal, and this unit is also connected to other devices, such as an amplifier/receiver via a COAXIAL or an OPTICAL terminal.

VIERA Link

Set to use "HDAVI Control" function when connected with an HDMI cable to a device that supports "HDAVI Control".

- Select "Off" when you do not want to use "HDAVI Control".

Deep Colour Output

This setting is for selecting whether to use Deep Colour Output when a television that supports Deep Colour is connected.

Contents Type Flag

Depending on the playback content, the TV will output adjusting to the optimal method when a TV that supports this function is connected.

Component Resolution

This sets the video output resolution when using the component video terminal.



480i, 480p: When playing NTSC discs









576i, 576p: When playing PAL discs


- Even if you select "720p" or "1080i", the video output resolution is restricted to "576p/480p" when DVD-Video discs, DivX and BD-Video discs recorded at a rate of 50 field per second are output from the COMPONENT VIDEO OUT terminals.


Analog Audio Output

You can set the optimum multi-channel surround sound for your speakers from this unit when the settings cannot be adjusted from a connected amplifier/receiver with AUDIO OUT terminals.

Select "2ch (Downmix) + 5.1ch" or "7.1ch" and press [OK], and then set the following options.

– Speaker presence and size (       )

– Delay time ()

– Channel balance ()

To finish the speaker setting

Press [▲, ▼, ◀, ▶] to select "Complete" and press [OK].

TV System

Perform the setup so it matches the TV System of the connected TV.

- When NTSC contents are played, they are outputted in the signal format specified in the "NTSC Contents Output", irrespective of the settings here.

Network

Network Easy Setting(⇒ 14)

Network Settings

Perform network-related settings individually.
Press [OK] to show the following settings.

For Australia and New Zealand

LAN Connection Mode

Select connection method.

For Australia and New Zealand

Access Point Connection Setting

This allows the Wireless router (Access point) and connection settings to be set and the current connection settings and connection state to be checked when a wireless connection is used.

Connection Setting

The Wireless router (Access point) connection wizard will be displayed.

Double Speed Mode Setting (2.4GHz)

When a 2.4 GHz wireless format is used, this setting sets the connection speed.

- If you connect using the “Double Speed Mode(40MHz)”, two channels use the same frequency band, and there is consequently a greater risk of reception interference. This can cause the connection speed to drop or the connection to become unstable.

IP Address / DNS Settings

This is for checking the state of the network connection and setting the IP address and DNS-related.
Press [OK] to show the respective setting.

- “Connection Speed Setting” is enabled only when “Connection Speed Auto-Config” is turned “Off”.

Proxy Server Settings

This is for checking the state of connection with the Proxy server and performing settings.
Press [OK] to show the respective setting.

For Australia, New Zealand and Asia

Internet Content Settings (⇒ 24) (VIERA CAST)

Press [OK] to show the following settings.

Lock

You can restrict the usage of VIERA CAST.

- Follow the on-screen instructions. Enter the 4-digit password with the number buttons when the password screen is shown.

Audio Auto Gain Control

Volume that is different depending on the contents is adjusted automatically to the standard volume while using the VIERA CAST.

- Depending on contents, this function effect will not work.
- Select “Off” when the audio is warped.

Time Zone

By selecting the time zone, it is possible to set the unit's time to match your location.

- Some VIERA CAST contents require the time zone to be set. Set the time zone if necessary.

Summer Time

- Select “On” when using Daylight Saving time.

MAC Address

Displays the MAC address of this unit.

General

Remote Control

Change the remote control code if other Panasonic products react to this remote control.

Quick Start

Speed of startup from standby mode is increased.

- Internal control unit will be powered when it is set to “On” so compared to when the setting is “Off” the following will occur.
 - Idle power consumption will increase. (about the power consumption⇒ 42)
 - The cooling fan may turn slowly to prevent overheating of internal parts.

Easy Setting

You can execute basic settings (“On-Screen Language” **For Asia**, “TV Aspect”, “Analog Audio Output”, “Quick Start”)

Default Settings

This returns all values in the Setup menu and the playback menu, except for “Remote Control”, “On-Screen Language” **For Asia**, “IP Address / DNS Settings”, “Proxy Server Settings”, “Lock”, “DVD-Video Ratings” and “BD-Video Ratings” to the default settings.

DivX Registration (⇒ 21)

You need this registration code to purchase and play DivX Video-on-Demand (VOD) content.

System Information

Display firmware version of this unit.

For Australia and New Zealand

Also displays the wireless LAN module of your Wireless LAN Adaptor.

Firmware Update (⇒ 16)

Press [OK] to show the following settings.

Automatic Update Check

When this equipment remains connected to the Internet, it will check for the latest firmware version when it is turned on and you can update it if necessary.

Update Now

You can update the firmware manually if a firmware update is available.

Troubleshooting guide

Before requesting service, please perform the following steps.

Do you have the latest firmware installed?

Firmware updates may be released to correct operating irregularities that are discovered with certain movies.

(⇒ 16)



Make the following checks.

If the problem remains unresolved, consult your dealer for instructions.

The following do not indicate a problem with this unit:

- Regular disc rotating sounds.
- Image disturbance during search.
- Image disturbance when replacing 3D discs.

■ Unit doesn't respond to remote control or front panel buttons.

Press and hold [⏻/I] on the main unit for 3 seconds.

- If still unable to turn the unit off, disconnect the AC mains lead, wait 1 minute, then reconnect the AC mains lead.

■ Cannot eject disc.

The unit may have a problem.

- ① While the unit is off, press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.
 - “00 RET” is displayed on the unit's display.
- ② Repeatedly press [▶](right) on the remote control or [⏻/I] on the unit until “06 FTO” is displayed on the unit's display.
- ③ Press [OK] on the remote control or [▲ OPEN/CLOSE] on the unit.

General operation

To return to the factory preset.

- Select “Yes” in “Default Settings” in the Setup menu. (⇒ 33)

To return all settings to the factory preset.

- Reset the unit as follows:
 - ① While the unit is off, press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.
 - “00 RET” is displayed on the unit's display.
 - ② Repeatedly press [▶](right) on the remote control or [⏻/I] on the unit until “08 FIN” is displayed on the unit's display.
 - ③ Press and hold [OK] on the remote control or [▲ OPEN/CLOSE] on the unit for at least 3 seconds.

Power of this unit is turned off when the input for the TV is switched.

- This is a normal phenomenon when using VIERA Link (HDAVI Control 4 or later). For details please read the operating instructions for the TV.

The remote control doesn't work properly.

- The remote control and main unit are using different codes. If “SET 1”, “SET 2” or “SET 3” is displayed when a button is pressed on the remote control, change the code on the remote control. (⇒ 33)
- It may be necessary to set the manufacturer code or the remote control code again after changing the batteries for the remote control. (⇒ 16)

The TV tuner mode is not displayed when the TV is switched on.

- This phenomenon may occur, depending on the TV setting, when “Quick Start” is set to “On”.
 - Depending on the TV, this phenomenon may be prevented by reconnecting the HDMI cable to a different HDMI input terminal or by changing the HDMI auto connection setting.

You have forgotten your ratings password. You want to cancel the ratings level.

- The ratings level returns to the factory preset.
 - ① While the unit is on, press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.
 - “00 RET” is displayed on the unit's display.
 - ② Repeatedly press [▶](right) on the remote control or [⏻/I] on the unit until “03 VL” is displayed on the unit's display.
 - ③ Press [OK] on the remote control or [▲ OPEN/CLOSE] on the unit.

Picture

The images from this unit do not appear on the television.

Picture is distorted.

- An incorrect resolution is selected in "Component Resolution" or "HDMI Video Format". Reset the setting as follows:
 - ① While the unit is on, press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.
 - "00 RET" is displayed on the unit's display.
 - ② Repeatedly press [▶] (right) on the remote control or [⏮] on the unit until "04 PRG" is displayed on the unit's display.
 - ③ Press and hold [OK] on the remote control or [▲ OPEN/CLOSE] on the unit for at least 3 seconds.
 - Set the item again. (⇒ 32)
- When Dolby Digital Plus, Dolby TrueHD, and DTS-HD audio are not output in bitstream, select "Yes" in "Default Settings" and make proper settings. (⇒ 33)
- The unit and television are using different video systems. While stopped, keep pressing [■] and [▲ OPEN/CLOSE] on the main unit for 5 or more seconds. The system switches from PAL to NTSC or vice versa.
- The system used on the disc doesn't match your television.
 - PAL discs cannot be correctly viewed on an NTSC television.
 - This unit can convert NTSC signals to PAL60 for viewing on a PAL television ("NTSC Contents Output" in the "Picture").

Video is not output.

- Set the "High Clarity Sound" in the playback menu to "Off" to use the COMPONENT VIDEO OUT terminal or the VIDEO OUT terminal. (⇒ 29)
- Video from the HDMI SUB AV OUT terminal is not output when the "HDMI(SUB) Output Mode" is set to "V.OFF(Video Off)". (⇒ 32)

Video is not output in high-definition.

- Confirm that the "HDMI Video Mode", "HDMI Video Format", and "Component Resolution" in the Setup menu are set properly. (⇒ 32)
- The video output resolution is restricted to "576p/480p" when DVD-Video discs, DivX and BD-Video discs recorded at a rate of 50 field per second are output from the COMPONENT VIDEO OUT terminals.

3D video is not output.

- Is there a non-3D compatible amplifier/receiver connected between this unit and a TV? (⇒ 10)
- If there is a non-3D compatible amplifier/receiver connected to the HDMI SUB AV OUT terminal, set the "HDMI(SUB) Output Mode" to "V.OFF(Video Off)". (⇒ 10)
- Are the settings on this unit and the TV correct? (⇒ 22)
- Is the amplifier/receiver which is connected between this unit and TV on?

3D video is not output correctly as 2D.

- Is the "Playback method for 3D disc" set to "2D Playback"? (⇒ 30)
- Discs that have recorded titles with Side by side (2 screen structure) which can be enjoyed in 3D are played back in accordance with the settings of the TV.

A black band is displayed around the edge of the screen.

The aspect ratio of the screen is abnormal.

- Confirm the "TV Aspect" is set properly. (⇒ 32)
- Adjust the aspect setting on the television. (Adjustment using "Screen Aspect" (⇒ 19) on the unit is also possible.)

Audio

Cannot switch audio.

- When connecting an amplifier/receiver using a COAXIAL/OPTICAL terminal or an HDMI terminal, you cannot switch the audio if "Digital Audio Output" is set to "Bitstream". Set "Digital Audio Output" to "PCM" or connect using AUDIO OUT terminal. (⇒ 11, 31)

Cannot hear the desired audio type.

- Check the connections and the "Digital Audio Output" settings. (⇒ 31)
- When the unit is connected to an amplifier/receiver with the AUDIO OUT terminal, set "Analog Audio Output". (⇒ 32)
- To output audio from a device connected with an HDMI cable, set "HDMI Audio Output" to "On" in the Setup menu. (⇒ 32)
- When connecting this unit to a TV via an HDMI MAIN AV OUT and to an amplifier/receiver via an HDMI SUB AV OUT, set "HDMI(SUB) Output Mode" to "V.OFF(Video Off)". (⇒ 10)

There is no sound coming out from the TV.

- Audio may not output from the TV when the amplifier/receiver is connected to the HDMI SUB AV OUT, and "HDMI(SUB) Output Mode" (⇒ 32) is set to "V.OFF(Video Off)". In such a case, output audio from the amplifier/receiver. To output audio from the TV, set the "HDMI(SUB) Output Mode" to "Normal".

Playback

Disc cannot be played.

- The disc is dirty. (⇒ 4)
- Check the region code.

The contents of the USB device cannot be read.

- USB devices connected using USB extension cable or a USB hub may not be recognized by this unit.

For Australia and New Zealand

The supplied USB extension cable is available for use.

- If inserted during playback the USB device may not be recognized by this unit.
- If two USB devices are connected simultaneously, they will not be recognized by this unit.

For Australia and New Zealand

USB ports can be used simultaneously only with the supplied Wireless LAN Adaptor (⇒ 12).

Still pictures (JPEG) do not playback normally.

- The images that were edited on the PC, such as Progressive JPEG, etc., may not playback.

I can't play back BD-Live.

- The SD card is write-protected. (⇒ 7)
- Confirm that this unit is connected to the broadband Internet. (⇒ 12, 33)
- Confirm the "BD-Live Internet Access" settings. (⇒ 30)
- Confirm an SD Card is inserted into the SD Card slot. (⇒ 17)

Network

I can't connect to the network.

- Confirm the network connection and settings. (⇒ 12, 33)
- Check the operating instructions for each device and connect accordingly.

For Australia and New Zealand

When using Wireless LAN connection, video from the DLNA Certified media server is not played back or video frames are dropped during playback.

- Higher transfer rate router such as 802.11n (2.4 GHz or 5 GHz) Wireless router (Access Point) may solve the problem. If you use 802.11n (2.4 GHz or 5 GHz) Wireless router (Access Point), it is necessary to set the encryption type to "AES".
Simultaneous use with a microwave, cordless telephone etc. at 2.4 GHz may result in connection interruptions or other problems.
- On the "Access Point Connection Setting" screen (⇒ 33), the continuous lighting of at least 4 "Reception" indicators is the target for a stable connection. If 3 or fewer indicators are lit or the connection is being interrupted, change the position or angle of your Wireless router (Access point) and see if the connection state improves. If there is no improvement, connect to a wired network and perform the "Network Easy Setting" (⇒ 14) again.

Messages

The following messages or service numbers appear on the television or unit's display when something unusual is detected during startup and use.

On the television

Cannot play.

- You inserted an incompatible disc.

Cannot play on this unit.

- You tried to play a non-compatible image.
- Confirm "SD" on the unit's display is not blinking and re-insert the card.

No disc is inserted.

- The disc may be upside down.

⊘ This operation is not available.

- Some operations are unsupported by the unit. For example;
 - BD-Video: During playback, reverse slow-motion or reverse frame-by-frame is not possible.

IP address is not set.

- The "IP Address" in "IP Address / DNS Settings" is "---. ---. ---. ---". Set the "IP Address", "Subnet Mask", and "Gateway Address". (Select the automatic address acquisition if necessary.)

For Australia and New Zealand

The current security setting of Wireless LAN is low. It is recommended to change the setting.

- Authentication type for the Wireless LAN is set to "Open system", or the encryption type is set to "No encryption". It is recommended to encrypt for safety reasons. For details, refer to the instructions of the Wireless router being used. Encryption is required when playing back video, etc., from DLNA compatible devices.

On the unit's display

F99

- The unit fails to operate properly. Press [⏻/I] on the main unit for 3 seconds to switch the unit to standby, then switch back on.

HDMI ONLY

- Some BD-Video discs can only be output with HDMI.

NET Except For Middle East

- Displays while VIERA CAST is starting up.

No PLAY

- There is a viewing restriction on a BD-Video or DVD-Video. (⇒ 30)

No READ

- The media is dirty or badly scratched. The unit cannot play.

PLEASE WAIT

- The unit is carrying out internal process. This is not a malfunction. You cannot operate the unit while "PLEASE WAIT" is displayed.

REMOVE

- The USB device is drawing too much power. Remove the USB device.

SET □

("□" stands for a number.)

- The remote control and main unit are using different codes. Change the code on the remote control.

Press and hold [OK] and the indicated number button at the same time for more than 5 seconds.



U59

- The unit is hot.
The unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears.
Select a position with good ventilation when installing the unit. Do not block the cooling fan on the rear of the unit.

U72

U73

- The HDMI connection acts unusually.
 - Turn the unit and TV off.
 - Disconnect the HDMI cable between the player and the TV.
 - Please use HDMI cables that have the HDMI logo.
 - The connected equipment may not be compatible. If connecting through an amplifier/receiver, try connecting directly to the TV to see if message clears.

H□□ or F□□

("□" stands for a number.)

- There is something unusual.
- Check the unit using the troubleshooting guide. If the service number does not disappear, do the following.
 - ① Disconnect the plug from the household mains socket wait a few seconds, then reconnect it.
 - ② Press [⏻/I] to turn the unit on. (The unit may be fixed.) If the service number does not disappear despite doing the above, request service from the dealer. Inform the dealer of the service number when requesting service.

START

- The system is being restarted during the firmware update. Please do not turn off the unit

UPD□/□

("□" stands for a number.)

- The firmware is being updated.
Please do not turn off the unit.

FINISH

- The firmware update is complete.

Audio Information

About audio from audio output terminal

The audio output differs depending on which terminals are connected to the amplifier/receiver, and the settings on the unit. (⇒ 31, Digital Audio Output)

- The number of channels listed is the maximum possible number of output channels.

HDMI AV OUT/DIGITAL AUDIO OUT (Coaxial/Optical)

| Terminal | HDMI AV OUT | | | | DIGITAL AUDIO OUT | |
|---|---------------------------|---------------------------------|------------------------------------|-------|---|-----------------------|
| “Dolby D/Dolby D +/Dolby TrueHD”/“DTS/DTS-HD” | “Bitstream” ^{*1} | | “PCM” ^{*2} | | “Bitstream” | “PCM” |
| “BD-Video Secondary Audio” | “On” ^{*3} | “Off” | “On” ^{*4} | “Off” | “On”/“Off” | “On”/“Off” |
| Dolby Digital/ Dolby Digital EX ^{*5} | Dolby Digital | Outputs using original audio | DVD-Video : 5.1ch PCM | | Dolby Digital/ Dolby Digital EX ^{*6} | Down-mixed 2ch PCM |
| | | | BD-Video : 7.1ch PCM ^{*7} | | | |
| Dolby Digital Plus/ Dolby TrueHD | 7.1ch PCM | | Dolby Digital | | | |
| DTS Digital Surround/ DTS-ES ^{*5} | DTS Digital Surround | | DVD-Video : 5.1ch PCM | | DTS Digital Surround/ DTS-ES ^{*6} | |
| | | | BD-Video : 7.1ch PCM ^{*8} | | | |
| DTS-HD High Resolution Audio/ DTS-HD Master Audio | | | 7.1ch PCM ^{*8} | | DTS Digital Surround | |
| 7.1ch LPCM | 7.1ch PCM | | | | Down-mixed 2ch PCM | |

AUDIO OUT

| Terminal | 7.1ch AUDIO OUT | 5.1ch AUDIO OUT | 2ch AUDIO OUT |
|---|--------------------------------|-----------------|---------------|
| "BD-Video Secondary Audio" | "On" ^{*4} /"Off" | "On"/"Off" | "On"/"Off" |
| Dolby Digital/ Dolby Digital EX | DVD-Video : 5.1ch | 5.1ch | 2ch |
| | BD-Video : 7.1ch ^{*7} | | |
| Dolby Digital Plus/ Dolby TrueHD | 7.1ch | | |
| DTS Digital Surround/ DTS-ES | DVD-Video : 5.1ch | | |
| | BD-Video : 7.1ch ^{*8} | | |
| DTS-HD High Resolution Audio/ DTS-HD Master Audio | 7.1ch ^{*8} | | |
| 7.1ch LPCM | 7.1ch | | |

^{*1} When the connected equipment is not supported with these audio formats, the audio is output as Dolby Digital bitstream, DTS Digital Surround bitstream or down-mixed 2ch PCM (e.g., TV).

^{*2} When the connected equipment is not supported with multi channel surround, the audio is output as down-mixed 2ch PCM.

^{*3} When playing BD-Video without secondary audio or button click sound, the audio is output as the same format as if "BD-Video Secondary Audio" was set to "Off".

^{*4} When playing BD-Video with secondary audio or button click sound, the audio is output as 5.1ch.

^{*5} With PCM output, Dolby Digital EX becomes PCM audio decoded as Dolby Digital, DTS-ES recorded to DVD-Video becomes PCM audio decoded as DTS Digital Surround, and DTS-ES recorded to BD-Video becomes PCM audio decoded as DTS-ES.

^{*6} When "BD-Video Secondary Audio" is set to "On", Dolby Digital EX is output as Dolby Digital and DTS-ES is output as DTS Digital Surround, however if playing BD-Video without secondary audio or button click sound, the audio is output as the original format.

^{*7} When BD-Video is played and "7.1ch Audio Reformatting" is set to "Off", the audio is output as 5.1ch.

^{*8} The audio output is amplified from 5.1ch or 6.1ch to 7.1ch depending on the DTS, Inc. specifications.

Recommended audio output setting

The settings of the audio output vary depending on the connected equipment. Refer to the table below and set each of items.

Press [SETUP] ⇒ “Sound” ⇒ Set each item

For details of the each item, refer to page 31.

| Setup menu | | Example of connected equipment | | | | |
|------------------------|----------------------------------|--------------------------------|---|--|----------------------------------|--|
| | | TV via HDMI ^{*1} | Receiver with HD audio ^{*2} decoder via HDMI | Receiver without HD audio ^{*2} decoder via HDMI | Receiver via COAXIAL or OPTICAL | Receiver via analogue output ^{*3} |
| “Digital Audio Output” | “Dolby D/Dolby D +/Dolby TrueHD” | “PCM” | “ <u>Bitstream</u> ” | “PCM” | “PCM” | No effect |
| | “DTS/DTS-HD” | “PCM” | “ <u>Bitstream</u> ” | “PCM” | “PCM” | No effect |
| | “BD-Video Secondary Audio” | “Off” | “Off” | “Off” | “Off” | “Off” |
| “PCM Down Conversion” | | No effect | No effect | No effect | “ <u>Off</u> ” ^{*4} | No effect |
| “Downmix” | | “ <u>Stereo</u> ” | No effect | No effect | “ <u>Stereo</u> ” ^{*5} | No effect |
| “High Clarity Sound” | | “Enable” | “ <u>Disable</u> ” ^{*6} | “ <u>Disable</u> ” ^{*6} | “ <u>Disable</u> ” ^{*6} | “ <u>Disable</u> ” ^{*6} |

- Because underlined items are the factory presets, it is not necessary to change these settings.

^{*1} If connected to TV via the COAXIAL, OPTICAL or AUDIO OUT terminal, these settings have no effect.

^{*2} HD audio: Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio and DTS-HD Master Audio

^{*3} Set “Analog Audio Output” to “7.1ch” or “2ch (Downmix) + 5.1ch”. (Press [SETUP] ⇒ TV / Device Connection)

^{*4} If the connected equipment that does not support 96 kHz, set to “On”.

^{*5} If the connected equipment that supports the virtual surround function, set to “Surround encoded”.

^{*6} When connected to TV via the HDMI terminal for outputting image, set to “Enable”.

About MP3/JPEG/DivX/AVCHD/MPEG2 files

MP3

| | |
|-------------------------|--|
| File format | MP3 |
| Extension | Files must have the extension ".mp3" or ".MP3". |
| Compression rate | 32 kbps to 320 kbps |
| Sampling rate | 44.1 kHz/48 kHz |
| Reference | ID3 tags: version 1, 2.2, 2.3, 2.4 (Only titles and the names of artists) |

JPEG

| | |
|---------------------------|--|
| File format | JPEG |
| Extension | Files must have the extension ".jpg" or ".JPG". |
| Picture resolution | between 34×34 and 8192×8192 pixels (sub sampling is 4:2:2 or 4:2:0) |
| Reference | JPEG conforming DCF* is supported. • MOTION JPEG and Progressive JPEG is not supported. |

- * Design rule for Camera File system: unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).
• DVD-RAM must conform to UDF 2.0.
• BD-RE must conform to UDF 2.5.

DivX

| | |
|---------------------------|---|
| File format | DivX |
| Extension* | Files must have the extension ".DIVX", ".divx", ".AVI" or ".avi". |
| Picture resolution | Up to 1920×1080 pixels |
| Reference | <ul style="list-style-type: none"> • DivX certified to play DivX video up to HD 1080p, including premium content. Video <ul style="list-style-type: none"> – Number of stream: Up to 1 – Codec*: MPEG-4 SP (Simple Profile), MPEG-4 ASP (Advanced Simple Profile). – FPS (Frame Per Second)*: Up to 60 fps Audio <ul style="list-style-type: none"> – Number of stream: Up to 8 – Format*: MP3, MPEG, Dolby Digital – Multi channel: Dolby Digital is possible. MPEG multi is 2 ch conversion. • GMC (Global Motion Compensation) is not supported. |

- * **For Australia and New Zealand**: The following (DivX Plus HD) is added to the above DivX specification.
Extension: ".MKV" or ".mkv"
Video Codec: MPEG-4 AVC/H.264
FPS (Frame Per Second):
From 320×240 to 1920×1080: 30 fps
Specifically at 1280×720: 60 fps
Audio Format: MP3, MPEG, Dolby Digital, AAC
• This unit supports DivX files less than 4 GB in a USB device.

- DVD-R and DVD-R DL must conform to UDF 1.02 without ISO9660 and UDF 1.5 with ISO9660.
- BD-R must conform to UDF 2.5.

Subtitles text file of DivX

Except for Asia

| | |
|--------------------|--|
| File format | Subtitles text file of DivX MicroDVD, SubRip, or TMLPlayer |
| Extension | Files must have the extension ".SRT", ".srt", ".SUB", ".sub", ".TXT" or ".txt" |
| Reference | <ul style="list-style-type: none"> • The DivX video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions. • Depending on the methods used to create the file or the state of the recording, only parts of the subtitles may be displayed, or the subtitles may not be displayed at all. <p>For Australia and New Zealand</p> <ul style="list-style-type: none"> • If a file extension is ".mkv" or ".MKV", you can not display the subtitle text. |

AVCHD

| | |
|--------------------|--|
| File format | AVCHD format (V1.0) used on High Definition Video Camera (Panasonic and some others) |
| Codec | MPEG-4 AVC/H.264 |
| | • Discs must conform to UDF 2.5. |

MPEG2


| | |
|--------------------|---|
| File format | SD-Video format* used on Standard Definition Video Camera (Panasonic and some others) |
| Codec | MPEG2 |
| | * SD-Video Entertainment Video Profile |



- With certain recording states and folder structures, the play order may differ or playback may not be possible.
- CD-R, CD-RW : ISO9660 level 1 or 2 (except for extended formats), Joliet
This unit is compatible with multi-session.
This unit is not compatible with packet writing.
- DVD-R, DVD-R DL (except for AVCHD) : ISO9660 level 1 or 2 (except for extended formats), Joliet, UDF bridge (UDF 1.02/ISO9660)
This unit is not compatible with multi-session.
This unit is not compatible with packet writing.

Structure of folders that can be played in this unit

You can play files on this unit by structure of folders as shown below. However depending on the method of writing data (writing software), play may not be in the order you numbered the folders.

 : Folder which can be displayed with this unit

***: Numbers

XXX: Letters

*¹ ***: from 001 to 999

*² ***: from 100 to 999

XXXXX: 5 figures

*³ ****: from 0001 to 9999


XXXX: 4 figures

Structures of still picture (JPEG) folders

in DVD-R^{*4}/DVD-R DL^{*4}/CD-R^{*5}/CD-RW^{*5}

Files inside a folder are displayed in the order they were updated or taken.


Root e.g.,

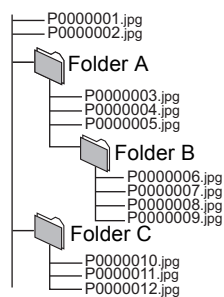

in BD-RE^{*6}/DVD-RAM^{*4}

● Folder structure is not displayed.

Root e.g.,

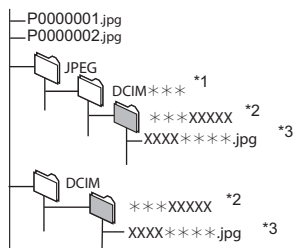


in SD card^{*4}/USB device^{*4}

Displays JPEG files in all folders.

● Folder structure is not displayed.

Root e.g.,

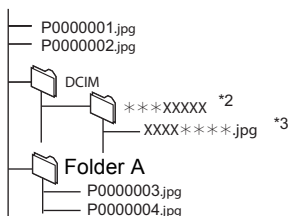


Structure of MP3 folders

in DVD-R/DVD-R DL/CD-R/CD-RW/USB device

Prefix the file names with 3-digit numbers in the order you want to play them.

Root e.g.,

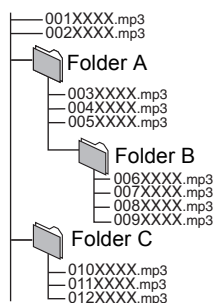


Structure of DivX folders

in BD-R^{*7}/DVD-R^{*7}/DVD-R DL^{*7}/CD-R^{*7}/CD-RW^{*7}/USB device^{*7}

Files inside a folder are displayed in the order they were updated or taken.

Root e.g.,

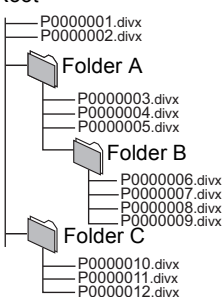

^{*4} The total combined maximum number of recognizable picture contents and folders: 3000 picture contents and 300 folders.

^{*5} The total combined maximum number of recognizable picture contents and folders: 999 picture contents and 99 folders.

^{*6} The total combined maximum number of recognizable picture contents and folders: 9999 picture contents and 300 folders.

^{*7} The total combined maximum number of recognizable file contents and folders: 200 file contents and 300 folders.

Specifications

Signal system: PAL/NTSC
Operating temperature range: +5 °C to +35 °C
Operating humidity range: 10 % to 80 % RH (no condensation)

Video output: 1.0 Vp-p (75 Ω)/Pin jack :1 system
Component video output (Y: green, Pb: blue, Pr: red):
 Y :1.0 Vp-p (75 Ω)/Pb, Pr: 0.7 Vp-p (75 Ω)/
 Pin jack:1 system

Audio output: 2 Vrms (1 kHz, 0 dB)/Pin jack
 Number of connectors :
 7.1 channel discrete output:1 system
 (2 channel + 5.1 channel discrete output)

Digital audio output: Optical digital output : Optical terminal
 Coaxial digital output:Pin jack
HDMI AV output: Type A (19 pin) : 2 systems(Main/Sub)
 HDMI (V.1.4 with 3D, Content Type)
 This unit supports "HDAVI Control 5" function.

SD card slot: Connector : 1 system
USB slot: USB2.0 : 2 system
Ethernet: 10BASE-T/100BASE-TX:1 system

LASER Specification
Class 1 LASER Product:
 Wave length:790 nm (CDs)/650 nm (DVDs)/405 nm (BDs)
 Laser power: No hazardous radiation is emitted with the
 safety protection

Power supply: **For Australia and New Zealand**
 AC 220 to 240 V, 50 Hz
For Middle East
 AC 220 to 240 V, 50 Hz/60 Hz
For Asia
 AC 110 to 240 V, 50 Hz/60 Hz
Power consumption: Approx. 32 W

Power consumption in standby mode: Approx. 0.2 W
Power consumption in quick start standby mode:Approx. 8.1 W
Dimensions (W×D×H) : Including the projecting parts
 430 mm×245 mm×66 mm
Mass: Approx. 2.6 kg

For Australia and New Zealand

Wireless LAN Adaptor (DY-WL10)
Dimensions (W×D×H) 44 mm×72 mm×27 mm
Mass: Approx. 29 g
Antenna: Tx 1, Rx 2
Interface: USB2.0

Standard Compliance:
 IEEE802.11n / IEEE802.11a / IEEE802.11g / IEEE802.11b

Transmission system:
 MISO-OFDM system, OFDM system, DSSS system

Frequency Range:
 IEEE802.11n / IEEE802.11a:
 5.15 GHz - 5.35 GHz / 5.47 GHz - 5.725 GHz/
 5.725 GHz - 5.825 GHz
 IEEE802.11g / IEEE802.11b / IEEE802.11n:
 2.4 GHz - 2.4835 GHz

Transfer rate (standard)*:
 IEEE802.11n: Tx Max. 150 Mbps, Rx Max. 300 Mbps
 IEEE802.11g / IEEE802.11a: Max. 54 Mbps
 IEEE802.11b: Max. 11 Mbps

Access Mode: Infrastructure mode
Security: WPA2-PSK (TKIP/AES)
 WPA-PSK (TKIP/AES)
 WEP (64 bit / 128 bit)
 (This unit supports WPA and WPA2 encryption.)

* Transfer rates are theoretical values; however, actual communication rate will vary according to communication environment or connected equipment.

Product Identification Marking is located on the bottom of adaptor.

Specifications are subject to change without notice.

Supplemental information

■ TV/Amplifier/Receiver code list




| Brand | TV Code | Brand | TV Code |
|------------|----------------|--------------|-------------------|
| Panasonic | 01/02/03/04 | NEC | 36 |
| AIWA | 35 | NOBLEX | 33 |
| AKAI | 27/30 | NOKIA | 25/26/27/60/61 |
| BEKO | 05/71/72/73/74 | NORDMENDE | 10 |
| BENQ | 58/59 | OLEVIA | 45 |
| BRANDT | 10/15 | ONWA | 30/39/70 |
| BUSH | 05 | ORION | 05 |
| CENTREX | 66 | PEONY | 49/69 |
| CURTIS | 05 | PHILCO | 41/48/64 |
| DAEWOO | 64/65 | PHILIPS | 05/06/46 |
| DESMET | 05 | PHONOLA | 05 |
| DUAL | 05 | PIONEER | 37/38 |
| ELEMIS | 05 | PROVIEW | 52 |
| FERGUSON | 10/34 | PYE | 05 |
| FINLUX | 61 | RADIOLA | 05 |
| FISHER | 21 | SABA | 10 |
| FUJITSU | 53 | SALORA | 26 |
| FUNAI | 63/67 | SAMSUNG | 32/42/43/65/68 |
| GOLDSTAR | 05/50/51 | SANSUI | 05 |
| GOODMANS | 05 | SANYO | 21/54/55/56 |
| GRADIENTE | 36 | SCHNEIDER | 05/29/30 |
| GRUNDIG | 09 | SEG | 05/69/75/76/77/78 |
| HITACHI | 05/22/23/40/41 | SELECO | 05/25 |
| IRRADIO | 30 | SHARP | 18 |
| ITT | 25 | SIEMENS | 09 |
| JVC | 17/30/39/70 | SINUDYNE | 05 |
| KDS | 52 | SONY | 08 |
| KOLIN | 45 | TCL | 31/33/66/67/69 |
| KONKA | 62 | TELEFUNKEN | 10/11/12/13/14 |
| LG | 05/50/51 | TEVION | 52 |
| LOEWE | 07/46 | THOMSON | 10/15/44 |
| MAG | 52 | TOSHIBA | 16/57 |
| METZ | 05/28 | WHITE | 05 |
| MITSUBISHI | 05/19/20/47 | WESTINGHOUSE | 05 |
| MIVAR | 24 | YAMAHA | 18/41 |

| Brand | Amplifier/ Receiver Code | Brand | Amplifier/ Receiver Code |
|-----------|-----------------------------|-----------|-----------------------------|
| Panasonic | 01/02/03 | MARANTZ | 20/21 |
| TECHNICS | 35 | MCINTOSH | 54 |
| ADCOM | 62 | NAD | 22/55 |
| AIWA | 04/05/06/48/49 | NAKAMICHI | 60/61 |
| ALPINE | 63 | ONKYO | 23 |
| ARCAM | 57/58 | OUTLAW | 56 |
| BOSE | 07 | PREAMP | 56 |
| DENON | 08/09/10/11/50/51/52 | PHILIPS | 24/44 |
| HARMAN | 12 | PIONEER | 25/26/27/28 |
| KARDON | 12 | SAMSUNG | 45/46/47 |
| JVC | 13/14 | SONY | 29/30/31 |
| KENWOOD | 15/16/17 | TEAC | 32/33/34 |
| KLH | 18 | THOMSON | 43/53 |
| LG | 19 | YAMAHA | 36/37/38/39/40/41/42 |
| LUXMAN | 59 | | |

■ Video attribute

| Display | Meaning |
|---------------------------|----------------------------------|
| MPEG-2/MPEG-4 AVC/VC-1 | Video recording method |
| 480/576/720/1080 | Video Format |
| 24p/50i/60i/50p/60p | Video Frame rate |
| YCbCr4:2:2/YCbCr4:4:4/RGB | Colour Space |
| bps (bit per second) | Transfer rate of bit |
| V.OFF | No video from HDMI(SUB) terminal |

 ■ Audio attribute

| Display | Meaning |
|--|----------------------|
| LPCM/  Digital/  Digital+/  TrueHD/DTS/DTS-ES Mtrx/ DTS-ES Dscrt/DTS 96/DTS 96 ES Mtrx/ DTS-HD HI RES/DTS-HD MSTR/MPEG | Signal type |
| ch (channel) | Number of channels |
| k (kHz) | Sampling frequency |
| b (bit) | Number of bits |
| bps (bit per second) | Transfer rate of bit |

■ Display languages list

| Display | Language | Display | Language | Display | Language |
|---------|------------|---------|------------|---------|------------|
| ENG | English | JPN | Japanese | ARA | Arabic |
| FRA | French | CHI | Chinese | HIN | Hindi |
| DEU | German | KOR | Korean | PER | Persian |
| ITA | Italian | MAL | Malay | IND | Indonesian |
| ESP | Spanish | VIE | Vietnamese | MRI | Maori |
| NLD | Dutch | THA | Thai | BUL | Bulgarian |
| SVE | Swedish | POL | Polish | RUM | Romanian |
| NOR | Norwegian | CES | Czech | GRE | Greek |
| DAN | Danish | SLK | Slovak | TUR | Turkish |
| POR | Portuguese | HUN | Hungarian | * | Others |
| RUS | Russian | FIN | Finnish | | |

■ Language code list

| Language | Code | Language | Code | Language | Code |
|------------------|------|-------------------|------|-----------------|------|
| Abkhazian | 6566 | Gujarati: | 7185 | Rhaeto-Romance: | |
| Afar: | 6565 | Hausa: | 7265 | Romanian: | 8277 |
| Afrikaans: | 6570 | Hebrew: | 7387 | Russian: | 8285 |
| Albanian: | 8381 | Hindi: | 7273 | Samoan: | 8377 |
| Amharic: | 6577 | Hungarian: | 7285 | Sanskrit: | 8365 |
| Arabic: | 6582 | Icelandic: | 7383 | Scots Gaelic: | 7168 |
| Armenian: | 7289 | Indonesian: | 7378 | Serbian: | 8382 |
| Assamese: | 6583 | Interlingua: | 7365 | Serbo-Croatian: | 8372 |
| Aymara: | 6589 | Irish: | 7165 | Shona: | 8378 |
| Azerbaijani: | 6590 | Italian: | 7384 | Sindhi: | 8368 |
| Bashkir: | 6665 | Japanese: | 7465 | Singhalese: | 8373 |
| Basque: | 6985 | Javanese: | 7487 | Slovak: | 8375 |
| Bengali; Bangla: | 6678 | Kannada: | 7578 | Slovenian: | 8376 |
| Bhutan: | 6890 | Kashmiri: | 7583 | Somali: | 8379 |
| Bihari: | 6672 | Kazakh: | 7575 | Spanish: | 6983 |
| Breton: | 6682 | Kirghiz: | 7589 | Sundanese: | 8385 |
| Bulgarian: | 6671 | Korean: | 7579 | Swahili: | 8387 |
| Burmese: | 7789 | Kurdish: | 7585 | Swedish: | 8386 |
| Byelorussian: | 6669 | Laotian: | 7679 | Tagalog: | 8476 |
| Cambodian: | 7577 | Latin: | 7665 | Tajik: | 8471 |
| Catalan: | 6765 | Latvian, Lettish: | 7686 | Tamil: | 8465 |
| Chinese: | 9072 | Lingala: | 7678 | Tatar: | 8484 |
| Corsican: | 6779 | Lithuanian: | 7684 | Telugu: | 8469 |
| Croatian: | 7282 | Macedonian: | 7775 | Thai: | 8472 |
| Czech: | 6783 | Malagasy: | 7771 | Tibetan: | 6679 |
| Danish: | 6865 | Malay: | 7783 | Tigrinya: | 8473 |
| Dutch: | 7876 | Malayalam: | 7776 | Tonga: | 8479 |
| English: | 6978 | Maltese: | 7784 | Turkish: | 8482 |
| Esperanto: | 6979 | Maori: | 7773 | Turkmen: | 8475 |
| Estonian: | 6984 | Marathi: | 7782 | Tw: | 8487 |
| Faroese: | 7079 | Moldavian: | 7779 | Ukrainian: | 8575 |
| Fiji: | 7074 | Mongolian: | 7778 | Urdu: | 8582 |
| Finnish: | 7073 | Nauru: | 7865 | Uzbek: | 8590 |
| French: | 7082 | Nepali: | 7869 | Vietnamese: | 8673 |
| Frisian: | 7089 | Norwegian: | 7879 | Volapük: | 8679 |
| Galician: | 7176 | Oriya: | 7982 | Welsh: | 6789 |
| Georgian: | 7565 | Pashto, Pushto: | 8083 | Wolof: | 8779 |
| German: | 6869 | Persian: | 7065 | Xhosa: | 8872 |
| Greek: | 6976 | Polish: | 8076 | Yiddish: | 7473 |
| Greenlandic: | 7576 | Portuguese: | 8084 | Yoruba: | 8979 |
| Guarani: | 7178 | Punjabi: | 8065 | Zulu: | 9085 |
| | | Quechua: | 8185 | | |

Glossary

AVCHD

AVCHD is a new format (standard) for high-definition video cameras that can be used to record and play high-resolution HD images.

BD-J

Some BD-Video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

Deep Colour

This unit incorporates HDMI (V.1.4 with 3D, Content Type) technology that can reproduce greater colour gradation (4096 steps) when connected to a compatible TV.

You can enjoy exceptionally rich, natural-looking colours, with smooth, detailed gradation and minimal colour banding.

[A lower colour gradation (256 steps), without Deep Colour, will be reproduced if connected to a TV which does not support Deep Colour.

The unit will automatically set appropriate output to suit the connected TV.]

DLNA (Digital Living Network Alliance)

DLNA is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network.

Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio.

Dolby Digital Plus

Multi-channel audio and higher audio quality is made possible using Dolby Digital Plus. BD-Video supports up to 7.1 channel output.

Dolby TrueHD

Dolby TrueHD is a very high quality audio format that reproduces the studio master audio. BD-Video supports up to 7.1 channel output.

DTS (Digital Theater Systems)

This surround system is used in many movie theatres. There is good separation between the channels, so realistic sound effects are possible.

DTS-HD

DTS-HD is a high-quality, sophisticated audio format used in movie theatres. Previous DTS Digital Surround-compatible equipment can play DTS-HD as DTS Digital Surround audio. BD-Video supports up to 7.1 channel output.

DTS-HD High Resolution Audio

This is a signal format achieved by improving the previous DTS, DTS-ES and DTS 96/24 formats. It is compatible with sampling frequency 96 kHz/48 kHz. BD-Video supports up to 7.1 channel output.

DTS-HD Master Audio

This is a lossless audio format and compatible with 96 kHz/7.1ch or less. In addition, faithful reproduction of the master audio is enabled using lossless audio encoding technology. BD-Video supports up to 7.1 channel output.

HDMI (High-Definition Multimedia Interface)

HDMI is a digital interface for consumer electronic products. Unlike conventional connections, it transmits uncompressed digital video and audio signals on a single cable.

Local storage

This storage area is used as a destination for sub contents for playing BD-Live on BD-Video.

LPCM (Linear PCM)

These are a kind of PCM format.

These are uncompressed digital signals, similar to those found on CDs.

P4HD (Pixel Precision Progressive Processing for HD)

This is a processor which makes use of an exclusive Panasonic algorithm. Various processing is supported, including a high-level conversion of the TV scanning format from interlace to progressive and a high-level conversion of standard resolution (480i or 576i) video signal to a 1080 High-Definition video signal.

Consequently, this unit is able to provide video of optimal resolution to the connected TV.

PCM (Pulse Code Modulation)

This is one format for converting analogue audio into digital audio, enabling you to enjoy digital audio with no hassle.

x.v.Colour™

x.v.Colour™ is a name for devices that are compatible with the xvYCC format, an international standard for expanded colour in motion pictures, and that follow the rules for signal transmission.

You can enjoy vivid colours of wider colour ranges for a more realistic picture when connected to a TV that supports the x.v.Colour™ with HDMI cable.

24p

This is a progressive image recorded at a rate of 24 frames per second (motion-picture film). Many BD-Video movie contents are recorded in 24 frames/second in accordance with the film materials.

| |
|--|
| Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. |
| Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. |
| Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved. |
| This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. |
| HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. |
| This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com . |
| HDAVI Control™ is a trademark of Panasonic Corporation. |
| x.v.Colour™ is a trademark. |
| VIERA CAST is a trademark of Panasonic Corporation. |
| "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation. |
| SDXC Logo is a trademark of SD-3C, LLC. |
| DivX®, DivX Certified®, DivX Plus™ HD and associated logos are registered trademarks of DivX, Inc. and are used under license. |
| "Blu-ray Disc" is a trademark. |
| "BD-LIVE" logo is a trademark of Blu-ray Disc Association. |
| "BONUSVIEW" is a trademark of Blu-ray Disc Association. |
| YouTube and Picasa are trademarks of Google, Inc. |
| The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance. |
| DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance. |
| Windows is a registered trademark of Microsoft Corporation in the United States and other countries. |
| "Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association. |

| |
|--|
| <p>This product incorporates the following software:</p> <ol style="list-style-type: none"> (1) the software developed independently by or for Panasonic Corporation, (2) the software owned by third party and licensed to Panasonic Corporation, (3) the software licensed under the GNU General Public License, Version 2 (GPL v2), (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or, (5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1 <p>For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at http://www.gnu.org/licenses/old-licenses/gpl-2.0.html and http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html. In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at http://www.am-linux.jp/dl/JPRCBW98</p> <p>The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.</p> <p>At least three (3) years from delivery of products, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1.</p> <p>Contact Information cdrequest@am-linux.jp Source code is also freely available to you and any other member of the public via our website below. http://www.am-linux.jp/dl/JPRCBW98</p> |
|--|

Safety precautions

■ Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

■ Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

■ AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

■ Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

■ Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service centre. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

-If you see this symbol-

Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.


MEMO

Index

| | | | | | |
|-------------------------------|--------|----------------------------------|--------|----------------------------|----------|
| A AC mains lead..... | 13 | I IP address..... | 33 | Q Quick Start..... | 33 |
| Angle..... | 28 | J JPEG..... | 23, 40 | R Random play..... | 28 |
| Audio..... | | L LAN..... | 12 | Re-master..... | 29 |
| Changing audio..... | 18 | Language..... | | Remote control..... | 4, 5, 16 |
| Channel..... | 28 | Audio..... | 28, 30 | Repeat play..... | 28 |
| Language..... | 28, 30 | Menu..... | 30 | Resume play function..... | 18 |
| AVCHD | 40 | On-Screen..... | 31 | S SD card..... | 7, 20 |
| B BD-Live..... | 20 | Soundtrack..... | 28 | Setup menu..... | 30 |
| BD-Video Ratings..... | 30 | Subtitle..... | 28, 30 | Slideshow..... | 23 |
| BONUSVIEW | 20 | Local storage..... | 44 | Slow-motion..... | 18 |
| C Chapter..... | 19 | M MPEG2..... | 40 | Soundtrack..... | 28 |
| Cleaning..... | 4 | MP3..... | 24, 40 | Status Message..... | 18 |
| Connection..... | 8–13 | N Network..... | | Still picture..... | 23 |
| D Deep Colour..... | 44 | Connection..... | 12 | Subtitle..... | 28 |
| Default Settings..... | 33 | Setting..... | 14, 33 | U USB device..... | 7 |
| DIRECT NAVIGATOR | 18 | O On-Screen Language..... | 31 | V VIERA CAST..... | 24 |
| DivX..... | 21, 40 | P Picture-in-picture..... | 20 | VIERA Link..... | |
| DLNA..... | 25 | Playback..... | | “HDAVI Control™”..... | 27 |
| DNS Server..... | 33 | AVCHD..... | 18 | W Wireless LAN..... | 12 |
| Dolby Digital..... | 31, 38 | DivX..... | 18 | X x.v.Colour™..... | 44 |
| Dolby Digital Plus..... | 31, 38 | JPEG..... | 23 | | |
| Dolby TrueHD..... | 31, 38 | MPEG2..... | 18 | 24p..... | 29, 32 |
| DTS..... | 31, 38 | MP3..... | 24 | 3D..... | 22 |
| DTS-HD..... | 31, 38 | Playlists..... | 17 | | |
| DVD-Video Ratings..... | 30 | Pop-up menu..... | 18 | | |
| F Finalize..... | 7 | Proxy Server..... | 33 | | |
| Firmware update..... | 16 | P4HD..... | 44 | | |
| Frame-by-frame..... | 18 | | | | |
| H HDMI..... | 8, 10 | | | | |

| | |
|-------------|--|
| CAUTION – | VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR/Class II (IIa) |
| CAUTION – | CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. E260692-1 +A2/CLASS 1M |
| ATTENTION – | RAYONNEMENT LASER VISIBLE ET INVISIBLE, CLASSE 1M. EN CAS D'OUVERTURE, NE PAS REGARDER DIRECTEMENT À L'AIDE D'INSTRUMENTS D'OPTIQUE. |
| FORSIGTIG – | SYNLIG OG USYNLIG LASERSTRÅLING KLASSE 1M. NÅR LAGET ER ÅBENT, UNDGA AT SE LIGE PÅ MED OPTISKE INSTRUMENTER. |
| VARO – | AVATTAESSA OLET ALTTIINA LUOKAN 1M NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ. ÄLÄ KATSO OPTISELLA LAITTEELLA SUORAAN SÄTEESEEN. |
| VARNING – | KLASS 1M SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN DIREKT GENOM OPTISKT INSTRUMENT. |
| VORSICHT – | SICHTBARE UND UNSICHTBARE LASERSTRALUNG KLASSE 1M. WENN ABDECKUNG GEÖFFNET, NICHT DIREKT MIT OPTISCHEN INSTRUMENTEN BETRACHTEN. |
| 注意 – | － 打开时有可见及不可见激光辐射。避免光束照射。 |
| 注意 – | － ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないでください。 VQL1V70 |

(Inside of product)

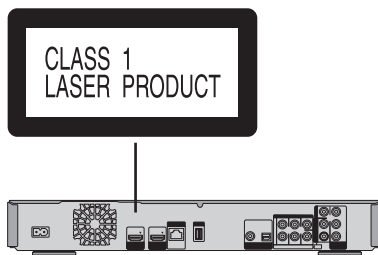

Panasonic Corporation

Web Site: <http://panasonic.net>



VQT2J89
F0410DT0