

Panasonic®

Basic Operating Instructions

Digital Camera/
Lens Kit/Double Zoom Lens Kit/Body

Model No. **DMC-G5X/DMC-G5K**
DMC-G5W/DMC-G5

LUMIX



Before use, please read these instructions completely.



More detailed instructions
on the operation of this
camera are contained in
“Operating Instructions for advanced
features (PDF format)” in the supplied
CD-ROM. Install it on your PC to read it.



Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

Information for Your Safety

WARNING:

To reduce the risk of fire, electric shock or product damage,

- Do not expose this unit to rain, moisture, dripping or splashing.
- Use only the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

The socket outlet shall be installed near the equipment and shall be easily accessible.

■ Product identification marking

Product	Location
Digital Camera	Bottom
Battery charger	Bottom

■ About the battery pack

CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
 - When disposing the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
-
- Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

■ About the battery charger

CAUTION!

To reduce the risk of fire, electric shock or product damage,

- **Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.**

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

■ Cautions for Use

- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional).
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30: optional). Part numbers: RP-CDHM15 (1.5 m), RP-CDHM30 (3.0 m)
- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).
- Always use a genuine Panasonic remote shutter (DMW-RSL1: optional).

In the event of abnormal operation (e.g. if the unit emits smoke or an unusual smell), immediately stop operating the unit and consult the Panasonic Customer Care Centre on 132600.

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC8G: optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

Information about the software used by this product can be viewed by pressing [MENU/SET], selecting [Setup] → [Version Disp.], and then pressing [MENU/SET].

-If you see this symbol-

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Contents

Information for Your Safety	2
Care of the camera	5
Standard Accessories	6
Names and Functions of Components	8
Changing the Lens	11
Attaching the Shoulder Strap	12
Charging the Battery	13
• Charging.....	13
Inserting and Removing the Card (optional)/the Battery	14
About the Card	15
• About cards that can be used with this unit.....	15
Setting Date/Time (Clock Set).....	16
• Changing the Clock Setting.....	16
Selecting the Recording Mode	17
Taking a Still picture.....	18
• Taking pictures using the Touch Shutter function.....	18
Taking Pictures using the Automatic Function (Intelligent Auto Mode)	19
Recording using Intelligent Auto Plus Mode	20
Taking Pictures with Defocus Control Function	21
Recording Motion Picture	22
• Recording still pictures while recording motion pictures	22
Compensating the Exposure	23
Using the function button	24
Taking Pictures that match the Scene being recorded (Scene Guide Mode)	25
Taking Pictures with different image effects (Creative Control Mode)	26
Playing Back Pictures/Motion Pictures	27
• Playing Back Pictures	27
• Playing Back Motion Pictures.....	27
Deleting Pictures	28
Switching the display of the LCD Monitor.....	29
Setting the Menu	30
Setting the Quick Menu.....	31
Types of menus.....	32
Reading the Operating Instructions (PDF format).....	38
About the supplied software	39
• Installing supplied software	40
Specifications	41
Limited Warranty (ONLY FOR AUSTRALIA).....	47

 
Care of the camera

Do not subject to strong vibration, shock, or pressure.

- The lens, LCD monitor, or external case may be damaged if used in the following conditions.

It may also malfunction or image may not record if you:

- Drop or hit the camera.
- Press hard on the lens or the LCD monitor.

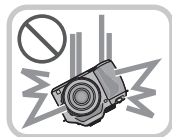

This camera is not dust/drip/water proof.

Avoid using the camera in places with a lot of dust, water, sand, etc.

 
- Liquid, sand and other foreign material may get into the space around the lens, buttons, etc. Be particularly careful since it may not just cause malfunctions, but it may also become irreparable.
 - Places with a lot of sand or dust.
 - Places where water can come into contact with this unit, such as when using it on a rainy day or at the beach.



Do not place your hands inside the mount of the digital camera body. Since the sensor unit is a precision apparatus, it may cause a malfunction or damage.

■ About Condensation (When the lens, the viewfinder or LCD Monitor is fogged up)

- Condensation occurs when the ambient temperature or humidity changes. Be careful of condensation since it causes lens and LCD monitor stains, fungus and camera malfunction.
- If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

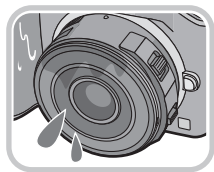


Standard Accessories

Check that all the accessories are supplied before using the camera.
Product numbers correct as of August 2012. These may be subject to change.

Digital Camera Body

 (This is referred to as **camera body** in these operating instructions.)

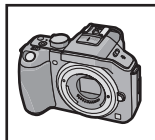

(○: Included, —: Not included)

	DMC-G5X	DMC-G5K	DMC-G5W		DMC-G5
1 Interchangeable Lens* ¹	○ (H-PS14042)	○ (H-FS014042)	○ (H-FS014042)	○ (H-FS45150)	—
2 Lens Hood	—	○	○	○	—
3 Lens Cap	○* ²	○* ²	○* ²	○* ²	—
4 Lens Rear Cap	○* ²	○* ²	○* ²	○* ²	—
5 Body Cap	○* ³	○* ³	○* ³		○* ³

6 Battery Pack

(Indicated as **battery pack** or **battery** in the text)

Charge the battery before use.

7 Battery Charger

(Indicated as **battery charger** or **charger** in the text)

8 AC Cable

9 USB Connection Cable

10 CD-ROM

- Software:

Use it to install the software to your PC.

11 CD-ROM

- Operating Instructions for advanced features:

Use it to install to your PC.

12 Shoulder Strap

*¹ This is referred to as **lens** in these operating instructions.

*² This is attached to the interchangeable lens at the time of purchase.







 

 
 
 








*³ This is attached to the camera body at the time of purchase.

 






• SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.

• **The card is optional.**

• Description in these operating instructions is based on the interchangeable lens (H-PS14042).

• Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)


	DMC-G5X	DMC-G5K	DMC-G5W		DMC-G5
1	 H-PS14042	 H-FS014042	 H-FS014042	 H-FS45150	—
2	—	 VYC1009	 VYC1009	 VYC1090	—
3	 VYF3443	 VYF3201	 VYF3201	 VYF3201	—
4	 VFC4605	 VFC4315	 VFC4315	 VFC4605	—
5	 VKF4971	 VKF4971	 VKF4971		 VKF4971

6	7	8	9	10
 DMW-BLC12E	 DE-A80A	 K2CJ2YY00052	 K1HY08YY0025	
11	12			
 VFF1028	 VFC4765			


Names and Functions of Components

■ Camera body

 - 1 Self-timer indicator/
AF Assist Lamp
- 2 Sensor
- 3 Flash
- 4 Lens fitting mark
- 5 Mount
- 6 Lens lock pin
- 7 Lens release button

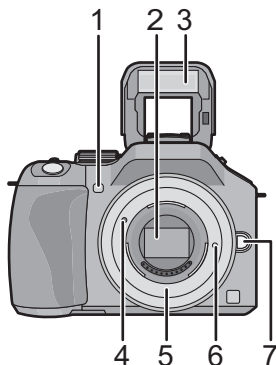

 - 8 [LVF/LCD] button/
[Fn3] button
- 9 Diopter adjustment dial
- 10 Viewfinder
- 11 Eye Cup
- 12 Eye sensor
 - When [LVF/LCD Auto] of [Eye Sensor] in the [Custom] menu is set to [ON] and your eye or an object is brought close to the viewfinder, the display automatically switches to the viewfinder display.

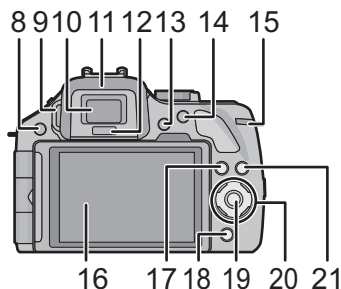


- 13 [Q.MENU] button
- 14 [AF/AE LOCK] button/
[Fn1] button
- 15 Rear dial
- 16 Touch screen/LCD monitor
- 17 Playback button
- 18 button/
[Fn2] button
- 19 [MENU/SET] button
- 20 Cursor buttons
 - ▲/ISO button
 - ▶/WB (White Balance)
 - ◀/AF Mode button
 - ▼/[Drive Mode] button


This button in picture record mode will allow the user to select between the following options.

Single/Burst/Auto bracket/Self-timer
- 21 [DISP.] button

 - 22 Focus distance reference mark
- 23 Flash open lever
- 24 Stereo microphone
 - Be careful not to cover the microphone with your finger. Doing so may make sound difficult to record.
- 25 Hot shoe
- 26 Mode dial
- 27 Shutter button
- 28 Function lever
- 29 Speaker
 - Be careful not to cover the speaker with your finger. Doing so may make sound difficult to hear.

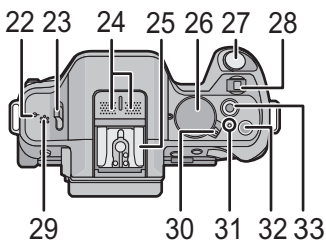


 - 30 Camera ON/OFF switch
- 31 Status indicator
- 32 Intelligent Auto button
- 33 Motion picture button
- 34 Tripod receptacle
 - A tripod with a screw length of 5.5 mm or more may damage this unit if attached.
- 35 Card/Battery door
- 36 Release lever

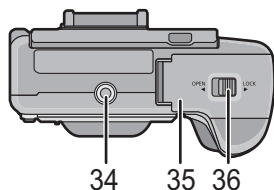

- 37 Shoulder strap eyelet
 - Be sure to attach the shoulder strap when using the camera to ensure that you will not drop it.

 
- 38 [REMOTE] socket
- 39 [HDMI] socket
- 40 [AV OUT/DIGITAL] socket
- 41 DC coupler cover

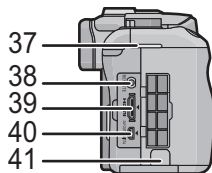


- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC8: optional) and AC adaptor (DMW-AC8G: optional) are used.
- Always use a genuine Panasonic AC adaptor (DMW-AC8G: optional).
- When using an AC adaptor, use the AC cable supplied with the AC adaptor.
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture will not be recorded.

■ Lens

 
H-PS14042

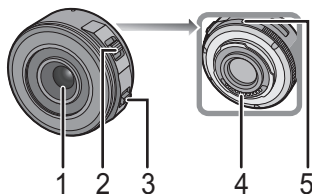

H-FS014042

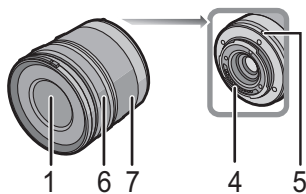 

H-FS45150

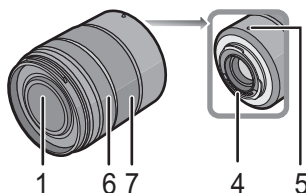 


- 1 Lens surface
- 2 Zoom lever
- 3 Focus lever
- 4 Contact point
- 5 Lens fitting mark
- 6 Focus ring
- 7 Zoom ring

Touch screen

This touch screen is a type that detects pressure.

Touch the screen

 To touch and release the touch screen.

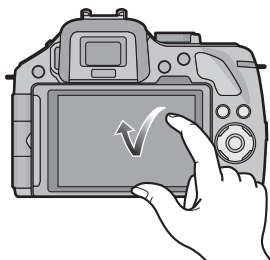


Use this to perform tasks such as selecting icons or images displayed on the touch screen.

- When selecting features using the touch screen, be sure to touch the centre of the desired icon.

Drag

 A movement without releasing the touch screen.

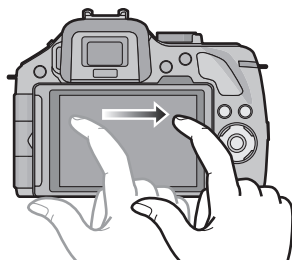

This is used to move the AF area, operate the slide bar, etc.

This can also be used to move to the next image during playback, etc.

Changing the Lens

 
- Check that the camera is turned off.

Attaching the lens

Preparations: Remove the lens rear cap from the lens, and the body cap from the camera.

Align the lens fitting marks (A) (red marks) and then rotate the lens in the direction of the arrow until it clicks.


- Do not press the lens release button (B) when you attach a lens.

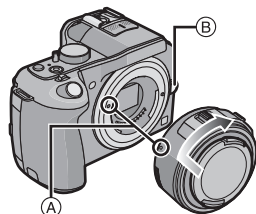

Detaching the lens

Preparations: Attach the lens cap.

 While pressing on the lens release button (B), rotate the lens toward the arrow until it stops and then remove.

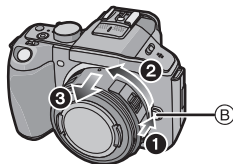


Attaching the Shoulder Strap


- We recommend attaching the shoulder strap when using the camera to prevent it from dropping.

- 1** Pass the shoulder strap through the shoulder strap eyelet on the camera body.

 
(A): Shoulder strap eyelet

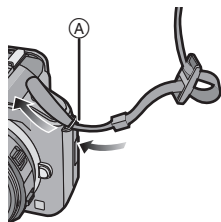

 - 2** Pass the end of the shoulder strap through the ring in the direction of the arrow and then pass it through the stopper.

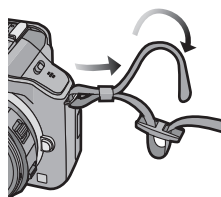


 - 3** Pass the end of the shoulder strap through the hole on the other side of the stopper.

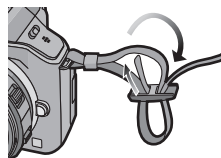

- 4** Pull the other side of the shoulder strap and then check that it will not come out.

 - Perform steps **1** to **4** and then attach the other side of the shoulder strap.

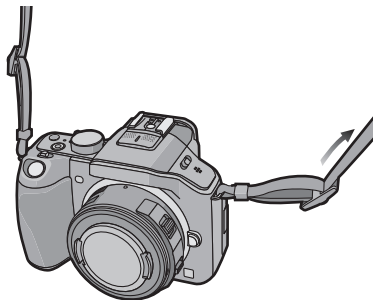

Charging the Battery

 
■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BLC12E.

Charging


- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.

- 1 Attach the battery paying attention to the direction of the battery.**

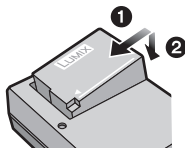

- 2 Connect the AC cable.**

 - The [CHARGE] indicator (A) lights up and charging begins.

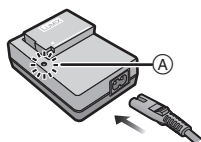

■ About the [CHARGE] indicator

The [CHARGE] indicator turns on:

The [CHARGE] indicator is turned on during charging.

The [CHARGE] indicator turns off:

The [CHARGE] indicator will turn off once the charging has completed without any problem. (Disconnect the charger from the electrical socket and detach the battery after charging is completed.)

■ Charging time

Charging time	Approx. 140 min
---------------	-----------------

- The indicated charging time is for when the battery has been discharged completely. The charging time may vary depending on how the battery has been used. The charging time for the battery in hot/cold environments or a battery that has not been used for a long time may be longer than normal.

Inserting and Removing the Card (optional)/ the Battery

- Check that this unit is turned off.
- We recommend using a Panasonic card.

1 Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries (DMW-BLC12E).
- If you use other batteries, we cannot guarantee the quality of this product.

2 **Battery:** Being careful about the battery orientation, insert all the way until you hear a locking sound and then check that it is locked by lever (A).

Pull the lever (A) in the direction of the arrow to remove the battery.

 
 
 
Card: Push it securely all the way until you hear a “click” while being careful about the direction in which you insert it.

To remove the card, push the card until it clicks, then pull the card out upright.

(B): Do not touch the connection terminals of the card.

3 **❶:** Close the card/battery door.

❷: Slide the release lever in the direction of the arrow.

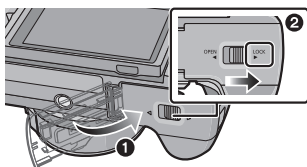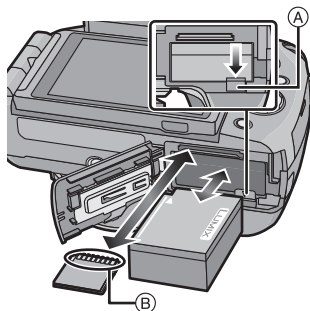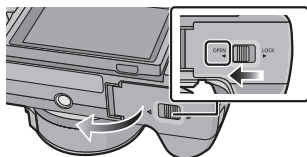

About the Card

About cards that can be used with this unit

The following cards which conform to the SD video standard can be used with this unit. (These cards are indicated as **card** in the text.)

	Remarks
SD Memory Card (8 MB to 2 GB)	<ul style="list-style-type: none">• Use a card with SD Speed Class* with “Class 4” or higher when recording motion pictures.• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.• Check that the PC and other equipment are compatible when using the SDXC Memory Cards. http://panasonic.net/avc/sdcard/information/SDXC.html• This unit is compatible with UHS-I standard SDHC/SDXC memory cards.• Only the cards with capacity listed left can be used.
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

* SD Speed Class is the speed standard regarding continuous writing. Check via the label on the card, etc.

e.g.:

CLASS 4

4

• Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)

Note

 
• Keep the Memory Card out of reach of children to prevent swallowing.

Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

1 Turn the camera on.

- The status indicator ❶ lights when you turn this unit on.

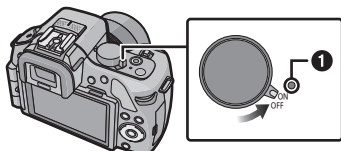

2 Touch [Clock Set].



3 Touch the items you wish to set (Year/Month/Day/Hours/Minutes), and set using [^]/[v].

- You can continue to switch the settings by continuously touching [^]/[v].
- Touch [C] to cancel the date and time settings without setting a date and time.



To set the display order and the time display format.

- Touch [Style] to display the settings screen for setting display order/time display format.



4 Touch [Set] to set.

5 Touch [Set] in the confirmation screen.

- When the clock setting is complete, the confirmation screen for the function lever setting is displayed. Select [Change] or [Exit]. (You can check/uncheck the check box each time you touch [Don't show this again].)

Changing the Clock Setting

Select [Clock Set] in the [Setup] menu.

 
- The clock can be reset as shown in steps 3 and 4.

Selecting the Recording Mode

■ To select a Recording Mode with the mode dial

Select the mode by rotating the mode dial.


- Rotate the mode dial slowly to select the desired mode **(A)**.

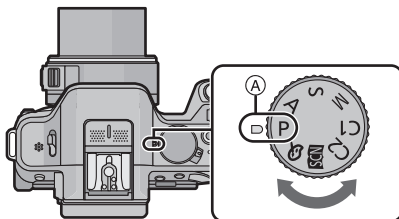

■ To select Intelligent Auto Mode

Press **[iA]**.

 - **[iA]** button will light up when it is switched to Intelligent Auto Mode.
- The Recording Mode selected by the mode dial is disabled while the **[iA]** button is lit.

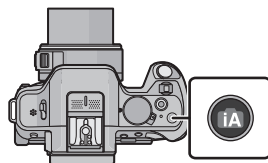

iA Intelligent Auto Mode
The subjects are recorded using settings automatically selected by the camera.
iA+ Intelligent Auto Plus Mode
Easily match settings selected by the camera to your preferences and record.
P Programme AE Mode
The subjects are recorded using your own settings.
A Aperture-Priority AE Mode
The shutter speed is automatically determined by the aperture value you set.
S Shutter-Priority AE Mode
The aperture value is automatically determined by the shutter speed you set.
M Manual Exposure Mode
The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.
C1 C2 Custom Mode
Use this mode to take pictures with previously registered settings.
SCN Scene Guide Mode
This allows you to take pictures that match the scene being recorded.
 Creative Control Mode
Record while checking the image effect.

Taking a Still picture

 
Applicable modes:

1 Select the Recording Mode.

2 Press the shutter button halfway to focus.

- (A) Aperture value
- (B) Shutter speed

- Aperture value and shutter speed are displayed. (It will flash in red if the correct exposure is not achieved, except when set to flash.)
- When the image is correctly focused, the picture will be taken, since the [Focus Priority] is set initially to [ON].

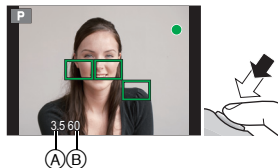


3 Press the shutter button fully (push it in further), and take the picture.



Taking pictures using the Touch Shutter function


Just by touching the subject to focus, it will focus on the subject and take the picture automatically.

 1 Touch .

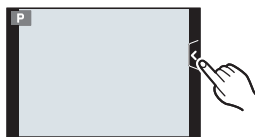

2 Touch .

 - Icon will change to , and taking a picture with the Touch Shutter function becomes possible.

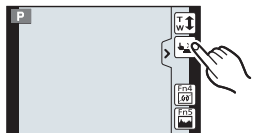

3 Touch the subject you wish to focus on, and then take a picture.

- AF area with same function as in AF mode is displayed at the position you touch, and picture is taken when it is focused when the AF mode is set to , , or .

■ To cancel the Touch Shutter function

Touch .




Taking Pictures using the Automatic Function

 
(Intelligent Auto Mode)

Recording Mode:

In this mode, the camera makes the optimal settings for the subject and scene, so we recommend it when you wish to leave the settings to the camera and record without thinking about them.


Press .


-  button will light up when it is switched to Intelligent Auto Mode. (Light turns off during recording)
-  button is turned off when it is pressed again, and it will be set to the [Rec] Modes selected by the mode dial.
- When the subject is touched, AF Tracking function works. It is also possible by pressing the cursor button towards , and then pressing the shutter button halfway.

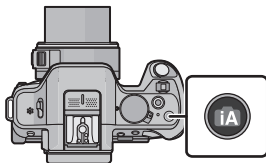

■ Scene Detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

 Depending on the identified scene, the camera may display , which allows you to select the camera-recommended effects.

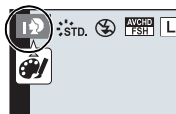


Recording using Intelligent Auto Plus Mode

Recording Mode:

The brightness and colour optimally set by the camera can be easily matched to your preferences. This mode is useful if you do not like dealing with detailed settings but like the settings made automatically by the camera to match your preferences.

 - 1 Press [MENU/SET] when in Intelligent Auto Mode.

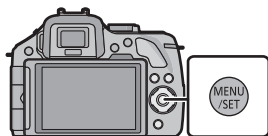

- 2 Touch [iA MODE].

- 3 Select [] and then touch [Set].



 
■ Setting brightness

- 1 Touch [].




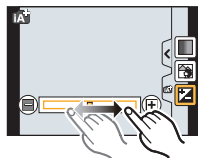 
- 2 Touch [] to display the setting screen.

- The setting screen can also be displayed from the recording screen by pressing rear dial.
- Each press of the rear dial switches among brightness setting, Defocus Control and end operation.

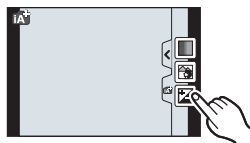

- 3 Drag the slide bar to set.

- This will adjust the brightness of the image.
- Setting can also be performed by rotating the rear dial.
- Touch [] again to return to the recording screen. You can also return to the recording screen by pressing the rear dial.




■ Setting colour

 
 
1 Touch [].

2 Touch [] to display the setting screen.

- The settings screen can also be displayed from the recording screen by pressing cursor button ►.

3 Drag the slide bar to set.

- This will adjust the colour of the image from a reddish colour to a bluish colour.
- Setting can also be performed by rotating the rear dial.
- Touch [] again to return to the recording screen. You can also return to the recording screen by pressing the cursor button ►.

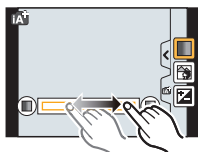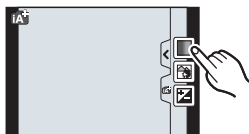


Taking Pictures with Defocus Control Function

Applicable modes:   P A S M    


You can easily set the blurriness of the background while checking the screen.

 1 Touch [].

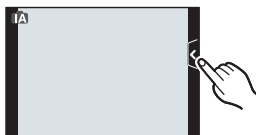

 2 Touch [] to display the setting screen.

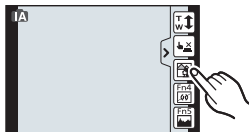

- Defocus Control setting screen can also be displayed by pressing the rear dial.

 


3 Drag the slide bar to set.

- Setting can also be performed by rotating the rear dial.

4 Record pictures or motion pictures.

- Defocus Control operation can be ended by touching [].
- Defocus Control operation can also be ended by pressing the rear dial.
- It is also possible to record a picture by touching [].

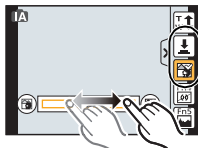


Recording Motion Picture


Applicable modes:

1 Start recording by pressing the motion picture button.

 - (A) Elapsed recording time
- (B) Available recording time

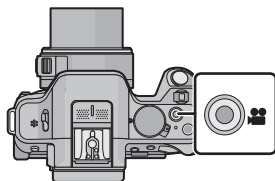

 - Recording of motion picture appropriate for each mode is possible.
- The recording state indicator (red) (C) will flash while recording motion pictures.

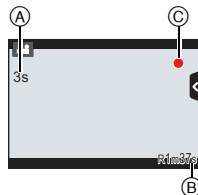

2 Stop the recording by pressing the motion picture button again.

 
- Maximum time to record motion pictures continuously with [PSH] in [AVCHD] is 29 minutes 59 seconds.
- Maximum time to record motion pictures continuously with [MP4] is 29 minutes 59 seconds or up to 4 GB.
(For [FHD] in [MP4] format, the file size is large and so the recordable time will drop below 29 minutes 59 seconds.)

Recording still pictures while recording motion pictures

Still pictures can be recorded even while recording a motion picture. (Simultaneous recording)

During motion picture recording, press the shutter button fully to record a still picture.

- Simultaneous recording indicator (A) is displayed while recording still pictures.
- You can also take pictures using the Touch Shutter function.

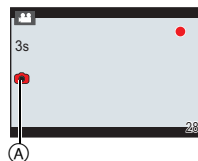


Compensating the Exposure

Applicable modes: **P** **A** **S** **M** **C1** **C2**


Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background. Look at the following examples.

 - 1 Press the rear dial to switch to Exposure Compensation operation.**

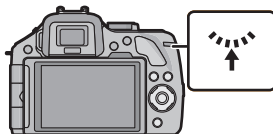

- 2 Rotate the rear dial to compensate the exposure.**

 - (A) Exposure Compensation value
- (B) [Expo.Meter]

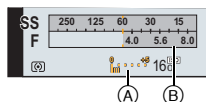

Underexposed		Properly exposed		Overexposed
Compensate the exposure towards positive.			Compensate the exposure towards negative.	

 
- Select [0] to return to the original exposure.
- Rotate the rear dial to display the [Expo.Meter].

Using the function button

You can assign recording functions, etc. to specific buttons and icons.

To use those functions, press [Fn1], [Fn2] or [Fn3] or touch [Fn4] or [Fn5].

- To use [Fn1], set the [AF/AE LOCK / Fn1] of the [Custom] menu to [Fn1].
- To use [Fn3], set the [LVF/LCD / Fn3] of the [Custom] menu to [Fn3].

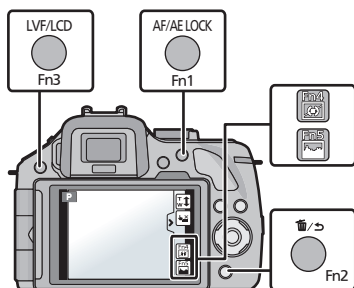

1 Touch [Fn1], [Fn2], [Fn3], [Fn4] or [Fn5] from the [Fn Button Set] in the [Custom] menu.

2 Touch the function you want to assign.

- Assign your favourite functions to each of the function buttons.
- Exit the menu after it is set.

Taking Pictures that match the Scene being recorded (Scene Guide Mode)

 
Recording Mode:

If you select a scene to suit the subject and recording conditions with reference to the example images, the camera will set optimal exposure, colour, and focus, allowing you to record in a manner appropriate to the scene.

1 Set the mode dial to .


2 Drag the example images to select a screen.

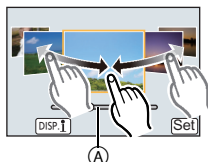

- You can also select the scene by dragging the slide bar .



 3 Touch [Set].

■ To enjoy a variety of picture effects

Touch  on the scene selection screen to display explanations etc. for picture effects to suit the scene. To take full advantage of the picture effects, we recommend that you read the explanations and try recording pictures.

- The page can be changed by touching /.



Taking Pictures with different image effects





(Creative Control Mode)


Recording Mode: 

This mode records with additional image effects. You can set the effects to add by selecting example images and checking them on the screen.

1 Set the mode dial to [📷].

2 Touch the example image to select image effects (filters).

- The image effect of the selected example image will be applied in a preview display A.
- The image effect can be switched by touching []/[].
- Touch [] to display the explanation for the selected image effect.
- The explanation can also be displayed by pressing cursor button .

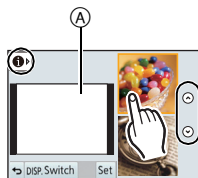 


3 Touch [Set].

Playing Back Pictures/Motion Pictures

Playing Back Pictures

 1 Press [▶].

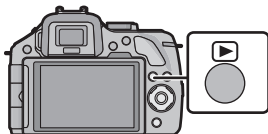

2 Forward or rewind the image by dragging the screen horizontally.

Forward: drag from right to left

Rewind: drag from left to right



 
Playing Back Motion Pictures

This unit was designed to play motion pictures using the AVCHD, MP4 and QuickTime Motion JPEG formats.

In Playback Mode, select a picture with the motion picture icon ([📹]) and touch [▶] in the middle of the screen.

(A) Motion picture icon

(B) The motion picture recording time

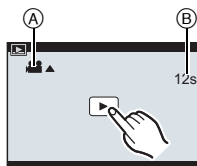


■ Operations performed during Motion Picture Playback


	Play/Pause		Stop
	Fast rewind		Fast forward
	Frame-by-frame rewind (while pausing)		Frame-by-frame forward (while pausing)
	Reduce volume level		Increase volume level

Deleting Pictures

Once deleted, pictures cannot be recovered.


To delete a single picture

 - 1 In Playback Mode, select the picture to delete and touch [].

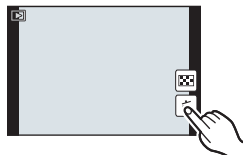

- 2 Touch [Delete Single].

 - Confirmation screen is displayed.
Pictures are deleted by selecting [Yes].

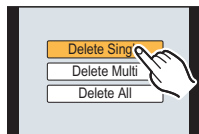


To delete multiple pictures (up to 100) or all the pictures


- 1 In Playback Mode, touch [].

- 2 Touch [Delete Multi] or [Delete All].

- [Delete All] → Confirmation screen is displayed.
Pictures are deleted by selecting [Yes].
- It is possible to delete all pictures except the ones set as favourite when [All Delete Except Favorite] is selected with the [Delete All] set.

 - 3 (When [Delete Multi] is selected) Touch the picture to be deleted.
(repeat this step)

 -  appears on the selected pictures. Touching again cancels the setting.

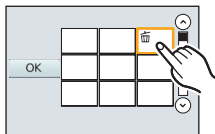


- 4 (When [Delete Multi] is selected) Touch [OK].

- Confirmation screen is displayed.
Pictures are deleted by selecting [Yes].


Switching the display of the LCD Monitor

 Press [DISP.] to change.

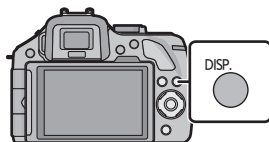

(In Recording Mode)

 
- Screen will switch as follows:
(Example of LCD monitor display)

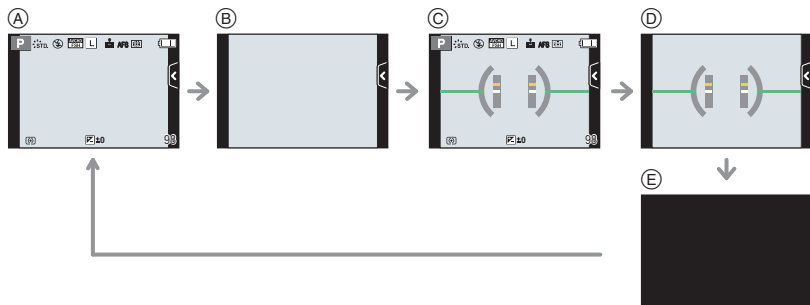

- (A) With information*
- (B) Without information*
- (C) With information (tilt sensor display)*
- (D) Without information (tilt sensor display)*
- (E) Turned off

(In Playback Mode)

 - Screen will switch as follows:
(Example of LCD monitor display)

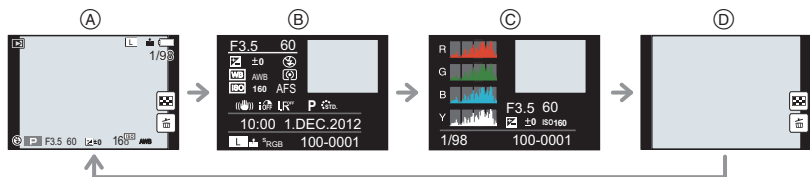


- (A) With information*
- (B) Detailed information display
- (C) Histogram display
- (D) Without information

- * If approximately 1 minute elapses without an operation being performed, part of the display will disappear. Press [DISP.] or touch the LCD monitor to make the display reappear.

Setting the Menu

1 Press [MENU/SET].

 - The top menu screen is displayed.

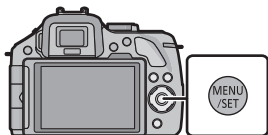


2 Touch the menu icon.




3 Touch the menu item.

 - The page can be changed by touching [⬆]/[⬇].

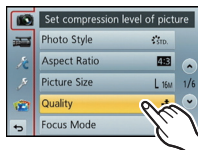

4 Touch the Setting to set.

 - Depending on the menu item, its setting may not appear or it may be displayed in a different way.

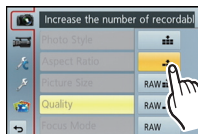

A brief description appears when you touch a menu item/option in steps **3** and **4**.

- It will be set when you release your finger.
- You can avoid selecting an item by dragging your finger to a vacant area and releasing the finger there.

■ Close the menu

 
Touch [⏏] or press the shutter button halfway.

■ Switching to other menus

e.g.: Switching to the [Setup] menu from [Rec] menu

Touch [⏏] or another of the menu toggle icons (A).

- Select a menu item next and set it.

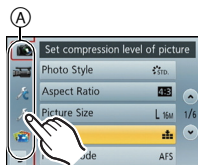


Setting the Quick Menu


By using the Quick Menu, some of the menu settings can be easily found.

- The features that can be adjusted using Quick Menu are determined by the mode or a display style the camera is in.

 
1 Press [Q.MENU] to display the Quick Menu.

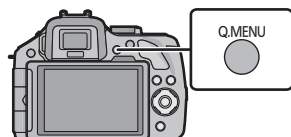

2 Touch the menu item.

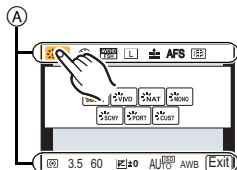 

3 Touch the setting.

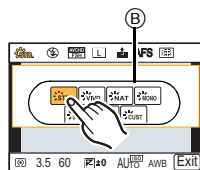 

4 Touch [Exit] to exit menu once the setting is completed.

(A) Item

(B) Settings

- You can close the menu by pressing the shutter button halfway.

■ When using the viewfinder

1 Press [Q.MENU] to display the Quick Menu.

2 Rotate the rear dial to select the menu item, then press the rear dial.

 
- You can set the options for the selected item.

3 Rotate the rear dial to select the setting, then press the rear dial.

- You can select the menu items again.

4 Press [Q.MENU] to exit the menu once the setting is complete.

- You can close the menu by pressing the shutter button halfway.

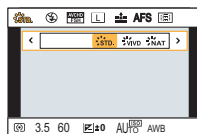

● Note

- You can also set items by pressing the cursor buttons ▲/▼/◀/▶.
- You can also select the settings by sliding the function lever.



Types of menus

■ [Rec] Menu

This menu lets you set the aspect ratio, number of pixels and other aspects of the pictures you are recording.

- [Photo Style], [Focus Mode], [Metering Mode], [i.Dynamic], [i.Resolution] and [Digital Zoom] are common to both the [Rec] menu and [Motion Picture] menu. Changing these settings in one of these menus is reflected in other menu.

[Photo Style]	You can select effects to match the type of image you wish to record. You can adjust the colour and image quality of the effects.
[Aspect Ratio]	Sets the aspect ratio of the image.
[Picture Size]	Set the number of pixels.
[Quality]	Set the compression rate at which the pictures are to be stored.
[Focus Mode]	Sets [Focus Mode] according to the movement of the subject and the scene you are recording.
[Metering Mode]	Sets the light metering method for measuring brightness.
[HDR]	You can combine 3 pictures with different levels of exposure into a single picture with rich gradation.
[i.Dynamic] (Intelligent dynamic range control)	Automatically corrects contrast and exposure.
[Flash]	Sets the manner in which the flash works.
[Red-Eye Removal]	Automatically detects red-eye caused by the flash and corrects the image data accordingly.
[Flash Synchro]	Sets the flash synchronisation method.
[Flash Adjust.]	Adjusts the amount of light released by the flash.
[i.Resolution]	Records pictures with more defined outlines and sense of clarity.
[ISO Limit Set]	When the ISO sensitivity is set to [AUTO] or [i.ISO], an optimal ISO sensitivity is set with the selected value as an upper limit.
[ISO Increments]	The ISO sensitivity settings values changes in steps of 1/3 EV or 1 EV.
[Long Shtr NR]	You can eliminate the generated noise by recording with a slower shutter speed.
[Shading Comp.]	If the screen periphery darkens as a result of lens characteristics, the brightness in this region will be corrected.

[Digital Zoom]	Increases the Tele effect. The higher the level of magnification, the greater the degradation in image quality.
[Electronic Shutter]	The electronic shutter can reduce the picture blur.
[Burst Rate]	Sets the burst speed for burst recording.
[Auto Bracket]	Sets single/burst recording, correction width and recording sequence for Auto Bracket recording.
[Self Timer]	Sets the time until recording for self-timer recording.
[Color Space]	Set this when you want to correct the colour reproduction of the recorded pictures on a PC, printer etc.
[Stabilizer]	When camera shake is sensed during recording, the camera corrects it automatically.
[Face Recog.]	Sets the focus and exposure automatically prioritising registered faces.
[Profile Setup]	If you set the name and birthday of your baby or pet in advance, you can record their name and age in months and years in the images.
[Recommended Filter]	This sets whether to display the camera-recommended effects in Intelligent Auto ( or ) Mode.

■ [Motion Picture] Menu

This menu lets you set the [Rec Mode], [Rec Quality], and other aspects for motion picture recording.

- [Photo Style], [Focus Mode], [Metering Mode], [i.Dynamic], [i.Resolution] and [Digital Zoom] are common to both the [Rec] menu and [Motion Picture] menu. Changing these settings in one of these menus is reflected in other menu.

— For details, refer to the explanation for the corresponding setting in [Rec] menu.

[Rec Mode]	Sets the file format for the motion pictures you record.
[Rec Quality]	This sets up the picture quality of motion pictures.
[Picture Mode]	Sets the recording method for still pictures during motion picture recording.
[Continuous AF]	Continues to focus on the subject for which focus has been achieved.
[Ex. Tele Conv.]	Increases the Tele effect.
[Wind Cut]	This prevents the recording of wind-noise automatically.
[Mic Level Disp.]	Set whether or not the mic levels are displayed on the screen.
[Mic Level Adj.]	Adjust the sound input level to 4 different levels.

[Flkr Decrease]	The shutter speed can be fixed to reduce the flicker or striping in the motion picture.
------------------------	---

■ [Custom] Menu

Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.

[Cust.Set Mem.]	Registers the current camera settings as custom set.
[AF/AE LOCK / Fn1]	Assigns AF/AE lock or Fn1 (function button) to the [AF/AE LOCK]/[Fn1] button.
[LVF/LCD / Fn3]	Assign the LVF/LCD switching function or Fn3 (function button) to the [LVF/LCD]/[Fn3] button.
[Fn Button Set]	You can assign various recording and other functions to the function button.
[Function Lever]	You can set the function to assign to the function lever.
[Q.MENU]	Switch the setting method of Quick Menu.
[Histogram]	This allows you to set either to display or not display the histogram.
[Guide Line]	This will set the pattern of guide lines displayed when taking a picture.
[Auto Review]	Set the length of time that the picture is displayed after taking the still picture.
[Highlight]	When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.
[Expo.Meter]	Set whether or not to display the exposure meter.
[AF/AE Lock]	Sets the fixed content for focusing and exposure when the AF/AE lock is on.
[AF/AE Lock Hold]	This will set the operation of [AF/AE LOCK] button when taking a picture with fixed focus or exposure.
[Quick AF]	Speeds up the focusing that takes place when you press the shutter button.
[Eye Sensor AF]	The camera automatically adjusts the focus when the eye sensor is active.
[Direct Focus Area]	Moves the AF area or MF assist using the cursor button when recording.
[Focus Priority]	It will set so no picture can be taken when it is out of focus.
[Shutter AF]	Set whether or not the focus is adjusted automatically when the shutter button is pressed halfway.

[Pinpoint AF Time]	Sets the time for which the screen is enlarged when the shutter button is pressed halfway with Auto Focus Mode set to [+] .
[AF Assist Lamp]	AF assist lamp will illuminate the subject when the shutter button is pressed half-way making it easier for the camera to focus when recording in low light conditions.
[AF+MF]	You can set the focus manually after the automatic focus has finished.
[MF Assist]	When you set the focus manually, the display is enlarged.
[MF Guide]	When you set the focus manually, an MF guide that allows you to check the direction to achieve focus is displayed.
[Power Zoom Lens]	Sets the screen display and lens operations when using an interchangeable lens that is compatible with power zoom (electrically operated zoom).
[LVF Disp.Style]	This will set the display style of the Live Viewfinder.
[LCD Disp.Style]	This will set the display style of the LCD monitor.
[Eye Sensor]	Enable or disable the eye sensor. You can also set the sensitivity of the eye sensor.
[iA Button Switch]	It is possible to set how the [iA] button to toggle to Intelligent Auto Mode will operate.
[Video Button]	Enables/disables the motion picture button.
[Rec Area]	This changes the angle of view during motion picture recording and still picture recording.
[Remaining Disp.]	This will switch display between the number of recordable pictures and available recording time.
[Touch Settings]	Enables/disables the Touch operation.
[Touch Scroll]	This allows you to set the speed of continuously forwarding or rewinding pictures using touch operation.
[Dial Guide]	Set whether or not to display the dial operation guide.
[Menu Guide]	Set the screen that is displayed when the mode dial is set to [SCN] and ☺ .
[Shoot w/o Lens]	Sets whether or not the shutter can be released when no lens is attached to the main body.

■ Setup Menu

This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera.

[Clock Set]	Setting Date/Time.
[World Time]	Sets the times for the region where you live and your holiday destination.
[Travel Date]	Departure date and return date of the trip as well as the name of the travel destination can be set.
[Beep]	Set the volume for electronic noises and the electronic shutter noise.
[Volume]	Adjust the volume of the speaker to any of 7 levels.
[LCD Display]/ [Viewfinder]	Brightness, colour, or red or blue tint of the LCD monitor/Live Viewfinder is adjusted.
[LCD Mode]	The brightness of the LCD monitor can be adjusted depending on how bright it is around the camera.
[Economy]	Suppresses the unit power consumption to prevent the battery being run down.
[USB Mode]	Sets the communication method when connecting using the USB connection cable (supplied).
[Output]	This sets how the unit connects to a television etc.
[VIERA Link]	Equipment that supports the VIERA Link will connect automatically.
[3D Playback]	Set the output method for 3D pictures.
[Menu Resume]	Stores the location of the last-used menu item for each menu.
[Rotate Disp.]	This mode allows you to display pictures vertically if they were recorded holding the camera vertically.
[Menu Background]	Set the background colour for the menu screen.
[Language]	Set the language displayed on the screen.
[Version Disp.]	This enables the firmware versions of the camera and lens to be checked.
[No.Reset]	Returns the image file number to 0001.
[Reset]	The [Rec] or [Setup]/[Custom] menu settings are reset to the initial settings.
[Pixel Refresh]	It will perform optimisation of imaging device and image processing.

[Sensor Cleaning]	Dust reduction to blow off the debris and dust that have affixed to the front of the imaging device is performed.
[Format]	The card is formatted.

■ [Playback] Menu

This menu lets you set the Protection, Cropping or Print Settings, etc. of recorded pictures.


[2D/3D Settings]	Switches the playback method for 3D images.
[Slide Show]	Selects the type etc. of the images and plays back in order.
[Playback Mode]	Selects the type etc. of the images and plays back only particular images.
[Title Edit]	Input texts (comments) on the recorded pictures.
[Text Stamp]	Stamps the recorded pictures with recording date and time, names, travel destination, travel date etc.
[Video Divide]	Splits the recorded motion picture in two.
[Resize]	Reduces the image size (number of pixels).
[Cropping]	Crops the recorded image.
[Rotate]	Rotate pictures manually in 90° steps.
[Favorite]	Marks can be added to images, and images can be set as favourites.
[Print Set]	Sets the images for printing and the number of prints.
[Protect]	Protects images to prevent deletion by mistake.
[Face Rec Edit]	Removes or changes information relating to personal identity.

Reading the Operating Instructions (PDF format)

More detailed instructions on the operation of this camera are contained in “Operating Instructions for advanced features (PDF format)” in the supplied CD-ROM. Install it on your PC to read it.

■ For Windows

 - 1 Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
- 2 Select the desired language and then click [Operating Instructions] to install.
- 3 Double click the “Operating Instructions” shortcut icon on the desktop.

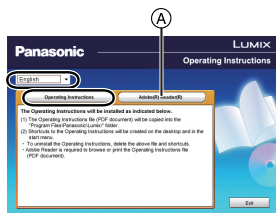

■ When the Operating Instructions (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Operating Instructions (PDF format).

Insert the CD-ROM containing the Operating Instructions (supplied), click (A) and then follow the messages on the screen to install.

(Compatible OS: Windows XP SP3/Windows Vista SP2/Windows 7)

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.

<http://get.adobe.com/reader/otherversions>

■ To uninstall the Operating Instructions (PDF format)

Delete the PDF file from the “Program Files\Panasonic\Lumix\” folder.

■ For Mac

- 1 Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
- 2 Open the “Manual” folder in the CD-ROM and then copy the PDF file with the desired language inside the folder.
- 3 Double click the PDF file to open it.

About the supplied software

The supplied CD-ROM includes the following software.
Install the software on to your computer before use.

• **PHOTOfunSTUDIO 8.2 PE (Windows XP/Vista/7)**

This software allows you to acquire pictures to the PC, and also categorise these acquired pictures by their recording date or the model name of the camera used. You can resize pictures and add effects to the pictures. Various printing functions, such as layout printing, and writing function to CD-R* are supported too. If you forgot to set the date on the digital camera, you can add the date of recording to pictures with this software.

Also, [AVCHD] motion pictures can be loaded and written to DVD.

* This can be used only if the [Recording] tab is displayed on the [Properties] of the CD/DVD drive on the PC.

• **SILKYPIX Developer Studio (Windows XP/Vista/7, Mac OS X v10.4/v10.5/v10.6/v10.7)**

This is software to edit RAW format images.

Using RAW files recorded on this camera allows images to be edited with a higher quality. Edited images can be saved in a format (JPEG, TIFF, etc.) that can be displayed on a personal computer.

**For details on how to use the SILKYPIX Developer Studio, refer to the "Help" or the Ichikawa Soft Laboratory's support website:
<http://www.isl.co.jp/SILKYPIX/english/p/support/>**

• **LoiLoScope 30 day full trial version (Windows XP/Vista/7)**

LoiLoScope is a video editing software where that draws out the full power of your PC. Creating videos is as easy as organizing cards on top of a desk. Use your music, picture and video files to create videos to share with your friends and family by burning it to a DVD, uploading it to websites, or simply share your videos with your friends via e-mail.

– This will only install a shortcut to the trial version download site.

**For more information on how to use LoiLoScope, read the LoiLoScope manual available for download at the link below.
Manual URL: <http://loilo.tv/product/20>**

- Before inserting the CD-ROM, close all running applications.

1 Check the environment of your PC.

- **Operating environment of “PHOTOfunSTUDIO 8.2 PE”**
 - OS:
 - Windows® XP (32bit) SP3,
 - Windows Vista® (32bit) SP2,
 - Windows® 7 (32bit/64bit) or SP1
 - CPU:
 - Pentium® III 500 MHz or higher (Windows® XP),
 - Pentium® III 800 MHz or higher (Windows Vista®),
 - Pentium® III 1 GHz or higher (Windows® 7)
 - Display:
 - 1024×768 pixels or more (1920×1080 pixels or more recommended)
 - RAM:
 - 512 MB or more (Windows® XP/Windows Vista®),
 - 1 GB or more (Windows® 7 32bit),
 - 2 GB or more (Windows® 7 64bit)
 - Free hard disk space:
 - 450 MB or more for installing software
- Refer to the operating instructions of “PHOTOfunSTUDIO” (PDF) for further operating environment.
- For details on SILKYPIX Developer Studio 3.1 SE, please read the support site given on P39.

2 Insert the CD-ROM with the supplied software.

- When you insert the supplied CD-ROM, the install menu will start.

3 Click on the [Recommended Installation].

- Proceed with installation according to messages appearing on the screen.



Note

- The software compatible with your PC will be installed.
- “PHOTOfunSTUDIO” is not compatible with Mac.
- On the Mac, SILKYPIX can be installed manually.

- ① Insert the CD-ROM with the supplied software.
- ② Double-click on the automatically displayed folder.
- ③ Double-click the icon in the application folder.

Specifications

Specifications are subject to change without notice.

Digital Camera Body (DMC-G5):

Information for your safety

Power Source:	DC 8.4 V
Power Consumption:	2.9 W (When recording with LCD Monitor) [When the Interchangeable lens (H-PS14042) is used] 3.0 W (When recording with LCD Monitor) [When the Interchangeable lens (H-FS014042) is used] 2.9 W (When recording with LCD Monitor) [When the Interchangeable lens (H-FS45150) is used] 2.5 W (When playing back with LCD Monitor) [When the Interchangeable lens (H-PS14042) is used] 2.6 W (When playing back with LCD Monitor) [When the Interchangeable lens (H-FS014042) is used] 2.4 W (When playing back with LCD Monitor) [When the Interchangeable lens (H-FS45150) is used]

Camera effective pixels	16,050,000 pixels
Image sensor	4/3" Live MOS sensor, total pixel number 18,310,000 pixels, Primary colour filter
Digital Zoom	Max. 4×
Extra Tele Conversion	When taking still pictures: Max. 2× (When a picture size of [S] (4 M), aspect ratio of [4:3] is selected.) When recording motion pictures: ON/OFF simple enlargement (compatible with lenses from other manufacturers)
Focus	Auto Focus/Manual Focus, Face Detection/AF Tracking/23-area-focusing/ 1-area-focusing/Pinpoint (Touch focus area selection possible)
Shutter system	Focal-plane shutter
Burst recording	
Burst speed	20 pictures/second (Super high speed), 6 pictures/second (High speed), 3.7 pictures/second (Middle speed), 2 pictures/second (Low speed)
Number of recordable pictures	Max. 9 pictures (when there are RAW files) Depends on the capacity of the card (when there are no RAW files)

ISO sensitivity (Standard Output Sensitivity)	AUTO/ $\frac{1}{2}$ ISO/160/200/400/800/1600/3200/6400/12800 (1/3 EV step change possible)
Minimum Illumination	Approx. 9 lx (when i-Low light is used, the shutter speed is 1/25th of a second) [When the Interchangeable lens (H-PS14042) is used] Approx. 9 lx (when i-Low light is used, the shutter speed is 1/25th of a second) [When the Interchangeable lens (H-FS014042) is used] Approx. 12 lx (when i-Low light is used, the shutter speed is 1/25th of a second) [When the Interchangeable lens (H-FS45150) is used]
Shutter speed	B (Bulb) (Max. approx. 120 seconds), 60 seconds to 1/4000th of a second Taking still pictures during motion picture recording Motion picture priorities: 1/25th of a second to 1/16000th of a second Still picture priorities: B (Bulb) (Max. approx. 120 seconds), 60 seconds to 1/4000th of a second
Metering range	EV 0 to EV 18
White Balance	Auto White Balance/Daylight/Cloudy/Shade/Incandescent lights/Flash/White set1/White set2/White Balance K set
Exposure (AE)	Programme AE (P)/Aperture-priority AE (A)/Shutter-priority AE (S)/Manual exposure (M)/AUTO Exposure Compensation (1/3 EV Step, -5 EV to +5 EV)
Metering Mode	Multiple/Centre weighted/Spot
LCD monitor	3.0" TFT LCD (3:2) (Approx. 920,000 dots) (field of view ratio about 100%) Touch screen
Viewfinder	Colour LCD Viewfinder (Approx. 1,440,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter)
Flash	Built-in pop up flash GN 10.5 equivalent (ISO160·m) Flash range: Approx. 30 cm to 9.4 m [When the Interchangeable lens (H-PS14042) is mounted, WIDE, [ISO AUTO] is set] Flash range: Approx. 50 cm to 9.4 m [When the Interchangeable lens (H-FS014042) is mounted, WIDE, [ISO AUTO] is set] Flash range: Approx. 90 cm to 8.3 m [When the Interchangeable lens (H-FS45150) is mounted, WIDE, [ISO AUTO] is set] AUTO, AUTO/Red-Eye Reduction, Forced ON, Forced ON/ Red-Eye Reduction, Slow Sync., Slow Sync./Red-Eye Reduction, Forced OFF

Flash synchronisation speed	Equal to or smaller than 1/160th of a second	
Microphone	Stereo	
Speaker	Monaural	
Recording media	SD Memory Card/SDHC Memory Card/SDXC Memory Card	
Picture size		
Still picture	When the aspect ratio setting is [4:3] 4608×3456 pixels, 3264×2448 pixels, 2336×1752 pixels When the aspect ratio setting is [3:2] 4608×3072 pixels, 3264×2176 pixels, 2336×1560 pixels When the aspect ratio setting is [16:9] 4608×2592 pixels, 3264×1840 pixels, 1920×1080 pixels When the aspect ratio setting is [1:1] 3456×3456 pixels, 2448×2448 pixels, 1744×1744 pixels	
Recording quality		
Motion pictures	[AVCHD] When set to [PSH]: 1920×1080 pixels (50p recording/ Approx. 28 Mbps)/ When set to [FSH]: 1920×1080 pixels (50i recording/ Approx. 17 Mbps)/ When set to [FPH]: 1920×1080 pixels (25p recording/ Approx. 17 Mbps)/ When set to [SH]: 1280×720 pixels (50p recording/ Approx. 17 Mbps) [MP4] When set to [FHD]: 1920×1080 pixels (25 frames/sec., Approx. 20 Mbps)/ When set to [HD]: 1280×720 pixels (25 frames/sec., Approx. 10 Mbps)/ When set to [VGA]: 640×480 pixels (25 frames/sec., Approx. 4 Mbps)	
Quality	RAW/RAW+Fine/RAW+Standard/Fine/Standard/MPO+Fine/MPO+Standard	
Recording file format		
Still Picture	RAW/JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard, DPOF corresponding)/MPO	
Motion pictures	AVCHD/MP4	
Audio compression	AVCHD	Dolby® Digital (2 ch)
	MP4	AAC (2 ch)
Interface		
Digital	"USB 2.0" (High Speed)	
Analogue video/audio	NTSC/PAL Composite (Switched by menu) Audio line output (monaural)	

Terminal	
[REMOTE]	φ 2.5 mm jack
[AV OUT/DIGITAL]	Dedicated jack (8 pin)
[HDMI]	MiniHDMI TypeC
Dimensions	Approx. 119.9 mm (W)×83.2 mm (H)×70.8 mm (D) (excluding the projecting parts)
Mass	Approx. 396 g [with the card and battery] Approx. 346 g (camera body) Approx. 491 g [with the Interchangeable lens (H-PS14042), card and battery] Approx. 561 g [with the Interchangeable lens (H-FS014042), card and battery] Approx. 596 g [with the Interchangeable lens (H-FS45150), card and battery]
Operating temperature	0 °C to 40 °C
Operating humidity	10%RH to 80%RH

Battery Charger (Panasonic DE-A80A):

Information for your safety

Input:	AC ~ 110 V to 240 V, 50/60 Hz, 0.2 A
Output:	DC --- 8.4 V, 0.65 A

Battery Pack (lithium-ion) (Panasonic DMW-BLC12E):

Information for your safety

Voltage/capacity:	7.2 V/1200 mAh
--------------------------	----------------

Interchangeable Lens (H-PS14042)**“LUMIX G X VARIO PZ 14–42 mm/F3.5–5.6 ASPH./POWER O.I.S.”**

Focal length	f=14 mm to 42 mm (35 mm film camera equivalent: 28 mm to 84 mm)
Aperture type	7 diaphragm blades/circular aperture diaphragm
Aperture range	F3.5 (Wide) to F5.6 (Tele)
Minimum aperture value	F22
Lens construction	9 elements in 8 groups (4 aspherical lenses, 2 ED Lens)
Nano surface coating	Yes
In focus distance	0.2 m (Wide to focal length 20 mm) to ∞ (from the focus distance reference line), 0.3 m (focal length 21 mm to Tele) to ∞ (from the focus distance reference line)
Maximum image magnification	0.17 \times (35 mm film camera equivalent: 0.34 \times)
Optical Image Stabiliser	Available
[O.I.S.] switch	None (Setting of the [Stabilizer] is done in [Rec] menu.)
Mount	“Micro Four Thirds Mount”
Angle of view	75° (Wide) to 29° (Tele)
Filter diameter	37 mm
Max. diameter	Approx. 61 mm
Overall length	Approx. 26.8 mm (from the tip of the lens to the base side of the lens mount when the lens barrel is recessed)
Mass	Approx. 95 g

Interchangeable Lens (H-FS014042)**“LUMIX G VARIO 14–42 mm/F3.5–5.6 ASPH./MEGA O.I.S.”**

Focal length	f=14 mm to 42 mm (35 mm film camera equivalent: 28 mm to 84 mm)
Aperture type	7 diaphragm blades/circular aperture diaphragm
Aperture range	F3.5 (Wide) to F5.6 (Tele)
Minimum aperture value	F22
Lens construction	12 elements in 9 groups (1 aspherical lens)
In focus distance	0.3 m to ∞ (from the focus distance reference line)

Maximum image magnification	0.16× (35 mm film camera equivalent: 0.32×)
Optical Image Stabiliser	Available
[O.I.S.] switch	None (Setting of the [Stabilizer] is done in [Rec] menu.)
Mount	"Micro Four Thirds Mount"
Angle of view	75° (Wide) to 29° (Tele)
Filter diameter	52 mm
Max. diameter	Approx. 60.6 mm
Overall length	Approx. 63.6 mm (from the tip of the lens to the base side of the lens mount)
Mass	Approx. 165 g

Interchangeable Lens (H-FS45150)

"LUMIX G VARIO 45–150 mm/F4.0–5.6 ASPH./MEGA O.I.S."

Focal length	f=45 mm to 150 mm (35 mm film camera equivalent: 90 mm to 300 mm)
Aperture type	7 diaphragm blades/circular aperture diaphragm
Aperture range	F4.0 (Wide) to F5.6 (Tele)
Minimum aperture value	F22
Lens construction	12 elements in 9 groups (2 aspherical lenses, 1 UHR Lens)
In focus distance	0.9 m to ∞ (from the focus distance reference line)
Maximum image magnification	0.17× (35 mm film camera equivalent: 0.35×)
Optical Image Stabiliser	Available
[O.I.S.] switch	None (Setting of the [Stabilizer] is done in [Rec] menu.)
Mount	"Micro Four Thirds Mount"
Angle of view	27° (Wide) to 8.2° (Tele)
Filter diameter	52 mm
Max. diameter	Approx. 62 mm
Overall length	Approx. 73 mm (from the tip of the lens to the base side of the lens mount)
Mass	Approx. 200 g

Limited Warranty (ONLY FOR AUSTRALIA)

Panasonic Warranty

1. The product is warranted for 12 months from the date of purchase. Subject to the conditions of this warranty Panasonic or its Authorised Service Centre will perform necessary service on the product without charge for parts or labour, if in the opinion of Panasonic, the product is found to be faulty within the warranty period.
2. This warranty only applies to Panasonic products purchased in Australia and sold by Panasonic Australia or its Authorised Distributors or Dealers and only where the products are used and serviced within Australia or its territories. Warranty cover only applies to service carried out by a Panasonic Authorised Service Centre and only if valid proof of purchase is presented when warranty service is requested.
3. This warranty only applies if the product has been installed and used in accordance with the manufacturer's recommendations (as noted in the operating instructions) under normal use and reasonable care (in the opinion of Panasonic). The warranty covers normal domestic use only and does not cover damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accident, misuse, neglect, build-up of dirt or dust, abuse, maladjustment of customer controls, mains supply problems, thunderstorm activity, infestation by insects or vermin, tampering or repair by unauthorised persons (including unauthorised alterations), introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
4. This warranty does not cover the following items unless the fault or defect existed at the time of purchase:
 - (a) Cabinet Part(s)
 - (b) Video or Audio Tapes
 - (c) SD cards or USB devices
 - (d) User replaceable Batteries
 - (e) DVD, Blu-ray or Recordable Discs
 - (f) Video / Audio Heads from wear and tear in normal use
 - (g) Information stored on Hard Disk Drive, USB stick or SD card
 - (h) DTV reception issues caused by TV Aerial / Cabling / Wall socket(s) etc
5. Some products may be supplied with Ethernet connection hardware. The warranty is limited on such products and will not cover
 - (a) Internet and or DLNA connection / setup related problems
 - (b) Access fees and or charges incurred for internet connection
 - (c) The use of incompatible software or software not specifically stipulated in the product operations manual; and
 - (d) Any indirect or consequential costs associated with the incorrect use or misuse of the hardware, its connection to the internet or any other device.
6. To claim warranty service, when required, you should:
 - (a) Telephone Panasonic's Customer Care Centre on 132600 or visit our website referred to below and use the Service Centre Locator for the name/address of the nearest Authorised Service Centre.
 - (b) Send or take the product to a Panasonic Authorised Service Centre together with your proof of purchase receipt as a proof of purchase date. Please note that freight and insurance to and / or from your nearest Authorised Service Centre must be arranged by you.
 - (c) Note that home or pick-up/delivery service is available for the following products in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centres:
 - Plasma/LCD televisions / displays (screen size greater than 103 cm)
7. The warranties hereby conferred do not extend to, and exclude, any costs associated with the installation, de-installation or re-installation of a product, including costs related to the mounting, de-mounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freight, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.

Panasonic Authorised Service Centres are located in major metropolitan areas and most regional centres of Australia, however, coverage will vary dependant on product. For advice on exact Authorised Service Centre locations for your product, please telephone our Customer Care Centre on 132600 or visit our website and use the Service Centre Locator.

In addition to your rights under this warranty, Panasonic products come with consumer guarantees that cannot be excluded under the Australian Consumer Law. If there is a major failure with the product, you can reject the product and elect to have a refund or to have the product replaced or if you wish you may elect to keep the goods and be compensated for the drop in value of the goods. You are also entitled to have the product repaired or replaced if the product fails to be of acceptable quality and the failure does not amount to a major failure.

If there is a major failure in regard to the product which cannot be remedied then you must notify us within a reasonable period by contacting the Panasonic Customer Care Centre. If the failure in the product is not a major failure then Panasonic may choose to repair or replace the product and will do so in a reasonable period of time from receiving notice from you.

**THIS WARRANTY CARD AND THE PURCHASE DOCKET (OR SIMILAR PROOF OF PURCHASE)
SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES**

If you require assistance regarding warranty conditions or any other enquiries, please visit the
Panasonic Australia website www.panasonic.com.au or contact by phone on **132 600**
If phoning in, please ensure you have your operating instructions available.

Panasonic Australia Pty. Limited

ACN 001 592 187 ABN 83 001 592 187

1 Innovation Road, Macquarie Park NSW 2113

PRO-031-F11 Issue: 4.0

01-01-2011

- G MICRO SYSTEM is a lens exchange type digital camera system of LUMIX based on a Micro Four Thirds System standard.
- Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- Four Thirds™ and Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- SDXC Logo is a trademark of SD-3C, LLC.
- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- This product uses “DynaFont” from DynaComware Corporation. DynaFont is a registered trademark of DynaComware Taiwan Inc.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard (“AVC Video”) and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

AVCHD™
Progressive

DOLBY
DIGITAL

HDMI



VIERA
Link

Panasonic Corporation

Web Site: <http://panasonic.net>

© Panasonic Corporation 2012