


Panasonic®

Basic Operating Instructions

Digital Camera

Model No. **DMC-TZ18**

LUMIX

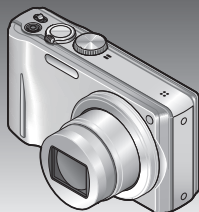

Before use, please read these instructions completely.

More detailed instructions on the operation of this camera are contained in “Operating Instructions for advanced features (PDF format)” in the supplied CD-ROM. Install it on your PC to read it.



Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

Information for Your Safety

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

IF THE POWER CORD OF THIS EQUIPMENT IS DAMAGED, IT MUST BE REPLACED WITH AN ELECTRICALLY APPROVED POWER CORD.

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

■ Product identification marking

Product	Location
Digital camera	Bottom
Battery charger	Bottom

■ About the battery pack

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

■ About the battery charger

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

■ Cautions for Use

- When using an AC adaptor, use the AC cable supplied with the AC adaptor.
- Do not use any other AV cables except the supplied one.
- Do not use any other USB connection cables except the supplied one.

In the event of abnormal operation (e.g. if the unit emits smoke or an unusual smell), immediately stop operating the unit and consult the Panasonic Customer Care Centre on 132600.

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC5G; optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

-If you see this symbol-

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Contents

Information for Your Safety2

Before use

Standard accessories	7
Names of parts.....	8
Cursor button	9

Preparations

Charging the battery	10
Inserting and removing the card (optional)/the battery.....	12
Picture save destination (cards and built-in memory)	13
Setting the clock.....	14
Setting the menu	15

Basics



Selecting the Recording Mode	16
Taking pictures with automatic settings	
[Intelligent Auto] Mode.....	17
AF Tracking	18
Taking motion pictures	
[Motion Picture] Mode.....	19
Viewing your pictures	
[Normal Play]	20
Deleting pictures	20






Others

Reading the Operating Instructions (PDF format)	21
Specifications	23

 Standard accessories


Check that all the accessories are supplied before using the camera. Part numbers are as of January 2011.

- | | | | |
|--|---|--|---|
| <input type="checkbox"/> Battery pack
DMW-BCG10E
• Charge the battery
before use.
Battery pack is indicated as
battery pack or battery in the
text. |  | <input type="checkbox"/> Hand strap
VFC4297 |  |
| <input type="checkbox"/> Battery charger
DE-A66A

Battery charger is indicated as
battery charger or charger in
the text. |  | <input type="checkbox"/> USB connection cable
K1HY08YY0017 |  |
| <input type="checkbox"/> AC Cable
K2CJ29A00002 |  | <input type="checkbox"/> AV cable
K1HY08YY0018 |  |
| | | <input type="checkbox"/> CD-ROM
VFF0774
• Software:
Use it to install the
software on your PC.
• Operating
Instructions |  |

- Cards are optional. You can record or play back pictures on the built-in memory when you are not using a card.
- Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)
- Please dispose of all packaging appropriately.
- Keep small parts in a safe place out of the reach of children.


Names of parts

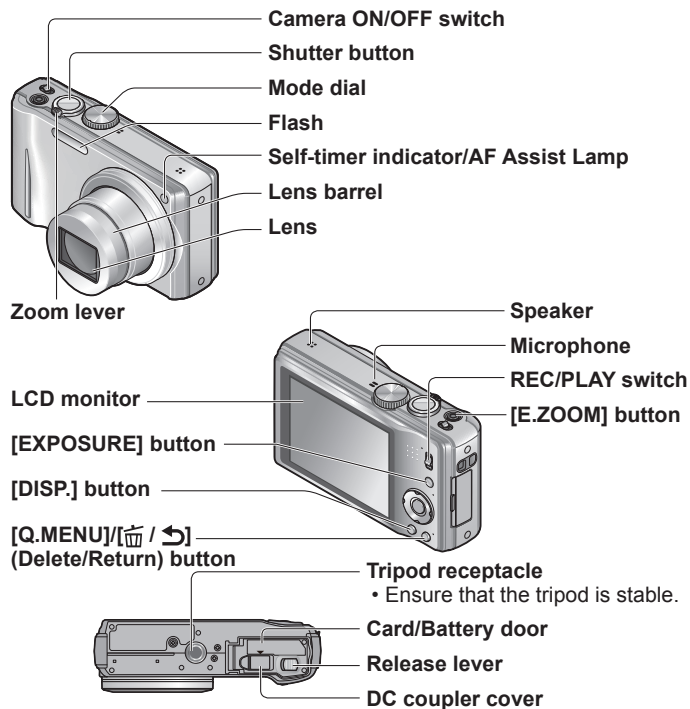


- Always use a genuine Panasonic AC adaptor (DMW-AC5G; optional).
- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC5; optional) and AC adaptor (DMW-AC5G; optional) are used.

The illustrations and screens in this manual may differ from the actual product.

Cursor button

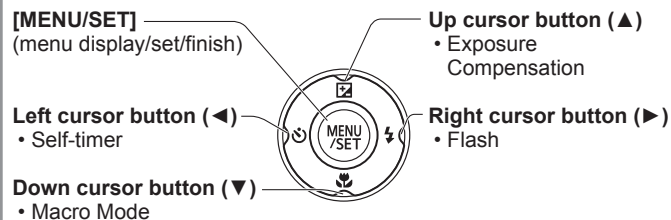

- In this manual, the button that is used is shaded or indicated by ▲ ▼ ▶ ◀.

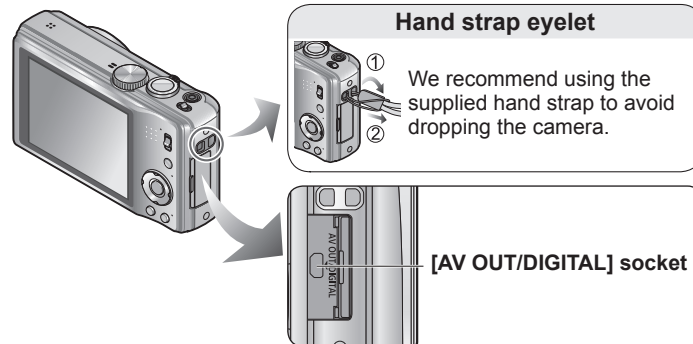

- We recommend you use a battery with sufficient battery power or the AC adaptor when recording motion pictures.
- If the power supply is cut off due to a power cut or the AC adaptor being disconnected, the motion picture being recorded using the AC adaptor will not be recorded.

Charging the battery

■ About batteries that you can use with this unit


The battery that can be used with this unit is DMW-BCG10E.

It has been found that counterfeit battery packs which look very similar to the genuine products are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we recommend that a genuine Panasonic battery pack is used.

- Use the dedicated charger and battery.
- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery (DMW-BCG10E) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.
- The battery is not charged when the camera is shipped. Charge the battery and set the clock before use.
- Charge the battery with the charger indoors (10 °C - 30 °C).

1 Insert the battery terminals and attach the battery to the charger


Ensure [LUMIX] faces outwards.

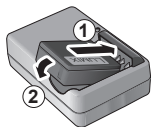

2 Connect the charger to the electrical outlet

Charging light ([CHARGE])

- On: Charging in progress (approx. 130 min. if fully depleted)
- Off: Charging complete

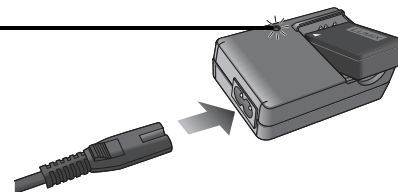

3 Detach the battery after charging is completed

■ Recording capacity guidelines (pictures/recording time)

Number of recordable pictures	Approx. 340 pictures
Recording time	Approx. 170 min
Playback time	Approx. 300 min


Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- [Program AE] Mode.
- Temperature: 23 °C/Humidity: 50 %RH when LCD monitor is on.
- Using a Panasonic SD Memory Card (32 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer function is set to [ON].)
- Recording once every 30 seconds with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

The number of recordable pictures or available operating time may vary according to surrounding environment and usage conditions. Figures may be reduced if flash, zoom, or other functions are used frequently, or in colder climates.

Inserting and removing the card (optional)/the battery

- 1 Set the camera ON/OFF switch to OFF and slide the release lever (A) to [OPEN] before opening the lid

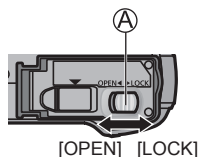

- 2 Insert the battery and card, making sure that their orientation is correct


- Battery: Insert all the way firmly until a locking sound is heard, and check that the lever is hooked over the battery.
- Card: Insert all the way firmly until it clicks.



- 3 Close lid
Slide to the [LOCK] position.

■ To remove

- To remove battery:
move lever in direction of arrow.

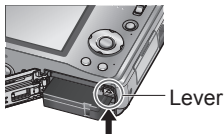

- To remove card:
press down in centre.



- Always use genuine Panasonic batteries (DMW-BCG10E).
- If you use other batteries, we cannot guarantee the quality of this product.
- Insert the card fully, otherwise it may be damaged.

Picture save destination (cards and built-in memory)

■ Built-in memory (approx. 70 MB)

- The built-in memory can be used as a temporary storage device when the card being used becomes full.
- The access time for the built-in memory may be longer than the access time for a card.

■ Compatible memory cards (optional)

The following SD standard-based cards (Panasonic brand recommended)

Type of Card	Capacity	Notes
SD Memory Cards	8 MB – 2 GB	<ul style="list-style-type: none"> • Using a card of SD Speed "Class 6"* or above is recommended for recording motion pictures. • Can be used with devices compatible with the respective formats. • Before using SDXC Memory Cards, check that your computer and other devices support this type of card. http://panasonic.net/avc/sdcard/information/SDXC.html • Only the cards listed on the left with the given capacities are supported.
SDHC Memory Cards	4 GB – 32 GB	
SDXC Memory Cards	48 GB, 64 GB	

*SD speed class refers to a specification for sustained write speeds. Confirm the SD speed by checking the card label or other card related materials.

(Example) **CLASS 6**

- Latest information:
<http://panasonic.jp/support/global/cs/dsc/>
(This Site is English only.)
- Keep the Memory Card out of reach of children to prevent swallowing.

Setting the clock

The clock is not set when the camera is shipped.

- 1 Turn on the power (A)
- 2 Press [MENU/SET] (B) while the message is displayed
- 3 Press ◀▶ to select the items (year, month, day, hour, minute, display order or time display format), and press ▲▼ to set
 - To cancel → Press [⏪ / ⏩].



- 4 Press [MENU/SET]
- 5 Confirm the setting and press [MENU/SET]
 - To return to the previous screen, press [⏪ / ⏩].
 - Turn on the power again and check the time display.

■ To change time setting


Select [Clock Set] from the [Rec] or [Setup] menu, perform 3 and 4.

Setting the menu

Refer to the following procedures to operate the menus.


Example: Setting [LCD Mode] from [OFF] to [A*] in the [Program AE] Mode

- 1 Press [MENU/SET] to display the menu

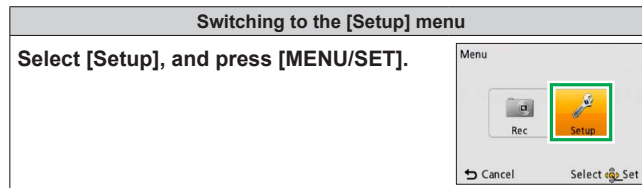


- 2 Press ▲▼ to select [LCD Mode] and then press [MENU/SET]

• Depending on the item, its setting may not appear or it may be displayed in a different way.

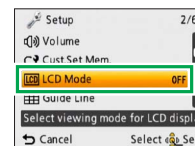


- 3 Press ▲▼ to select [A*] and then press [MENU/SET] to set


- 4 Press [⏪ / ⏩] several times to close the menu

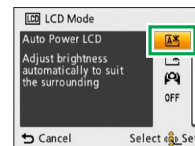

Selecting the Recording Mode

- 1 Turn on the power (A)
- 2 Slide the [REC/PLAY] switch (B) to 
- 3 Switching the mode by rotating the mode dial (C)




iA	[Intelligent Auto] Mode Take pictures with automatic settings.
P	[Program AE] Mode The subjects are recorded using your own settings.
A	[Aperture-Priority] Mode The shutter speed is automatically determined by the aperture value you set.
S	[Shutter-Priority] Mode The aperture value is automatically determined by the shutter speed you set.
M	[Manual Exposure] Mode The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.
CUST	[Custom] Mode Use this mode to take pictures with previously registered setting.
SCN	[Scene Mode] Take pictures according to scene.
MS1	[My Scene Mode]
MS2	Take pictures in frequently-used Scene Modes.
	[Motion Picture] Mode Take motion pictures.



Taking pictures with automatic settings

[Intelligent Auto] Mode

Recording Mode: **iA**

Optimum settings are made automatically from information such as “face,” “movement,” “brightness,” and “distance” just by pointing the camera at the subject, meaning that clear pictures can be taken without the need to make settings manually.

- 1 Turn on the power (A)
- 2 Slide the [REC/PLAY] switch (B) to 
- 3 Set the mode dial (C) to **iA**

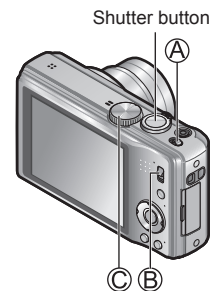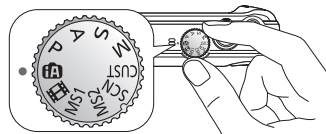

- 4 Take pictures



Press halfway
(press lightly and focus)



Press fully
(press the button all the way to record)

- If jitter becomes noticeable, use both hands, keep your arms close to your body, and stand with your feet at shoulder width.
- **Focus display (D)**
(In focus: lit / Not in focus: flashing)
- The AF area (E) is displayed around the subject's face by the Face Detection function. In other cases, it is displayed at the point on the subject which is in focus.
- Focus: Max. W: 3 cm/
Max. T: 1 m and above
(7 × to 11 × is 2 m to ∞)












Taking pictures with automatic settings

[Intelligent Auto] Mode (Continued)

Recording Mode: 

■ Automatic Scene Detection

Camera identifies scene when pointed at subject, and makes optimum settings automatically. The type of scene detected is indicated by a blue icon for two seconds.

	People are detected
	Baby is detected
	Scenery is detected
	People and night scenery are detected (Only when  is selected)
	Night scenery is detected
	A close-up shot is detected
	A sunset is detected
	Reads subject movement to avoid blurring when the scene does not correspond to any of the above.

If the camera automatically identifies the scene and determines that people appear as subjects in the picture (, , , , , , , Face Detection is activated, and the focus and exposure are adjusted for the recognised faces.

AF Tracking


Even if a subject, where the focus was locked (AF Lock) moves, the camera can continue to keep it in focus.

1 Press ▲

Ⓐ AF Tracking icon

Ⓑ AF Tracking frame

- Press ▲ again to cancel.

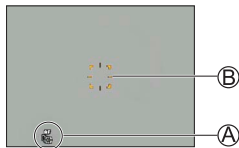

2 Align the AF Tracking frame with the subject, and then press ▼ to lock

- The optimum scene is detected for the subject where the focus was locked (AF Lock).
- AF Lock successful: Yellow
- AF Lock failed: Red (flash)
- Press ▼ to cancel.

Taking motion pictures [Motion Picture] Mode


Recording Mode: 

This records motion pictures with audio. (Recording with muted sound is not possible. Sound recording is monaural.) Zoom can also be used during recording.

1 Slide the [REC/PLAY] switch to

2 Set the mode dial to

3 Start recording

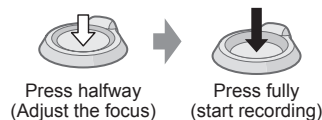

4 End recording



Remaining recording time (approx.)



Elapsed recording time

- Immediately release the shutter button after pressing it all the way.
- When there is no space left to store the motion picture, recording automatically ends.
- A maximum of approx. 2 GB of continuous motion picture can be recorded. (Even if there is more than 2 GB of available space on the card, the available recording time will be calculated for a maximum of 2 GB.)

Viewing your pictures [Normal Play]

Playback Mode:

- 1 Slide the [REC/PLAY] switch (A) to
- 2 Press to select the picture




- To play back a motion picture, select an image with or , and then press to start playback.
- You can print pictures by connecting a camera to your computer or printer, or by giving an SD card to a shop assistant at a photo shop.

Deleting pictures

Playback Mode:

- 1 Press / (A) to delete the displayed picture
- 2 Press to select [Yes] and then press [MENU/SET] (B)

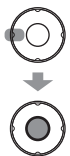


Reading the Operating Instructions

(PDF format)

More detailed instructions on the operation of this camera are contained in "Operating Instructions for advanced features (PDF format)" in the supplied CD-ROM. Install it on your PC to read it.

■ For Windows

 - 1 Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied)
- 2 Click the "Operating Instructions"
- 3 Select the desired language and then click "Operating Instructions" to install

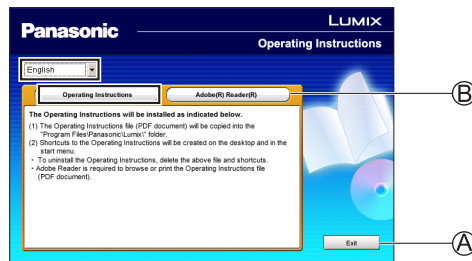

- (A) To return to the install menu.
- (B) See next page.

- 4 Double click the "Operating Instructions" shortcut icon on the desktop

Reading the Operating Instructions

(PDF format) (Continued)

■When the Operating Instructions (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Operating Instructions (PDF format). Insert the CD-ROM containing the Operating Instructions (supplied), click (B) and then follow the messages on the screen to install.

Compatible OS: Windows 2000 SP4 / Windows XP SP3 / Windows Vista SP2 / Windows 7

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.
<http://get.adobe.com/reader/otherversions>

■To uninstall the Operating Instructions (PDF format)

Delete the PDF file from the “Program Files\Panasonic\Lumix” folder.

- When the contents in the Program Files folder cannot be displayed, click the “Show the contents of this folder” to display them.

■For Macintosh

- 1 Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied)
- 2 Open the “Manual” folder in the CD-ROM and then copy the PDF file with the desired language inside the folder
- 3 Double click the PDF file to open it

Specifications

Digital Camera: Information for your safety

Power Source	DC 5.1 V
Power Consumption	When recording: 1.1 W When playing back: 0.6 W
Camera effective pixels	14,100,000 pixels
Image sensor	1/2.33" CCD, total pixel number 14,500,000 pixels Primary colour filter
Lens	Optical 16 x zoom f=4.3 mm to 68.8 mm (35 mm film camera equivalent: 24 mm to 384 mm)/ F3.3 (Max. W) to F5.9 (Max. T)
Digital Zoom	Max. 4 x
Extra optical zoom	Max. 33.8 x (When the picture size is set to 3 million pixels [3M] or less.)
Focus range	
P/A/S/M	50 cm (Wide)/ 2 m (Tele) to ∞
Macro/ Intelligent Auto/ Motion picture	3 cm (Wide)/1 m (Tele) to ∞ (7 × to 11 × is 2 m to ∞)
Scene Mode	There may be difference in above settings.
Shutter system	Electronic shutter + Mechanical shutter
Burst recording	
Burst speed	Approx. 1.9 pictures/second
Number of recordable pictures	Max. 5 pictures (Standard), max. 3 pictures (Fine)

Specifications (Continued)

Hi-speed burst	
Burst speed	Approx. 10 pictures/second (Speed priority) Approx. 5.5 pictures/second (Image priority)
Number of recordable pictures	Approx. 15 pictures (When using the built-in memory, immediately after formatting) Max. 100 pictures (When using a card, it may differ depending on the type of card and the recording conditions)
Shutter speed	60 to 1/4000 th [Starry Sky] Mode: 15 seconds, 30 seconds, 60 seconds
Exposure (AE)	Programme AE (P)/Aperture-priority AE (A)/ Shutter-priority AE (S)/Manual exposure (M) Exposure Compensation (1/3 EV Step, -2 EV to +2 EV)
Metering mode	Multiple/Centre weighted/Spot
LCD monitor	3.0" TFT LCD (4:3) (Approx. 230,400 dots) (field of view ratio about 100 %)
Flash	Flash range: (ISO AUTO) Approx. 60 cm to 5.0 m (Wide)
Microphone	Monaural
Speaker	Monaural
Recording media	Built-in Memory (Approx. 70 MB)/SD Memory Card/ SDHC Memory Card/SDXC Memory Card
Recording file format	
Still picture	JPEG (based on Design rule for Camera File system, based on Exif 2.3 standard)/DPOF corresponding
Motion pictures	QuickTime Motion JPEG

Interface	
Digital	USB 2.0 (High Speed)
Analogue video	NTSC/PAL Composite (Switched by menu)
Audio	Audio line output (Monaural)
Terminal	AV OUT/DIGITAL: Dedicated jack (8 pin)
Dimensions	Approx. 104.9 mm (W) x 57.6 mm (H) x 33.4 mm (D) (excluding the projection part)
Mass	With card and battery: Approx. 210 g Excluding card and battery: Approx. 188 g
Operating temperature	0 °C to 40 °C
Operating humidity	10 %RH to 80 %RH

Battery charger

(Panasonic DE-A66A): Information for your safety

Input	110 V to 240 V ~ 50/60Hz, 0.2 A
Output	4.2 V --- 0.65 A

Battery Pack (lithium-ion)

(Panasonic DMW-BCG10E): Information for your safety

Voltage/capacity	3.6 V/895 mAh
-------------------------	---------------

MEMO

MEMO



- SDXC Logo is a trademark of SD-3C, LLC.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- This product uses “DynaFont” from DynaComware Corporation. DynaFont is a registered trademark of DynaComware Taiwan Inc.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.



VQT3H42
M0111KZ0

Panasonic Corporation
Web Site: <http://panasonic.net>

© Panasonic Corporation 2011