

**Panasonic**<sup>®</sup>

TH-55CX800A

TH-65CX800A

*e***HELP**

## Read first

### eHELP

- How to use 12

### Features

- 4K resolution 13
- Home Screen 14
- Info Frame 15
- Touch Pad Controller 16
- TV Anytime 17
- Dual Tuner 18
- Easy Mirroring 19
- Data Service Application 20

## Home Screen

### Home Screen

- Information 21
- How to use 23
- Pin to HOME 24
- Option menu 25

### Live TV

- How to use 26
- Option menu 27

### Apps

- How to use 28
- Option menu 29

### Devices

- How to use 30
- Option menu 31

## Watching

### Basic

- Basic connection 32
- Selecting channel 34

• Information banner	35
• AV Options	38
• Subtitle	39
• Last view	40
• Off Timer	41
• Energy saving functions	42
• Adjusting time	44
• Language	46
<b>4K resolution</b>	
• 4K compatible equipment	47
• HDCP Setting	48
• HDMI Auto Setting	49
• Valid 4K format	50
<b>External equipment</b>	
• External connection	51
• Watching external input	54
• Operating with TV's remote control	56
• HDMI features	58
• Valid input signals	60
<b>For best picture</b>	
• Viewing Mode	61
• Ambient Sensor	63
• Aspect	64
• Basic settings	65
• Noise reduction settings	68
• Advanced Settings	69
• Option Settings	73
• Screen Settings	75
• Lock Settings	77
• Copy Adjustment	78
<b>For best audio</b>	
• Sound mode	79
• Basic settings	80

• Volume settings	82
• Voice Guidance Settings	84
• Audio Description	85
• Advanced settings	86

## TV Guide

• Using TV Guide	89
• Timer Programming	91

## 3D

• Note	92
• 3D Eyewear - Functions	93
• 3D Eyewear - Registration	95
• 3D Eyewear - Replacing battery	96
• 3D Eyewear - Maintenance	97
• Viewing 3D	98
• 3D Mode Selection	100
• 3D Settings	101
• Source image format	103

## Tuning and editing channels

• Setting menu	104
• Favourites Edit	105
• Channel List	107
• Auto Tuning	108
• Manual Tuning	109
• Update Channel List	110
• New Channel Message	111
• Signal Condition	112
• Add TV Signal	113

## Recording

### USB HDD setup

• Preparations	114
• Setting for USB HDD	116

Recording current programme	
• One Touch Recording	118
Timer Programming	
• Setting Timer Programming	119
• Editing Timer Programming	121
• Remote recording	123
• Note	124
Technical information	
• USB HDD	125
Media Player	
Using Media Player	
• Information	126
• Selecting device / mode	128
• Network device	130
• Sharing file	131
Photo mode	
• Selecting file	132
• Viewing photo	133
• Sorting photos	134
• Using Slideshow	135
Video mode	
• Selecting file	137
• Watching video	138
• Video Setup	140
• Audio output settings	142
Recorded TV mode	
• Selecting content	143
• Watching recorded TV	144
• Grouping content	146
• Deleting content	147
• Chapter List	148
• Audio output settings	149

<b>Music mode</b>	
• Selecting file	150
• Playing music	151
• Music Setup	152
<b>USB Sharing</b>	
• USB Sharing	153
<b>Technical information</b>	
• Device handling caution	155
• USB devices	156
• Photo format	157
• Video format	158
• Music format	161
<b>Network</b>	
<b>Internet content</b>	
• Information	162
• Selecting internet content	163
• Note	164
<b>DLNA</b>	
• In-House streaming	165
• Using DLNA	168
<b>Network connections</b>	
• Internet connection	169
• DLNA connection	170
• Note	172
<b>Network settings</b>	
• Network Connection	173
• Custom - Wireless	175
• Custom - Wired	178
• Custom - Wireless Access Point	180
• Network Status	181
• my Home Cloud Settings	182
• VIERA Name	183

• TV Remote App Settings	184
• Network Link Settings	186
• TV Anytime Settings	188
• File Sharing Settings	189
• Mirroring Settings	190
• Do Not Track Setting	191
• Software Update	192
• New Software Message	193
<b>Photos</b>	
• Selecting file	194
• Viewing photo	195
• Using Slideshow	196
<b>Videos</b>	
• Selecting file	197
• Watching video	198
• Video Setup	200
• Audio output settings	202
<b>Music</b>	
• Selecting file	203
• Playing music	204
• Music Setup	205
<b>DIGA Recorder</b>	
• Controlling DIGA Recorder	206
<b>Technical information</b>	
• Photo format	207
• Video format	208
• Music format	211
<b>Functions</b>	
<b>Info Frame</b>	
• Information	212
• How to use	213
• Settings	214

Voice Control	
• Information	215
• How to use	216
• Settings	218
• Note	219
Touch Pad Controller	
• Information	220
• Pairing	221
• Identifying controls	222
• Settings	224
TV Anytime	
• How to use	225
• TV Anytime Settings	226
Mirroring	
• How to use	227
• Mirroring Settings	228
Multi Window	
• Information	229
• How to use	230
• Note	232
VIERA Link “HDAVI Control™”	
• Summary of VIERA Link	233
• Preparations	238
• Easy playback	239
• Power on Link	240
• Power off Link	241
• Standby Power Save	242
• Intelligent Auto Standby	243
• VIERA Link Control	244
• Speaker Selection	246
• Note	247
Child Lock	
• Using Child Lock	248

• PIN number	249
• Parental Rating	250
<b>Data Service Application</b>	
• Using Data Service Application	251
• Cookie	252
• Note	253
<b>Shipping Condition</b>	
• Shipping Condition	254
<b>Updating the TV Software</b>	
• Information	255
• Auto update	256
• Manual update	257
<b>Setting characters</b>	
• Using Numeric buttons	258
<b>Bluetooth devices</b>	
• Bluetooth Setup	259
<b>Keyboard</b>	
• Keyboard	260
<b>Settings</b>	
<b>Setting menu</b>	
• How to use	261
<b>Picture</b>	
• Viewing Mode	263
• Basic settings	264
• Ambient Sensor	267
• Noise reduction settings	268
• Advanced Settings	269
• Option Settings	270
• Screen Settings	272
• 3D Settings	273
• Lock Settings	274

• Copy Adjustment	275
• Reset Picture Defaults	276
<b>Sound</b>	
• Mode	277
• Basic settings	278
• Volume settings	279
• Voice Guidance Settings	280
• Audio Description	281
• Advanced settings	282
• Reset Sound Defaults	283
<b>Network</b>	
• Network Connection	284
• Network Status	285
• my Home Cloud Settings	286
• VIERA Name	287
• TV Remote App Settings	288
• Network Link Settings	289
• TV Anytime Settings	290
• File Sharing Settings	291
• Mirroring Settings	292
• Do Not Track Setting	293
• Other settings	294
<b>Timer</b>	
• Off Timer	295
• Timer Programming	296
• Clock Settings	297
• Auto Standby	298
• No signal Power off	299
<b>Setup</b>	
• Eco Navigation	300
• Voice Control Settings	301
• USB Device Setup	302
• Recording Setup	303

• VIERA Touch Pad Controller	304
• Bluetooth Setup	305
• Child Lock	306
• Tuning Menu	307
• Language	309
• Display Settings	310
• HDCP Setting	311
• HDMI Auto Setting	312
• VIERA Link Settings	313
• Data Service Application	314
• System Menu	315
• Other Settings	316

## Support

### Help menu

• Using Help menu	317
-------------------	-----

### FAQs

• Picture	318
• Digital TV	320
• Sound	321
• 3D	322
• HDMI	324
• Network	325
• Other	327

### Maintenance

• Care and Cleaning	329
---------------------	-----

### Optional accessories

• 3D Eyewear	330
• Wall-hanging bracket	331

### Licence

• Licence	332
-----------	-----

# Read first

## eHELP

### How to use

---

#### ■ Meaning of signs

 :

Letters enclosed in brackets indicate remote control buttons.

Menu :

Letters in cyan indicate on-screen display items.

 → :

References in this eHELP

When the icon ( - ) is displayed, you can jump to the page for detailed descriptions pressing **Numeric buttons**.

 (red) :

Displays the menu related to the description (only for some descriptions)

= Note =

- Design and Specifications are subject to change without notice.
- The images shown in this eHELP are for illustrative purposes only.

# Features

## 4K resolution

---

You can watch content in 4K format that has twice the horizontal and vertical resolution of the 1080p signal.

 → [Watching > 4K resolution > 4K compatible equipment](#)

# Home Screen

---

“Home Screen” is a gateway to the TV programmes, applications and connected devices.

It provides you an easy way to access all the features.

 → [Home Screen](#) > [Home Screen](#) > [Information](#)

## Info Frame

---

Info Frame is a convenient feature to provide you relevant information of the watching programme, recommendations, etc. It is displayed on the edge of screen when you need it.

 → [Functions](#) > [Info Frame](#) > [Information](#)

## Touch Pad Controller

---

Touch Pad Controller is designed for the convenient operations on the application, internet content, etc. You can operate the TV intuitively with this controller.

 → [Functions > Touch Pad Controller > Information](#)

## TV Anytime

---

You can watch TV and set timer event with the network equipment (smartphone, etc.) from outside the home network.

 → [Functions](#) > [TV Anytime](#) > [How to use](#)

## Dual Tuner

---

You can watch or record 2 programmes simultaneously, watch a programme while recording another programme, etc.

 → [Functions](#) > [Multi Window](#) > [How to use](#)

## Easy Mirroring

---

You can watch display images of other devices (smartphone, etc.) on the TV screen using a mirroring function. You can also start the mirroring function from the other devices without operating the TV.

 → [Functions > Mirroring > How to use](#)

# Data Service Application

---

You can enjoy Hybrid Broadcast Broadband TV application that is one of the interactive data services for digital broadcasting.

 → [Functions > Data Service Application > Using Data Service Application](#)

# Home Screen


## Home Screen

### Information

---

“Home Screen” is a gateway to the TV programmes, applications and connected devices.

Home Screen is displayed by pressing **HOME** and it provides you an easy way to access all the features as shown below (example).

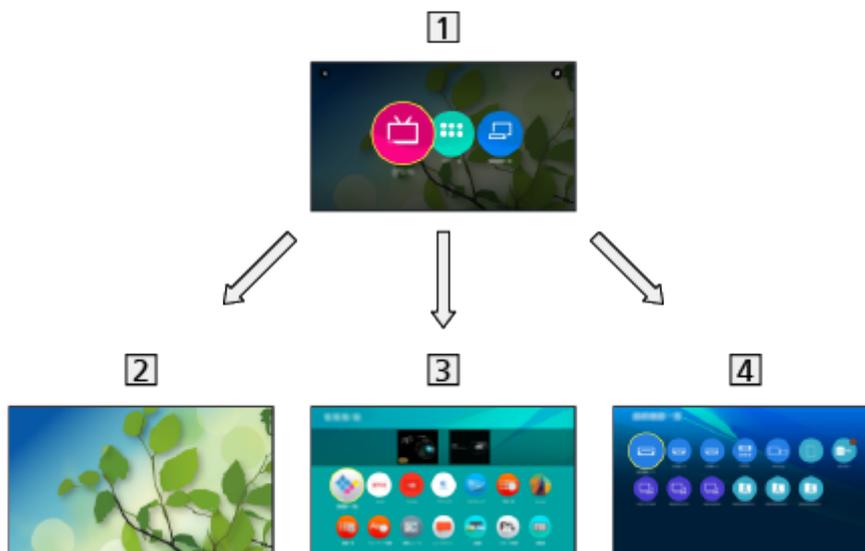

**1** Home Screen

**2** Live TV

- Gateway to TV programmes

 → Home Screen > Live TV

**3** Apps

- Gateway to various applications (internet content, etc.)

 → Home Screen > Apps

**4** Devices

- Gateway to connected devices (HDMI equipment, USB device, network device, etc.)

 → Home Screen > Devices

= Note =

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use Home Screen. You can update the software later manually.

 → [Network](#) > [Network settings](#) > [Software Update](#)


## How to use

---

From Home Screen, you can access all the features such as TV programmes, applications and connected devices.

1. Display Home Screen with **HOME**.

(Example)

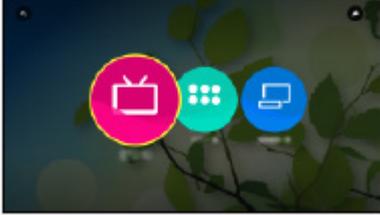

2. Select **Live TV / Apps / Devices** and press **OK** to access.

- To watch full-screen TV, select **Live TV**.

(Example)



- Also refer to  on Home Screen for the operations.

### ■ Search

You can search the content from various features.

1. Display Home Screen with **HOME**.
2. Select  for searching and press **OK** to access.
3. Follow the on-screen instructions.

## Pin to HOME

---

You can add a shortcut for a frequently used feature on Home Screen.

1. Display Home Screen with **HOME**.
2. Select [Live TV](#) / [Apps](#) / [Devices](#) and press **OK** to access.
3. Select a feature (TV programme / application / device).
4. Display the option menu with **OPTION**.
5. Select [Pin to HOME](#) and press **OK** to set.
  - You can also add a shortcut pressing **★** (Pin to HOME) of Touch Pad Controller.
  - To remove a shortcut from Home Screen, set [Unpin from HOME](#).

 → [Home Screen](#) > [Home Screen](#) > [Option menu](#)

## Option menu

---

You can customise Home Screen.

1. Display the option menu with **OPTION**.
2. Select one of the following items and press **OK** to access.

[Unpin from HOME / Move](#)

3. Set the item and press **OK** to store.
- 

[Unpin from HOME](#)

Remove a shortcut from Home Screen.

---

[Move](#)

Arranges the position of the icons.

# Live TV


## How to use

---

Live TV is a gateway to the TV programmes.

1. Display Home Screen with **HOME**.
2. Select **Live TV**.

(Example)

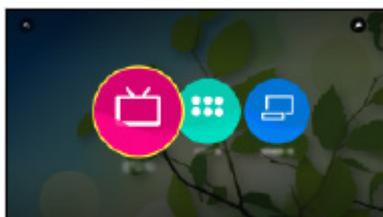

3. Press **OK** to access.

(Example)



- For details of watching TV

 → [Watching > Basic](#)

- To add a shortcut icon

 → [Home Screen > Home Screen > Pin to HOME](#)

## Option menu

---

1. Display the option menu with **OPTION**.
  2. Select one of the following items and press **OK** to access.  
[Pin to HOME](#) / [Unpin from HOME](#) / [Accessibility](#) / [AV Options](#)
  3. Set the item and press **OK** to store.
- 

### [Pin to HOME, Unpin from HOME](#)

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → [Home Screen > Home Screen > Pin to HOME](#)

- The label (channel position, channel name, etc.) of shortcut is not updated by broadcasters automatically. Remove and add the shortcut again to update the label.
- 

### [Accessibility](#)

Guidance settings for visually impaired users

 → [Watching > For best audio > Voice Guidance Settings](#)

---

### [AV Options](#)

Easy optional setting for viewing, sound, etc.

 → [Watching > Basic > AV Options](#)

- Menu items and selectable options vary depending on the TV mode.

# Apps


## How to use

---

Various applications (internet content, etc.) can be accessed easily from [Apps](#).

1. Display Home Screen with **HOME**.
2. Select [Apps](#) and press **OK** to access.

(Example)

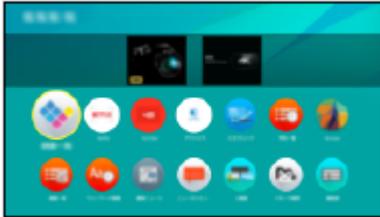

- To exit [Apps](#)

**EXIT**

- To add a shortcut icon

 → [Home Screen](#) > [Home Screen](#) > [Pin to HOME](#)

3. Select an application and press **OK** to access.
4. Follow the on-screen instructions.

= Note =

- A broadband network environment is required to be able to use this function fully.
- Design and specifications are subject to change without notice.

## Option menu

---

1. Display the option menu with **OPTION**.
  2. Select one of the following items and press **OK** to access.  
[Pin to HOME](#) / [Unpin from HOME](#) / [Move](#) / [Lock](#) / [Unlock](#) / [Uninstall](#) / [Show Info](#).
  3. Set the item and press **OK** to store.
- 

### [Pin to HOME, Unpin from HOME](#)

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → [Home Screen](#) > [Home Screen](#) > [Pin to HOME](#)

---

### [Move](#)

Arranges the position of the applications.

---

### [Lock, Unlock](#)

Locks / unlocks the specific applications to restrict access to them (if available).

- Child Lock PIN number is required to access to locked application.

 → [Functions](#) > [Child Lock](#) > [PIN number](#)

---

### [Uninstall](#)

Deletes an application from [Apps](#) (if available).

---

### [Show Info.](#)

Displays the information about the selected application.

# Devices

## How to use

---

Connected devices (HDMI equipment, USB device, network device, etc.) can be accessed easily from [Devices](#).

1. Display Home Screen with **HOME**.
2. Select [Devices](#) and press **OK** to access.

(Example)



- To exit [Devices](#)

**EXIT**

- To add a shortcut icon

 → [Home Screen](#) > [Home Screen](#) > [Pin to HOME](#)

3. Select a device and press **OK** to access.

- For external equipment

 → [Watching](#) > [External equipment](#)

- For USB device, network device for Media Player

 → [Media Player](#)

- For network equipment for DLNA

 → [Network](#) > [DLNA](#)

- For mirroring function

 → [Functions](#) > [Mirroring](#)

= Note =

- Design and specifications are subject to change without notice.

## Option menu

---

1. Display the option menu with **OPTION**.
  2. Select one of the following items and press **OK** to access.  
[Pin to HOME](#) / [Unpin from HOME](#) / [Accessibility](#) / [Show Info](#).
  3. Set the item and press **OK** to store.
- 

### [Pin to HOME, Unpin from HOME](#)

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → [Home Screen](#) > [Home Screen](#) > [Pin to HOME](#)

---

### [Accessibility](#)

Guidance settings for visually impaired users

 → [Watching](#) > [For best audio](#) > [Voice Guidance Settings](#)

---

### [Show Info](#)

Displays the information about the selected device.

# Watching

## Basic


### Basic connection

---

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

- External equipment and cables shown are not supplied with this TV.

#### ■ Aerial

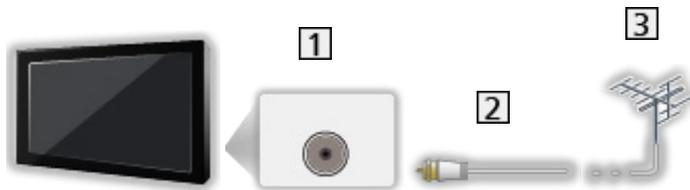


1 Aerial terminal

2 RF cable

3 Aerial

- Keep RF (antenna) cable away from the mains lead to avoid and minimise mains interference pickup.
- Do not place the RF cable under the TV.
- An aerial, correct cable (75  $\Omega$  coaxial) and correct terminating plug are required to obtain optimum quality picture and sound.
- If a communal aerial system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.

## ■ DVD Recorder / VCR

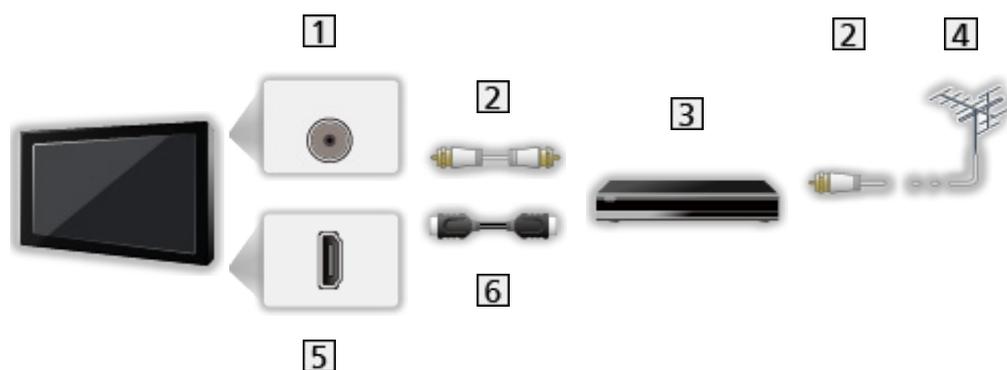

- 1 Aerial terminal
- 2 RF cable
- 3 DVD Recorder / VCR
- 4 Aerial
- 5 HDMI terminal
- 6 HDMI cable

## ■ Set top box



- 1 HDMI terminal
- 2 HDMI cable
- 3 Set top box
- 4 Satellite dish


= Note =

- For details of VIERA Link connections  
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.
- Use a fully wired HDMI compliant cable.
- Check the terminal type and cable plugs are correct for connection.

## Selecting channel

---

1. Select Digital TV or Analogue TV with **TV**.
  - The selected mode is displayed on the top left of the screen.
2. Select a channel with **Channel Up / Down** or **Numeric buttons**.

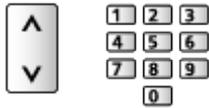

- Press **Numeric buttons** to select a channel position with 2 or more-digit (e.g. 399, press **3** **9** **9**).

### ■ To select a channel from the channel list

1. Display the channel list with **OK**.
2. Select a channel from the list and press **OK** to watch.

### ■ To select a channel using information banner

1. Display information banner with **INFO** if it is not displayed.
2. Select a channel and press **OK** to watch while the banner is displayed.

 → [Watching > Basic > Information banner](#)

### ■ To select a channel using TV Guide

1. Display **TV Guide** with **GUIDE**.
2. Select the current programme and press **OK** to access.
3. Select **View** and press **OK** to watch.

 → [Watching > TV Guide > Using TV Guide](#)


- Not valid in Analogue TV

## Information banner

Display information banner with **INFO**.

- Also appears when changing a channel.

(Example)

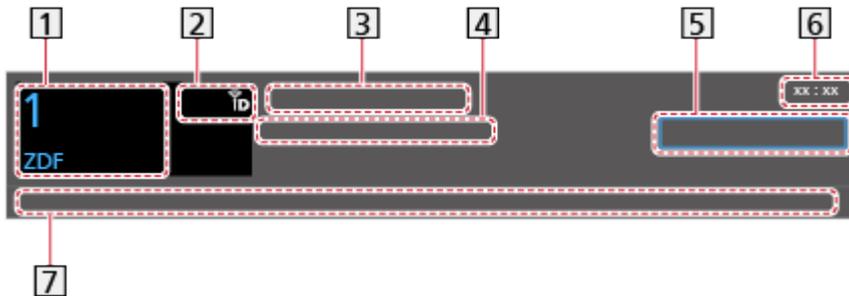

- 1 Channel position and name
- 2 Channel type (Radio, etc.) / Encrypted channel (🔒) / TV mode (📺, 📻)
- 3 Programme
- 4 Start time / End time (Digital TV)  
Channel position, etc. (Analogue TV)
- 5 Category
- 6 Current time
- 7 Features available / message meanings

## Rating:

Rating information

 → [Functions > Child Lock > Parental Rating](#)

## Bad signal:

Poor quality TV signal

## AD:

Audio Description service available

- This function can aid visually-impaired viewers by providing an additional audio track to describe events on screen.

 → [Watching > For best audio > Audio Description](#)



Subtitle service available



Multiple image or audio available

## ∞, I, II, ▼ :

Audio mode

 → [Watching > For best audio > Advanced settings](#)



Data service (Hybrid Broadcast Broadband TV application) available

 → [Functions > Data Service Application > Using Data Service Application](#)

## 1 – 90:

Off Timer remaining time

 → [Watching > Basic > Off Timer](#)

- To confirm another tuned channel  

- To watch the channel listed in the banner  

- Information on the next programme (Digital TV)  

- Extra information (Digital TV)  

  - Press again to hide the banner.
- To hide the banner  

- To update the TV software (if available)  
 (red)
- To select a favourite list (Digital TV)  
 (blue)
  - If the favourite list is created in [Favourites Edit](#).  
 → [Watching > Tuning and editing channels > Favourites Edit](#)
- To adjust banner timeout, set [Banner Display Timeout](#).
  - 1) Display the menu with .
  - 2) Select [Setup > Display Settings > Banner Display Timeout](#) and press  to access.
  - 3) Set the item and press  to store.
- To display the introduction banner for the internet service
  - 1) Display the menu with .
  - 2) Select [Setup > Display Settings > Smart Banner](#) and press  to access.
  - 3) Select [On / Off](#) and press  to set.

## AV Options

---

Confirm or change the current status.

- Display the full-screen TV to use this function.
1. Display the option menu with **OPTION**.
  2. Select **AV Options** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.

[Audio Description](#) / [Audio Selection / AD](#) / [Dual Audio](#) / [MPX](#) / [Volume Correction](#)

- The function items vary depending on the TV mode.
4. Set the item and press **OK** to store.

---

### Audio Description

Set to **Auto** if the programme has Audio Description service, then you will hear an additional audio track to describe events on screen (if available).

- Not valid in Analogue TV
- Not valid in multi window mode
- To adjust the volume for Audio Description

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

---

### Audio Selection / AD

Selects between alternative language or Audio Description for sound tracks (if available).

- This setting is not memorised and it returns to the default setting once you exit the current programme.
- Not valid in Analogue TV

---

### Dual Audio

Selects stereo / monaural (if available).

- Not valid in Analogue TV

---

### MPX

Selects multiplex sound mode (if available).

 → [Watching](#) > [For best audio](#) > [Advanced Settings](#)

- For Analogue TV

---

### Volume Correction

Adjusts the volume of each individual channel or input mode.

## Subtitle

---

Display / hide subtitles (if available).

1. Display the subtitle menu with **STTL/AD**.
2. Select **Subtitle** and press **OK** to access.
3. Select **On / Off** and press **OK** to store.
  - For Digital TV

= Note =

- Subtitles may not be displayed properly in 3D images.
- Not valid on the sub screen in multi window mode

## Last view

---

Switch to a previously viewed channel or input mode easily with **LAST VIEW**.

- Press again to return to the current view.

= Note =

- Switching channel may not be available depending on the condition.
- Watching less than 10 seconds is not reflected in the previously viewed channel or input mode.

## Off Timer

---

Turn the TV Standby mode automatically after a fixed period.

1. Display the menu with **MENU**.
2. Select **Timer** > **Off Timer** and press **OK** to access.
3. Select the time in 15-minute increments and press **OK** to set.  
**90 / 75 / 60 / 45 / 30 / 15 / Off (minutes)**
  - To cancel, set to **Off** or turn the TV off.
  - The remaining time is displayed on the bottom right of the screen.
  - When the remaining time is less than 3 minutes, the remaining time will flash on the screen.

## Energy saving functions

---

The TV can be eco-friendly using energy-saving functions.

The TV goes into Standby mode in the following conditions:

- [Eco Navigation](#) is set to [Set to Eco](#).
- [Off Timer](#) is active.  
 → [Watching](#) > [Basic](#) > [Off Timer](#)
- No operation is performed for 4 hours while [Auto Standby](#) is set to [On](#).
- No signal is received and no operation is performed for 10 minutes while [No signal Power off](#) is set to [On](#).

= Note =

- This function does not affect the recording.

### ■ Auto Standby

1. Display the menu with **MENU**.
2. Select [Timer](#) > [Auto Standby](#) and press **OK** to access.
3. Select [On](#) / [Off](#) and press **OK** to set.

---

#### [Auto Standby](#)

([On](#) / [Off](#))

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

- Automatic input switching with the connected equipment affects this function and time-count resets.
- A notification message will appear 3 minutes before going into Standby mode.
- Changing the default configuration may result in higher energy consumption of the product.

## ■ No signal Power off

1. Display the menu with **MENU**.
  2. Select **Timer > No signal Power off** and press **OK** to access.
  3. Select **On / Off** and press **OK** to set.
- 

### No signal Power off

(On / Off)

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

- A notification message will appear 3 minutes before going into Standby mode.

## ■ Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

The concerned items and their current settings are displayed. Select **Set to Eco** to set them to the energy-saving settings at once.


1. Display the menu with **MENU**.
  2. Select **Setup > Eco Navigation** and press **OK** to access.
  3. Select **Set to Eco** and press **OK** to set.
- **Auto Standby** and **No signal Power off** are active when **Eco Navigation** is set to **Set to Eco**.

## Adjusting time

---

Settings for the system time of this TV.

1. Display the menu with **MENU**.
2. Select **Timer** > **Clock Settings** and press **OK** to access.
3. Select one of the following items and press **OK** to set.  
**Mode** / **Date** / **Time** / **Daylight Saving Time** / **Region Select**
4. Set with **Cursor buttons** or **Numeric buttons** and press **OK** to store.

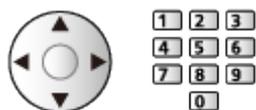

---

### Mode

(**Auto** / **Manual**)

Selects the clock setting mode for this TV.

- Set to **Auto** to adjust the time automatically using the time information from the digital broadcast. Set to **Manual** to adjust manually.

---

### Date

Sets the current date manually.

---

### Time

Sets the current time manually.

---

### Daylight Saving Time

Selects time offset from the standard time for Summer Time. (Base on GMT)

(**+ 1 hour** / **+ 1/2 hour** / **Off** / **Auto**)

- If there is a gap between displayed time and actual time, set this function.
- Normally select **Auto** to adjust as following for the region has been set in **Region Select**.

**NSW / ACT / Victoria / Tasmania:** +11:00

**South Australia:** +10:30

**Queensland:** +10:00

**Northern Territory:** +9:30

**Western Australia:** +8:00

---

## Region Select

Selects the region where you live to adjust the standard time. (Base on GMT)

([NSW](#) / [ACT](#) / [Victoria](#) / [Queensland](#) / [South Australia](#) / [Western Australia](#) / [Northern Territory](#) / [Tasmania](#))

- The time contained in the broadcast signal is UTC (Universal Time coordinated) formally known as GMT (Greenwich Mean Time).

[NSW](#) / [ACT](#) / [Victoria](#) / [Queensland](#) / [Tasmania](#): +10:00

[South Australia](#) / [Northern Territory](#): +9:30

[Western Australia](#): +8:00

## Language

---

1. Display the menu with **MENU**.
  2. Select **Setup > Language > OSD Language** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### OSD Language

Changes language for on-screen displays.

# 4K resolution

## 4K compatible equipment

---

You can watch content in 4K format that has twice the horizontal and vertical resolution of the 1080p signal.

- For details of valid 4K format

 → [Watching > 4K resolution > Valid 4K format](#)

- Connect the 4K compatible equipment to HDMI terminal using a 4K compatible cable and you can watch content in 4K format.

### ■ 4K compatible equipment



**1** HDMI terminal

**2** HDMI cable

**3** 4K compatible equipment

- Check the terminal type and cable plugs are correct for connection.
- Use a fully wired HDMI compliant cable.

## HDCP Setting

---

1. Display the menu with **MENU**.
  2. Select **Setup > HDCP Setting** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### HDCP Setting

(Auto / 2.2 / 1.4)

Select a version of HDCP according to the content you watch.

- HDCP is a technology of copy protection for digital audio / video content.
- For HDMI

## HDMI Auto Setting

---

1. Display the menu with **MENU**.
  2. Select **Setup > HDMI Auto Setting** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### HDMI Auto Setting

(**Mode1** / **Mode2**)

Set to **Mode1** when the image in HDMI input is not displayed properly.

- For HDMI

## Valid 4K format

---

### ■ Valid 4K format (HDMI)

---

- 4K UHD

3 840 × 2 160 (60p, 50p, 30p, 25p, 24p)

- Aspect is fixed to **16:9**.
- 

- DCI 4K

4 096 × 2 160 (60p, 50p, 30p, 25p, 24p)

- Actual resolution is 3 840 × 2 160p.
  - Aspect is fixed to **V Full**.
- 

= Note =

- The above signals are reformatted for optimal viewing on your display.
- 3D content in 4K format is not supported.
- For details of aspect

 → [Watching > For best picture > Aspect](#)

# External equipment

## External connection

These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment.

- For details of basic connection


 → [Watching > Basic > Basic connection](#)

- To use the specific devices supporting Bluetooth wireless technology

 → [Functions > Bluetooth devices](#)

- Check the terminal type and cable plugs are correct for connection.
- External equipment and cables shown are not supplied with this TV.

### ■ HDMI equipment

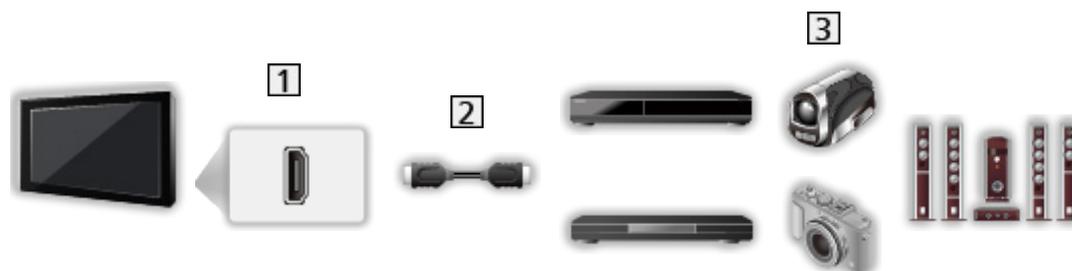

**1** HDMI terminal

**2** HDMI cable

**3** Recorder / Player / Set top box / Camcorder / Amplifier with speaker system


= Note =

- Use a fully wired HDMI compliant cable.
- For details of VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Use HDMI2 to connect the TV to an amplifier which has ARC (Audio Return Channel) function.

■ AV devices

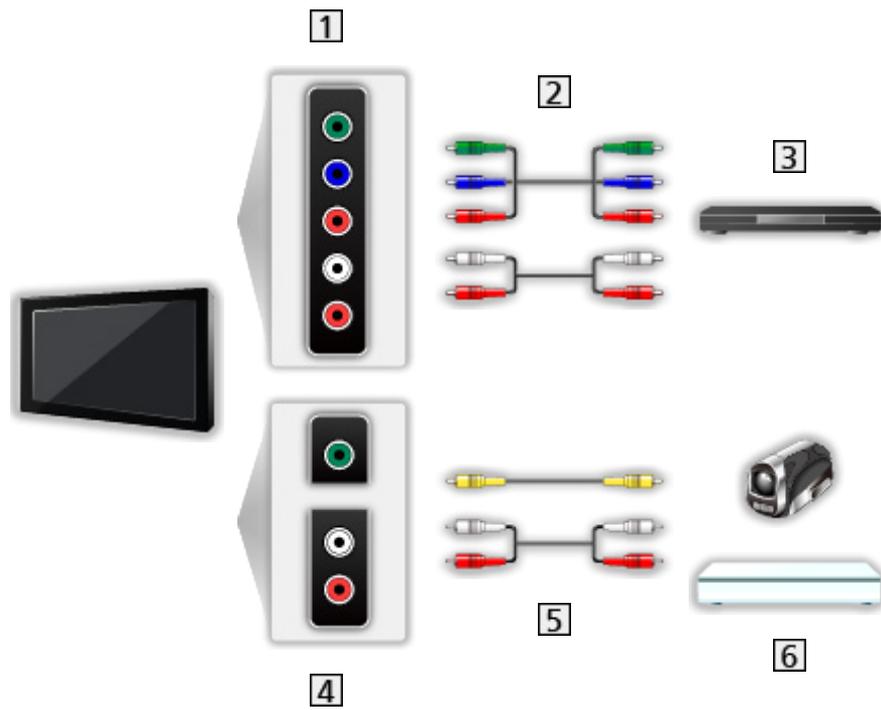

1 AV IN (COMPONENT) terminals

2 Component cables

3 DVD Player

4 AV IN (VIDEO) terminals

5 Composite cables

6 Camcorder / Game equipment

## ■ USB devices



- 1 USB port
- 2 USB cable
- 3 USB HDD

= Note =

- It is recommended to connect the device to the TV's USB port directly.
- You cannot use two or more of the same kind of USB devices simultaneously except USB Flash Memory or USB HDD.
- Use USB 3 port for connecting the USB HDD.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- Additional information about the devices may be on the following website.  
<http://panasonic.net/viera/support> (English only)

## ■ Listening with external speakers



- 1 DIGITAL AUDIO OUT
- 2 Optical digital audio cable
- 3 Amplifier with speaker system

- To enjoy multi-channel sound from external equipment (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For information about the connections, read the manuals of the equipment and amplifier.
- To select the sound output, set **TV Speaker**.

 → **Watching > For best audio > Volume settings**

## Watching external input

Connect the external equipment (VCR, DVD, etc.) and you can watch through the input.

1. Display the input selection menu with **AV**.
2. Select the input mode connected to the equipment and press **OK** to watch. (The selected mode is displayed on the top left of the screen.)
  - You can also select the input pressing **AV**. Press repeatedly until the desired input is selected.
  - You can select **COMPONENT** and **VIDEO** in **AV**.
  - You can label or skip each input mode. Skipped inputs will not be displayed when **AV** is pressed. ([Input Labels](#))
  - The remote control is capable of operating the content or external equipment.

 → [Watching > External equipment > Operating with TV's remote control](#)

- To return to TV mode

**TV**

= Note =

- If the external equipment has an aspect adjustment function, set it to **16:9**.
- For details, read the manual of the equipment or ask your local dealer.

### ■ Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#), banner, etc.

 → [Watching > Basic > Information banner](#)

1. Display the menu with **MENU**.
2. Select [Setup](#) > [Display Settings](#) > [Input Labels](#) and press **OK** to access.
3. Set the item and press **OK** to set.
  - To name each input mode freely, select [User input](#) and set characters (maximum 10 characters).
  - To skip the input mode, select [Skip](#).

## ■ Playing Time Display

Set to **On** to display a time period of continuous use in Game Mode on the top right of the screen every 30 minutes.

1. Display the menu with **MENU**.
2. Select **Setup > Display Settings > Playing Time Display** and press **OK** to access.
3. Select **On / Off** and press **OK** to set.
  - This function is available when **Game Mode** is set to **On**.

## Operating with TV's remote control

---

You can operate the content in Media Player / media server, recording functions or the connected equipment with the following buttons of this TV's remote control.



Playback (VCR / DVD / video content)



Stop the operations



Rewind, view the picture rapidly in reverse (VCR)

Skip to the previous track, title or chapter (DVD / video content)



Rewind, view the picture rapidly in reverse (VCR)

Search backward (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Skip to the next track, title or chapter (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Search forward (DVD / video content)



Pause / Resume

Press and hold to play at slow speed (DVD)



[One Touch Recording](#)

 → [Recording > Recording current programme > One Touch Recording](#)

## ■ How to change the code

Each Panasonic product has its own remote control code. Change the code according to the product for operation.

1. Press and hold Standby On / Off switch during the following operations.



2. Enter the appropriate code as follows with **Numeric buttons**.



- Codes for each product and features

70: DVD Recorder, DVD Player, Blu-ray Disc Player

71: Player theatre, Blu-ray Disc theatre

72: VCR

73 (default):

Using in USB HDD recording, Media Player, DLNA features or VIERA Link

3. Press  to change.

= Note =

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to defaults if batteries are replaced.
- Some operations may not be available depending on the equipment.

# HDMI features

---

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment\* with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using a fully wired HDMI compliant cable.

 → [Watching > External equipment > External connection](#)

\*: The HDMI logo is displayed on HDMI-compliant equipment.

## ■ Applicable HDMI features

- Input audio signal:

2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)

- Input video signal:

Matches the output setting of the digital equipment.

 → [Watching > External equipment > Valid input signals](#)

- VIERA Link (HDAVI Control 5)

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Content Type

- Deep Colour

- Audio Return Channel

– Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.

– For HDMI2

- 3D

- x.v.Colour™

- 4K

 → [Watching > 4K resolution > Valid 4K format](#)

## ■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When using the DVI to HDMI adaptor cable, connect the audio cable to the audio input terminal (use AV IN audio terminals).

- Enquire HDMI adaptor cable at your local digital equipment retailer shop.

= Note =

- Audio settings can be made on [HDMI Input](#) in the Sound Menu.

 → [Watching > For best audio > Advanced settings](#)

- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

## Valid input signals

---

### ■ COMPONENT, HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1 125 (1 080) / 60i, 50i	○	○
1 125 (1 080) / 60p, 50p, 24p		○
3 840 × 2 160 / 60p, 50p, 30p, 25p, 24p		○
4 096 × 2 160 / 60p, 50p, 30p, 25p, 24p		○

○: Applicable input signal

= Note =

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

# For best picture

## Viewing Mode

---

1. Display the menu with **MENU**.
  2. Select **Picture > Viewing Mode** and press **OK** to access.
  3. Select the mode and press **OK** to set.
- 

### Viewing Mode

([Dynamic](#) / [Normal](#) / [Cinema](#) / [THX Cinema](#) / [THX Bright Room](#) / [True Cinema](#) / [Custom](#) / [Professional1](#) / [Professional2](#))

Selects your favourite picture mode for each input.

#### Dynamic:

Improves contrast and sharpness for viewing in a bright room.

#### Normal:

Normal use for viewing in a normal lighting condition.

#### Cinema:

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

#### THX Cinema\*:

Reproduces the original image quality precisely in a darkened room.

- Not valid in 3D mode

#### THX Bright Room\*:

Reproduces the original image quality precisely in a bright room.

- Not valid in 3D mode

#### True Cinema:

Reproduces the original image quality precisely without any revision.

#### Custom:

Adjusts each menu item manually to suit your favourite picture quality.

#### Professional1 / 2:

Allows you to set and lock the professional picture settings.

 → [Watching > For best picture > Advanced Settings](#)

- If a certified professional dealer sets these modes, [Professional1](#) and [Professional2](#) may be displayed as [isf Day](#) and [isf Night](#).

- The following items can be adjusted and stored for each mode.  
[Backlight](#) / [Contrast](#) / [Brightness](#) / [Colour](#) / [Tint](#) / [Sharpness](#) / [Colour Temperature](#) / [Vivid Colour](#) / [Colour Remaster](#) / [Rec.2020 Colour Remaster](#) / [Reversal Film Effect](#) / [Adaptive Backlight Control](#) / [Ambient Sensor](#) / [Noise Reduction](#) / [MPEG Remaster](#) / [Resolution Remaster](#) / [Dynamic Range Remaster](#) / [Intelligent Frame Creation](#) / [24p Smooth Film](#)
  - You can set [Viewing Mode](#) in 2D and 3D mode for each.
- \*: THX modes are used to mirror the picture settings used by professional filmmakers, faithfully reproducing the image quality of THX Certified movies. THX Certified movies have the THX logo on the disc. THX modes are not available for photo content.

## Ambient Sensor

---

1. Display the menu with **MENU**.
  2. Select **Picture > Ambient Sensor** and press **OK** to access.
  3. Select **On / Off** and press **OK** to set.
- 

### Ambient Sensor

(On / Off)

- Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting condition.

# Aspect

---

Change the aspect ratio (image size) with **ASPECT**.

## ■ To change the aspect ratio manually

1. Display **Aspect Selection** with **ASPECT**.
2. Select the mode and press **OK** to set.
  - You can also change the mode pressing **ASPECT**.  
(Press repeatedly until you reach the desired mode.)

### 16:9:

Directly displays the image at 16:9 without distortion (anamorphic).

### 4:3:

Displays the image at the standard 4:3 without distortion.

### Zoom:

Displays a 16:9 letterbox or 4:3 image without distortion.

### V Full:

Displays the image enlarged vertically to fit the screen without distortion.

- For DCI 4K format

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.
- Aspect is fixed to **16:9** in the following conditions:
  - 4K content except DCI 4K
  - **Game Mode** is set to **On**.
  - **1080p Pixel by 4pixels** is set to **On**.
  - **1080p Pure Direct** is set to **On**.
  - **4K Pure Direct** is set to **On**.
- Aspect cannot be changed in 3D format signals.

## Basic settings

---

1. Display the menu with **MENU**.
  2. Select **Picture** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Backlight / Contrast / Brightness / Colour / Tint / Sharpness / Colour Temperature / Vivid Colour / Colour Remaster / Rec.2020 Colour Remaster / Reversal Film Effect / Adaptive Backlight Control / Resolution Remaster / Dynamic Range Remaster / Intelligent Frame Creation / 24p Smooth Film**
  4. Set the item and press **OK** to store.
- 

### **Backlight, Contrast, Brightness, Colour, Tint, Sharpness**

Adjusts the levels of these options according to your personal preference.

- **Sharpness** is not available when **1080p Pixel by 4pixels** is set to **On**.
- 

### **Colour Temperature**

Sets the overall colour tone of the picture (bluer - redder).

---

### **Vivid Colour**

(**On / Off**)

Automatically adjusts colours to vivid ones.

---

### **Colour Remaster**

(**Max / Min / Off**)

Displays the vivid images with the expanded colour gamut.

- Not valid in the following conditions:
    - Photo content
    - **Viewing Mode** is THX mode.
- 

### **Rec.2020 Colour Remaster**

(**Max / Min / Off**)

Displays the vivid images with the suitable colour gamut.

- This function is available only for Rec. 2020 and displayed instead of **Colour Remaster**.
-

### Reversal Film Effect

(Max / Min / Off)

Provides the picture effect such as the reversal film for photo content.

- For photo content
  - Not valid when [Viewing Mode](#) is THX mode
- 

### Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

---

### Resolution Remaster

(Auto / Max / Mid / Min / Off)

Enhances picture resolution to make the image sharper.

---

### Dynamic Range Remaster

(On / Off)

Enhances bright areas of the image closer to the original luminance making improved picture impact.

- Not valid in the following conditions:
    - 3D
    - Multi window
    - [Adaptive Backlight Control](#) is set to [Off](#).
    - [Contrast Control](#) is set to [Off](#).
- 

### Intelligent Frame Creation

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

- Depending on the content, images may be noisy. To prevent the noise, change the setting.
  - Not valid in the following conditions:
    - [Game Mode](#) is set to [On](#).
    - [1080p Pixel by 4pixels](#) is set to [On](#).
    - [1080p Pure Direct](#) is set to [On](#).
    - [4K Pure Direct](#) is set to [On](#).
-

## 24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

- This function is available only for 24p signal input and displayed instead of [Intelligent Frame Creation](#).
- Not valid in the following conditions:
  - [Game Mode](#) is set to [On](#).
  - [1080p Pixel by 4pixels](#) is set to [On](#).
  - [1080p Pure Direct](#) is set to [On](#).
  - [4K Pure Direct](#) is set to [On](#).

## Noise reduction settings

---

1. Display the menu with **MENU**.
  2. Select **Picture > Noise Reduction / MPEG Remaster** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

- Not valid in the following conditions:
    - **Game Mode** is set to **On**.
    - **1080p Pixel by 4pixels** is set to **On**.
    - **1080p Pure Direct** is set to **On**.
    - **4K Pure Direct** is set to **On**.
- 

### MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

- Not valid in the following conditions:
  - **Game Mode** is set to **On**.
  - **1080p Pixel by 4pixels** is set to **On**.
  - **1080p Pure Direct** is set to **On**.
  - **4K Pure Direct** is set to **On**.

# Advanced Settings

---

You can adjust and set up the detailed picture settings when [Viewing Mode](#) is set to [Cinema](#), [True Cinema](#), [Custom](#) or [Professional1 / 2](#). The settings in [True Cinema](#), [Custom](#) or [Professional1 / 2](#) can be stored for each input.

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

1. Select the input mode with **AV** or **TV**.
2. Display the menu with **MENU**.
3. Select [Picture](#) > [Viewing Mode](#) and press **OK** to access.
4. Select the mode and press **OK** to set.

[Cinema](#) / [True Cinema](#) / [Custom](#) / [Professional1](#) / [Professional2](#)

## ■ Adjust the detailed picture settings

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Advanced Settings](#) and press **OK** to access.
3. Select one of the following items and press **OK** to access.

[Contrast Control](#) / [Colour Gamut](#) / [White Balance](#) / [Colour Management](#) / [Gamma](#) / [Reset Picture Defaults](#)

4. Set the item and press **OK** to store.

## ■ Contrast Control

---

### [Contrast Control](#)

([Auto](#) / [Custom](#) / [Off](#))

Automatically adjusts the detailed contrast settings. Select [Custom](#) to set [Contrast Control Setting](#) manually.

---

### [Contrast Control Setting](#)

#### [Adaptive Gamma Control](#):

Adjusts the gamma curve to make the image brighter.

#### [Black Expander](#):

Gradually adjusts the shades of black.

#### [Clear White Effect](#):

Makes the white area clearer.

#### [Reset Contrast Control](#):

Resets items for [Contrast Control Setting](#).

## ■ Colour Gamut

### Colour Gamut

([Native](#) / [Rec. 709](#) / [SMPTE-C](#) / [EBU](#))

Reproduces image colour precisely according to the colour gamut standards.

#### [Native](#):

Displays deep colours by expanding the colour gamut to its maximum.

#### [Rec. 709](#):

Standard for HD (High definition)

#### [SMPTE-C](#):

Standard for NTSC

#### [EBU](#):

Standard for PAL

- Set [Colour Remaster](#), [Rec.2020 Colour Remaster](#) and [Reversal Film Effect](#) to [Off](#) to use this function.

## ■ White Balance

---

### [R-Gain](#) / [G-Gain](#) / [B-Gain](#)

Adjusts the white balance of bright red / green / blue areas.

---

### [R-Cutoff](#) / [G-Cutoff](#) / [B-Cutoff](#)

Adjusts the white balance of dark red / green / blue areas.

---

### [More Detailed Adjustment](#)

Adjusts more detailed items for [White Balance](#).

#### [Input Signal Level](#):

Adjusts the input signal level.

#### [R-Gain](#) / [G-Gain](#) / [B-Gain](#):

Adjusts the detailed white balance of bright red / green / blue areas.

#### [Reset White Balance](#):

Resets items for [More Detailed Adjustment](#).

---

### [Reset White Balance](#)

Resets [White Balance](#) to the default settings.

## ■ Colour Management

---

### [R-Hue / R-Saturation / R-Luminance](#)

Adjusts the picture hue / saturation / luminance of red areas.

---

### [G-Hue / G-Saturation / G-Luminance](#)

Adjusts the picture hue / saturation / luminance of green areas.

---

### [B-Hue / B-Saturation / B-Luminance](#)

Adjusts the picture hue / saturation / luminance of blue areas.

---

### [More Detailed Adjustment](#)

Adjusts more detailed items for [Colour Management](#).

#### [C-Hue / M-Hue / Y-Hue:](#)

Adjusts the picture hue of cyan / magenta / yellow areas.

#### [C-Saturation / M-Saturation / Y-Saturation:](#)

Adjusts the saturation of cyan / magenta / yellow areas.

#### [C-Luminance / M-Luminance / Y-Luminance:](#)

Adjusts the luminance of cyan / magenta / yellow areas.

#### [Reset Colour Management:](#)

Resets items for [More Detailed Adjustment](#).

---

### [Reset Colour Management](#)

Resets [Colour Management](#) to the default settings.

## ■ Gamma

---

### Gamma

Switches the gamma curve.

- Please note the numerical values are reference for the adjustment.
- 

### More Detailed Adjustment

Adjusts more detailed items for [Gamma](#).

#### Input Signal Level:

Adjusts the input signal level.

#### Gain:

Adjusts the gain of gamma for selected signal level.

#### Reset Gamma:

Reset items for [More Detailed Adjustment](#).

---

### Reset Gamma

Reset [Gamma](#) to the default settings.

## ■ Reset Picture Defaults

---

### Reset Picture Defaults

Resets [Advanced Settings](#) to the default settings.

## Option Settings

---

1. Display the menu with **MENU**.
  2. Select **Picture > Option Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[Game Mode](#) / [Film Cadence Mode](#) / [1080p Pure Direct](#) / [4K Pure Direct](#)  
/ [1080p Pixel by 4pixels](#) / [HDMI Content Type](#) / [HDMI RGB Range](#) /  
[3D-COMB](#)
  4. Set the item and press **OK** to store.
- 

### Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

- Not valid in TV mode
  - To display a continuous record of time spent using Game Mode, set [Playing Time Display](#).
- 

### Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

- This function is available for interlaced signals (except in the mode of multi window, Network services or when [Game Mode](#) is set to On).
- 

### 1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

- Not valid in the following conditions:
    - 3D
    - Multi window
    - [1080p Pixel by 4pixels](#) is set to On.
- 

### 4K Pure Direct

(On / Off)

Reproduces the original image quality in detail for 4K (HDMI) input signal.

- Not valid in the following conditions:
    - 3D
    - Multi window
-

## 1080p Pixel by 4pixels

(On / Off)

Displays like pixel by pixel to make the image sharper for 1080p signal.

- For HDMI
  - Not all image may be displayed as pixel by pixel precisely.
  - Not valid in the following conditions:
    - 3D
    - Multi window
- 

## HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

### Auto:

Automatically adjusts the picture settings according to the received HDMI content if the connected equipment supports HDMI Content Type.

- To set the availability of each content type for Auto mode, select [Auto Detail Setting](#).
  - For HDMI
- 

## HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

- When the black level is not suitable, select [Full](#).
  - For HDMI
- 

## 3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

- Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to [On](#) to display sharper and more accurate colours.
- For PAL / NTSC signal reception in TV mode or from composite connection

# Screen Settings

---

1. Display the menu with **MENU**.
  2. Select **Picture > Screen Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[16:9 Overscan](#) / [Zoom Adjustments](#) / [Screen Display](#)
  4. Set the item and press **OK** to store.
- 

## 16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

**On:**

Enlarges the image to hide the edge of the image.

**Off:**

Displays the image in the original size.

- Set to **On** if noise occurs on the edge of the screen.
  - This function can be memorised for SD (Standard definition) and HD (High definition) signals respectively.
  - Not valid in the following conditions:
    - 4K content
    - Photo content
    - **Game Mode** is set to **On**.
    - **1080p Pixel by 4pixels** is set to **On**.
    - **1080p Pure Direct** is set to **On**.
    - **4K Pure Direct** is set to **On**.
    - Multi window
- 

## Zoom Adjustments

Adjusts the vertical position and size when aspect is set to **Zoom**.

- Not valid in the following conditions:
    - 4K content
    - Multi window
-

## Screen Display

(On / Off)

Turns the screen off when you select **Off**.

- This function is effective in reducing power consumption when listening to the sound without watching the TV screen.
- Press any buttons (except Standby On / Off switch) to turn the screen on.

# Lock Settings

---

Locks the settings of [Professional1](#) / [2](#) for each input.

- Select [Professional1](#) / [Professional2](#) in Viewing Mode in advance.

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Lock Settings](#) and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- Enter the PIN number twice at first setting.
  - Make a note of the PIN number in case you forget it.
4. Select [Adjustment Lock](#) and press **OK** to access.
  5. Select [On](#) and press **OK** to set.
    - The following items can be locked.  
[Backlight](#) / [Contrast](#) / [Brightness](#) / [Colour](#) / [Tint](#) / [Sharpness](#) / [Colour Temperature](#) / [Vivid Colour](#) / [Adaptive Backlight Control](#) / [Resolution Remaster](#) / [Dynamic Range Remaster](#) / [Advanced Settings](#) / [Reset Picture Defaults](#)

## ■ To change the PIN number

1. Select [Change PIN](#) and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



## Copy Adjustment

---

Copies the picture settings of [True Cinema](#), [Custom](#), [Professional1](#) or [Professional2](#) to those of the other input mode or Viewing Mode.

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Copy Adjustment](#) > [Destination Viewing Mode](#) / [Destination Input](#) and press **OK** to access.
3. Select the destination to copy to and press **OK** to set.
4. Select [Copy Start](#) and press **OK** to copy.
5. When a confirmation screen is displayed, select [Yes](#) and press **OK** to set.

= Note =

- [Option Settings](#), [Screen Settings](#) and [3D Settings](#) are not copied.
- You cannot copy to the locked mode.

# For best audio

## Sound mode

---

1. Display the menu with **MENU**.
  2. Select **Sound** > **Mode** and press **OK** to access.
  3. Select the mode and press **OK** to set.
- 

### Mode

(**Standard** / **Music** / **Ambience** / **User**)

Selects your favourite sound mode for each input.

#### Standard:

Provides the suitable sound quality for all types of scenes.

#### Music:

Improves sound quality for watching music videos, etc.

#### Ambience:

Improves spatial effects and provides clear sounds.

#### User:

Adjusts the sounds manually using the equaliser to suit your favourite sound quality.

- The following items can be adjusted and stored for each mode.

**Bass** / **Treble** / **Surround** / **Bass Boost**

- For the User mode, **Equaliser** is available in the Sound Menu instead of **Bass** and **Treble**. Select **Equaliser** and adjust the frequency.

 → **Watching** > **For best audio** > **Basic settings**

- This function is effective only for the sound from TV speakers.

## Basic settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Bass / Treble / Equaliser / Balance / Surround / Bass Boost**
  4. Set the item and press **OK** to store.
- 

### Bass

Adjusts level to enhance or minimise lower, deeper sound output.

---

### Treble

Adjusts level to enhance or minimise sharper, higher sound output.

---

### Equaliser

Adjusts the frequency level to suit your favourite sound quality.

- This function is available when **Mode** is set to **User**.
  - Select the frequency and adjust the frequency level.
  - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
  - To reset the levels of each frequency to the default settings, select **Reset Equaliser Settings** and press **OK**.
  - This function is effective only for the sound from TV speakers.
- 

### Balance

Adjusts volume level of right and left speakers.

---

### Surround

(**Virtual Surround / Off**)

Selects surround sound settings.

#### Virtual Surround:

Provides a dynamic enhancer of width and depth to simulate improved spatial effects.

- This function is effective only for the sound from TV speakers.
-

## Bass Boost

(On / Off)

Enhances the effect of bass sounds.

- This function is effective only for the sound from TV speakers.

## Volume settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Speaker Selection / TV Speaker / Auto Gain Control / Volume Correction / Speaker Distance to Wall**
  4. Set the item and press **OK** to store.
- 

### Speaker Selection

(TV / Home Cinema)

Enables controlling the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

TV:

TV speakers are active.

Home Cinema:

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use **Volume Up / Down** and **MUTE**.



- This function is available when the theatre speakers supporting VIERA Link function is connected to this TV.
- 

### TV Speaker

(On / Off)

Set to **Off** when using the external speakers.

---

### Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

---

## Volume Correction

Adjusts the volume of each individual channel or input mode.

---

## Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

- If the back space between the TV and wall is within 30 cm, **Up to 30cm** is recommended.
- If the back space between the TV and wall is over 30 cm, **Over 30cm** is recommended.
- This function is effective only for the sound from TV speakers.

# Voice Guidance Settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** > **Voice Guidance Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Voice Guidance** / **Speed** / **Volume** / **Language** / **User Level** / **Web Browser**
  4. Set the item and press **OK** to store.
- 

## Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

- Not valid in multi window mode
- 

## Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

---

## Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

---

## Language

Changes language for the voice guidance.

---

## User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

---

## Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network content in web browser function.

---

= Note =

- Voice guidance function may not correspond exactly.

## Audio Description

---

1. Display the menu with **STTL/AD**.
  2. Select **Audio Description** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Audio Description / Volume / Speakers / Audio Selection**
  4. Set the item and press **OK** to store.
    - You can also select this function from **Audio Description** in the Sound Menu.
- 

### Audio Description

(Auto / Off)

Narration settings for visually impaired users

Set to **Auto** to activate the narration sound track when available on the broadcast.

- The availability of audio description sound track is indicated by **AD** in the information banner.
  - Not valid in Analogue TV
  - Not valid in multi window mode
- 

### Volume

Adjusts the volume for Audio Description.

- Not valid in Analogue TV
- 

### Speakers

(Mix / Standard)

Set to **Mix** to activate the description sound track from TV speakers.

- Not valid in Analogue TV
- 

### Audio Selection

Selects between alternative languages for sound tracks (if available).

- This setting is not memorised and it returns to the default setting once you exit the current programme.
- Not valid in Analogue TV

## Advanced settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**MPX / Digital Audio Preference / SPDIF Selection / PCM Optical Level / HDMI Input**
  4. Set the item and press **OK** to store.
- 

### MPX

Selects multiplex sound mode (if available).

#### Stereo:

Use this normally.

#### Mono:

When stereo signal cannot be received

#### M1 / M2:

Available while mono signal is transmitted

- For Analogue TV
- 

When you receive the stereo / bilingual sound system, sound output modes can be selected by using the **MPX** in the Sound Menu.

- Meanings of mode indicators

∞ : STEREO

I : MAIN I

II : SUB II

▽ : MONO

### ■ Available mode indicator for each type of broadcast

- NICAM - Used in New Zealand, Singapore, Hong Kong, etc.
  - Regular broadcast (Standard Audio): No indicator / ▽
  - Regular + NICAM MONO I (MAIN I): I / ▽
  - NICAM STEREO: ∞ / ▽
  - NICAM DUAL MONO (MAIN I / SUB II): I / II / ▽

- A2 (German) - Used in Australia, Malaysia, etc.
  - Regular broadcast (Standard Audio): No indicator / ▼
  - BILINGUAL or DUAL MONO (MAIN I / SUB II): **I** / **II**
  - STEREO: **∞** / ▼

= Note =

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended to switch from STEREO to MONO.
- Selected mode is not affected when the contents of the receiving signal change.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position pressing the Sound Selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.

---

## Digital Audio Preference

(Dolby D / MPEG)

Selects the initial setting for audio tracks.

### Dolby D:

The priority is given to Dolby Digital.

### MPEG:

The priority is given to MPEG.

- Dolby Digital is the method of coding digital signals developed by the Dolby Laboratories. Apart from stereo (2ch) audio, these signals can also be multi-channel audio.
  - MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.
  - Not valid in Analogue TV
-

## SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS for video content.

### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.
- For digital TV, video content

 → Media Player > Video mode > Audio output settings

 → Network > Videos > Audio output settings

---

## PCM Optical Level

Adjusts the audio level of PCM output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals to equalise with that of the other audio types.

---

## HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → Watching > External equipment > HDMI features

### Digital:

When sound is carried via the HDMI cable connection

### Analogue:

When sound is not carried via the HDMI-DVI adaptor cable connection

- For HDMI

# TV Guide

## Using TV Guide

**TV Guide** - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcaster).

- Not valid in Analogue TV

1. Select Digital TV with **TV**.
2. Display **TV Guide** with **GUIDE**.

(Example)



- 1 Date
- 2 Time
- 3 Programme
- 4 Channel position and name

- To watch the programme

- 1) Select the current programme and press **OK** to access.
- 2) Select **View** and press **OK** to watch.

- To use **Timer Programming**

 → **Watching > TV Guide > Timer Programming**

- To the previous day

 (red)

- To the next day

 (green)

- To view a channel list of the selected type
  - 1) Display the type list with  (yellow).
  - 2) Select the type and press **OK** to view.
- To view a channel list of the selected favourite list
  - 1) Display the favourite list with  (blue).
  - 2) Select the favourite and press **OK** to view.
    - To list favourite channels, set [Favourites Edit](#).
   
 → [Watching > Tuning and editing channels > Favourites Edit](#)
- To view more details of the programme
  - 1) Select the programme.
  - 2) Press **INFO** to view.
    - Press again to return to [TV Guide](#).
- To exit [TV Guide](#)
  
**EXIT**

= Note =

- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.

# Timer Programming

---

This function allows you to select programmes that you want to record to the USB HDD.

1. Display [TV Guide](#) with **GUIDE**.
2. Select the forthcoming programme and press **OK** to access.
  - To check / change / cancel a timer event  
 → [Recording > Timer Programming > Editing Timer Programming](#)
  - LED turns to orange in Standby mode when [Timer Programming](#) is set.
  - To return to [TV Guide](#)  
**RETURN**
  - If you select the current programme, a confirmation screen asking whether you want to watch or record the programme appears. Select [Timer Programming](#) and press **OK** to set [USB HDD Rec.](#) to record from the time you finish the timer event setting.

= Note =

- Not valid in Analogue TV
- [Timer Programming](#) only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- When recording programmes to the USB HDD, be sure to format the USB HDD and enable it to record in [USB Device Setup](#).  
 → [Recording > USB HDD setup](#)
- To set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network  
 → [Recording > Timer Programming > Remote recording](#)

# 3D

## Note

---

- Display the image (TV, external input, etc.) full-screen for viewing 3D.
- If the room is lit by fluorescent lights (50 Hz) and light appears to flicker when using the 3D Eyewear, switch off the fluorescent light.
- Do not apply pressure on or scratch the lens of the 3D Eyewear.
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- When viewing 3D images, make sure your eyes are in a horizontal position where double vision does not occur.
- Do not wear the 3D Eyewear for purposes other than viewing 3D images. Liquid crystal displays (such as computer screen, digital clock, calculator, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as a substitute for sunglasses.
- 3D effects may be perceived differently depending on the person.

# 3D Eyewear - Functions

---

## ■ Part names and functions



### 1 Power button / Mode change / Indicator lamp

- Power button
  - Press and hold for approx. 1 second to turn the 3D Eyewear on. (The indicator lamp lights for 2 seconds.)
  - Press and hold for 3 seconds or more to turn the 3D Eyewear off. (The indicator lamp lights 3 times.)
- Mode change
  - Press and hold for approx. 1 second to change the mode between 3D and 2D (view a 3D image in 2D).
  - When the power is off, press and hold for approx. 5 seconds to change to registration mode.

 → [Watching > 3D > 3D Eyewear - Registration](#)

- Indicator lamp
  - Lights or flashes during use to show the status (see below).

### 2 Protection film

- Peel off the protection film on both sides of the lens.

### 3 Insulating sheet

- When using for the first time, remove the insulation sheet by pulling it.

### 4 Battery cover

- To replace the battery

 → [Watching > 3D > 3D Eyewear - Replacing battery](#)

## ■ Indicator lamp status

- Lights red for 2 seconds when turned on:
  - Sufficient battery level
- Flashes 5 times when turned on:
  - Low battery level
- Flashes red:
  - Currently registering
- Flashes red once every second:
  - Currently reconnecting to the TV
- Flashes red 3 times:
  - Power turns off when pressing the power button for 3 seconds or more when in use.
  - Power turns off automatically when registering, or when reconnection fails or connection is lost.
- Flashes red once every 2 seconds when in use:
  - 3D mode is selected.
- Flashes red twice every 4 seconds when in use:
  - 2D mode is selected.

## 3D Eyewear - Registration

---

### ■ First registration

Perform the first registration when the 3D Eyewear is used for the first time.

1. Turn the TV on.
2. Press Power button for approx. 1 second to turn the 3D Eyewear on.
  - The lamp lights for approx. 2 seconds and then flashes.
  - The 3D Eyewear is turned on and the registration starts.
  - Place the 3D Eyewear within 50 cm from the TV while registration is in progress.
3. Once the registration is successfully completed, the 3D Eyewear will reconnect to TV automatically when the 3D Eyewear is turned on near the TV in 3D mode.

### ■ Registration again

When connection with the registered TV fails, or when using with another TV, re-register the 3D Eyewear.

1. Turn the TV on.
2. Within 50 cm from the TV, press the Power button until the lamp lights, then release it to start registration.
3. Once the registration is successfully completed, the 3D Eyewear will reconnect to TV automatically when the 3D Eyewear is turned on near the TV in 3D mode.

= Note =

- If the registration fails, the 3D Eyewear will be turned off. In this case, turn the TV off and perform from step 1.

## 3D Eyewear - Replacing battery


When the battery is running low, the indicator lamp flashes 5 times on turning the 3D Eyewear on. In this case, early battery replacement is recommended.

- Dispose of the old battery as non-burnable rubbish, or in line with the waste disposal regulations in your local area.

1. Remove the battery cover using pen tip or screwdriver (minus -), etc.



2. Replace the battery (coin-shaped lithium battery CR2025).

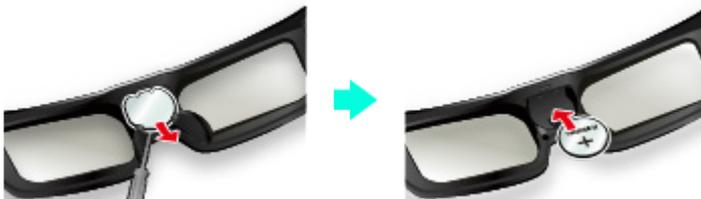

- If you have difficulty, remove it with the tip of the driver.
- Make sure the polarity is correct (+ or -).

3. Attach the battery cover.



## 3D Eyewear - Maintenance

---

### ■ Storing and cleaning the 3D Eyewear

- Store the 3D Eyewear in a cool, dry place.
- Clean using a soft, dry cloth.
  - Wiping the 3D Eyewear with a dusty or dirty cloth may scratch the eyewear. Shake off dust from the cloth before use.
  - The lens of the 3D Eyewear is easily broken. Be careful when cleaning the lens.
- Do not apply benzene, thinner or wax on the 3D Eyewear. Doing so may cause peeling of the paint.
- Do not dunk the 3D Eyewear in liquid such as water.

## Viewing 3D

---

You can enjoy viewing 3D images of content or programmes supporting 3D effects by wearing the 3D Eyewear.

- This TV supports Frame Sequential, Side by Side and Top and Bottom 3D formats.
  - Frame Sequential is the 3D format that the images for right and left eyes are recorded with high definition quality and alternately played back.
- 3D content in 4K format is not supported.

### 1. Turn the 3D Eyewear on and put it on.

- Use Panasonic 3D Eyewear supporting Bluetooth wireless technology for active shutter 3D.

 → [Support > Optional accessories > 3D Eyewear](#)

- The 3D Eyewear must be worn to view 3D images. Perform the first registration when the 3D Eyewear is used for the first time.

 → [Watching > 3D > 3D Eyewear - Registration](#)

- Connection status and battery status are displayed on the bottom right of the screen.

### 2. View the 3D images.

- Safety precautions will be displayed when you first watch the 3D image. Select **Yes** or **No** to continue to view 3D images.

If you select **Yes**, this message will be displayed again in the same condition after Mains Power On / Off switch is next turned on. Select **No** if you do not want to display this message again.

- Turn off the 3D Eyewear after using it.

## ■ Playing back 3D-compatible Blu-ray disc (Frame Sequential)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable. (If you use the non 3D-compatible player, the images will be displayed in 2D mode.)
- If the input mode is not switched automatically, select the input mode connected to the player.

 → [Watching > External equipment > Watching external input](#)

## ■ 3D-supported broadcast

- Please consult the suppliers of content or programmes for availability of this service.

## ■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player and Network services

 → Media Player

 → Network

## ■ 2D images converted to 3D

- Set to 2D→3D mode in 3D Mode Selection.

 → Watching > 3D > 3D Mode Selection

- Content in 4K format cannot be converted to 3D mode.

## 3D Mode Selection

---

You can change the viewing mode for 3D image.

1. Display the menu with **MENU**.
2. Select **Picture > 3D Settings > 3D Mode** and press **OK** to access.
3. Select the mode and press **OK** to set.
  - Items for **3D Mode Selection** vary depending on the condition.

### Original:

Displays the source image as it is.

- Use to identify the format type of the source image.

 → **Watching > 3D > Source image format**

### Side by Side - 3D / Top and Bottom - 3D:

Displays the mode you select.

- For digital signals

### 2D→3D:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places such as shops, hotels, etc. may infringe on the rights of the copyright holder protected under copyright law.

## 3D Settings

---

1. Display the menu with **MENU**.
  2. Select **Picture > 3D Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**3D Mode / 2D→3D Depth / 3D Adjustment / L/R Picture Swap / Safety Precautions**
  4. Set the item and press **OK** to store.
    - To exit the menu screen  
**EXIT**
- 

### 3D Mode

Selects the 3D format manually.

 → **Watching > 3D > 3D Mode Selection**

---

### 2D→3D Depth

(**Max / Mid / Min**)

Selects a level of 3D-image depth for viewing converted 2D images.

---

### 3D Adjustment

(**On / Off**)

Adjusts the 3D effect while viewing 3D image (except in **2D→3D** mode).

Set to **On** to enable **Effect** setting.

- When setting to **On**, a safety precaution message will appear. Read it carefully and press **RETURN** to go to **Effect** setting.
- When adjusting, take into account that the vision of 3D images varies among different individuals.

#### **Effect:**

Adjusts the 3D depth according to the content or to your preference.  
(This setting is not memorised when changing the input mode or channel.)

---

## L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in 2D→3D mode).

Select R/L (Reversed) if you feel that the sense of depth is unusual.

- This setting is not memorised when changing the input mode or channel.
- 

## Safety Precautions

Displays the precautions for viewing 3D images.

---

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.

## Source image format

If the picture appears to be abnormal, refer to the table of images that can be seen for each **3D Mode Selection** and each source image format, and select the correct 3D mode.

- 3D images are displayed correctly with the appropriate 3D formats shown in the yellow boxes below.

1	5			
	6	7	8	9
2				
3				
4				

- 1 Source image format
- 2 Side by Side
- 3 Top and Bottom
- 4 Normal format (2D)
- 5 **3D Mode Selection**
- 6 Original
- 7 Side by Side - 3D
- 8 Top and Bottom - 3D
- 9 2D→3D

- Depending on the player or broadcast, the image may be different from the above illustrations.

# Tuning and editing channels

## Setting menu

---

You can retune channels, create your favourite channel lists, skip unwanted channels, etc.

1. Select Digital TV or Analogue TV with **TV**.
2. Display the menu with **MENU**.
3. Select **Setup > Tuning Menu** and press **OK** to access.

[Digital TV Tuning Menu](#) / [Analogue TV Tuning Menu](#)

- The menu name varies depending on the TV mode.

4. Select one of the functions and press **OK** to access.

[Favourites Edit](#) / [Channel List](#) / [Auto Tuning](#) / [Manual Tuning](#) / [Update Channel List](#) / [New Channel Message](#) / [Signal Condition](#) / [Add TV Signal](#)

# Favourites Edit

---

## ■ List favourite digital TV channels

Create your favourite channel lists from various broadcasters (up to 4: [Favourites 1 to 4](#)).

The favourites lists are available for switching in the information banner and the TV Guide screen.

 → Watching > Basic > Information banner


 → Watching > TV Guide > Using TV Guide

1. Select [Favourites Edit](#) and press **OK** to access.
2. Select a channel to list from all digital TV channels.
  -  appears when the channel is encrypted.
  - To display other favourites  
 (green)
3. Press **OK** to add it to favourites list.
  - To add all channels to the list  
 (yellow)
4. Press **RETURN** and **OK** to store.


## ■ Edit favourites list

You can edit the favourites list while the cursor is on the channel in the favourites list.

- To move the channel
  - 1) Select the channel.
  - 2) Press  (green).
  - 3) Select the new position with **Cursor buttons** or **Numeric buttons**.

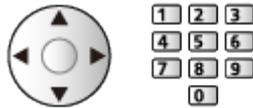

- 4) Press  (green) to store.
- To delete the channel
    - 1) Select the channel.
    - 2) Press **OK** to delete.
      - Press  (yellow) to delete all channels.
  - To name the favourites
    - 1) Press  (red).
    - 2) Enter characters (maximum 10 characters) with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.

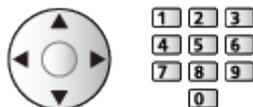

- 3) Press **RETURN** to store.

= Note =

- Channel numbers are defined by the broadcaster and cannot be changed.
- Hidden channels can be selected but not viewed.

# Channel List

---

## ■ Skip unwanted channels

You can hide (skip) unwanted channels. The hidden channels cannot be displayed except in this function.

1. Select **Channel List** and press **OK** to access.
2. Select a channel.
3. Press **OK** to set **Reveal / Hide** (skip).

: **Reveal**

: **Hide** (skip)

- To reveal all channels (if available)


 (yellow)

## ■ Edit channels

- To swap / move the channel position (if available)

1) Press  (green) to edit.

2) Set the new position with **Cursor buttons** or **Numeric buttons**, and press  (green) to store.

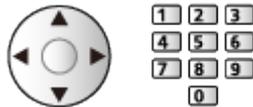

- To retune each channel (**Manual Tuning**)


 (red)

 → **Watching > Tuning and editing channels > Manual Tuning**

- To rename the channel name (Analogue TV)

1) Press  (blue) to edit.

2) Enter characters (maximum 5 characters) with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.

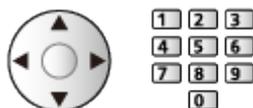

3) Press **RETURN** to store.

= Note =

- If a VCR is connected only with the RF cable in Analogue TV, edit **VCR**.

## Auto Tuning

---

Automatically retunes the channels received in the area.

- All the previous tuning settings are erased.
- Search begins in the order from the lower channels to the higher channels.
- Child Lock PIN number is required to retune locked channels.

 → Functions > Child Lock > PIN number


- If tuning has not been done completely, set [Manual Tuning](#).

 → Watching > Tuning and editing channels > Manual Tuning

1. Select [Auto Tuning](#) and press **OK** to access.
2. A confirmation screen is displayed and press **OK** to start [Auto Tuning](#).  
(Settings are made automatically.)
  - When the operation is completed, the channel at the lowest position will be displayed.
  - This setting is applicable only for the selected TV mode.

### ■ Auto Tuning using the buttons on the TV

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
  2. Set [Auto Tuning](#) with following control panel buttons.
- Move the cursor / select from a range of options / select the menu item

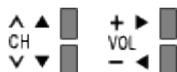

- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

# Manual Tuning

---

## ■ Digital TV

Normally use [Auto Tuning](#) or [Update Channel List](#) to retune Digital TV channels.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

- All Digital TV channels are added to [Channel List](#).

1. Select physical channel and offset.
2. Press **OK** to search.

## ■ Analogue TV

Set Analogue TV channel manually after [Auto Tuning](#).

1. Select the channel position with **Numeric buttons**.



2. Select the channel with **Channel Up / Down**.



3. Set [Manual Tuning](#).
4. Select [Store](#) and press **OK** to set.
  - If a VCR is connected only with the RF cable, select channel position **0**.

## Update Channel List

---

By updating the Digital TV channel list, you can add new channels, delete removed channels or change channel names and positions automatically.

- The channel list is updated while keeping your settings in [Favourites Edit](#), [Channel List](#), [Child Lock](#), etc.
- Depending on the signal condition, the update may not work properly.

## New Channel Message

---

Selects whether to give a notification message when a new digital TV channel is found or not.

- When a notification message appears, you can perform [Update Channel List](#) pressing **OK**.
- Sometimes, mainly during summer months at night, the TV may pick up distant TV stations outside your broadcast due to favourable short term ionosphere conditions. In such circumstances when you press **OK**, the TV does not add any new channels. This is normal.

## Signal Condition

---

Selects a channel and checks the signal condition with indicators.

- A good Signal Strength is not an indication of suitable signal reception.
- To change the channel



- Not valid in Analogue TV

## Add TV Signal

---

Adds the TV mode.

- This function is available if you skip any modes to tune in [Auto Tuning](#) for first using the TV.

# Recording

## USB HDD setup

### Preparations


---

You can record the digital TV programmes to the connected USB HDD and enjoy playing back in various ways.

- Prepare the USB HDD for the exclusive use of recording with this TV.
- Connect the USB HDD to the USB 3 port with the USB cable.
- Be sure to connect the USB HDD to the mains socket.
- To remove the USB HDD safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

- Check the terminal type and cable plugs are correct for connection.

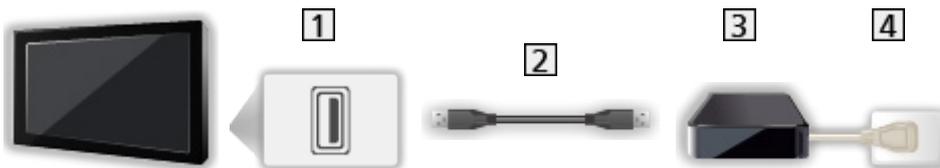

- 1** USB port
- 2** USB cable
- 3** USB HDD
- 4** Mains socket

= Caution =

- All data in the USB HDD will be erased in the following cases:
  - When formatting the USB HDD with this TV
    -  → Recording > USB HDD setup > Setting for USB HDD
  - When formatting the USB HDD to use on PC, etc.
- When the TV is repaired due to a malfunction, you may have to format the USB HDD again with this TV to use it. (All data will be erased after formatting.)
- To use the USB HDD with your PC after recording with this TV, format it again on your PC. (Special operations or tools may be necessary to format on your PC. For details, read the manual of the USB HDD.)
- The data recorded on the USB HDD with this TV can only be played back on this TV. You cannot play back its content with another TV (including the TV of the same model number) or any equipment.
- Do not turn the TV off, pull out the mains plug or remove the USB HDD during operation (formatting, recording, etc.). Doing so may cause malfunction of the device or damage the recorded data. (An electric outage may also be a cause of malfunction.)

= Note =

- Analogue TV programme cannot be recorded on the USB HDD.
- The data broadcasting (MHEG, etc.), radio broadcasting are not recorded, and also the recording function does not work during the period without any signal.
- Not all the programmes can be recorded depending on the broadcaster and service provider.
- You cannot copy the recorded TV programmes of the USB HDD.
- The recorded content may not be played back properly depending on the progress of recording.
- For details of the USB HDD
  -  → Recording > Technical information > USB HDD

## Setting for USB HDD


Format and set up the USB HDD with this TV in order to use it for recording.

All the USB devices recognised as a mass storage device are listed.

- Please note that USB HDD will be formatted and all data in it will be erased after this setup.
- Before setting, connect the USB HDD and be sure to turn on the USB HDD.

 → Recording > USB HDD setup > Preparations

1. Display the menu with **MENU**.
2. Select **Setup** > **USB Device Setup** and press **OK** to access.
3. Select the USB HDD for recording and press **OK** to start setup.
  - Some USB HDD may not be displayed.
  - To display information of the highlighted device  
**INFO**
4. When the caution and confirmation screen for using USB HDD is displayed, select **Yes** and press **OK** to proceed.
5. When a confirmation screen of USB HDD name is displayed, select **Yes** and press **OK** to set.
  - The name for the USB HDD is created automatically. If you want to edit the name, select **Yes**.
  - 1) Enter characters with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.

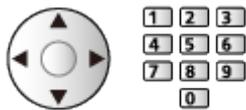

- 2) Press **RETURN** to store.
6. When a confirmation screen to enable USB HDD for recording is displayed, select **Yes** and press **OK** to set.
  - If another formatted USB HDD for recording already exists, this confirmation screen will be displayed to switch to enable this USB HDD for recording.

- Mode of the USB HDD
  -  : The USB HDD is available for recording / playing back.  
Only one USB HDD on the list is available for recording.
  -  : The USB HDD is available for playing back.
- To change the mode  

- To edit USB HDD name  
 (green)
- To format  
 (red)
- To remove the USB HDD safely from the TV  
 (yellow)

= Note =

- You can only select one USB HDD for recording at a time.
- You cannot change the settings for the USB HDD while recording is in progress.

# Recording current programme

## One Touch Recording

---

Records the current programme to the USB HDD immediately.

- Confirm the remote control code is “73”.

 → Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **One Touch Recording** and press **OK** to access.
3. Select the maximum recording time **30 / 60 / 90 / 120 / 180 (minutes)** and press **OK** to set.

### ■ To start One Touch Recording

Press  to start.

### ■ To stop recording in progress

Press  to stop.

### ■ To play back or delete the recorded content

Recorded TV programmes can be played back in Media Player.

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select USB HDD for recording and press **OK** to access.
  - Even if **One Touch Recording** is in progress, you can play back all the content. (Depending on the USB HDD, playback may not be possible or the recording may not work properly during playback.)

# Timer Programming

## Setting Timer Programming

---

This function allows you to select programmes that you want to record to the USB HDD.

- Not valid in Analogue TV
1. Select Digital TV with **TV**.
  2. Display the menu with **MENU**.
  3. Select **Timer** > **Timer Programming** and press **OK** to access.
  4. Press **OK** to start making the settings.

### USB HDD Rec.:


Records the programme to the USB HDD.

5. Select and set the item (channel, date, start time, end time).

- **4** and **6** can also be entered with **Numeric buttons**.



(Example)

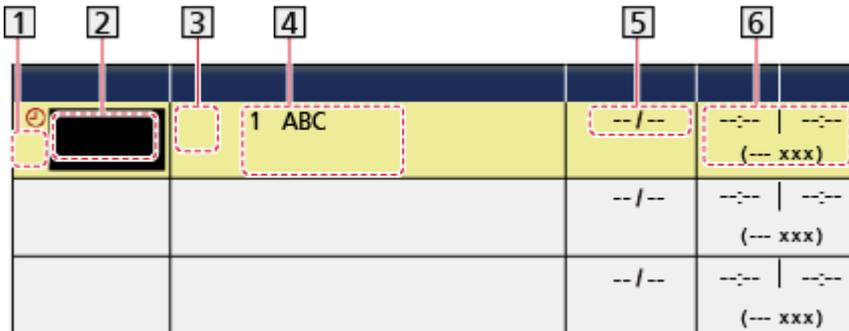

**1** !: Overlapped timer events

**2** Function ([USB HDD Rec.](#))

**3** D: Digital TV

**4** Channel position, channel name, etc.

**5** Date

- [Daily Sun-Sat](#): Sunday to Saturday
- [Daily Mon-Sat](#): Monday to Saturday
- [Daily Mon-Fri](#): Monday to Friday
- [Weekly Sun / Mon / Tue / Wed / Thu / Fri / Sat](#): Same time on the same day every week

**6** Start time / End time / Duration (automatic display)

6. Store with **OK**.

## Editing Timer Programming


---

1. Display the menu with **MENU**.
2. Select **Timer** > **Timer Programming** and press **OK** to access.
3. Select the event.
  - To change a timer event  
**OK**
    - Correct as necessary.  
 → **Recording** > **Timer Programming** > **Setting Timer Programming**
  - To delete a timer event
    - 1) Press  (red).
    - 2) Press **OK** to delete.

### ■ To adjust the clock

If you cannot get the time information, set **Clock Settings** manually.

1. Display the menu with **MENU**.
2. Select **Timer** > **Clock Settings** > **Mode** and press **OK** to access.
3. Select **Manual** and press **OK** to set.
4. Set **Date** / **Time** with **Cursor buttons** or **Numeric buttons**.

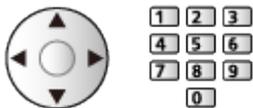

- **Clock Settings** are reset when the TV is turned off with Mains Power On / Off switch.

 → **Watching** > **Basic** > **Adjusting time**

### ■ To stop recording

1. Press .
2. Select the programme and press **OK** to access (when 2 recordings are in progress).
3. Select **Yes** and press **OK** to stop.

## ■ To play back or delete the recorded content

Recorded TV programmes can be played back in Media Player.

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select USB HDD for recording and press **OK** to access.

 → **Media Player > Recorded TV mode**

- The recorded content may not be played back properly depending on the progress of recording.

## Remote recording

---

You can set timer programming with the network equipment (smartphone, etc.) from outside the home network.

- Ensure the network connections and network settings are completed.
  -  → Network > Network connections
  -  → Network > Network settings
- Set **TV Anytime** to **On**.
  -  → Functions > TV Anytime > TV Anytime Settings
- Additional information about the services may be found on the following website.  
<http://panasonic.net/viera/support> (English only)

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition, this function may not be available.

## Note

---

- [TV Guide](#) may also be used to set timer event.  
 → [Watching > TV Guide > Timer Programming](#)
- [Timer Programming](#) can store up to 15 events.
- [Timer Programming](#) only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- For recording using [Timer Programming](#), the TV must be either on or in Standby.
- Depending on the progress of recording, analogue channel may not be selected.
- Recording an encrypted (copy-protected) programme may not be possible.
- When the start time comes, the channel may be switched automatically and the video and audio signals may be output. 2 minutes before the start time, a reminder message may appear if you are watching TV.
  - To remove the message and start the programming, press **OK**.
  - To cancel the programming, press **EXIT**.
- LED turns to orange in Standby mode when [Timer Programming](#) is set.
- “!” identifies that three or more timer events are overlapped. As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of [Timer Programming](#) may automatically change the channel to the programmed channel a few seconds before the start time.
- For details of the USB HDD  
 → [Recording > Technical information](#)

# Technical information

## USB HDD

---

### ■ USB HDD

(for recording the digital TV programmes with this TV)

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the mains socket to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → Recording > USB HDD setup > Setting for USB HDD

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

= Note =

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.

# Media Player

## Using Media Player

### Information

---

Media Player allows you to enjoy photo, video or music recorded on the USB Flash Memory / network device, and content recorded with this TV to the formatted USB HDD.

(Example)

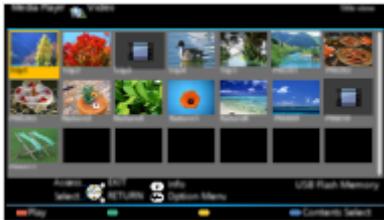


Photo mode:

Still pictures recorded with digital cameras are displayed.

Video mode:

Moving pictures recorded with digital video cameras and digital video data are played back.

Recorded TV mode:

(For exclusive USB HDD) TV programmes recorded on the USB HDD with this TV are played back.

Music mode:

Digital music data are played back.

- During the operation, audio signal is output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.


 → [Functions > VIERA Link "HDAVI Control™"](#)

- **Date** shows the date on which the recording was made by the recording equipment. For a file without a valid record date “\* \* \*” is shown.
- Pictures may not appear correctly on this TV depending on the recording equipment used.
- Displaying may take some time when there are many files and folders.
- Partially degraded files may be displayed with reduced resolution.
- Picture setting may not work depending on the condition.

- Folder and file names may be different from those on the digital camera or digital video camera used.

## ■ To insert or remove the USB Flash Memory

Ensure alignment is straight and complete when inserting or removing.

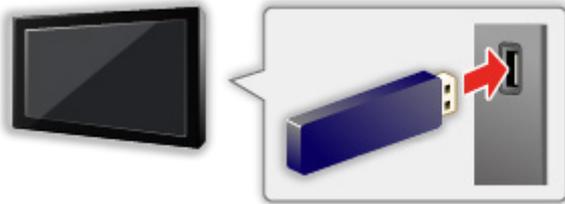

- To remove the USB Flash Memory safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).
  - 1) Display the menu with **MENU**.
  - 2) Select [Setup](#) > [USB Device Setup](#) and press **OK** to access.
  - 3) Select the device and press **YELLOW** (yellow) to set.
- Connect the USB Flash Memory to the USB 1, 2 or 3 port.

= Note =

- To connect the USB HDD
  -  → [Recording > USB HDD setup](#)
- Check the terminal type and devices are correct for connection.
- For details of the devices
  -  → [Media Player > Technical information](#)
- For details of supported file formats
  -  → [Media Player > Technical information](#)

## Selecting device / mode

---

1. Insert the USB Flash Memory to the TV.

 → Media Player > Using Media Player > Information

- To play back content in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup

- To play back content in the network device, ensure the connection and settings are completed.

 → Media Player > Using Media Player > Network device

2. Display Home Screen with **HOME**.

3. Select **Devices** and press **OK** to access.

4. Select the device (USB Flash Memory / USB HDD / network device) and press **OK** to access.

- When a confirmation screen about the network device is displayed, enter **User / Password** to access.

5. Select **Photo / Video / Music / Recorded TV** and press **OK** to access.

### Photo

 → Media Player > Photo mode

### Video

 → Media Player > Video mode

### Music

 → Media Player > Music mode

### Recorded TV

 → Media Player > Recorded TV mode

6. The thumbnail view is displayed.

(Example)



- To display / hide information of the highlighted content

**INFO**

- **Recorded TV** is available for content recorded on the USB HDD with this TV.
- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Confirm the remote control code is "73".



 → [Watching > External equipment > Operating with TV's remote control](#)

## ■ To change the mode

You can switch to another mode of Media Player from the thumbnail view.

1. Display the content selection screen with  (blue) while the thumbnail is displayed.
2. Select the content and press **OK** to access.
  - The mode can be switched in the current device.

## Network device

---

You can enjoy photo, video or music stored in the network devices.


- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

### ■ How to set User / Password

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **Network Device List** and press **OK** to access.
3. Select the network device and press **OK** to access.
4. Enter **User** / **Password** with **Cursor buttons** or **Numeric buttons** and press **OK** to set.

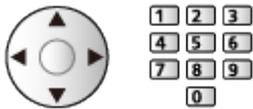

- Press **RETURN** to store.
  - To register the new network device, set **Server Name** / **Shared Folder**. For details, read the manual of the equipment.
5. Select **Register** and press **OK** to set.
    - To delete the registered device, select **Delete** and press **OK** to set.

= Note =

- Regarding performance, not all servers are guaranteed. PCs with Windows 7 / Windows 8 / Windows 8.1 have been tested for compatibility with this TV (as of January, 2015). Additional information about the servers may be found on the following website.

<http://panasonic.net/viera/support> (English only)

- Up to 48 devices can be registered.

# Sharing file

---

You can share the files between PC and devices connected to this TV.

- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **File Sharing Server** and press **OK** to access.
3. Select **On** and press **OK** to set.
4. Operate your PC to share the files.
  - For operations, refer to the support information on the following website.  
<http://panasonic.net/viera/support> (English only)
  - This function is not available when the TV is turned off with Mains Power On / Off switch. You can share the files in Standby mode when **DLNA Server** is set to **On**.

= Note =

- Regarding performance, not all PCs are guaranteed. PCs with Windows 7 / Windows 8 / Windows 8.1 have been tested for compatibility with this TV (as of January, 2015). Additional information about the PCs may be found on the following website.  
<http://panasonic.net/viera/support> (English only)
- Do not turn the TV off, pull out the mains plug or remove the device during operation (reading, copying, etc.). Doing so may cause malfunction of the device or damage the recorded data.
- All data in the USB HDD will be erased when you format the USB HDD with this TV for recording.
- To connect the USB HDD  
 → Recording > USB HDD setup
- Picture noise may occur on the screen when playback starts during operation (reading, copying, etc.).
- For details of the devices  
 → Media Player > Technical information

# Photo mode

## Selecting file

---

Select the file in the thumbnail view and press **OK** to start playback.

 : Error display

- To change the size of photos in the thumbnail view
  - 1) Display the option menu with **OPTION**.
  - 2) Select **Change Size** and press **OK** to change.
- For details of supported file formats

 → [Media Player > Technical information > Photo format](#)

### ■ Thumbnail view

- To display / hide information of the highlighted content



- To display [Slideshow Settings](#)

 (red)

 → [Media Player > Photo mode > Using Slideshow](#)

- To sort

 (green)

- To change the content

 (blue)

## Viewing photo

---

### ■ Playback

- To operate Single view
  - ◀ : To the previous photo
  - ▶ : To the next photo
  - ▽ : Stop (return to thumbnail)
  - OK : Slideshow
- To display / hide the operation guide  
INFO
- To rotate 90°  
■ (blue)
- To return to thumbnail  
RETURN

## Sorting photos

---

### ■ To sort by folder, recorded date or recorded month

1. Display the view selection in the thumbnail view with  (green).
2. Select [Folder view](#) / [Sort by Date](#) / [Sort by Month](#) and press **OK** to set.

#### [Folder view](#):

Displays the thumbnail grouped by folder.

- Files which are in the root folder are collected to the folder named "P".

#### [Sort by Date](#) / [Sort by Month](#):

Displays the thumbnail grouped by the same date or month.

- The group of the photos without recorded dates is shown as [Unknown](#).
- To return to the thumbnail of all photos
  - 1) Display the view selection in the thumbnail view with  (green).
  - 2) Select [All photos](#) and press **OK** to set.

## Using Slideshow

---

Slideshow ends when all photos within the current thumbnail are viewed.

1. Select the file from the thumbnail of photos for the first view.
2. Start Slideshow with  (red) and **OK**.
  - To display / hide the operation guide  
**INFO**
  - To pause (return to Single view)  
**OK**
  - To return to thumbnail  
**RETURN**
  - You can change the back ground music by setting [Back Ground Music](#) in [Slideshow Settings](#) (see below).

### ■ Slideshow Settings

Set up the settings for Photo mode.

1. Display the option menu with **OPTION**.
  2. Select [Slideshow Settings](#) with **OK**.
  3. Select one of the following items and press **OK** to access.  
[Screen Mode](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
  4. Set the item and press **OK** to store.
- 

#### [Screen Mode](#)

([Normal](#) / [Zoom](#))

Selects enlarged or normal viewing.

- Depending on the photo size, the photo may not be fully enlarged to fill the screen (e.g. portrait style picture).
- 

#### [Interval](#)

([Long](#) / [Normal](#) / [Short](#))

Selects slideshow interval.

---

#### [Repeat](#)

([On](#) / [Off](#))

Slideshow repeat

---

## Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5 / User / Auto)

Selects the background music during Photo mode.

### Type1 - 5:

Music files installed on this TV at the factory settings are played back.

### Auto:

Music files stored in the current device are played back.

- If there is no available music data, no sound is played back.

### User:

Music files in the device registered by yourself are played back.

- If no music files have been registered or the device which had registered music files is removed, no sound is played back.

### ● To register music

1) Select the music file and press **OK** to access.

- Depending on the condition of the device, select folders until you reach the desired music file.

2) Select **File** / **Folder** and press **OK** to set.

### File:

The selected music file is registered.

### Folder:

All the music files in the folder which contains the selected music file are registered.

---

= Note =

- Picture quality may be degraded depending on the slideshow setting.
- Picture setting may not work depending on the slideshow setting.

# Video mode

## Selecting file

---

1. Select the title in the thumbnail view.

 : Error display

 : The file does not support thumbnail view.

- The preview will start when the title / scene is highlighted in the thumbnail view if it supports a preview. To turn off the preview, set [Video Preview](#) to [Off](#).

 → [Media Player > Video mode > Video Setup](#)

2. Start playback with  (red).

- If you have stopped the last playback halfway, a confirmation screen may be displayed to select whether to start from where you stopped last time or from the beginning.
- For details of supported file formats

 → [Media Player > Technical information > Video format](#)

### ■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the content

 (blue)

## Watching video

---

### ■ Playback from the selected scene in the title

Playback of the selected scene starts and continues until the end of the title.

1. Select the title and press **OK** to access.
2. Select the scene.
3. Start playback with  (red).
  - The structure of titles and scenes may vary depending on the digital video camera used.
  - Playback may not continue depending on the condition.
  - To repeat playback

 → [Media Player > Video mode > Video Setup](#)

### ■ Playback

- To operate playback
  - ◀ : Rewind
  - ▶ : Fast forward
  - ▽ : Stop
  - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
  - 1) Display the time seek bar with **OK**.
  - 2) While the time seek bar is displayed
    - Press ◀ / ▶ :
    - Search approx. 10 seconds
    - Press and hold ◀ / ▶ :
    - Search rapidly
  - 3) Jump to the specified time point with **OK**.
- To display / hide the operation guide and information banner  
**INFO**
- To the previous title / scene  
 (red)
- To the next title / scene  
 (green)

- To change aspect
  - 1) Display **Aspect Selection** with **ASPECT**.
  - 2) Select the mode and press **OK** to set.
    - Aspect1:**
      - Displays the content original size.
    - Aspect2:**
      - Displays the content enlarged without distortion.
  - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
  - Aspect cannot be changed depending on the content.
- To return to thumbnail  
**RETURN**

## Video Setup

---

Set up the settings for Video mode.

1. Display the option menu with **OPTION**.
  2. Select [Video Setup](#) with **OK**.
  3. Select one of the following items and press **OK** to access.  
[Video Preview](#) / [Audio Selection](#) / [Dual Mono Audio](#) / [Subtitle Settings](#) / [Repeat](#)
    - Menu items and selectable options vary depending on the content.
  4. Set the item and press **OK** to store.
- 

### [Video Preview](#)

([On](#) / [Off](#))

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
  - This function is available in the thumbnail view.
- 

### [Audio Selection](#), [Dual Mono Audio](#)

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
  - This function is available during playback.
-

## Subtitle Settings

Sets the subtitle setting.

- This function is available during playback.

### Subtitle:

Display / hide subtitles (if available).

### Subtitle Text:

Selects the font type to display subtitles correctly (if available).

### Subtitle Text Size:

Selects the font size of subtitles.

### Subtitle Text Colour:

Selects the colour of subtitles.

### Subtitle Text Position:

Adjusts the position of subtitles on the screen.

### Subtitle Text Delay:

Adjusts the delay time for the subtitles.

---

## Repeat

(On / Off)

Playback repeat within the title or selected file (depending on the content)

## Audio output settings

---

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
  2. Select **Sound** > **SPDIF Selection** and press **OK** to access.
  3. Select **Auto** / **PCM** and press **OK** to set.
- 

### SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

#### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

#### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

# Recorded TV mode

## Selecting content

---

- For exclusive USB HDD
- To play back content in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup

1. Content list of the selected device is displayed in Recorded TV mode.
  - Remaining capacity of the selected device is displayed on the top right. (This value may not be accurate depending on the condition.)
  - Content list is displayed as **All** or **Not Viewed**.

**All:**

All the recorded TV programmes are listed.

**Not Viewed:**

Content not played back yet are listed.

- Icons are displayed.
  -  : Content not played back yet (Once you play back the content, this icon will disappear.)
  -  : Protected content cannot be deleted.
  -  : Currently recording (You can play back this recording content.)
  -  : Group of content

2. Select the content and press **OK** to start playback.
  - If you have stopped the last playback halfway, a confirmation screen may be displayed to select whether to start from where you stopped last time or from the beginning.
  - If the content has multiple programmes with different parental ratings, the highest restriction is applied to the content. Once you unlock the restriction, all the programmes in the content can be played back.
- For details of supported file formats

 → Media Player > Technical information > Video format

# Watching recorded TV

---

## ■ Playback

- To operate playback

 : Manual skip

- Press to skip forward approx. 30 seconds.
- Press and hold to skip backward approx. 15 seconds.

 : Rewind

 : Fast forward

 : Stop

**OK** : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with **OK**.

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide and information banner

**INFO**

- To repeat between the starting point “A” and finishing point “B”

 (blue)

(Set “A” and “B” in order.)

- The points are reset by pressing again or by other operations.

- To the previous / next chapter

 (red) /  (green)

- A recorded content is automatically divided into chapters (approx. 5 minutes for each).

- To change aspect

**ASPECT**

 → Watching > For best picture > Aspect

- To display the subtitle (if available)

**STTL/AD**

- To confirm or change the current status (if available)

 → [Watching](#) > [Basic](#) > [AV Options](#)

- To return to list

**RETURN**

= Note =

- The recorded content may not be played back properly depending on the progress of recording.

## Grouping content

---

1. Select the content to edit and press  (blue) to tick in the content list.
2. Display the option menu with **OPTION**.
3. Select [Create Group](#) / [Release Group](#) / [Exclude from Group](#) / [Change Protect Status](#) and press **OK** to set.

### [Create Group](#):

Create a group of content. Select and tick all the desired content, and then select [Create Group](#).

### [Release Group](#):

Select the created group to release, and then select [Release Group](#). (To release several groups at once, tick all the desired groups.)

### [Exclude from Group](#):

Select the group and press **OK** to display the grouped content. To exclude specific content from the group, tick it and then select [Exclude from Group](#). (To exclude some of the content at once, tick all the desired content.)

### [Change Protect Status](#):

Select the content to protect from deletion, and then select [Change Protect Status](#). Perform the same way to cancel the protection. (To change the status of some of the content at once, tick all the desired content.)

## Deleting content

---

1. Select the content to edit and press  (blue) to tick in the content list.
2. Delete the content with  (red).
3. When a confirmation screen is displayed, select **Yes** and press  to set.

## Chapter List

---

You can start playback from the chapter list you select.

1. Display the chapter list with  (yellow).
2. Select the chapter and press  to start playback.

= Note =

- The chapter list is not displayed while the selected content is being recorded.
- Depending on the recorded programmes, some playback operations may not work properly.

## Audio output settings

---

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
  2. Select **Sound** > **SPDIF Selection** and press **OK** to access.
  3. Select **Auto** / **PCM** and press **OK** to set.
- 

### SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

#### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

#### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

# Music mode

## Selecting file

---

1. Select the folder in the thumbnail view.
2. Start playback with  (red).

- For details of supported file formats

 → [Media Player > Technical information > Music format](#)

### ■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the content

 (blue)

## Playing music

---

### ■ Playback of the selected file in the folder

1. Select the folder and press **OK** to access.
2. Select the file.
3. Start playback with  (red).

### ■ Playback

- To operate playback

 : Rewind

 : Fast forward

 : Stop

**OK** : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with **OK**.

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide

**INFO**

- To the previous track

 (red)

- To the next track

 (green)

- To return to thumbnail

**RETURN**

## Music Setup

---

Set up the setting for Music mode.

- This function is available in the thumbnail view.
1. Display the option menu with **OPTION**.
  2. Select **Music Setup** > **Repeat** with **OK**.
  3. Select **Off** / **Folder** / **One** and press **OK** to set.

**Folder:**

Playback repeat within the selected folder

**One:**

Playback repeat of the selected one file

# USB Sharing

## USB Sharing

---

You can copy the content from one device to another using the USB ports.

- To enable this function, connect the source drive and destination drive to the TV.

 → [Media Player > Using Media Player > Information](#)

### Source drive:

USB device which contains the data to be copied.

### Destination drive:


USB device which you copy to.

1. Display [Apps](#) with **APPS**.
2. Select [USB Sharing](#) and press **OK** to access.
3. Select the drive from [Source drive](#) and press **OK** to access.
4. Select the folder or file to copy and press  (red) to set.
  - To select all folders or files at once  
 (green)
5. Press  to go to [Destination drive](#).
6. Select the drive and press **OK** to access.
  - You cannot select the source drive as the destination drive.
7. Select [Copy Here](#) and press **OK** to access.
8. When a confirmation screen is displayed, select [Yes](#) and press **OK** to start copying.
  - Copy progress is shown on the top right of the TV screen. When copying is finished, [Complete!!](#) is displayed.
  - To cancel the copying, select [USB Sharing](#) from [Apps](#) again.
  - To watch TV while data copying is in progress, press **TV**.

## ■ Create a folder or delete a folder

You can create a new folder or delete an old folder while the cursor is in [Destination drive](#).

- To create a new folder
  - 1) Display the option menu with **OPTION**.
  - 2) Select [Create Folder](#) and press **OK** to access.
  - 3) Enter characters (maximum 16 characters) with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.

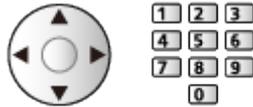

- 4) Press **RETURN** to store.
- To delete an old folder
    - 1) Select the folder.
    - 2) Display the option menu with **OPTION**.
    - 3) Select [Delete](#) and press **OK** to access.
    - 4) When a confirmation screen is displayed, select [Yes](#) and press **OK** to delete.

= Note =

- Not valid for the content in the network device
- Some files may not be copied properly.
- Please note there may be a risk of file corruption due to power failure or sudden shut down during [USB Sharing](#) process.
- In consideration of possible loss of the data included in your USB devices for any reasons, Panasonic recommends to store or back up the data included in the USB devices to the other places (storage medium) before inserting the same in the USB port, and please do not turn the TV off during data communication / transfer.

# Technical information

## Device handling caution

---

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals to prevent data deterioration, data damage or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

## USB devices

---

- It is recommended to connect the device to the TV's USB port directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices using a USB card reader.
- Additional information about the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

### ■ USB Flash Memory

USB Flash Memory format:

FAT16, FAT32 or exFAT

- USB HDDs formatted on a PC are not guaranteed to work in Media Player.

### ■ USB HDD

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the mains socket to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → [Recording > USB HDD setup > Setting for USB HDD](#)

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

# Photo format

---

## ■ Supported Photo formats

---

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
  - Progressive JPEG is not supported.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Video format

---

## ■ Supported Video formats

---

- AVI (.avi)

Video codec:

H.264, MPEG1, MPEG2, MPEG4, VC-1, WMV9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS, HE-AAC, LPCM, MP3, WMA, WMA Pro

---

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
- 

- MKV (.mkv)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS, HE-AAC, MP3, Vorbis

---

- ASF (.asf, .wmv)

Video codec:

MPEG4, VC-1, WMV9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264

Audio codec:

AAC, MP3

---

- 3GPP (.3gp, .3g2)

Video codec:

H.264, MPEG4

Audio codec:

AAC, HE-AAC

---

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

H.264, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3

---

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS, HE-AAC, MP3

---

- WebM (.webm)

Video codec:

VP9

Audio codec:

Vorbis

## ■ Supported Subtitles formats

---

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
    - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
    - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Some subtitles or chapter functions may not be available.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

# Music format

---

## ■ Supported Music formats

---

- MP3 (.mp3)
- 

- AAC / Apple Lossless (.m4a)
    - Copy-protected files cannot be played back.
- 

- FLAC (.flac)
- 

- WMA / WMA Pro (.wma)
    - Copy-protected files cannot be played back.
- 

- LPCM (.wav)
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Network


## Internet content

### Information

---

You can access some specific websites supported by Panasonic, and enjoy internet content such as videos, games, communication tools, etc. from [Apps](#).

(Example)

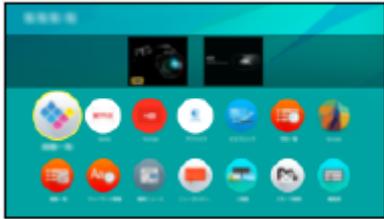

- A broadband network environment is required to be able to use this function. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

# Selecting internet content

---

1. Display **Apps** with **APPS**.


- For details of **Apps**

 → Home Screen > Apps

- Depending on the usage conditions, it may take a while to read all the data.

2. Select the desired item and press **OK** to access.

(Example)

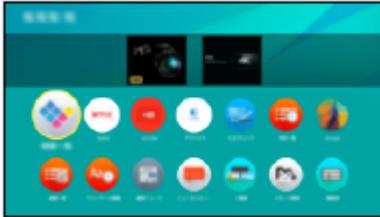

- To exit **Apps**

**EXIT**

- You may operate the internet content with the free cursor and Voice Control function of Touch Pad Controller (supplied).

 → Functions > Voice Control

- You can connect a keyboard for character input in the applications. You can also use the keyboard for TV operation.

 → Functions > Bluetooth devices

 → Functions > Keyboard

## Note

---

- If you cannot access the internet content, check the network connections and settings.

 → Network > Network connections

 → Network > Network settings

- Design and specifications are subject to change without notice.
- Not all the features of the websites are available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use [Apps](#). You can update the software later manually.

 → Network > Network settings > Software Update

- The services through [Apps](#) are operated by their respective service providers and such service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- Content may not be available depending on the country you select.
- Content may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

# DLNA

## In-House streaming

---

This TV is a DLNA Certified™ product.

DLNA® (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit [www.dlna.org](http://www.dlna.org).

- To enable this function, connect this TV to your home network.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

### ■ Playback of sharing content stored in the media server

Store photo, video or music content into the DLNA Certified media server (for example, PC with Windows 7 / Windows 8 installed, DIGA Recorder, etc.) connected to your home network. And then you can enjoy the content on this TV.

(Example)



- For details of watching and operating content on this TV

 → [Network > DLNA > Using DLNA](#)

- For details of supported file formats

 → [Network > Technical information](#)

- To use a PC as a media server

Prepare the PC with Windows 7 / Windows 8 or ensure the server software is installed on the PC. “Windows 7 / Windows 8” and “Twonky 7 (installed on the PC with Windows XP or Mac)” are the server software that has been tested for compatibility with this TV (as of January, 2015). Any other server software has not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7 / Windows 8

The setup for homegroup settings of Windows 7 / Windows 8 is required. For details, refer to the help functions of Windows 7 / Windows 8.

- Twonky

“Twonky” is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting “Twonky”, visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

= Note =

- For information about the server software, consult each software company.
- When server software for the media server is installed on the PC, the data on the PC may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances in office, hotel or even at home when not using a router.

- To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can control it as one of the media servers.

- Please read the manual of your DIGA Recorder to check if the recorder is compatible with DLNA.

## ■ Playback of sharing content on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy content stored in the media server by controlling with the DMC network equipment (smartphone, PC with Windows 7 / Windows 8 installed, etc.) connected to your home network.

- To use this function with your smartphone or Windows 7 / Windows 8, set [TV Remote App Settings](#) of this TV.

 → [Network > Network settings > TV Remote App Settings](#)

And you need to install the application for controlling VIERA on your smartphone. For information about the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- “Windows 7 / Windows 8” are the OS that have been tested for compatibility of this TV (as of January, 2015). For the operations, refer to the help functions of Windows 7 / Windows 8.

## ■ Sharing the content of this TV with another piece of network equipment

You can enjoy the content of this TV with another network equipment connected to your home network.

Available content:

- Photo, video or music content of this TV
- Current digital TV programme
- TV programmes recorded on USB HDDs with this TV

Available network equipment:

- DLNA Certified VIERA
- Smartphone, etc.
- To use this function with your smartphone, you need to install the application for controlling VIERA in your smartphone. For information about the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- To use this function with another DLNA Certified VIERA, set [Network Link Settings](#) of this TV.

 → [Network](#) > [Network settings](#) > [Network Link Settings](#)

- Sharing the current programme may not be available when selecting radio channels, encrypted (copy-protected) programmes or when the broadcast prohibits the output of video and audio.
- Display the TV full-screen for sharing the TV programme with another piece of network equipment.
- Only 1 piece of other equipment can share the content of this TV.

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- This function may not be available in the following condition of this TV:
  - While the recording is in progress
- Selecting the channel or TV mode on your smartphone may not be available while the recording is in progress.

## Using DLNA

To use DLNA® features, ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select the media server and press **OK** to access.
  - To display / hide information of the highlighted media server
    - 1) Display the option menu with **OPTION**.
    - 2) Select **Show Info.** and press **OK** to access.
4. Select the file and press **OK** to access.

(Example)



- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display / hide information of the highlighted file

**INFO**

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

# Network connections

## Internet connection

---

A broadband network environment is required to be able to use internet services.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality, respectively. If the transfer speed is not enough, content may not be played back properly.

### ■ Wireless connection



1 Built-in wireless LAN (Rear of the TV)

2 Access point

3 Internet environment

### ■ Wired connection



1 ETHERNET terminal

2 LAN cable (Shielded)

- Use Shielded Twist Pair (STP) LAN cable.

3 Internet environment


## DLNA connection

To use DLNA features, you need a home network environment and you can operate the features without a broadband network environment.

- A broadband network environment is required to be able to use internet services.


 → [Network > Network connections > Internet connection](#)

### ■ Wireless connection (For DLNA and internet service)

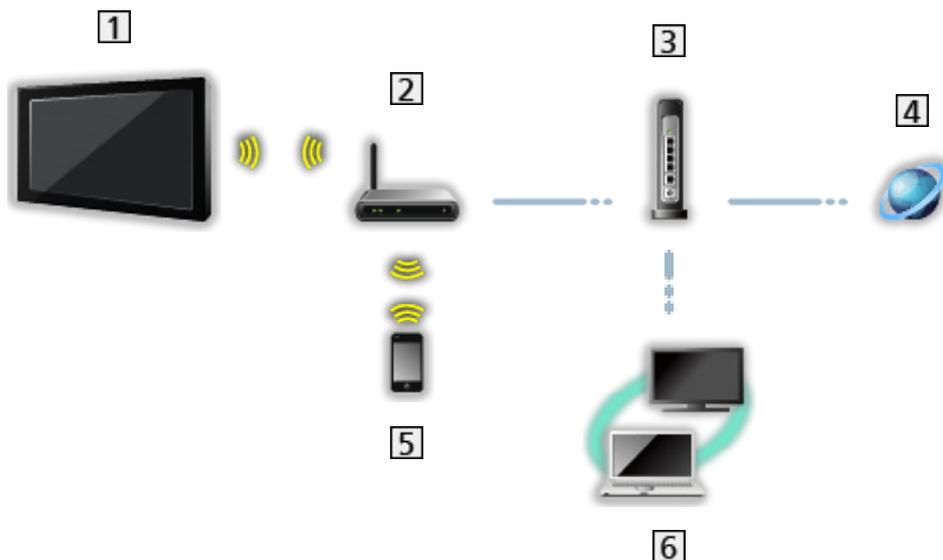

- 1 Built-in wireless LAN (Rear of the TV)
- 2 Access point
- 3 Hub / Router
- 4 Internet environment
- 5 Smartphone, etc.
- 6 DLNA Certified media server (PC, etc.)

## ■ Wired connection (For DLNA and internet service)

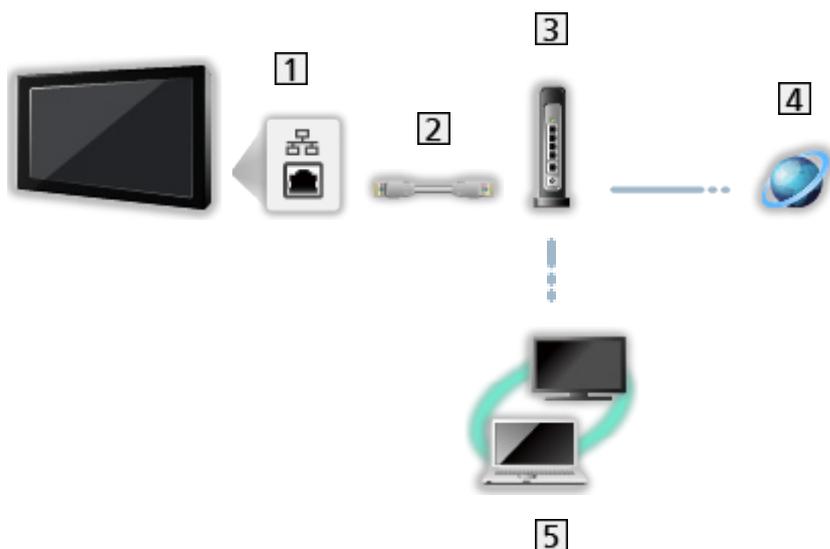

1 ETHERNET terminal

2 LAN cable (Shielded)


- Use Shielded Twist Pair (STP) LAN cable.

3 Hub / Router

4 Internet environment

5 DLNA Certified media server (PC, etc.)

## ■ Wireless connection (For DLNA)

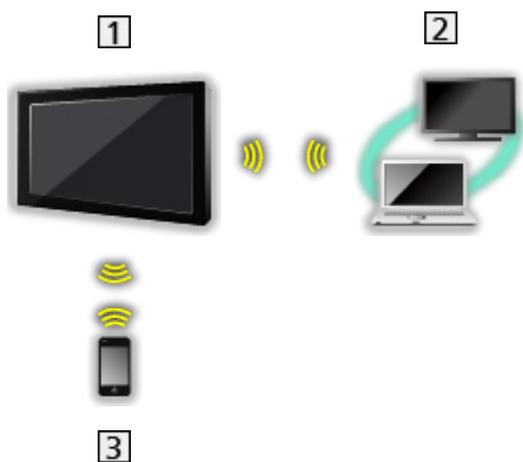

1 TV

- To use the TV as a wireless access point

 → Network > Network settings > Custom - Wireless Access Point

2 DLNA Certified media server (PC, etc.)

3 Smartphone, etc.

## Note

---

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 or later LAN cables are required.
- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off with Mains Power On / Off switch, and then on again when changing or making the network connection again.
- Depending on the network condition, the content may not be played back properly.

# Network settings

## Network Connection

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

### ■ Quick setup - Wireless

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** and press **OK** to access.
  - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** and press **OK** to access.
  - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point and press **OK** to access.
  - Available Wireless Networks are displayed automatically.
    -  : Encrypted access point
  - For WPS(Push button)
    - 1) Select **Easy setup with Push button** and press **OK** to access.
    - 2) Press the WPS button on the access point until the light flashes.
    - 3) Connect the TV with the access point with **OK**.
      - WPS: Wi-Fi Protected Setup™
      - If the connection fails, check the settings and positions of your access point. And then, follow the on-screen instructions.
  - It is recommended to select the encrypted access point.
5. Enter the encryption key of the access point and press **OK** to set.
  - You can set characters using **Numeric buttons**.



- Press **RETURN** to store.
6. Automatically setup is done and **Network Status** is displayed.

 → Network > Network settings > Network Status

7. Select **Exit** and press **OK** to set.
  - To set manually

 → Network > Network settings > Custom - Wireless

## ■ Quick setup - Wired

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** and press **OK** to access.
3. Select **Quick setup** and press **OK** to access.
4. Automatically setup is done and **Network Status** is displayed.

 → **Network** > **Network settings** > **Network Status**

5. Select **Exit** and press **OK** to set.

- To set manually

 → **Network** > **Network settings** > **Custom - Wired**

= Note =

- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

## Custom - Wireless

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.
2. Select **Network > Network Connection > Custom > Wireless** and press **OK** to access.
  - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select your desired access point and press **OK** to access.
  - Available Wireless Networks are displayed automatically.
    -  : Encrypted access point
  - For **WPS(Push button)**
    - 1) Press  (red).
    - 2) Press the WPS button on the access point until the light flashes.
    - 3) Connect the TV with the access point with **OK**.
      - WPS: Wi-Fi Protected Setup™
      - If the connection fails, check the settings and positions of your access point. And then, follow the on-screen instructions.
  - For **WPS(PIN)**
    - 1) Press  (green).
    - 2) Enter the PIN code to the access point.
    - 3) Connect the TV with the access point with **OK**.
  - For **Manual**
    - 1) Press  (yellow).
    - 2) You can set up SSID, security settings and encryption key manually.
    - 3) Follow the on-screen instructions and set manually.
  - To search access points again
    -  (blue)
  - To display / hide information of the highlighted access point
    - INFO**
  - It is recommended to select the encrypted access point.

4. Enter the encryption key of the access point and press **OK** to set.

- You can set characters using **Numeric buttons**.



- Press **RETURN** to store.

5. **IP/DNS Settings** is displayed.

---

### Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
  - Available settings are displayed automatically.
  - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
- 

 
### Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy setting.

#### Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** and press **OK** to access.
- 2) Enter the address with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



- 3) Press **RETURN** to store.

#### Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port**.
- 2) Enter the number with **Numeric buttons**.



- 3) Press **RETURN** to store.
-

6. Select **Network Status** and press **OK** to access.

 → **Network > Network settings > Network Status**

7. Select **Exit** and press **OK** to set.

## Custom - Wired

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.
  2. Select **Network** > **Network Connection** > **Custom** > **Wired** and press **OK** to access.
  3. **IP/DNS Settings** is displayed.
- 

### Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
  - Available settings are displayed automatically.
  - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
- 

 
### Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy setting.

#### Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** and press **OK** to access.
- 2) Enter the address with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



- 3) Press **RETURN** to store.

#### Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port**.
- 2) Enter the number with **Numeric buttons**.



- 3) Press **RETURN** to store.
-

4. Select **Network Status** and press **OK** to access.

 → **Network > Network settings > Network Status**

5. Select **Exit** and press **OK** to set.

= Note =

- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

## Custom - Wireless Access Point

---

You can use the TV as a wireless access point and connect the network equipment without an access point.

- Confirm the PIN code, network settings of the equipment before starting setup. For details, read the manual of the equipment.
1. Display the menu with **MENU**.
  2. Select [Network](#) > [Network Connection](#) > [Custom](#) > [Wireless Access Point](#) and press **OK** to access.
  3. Select [Connect to device in WPS](#) and press **OK** to access.
    - To set manually, select [Change settings](#) (see below).
  4. Select and set [WPS\(Push button\)](#) / [WPS\(PIN\)](#) and press **OK** to access.

### [WPS\(Push button\)](#):

Set up the equipment for [WPS\(Push button\)](#). For details, read the manual of the equipment.

### [WPS\(PIN\)](#):

Enter the PIN code of the equipment.

- If the connection fails, check the settings and positions of the equipment. And then, follow the on-screen instructions.

## ■ Change settings

You can set up [Network name\(SSID\)](#), [Encryption key](#), [Wireless type](#) and [Channel setting method](#) manually.

Follow the on-screen instructions and set manually.

- Set [Reset settings](#) to reset the items for [Change settings](#).

= Note =

- You cannot connect the internet service while the TV is set to [Wireless Access Point](#).
- You can connect up to 7 devices. But the transfer rate varies according to communication environment or the numbers of connected equipment.
- To confirm the current network settings  
 → [Network](#) > [Network settings](#) > [Network Status](#)
- Ensure the equipment to connect supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™

# Network Status

---

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**.
2. Select **Network** > **Network Status** and press **OK** to access.
3. Automatically testing is done and **Network Status** is displayed.

## Try Again:

Performs automatic testing of the network connection for the TV and displays the current status again.

## Status Details:

Displays the detailed network status (SSID, security settings, etc.).

- For information about the network connection, select **Help**.

# my Home Cloud Settings

---

Sets for an account to enjoy the cloud services.

1. Display the menu with **MENU**.
  2. Select **Network** > **my Home Cloud Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[Setup new account](#) / [Edit account](#) / [Remove account](#) / [Notices](#)
  4. Follow the on-screen instructions.
- 

## Setup new account

Set up an account for this TV.

---

## Edit account

Displays and edits the account status.

---

## Remove account

Deletes an account from this TV.

---

## Notices

Displays the terms of service.

---

- A broadband network environment is required to be able to use this function fully. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

## VIERA Name

---

Sets your favourite name for this TV.

1. Display the menu with **MENU**.
2. Select **Network** > **VIERA Name** and press **OK** to access.
3. Enter characters and press **OK** to set.
  - This name is used as the name of this TV on the screen of the other network equipment.
  - When you use two or more TVs in your network environment, set the names of the TVs for each.

## TV Remote App Settings

---

Sets to control the TV with the equipment (smartphone, etc.) connected to your network.

1. Display the menu with **MENU**.
  2. Select **Network > TV Remote App Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**TV Remote / Powered On by Apps / Home Streaming / Device to upload contents**
  4. Set the item and press **OK** to store.
- 

### TV Remote

(On / Off)

Enables controlling the TV from the network equipment (smartphone, etc.).

---

### Powered On by Apps

(On / Off)

Enables turning the TV on from the network equipment (smartphone, etc.).

- Depending on the network condition, you may have to turn the TV on with Standby On / Off switch of the TV's remote control.
  - Changing the default configuration may result in higher energy consumption of the product.
  - LED turns to orange in Standby mode when **Powered On by Apps** is set to **On**.
- 

### Home Streaming

(Always / Only when powered on)

Enables sharing the TV programme and content of this TV with the network equipment (smartphone, etc.) in the home network.

- Changing the default configuration may result in higher energy consumption of the product.
  - LED turns to orange in Standby mode when **Home Streaming** is set to **Always**.
- 

### Device to upload contents

Selects device to upload content from the network equipment (smartphone, etc.).

---

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- You need to install the application for controlling VIERA on your smartphone. For information about the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- Depending on the network condition, this function may not be available.
- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

## Network Link Settings

---

Sets to control the TV with devices connected to the network.

1. Display the menu with **MENU**.
  2. Select [Network](#) > [Network Link Settings](#) and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[DLNA Server](#) / [Registration Type](#) / [Remote Device List](#)
  4. Set the item and press **OK** to store.
- 

### DLNA Server

(On / Off)

Enables sharing the TV programme and content of this TV with the network equipment (DLNA Certified VIERA, etc.).

- To use this function with another VIERA, select the name of this TV from the DLNA server list of another VIERA, and then select the content to share. Also read the manual of another VIERA.
- To use this function with your smartphone, you need to install the application for controlling VIERA on your smartphone. For information about the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- Changing the default configuration may result in higher energy consumption of the product.
  - LED turns to orange in Standby mode when [DLNA Server](#) is set to [On](#).
- 

### Registration Type

(Auto / Manual)

Selects the type to restrict the access to this TV for each piece of equipment on the home network.

[Auto](#):

All available equipment on the home network is accessible (maximum 16 pieces of equipment).

[Manual](#):

Sets the restrictions for each piece of equipment in [Remote Device List](#).

---

### Remote Device List

Lists the equipment accessible to this TV on the home network.

---

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

## TV Anytime Settings

---

Settings for watching TV or editing timer programming with the network equipment (smartphone, etc.) from outside the home network.

 → [Functions](#) > [TV Anytime](#) > [TV Anytime Settings](#)

# File Sharing Settings

---

## File Sharing Server

(On / Off)

Sets to share the files between PC and devices connected to this TV.

 → [Media Player > Using Media Player > Sharing file](#)

---

## Network Device List

Lists the accessible network devices to play back the content in Media Player.

 → [Media Player > Using Media Player > Network device](#)

# Mirroring Settings

---

Settings for the mirroring function

 → [Functions](#) > [Mirroring](#) > [Mirroring Settings](#)

## Do Not Track Setting

---

Sets to notify websites about tracking your browsing activities.

1. Display the menu with **MENU**.
  2. Select [Network](#) > [Do Not Track Setting](#) and press **OK** to access.
  3. Select [Tracking Mode / About Do Not Track](#) and press **OK** to access.
  4. Set the item and press **OK** to store.
- 

### Tracking Mode

([Mode1](#) / [Mode2](#) / [Mode3](#))

#### Mode1:

Notifies websites that you want to be tracked.

#### Mode2:

Notifies websites that you do not want to be tracked.

#### Mode3:

Sends no configuration information about tracking.

---

### About Do Not Track

Displays the information about tracking.

- A broadband network environment is required to be able to display the detailed information.

## Software Update

---

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**.
2. Select **Network** > **Software Update** and press **OK** to access.
3. Follow the on-screen instructions.

## New Software Message

---

Selects whether to give a notification message when new software is found via network or not.

1. Display the menu with **MENU**.
2. Select **Network** > **New Software Message** and press **OK** to access.
3. Select **On / Off** and press **OK** to set.

# Photos

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select the media server and press **OK** to access.
  - To display / hide information of the highlighted media server
    - 1) Display the option menu with **OPTION**.
    - 2) Select **Show Info.** and press **OK** to access.
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file  
**INFO**

= Note =

- Non-playable files are also listed but cannot be selected.

## Viewing photo

---

### ■ Playback

- To operate Single view

◀ : To the previous photo

▶ : To the next photo

▽ : Stop (return to list)

OK : Slideshow

- To display / hide the operation guide

INFO

- To rotate 90°

■ (blue)

- To return to list

RETURN

## Using Slideshow

---

Slideshow ends when all photos within the list are viewed.

1. Select the file from the thumbnail of photos for the first view.
2. Start Slideshow with  (red) and **OK**.
  - To display / hide the operation guide  
**INFO**
  - To pause (return to Single view)  
**OK**
  - To return to list  
**RETURN**

### ■ Slideshow Settings

Set up the settings for photo file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select [Slideshow Settings](#) and press **OK** to access.
3. Select one of the following items and press **OK** to access.  
[Interval](#) / [Repeat](#) / [Back Ground Music](#)
4. Set the item and press **OK** to store.

---

#### [Interval](#)

([Long](#) / [Normal](#) / [Short](#))

Selects slideshow interval.

---

#### [Repeat](#)

([On](#) / [Off](#))

Slideshow repeat

---

#### [Back Ground Music](#)

([Off](#) / [Type1](#) / [Type2](#) / [Type3](#) / [Type4](#) / [Type5](#))

Selects the background music during Photo mode.

# Videos

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select the media server and press **OK** to access.
  - To display / hide information of the highlighted media server
    - 1) Display the option menu with **OPTION**.
    - 2) Select **Show Info.** and press **OK** to access.
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file  
**INFO**

= Note =

- Non-playable files are also listed but cannot be selected.

# Watching video

---

## ■ Playback

If you have stopped the last playback halfway, a confirmation screen may be displayed to select whether to start from where you stopped last time or from the beginning.

- To operate playback

 : Manual skip (if available)

– Press to skip forward approx. 30 seconds.

 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar / slow playback) / Playback

- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To play back slowly

1) Press and hold  for 5 seconds.

Press  /  :

Search slowly

2) Return to the normal playback with .

- To display / hide the operation guide and information banner



- To the previous content

 (red)

- To the next content

 (green)

- To change aspect
  - 1) Display **Aspect Selection** with **ASPECT**.
  - 2) Select the mode and press **OK** to set.
    - Aspect1:**
      - Displays the content original size.
    - Aspect2:**
      - Displays the content enlarged without distortion.
  - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
  - Aspect cannot be changed depending on the content.
- To return to list
  - RETURN**

## Video Setup

---

Set up the settings for video file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select [Video Setup](#) and press **OK** to access.
3. Select one of the following items and press **OK** to access.

[Video Preview](#) / [Audio Selection](#) / [Dual Audio](#) / [Dual Mono Audio](#) / [Subtitle Settings](#) / [Repeat](#)

- Menu items and selectable options vary depending on the content.

4. Set the item and press **OK** to store.
- 

### [Video Preview](#)

([On](#) / [Off](#))

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
- 

### [Audio Selection](#), [Dual Audio](#), [Dual Mono Audio](#)

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
  - This function is available during playback.
-

## Subtitle Settings

Sets the subtitle setting.

- This function is available during playback.

### Subtitle:

Display / hide subtitles (if available).

### Subtitle Text:

Selects the font type to display subtitles correctly (if available).

### Subtitle Text Size:

Selects the font size of subtitles.

### Subtitle Text Colour:

Selects the colour of subtitles.

### Subtitle Text Position:

Adjusts the position of subtitles on the screen.

### Subtitle Text Delay:

Adjusts the delay time for the subtitles.

---

## Repeat

(On / Off)

Playback repeat within the selected file

## Audio output settings

---

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Network > Videos > Video Setup

1. Display the menu with **MENU**.
  2. Select **Sound** > **SPDIF Selection** and press **OK** to access.
  3. Select **Auto** / **PCM** and press **OK** to set.
- 

### SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

#### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

#### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

= Note =

- During the operation, audio signal is output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → Functions > VIERA Link "HDAVI Control™"

# Music

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select the media server and press **OK** to access.
  - To display / hide information of the highlighted media server
    - 1) Display the option menu with **OPTION**.
    - 2) Select **Show Info.** and press **OK** to access.
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file  
**INFO**

= Note =

- Non-playable files are also listed but cannot be selected.

# Playing music

---

## ■ Playback

- To operate playback

◀ : Rewind

▶ : Fast forward

▽ : Stop

**OK** : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with **OK**.

2) While the time seek bar is displayed

Press ◀ / ▶ :

Search approx. 10 seconds

Press and hold ◀ / ▶ :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide

**INFO**

- To the previous track

 (red)

- To the next track

 (green)

- To return to list

**RETURN**

## Music Setup

---

Set up the settings for music file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select **Music Setup** > **Repeat** with **OK**.
3. Select **Off** / **Folder** / **One** and press **OK** to set.

### Folder:

Playback repeat within the selected folder

### One:

Playback repeat of the selected one file

# DIGA Recorder

## Controlling DIGA Recorder

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select **DIGA** and press **OK** to access.
4. The screen of the DIGA Recorder is displayed. You can control the functions of the DIGA Recorder with this TV's remote control according to the operation guide.

(Example)



- For details, read the manual of the DIGA Recorder.

# Technical information

## Photo format

---

### ■ Supported Photo formats

---

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
  - Progressive JPEG is not supported.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Video format

---

## ■ Supported Video formats

---

- AVI (.avi)

Video codec:

H.264, MPEG1, MPEG2, MPEG4, VC-1, WMV9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS, HE-AAC, LPCM, MP3, WMA, WMA Pro

---

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
- 

- MKV (.mkv)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS, HE-AAC, MP3, Vorbis

---

- ASF (.asf, .wmv)

Video codec:

MPEG4, VC-1, WMV9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264

Audio codec:

AAC, MP3

---

- 3GPP (.3gp, .3g2)

Video codec:

H.264, MPEG4

Audio codec:

AAC, HE-AAC

---

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, LPCM

---

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264, H.265 (HEVC), MPEG1, MPEG2

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC

---

- WebM (.webm)

Video codec:

VP9

Audio codec:

Vorbis

## ■ Supported Subtitles formats

---

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
    - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
    - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Some subtitles or chapter functions may not be available.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

# Music format

---

## ■ Supported Music formats

---

- MP3 (.mp3)
- 

- AAC / Apple Lossless (.m4a)
    - Copy-protected files cannot be played back.
- 

- FLAC (.flac)
- 

- WMA / WMA Pro (.wma)
    - Copy-protected files cannot be played back.
- 

- LPCM (.wav)
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Functions

## Info Frame

### Information

---

Info Frame is a convenient feature to provide you relevant information of the watching programme, recommendations, etc. It is displayed on the edge of screen when you need it.

(Example)



- A broadband network environment is required to be able to use this function fully.

= Note =

- Design and specifications are subject to change without notice.


## How to use

You can check useful information using Info Frame while watching TV.

1. Press and hold **HOME**.

- Info Frame is displayed on the edge of screen.

(Example)

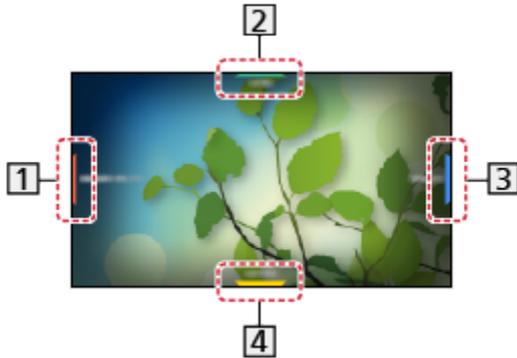

**1** Current programme information, etc.

**2** Relevant information (weather forecast, etc.)

**3** Notification message

**4** Recommended content (TV programme, internet content, etc.)

- You can also display Info Frame pressing and holding **HOME** on Touch Pad Controller.
- To exit Info Frame

### **RETURN**

2. Select one side of Info Frame with **Cursor buttons** or  (coloured buttons) while Info Frame is displayed.



- You can also select by sliding your finger on Touch Pad Controller.

3. Follow the on-screen instructions.

= Note =

- Info Frame is displayed for several seconds each time the TV is turned on.

 → [Functions > Info Frame > Settings](#)

# Settings

---

You can set items for Info Frame.

1. Display the menu with **MENU**.
  2. Select **Setup > Display Settings > Info Frame at Power on** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

## Info Frame at Power on

(On / Off)

Displays Info Frame when the TV is turned on.

# Voice Control

## Information

---

Voice Control function allows you to operate the TV (e.g. selecting a channel), search the content from various features, etc. with your speech.

- A broadband network environment is required to be able to use this function fully. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

- To use this function with Touch Pad Controller, ensure the pairing is completed.

 → [Functions > Touch Pad Controller > Pairing](#)

- To use the built-in microphone, set [Direct Voice Control](#) to [On](#).

 → [Functions > Voice Control > Settings](#)

## How to use

---

1. Press  of Touch Pad Controller to display the operation guide.
  - You can also display it with saying “Hello television” to the TV (built-in microphone).
  - When a confirmation screen is displayed, read carefully and start Voice Control function.

(Example)



2. Say a key word (e.g. my Home Screen) to the microphone while the operation guide is displayed.

(Example)



- The operation guide turns to blue during processing.
- The operation guide automatically disappears after a certain period of time. Press  again to start the Voice Control function.
  - You can also start the Voice Control function again with saying “Hello television” to the TV (built-in microphone).
- To display voice command list
  - 
  - You can also display it with saying “Help” to the TV (built-in microphone).
- To exit Voice Control function
  - 
  - You can also exit the function with saying “Thanks television” to the TV (built-in microphone).

## ■ To turn on the TV using Direct Voice Control function

You can turn on the TV with saying “Television power on” to the TV (built-in microphone).

- Set **Direct Voice Control** to **On** to use this function.

 → **Functions > Voice Control > Settings**

- The built-in microphone is available in Standby mode only when the human activity sensor detects the person.

 → **Functions > Voice Control > Note**

- This function is not available when the TV is turned off with Mains Power On / Off switch.

# Settings

---

You can set items for Voice Control function.

1. Display the menu with **MENU**.
  2. Select [Setup](#) > [Voice Control Settings](#) and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[Language](#) / [Speech Detection Level](#) / [Direct Voice Control](#) / [Terms of Service](#) / [Instructions for Voice Control](#)
  4. Set the item and press **OK** to store.
- 

## Language

Select the language for Voice Control function.

- All languages may not be available. When the selected language is not supported, [Language](#) is set to [English](#) automatically.
- 

## Speech Detection Level

([High](#) / [Standard](#) / [Low](#))

Adjusts the sensitivity to recognise your speech.

---

## Direct Voice Control

([On](#) / [Off](#))

Enables the Voice Control function with the built-in microphone.

---

## Terms of Service

Displays the terms of service.

---

## Instructions for Voice Control

Displays details of Voice Control function in eHELP.

## Note

---

- When you start Voice Control function, sound level of the TV becomes low.
- Voice Control function may not work properly in the following conditions:
  - Not pronounce clearly and correctly
  - Volume level of your voice is too loud or too low.
  - Surrounded by the noise
- Phrases other than Voice Command may not be recognised.
- It is recommended to speak within approx. 15 cm from the microphone when using Touch Pad Controller.
- It is recommended to speak within approx. 3 m from the front of TV when using the built-in microphone.
- Design and specifications are subject to change without notice.
- A broadband network environment is required to be able to use this function fully, because this function accesses the speech recognition server with the internet connection. Even if you have the internet environment, this function may not be available depending on the proxy setting. Please connect the internet without proxy settings. (Proxy settings are not required for normal household use. For details of the internet environment, consult your Internet Service Provider (ISP) or telecommunications company.)

### ■ Human activity sensor

- Available ranges for the human activity sensor
  - Distance: Within approx. 5 m
  - Horizontal: Within approx. 35°
  - Vertical (upward): Within approx. 15°
  - Vertical (downward): Within approx. 7.5°
- Human activity sensor detects the gap between the room temperature and human body temperature. The available ranges may be different depending on the surrounding temperature, clothes, etc. Human activity sensor may mistakenly detect the heat source such as direct sunlight, animals (dog, cat, etc.), warm air from air conditioner, heater, electric pot, etc.
- Sideways or lengthways movement can be detected easily, but back and forth movement or a slight movement may not be accurately detected.
- Human activity sensor may not work properly when there is a reflecting object (mirror, etc.) in the available ranges or any objects between the human activity sensor and person.

# Touch Pad Controller

## Information

---

Touch Pad Controller is designed for the convenient operations, especially, on Home Screen or internet content. You can operate the TV intuitively with this controller.

- Touch Pad Controller can be used exclusively for controlling this TV.
- Register the Touch Pad Controller to this TV with Bluetooth wireless technology before using. The registration starts automatically when you press any buttons (except Standby On / Off switch) after installing batteries. To register again, set [VIERA Touch Pad Controller](#) in the Setup Menu.

 → [Functions > Touch Pad Controller > Pairing](#)

- After registering, you can operate the TV without pointing this controller at the TV (except Standby On / Off switch).
- It is recommended to speak within approx. 15 cm from the microphone of Touch Pad Controller when using the Voice Control function.

## Pairing

---

Perform the registration when Touch Pad Controller is used for the first time.

The registration starts automatically when you press any buttons (except Standby On / Off switch) after installing batteries.

To register again, take following steps.


1. Display the menu with **MENU**.
2. Select **Setup > VIERA Touch Pad Controller > Pairing** and press **OK** to access.
3. Follow the on-screen instructions.

= Note =

- Place Touch Pad Controller within 50 cm from the TV while registration is in progress.
- Only 1 Touch Pad Controller can be registered.

## Identifying controls

---

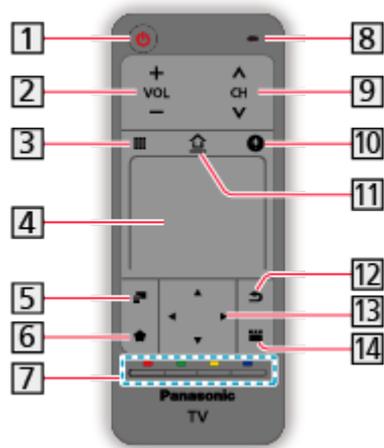

- 1 Standby On / Off switch
- 2 Volume Up / Down
- 3 On-screen remote control
  - Press to display the remote control GUI (Graphical User Interface).
  - Press again to move the position of GUI. Swipe to select the button.
  - Press 12 to exit the on-screen remote control.
- 4 Touch pad
  - For operations, refer to [Operation Guide](#) in the Setup menu.
    -  → [Functions > Touch Pad Controller > Settings](#)
- 5 Option menu
  - Easy optional setting for viewing, sound, etc.
- 6 Pin to HOME
  - Adds a shortcut for a frequently used feature (TV programme / application / device) on Home Screen.
    -  → [Home Screen > Home Screen > Pin to HOME](#)
- 7 Coloured buttons (red-green-yellow-blue)
  - Used for the selection, navigation and operation of various functions.
- 8 Microphone
- 9 Channel Up / Down
- 10 Voice Control button
  - For details of Voice Control function
    -  → [Functions > Voice Control](#)
- 11 HOME
  - Displays Home Screen.

12 Return

- Returns to the previous menu / page.

13 Cursor buttons

14 APPS

- Displays [Apps](#).

= Note =

- To use Standby On / Off switch, point the controller directly at the TV's remote control signal receiver because it works with infrared sensors. (You can operate the switch without registration.)

# Settings

---

1. Display the menu with **MENU**.
2. Select **Setup > VIERA Touch Pad Controller** and press **OK** to access.
3. Select one of the following items and press **OK** to access.

[Pairing](#) / [Cursor Sensitivity](#) / [Operation Guide](#)

4. Follow the on-screen instructions.
- 

## Pairing

Registers Touch Pad Controller (supplied) to this TV.

 → [Functions > Touch Pad Controller > Pairing](#)

---

## Cursor Sensitivity

([Max](#) / [Mid](#) / [Min](#))

Adjusts the sensitivity of the cursor.

---

## Operation Guide


Displays the operation guide of Touch Pad Controller.

# TV Anytime

## How to use

---

You can watch TV and set timer event with the network equipment (smartphone, etc.) from outside the home network.

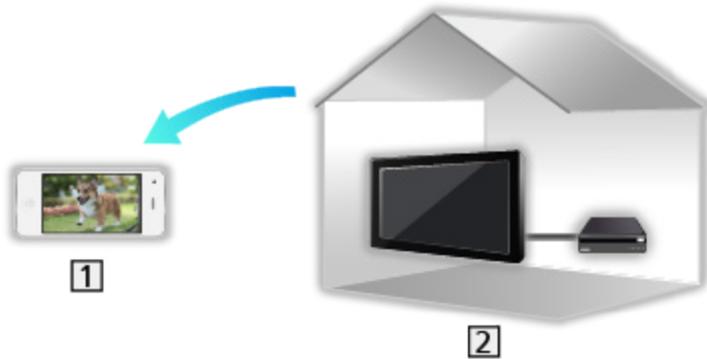

1 Smartphone, etc.

2 TV

- Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

1. Set **TV Anytime** to **On**.

 → Functions > TV Anytime > TV Anytime Settings

2. Connect the device (smartphone, etc.) to the home network and access to the TV.

- You need to install the application for controlling VIERA on your smartphone.

For information about the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition and broadcasts, this function may not be available.
- Additional information about the services may be found on the following website.

<http://panasonic.net/viera/support> (English only)

# TV Anytime Settings

---

1. Display the menu with **MENU**.
  2. Select **Network > TV Anytime Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**TV Anytime / Powered on by Swipe & Share / Device ID / Device Password**
  4. Follow the on-screen instructions.
- 

## TV Anytime

(On / Off)

Enables watching TV and setting timer event with the network equipment (smartphone, etc.) from outside the home network.

- Changing the default configuration may result in higher energy consumption of the product.
  - LED turns to orange in Standby mode when **TV Anytime** is set to **On**.
- 

## Powered on by Swipe & Share

(On / Off)

Enables turning on the TV automatically when the Swipe & Share function is activated from the other devices (smartphone, etc.).

- Set **TV Anytime** to **On** to use this function.
  - Use the Swipe & Share function to turn on the TV only when you can see the status of the TV.
- 

## Device ID

Displays the device ID of this TV.

---

## Device Password

Displays the device password of this TV.

# Mirroring

## How to use

---

You can watch display images of other devices (smartphone, etc.) on the TV screen using a mirroring function.



1 Smartphone, etc.

2 TV

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.
3. Select **Mirroring** and press **OK**.
4. Follow the on-screen instructions.
  - Pairing information of the device (smartphone, etc.) is registered once you use this function.

### ■ Easy Mirroring

You can also start the mirroring function from the other devices (smartphone, etc.) when **Easy Mirroring** is set to **On**.

 → **Functions > Mirroring > Mirroring Settings**

- You cannot use Easy Mirroring function while the TV is set to **Wireless Access Point**.

= Note =

- This function is available with the other devices (smartphone, etc.) supporting the mirroring function. For details, refer to the operating instructions of the devices.

# Mirroring Settings

---

You can set items for the mirroring function.

1. Display the menu with **MENU**.
  2. Select **Network > Mirroring Settings** and press **OK**.
  3. Select one of the following items and press **OK** to access.  
[Easy Mirroring](#) / [Powered On by Easy Mirroring](#) / [Delete All Pairings](#)
  4. Set the item and press **OK** to store.
- 

## Easy Mirroring

(On / Off)

Enables starting the mirroring function from the other devices (smartphone, etc.) without operating the TV.

- To deactivate wireless, set [Easy Mirroring](#) to **Off** and confirm the network connection type is set to **Wired**.

 → [Network > Network settings > Network Status](#)

- Not valid when the TV is set to [Wireless Access Point](#)
- 

## Powered On by Easy Mirroring

(On / Off)

Enables turning on the TV automatically when the mirroring function is activated from the other devices (smartphone, etc.).

- Changing the default configuration may result in higher energy consumption of the product.
  - Use the mirroring function to turn on the TV only when you can see the status of the TV.
  - Register the devices (smartphone, etc.) before using this function.
  - LED turns to orange in Standby mode when [Powered On by Easy Mirroring](#) is set to **On**.
- 


## Delete All Pairings

Delete the pairing information for all paired devices.


# Multi Window

## Information

Displays two windows at once for viewing the TV programmes or external input (AV / COMPONENT / HDMI) as shown below (example).

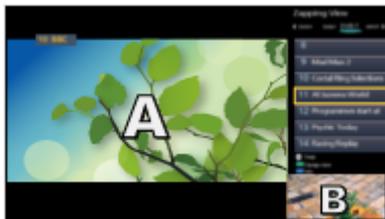


Pre-view

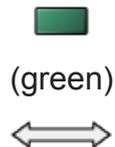

(green)




Dual view

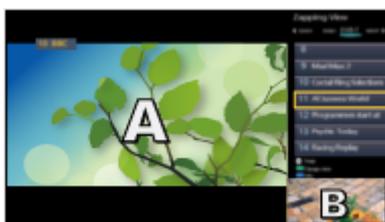

Pre-view



OK

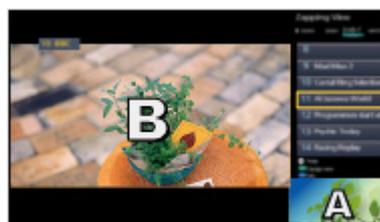

Pre-view

- To swap windows

**OK**

- Not valid while recording is in progress

- To exit multi window

**EXIT**

## How to use


---

You can select a channel while watching another programme or external input.

1. Display **Apps** with **APPS**.
2. Select **Multi Window** and press **OK** to access.

### ■ Pre-view


(Example)

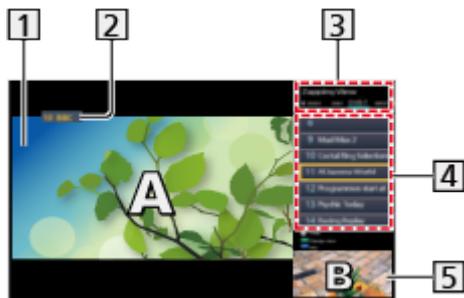

- 1 Main screen
- 2 TV mode / Input mode / Channel position and name (for main screen)
- 3 TV mode / Input mode (for sub screen)
  - Press ◀ / ▶ to select the TV mode / input mode of the sub screen.
- 4 Current programme information (if available) (for sub screen)
  - Press ▲ / ▼ to select the programme of the sub screen.
- 5 Sub screen / information screen
  - Press ■ (blue) to change the screen.
  - The sound comes only from the main screen.

## ■ Dual view

(Example)

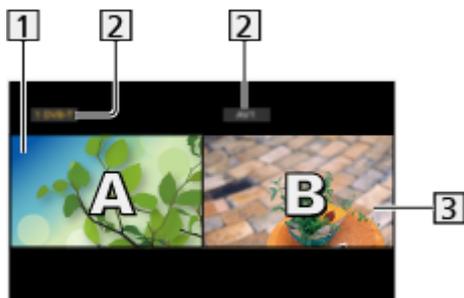

1 Main screen

2 TV mode / Input mode / Channel position and name

3 Sub screen

- Press ◀ / ▶ to select the screen to operate.
  -  displays on the screen.
- To select the sound
  - 1) Display the option menu with **OPTION**.
  - 2) Select **Sound Output** and press **OK** to access.
  - 3) Select **Main / Sub** and press **OK** to set.
  -  displays on the screen.
- To confirm or change the current status

**OPTION**

  - Menu items and selectable options vary between the main screen and sub screen.
    -  → **Watching > Basic > AV Options**
- To display / hide the operation guide

**INFO**

## Note

---

- This function may not work properly depending on the signal format.
- Not valid in Analogue TV
- Data services are not available in multi window.
- You cannot change the aspect ratio in multi window.
- External input mode can only be displayed either on the main screen or sub screen.
- HDMI is available for the main screen.
- Some signals are reformatted for suitable viewing on your display.
- Playback in fast-forward or in reverse on the sub screen may affect the picture quality on the main screen.

# VIERA Link “HDAVI Control™”

## Summary of VIERA Link

---

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control™” function.


VIERA Link (HDAVI Control) connects the TV and the equipment with VIERA Link function, and enables easy control, playback, energy saving, creating home theatre, etc. without complicated settings. Connections to the equipment (DVD Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cables allow you to interface them automatically. These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- This TV supports “HDAVI Control 5” function.
- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control” is a unique function that we have developed and added based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control). As such, its operation with other manufacturers’ product that supports HDMI CEC cannot be guaranteed.
- VIERA Link features may be available even with other manufacturers’ equipment supporting HDMI CEC.
- Please refer to individual manuals for other manufacturers’ product supporting VIERA Link function.
- About applicable Panasonic product, consult your local Panasonic dealer.

## ■ VIERA Link (HDMI connection)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.

About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

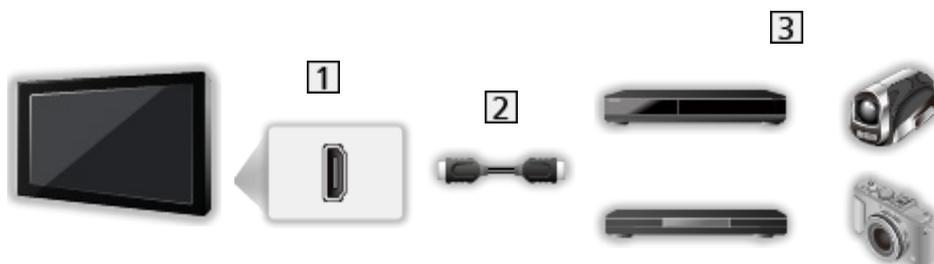

**1** HDMI terminal

**2** HDMI cable

**3** Equipment with VIERA Link function (DVD Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera)

## ■ Available features (HDMI connection)

---

### DVD Recorder / DVD Player / Blu-ray Disc Player

- Easy playback
  - Power on Link
  - Power off Link
  - Standby Power Save\*<sup>2</sup>
  - Intelligent Auto Standby\*<sup>2</sup>
  - VIERA Link Control\*<sup>1</sup>
- 

### HD Video Camera / LUMIX Camera


- Easy playback
  - Power on Link
  - Power off Link
  - VIERA Link Control\*<sup>1</sup>
- 

\*<sup>1</sup> : For equipment which has "HDAVI Control 2 or later" function.

\*<sup>2</sup> : For equipment which has "HDAVI Control 4 or later" function.

## ■ VIERA Link (HDMI and Audio out connections)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.
- Use the optical digital audio cable for audio output from the TV.

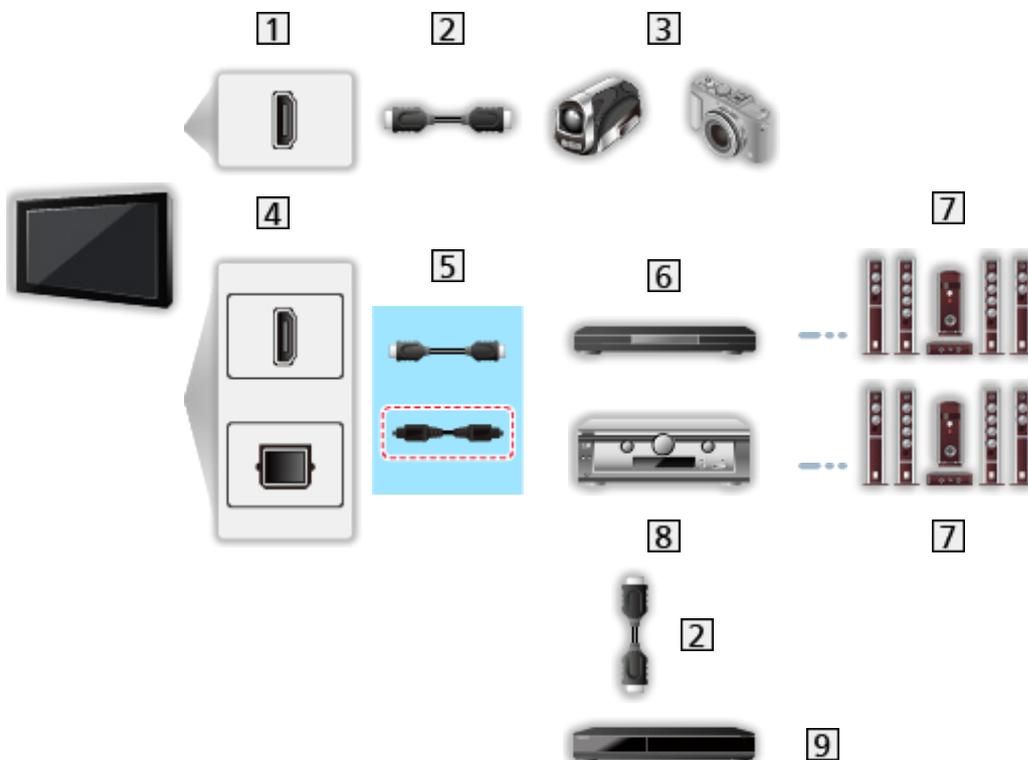

1 HDMI terminal

2 HDMI cable

3 HD Video Camera / LUMIX Camera with VIERA Link function

4 HDMI terminal / DIGITAL AUDIO OUT

5 HDMI cable (Optical digital audio cable\*)

6 Player theatre / Blu-ray Disc theatre with VIERA Link function

7 Speaker system

8 Amplifier with VIERA Link function

9 DVD Recorder with VIERA Link function

\*: If the connected equipment has "HDAVI Control 5" function, you do not have to use this audio cable (Optical digital audio cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

## ■ Available features (HDMI and Audio out connections)

---

### Player theatre

- Easy playback\*<sup>3</sup>
  - Power on Link
  - Power off Link
  - Intelligent Auto Standby\*<sup>2\*4</sup>
  - VIERA Link Control\*<sup>1</sup>
  - Speaker Selection
- 

### Blu-ray Disc theatre

- Easy playback\*<sup>3</sup>
  - Power on Link
  - Power off Link
  - Standby Power Save\*<sup>2</sup>
  - Intelligent Auto Standby\*<sup>2\*4</sup>
  - VIERA Link Control\*<sup>1</sup>
  - Speaker Selection
- 

### Amplifier

- Power off Link
  - Intelligent Auto Standby\*<sup>2</sup>
  - Speaker Selection
- 

\*1 : For equipment which has “HDAVI Control 2 or later” function.

\*2 : For equipment which has “HDAVI Control 4 or later” function.

\*3 : While playing a disc

\*4 : Except for watching a disc

## ■ VIERA Link Control of compatible equipment

The following is the maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.

For example, DVD Recorder connected to Amplifier which is connected to the TV via an HDMI cable.

 → [Functions > VIERA Link "HDAVI Control™" > VIERA Link Control](#)

- Recorder:  
Maximum 3
- Player:  
Maximum 3 (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)
- Audio system:  
Maximum 1 (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)
- Tuner:  
Maximum 4 (Set top box, etc.)

## Preparations

---

- Connect the equipment supporting VIERA Link.
- For details of VIERA Link connections  
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Use a fully wired HDMI compliant cable.
- Set up the connected equipment. Read the manual of the equipment.
- Set [VIERA Link](#) to [On](#) in the Setup Menu.
- Set up the TV. After connection, turn the equipment on and then switch the TV on. Select the HDMI input from [Input Selection](#) with [AV](#) and make sure that an image is displayed correctly. (This setup should be done each time the following conditions occur.)
  - First time operation
  - Adding or reconnecting equipment
  - Changing setup

## Easy playback

---

Automatic input switching - When the connected equipment is operated, the input mode is switched automatically.

## Power on Link

---

Set [Power on Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the connected equipment is operated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

## Power off Link

---

Set [Power off Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

## Standby Power Save

---

Set [Standby Power Save](#) to [On](#) in [VIERA Link Settings](#) to use this function.

The power consumption of the connected equipment in Standby mode is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to start the connected equipment fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link](#) is set to [On](#).

## Intelligent Auto Standby

---

Set **Intelligent Auto Standby** to **On** in **VIERA Link Settings** to use this function.

When the TV is on, non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when **Speaker Selection** is changed to **TV** (except for watching a disc).

- This function may not work properly depending on the connected equipment. In this case, set to **Off**.

## VIERA Link Control

---

You can control some functions of the connected equipment with this TV's remote control by pointing at the TV's signal receiver.

1. Display **Apps** with **APPS**.
2. Select **VIERA Link** and press **OK** to access.
3. Select **VIERA Link Control** and press **OK** to access.
4. Select one of the following items and press **OK** to access.

**Recorder / Player / Home Cinema / Video Camera / LUMIX / Digital Camera / Other**

(The menu of the accessed equipment is displayed. The input mode is changed automatically.)

- The displayed item may vary depending on the connected equipment.
  - **Home Cinema** means Player theatre, Blu-ray Disc theatre or Recorder theatre.
  - **Other** means Tuner set top box.
5. Follow the on-screen instructions to operate the menu of the equipment.

- Confirm the remote control code is "73".

 → **Watching > External equipment > Operating with TV's remote control**

- To display the operation guide

**OPTION**

(If other manufacturers' product is accessed, Setup / Contents Selection menu may be displayed.)

- Available TV's remote control buttons depend on the connected equipment.

### ■ If multiple recorders or players are connected

Each recorder / player is numbered. The number is given from the TV's lower number of HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as **Recorder1**, and the recorder connected to HDMI3 is displayed as **Recorder2**.

### ■ If you access non-VIERA Link equipment

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use the remote control of the connected equipment.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.



→ [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment. In this case, use the remote control of the connected equipment.
- For details of the operations for the connected equipment, read the manual of the equipment.

## Speaker Selection

---

You can control the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

1. Display **Apps** with **APPS**.
2. Select **VIERA Link** and press **OK** to access.
3. Select **Speaker Selection** and press **OK** to access.
4. Select **TV / Home Cinema** and press **OK** to set.

**TV:**

TV speakers are active.

**Home Cinema:**

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use **Volume Up / Down** and **MUTE**.



### ■ Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with an HDMI cable and Optical digital audio cable, and then select **Home Cinema**. If your Amplifier has the "HDAVI Control 5" function, you only need to connect it with an HDMI cable to the TV's HDMI2 terminal.

To enjoy multi-channel sound from DIGA Recorder, connect an HDMI cable from the DIGA Recorder to the Amplifier.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment.

## Note

---

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be delivered for the first few seconds when the input mode is switched.
- “HDAVI Control 5” is the newest standard for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm the HDAVI Control version of this TV

 → [Support > Help menu > Using Help menu](#)

# Child Lock

## Using Child Lock

---

You can lock specific channels / AV input terminals to restrict access to them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1. Display the menu with **MENU**.
2. Select **Setup > Child Lock** and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- “0000” has been stored as the default PIN number.
4. Select **Child Lock List** and press **OK** to access.
  5. Select the channel / input and press **OK** to lock.
    -  appears when the channel / input is locked.
    - To cancel
      - 1) Select the locked channel / input.
      - 2) Press **OK**.
    - To lock all  
 (green)
    - To cancel all locks  
 (yellow)
    - To jump to the head of the next channel / input group  
 (blue)

### ■ Show Adult App

Set to **Off** to lock specific applications to restrict access to them (if available).

= Note =

- For internet content

## PIN number

---

You can change the PIN number.

1. Select [Change PIN](#) and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.
- If you have forgotten your changed PIN, input “6969” as the PIN number.

## Parental Rating

---

To watch the digital TV programme that has rating information on the selected age, enter the PIN number (depending on the broadcaster).

1. Select **Parental Rating** and press **OK** to access.
2. Select an age for the restriction of programmes and press **OK** to set.

### ■ Meaning of rating

**No Block**: Not classified

**R**: Restricted 18+

**AV 15+**: Adult strong Violence 15+

**MA 15+**: Mature Adult 15+

**M**: Mature

**PG**: Parental Guidance recommended

**G**: General

**C**: Children

**P**: Pre school

= Note =

- Setting **Shipping Condition** erases the PIN number and all settings.
- If you have forgotten your changed PIN, input "6969" as the PIN number.

# Data Service Application

## Using Data Service Application

---

You can enjoy Hybrid Broadcast Broadband TV application that is one of the interactive data services for digital broadcasting.

1. Select Digital TV with **TV**.
2. Display the menu with **MENU**.
3. Select **Setup > Data Service Application > Service** and press **OK** to access.
4. Select **Auto Start On** and press **OK** to set.
  - A notification message will appear when the application is available. Follow the on-screen instructions.
  - **D** is displayed on the information banner if the programme has Hybrid Broadcast Broadband TV application.  
 → **Watching > Basic > Information banner**
  - To stop the application  
**EXIT**

# Cookie

---

1. Display the menu with **MENU**.
  2. Select **Setup > Data Service Application > Store Cookie / Delete Cookie** and press **OK** to access.
- 

## Store Cookie

(On / Off)

Enables storing the technical information that a data service application leaves into the TV in order to recognise to use it again.

---

## Delete Cookie

Deletes all of technical information left by a data service application.

## Note

---

- A broadband network environment is required to be able to use Hybrid Broadcast Broadband TV application fully. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- Not all the data services are available depending on the area and broadcaster.
- Not valid in multi window mode
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- Operations may vary depending on the broadcaster. Follow the on-screen instructions.
- On-screen instructions may not correspond to the remote control buttons.

# Shipping Condition

## Shipping Condition

---

Resets the TV to its original condition (i.e. no channels tuned in).

All settings other than [USB Device Setup](#) are reset (channels, picture, sound settings, etc.).

1. Display the menu with **MENU**.
2. Select [Setup](#) > [System Menu](#) > [Shipping Condition](#) and press **OK** to access.
3. When a confirmation screen is displayed, select [Yes](#) and press **OK** to set.
4. Follow the on-screen instructions.
  - [Auto Tuning](#) automatically starts.

= Note =

- To retune TV channels only (e.g. after moving house), set [Auto Tuning](#).

 → [Watching > Tuning and editing channels > Auto Tuning](#)

# Updating the TV Software

## Information

---

A new version of software may be released for download to enhance the performance or operations of the TV.

If there is an update available and the channel has the update information, a notification message is displayed.

- To download

**OK**

- Press **EXIT** when not downloading.

## Auto update

---

You can update new software automatically.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > Auto Update Search in Standby** and press **OK** to access.
3. Select **Immediately / 1 hour after / Off** and press **OK** to set.
  - If System Update is performed, the software will be updated (TV functions may be changed). If you do not want to do so, set **Auto Update Search in Standby** to **Off**.
  - Every time you set, the TV automatically performs search in Standby and downloads an update if any software updates are available.
  - The automatic updating cannot be performed in the following conditions:
    - TV turned off with Mains Power On / Off switch
    - Recording is in progress.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT switch off the TV.
- A notification message may be a reminder. In this case, schedule information (the date when the new version can be used) will appear. You can set the reservation for update. The update will not start when the TV is off.

## Manual update

---

You can update new software manually.

1. Display the menu with **MENU**.
2. Select **Setup** > **System Menu** > **System Update** > **System Update Search Now** and press **OK** to access.
3. Searches for an update (for several minutes) and displays a corresponding message if any.
4. Download with **OK**.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT switch off the TV.
- To update via the internet

 → **Network** > **Network settings** > **Software Update**

# Setting characters

## Using Numeric buttons

---

You can enter characters for free input items using **Numeric buttons**.

Press **Numeric buttons** repeatedly until you reach the desired character.

**1** : . @ / 1 ! : # + - \* \_ ( ) " ' % & ? , ; = \$ [ ] ~ < > { } | ` ^ \

**2** : a b c 2 A B C

**3** : d e f 3 D E F

**4** : g h i 4 G H I

**5** : j k l 5 J K L

**6** : m n o 6 M N O

**7** : p q r s 7 P Q R S

**8** : t u v 8 T U V

**9** : w x y z 9 W X Y Z

**0** : Space 0

- The character is set automatically if you leave for 1 second.
- You can also set the character pressing **OK** or other **Numeric buttons** less than 1 second.
- The characters may vary depending on the input item.

# Bluetooth devices

## Bluetooth Setup

---

You can use Bluetooth keyboards\* and mouse\* with this TV by setting [Bluetooth Setup](#) in the Setup Menu.

\*: HID (Human Interface Device Profile) compliant keyboards / mouse can be used.

- Additional information about the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

1. Display the menu with **MENU**.
  2. Select [Setup](#) > [Bluetooth Setup](#) > [Devices](#) and press **OK** to access.
- 

### Devices

Searches the available device and displays the status.

- Place the device within 50 cm from the TV while registration is in progress.
- Turn the device on for registering. The setup for registration may be required depending on the device. Read the manual of the device.

#### Not paired:

The device is not registered. Register the device by following the on-screen instructions to use with this TV.

#### Connected:

The device is registered and you can use with this TV.

#### Not connected:

The device is already registered, but not connected to this TV. Check the device is turned on and set within the available range.

---

- This setup is not designed for the 3D Eyewear and Touch Pad Controller supporting Bluetooth wireless technology.

# Keyboard

## Keyboard

---

- Keyboards requiring the drivers are not supported.
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard.
- Some of the keys of keyboards may correspond to the operation of the remote control.

Keyboard	Remote Control
↑ / ↓ / ← / →	△ / ▽ / ◀ / ▶
Enter	OK
Backspace	RETURN
Esc	EXIT
0 - 9 / Character	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	AV
F5 / F6	Channel Down / Up
F7 / F8	Volume Down / Up
F9 / F10 / F11 / F12	Coloured buttons

# Settings

## Setting menu

### How to use

---

Various menus allow you to make settings for the picture, sound, and other functions.

1. Display the menu with **MENU**.
    - Displayed items vary depending on the input signal.
  2. Select the menu and press **OK** to access.
  3. Select the items and press **OK** to access.
    - Only available items can be selected.
    - You can also access from **eHELP** pressing  (red) at each item (if available).
- You can select from among alternatives with  $\triangle / \nabla$  and press **OK** to set.
  - You can adjust using the slide bar with  $\triangleleft / \triangleright$  and press **OK** to set.
  - You can go to the next screen with **OK**.
  - You can enter names or numbers freely for some items.
    - 1) Enter characters one by one with **Cursor buttons** and press **OK** to set.



- You can set characters using **Numeric buttons**.



 → [Functions > Setting characters > Using Numeric buttons](#)

- 2) Press **RETURN** to store.

- To reset the settings
  - To initialise picture or sound settings only, select [Reset Picture Defaults](#) in the Picture Menu or [Reset Sound Defaults](#) in the Sound Menu.
  - To initialise all settings, select [Shipping Condition](#).

 → [Functions > Shipping Condition](#)

- To exit the menu screen

**EXIT**

- To return to the previous screen


**RETURN**

= Note =

- Menu items and selectable options vary depending on the mode (TV mode, Media Player, Network services, etc.).
- Some settings in Picture menu may also affect the menu screen when watching content in 4K format.

## ■ Using control panel buttons

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Select and set with following control panel buttons.
  - Move the cursor / select from a range of options / select the menu item / adjust levels

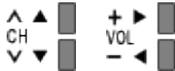

- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

# Picture

## Viewing Mode

---

Selects your favourite picture mode for each input.

([Dynamic](#) / [Normal](#) / [Cinema](#) / [THX Cinema](#) / [THX Bright Room](#) / [True Cinema](#)  
/ [Custom](#) / [Professional1](#) / [Professional2](#))

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

## Basic settings

---

[Backlight](#), [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#)

Adjusts the levels of these options according to your personal preference.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- [Sharpness](#) is not available when [1080p Pixel by 4pixels](#) is set to [On](#).
- 

### Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

---

### Vivid Colour

([On](#) / [Off](#))

Automatically adjusts colours to vivid ones.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

---

### Colour Remaster

([Max](#) / [Min](#) / [Off](#))

Displays the vivid images with the expanded colour gamut.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- Not valid in the following conditions:
    - Photo content
    - [Viewing Mode](#) is THX mode.
- 

### Rec.2020 Colour Remaster

([Max](#) / [Min](#) / [Off](#))

Displays the vivid images with the suitable colour gamut.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- This function is available only for Rec. 2020 and displayed instead of [Colour Remaster](#).
-

## Reversal Film Effect

(Max / Min / Off)

Provides the picture effect such as the reversal film for photo content.

 → Watching > For best picture > Basic settings

- For photo content
  - Not valid when [Viewing Mode](#) is THX mode
- 

## Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

 → Watching > For best picture > Basic settings

---

## Resolution Remaster

(Auto / Max / Mid / Min / Off)

Enhances picture resolution to make the image sharper.

 → Watching > For best picture > Basic settings

---

## Dynamic Range Remaster

(On / Off)

Enhances bright areas of the image closer to the original luminance making improved picture impact.

 → Watching > For best picture > Basic settings

- Not valid in the following conditions:
    - 3D
    - Multi window
    - [Adaptive Backlight Control](#) is set to [Off](#).
    - [Contrast Control](#) is set to [Off](#).
-

## Intelligent Frame Creation

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

 → Watching > For best picture > Basic settings

- Depending on the content, images may be noisy. To prevent the noise, change the setting.
  - Not valid in the following conditions:
    - Game Mode is set to On.
    - 1080p Pixel by 4pixels is set to On.
    - 1080p Pure Direct is set to On.
    - 4K Pure Direct is set to On.
- 

## 24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

 → Watching > For best picture > Basic settings

- This function is available only for 24p signal input and displayed instead of Intelligent Frame Creation.
- Not valid in the following conditions:
  - Game Mode is set to On.
  - 1080p Pixel by 4pixels is set to On.
  - 1080p Pure Direct is set to On.
  - 4K Pure Direct is set to On.

# Ambient Sensor

---

Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting condition.

(On / Off)

 → Watching > For best picture > Ambient Sensor

# Noise reduction settings

---

## Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

 → [Watching > For best picture > Noise reduction settings](#)

- Not valid in the following conditions:
    - [Game Mode](#) is set to [On](#).
    - [1080p Pixel by 4pixels](#) is set to [On](#).
    - [1080p Pure Direct](#) is set to [On](#).
    - [4K Pure Direct](#) is set to [On](#).
- 

## MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

 → [Watching > For best picture > Noise reduction settings](#)

- Not valid in the following conditions:
  - [Game Mode](#) is set to [On](#).
  - [1080p Pixel by 4pixels](#) is set to [On](#).
  - [1080p Pure Direct](#) is set to [On](#).
  - [4K Pure Direct](#) is set to [On](#).

## Advanced Settings

---

You can adjust and set up the detailed picture settings.

 → [Watching](#) > [For best picture](#) > [Advanced Settings](#)

This function is available when [Viewing Mode](#) is set to [Cinema](#), [True Cinema](#), [Custom](#) or [Professional1 / 2](#).

# Option Settings

---

## Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

 → Watching > For best picture > Option Settings

- Not valid in TV mode
- 

## Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

 → Watching > For best picture > Option Settings

- This function is available for interlaced signals (except in the mode of multi window, Network services or when **Game Mode** is set to **On**).
- 

## 1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

 → Watching > For best picture > Option Settings

- Not valid in the following conditions:
    - 3D
    - Multi window
    - **1080p Pixel by 4pixels** is set to **On**.
- 

## 4K Pure Direct

(On / Off)

Reproduces the original image quality in detail for 4K (HDMI) input signal.

 → Watching > For best picture > Option Settings

- Not valid in the following conditions:
    - 3D
    - Multi window
-

## 1080p Pixel by 4pixels

(On / Off)

Displays like pixel by pixel to make the image sharper for 1080p signal.

 → Watching > For best picture > Option Settings

- For HDMI
  - Not all image may be displayed as pixel by pixel precisely.
  - Not valid in the following conditions:
    - 3D
    - Multi window
- 

## HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

 → Watching > For best picture > Option Settings

- For HDMI
- 

## HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

 → Watching > For best picture > Option Settings

- For HDMI
- 

## 3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

 → Watching > For best picture > Option Settings

- For PAL / NTSC signal reception in TV mode or from composite connection

# Screen Settings

---

## 16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

- Not valid in the following conditions:
    - 4K content
    - Photo content
    - [Game Mode](#) is set to [On](#).
    - [1080p Pixel by 4pixels](#) is set to [On](#).
    - [1080p Pure Direct](#) is set to [On](#).
    - [4K Pure Direct](#) is set to [On](#).
    - Multi window
- 

## Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Zoom](#).

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

- Not valid in the following conditions:
    - 4K content
    - Multi window
- 

## Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

# 3D Settings

---

## 3D Mode

Selects the 3D format manually.

 → [Watching > 3D > 3D Mode Selection](#)

---

## 2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

 → [Watching > 3D > 3D Settings](#)

---

## 3D Adjustment

(On / Off)

Adjusts the 3D effect (except in [2D→3D](#) mode).

 → [Watching > 3D > 3D Settings](#)

---

## L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in [2D→3D](#) mode).

 → [Watching > 3D > 3D Settings](#)

---

## Safety Precautions

Displays the precautions for viewing 3D images.

 → [Watching > 3D > 3D Settings](#)

## Lock Settings

---

Locks the settings of [Professional1 / 2](#) for each input.

 → [Watching](#) > [For best picture](#) > [Lock Settings](#)

## Copy Adjustment

---

Copies the picture settings of [True Cinema](#), [Custom](#), [Professional1](#) or [Professional2](#) to those of the other input mode or Viewing Mode.

 → [Watching](#) > [For best picture](#) > [Copy Adjustment](#)

## Reset Picture Defaults

---

Resets the current Picture Viewing Mode to the default settings.

# Sound

## Mode

---

Selects your favourite sound mode for each input.

([Standard](#) / [Music](#) / [Ambience](#) / [User](#))

 → [Watching](#) > [For best audio](#) > [Sound mode](#)

# Basic settings

---

## Bass

Adjusts level to enhance or minimise lower, deeper sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Treble

Adjusts level to enhance or minimise sharper, higher sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Equaliser

Adjusts the frequency level to suit your favourite sound quality.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Balance

Adjusts volume level of right and left speakers.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Surround

([Virtual Surround](#) / [Off](#))

Selects surround sound settings.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Bass Boost

([On](#) / [Off](#))

Enhances the effect of bass sounds.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

# Volume settings

---

## Speaker Selection

(TV / Home Cinema)

Enables controlling the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

 → Watching > For best audio > Volume settings

- This function is available when the theatre speakers supporting VIERA Link function is connected to this TV.
- 

## TV Speaker

(On / Off)

Set to **Off** when using the external speakers.

 → Watching > For best audio > Volume settings

---

## Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

 → Watching > For best audio > Volume settings

---

## Volume Correction

Adjusts the volume of each individual channel or input mode.

 → Watching > For best audio > Volume settings

---

## Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

 → Watching > For best audio > Volume settings

# Voice Guidance Settings

---

## Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

 → [Watching > For best audio > Voice Guidance Settings](#)

- Not valid in multi window mode
- 

## Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Language

Changes language for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network content in web browser function.

 → [Watching > For best audio > Voice Guidance Settings](#)

# Audio Description

---

## Audio Description

(Auto / Off)

Narration settings for visually impaired users

 → Watching > For best audio > Audio Description

- Not valid in Analogue TV
  - Not valid in multi window mode
- 

## Volume

Adjusts the volume for Audio Description.

 → Watching > For best audio > Audio Description

- Not valid in Analogue TV
- 

## Speakers

(Mix / Standard)

Set to **Mix** to activate the description sound track from TV speakers.

 → Watching > For best audio > Audio Description

- Not valid in Analogue TV
- 

## Audio Selection

Selects between alternative languages for sound tracks (if available).

 → Watching > For best audio > Audio Description

- Not valid in Analogue TV

# Advanced settings

---

## MPX

Selects multiplex sound mode (if available).

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For Analogue TV
- 

## Digital Audio Preference

([Dolby D](#) / [MPEG](#))

Selects the initial setting for audio tracks.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- Not valid in Analogue TV
- 

## SPDIF Selection

([Auto](#) / [PCM](#))

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For digital TV, video content
- 

## PCM Optical Level

Adjusts the audio level of PCM output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals to equalise with that of the other audio types.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

---

## HDMI Input

([Digital](#) / [Analogue](#))

Selects to fit the input signal.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For HDMI

## Reset Sound Defaults

---

Resets the current Sound Mode to the default settings.

# Network

## Network Connection

---

Sets the network setting to use this TV in your network environment.

 → [Network](#) > [Network settings](#) > [Network Connection](#)

# Network Status

---

Displays and checks the network status (MAC Address, current network settings, etc.).

 → [Network](#) > [Network settings](#) > [Network Status](#)

# my Home Cloud Settings

---

Sets for an account to enjoy the cloud services.

 → [Network](#) > [Network settings](#) > [my Home Cloud Settings](#)

# VIERA Name

---

Sets your favourite name for this TV.

 → [Network](#) > [Network settings](#) > [VIERA Name](#)

## TV Remote App Settings

---

Sets to control the TV from network equipment (smartphone, etc.).

 → [Network](#) > [Network settings](#) > [TV Remote App Settings](#)

# Network Link Settings

---

Sets to control the TV with devices connected to the network.

 → [Network](#) > [Network settings](#) > [Network Link Settings](#)

## TV Anytime Settings

---

You can set timer programming with the network equipment (smartphone, etc.) from outside the home network.

 → [Functions](#) > [TV Anytime](#) > [How to use](#)

# File Sharing Settings

---

## File Sharing Server

(On / Off)

Sets to share the files between PC and devices connected to this TV.

 → [Media Player > Using Media Player > Sharing file](#)

---

## Network Device List

Lists the accessible network devices to play back the content in Media Player.

 → [Media Player > Using Media Player > Network device](#)

# Mirroring Settings

---

Settings for the mirroring function

 → [Functions](#) > [Mirroring](#) > [Mirroring Settings](#)

## Do Not Track Setting

---

Sets to notify websites about tracking your browsing activities.

 → [Network](#) > [Network settings](#) > [Do Not Track Setting](#)

## Other settings

---

### Software Update

Checks for available software updates from the Panasonic website.

 → [Network](#) > [Network settings](#) > [Software Update](#)

---

### New Software Message

(On / Off)

Selects whether to give a notification message when new software is found via network or not.

 → [Network](#) > [Network settings](#) > [New Software Message](#)

# Timer

## Off Timer

---

Sets the duration of time until the TV automatically goes into Standby mode.

(90 / 75 / 60 / 45 / 30 / 15 / Off (minutes))

 → [Watching](#) > [Basic](#) > [Off Timer](#)

## Timer Programming

---

Sets a timer to record forthcoming programmes.

 → [Recording > Timer Programming > Setting Timer Programming](#)

- Not valid in Analogue TV

# Clock Settings

---

## Mode

(Auto / Manual)

Selects the clock setting mode for this TV.

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

---

## Date

Sets the current date manually.

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

---

## Time

Sets the current time manually.

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

---

## Daylight Saving Time

Selects time offset from the standard time for Summer Time.

(+ 1 hour / + 1/2 hour / Off / Auto)

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

---

## Region Select

Selects the region where you live to adjust the standard time.

(NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania)

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

## Auto Standby

---

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

(On / Off)

 → Watching > Basic > Energy saving functions

## No signal Power off

---

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

(On / Off)

 → Watching > Basic > Energy saving functions

# Setup

## Eco Navigation

---

Automatically sets the TV to the most suitable energy-saving mode.

 → [Watching](#) > [Basic](#) > [Energy saving functions](#)

# Voice Control Settings

---

Settings for Voice Control function

 → [Functions](#) > [Voice Control](#) > [Settings](#)

# USB Device Setup

---

Formats the USB HDD or safely removes USB device.

 → [Recording > USB HDD setup > Setting for USB HDD](#)

# Recording Setup

---

Settings for the recording feature of the USB HDD

 → [Recording](#) > [Recording current programme](#) > [One Touch Recording](#)

# VIERA Touch Pad Controller

---

## Pairing

Registers Touch Pad Controller (supplied) to this TV.

 → [Functions > Touch Pad Controller > Pairing](#)

---

## Cursor Sensitivity

(Max / Mid / Min)

Adjusts the sensitivity of the cursor.

 → [Functions > Touch Pad Controller > Settings](#)

---

## Operation Guide

Displays the operation guide of Touch Pad Controller.

 → [Functions > Touch Pad Controller > Settings](#)

# Bluetooth Setup

---

Settings for the specific devices supporting Bluetooth wireless technology

 → [Functions](#) > [Bluetooth devices](#) > [Bluetooth Setup](#)

## Child Lock

---

Applies access control for channels or inputs to prevent unwanted access.

 → [Functions](#) > [Child Lock](#) > [Using Child Lock](#)

# Tuning Menu

---

## Favourites Edit

Creates a list of favourite channels.

 → [Watching > Tuning and editing channels > Favourites Edit](#)

- Not valid in Analogue TV
- 

## Channel List

Skips unwanted channels or edits channels.

 → [Watching > Tuning and editing channels > Channel List](#)

---

## Auto Tuning

Automatically searches for receivable channels.

 → [Watching > Tuning and editing channels > Auto Tuning](#)

---

## Manual Tuning

Searches for channels manually.

 → [Watching > Tuning and editing channels > Manual Tuning](#)

---

## Update Channel List

Updates the channel list while keeping your settings.

 → [Watching > Tuning and editing channels > Update Channel List](#)

- Not valid in Analogue TV
- 

## New Channel Message

(On / Off)

Selects whether to give a notification message when a new channel is found or not.

 → [Watching > Tuning and editing channels > New Channel Message](#)

- Not valid in Analogue TV
- 

## Signal Condition

Checks the signal condition.

 → [Watching > Tuning and editing channels > Signal Condition](#)

- Not valid in Analogue TV
-

## Add TV Signal

Adds the TV mode.

 → [Watching](#) > [Tuning and editing channels](#) > [Add TV Signal](#)

---

= Note =

The settings in [Tuning Menu](#) are applicable only for the selected TV mode.  
The menu name varies depending on the TV mode. ([Digital TV Tuning Menu](#) / [Analogue TV Tuning Menu](#))

# Language

---

## OSD Language

Changes language for on-screen displays.

 → [Watching](#) > [Basic](#) > [Language](#)

# Display Settings

---

## Teletext

This item is not used for this model.

---

## Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#), banner, etc.

 → [Watching](#) > [External equipment](#) > [Watching external input](#)

---

## Banner Display Timeout

(10 / 9 / 8 / 7 / 6 / 5 / 4 / 3 / 2 / 1 / 0 (No display) (seconds))

Sets how long the information banner stays on screen.

 → [Watching](#) > [Basic](#) > [Information banner](#)

---

## Smart Banner

(On / Off)

Displays the introduction banner for the internet service.

 → [Watching](#) > [Basic](#) > [Information banner](#)

---

## Playing Time Display

(On / Off)

Set to [On](#) to display a time period of continuous use in Game Mode on the top right of the screen every 30 minutes.

 → [Watching](#) > [External equipment](#) > [Watching external input](#)

- This function is available when [Game Mode](#) is set to [On](#).
- 

## Info Frame at Power on

(On / Off)

Displays Info Frame when the TV is turned on.

 → [Functions](#) > [Info Frame](#) > [Settings](#)

---

## Notification

(On / Off)

Displays a notification message.

## HDCP Setting

---

Select a version of HDCP according to the content you watch.

(Auto / 2.2 / 1.4)

 → Watching > 4K resolution > HDCP Setting

- For HDMI

## HDMI Auto Setting

---

Set to [Mode1](#) when the image in HDMI input is not displayed properly.

([Mode1](#) / [Mode2](#))

 → [Watching > 4K resolution > HDMI Auto Setting](#)

- For HDMI

# VIERA Link Settings

---

## VIERA Link

(On / Off)

Sets to use VIERA Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Preparations](#)

---

## Power on Link

(On / Off)

Sets to use Power on Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Power on Link](#)

---

## Power off Link

(On / Off)

Sets to use Power off Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Power off Link](#)

---

## Standby Power Save

(On / Off)

Controls the connected equipment to reduce power consumption in Standby.

 → [Functions > VIERA Link "HDAVI Control™" > Standby Power Save](#)

- This function is available when [VIERA Link](#) is set to [On](#) and [Power off Link](#) is set to [On](#).
- 

## Intelligent Auto Standby

(On / Off)

Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption.

 → [Functions > VIERA Link "HDAVI Control™" > Intelligent Auto Standby](#)

- This function is available when [VIERA Link](#) is set to [On](#).

# Data Service Application

---

## Service

(Auto Start On / Auto Start Off / Off)

Sets to use Hybrid Broadcast Broadband TV application.

- Not all the data services are available depending on the area and broadcaster.

 → [Functions > Data Service Application > Using Data Service Application](#)

- Not valid in Analogue TV
- 

## Store Cookie

(On / Off)

Sets to store the information from a data service to the TV in order to access again quickly.

 → [Functions > Data Service Application > Cookie](#)

---

## Delete Cookie

Deletes all the information from a data service.

 → [Functions > Data Service Application > Cookie](#)

# System Menu

---

## Shipping Condition

Resets all settings to the original condition.

 → [Functions](#) > [Shipping Condition](#) > [Shipping Condition](#)

---

## System Update

Downloads new software to this TV.

 → [Functions](#) > [Updating the TV Software](#) > [Auto update](#)

---

## Licence Menu

Displays the software licence information.

## Other Settings

---

### USB Charge in Standby

(On / Off)

Enables charging from the USB port in Standby mode.

- Available for charging the rechargeable 3D Eyewear (optional accessory)
  - This function is available when in Standby mode.
- 

### Power Save

(On / Off)

Reduces brightness of the picture to economise on power consumption.

# Support

## Help menu

### Using Help menu

---

1. Display the menu with **MENU**.
  2. Select **Help** and press **OK** to access.
  3. Select **About Firefox OS / TV Self Test / System Information / Device Information** and press **OK** to access.
- 

#### [About Firefox OS](#)

Displays the information about Firefox OS.

---

#### [TV Self Test](#)

Makes a diagnosis of picture or sound problems.

Follow the on-screen instructions.

---

#### [System Information](#)

Displays the system information of this TV.

---

#### [Device Information](#)

Displays the device information of this TV.

# FAQs

## Picture

---

Before requesting service or assistance, please follow these simple guides to solve the problem. Also makes a diagnosis of picture problem in [TV Self Test](#).

 → [Support > Help menu > Using Help menu](#)

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

### Black and white picture

---

- Check that the output of the external equipment matches the input of the TV.
- 

### Chaotic image, noisy

---

- Set [Noise Reduction](#) and [MPEG Remaster](#) in the Picture Menu to remove noise.

 → [Watching > For best picture > Noise reduction settings](#)

- Check nearby electrical equipment (car, motorcycle, fluorescent lamp).
- 

### No image is displayed

---

- Check the correct input mode is selected.
- Check the setting of [AV \(COMPONENT / VIDEO\)](#) in [Input Selection](#) to match the signal being output by the external equipment.

 → [Watching > External equipment](#)

- Is [Backlight](#), [Contrast](#), [Brightness](#) or [Colour](#) in the Picture Menu set to the minimum?

 → [Watching > For best picture > Basic settings](#)

- Check all required cables and connections are firmly in place.
- 

### Blurry or distorted image (no sound or low volume)

---

- Reset channels.

 → [Watching > Tuning and editing channels > Auto Tuning](#)

---

## White spots or shadow images (noise)

---

- Check the position, direction, and connection of the aerial.
- 

There may be red spots, blue spots, green spots and black spots on the screen

---

- An image on a TV screen is created by many small groups of dots known as pixels (which is similar to the image in a newspaper). It also naturally follows that higher panel resolutions contain more pixels. To create a colour image, each pixel consists of three tiny coloured dots (known as sub-pixels), one each of red, green and blue. Each one of these dots is precisely controlled by the electronics of the TV to produce the picture. Whilst Panasonic maintains the highest standards in manufacturing technology and processes in the construction of these panels, there are a number of allowable pixel / subpixel failures that still allow the panel to be defined as a good panel. It is not possible to guarantee absolutely no pixel loss.
- 

**Shop** appears on screen at switch on

---

- **Shop** was selected in first time Auto Tuning when the TV is turned on for the first time. Reset settings in **Shipping Condition**, then select **Home** in first time Auto Tuning.



→ **Functions > Shipping Condition > Shipping Condition**

## Digital TV

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

- Due to the digital reception technologies involved, quality of the Digital TV signals may be relatively low in some cases, despite good reception of Analogue TV channels.
- 

Unable to receive signals with a high-performance aerial

---

- Install an aerial individually for the TV and VCR (or use a splitter).
- 

Interference or frozen / disappearing image

---

- Check [Signal Condition](#). If the level of [Signal Quality](#) is low, check aerial.  
 → [Watching > Tuning and editing channels > Signal Condition](#)
- Turn the TV off with Mains Power On / Off switch, then turn it on again.

# Sound

---

Before requesting service or assistance, please follow these simple guides to solve the problem. Also makes a diagnosis of sound problem in [TV Self Test](#).

 → [Support](#) > [Help menu](#) > [Using Help menu](#)

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

## No sound is produced

---

- Is “Sound mute” active? Press **MUTE** to switch sound mute on or off.
- Is the volume set to the minimum?
- Check connections and setting of external equipment.

 → [Watching](#) > [External equipment](#)

- Ensure that [Speaker Selection](#) is set to [TV](#).

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

 → [Functions](#) > [VIERA Link “HDAVI Control™”](#) > [Speaker Selection](#)

- Ensure that [TV Speaker](#) is set to [On](#).

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Sound level is low or sound is distorted

---

- Sound signal reception may be poor.
- Set [MPX](#) in the Sound Menu to [Mono](#). (Analogue TV)

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

## 3D

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

Cannot view 3D images

Cannot register a 3D Eyewear to the TV

---

- Check the 3D Eyewear status as follows:
    - Has the 3D Eyewear been switched on and set to 3D mode?
    - Is the battery installed correctly?
      -  → [Watching > 3D > 3D Eyewear - Replacing battery](#)
    - Check the remaining battery level of the 3D Eyewear. (Battery status is displayed on the screen when the 3D Eyewear is turned on.) When the battery is running low, replace it with a new one.
    - Use the 3D Eyewear within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacle between the TV and the eyewear, or the surrounding environment.)
    - Register again.
      -  → [Watching > 3D > 3D Eyewear - Registration](#)
    - Does the 3D Eyewear support Bluetooth wireless technology?
  - Some 3D image signals may not be automatically recognised as 3D images. Set [3D Mode Selection](#) to match the picture format.
    -  → [Watching > 3D > Viewing 3D](#)
  - For some people, the 3D images may be difficult to see, or cannot be seen, especially among users who have a different level of eyesight between the right and left eyes. Take necessary measures (wearing glasses, etc.) to correct your eyesight before use.
- 

3D Eyewear is turned off automatically

---

- Check that there are no obstacles between the TV and the 3D Eyewear.
-

There is something wrong with the 3D images

---

- Check the setting of [L/R Picture Swap](#).

 → [Watching > 3D > 3D Settings](#)

---

The indicator lamp does not light up when pressing Power button on the 3D Eyewear

---

- The battery may be running low or flat. Replace it with a new one.

 → [Watching > 3D > 3D Eyewear - Replacing battery](#)

# HDMI

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

## Sound is unusual

---

- Set the sound setting of the connected equipment to “2ch L.PCM”.
  - Check the [HDMI Input](#) setting in the Sound Menu.  
 → [Watching > For best audio > Advanced settings](#)
  - If digital sound connection has a problem, select analogue sound connection.  
 → [Watching > External equipment > HDMI features](#)
- 

## Pictures from external equipment are unusual when the equipment is connected via HDMI

---

- Check the HDMI cable is connected properly.  
 → [Watching > External equipment > External connection](#)
- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment.  
 → [Watching > External equipment > Valid input signals](#)
- Use equipment compliant with EIA/CEA-861/861D.
- Set [HDMI Auto Setting](#) in the Setup Menu to [Mode1](#).  
 → [Watching > 4K resolution > HDMI Auto Setting](#)

# Network

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

## Cannot connect to the network

---

- Check the LAN cable or wireless LAN is connected properly.  
 → [Network > Network connections](#)
  - Check the connections and settings.  
 → [Network > Network connections](#)  
 → [Network > Network settings](#)
  - Check the network equipment and network environment.
  - The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually.  
 → [Network > Network settings](#)
  - The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV and set the router to use it.  
 → [Network > Network settings > Network Status](#)
  - If the problem persists, consult your Internet Service Provider or telecommunications company.
- 

## Cannot select the file during DLNA operations

---

- Is media server of the connected equipment prepared?  
 → [Network > DLNA > In-House streaming](#)
  - Check applicable data format.  
 → [Network > Technical information](#)
  - Check the settings of [Network Link Settings](#).  
 → [Network > Network settings > Network Link Settings](#)
-

## Cannot operate internet content

---

- Check the connections and settings.
  -  → Network > Network connections > Internet connection
  -  → Network > Network settings
- The server or connected line may be busy now.

## Other

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

### VIERA Link function does not work and an error message appears

---

- Check the connections.



→ [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Turn the connected equipment on and then switch the TV on.



→ [Functions > VIERA Link "HDAVI Control™"](#)

---

### Parts of the TV become hot

---

- Parts of the TV may become hot. These temperature rises do not pose any problems in terms of performance or quality.
- 

### Overcurrent error message appears

---

- The connected USB device may cause this error. Remove the device and turn the TV off with Mains Power On / Off switch, then turn it on again.
  - Check foreign objects are not inside the USB port.
- 

### An error message appears

---

- Follow the message's instructions.
  - If the problem persists, contact your local Panasonic dealer or the authorised service centre.
-

## Touch Pad Controller does not work or cannot be registered

---

- Are the batteries installed correctly?
- The batteries may be running low. Replace them with new ones.
- Register again.

 → [Functions > Touch Pad Controller > Settings](#)

- Use Touch Pad Controller within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacle between the TV and the controller, or the surrounding environment.)
- 

## Voice Control function does not work

---

- Voice Control function may not work properly depending on the pronunciation, noise and network environment.
- For details of the Voice Control function

 → [Functions > Voice Control](#)

---

## LED does not turn to red in Standby mode

---

- LED turns to orange in Standby mode in the following conditions:
    - Recording is in progress
    - [Timer Programming](#) is set.
    - [DLNA Server](#) is set to [On](#).
    - [Powered On by Apps](#) is set to [On](#).
    - [Home Streaming](#) is set to [Always](#).
    - [TV Anytime](#) is set to [On](#).
    - [Powered On by Easy Mirroring](#) is set to [On](#).
- 

When pushed with a finger, the display panel moves slightly and makes a noise

---

- There is a little gap around the panel to prevent damage to the panel. This is not a malfunction.

# Maintenance

## Care and Cleaning

---

First, remove the mains plug from the mains socket.

### ■ Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to remove dirt or fingerprints.

For stubborn dirt:

- (1) First clean the dust from the surface.
- (2) Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).
- (3) Wring out the cloth firmly. (Please note, do not let liquid enter the TV inside as it may lead to product failure.)
- (4) Carefully wipe moisten and wipe away the stubborn dirt.
- (5) Finally, wipe away all the moisture.

= Caution =

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

### ■ Mains plug

- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

# Optional accessories

## 3D Eyewear

---

### ■ 3D Eyewear

- If you need 3D Eyewear additionally, please purchase Panasonic optional accessory.
- Use Panasonic 3D Eyewear supporting Bluetooth wireless technology for active shutter 3D.
- For information about 3D Eyewear:  
<http://panasonic.net/viera/support> (English only)

## Wall-hanging bracket

---

### ■ Wall-hanging bracket

Choosing to wall mount the TV shall be done at the owner's risk. Always use a qualified installer to perform a TV wall bracket installation. Incorrect fitting may cause equipment to fall, resulting in injury and product damage. Any such damage will void your warranty.

- Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

= Warning =

- When optional accessories such as wall brackets, etc. are used, always read and follow the manufacturer's installation and usage instructions.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- When installing wall brackets you must ensure the wall bracket is not electrically grounded to metal wall studs. Always ensure that there are no electrical cables, pipes, etc. in the wall before you begin the wall bracket installation.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

# Licence

## Licence

---

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

---

THX and the THX Logo are trademarks of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

---

“RealD 3D” is a trademark of RealD.

---

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

---

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

---

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

---

Mac is a trademark of Apple Inc.

---

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

---

x.v.Colour™ is a trademark.

---

HDAVI Control™ is a trademark of Panasonic Corporation.

---

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

---

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

---

Speech Powered by Dragon

2002-2015 Nuance Communications, Inc. All rights reserved.

---

“PlayReady” is a trademark registered by Microsoft. Please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

---

Firefox® OS is a registered trademark of the Mozilla Foundation.

---

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) Firefox OS is powered by Mozilla,
- (4) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE Version 2.1 (LGPL V2.1) and/or,
- (5) open sourced software other than the software licensed under the LGPL V2.1.

About the software categorized as (3), please refer to the “About Firefox OS” menu.

The software categorized as (4) and (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the “Software License” menu on this product.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: [cdrequest@unipf.jp](mailto:cdrequest@unipf.jp)

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/EUIDTV15/>

