 


Panasonic®

Model No.:
TH-65PX950DX
TH-75PX950DX

Operating Instructions

LED TV

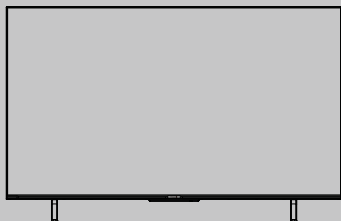

Information on hazardous constituents as specified in sub-rule 1 of rule 16 in electrical and electronic equipment.

Declaration of Conformity with the requirements of the E-Waste (Management) Amendment Rules 2023 with the rule 16 limits with respect to lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls, polybrominated diphenyl ethers;

The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the E-Waste (Management) Second Amendment Rules 2023:

1. Lead (Pb) - not over 0.1% by weight;
2. Cadmium (Cd) - not over 0.01% by weight;
3. Mercury (Hg) - not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) - not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) - not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) - not over 0.1% by weight;



For the purpose of recycling to facilitate effective utilization of Resources, please return this product to a nearby authorized collection center, registered dismantler or recycler, or Panasonic service center when disposing of this product.

Please see the Panasonic website for further information on collection centers, etc., or call the customer care toll-free number.

<https://www.panasonic.com/in/corporate/e-waste-management.html>

English

Helpline No. : 080-6984-1333
E-mail: helpline@in.panasonic.com

 Google TV

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, and Chromecast built-in and other related marks are trademarks of Google LLC.

 **HDMI® 2.1**
HIGH-DEFINITION MULTIMEDIA INTERFACE
ALLM

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

 **Dolby**
VISION IQ

 **Dolby**
ATMOS

Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Dolby Vision IQ is a trademark of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories, Confidential unpublished works.
Copyright © 1992-2024 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, TruSurround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

Table of Contents

Chapter 1: Introduction

Warning	3
Use Environment	4
Cleaning	4
Hanging the TV Set on the Wall	4
Caution	4
Symbol	6
Precautions for Using Remote Control	6
Installing/Removing Remote's Batteries	6
Standard Accessories	7
Mounting on a Wall	7
Pedestal Installation.....	8

Chapter 2: Basic Features

TV Terminals	9
TV Controls	10
Remote Control.....	11
How to Pair Bluetooth Remote Control with the TV	12
Initial Setup	12
Selecting the Input Source	14
Settings	14

Chapter 3: Smart Features

Home Page.....	18
Google Assistant.....	18
Google Cast	18
Disclaimer about Using Google TV	20
Multimedia Player	20

Chapter 4: Technical Information

Maintenance	22
Troubleshooting	22
Do's & Don't:	22
Specifications	24
Certificate of Warranty	25

ATTENTION

This product is qualified for the BEE Star rating in the **"Home"** Mode. The Objectives of Star Labeling Program is designed to promote energy efficient products and practices. When the television is initially set up, it is designed to meet the BEE Star Labeling requirements while maintaining optimum picture quality.

- Changes to certain functionalities of this television (Picture /sound etc.) may change the power consumption.
- Depending upon such changed setting (eg., Shop mode), the power consumption may vary which possibly could exceed the stated energy consumption.

To reset the television to Star rating qualified settings, select **"Home"** mode in initial Setup.

Chapter 1: Introduction

⚠ Warning

Handling the mains plug and lead

Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)

Ensure that the mains plug is easily accessible.

Do not touch the mains plug with a wet hand. (This may cause electrical shock.)

Do not use any mains lead other than that provided with this TV. (This may cause fire or electrical shock.)

 
Do not damage the mains lead. (A damaged lead may cause fire or electrical shock.)

- Do not move the TV with the lead plugged in the socket outlet.
- Do not place a heavy object on the lead or place the lead near a high-temperature object.
- Do not twist the lead, bend it excessively or stretch it.
- Do not pull on the lead. Hold onto the mains plug body when disconnecting the lead.
- Do not use a damaged mains plug or socket outlet.
- Use the TV in moderate climates.

If you find any abnormality, remove the mains plug immediately!



110 - 240V ~ 50 / 60 Hz



- Mains plug types vary between countries.

Power source

- This TV is designed to operate on
- 110 - 240V ~ 50/60 Hz
- Table-top use / Wall hanging

Do not insert external objects into the TV

- Do not allow any objects to drop into the TV through the air vents. (Fire or electrical shock may result)

Do not use external voltage stabilizer with the TV set

- Inferior quality stabilizer may cause damage to the TV.
- Warranty is not valid if external stabilizer is used.

Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base

- The TV may fall off or tip over.

Do not remove covers and never modify the TV by yourself

- Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside. (High-voltage components may cause serious electrical shock.)
- Have the TV checked, adjusted, or repaired at your local Panasonic dealer.
- Please refer the information on exterior back enclosure for electrical and safety information before installing or operating the apparatus.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Use only the dedicated pedestals/ mounting equipments

- Use an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- When mounting the TV on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature.
- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery, etc.).

Do not expose to rain or excessive moisture

- To prevent damage which might result in electrical shock or fire, do not expose this TV to rain or excessive moisture. This TV must not be exposed dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV.

Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Use Environment

⚠ Warning: Stability Hazard

 
A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.

Cleaning

- Do not spray water or detergent directly on TV screen for cleaning purpose. Leaking liquid substance will cause damage to TV.
- Be careful of cats, rats or other animals that may urinate on the TV (front and rear). It may lead to TV failure.
- Do not use sharp or hard objects (finger nails, knife and etc.) on TV screen. This may cause damage to the screen surface.

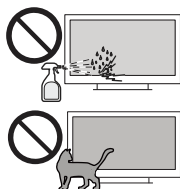

Hanging the TV Set on the Wall

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety.

⚠ Caution

1. Read these instructions---All operating instructions must be read and understood before the product is operated.

2. Keep these instructions---These safety and operating instructions must be kept in a safe place for future reference.

3. Read all warnings---All warnings on the product and in the instructions must be observed closely.

4. Follow all instructions---All operating instructions must be followed.

5. Attachments---Only use attachments/ accessories specified by the manufacturer. Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in accidents.

6. Power source---This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system.

Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

7. Power cord protection---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

8. Overloading---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.

9. Servicing---Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10. Damage requiring service---If any of the following conditions occurs, unplug the power cord from the AC outlet, and request a qualified service person to perform repairs.

- a. When the power cord or plug is damaged.
- b. When a liquid is spilled on the product or when objects have fallen into the product.

c. When the product has been exposed to rain or water.

d. When the product does not operate properly as described in the operating instructions.

Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.

e. If the product has been dropped or the cabinet has been damaged in any way.

f. When the product displays an abnormal condition or exhibits a distinct change in performance. Any noticeable abnormality in the product indicates that the product needs servicing.

11. Replacement parts---In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.

12. Safety checks---Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

13. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



14. Careful move---When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley. Never attempt to move the TV unless the AC power cord has been disconnected.

 
15. Lightning---Unplug this apparatus during lightning storms or when unused for long periods of time. For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.

16. Panel protection--- Kindly remove the display panel protection film before use. The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the display panel breaks.

17. Pixel defect---The display panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

18. Do not block the rear air vents

- Adequate ventilation is essential to prevent failure of electronic components.
 - Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths and curtains.
 - We recommended that a gap of at least 10 cm is left all around this TV even when placed inside a cabinet or between shelves.
 - When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
 - If pedestal is not used, ensure the vents is the bottom of the TV are not blocked.
 - Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site.
- Minimum distance

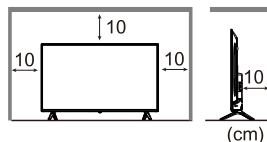

Note: The picture is only for reference.

19. Do not ingest the battery, Chemical Burn Hazard--- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- 20. Listening**— Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.

Symbol

- For the terminals marked with symbol of “⚡” may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the used of ready-made leads or cords.
-  Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection. (Only for Class I appliance)
- If the product has the symbol  in its rating label and the power cord has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The following information are recommended to be included where applicable:

~ Refers to alternating current(AC).

— Refers to direct current(DC).

 Refers to Class II equipment.

 Refers to stand-by.

| Refers to power ON.

⚡ Refers to dangerous voltage.

 Refers to Class I equipment.



 
- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

Precautions for Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will do not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.

Installing/Removing Remote's Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

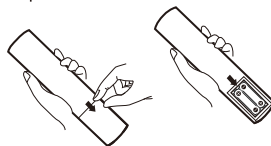

Note: The picture is only for reference.

⚠ Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Replace only with same or equivalent type. Do not mix different battery types (such as alkaline and manganese batteries) .
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.
- Ensure batteries are replaced correctly with the same or equivalent type, there is danger of explosion and fire if battery is reversed or incorrectly replaced.
- Do not disassemble or modify the remote control.

Standard Accessories

Remote Control



Pedestal (2)



Screws



Batteries (2) (AAA size)



Operating Instructions



 
Wall Mount Installation Manual



Wall Mount Kit Box



AV Converting Cable



Note:

- 1) The pictures are only for reference.
- 2) Accessories may not be placed all together. Take care not to throw them away unintentionally.
- 3) This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

Mounting on a Wall

Please read wall mount installation manual carefully before operating this product



Warning

- Failure to use a Panasonic bracket or attempting to mount the unit yourself is done at the consumer's own risk. Always consult a qualified technician for installation. Improper fitting may cause the equipment to fall, leading to injury or product damage. Damage resulting from unprofessional installation will void the warranty.
- When using any optional accessories or wall-mounting brackets, always follow the provided instructions carefully.
- Installation requires two or more qualified technicians. Do not attempt to install the wall mount by yourself, as this may result in product damage or personal injury.
- A qualified technician must determine the installation position to ensure it can support the TV's weight and withstand external shocks and vibrations.
- The installation surface must be strong enough to bear external forces. The wall mount should be installed on a solid, vertical wall perpendicular to the floor. Do not install the wall mount on the ceiling, a slanted surface, or a wall with decorations or insufficient structural strength.
- To avoid damage or injury, install the wall mount in a location out of the reach of children.
- Do not install the wall mount in environments with poor conditions, such as areas with heavy oil, smoke, wind, sand, moisture, heat sources, vibration, impact, strong electrical fields, magnetic fields, or where flammable gas may leak.
- During installation, ensure that all parts, especially screws, are tightly secured to prevent the product from falling or causing injury due to loose components. Screws must be inserted into the wall at a depth of at least 50mm.
- Read and fully understand the installation manual before proceeding. Improper installation may result in product damage or personal injury and will not be covered under warranty.
- Do not mount the unit directly beneath ceiling lights (e.g., spotlights or halogen lights) that emit high heat, as this may warp or damage plastic components of the TV.
- Use caution when attaching wall brackets. Wall-mounted equipment must not be grounded through internal wall metal. Ensure no electrical cables or pipes are present behind the wall before drilling or mounting the bracket.
- To prevent injury or accidents, remove the TV from its wall-mounted position when it is no longer in use.

Pedestal Installation



Warning

Do not disassemble or modify the pedestal.

- Doing so may cause the TV to fall, resulting in damage to the unit and possible personal injury.



Caution

Use only the pedestal provided with this TV.

- Using an incompatible pedestal may cause the TV to fall, leading to damage or injury.

Do not use the pedestal if it is warped or physically damaged.

- Continued use under such conditions may result in the TV falling and causing personal injury. Please contact your local Panasonic dealer for assistance.

Ensure all screws are securely tightened during assembly.

- Failure to properly tighten screws may result in insufficient support for the TV, increasing the risk of the unit falling and causing injury or damage.

Ensure the TV is placed in a stable position to prevent tipping.

- The TV may fall if knocked or if children climb on the pedestal, potentially causing personal injury.

Two or more people are required to install or remove the TV.

- Attempting to move the TV alone may result in dropping the unit and causing injury.

Follow the specified procedure when removing the pedestal from the TV.

- Improper removal may result in the TV or pedestal falling and becoming damaged, with potential risk of personal injury.

Note: Illustrations in this manual are for reference only and may differ from the actual product appearance.

 
Removing the pedestal from the TV

To prepare the TV for wall mounting or repackaging, remove the pedestal as follows:

- Remove the assembly screws securing the pedestal to the TV.
- Carefully detach the pedestal from the TV.


- Please remove the accessory bag from the package and verify that all listed components are present. If any parts are missing or damaged, contact your local Panasonic dealer immediately.

- Take out the TV carefully, put it (screen downward) on a stable and flat table with a soft cloth or cushion on it. For 100 inch, please use handle of top back side.

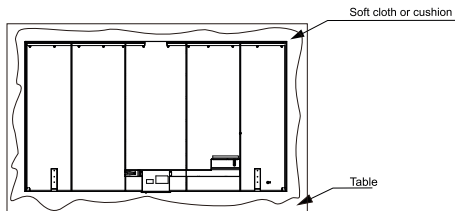


- Connect the TV and base by putting and fastening matched screws into the holes.

 
65"

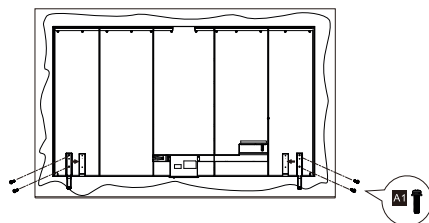

75"

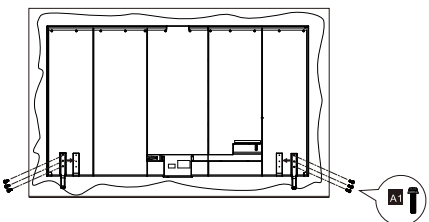 

 Note: Please pay attention to distinguish the front and back of stand.

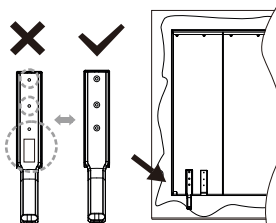

Note: The pictures are only for reference.

65" Screw : (M4xL16)x 4	75" Screw : (M4xL17)x 6


Chapter 2: Basic Features

TV Terminals

Note:

- 1) The pictures are only for reference.
- 2) The positions of terminals may vary by different models.

 Back View

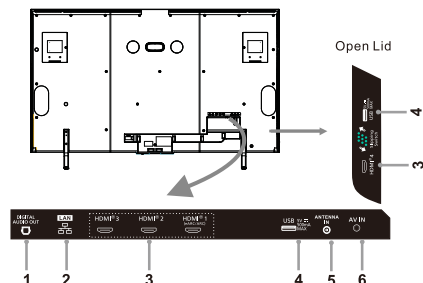


1. DIGITAL AUDIO OUT

Connect an optical cable to output the TV's digital audio signal to a compatible audio receiver.




2. LAN

 Wired network port.



3. HDMI IN

 Receive HDMI input signal from the connected HDMI device.

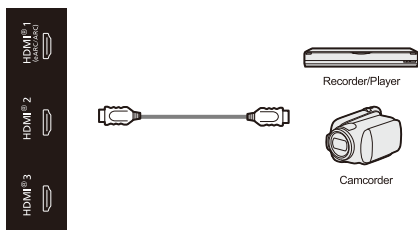

Note:

- 1) If the external device has a DVI output only, use a DVI to HDMI adapter cable to connect to the HDMI terminal.

2) HDMI1 supports ARC(Audio Return Channel) function, and you can connect ARC-enabled device with the TV by HDMI1 terminal.

4. USB

 
Connect USB devices to the TV.



Note: Never remove the USB device if TV is on or turn off the TV while inserting the USB device.

5. ANTENNA IN

Connect a coaxial cable to receive signal from the antenna or cable.




Note:

- 1) Do not place the RF cable under the TV.
- 2) To obtain the optimum quality of picture and sound, an aerial, correct cable (75Ω coaxial) and correct terminal are required.
- 3) If a community antenna system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- 4) Your local Television Service Provider or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- 5) Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of the customer.


6. AV IN

 Receive audio and video signal from signal source such as DVD.

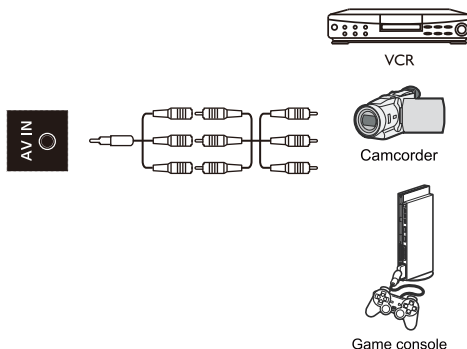

TV Controls

 ■ Power Connection

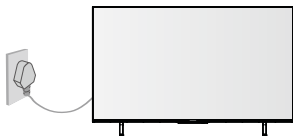

Note: The picture is only for reference.

 
Connect the power cord to the TV and the power outlet (110-240V ~ 50/60Hz).

■ Turn on or turn off the TV

1. Connect the power cord to the power outlet and the TV.
2. In standby mode, press **POWER** to turn on the TV.
3. In working status, press **POWER** to turn the TV to standby mode.
4. Disconnect the power cord to power off the TV completely.

■ Power Indicator and Far Field Voice

Front View



1. TV Control Button

* In standby mode:

Tap TV control button to turn on the TV.

* In working status:

Tap TV control button to call out the following menu of soft keyboard. Inside it, tap TV control button to move the cursor and select the desired item. Long press (for more than 3 seconds) TV control button to enter or execute the selected item.



2. Remote Sensor

Receive the signal transmitted by the remote control.

3. Power Indicator

Indicate the status of the TV power.

* Lit in Red: Standby mode.

 
* Lit in Green: Working status.

* Unlit: Power off.

4. Far Field Microphone

Microphones of far field voice function. It is best to keep yourself within 3 meters away from the far field microphones while using the far field voice function.

Note: Press the MIC several times, until to appear following picture, select "Yes, I'm in", hands-free is available.

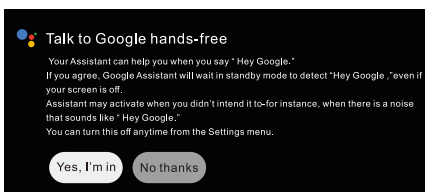

5. Far Field Indicator

Indicate the status of far field microphones and far field voice function.

* Lit in white: far field microphones are turned on, and far field voice function is being used.

* Unlit: far field microphones are turned on, but far field voice function is not being used.

* Lit in orange: far field microphones are turned off.

6. Switch of Far Field Microphones

Turn on or turn off the microphones of far field voice function. Only after turning on the far field microphones, successfully connecting your TV to the network and signing in to your Google account, you can start to use the far field voice function by saying the hotword: "Ok Google" or "Hey Google".

 
7. Light sensor

When using Dolby Vision IQ function, sense ambient light.

Remote Control

Note:

- 1). The picture is only for reference.
- 2). The image, buttons or functions of remote control may vary depending on the region, model, app or source.
- 3). Some DTV-related buttons may not be applicable due to non-availability of DTV signal in some areas.

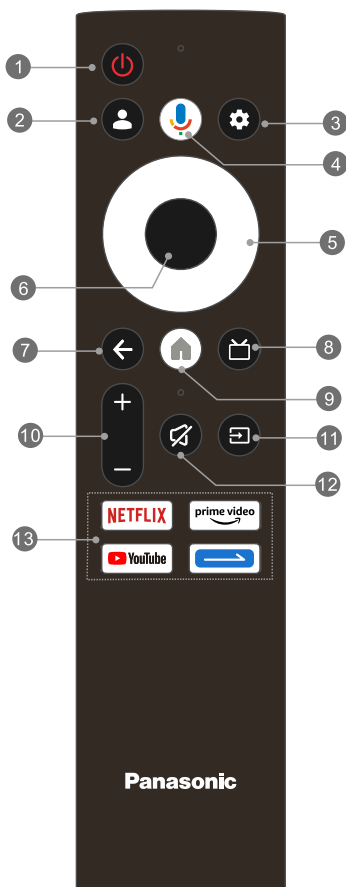

1. POWER ():

Turn on the TV or to standby mode.

2. User Account ():

Manage user account.

3. SETTING ():

Press to open the dashboard.

4. MIC ():

Start talking to Google Assistant of the TV.

5. UP/DOWN/LEFT/RIGHT (/ / /):

Navigate the menu to select what you want.

6. OK:

Confirm or enter the selected content.

7. BACK ():

Back to the upper-level menu.

8. Live TV ():

Access the EPG interface in DTV mode.

9. HOME ():

Enter the home page.

10. Volume Up/Down (+/-) :

Increase or decrease the sound volume.

11. SOURCE ():

Press to enter Source, Shortcuts and Recent.

12. MUTE ():

Mute or restore the sound.

13. APP Buttons:

Access the specific applications directly and quickly.

How to Pair Bluetooth Remote Control with the TV

Note:

- 1) The pictures are only for references.
- 2) Some screens may vary depending on software version.
- 3) This is a Bluetooth remote control. Before using it, please pair it with the TV.

■ Pair Bluetooth Remote Control with the TV

Press Remote control  button to enter pairing with TV. Once has been connected ,will show green "✓" as following picture.



 
 
Initial Setup

When you turn on the TV for the first time, there will show a wizard to guide you to finish the following initial settings:


Step 1: Press button  Connect the Bluetooth remote control. If you haven't a Bluetooth remote control, please just skip it.




Step 2: Select the language and country as you need.

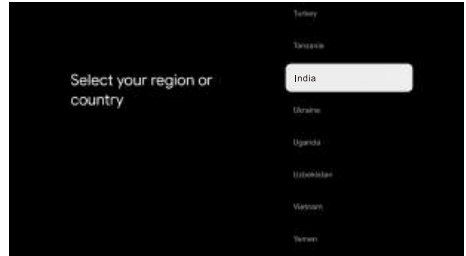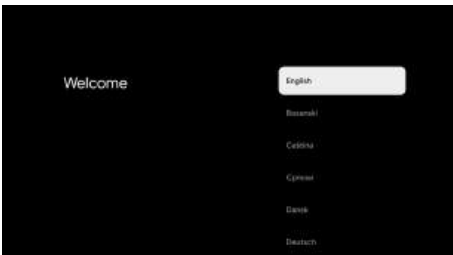

 
Step 3: Select to Set up Google TV or Set up basic TV.

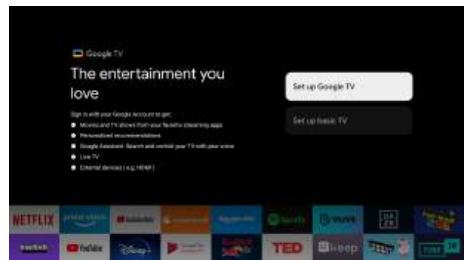

 
Step 4: Select your Wi-Fi network and Sign in using your Google Account

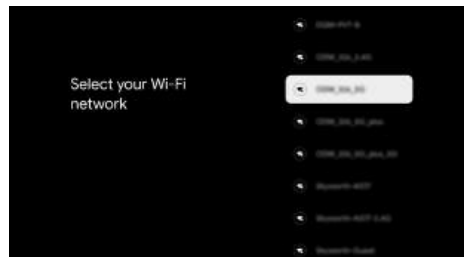

 
Step 5: Accept the Google Terms of Service.

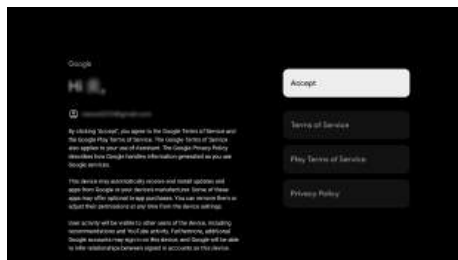

 
Step 8: Choose your services.

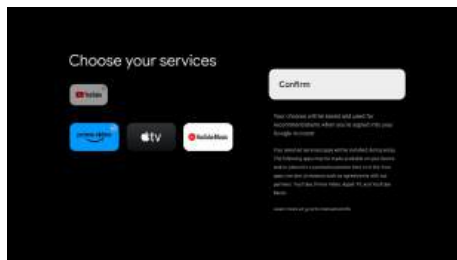

 
Step 6: Search across all your TV apps.

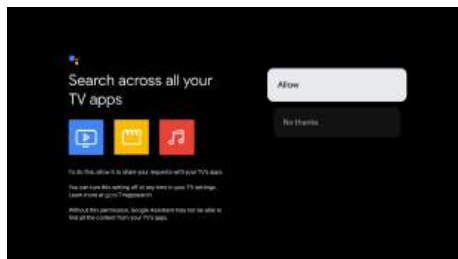


 
Step 9: Read the end user license agreement.

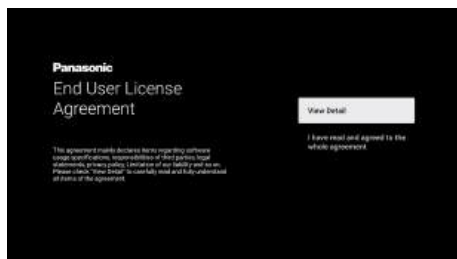

 Step 7: Select a home and room.

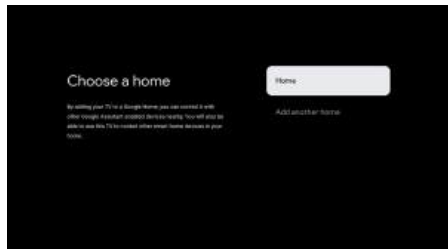

  Step 10: Setup LCN Switch.

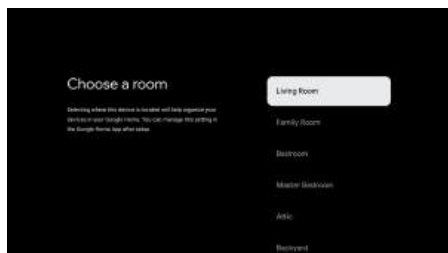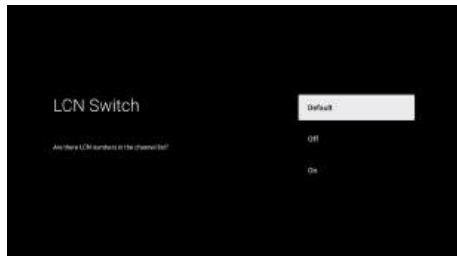


Step 11: Choose the TV usage environment between “Home” and “Shop”.



Note: “Home” mode is recommended for home viewing, while “Shop” mode is used to demonstrate the TV in a shop and the like. It will consume more energy in “Shop” mode.



 Step 12: Select the tuner mode.



  Step 13: Setup is completed.

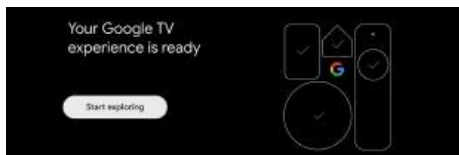

Note:

 
1) Different choices with different screens. The pictures are only for references, please refer to actual screens of your Google TV.

2) Initial settings may change without notice, which depends on Google requirements. You need to finish all initial settings according to what is indicated on the screen.

3) If you want to restart the initial setup after the first time, please Press “SETTING” button into Settings → System → About → Reset.

Selecting the Input Source

1. Press **SOURCE** button to access the list of input sources.
2. Press **LEFT/RIGHT** button to select the desired input source.
3. Press **OK** button to access the selected input source.

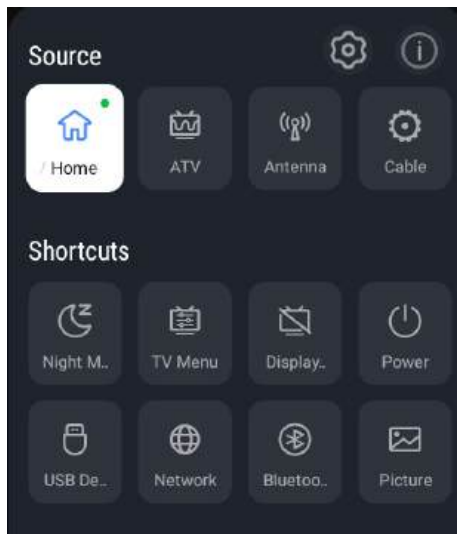

Note:

1) The picture is only for reference.

2) The source of **Google TV Home** will be available only after you update the TV system, connect the TV to the network, and login to your Google account.

 
Settings

Step 1: Press **SETTING** button to enter settings.


Step 2: Press **OK** buttons to general settings.

Step 3: Press **UP/DOWN/LEFT/RIGHT** and **OK** buttons to select and adjust an item.


Step 4: Press **BACK** button to back to the upper-level menu.

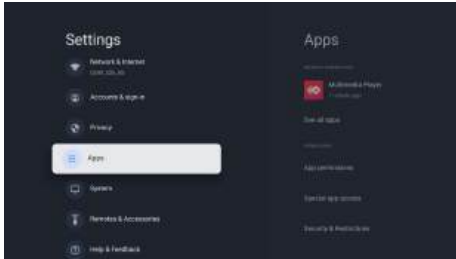

System: Set system.

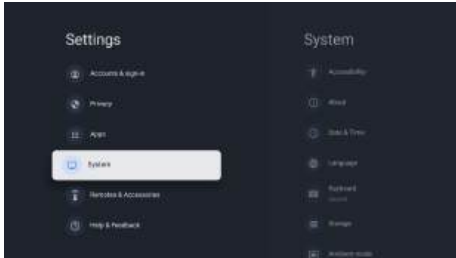 


System:

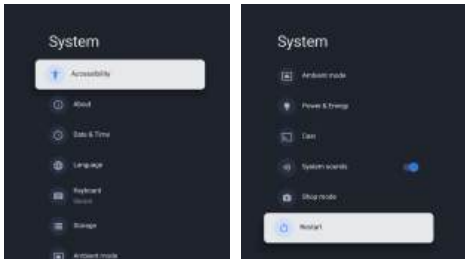 


Accessibility	Set Captions, Text, Accessibility shortcut, TalkBack, etc.
About	System update, Device information (Including software version), Factory reset, etc.
Date & Time	Set date , time and time zone.
Language	Choose the language you want.
Keyboard	Manage the Keyboards.
Storage	Show Device storage information.
Ambient mode	Choose the photos channel, more settings about Weather, Time , Personal photo data,etc.
Power & Energy	Choice Power on behaviors, Energy saver, Sleep timer, etc.
Cast	Cast notification control.
System sounds	When operating Remote Control, a short sound appear from the device.
Shop mode	Choose Shop or Home mode.
Restart	Restart the device.

 
Remotes & Accessories: Turn on or off Bluetooth devices or Pair other accessories.

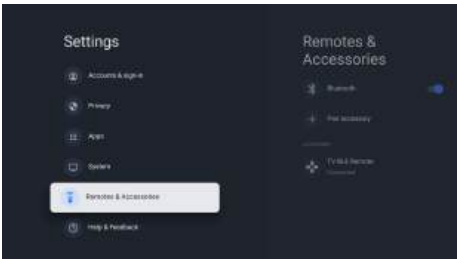

 Help & Feedback: Send feedback to Google .

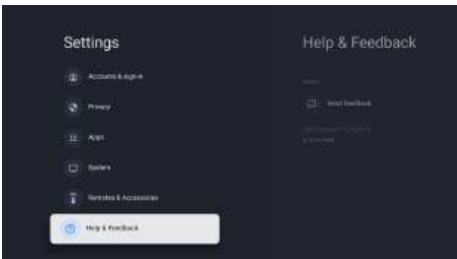

Sound:

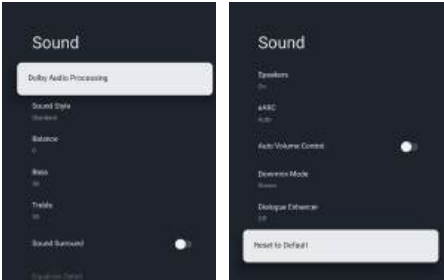 


Dolby Audio Processing	Select Dolby audio settings.
Sound Style	Select the sound mode. Choices are User, Standard, Vivid, Sports, Movie, Music, News.
Balance	Control the sound balance between left and right speakers.
Bass	Adjust the low frequency of the sound.
Treble	Adjust the high frequency of the sound.
Sound Surround	Turn on or turn off sound surround.
Equalizer Detail	Adjust 120Hz / 500Hz / 1.5KHz / 5.0KHz / 10.0KHz for sound equalizer.
Speakers	Turn on or turn off the TV speaker.
eARC	Select eARC mode, auto or off.
Auto Volume Control	Turn on or turn off auto volume control.
Downmix Mode	Select downmix mode, stereo or surround.
Dialogue Enhancer	Select Dialogue Enhancer, choices are Off, Low, Medium and High.
Reset to Default	Reset sound settings.

Audio output:




Digital Audio Output	Set Digital Audio output, choice are Auto, Bypass, PCM, Dolby Audio, etc.
Digital Audio Delay	Set Digital Audio Delay value.

 
Network & Internet:Connect the TV to the wireless or wired network.

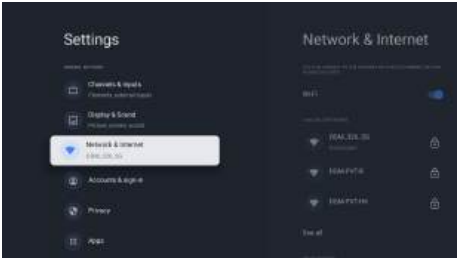

 Accounts & Sign-in: Manage your Google Account.

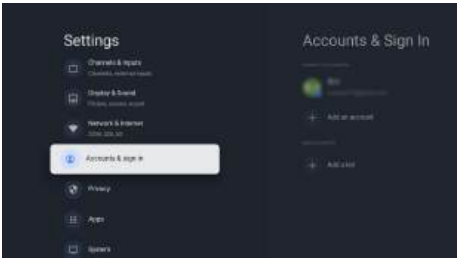

 Privacy: Set Device settings, Account settings and APP settings.

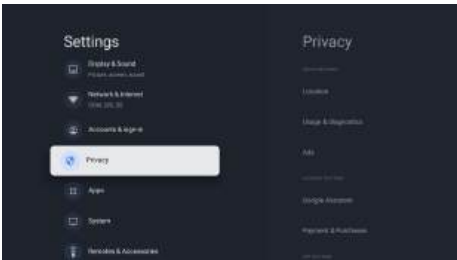

Apps: Show the list of recently opened, and all installed apps.Setup specific app permissions.

Chapter 3: Smart Features

Home Page

Please press Home button () to enter the home page to enjoy the following functions.



Note: The picture is only for reference.

 
1. **For you:** Recommend the content lists of Top picks, Your apps, Free live news & opinion, etc.
2. **Live:** Show Free live TV, Recents, Google TV, Popular movies, etc.
3. **Movies:** Show Popular movies, New movies, Movies from your watch list, Trending on Google, etc.
4. **Shows:** Show Popular shows, New shows, Shows from your watch list, Trending on Google, etc.
5. **Apps:** Show Your apps, or search for apps and games what you want.
6. **Library:** Show purchases, rentals, watchlisted content across TV, mobile and web.
7. **Research (Q) :** Search movies, shows,apps and more.

Note:

- 1) The functions or contents of "Home Page" may vary by different countries or models.
- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

Google Assistant

■ Google Assistant is available on your Google TV as your virtual personal helper. Press **MIC** button on your remote control to start and enjoy it. It is so wonderful that you will love it instantly! With Google Assistant, you can get what you want easily and quickly by using the power of your voice.



- Before using Google Assistant, please make sure that you have connected your TV to the network, and that you have paired your Bluetooth remote control with the TV successfully, and also that you have signed in to your Google Account.

Note:

- 1) The pictures are only for reference.
- 2) Google Assistant is only available in some regions or some languages. Before using it, please make sure that you have paired your Bluetooth remote control with the TV successfully.

Google Cast



■ Definiton of Google Cast

"Google Cast" enables users to cast to a Google TV Streamer device or a device that works with Google Cast.

 
"Google Cast" is built into the system.

■ Cast Screen/Audio (like Google Home)


Cast your mobile device's screen and audio to the TV.

Step 1: Connect your phone and the TV to the same wireless network successfully.

Step 2: Select and access "Home" application from your phone, then click existed "Bedroom TV" , Which is set up in **Initial Setup**.

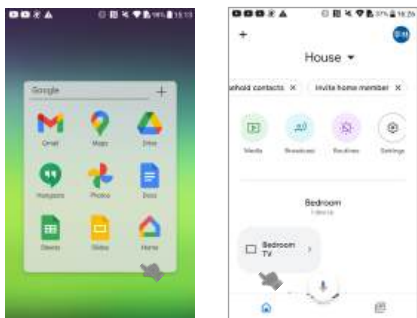

 Step 3: Click "Cast my screen", then the contents on the screen of your phone has been cast onto the TV screen. You can cast picture, audio, movie, etc. to Google TV screen. Click "Stop mirroring" to stop casting.

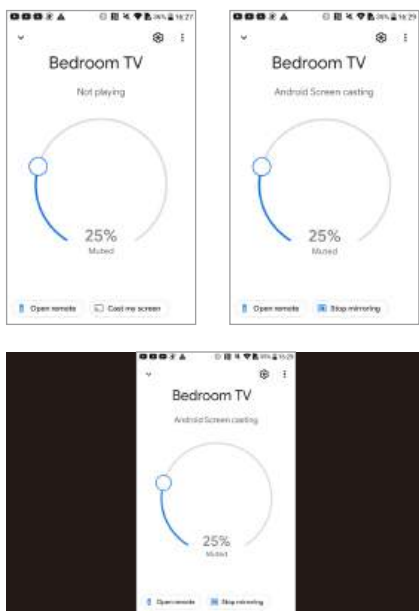


■ Cast Live streams and Videos (like YouTube)

Cast your mobile device's live streams and videos to the TV.

Step 1: Connect your phone and the TV to the same wireless network successfully.

Step 2: Select and access "YouTube" application from your phone.

 Step 3: Select the content you like, click cast icon "📺" and connect to a device you want, then to cast the content to the TV for playing the content by the TV instead of your phone. Click cast icon "📺" again to show a menu (including Voice search, Remote, Close and Disconnect), You can select the operation you want.

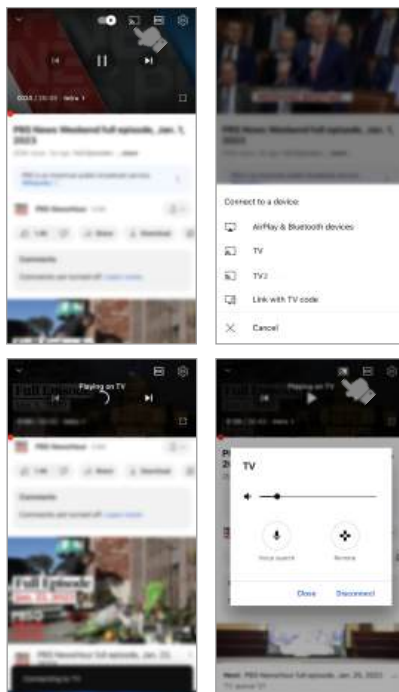

(May not be available depending on the actual remote control) Below buttons you can use on remote control while playing videos:

OK	Play / Pause
< / >	Fast Backward / Fast Forward

Note:

1) The pictures are only for references, and please refer to actual screens of your Android phone for clear images and correct contents.

2) For above YouTube cast feature, both smart phone & the TV Should be connected to the same network.

Disclaimer about Using Google TV

Network application contents and services are controlled by network application providers by means of networks and transmission facilities, which are subject to alteration, suspension, removal, termination or interruption, or invalid access at any time without further notice in that the manufacturer is unable to control or to be informed of the aforesaid change. The manufacturer makes a further declaration that it disclaims any responsibility or liability arising from customer's failure to use the network application contents and services caused by, including but not limited to, failure of network connection or communication lines, technological updates, or the alteration, suspension, interruption, termination, disabling, or removal of any contents or services by the network application providers etc.

Note:

- Some USB storage devices may not be compatible to operate smoothly with this TV.
 - Back up all of the data in the USB storage device in case data was lost due to an unexpected accident.
 - We do not assume any liability for the losses by misuse or malfunction. Data backup is consumer's responsibility.
 - For large file sizes, the loading speed may be slightly longer.
 - The recognition speed of a USB storage device may depend on each device.
 - When connecting or disconnecting the USB storage device, ensure that the TV is not on condition, otherwise the USB storage device or the files stored in it may be damaged.
 - Please use only a USB storage device which is formatted in FAT16, FAT32, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility program which is not supported by Windows, it may not be recognized.
 - When using a USB Hard Disk Drive which requires electric power source, ensure its rated power does not exceed the current marked at the USB terminal. If the power of the USB hard Disk exceeds the marked current, the TV system will be changed into standby mode, then you must pull away the USB Hard Disk and restart the TV system.
 - An "Unsupported File" message will be displayed if the file format is unsupported or corrupted.
 - FHD big picture needs longer time to process, which is not caused by the TV. Please be patient to wait.
 - This TV may not support some multimedia files changed and upgraded as the change of encoding format or other technical advances.
 - Use high-quality mobile device to record HD programs, otherwise the videos will be jammed during the playback. Back up all of the data in the USB storage device in case data was lost due to an unexpected accident.
 - We do not assume any liability for the losses by misuse or malfunction. Data backup is consumer's responsibility.
 - Do not power off the TV during the software upgrading process, otherwise the TV may not work, and the customer should be responsible.
- Manufacturer does not guarantee the operation of third-party web browsers. Third-party apps that have been downloaded and installed from the Google Play are supported by the company or developer who produced them.
 - The browser may not support some web pages or videos due to network, region, format or internet service provider, which has nothing to do with the TV.
 - Each trade mark indicated on this TV are the property of each trademark right holder, and all rights are reserved by them.
 - The browser may stop responding, if the size of website is too large.
 - For better & smooth experience, please delete web browser history regularly.

Multimedia Player

■ Preparation

- Insert your USB device on the TV to view compatible photo and movie on the TV screen or play compatible music through the TV.
- If the connected USB hard disk does not have an external power source, it may not be detected. Be sure to connect the external power source.
- To avoid losing the data on your USB device or damaging your USB device, it is recommended that you back up all data on your USB device.
- The control menu displays in media player may differ by different regions or models. And please take your actual TV as the standard.
- If you want to pull out your USB device, please exit USB mode firstly.
- For instructions on using your USB device, refer to the owner's manual of your USB device.
- Never remove the USB device or turn off the TV while using the USB device. Doing so may result in loss of data or damage to the USB device or the TV.
- Certain types of USB devices may not be compatible with the TV.

■ Media Operation

Step 1: Connect your USB device to the TV.

Step 2: Press **SOURCE** button to enter the ShortCuts → USB Device.

Step 3: Press **UP/DOWN/LEFT/RIGHT** and **OK** button to select and play the desired media file.

Step 4: Press **OK** button to start the playback.

Step 5: Press **BACK** button to exit the playback.

■ Watch Movies

While watching a movie, press the following buttons to control the movie playback.

Button	Function
OK	Without control bar, call out the control bar, With control bar, pause or play.
▲	Access movie menu settings.
▼	Show the movie playlist.
◀ / ▶	Fast backward or fast forward.

■ Play Music

While playing music, press the following buttons to control the music playback.

Button	Function
OK	Pause or play.
▲	Show Playlist and Play Sequence.
▼	Show the music playlist.
◀ / ▶	Fast backward or fast forward.

■ Browse Photos

While browsing a photo, press the following buttons to control the photo playback.

Button	Function
OK	Access photo menu settings.
▲ / ▼	Show the photo playlist.
◀ / ▶	Skip to previous or next photo.

■ Supported File Formats in Multimedia Player

Type	Formats
Video	Video Codec: H.263, H.264, HEVC/H.265, VP8, VP9, AV1, MPEG1/2, MPEG4
	File Extension Name: avi, dat, mpeg, mpe, mpg, vob, mp4, mov, mkv, ts, tp, trp, m2ts, mts, m4v, f4v, flv, asf, 3gp, webm
Audio	Audio Codec: AC3(DD) , EAC3(DD+) , HEAAC
	File Extension Name: mp3, AAC, m4a, flac, amr, mp2, mpga, ogg, AC3, wav
Photo	JPEG, PNG, BMP

Note:

- Under the following conditions, this system cannot decode the file and the file cannot be played normally:
-The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
-The format of file is not matched or the file is harmed.
Note: The code rate this system supports does not exceed 20Mbps.
- Hot plug: Do not disconnect when the system is reading or transmitting data, avoid damaging the system or the device.
- Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
- The system supports standard USB1.1, USB2.0 and USB3.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
- For obtaining better audio and video quality, It is suggested to use the external device which accords with USB2.0 standard.
- When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
- For some USB device with power supply, such as large size hard disk, MP4, etc., Suggest using it with power to avoid electric power shortage. -The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system.
- The file may not be played normally because its parameters , such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system.
- Some files may not be played back even if they fulfil these conditions.
- The device may become unusable with this TV if the file or folder names are changed.

Chapter 4: Technical Information

Maintenance

First, remove the mains plug from the socket outlet.

Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to clean the dirt or fingerprints.

For stubborn dirt:

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).

Wring the cloth and wipe the surface.

Finally, wipe away all the moisture.

Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.



Caution

Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.

- Take care not to subject the TV' surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Take care not to subject the surface to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

- Check if the fuse or circuit breaker is working.
- Plug another electrical device into the outlet to make sure it is working or turned on.
- Power plug is in a bad contact with the outlet.
- Check the signal source.

No colour

- Adjust the saturation.

Remote control does not work

- Change the batteries.
- Batteries are not installed correctly.
- Main power is not connected.

No picture, normal sound

- Adjust the brightness and contrast.

Normal picture, no sound

- Press the Vol+ button to increase volume.
- Volume is set to mute, press the mute button to restore sound.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

Bluetooth remote control can't be paired successfully

- Retry to pair remote control for more times.
- Change the batteries.

Can't sign in Google account

- Retry to sign in again.
- Use another device to check if there is something wrong with the network.
- Use another Android device to check if there is something wrong with the Google server.

Can't use Google Assistant

- Check if the Bluetooth remote control has been paired successfully.
- Use another device to check if there is something wrong with the network.
- Use another Android device to check if there is something wrong with the Google server.

Can't find any button mentioned in the Live TV interface

- Check it in the Virtual keyboard. You can call up the Virtual keyboard in the Shortcuts, or you can setting it to hotkey in Daily Key App.

Do's & Don't:

S.No.	<u>Do's</u>	<u>Don't</u>
1	All electrical and electronic products are required to be handed over only to the Authorized recycler	The product should not be opened by the User himself/herself, but only by authorized service personnel.
2	The product should be handed over only to authorized recycler for disposal.	The product is not meant for re-sale any unauthorized agencies/scrap dealer/ kabariwalas.
3	Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.	The product is not meant for mixing into household waste stream.
4	Refer to Operating Instructions for handling of end of life products.	Do not keep any replaced spare part(s) from the product in exposed area.
5	Always Dispose products that have reached end-of life at Panasonic Life Solutions India Authorized Service centre.	Do not donate old electronic items to any body. Do not dispose your product in garbage bins along with municipal waste that ultimately reaches landfill.
6	Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.	Do not give e-waste to informal and unorganized sectors like Local Scrap Dealer/ Rag Pickers.

Specifications

Model No.		TH-65PX950DX	TH-75PX950DX
Power Source		110 - 240 V ~ 50/60 Hz	110 - 240 V ~ 50/60 Hz
Power Consumption	Power Rating	270 W	360 W
	Standby Condition	< 0.5W	< 0.5W
Display Panel	Visible Screen Size	164 cm	189 cm
	Resolution	3840 X 2160	3840 X 2160
Dimensions (L X B X H)	with Pedestal TV only	145.0 X 29.3 X 93.2 cm	167.3 X 37.7 X 105.5 cm
		145.0 X 4.3 X 84.3 cm	167.3 X 4.7X 96.9 cm
Net Weight		25.2 kg (with Pedestal) 24.0 kg (TV only)	37.3 kg (with Pedestal) 36.1 kg (TV only)
Gross Weight		33.1 kg	46.0 kg
Sound	Speaker	6 Ω	6 Ω
	Audio Output	15Wx2+20W+8Wx2	15Wx2+20W+8Wx2
TV System		DTV: DVB-T/T2/C	
		ATV: PAL BG/I/DK	
Connection Terminals	AV IN	Mini AV Connector x 1 (Need AV converting cable)	
	ANTENNA IN	Aerial Connector x 1	
	HDMI	HDMI Connector x 4	
	USB	USB 2.0 Connector x 2, DC 5 V, Max. 500mA	
	DIGITAL AUDIO OUT	Optical x 1	
	LAN	Network Connector x 1	
Connectivity	WiFi Type	ieee 802.11 a/b/g/n/ac 2.4G+5G 2T2R	
	Bluetooth Ver.	V5.1	

Note

1. Design and Specifications are subject to change without notice.
2. Weight and Dimensions shown herein are approximate
3. The graphics in this manual are only for reference.
4. Your TV may be slightly different from that shown in this manual.
5. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV. .



Cut From Here

Cut From Here



Cut From Here

Panasonic

Panasonic Life Solutions India Pvt. Ltd.

CERTIFICATE OF WARRANTY

Customer Copy

Sr.No.A -

Dear Customer,

Thank you for buying this Panasonic product. This card entitles you to enjoy 1 year warranty on the product.

Product : LED TV

Model No. : Sl. No.

Customer Name :

Address :

Tel. No. :

Date of Purchase :

Invoice No. :

Dealer Name and Address:

Helpline No.: 080-69841333, Email : helpline@in.panasonic.com

Regd. Office: Panasonic Life Solutions India Private Limited , "12th Floor, Ambience Tower, Ambience Island, NH-8, Gurgaon-122002, Haryana"



Scan QR Code for Service Assistance

WhatsApp No. +91-9311211333

Warranty Card and Information

Panasonic Life Solutions India Pvt. Ltd. having its registered office at 1st Floor Ambience Tower, Ambience Island, NH8, Gurgaon - 122002, Haryana (herein after referred to as "Company" or "Our" or "We"), warrants this Product to be free from Product on the terms and conditions below. This non-transferable warranty is only for the first end user on purchase from the Company or any of its Authorized Dealer. Service Centers will repair this Product on the terms and conditions below.

Warranty Period

The Warranty Period is for 12 months from the date of purchase of this Product mentioned on Original Purchase Invoice, provided always that this Warranty Card is duly filled and bears the rubber stamp, date and signature of our Authorized dealer. Warranty shall not be considered valid if the above referred documents are not presented or if the information contained is incomplete or the Warranty Card is found tampered.

Warranty Terms

1. Warranty takes care of any manufacturing defect or breakdown of the Product which occurs while using the Product in normal condition (functional defect) within the Warranty Period. Company at its sole discretion will repair or replace defective parts of the Product with a substitute without affecting performance of the Product.

2. This warranty is confined to this Product only. This warranty is valid and applicable only in respect of Products which are purchased in India from authorized channel of the Company. Parallel Imports are excluded from this warranty.

3. The Company's liability shall be limited to the replacement of any part of the Product or replacement of any part during the said Warranty Period. The warranty shall thereafter continue only for the remaining period of the warranty. Any repairs done or replacement provided shall not extend the Warranty Period for any of the Products. The Warranty Period is limited as provided hereunder from the date of Purchase Invoice irrespective of the period the Product unit was not in use; was not giving proper performance; was under repair(s) by Company's Authorized Service Centre.

4. This warranty shall not apply under following circumstances:-

- Installation/repair is carried out by any unauthorized organization/ which are other than those specified by the Company;
- Any damages resulting from un-authorized adaptations or adjustments to the Product;
- The Product or part(s) Serial No. on the Product is mutilated, defaced or altered;
- Any damage in the Product including but not limited to damage by animals (e.g. Rat, lizard, insect, ants, etc.), input voltage beyond specifications, fire, lightning, water ingress, dust, rids, acts of God (like flood, earthquake, cyclone, storm, etc.);
- Any damage caused by use of the Product in a manner not intended by the Company;
- Any change or defect resulting due to improper maintenance or any use contrary to the operations specified in the User's Manual supplied with the Product;
- Damage or loss arising out of mishandling or incurred during transit;
- Display may occasionally have dots missing or permanently ill. This does not necessarily indicate a fault;
- Any form of damage caused by using external stabilizer;
- Installation/ Demo service is the privileged service offered by the Company, which is valid for a one month from date of purchase of the Product;
- Deficiency in the product performance due to signal reception through third party apparatus, or equipment or any third party software and/or media which does not conform to the specifications mentioned in the Operating Manuals not warranted by the Company;
- The Company shall not be liable or be deemed to be in default for any non-functional or abnormal function with any external device connected with our Product;
- Any damage to the Product or its components caused by fire, flood, lightning, etc. shall not be covered by this warranty. The Company shall not be liable for any damage caused by fire, flood, lightning, etc. This warranty shall be applicable only on Panel screen for repair;
- While the Company will make every effort to carry out repair/ replacement of parts at the earliest, it is however made explicitly clear that the Company is under no obligation to do so in a specified period of time;
- Any defect in the electrical installation or wiring at site has to be rectified by the Customer as per the recommendation of Company's Authorized service representative. The Customer shall bear the cost of such rectification;
- In the event of any unforeseen circumstance, and spares not being available, Company's prevailing depreciation rules will be binding on the Customer to accept as commercial solution in lieu of repairs, the depreciation rules will be applicable after one year of purchase of the Product;
- The Company shall not be held liable or be deemed to be in default for any delay or failure in performance resulting directly or indirectly from causes beyond its reasonable control including delay in repairing due to non-availability of any component or accessory, labor problem, restrictions and regulations of the government, public movement, war and any unavoidable circumstances, specially vis-à-vis the import of supplies and raw material or if the Company is otherwise prevented from performing its functions under this Warranty;
- For Product units installed outside the municipal limits of the Company or Authorized Dealer's service center, all expenses incurred in & for transportation of unit/ parts, lodging, boarding, conveyance and other incidental charges will be borne by and paid by the Customer;
- To the extent permitted by law, this Warranty and the remedies set forth herein are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. The Company disclaims all statutory and implied warranties, including without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects, to the extent permitted by law. In so far as such warranties cannot be disclaimed, Company limits the duration and remedies of such warranties to the duration of this express Warranty and, at Company's option, the repair or replacement services described herein;
- The Company shall not be held liable for any indirect, special, incidental, punitive, exemplary, consequential or economic loss or loss (including but not limited to loss of profits, data, anticipated savings, personal injury and goodwill or business opportunities arising from or related to the Warranty). The Company's liability under or in relation to this Warranty shall be limited to the purchase price of the Product or the Maximum Retail Price thereof, as stated on the packaging of the Product, whichever is lower.

16. This Product is meant for home entertainment purpose. Warranty is not valid if the Product is used for the commercial purpose.

17. It is an integral part of this warranty that in the event of the Product or any part thereof being damaged or destroyed or missing or tampered with, the Company shall be liable to replace the Product or part thereof with a substitute of the same or similar type, without any charge to the Customer.

18. The Courts at New Delhi shall have exclusive jurisdiction over matters covered or flowing from this Warranty.

19. In the event of any difference or dispute arising with reference to the terms and conditions of this Warranty or their interpretation, the same shall be referred to a sole arbitrator, who shall be appointed by the Company. The decision of the sole arbitrator shall be final and binding on the Parties. Such arbitration proceedings shall be held at New Delhi and provision of the Arbitration & Conciliation Act 1996 shall apply to the arbitration proceedings.

20. For complete warranty terms and conditions, visit <http://www.panasonic.com/in/support/>

Cut From Here

Cut From Here

Cut From Here

TQD4WGC32-4

Panasonic Life Solutions India Pvt. Ltd.

Web Site: <http://www.panasonic.com>



N080108-001274-001

T 0525-00