

Operating & Installation Instructions

Fully Automatic Washing Machine
(Domestic use)

Model No.



NA-F70B5
NA-F65B5
NA-F62B5
NA-F70B3
NA-F65B3
NA-F62B3

Contents

Safety Precautions	2
Part Names	3
Operation Panel	4
Variety of Courses	5

Washing	6
Washing Options	8
• Delicate	
• Soak	
• Bed sheets	
• Air Dry	
• Wash/Rinse/Spin	

Convenient Functions	10
Maintenance	10
Installation	12
Troubleshooting	14
Error Messages	15
Specifications	16

**Thank you very much for purchasing
Panasonic Product.**

Before operating this washing machine,
please read these instructions completely,
paying special attention to Safety Precautions.



W9901-9UL30
H0315-1018
Printed in India
01-2018

Safety Precautions

To prevent the risk of danger to humans or property damages, make sure to follow the precautions described below.

■ The descriptions are classified according to the degree of harm or damage caused by misuse.



WARNING

May cause serious injury or death.



CAUTION

May cause minor or moderate injury or property damage.



WARNING

■ For Power Plug and Cord

Prohibited matters

(To prevent fire or electric shock)

- Do not damage, modify, immoderately bend, twist, pull, or bundle them. Do not put them close to heating appliances. Do not put anything heavy on them.
- Do not connect/disconnect them with wet hand.
- Do not hold the cord when pulling out of the socket.
- Do not use a damaged cord and power plug. Also, do not use them when the socket is loose.

Matters to be observed

(To prevent fire or electric shock)

- Use a socket solely that satisfies the rating requirement. (Using in combination with other appliances could cause fire.)
- Insert the power plug all the way seated.
- Wipe the plug periodically with dry cloth. (Accumulated dust collects moisture, which may cause insulation failure, resulting in fire.)
- Pull out the cord before cleaning or when not used for a long period of time.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

In case of emergency or operation failure, stop using the washing machine immediately and pull out the power plug.

(To prevent fume, fire or electric shock)

- No operation even at power on, accumulated dust and moisture on the power plug, abnormal sound in operation, burnt odour, etc.
- Consult a service person for inspection and repair immediately.



■ For Tub and Main Unit

Do not allow children to use alone.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Never disassemble, repair or remodel.

(To prevent fire or abnormal operation, resulting in injury.)

Keep fire away from the main unit.

(To prevent fire)

Do not touch the tub until it completely stops.

(Your fingers may be entangled in the laundry even during slow rotation, resulting in injury.)
If the tub does not stop within 15 seconds when the lid is opened during spin cycle, switch off the washing machine immediately and call a service person.

Do not splash water over the washing machine. Do not install at a damp place or a place which may be exposed to rain, water, etc.

(To prevent electric shock or fire)


- Balcony, bathroom, etc.

Make sure to provide a ground.

(To prevent electric shock by short circuit)

- Ask a service person for grounding work.

Part Names

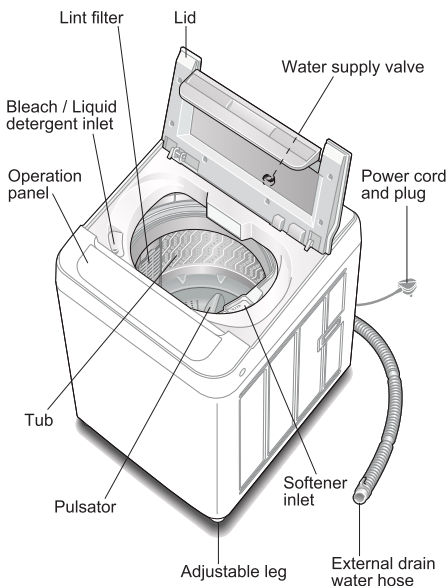

■During Use

Do not put in flammable things or clothes with such things attached. Keep them away from the washing machine.

(To prevent explosion or fire)

- Kerosene, gasoline, benzine/thinner, alcohol, etc.

Keep away magnetic objects such as magnet from the operation panel.

(The tub may rotate even with the lid open, resulting in injury.)



Do not wash, rinse, or spin waterproof sheets and clothes.

(Intense vibration during spin or falling of the machine may result in injury, damages to the main unit, wall, floor, etc., damage to the laundry, water leakage, etc.)

- Raincoat, wet suit, diaper cover, car cover, waterproof sheet, etc.


Prohibited matters

- The new hose-sets supplied with the appliance are to be used and the old hose-sets should not be reused.
- Do not insert your hand or foot under the main unit. (To prevent from getting caught in the rotation part, resulting in injury.)
- Do not climb up or put heavy things on the washing machine.
- If the lid is broken, stop using this machine immediately. (To prevent deformation and breakage, resulting in injury)
- Do not connect to a water heater or directly pour water of 50 °C or more into the tub. (The plastic parts may be deformed, resulting in electrical leakage or electric shock.)
- Do not install at uneven or unstable locations.

Turn off the water faucet after operation is complete.

(To prevent water leakage)

Accessories

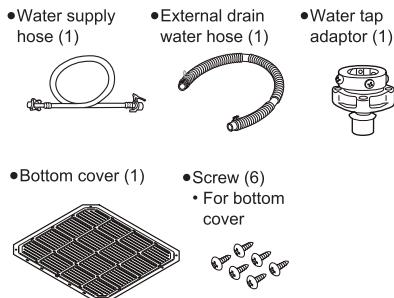

Operation Panel

•The operation panel for NA-F70B5 is used in this manual.

Detergent volume guideline

The detergent volume guideline corresponding to the water level indication is shown below.
(☐: 1 scoop of detergent)

☐ 42	52	Water level
☐ 32	37	
☐ 20	29	
		L

Detergent volume

Water level/Remaining time

Reserve Time Left Program 1 hours min L

Indicates the selected course (No.)

Reserve Time Left Program 52 hours min L

Indicates water amount automatically adjusted according to the amount of laundry after start.

Reserve Time Left Program 45 hours min L

Indicates approximate remaining time (min).

Power On/Off

The power will be turned off if the washing machine is left unattended for 10 minutes without starting.

Change water level

Press the button while the water level is being displayed. (Some water levels cannot be selected, depending on the course.)

- You can select water amount of 20 L manually.
- If this button is pressed while remaining time is displayed, you can check the water level.

Reserve

Press this button to set how many hours later the operation will be complete. (2 to 24 hours by the hour.)

Reserve Time Left Program 08 hours min L

e.g.) 8 hours later

- [3] Delicate, [7] Air Dry and [8] Tub Hygiene courses cannot be reserved.



Auto Restart

In case of power failure during operation, when the power is recovered, the operation will resume from the point where the operation stopped. (The indicator lights up when the operation resumes.)

NOTE

- At power-on, [1] Normal course is displayed.
- The type of course cannot be changed after start.

Variety of Courses

Purpose		Course (Number)	Maximum capacity	NA-F70B5/NA-F70B3	NA-F65B5/NA-F65B3	NA-F62B5/NA-F62B3
Everyday clothes 	Daily washing	➡	1 Normal (P.6)	7.0 kg	6.5 kg	6.2 kg
	Speedy washing for light soil			➡	2 Quick (P.6)	2.0 kg
Delicates 	Washing delicates gently	➡	3 Delicate (P.8)			3.5 kg
	Soak (90 min)			➡	4 Soak (P.8)	7.0 kg
Clothes for baby & people with sensitive skin	Rinsing thoroughly	➡	5 Baby-care (P.6)			7.0 kg
Bed Sheets 				➡	6 Bed Sheets (P.9)	4.2 kg
Tub cleaning	To prevent black mould and smell	➡	7 Air Dry (P.9) 8 Tub Hygiene (P.11)			—
	If black mould or smell is present			➡	8 Tub Hygiene (P.11)	—
Drying synthetic fibre clothes		➡	7 Air Dry (P.9)			2.0 kg

NOTE

• Normal course is recommended for a normally soiled load at the rated capacity of this washing machine.

Laundry preparation and check

For clothes easily losing colour,
Wash separately.



Pre-laundry check

- To prevent malfunction and drainage failure
 - Remove metallic fragments and coins.
 - Fasten buttons and close zippers.
 - Do not wash things (paper diaper, etc.) other than laundry.
- To prevent damage to clothes
 - Reverse fluffy clothes.
 - Using a brush, remove hairs of pet and person, or sands, etc.
 - Tie strings, etc.

For heavily stained clothes and stained white clothes

The following pretreatments are effective.

- Hand wash them first.
- Apply stain remover to stained areas.

For delicate underwear only

Use laundry nets.

- Underwire brassiere
→ Select **3** Delicate course.
(To prevent the wire from sticking out)
- Lacy clothes, lingerie and stockings


When using a net

- Do not overpack.
- Put the claw of the zipper into the cover.
(To prevent damage to clothes and main unit)
- Do not use **7** Air Dry course.
(To prevent uneven dry and wrinkle)

Washing

Preparation: ●Check whether the washing machine has been properly installed. (P.12)

●Turn on the water faucet.

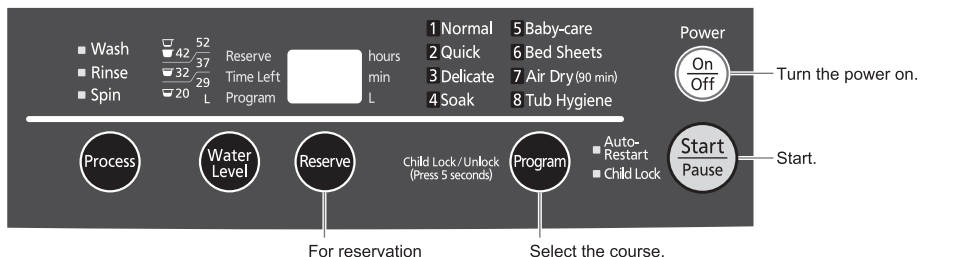

1 **On/Off** After loading the laundry, **turn the power on.**

2 **Program** According to the type of laundry and soil, **select the course.**

Reserve Time Left Program e.g.) Normal course

■For reservation (P.4)

Reserve After selecting the course, **select how many hours later you wish to complete the entire operations.** (Indications other than "Reserve" turn off in 2 minutes after start.)

- After reservation is set
 - Change or cancel
 - Press "Off" and do the procedure again.
 - Check the course
 - Press "Program".
 - Check the reservation time
 - Press "Reserve".
 - Check the water level
 - Press "Water Level".

3 **Start/Pause** **Start.** The pulsator operates without water and measures the load. (approx. 5 seconds)

Water level indication (approx. 5 seconds)

Remaining time indication

- To check the water level
 - Press "Water Level".

Water begins to be supplied.

4 According to the water level, **put in the detergent.** (Follow the instruction described on each detergent's container.)

Liquid detergent ●Dilute sticky type of detergent with water before putting in.

Softener (P.7)

5 **Close the lid.** **The operation is complete with the buzzer sound.**

NOTE

- When powdered detergent is poorly soluble, dissolve in warm water before putting in.

Put in the powdered synthetic detergent

Put in the detergent little by little while stirring to prevent it from getting hard or remaining in a powder state.

Water of approx. 30 °C (approx. 5 L)

- If there are many thick or large clothes (jeans, sheets, etc.) in the tub, the detergent may remain dissolved. Dissolve the detergent according to the above method, or reduce the amount of laundry.

- If excessive bubbles form, reduce the amount of detergent or change the detergent.

Using softener

Put the softener in the softener inlet according to the water level indication.


- Automatically added on the final rinse.
- To add in operation, press "Pause" first.



- Do not use a separated or solidified softener.
- Softener easily becomes hard. Do not leave in the softener compartment for many hours (12 hours or longer).

■ Concentrated type

Dissolve softener.

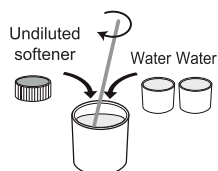

- **Well mix** in another container before putting in. (To facilitate smooth flow)
- Follow each softener's instructions.


NOTE

- If "Pause" is pressed during spin cycle, the softener will be added too early and its effectiveness will decrease.
- The softener will not be added automatically if not put in by the time "Wash" cycle is complete.
- Turn the tub with hand when it is difficult to put in the softener. (P.10)

Using bleach

■ Oxygen powder bleach

Put the bleach in directly during water supply after start.

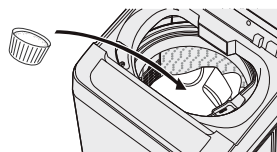


*Follow each bleach's instructions.

■ Liquid bleach



After diluting with the same amount of water,

put the bleach in the bleach inlet before start.

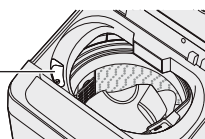

NOTE

- Do not use a bleach for [3] Delicate course.
- Do not use a chlorine bleach for coloured and printed clothes. (Loss of colour may result.)
- If a chlorine bleach is used, wash the tub with [8] Tub Hygiene course without bleach.

 
Washing Options

Delicate

This course gently washes delicate clothes and stylish garments.

Load the laundry.

Put in the laundry evenly.



- First, put in things that easily float on the water, and press the laundry from above.
- Use a commercially sold net for delicate clothes.
- Amount of laundry that can be washed at one time

42 L	3.5 kg
37 L	2.0 kg

Preparation: Turn on the water faucet.

1



Turn the power on.

2



Select **3** Delicate course.

Reserve	
Time Left	3
Program	


3



Start.

4

Put in the liquid detergent.

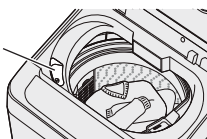

5

Close the lid.

The operation is complete with the buzzer sound.

- Take out the laundry immediately.
(To prevent wrinkle and colour staining)

NOTE

- Use a liquid detergent for stylish garments.
- Do not use a bleach.

Soak

Preparation: Turn on the water faucet.

1



Turn the power on.

2



Select **4** Soak course.

Reserve	
Time Left	4
Program	


3



Start.

4

According to the water level indication (approx. 5 seconds), put in the detergent.

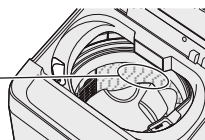

5

Close the lid.

The operation is complete with the buzzer sound.

- Take out the laundry immediately.
(To prevent wrinkle and colour staining)

- Wash
- Rinse
- Spin

42	52
32	37
29	
20	L

Reserve
Time Left
Program

hot
min
L

Process

Water Level


Reserve

Select operation contents.

Bed Sheets

■ Washable bed sheets

- Material: Synthetic fibre 100 %/Cotton 100 %
- Weight: 4.2 kg max.
- Bed sheets with a washable tag attached

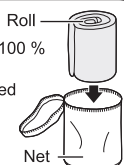

Preparation: Turn on the water faucet.

1 After putting the bed sheets included in the net in the tub, **turn the power on.**

● Face the zipper part of the net up. (To prevent damage to the laundry net)

2 **Select [6] Bed Sheets course.**

- Water level indication
NA-F70B5 / NA-F70B3: 52 L
NA-F65B5 / NA-F65B3: 48 L
NA-F62B5 / NA-F62B3: 46 L
- Water level cannot be changed.

3 **Start.**

4 **Put in the liquid detergent.**

5 **Close the lid.**

The operation is complete with the buzzer sound.

1 Normal	5 Baby-care		Turn the power on.
2 Quick	6 Bed Sheets		
3 Delicate	7 Air Dry (90 min)		Start.
4 Soak	8 Tub Hygiene		

Child Lock / Unlock (Press 5 seconds)

Select [3] Delicate/ [4] Soak/ [6] Bed Sheets/ [7] Air Dry course.

Air Dry

This extracts water from clothes by air blow utilising the tub rotation. (Agitation is performed approx. every 30 minutes to untangle the laundry.)

■ Clothes that can be dried

- Material: Synthetic fibre
- Weight: 2 kg max.

1 After loading the laundry and closing the lid, **turn the power on.**

2 **Select [7] Air Dry course.**

3 After closing the lid, **Start.**

The operation is complete after 90 minutes with the buzzer sound.

NOTE

- The laundry may not be sufficiently dried depending on the amount of the load, type of clothes, temperature, and installation condition of the washing machine. (Since no heater is used for this function, some users may feel the laundry is cold and not dry.)

Wash/Rinse/Spin

Preparation: Turn on the water faucet.

1 After loading the laundry, **turn the power on.**

2 According to the purpose, **select operation contents.**

Process

- Change the water level as necessary.
- You cannot select Rinse alone.

3 After closing the lid, **start.**

The operation is complete with the buzzer sound.

Convenient Functions

 
Cancelling end buzzer



Then hold on
for 3 seconds.



- To reset, do the same procedure.



Setting Child Lock

If the lid is opened during operation with this function activated, the buzzer continues to beep until the lid is closed. If the lid is opened for 10 seconds or more, the water is forcibly drained. (To prevent children from falling in the tub and drowning)

- This function does not lock the lid and button operations.
- Set the drain hose in the condition where water can be drained.
- If water is drained forcibly, "U99" is displayed. (P.15)


 


- To cancel, do the same procedure.



Turning the tub with hand

When it is difficult to remove the lint filter or add softener

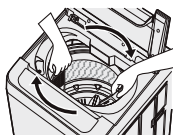





NOTE

- If there is water in the tub or "Start" is pressed, the tub cannot be turned.




Maintenance

Lint filter

  After each operation

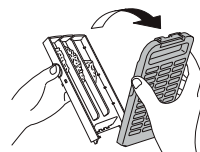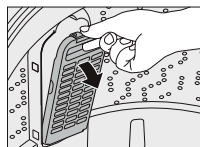

- If removal is difficult, soak the filter in water and wash.

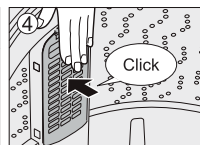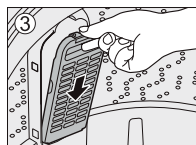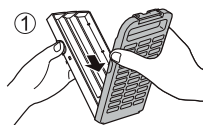

NOTE

- Do not wash laundry with the filter removed.
(To prevent damage to clothes)

■If removing the filter is difficult

Turn the tub. (See left.)

■If the filter is broken

Buy a new filter at nearest Panasonic Service Centre.

Water supply filter

If water does not flow smoothly

- Make sure to observe the following procedure to prevent spatter of water.

- 1 Turn off the faucet.** 
- 2  Turn the power on.**
- 3  After closing the lid, start.**
- 4  After approx. 40 seconds, turn the power off.**
- 5 Loosen the nut.** 
- 6 Remove the hose and water supply filter.** 
- 7 Remove the dust of water supply filter.** 

Main unit/Lid

If detergent or softener stains are found


Wipe with a soft cloth.

(To prevent damage to resin or metal corrosion)

- For heavy soil, use a neutral detergent for kitchen and wipe off.
(Do not use other detergents or directly pour water.)

Tub <Air Dry/Tub Hygiene>


Once a week (Dry)

- 1** After operation is complete, **operate the washing machine with  Air Dry course without laundry in the tub.** (P.9)



Once a month (Wash)

Preparation: Turn on the water faucet.

- 1  Turn the power on without laundry in the tub.**
- 2  Select  Tub Hygiene course.**
- 3  Start.**
- 4  When water supply is complete, pause.**
- 5 Put the bleach in the tub.** 
• Use a chlorine bleach for clothes.
- 6  After closing the lid, start.**

Approx. 200 ml

The operation is complete after approx. 2 and half hours.

Installation

- If the installation, test run and inspection of the washing machine are not carried out following this installation method, Panasonic will not be liable for any accident or damage caused.
- Make sure to ask a service person for installation. Do not install by yourself.

1. Check the installation location.

■ Avoid the following locations for installation.

- Locations where there is a possibility of freezing.
- Locations exposed to direct sunlight
(To prevent malfunction or deformation)
- Uneven or unstable locations
(on blocks, timbers, table with wheels attached, etc.)


NOTE

- Do not block the opening of the bottom face with carpet, etc.



2. Attach the bottom cover.

Preparation: Set a cardboard, etc. and lay the washing machine on it, avoiding product damage and deformation. (Face the front side down.)

1 Insert along the guides, and set 3 holes to the corresponding projections.

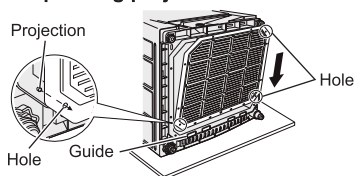


2 Fix with screws. (6 locations for right, left and top)

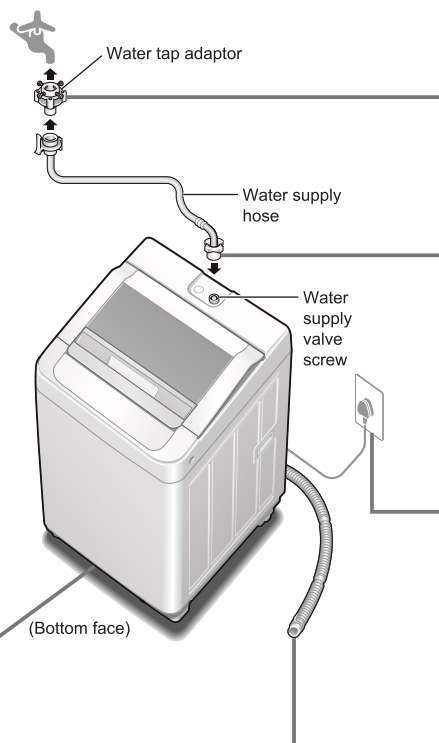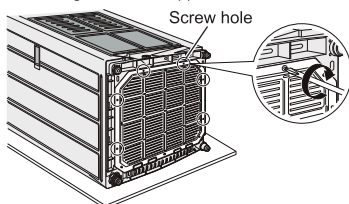


3. Attach the external drain water hose.

1 Connect to the connection port.

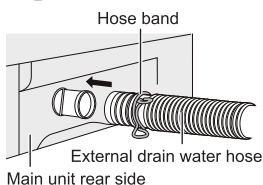



- Insert all the way seated.

2 Slide the hose band in the arrow direction.

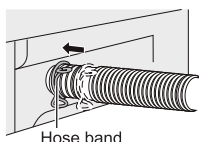


■ Hose arrangement

  - Do not put the hose tip under the water.
- The height should be 10 cm or less.
- The extension length should be 3 m or less.




4. Connect the water tap adaptor and water supply hose.

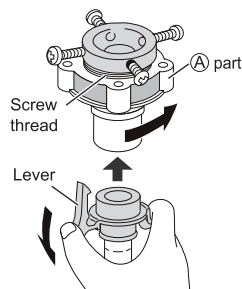

1

Connect the water tap adaptor to the faucet.

- 1) Turn (A) part to the left until approx. 4 mm of the thread becomes visible.
- 2) Loosen 4 screws.
- 3) Connect to the faucet and tighten the screws.

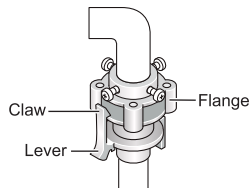

2


Fix.

- Turn (A) part to the right side and tighten securely. (To prevent water leak)

3

Connect the water supply hose to the water tap adaptor.

- Pushing down the lever, insert and hook the claw of the lever on the flange of the adaptor.

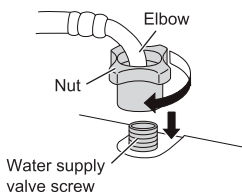

4

Connect the water supply hose to the water supply valve screw.

- Slightly lift up the elbow and tighten the nut.
- Check if the elbow is not loose.



CAUTION

- Tighten the nut firmly. (To prevent water leak)
- Do not forcibly bend the water supply hose. (To prevent water leak caused by the bent hose)


5. Connect the power plug and grounding wire.

- Ask a service person for grounding work.

6. Check the horizontal state.

■ Adjusting height with the adjustable leg knob.

- 1) Turn the adjustable leg knob to the left side and loosen as indicated with the left pointing arrow. Then, turn the adjustable leg to adjust the levelness.
- 2) Turn the adjustable leg knob to the right side and tighten securely as indicated with the right pointing arrow.

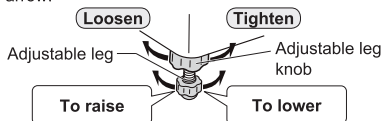

7. Perform a trial operation.

- Check if there is no water leakage, abnormal sound or error messages.

Troubleshooting

Check the following before requesting service.

Symptoms		Checkpoints
Time	Remaining time fluctuates.	<ul style="list-style-type: none"> • Remaining time is corrected during the process and displayed. (Time indication is an approximation.)
	No operation.	<ul style="list-style-type: none"> • Power failure? • Is the lid closed completely? • Is the power fuse or the breaker cut off? • Is the power plug plugged in completely? • Is the water faucet turned on? • Is the "Start" button pressed? • Has the Reserve program been set?
Main unit	Cannot change the operation contents. (after start)	<ul style="list-style-type: none"> • The contents can be changed in Wash process by pressing "Pause". To change the course or to change the contents after Rinse process, turn the power off and then on again.
	No water supply.	<ul style="list-style-type: none"> • Is the water faucet turned on? • Water failure? • Is the water supply filter clogged with dust? (P.11)
Wash	Water is supplied in the middle of Wash process.	<ul style="list-style-type: none"> • When level goes down, water is supplied automatically. • With large amount of laundry, water is supplied several times automatically.
	The water level is too high for the amount of laundry.	<ul style="list-style-type: none"> • If the laundry is wet or if there is water in the tub before operation, the water level may be higher.
	The water level is too low for the amount of laundry.	<ul style="list-style-type: none"> • With light clothes (synthetic fibre, etc.), the water level may be lower.
Rinse/Spin	The operation started with Rinse process, however, water is not supplied.	<ul style="list-style-type: none"> • If there is no water in the tub, water is supplied after spin. • If there is water in the tub, water is supplied after water discharge.
	The operation suddenly changes to rinse process in the middle of spin process./ Only spin is desired, however, the operation starts with rinse.	<ul style="list-style-type: none"> • If the laundry is unevenly placed in the tub, the machine starts to rinse and automatically corrects the arrangement. (Put the laundry as evenly as possible.)
	Irregular rotation during spin.	<ul style="list-style-type: none"> • The tub rotation speed is adjusted to reduce bubble foaming during spin.
Others	Power failure./ The breaker has tripped.	<ul style="list-style-type: none"> • The operation will stop. When power is recovered, the operation will resume. ("Auto Restart" indicator lights up.)
	Water failure.	<ul style="list-style-type: none"> • After water supply is recovered, remove the water supply hose to release muddy water from the faucet, and start the operation.
	Operation does not finish even after the reservation time.	<ul style="list-style-type: none"> • Operation time will become longer if laundry leans to one side or water supply or drainage is ill-conditioned.

Panasonic India Pvt. Ltd.

CERTIFICATE OF WARRANTY

CUSTOMER COPY

Dear Customer, _____

Thank you for buying this Panasonic product. This card entitles you to enjoy Two years warranty on your product. For any assistance please contact your nearest authorised service centre.

Product: Washing Machine

Model No.: _____ Sl. No.: _____

Customer Name: _____

Address: _____

Tel. No.: _____

Date of Purchase: _____

Invoice No: _____

Dealer Name and Address: _____

Product: Washing Machine

Warranty: Two Years

Help Line: Panasonic Customer Care, (24X7X365 Days) 1800 103 1333 / 1800 108 1333 Email: helpline@in.panasonic.com
Panasonic India Private Limited, 12th Floor, Ambience Tower, Ambience Island, NH-8, Gurgaon, Haryana-122002.

Panasonic	Panasonic	Panasonic	Panasonic
Washing Machine Installation/Demo Coupon	Washing Machine Service Coupon 1	Washing Machine Service Coupon 2	Washing Machine Service Coupon 3
Model No. _____	Model No. _____	Model No. _____	Model No. _____
Serial No. _____	Serial No. _____	Serial No. _____	Serial No. _____
Purchase Date _____	Purchase Date _____	Purchase Date _____	Purchase Date _____
Dealer Stamp _____	Dealer Stamp _____	Dealer Stamp _____	Dealer Stamp _____
Customer Sign. _____	Customer Sign. _____	Customer Sign. _____	Customer Sign. _____



Panasonic India Pvt. Ltd.
Certificate of Warranty
Terms and Conditions

1. Panasonic India Pvt. Ltd. having registered office at 12th Floor, Ambience Tower, Ambience Island, NH-8, Gurgaon Haryana, India - 122002, ("Company") warrants the Washing Machine ("Product") shall be free from any manufacturing defect for a period of 2 years from the date of purchase by end user ("Customer"), on the following terms and conditions.
2. This warranty covers only the repairs and does not entitle Customer for replacement of this Product.
3. The warranty is valid only when this warranty certificate (duly filled, signed and stamped by the selling dealer), along with original bill of purchase indicating the date of purchase and the dealer's name is presented to the Company or its authorized service centers, as designated by the Company. Warranty will not be valid without these documents. Any modification, amendment or defacement to these documents shall render this warranty void.
4. This warranty is valid and applicable only to Products which are purchased in India from authorized channel of the Company. Parallel imports are excluded from this warranty. Further, this warranty is confined to the first purchase of the Product only, and is not transferable.
5. Warranty takes care of any manufacturing defect or breakdown of the Product during warranty period. Company, at its sole discretion will repair or replace such defective Product or parts thereof. All parts removed by the Company shall be the property of the Company. In the event the Company carries out repairs or replacement of any part during the said warranty period, the warranty shall thereafter continue only for the remaining period of the warranty. Any repairs done or replacement provided shall not extend the warranty term for any of the Product. For avoidance of doubt, the time taken by the Company in repairing the Product shall not be reason for extending the warranty term.
6. Warranty does not cover free replacement of cabinets and styling materials, aesthetic material frames plastic parts & accessories such as rechargeable battery.
7. This warranty does not cover any form of damage resulting from dust, foreign object, fire, water, input voltage beyond specifications, riot, mishandling, commercial use, lighting, flood or any act of natural and use contrary to the operations specified in the user's manual supplied with the equipment.
8. Displays may occasionally have dots missing or permanently lit. This does not necessarily indicate a fault.
9. Any software media which does not confirm to the specifications mentioned in the operating manual, playability of such media is not warranted by the company.
10. Company will not accept any responsibility for damage arising out of unauthorised modification or alteration, repair or use of this Product or any accessories other than those specified by the Company.
11. Company will not cover any responsibility for damage or loss arising out of mishandling or incurred during transit.
12. The warranty is not valid if serial number or equipment is mutilated, defaced or altered.
13. This warranty does not cover the cost of transportation of the Product from the place of installation to the service center.
14. The Company shall not be liable or be deemed to be in default for any delay or failure in performance resulting directly or indirectly from causes beyond its reasonable control including delay in repairing due to non-availability of any component and/or accessory, labour problem, restrictions and regulations of the government, public movement, war and any unavoidable circumstances, specially vis-a-vis the import of supplies and raw material or if the company is otherwise prevented from performing its functions under this warranty.
15. Any defect in the electrical installation or wiring at site has to be rectified by the customer as per the recommendation of Company's engineers.
16. Where applicable, it is the customer's responsibility to backup any contents stored in the product before it is sent to the Company authorized customer care center for servicing. The Company shall not be responsible for any damage or modification or loss of data or any other information stored in the product.
17. To the extent permitted by law, this Warranty and the remedies set forth herein are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. Company disclaims all statutory and implied warranties, including without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects, to the extent permitted by law. In so far as such warranties cannot be disclaimed, Company limits the duration and remedies of such warranties to the duration of this express Warranty and, at Company's option, the repair or replacement services described below.
18. The Company shall not be liable for any indirect, special, incidental, punitive, exemplary, consequential or economic damage or loss (including but not limited to loss of profits, data, anticipated savings, and goodwill or business opportunities arising from or related to the warranty). The Company's liability under or in relation to this warranty shall be limited to the purchase price of the product or the Maximum Retail Price, as stated on the packaging of the product, whichever is lower.
19. While the Company will make every effort to carry out repairs at the earliest, it is however made explicitly clear that the Company is under no obligation to do so in a specified period of time.
20. In the event of any difference or dispute arising with reference to the terms and conditions of the warranty of there interpretation, the same shall be referred to avsole arbitrator, who shall be appointed by the Company. The decision of the sole arbitrator shall be final and binding on the parties. Such arbitration proceedings shall be held at New Delhi and provision of the Arbitration & Conciliations Act 1996 shall apply to the arbitration proceedings. In case any dispute, Courts of Delhi shall have exclusive jurisdiction to entertain disputes between the parties.
21. It is an obligatory condition of this warranty that any changes in the location of the unit or ownership there of must be intimated in writing to the company in advance and only Authorized Dealer / Service center shall remove and install the units on chargeable basis.
22. For Complete warranty terms and conditions, visit: helpline@in.panasonic.com.

This warranty is valid only in India.

Panasonic	Panasonic	Panasonic	Panasonic
Washing Machine	Washing Machine	Washing Machine	Washing Machine
Customer <ul style="list-style-type: none"> * This coupon is valid for two years from date of purchase of the product. * Each coupon is valid for one service request only. * Cut and hand over the coupon to the Authorised Service Representative after completion of one warranty service. 	Customer <ul style="list-style-type: none"> * This coupon is valid for two years from date of purchase of the product. * Each coupon is valid for one service request only. * Cut and hand over the coupon to the Authorised Service Representative after completion of one warranty service. 	Customer <ul style="list-style-type: none"> * This coupon is valid for two years from date of purchase of the product. * Each coupon is valid for one service request only. * Cut and hand over the coupon to the Authorised Service Representative after completion of one warranty service. 	Customer <ul style="list-style-type: none"> * Installation/Demo service is a privileged service offered by Panasonic. This coupon is valid for one month from date of purchase of the product. * This coupon is valid for one installation request only. * Cut and hand over the coupon to the Authorised Service Representative after completion of the installation/Demo.
Service agent <ul style="list-style-type: none"> * Fill in all necessary details and obtain customer signature. * Attach the coupon to your service claim job-sheet. 	Service agent <ul style="list-style-type: none"> * Fill in all necessary details and obtain customer signature. * Attach the coupon to your service claim job-sheet. 	Service agent <ul style="list-style-type: none"> * Fill in all necessary details and obtain customer signature. * Attach the coupon to your service claim job-sheet. 	Service agent <ul style="list-style-type: none"> * Fill in all necessary details and obtain customer signature. * Attach the coupon to your service claim job-sheet.

Error Messages

If the buzzer sounds and “U”/“H” and “Number” are alternately displayed, check the following.

* If the problem persists or any other malfunctions occur, pull out the power plug and contact a service person for service.

●Cancel Child Lock (P.10) when it is active.

Symptoms	Checkpoints
<div>U 11</div> <div>Water cannot be drained.</div>	<div>■Check the drain water hose for the following abnormality.</div> <div><div><div>●Is it crushed?</div><div>●Is lint clogged?</div><div>●Is the tip soaked in water?</div><div>●Is a part of hose at a height of over 10 cm midway? (P.12)</div><div>●Is the extension hose longer than 3 m? (P.12)</div></div><div>The operation will resume by opening/closing of the lid.</div></div>
<div>U 12</div> <div>The lid is open.</div>	<div>●Is the lid open?</div>
<div>U 13</div> <div>Spin or Air Dry does not work.</div>	<div><div>●Is the laundry on one side?</div><div>→Arrange the laundry evenly in the tub, and then close the lid.</div><div>●Is the washing machine on an unstable location or inclined floor surface?</div><div>→The operation will resume by opening/closing of the lid.</div></div>
<div>U 14</div> <div>Water cannot be supplied.</div>	<div><div>●Is the water faucet turned on?</div><div>●Water failure?</div><div>●Is the water supply filter clogged with dust? (P.11)</div></div> <div>The operation will resume by opening/closing of the lid.</div>
<div>U 99</div>	<div><div>●Water is forcibly drained since the lid has been open for 10 seconds or more with Child Lock (P.10) function set.</div><div>→Pull out the power plug and reconnect after 5 seconds.</div></div>
<div>H 00</div>	<div><div>●Inspection is required.</div><div>→Pull out the power plug. Then, contact a service person and explain the displayed content (2-digit number after “H”).</div></div>

When Necessary

Specifications

	NA-F70B5/ NA-F70B3	NA-F65B5/ NA-F65B3	NA-F62B5/ NA-F62B3
Rated voltage	230 V		
Rated frequency	50 Hz		
Rated power consumption	423 W	408 W	400 W
Standard water amount	52 L	48 L	46 L
Maximum capacity	7.0 kg	6.5 kg	6.2 kg
Product dimensions	525 mm (W) × 571 mm (D) × 969 mm (H)	525 mm (W) × 571 mm (D) × 929 mm (H)	
Product weight	31 kg	30 kg	
Pressure of tap water	0.03 - 1 MPa (0.3 - 10 kgf/cm ²)		

Disposing of Waste Electrical & Electronic Equipment

Declaration of Conformity with the requirements of the E-Waste (Management) Rules-2016

The Product is in conformity with the requirements of the reduction of hazardous substances of the E-Waste Rules-2016.

The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the E-Waste Rules-2016:

1. Lead (Pb) – not over 0.1 % by weight;
2. Cadmium (Cd) – not over 0.01 % by weight;
3. Mercury (Hg) – not over 0.1 % by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1 % by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1 % by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1 % by weight.



For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized Collection Centre, registered Dismantler or Recycler, or Panasonic Service Centre when disposing of this product.

Customer care number (Toll free): 1800 103 1333
1800 108 1333

Please see the Panasonic website for further information on Collection Centres, etc., or call the toll-free number.
<http://www.panasonic.com/in/corporate/sustainability/panasonic-india-i-recycle-program.html>

This image shows a full page of a worksheet designed for handwriting practice. It consists of multiple rows of horizontal dashed lines spaced evenly across the page, providing a guide for letter height and placement. The background is plain white, and there are no margins or additional markings.

