



# Panasonic®

## Operating Instructions Refrigerator

For Household Use

Model No: NR-BX418X, NR-BX418G, NR-BX418V  
NR-BX468X, NR-BX468G, NR-BX468V



NR-BX418X  
NR-BX468X



NR-BX418G  
NR-BX468G



NR-BX418V  
NR-BX468V

## Contents

• Safety precautions .....	2
• Required action .....	4
• Installation .....	5
• Parts identification .....	6
• Temperature control .....	7
• Temperature control (Fine adjustment mode) .....	8
• Quick freezing .....	8
• ECONAVI operation .....	9
• Food storage in the freezer room .....	9
• Usage tips .....	10
• How to clean the refrigerator .....	10
• Troubleshooting .....	11
• Specifications .....	12

Thank you for purchasing the Panasonic product.

- Please read these instructions carefully and follow safety precautions on page 2-3 before using this product.
- Please make sure the date and name of store of purchase are stamped in warranty card and keep it with this operating instructions.

INDIA

AK-174290

P0316-0

Printed in Thailand

## Safety precautions

Please be sure to follow these instructions.



## WARNING

This sign means  
[It may lead to a serious injury or death.]



## CAUTION

This sign means  
[It may result in injury or property damage.]



These signs mean prohibited action.



This sign means required action.



This sign means the appliance must be earthed to prevent electric shock.



Otherwise it may cause  
a fire, injury, explosion,  
electrical shock.



## WARNING

### In case of emergency...



- **Do not** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **Do not** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **Do not** store explosive substance such as aerosol cans with a flammable propellant and chemicals or scientific specimens in this appliance.



- **Do not** disassemble, repair or modify the refrigerator by yourself.  
If you want to repair the refrigerator, please consult your dealer or authorized service center.



- Stop using the refrigerator immediately if there is an abnormality or failure. (Otherwise it may cause smoke, a fire or electrical shock.)  
Abnormality and failure examples.
  - Power cord or plug is abnormally hot.
  - Power cord is deeply cut or deformed.
  - There is burning smell.
  - You can feel tingling electricity.
- A flammable refrigerant is used. If you have damaged the cooling circuit (piping), open the windows to ventilate the kitchen and contact your dealer. (Otherwise it may cause ignition or explosion.)

### When using...



- **Do not** damage the refrigerant circuit.
- **Do not** touch compressor or pipe, this area is high temperature.
- **Do not** place any water container on the top of the refrigerator.



- Keep ventilation openings, in the appliance enclosure or in the built - in structure, clear of obstruction.
- Fill with potable water only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Maintenance work can only be carried out at workshop by well-trained maintenance worker.

### When installing the product...



- For safety and efficiency in high operation, it should be checked that the ground connection system in the house has been installed correctly.

### When installing...



- Ensure that the refrigerator is plugged into an earthed mains socket.  
Do not plug into an unearthed mains socket.



# WARNING



# CAUTION



Otherwise, it may cause  
a fire, injury, explosion,  
electrical shock.



Otherwise, it may cause  
burn injury, accidents.

## For power plug and cord...



- **Do not** touch the power plug with wet hands.



- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Disconnect power plug when cleaning.
- Plug into a wall outlet of the rated voltage on its own with the rated current and insert plug fully.
- Reserve one plug for the refrigerator only. Avoid connecting many appliances to the same plug and unroll through the length of cord.
- Remove dust periodically from the power plug.
- If you detect a gas leak, do not touch the power plug and ventilate the kitchen.
- If you detect burning smell, disconnect the power plug and ventilate the kitchen.


## When opening/closing the doors...



- **Do not** let any children hang the refrigerator's door, it may overturn to the kid.



- While opening the refrigerator, be careful not to pinch other one's hand holding the door.
- Mind the gap between the doors. They may nip your hand while closing the door.

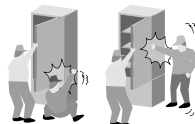

## When recycling the product...



- Before taking the refrigerator to be recycled, please remove all the door opening seal to prevent locking a child in it.
- The warning labels mentioned above should be kept throughout the life of the refrigerator. The operating instruction should be handed over to any person who would use or handle the refrigerator whenever the refrigerator would be transferred to another location and delivered to a recycling plant.
- Regarding to local laws, Cyclo-Pentane is used for insulation of this refrigerator and flammable gas is used for refrigerant. When you throw away this unit, please discard it by proper method and do not dispose it by burning.

## When storing food...



- **Do not** add a high impact on glass trays. (Otherwise those glass trays may break and you may be injured.)
- **Do not** freeze glass bottles. (If the liquid in a glass bottle is frozen, then the bottle may break and the liquid may leak out.)



## When moving the refrigerator...



- Hold the refrigerator tightly when transporting.
- Apply protective covering, etc. to floors with a fragile surface.
- During transportation and installation, ensure that the tubing of the refrigerant circuit is not damaged.



# Required action

## When opening/closing the doors...

- **Do not** refrigerate items which are bigger than tray or shelf, as the door will not close completely causing leakage of cool air.
- **Do not** open refrigerator frequently or leave it open for long time in order to prevent water dripping inside and save energy.
- Frequently check the door opening seal, it must be closed to the refrigerator's body completely.

## When cleaning...

- **Do not** clean the refrigerator with chemical substance or liquid. It will cause damage and have corrosion on the surface.
- Clean the pan water evap located over the compressor at the back of the refrigerator every three months to prevent the odour generated from humidity.
- Be cautious of hot copper pipe inside pan water evap when removing it.



## When using...

- When the plug is disconnected, leave it for 10 minutes before plugging again. If not, the compressor may not work.
- **Do not** put anything on top of the refrigerator. Otherwise, it may fall due to vibration.
- Adjust the temperature according to the actual operating condition for energy saving.
- If you will not be at home for several days and there are nothing refrigerated in the refrigerator, the plug should be disconnected for energy saving.



## When storing food...

- **Do not** place warm/hot foodstuff in the refrigerator. Store warm food and drinks after they have cooled.
- **Do not** overload the refrigerator. Gap must be provided between foodstuffs to maintain the cooling effect.
- Store fruits and vegetables in vegetable case, where trapped moisture helps preserve food quality for longer time periods.
- Drinking water, beverage bottles should be sealed to prevent the odour.
- Foodstuff such as vegetable, fruits and fresh food should be wrapped or pack in box before freezing and refrigerating.
- Put the food such as meat or fish in the freezer if you want to store for an extended period.
- If you will put high moisture content into refrigerator, it should be sealed and wrapped to prevent dew and frost.



# Installation

## The distance requested for installation

- The top of the refrigerator and the ceiling at least 30 cm.
- The wall and the back of the refrigerator at least 10 cm.
- The side of the refrigerator and the wall at least 5 cm.

## Area around the installed unit

- **Do not** locate the refrigerator in a humid place as rust may form and may cause electric leakage.
- **Do not** locate the refrigerator exposing to direct sunlight as the heat and sunlight will increase the temperature.
- **Do not** locate the refrigerator near heat source such as cooking stove or oven.
- **Do not** block the openings on the circumstances of the refrigerator.
- The refrigerator must be located in the place where there is good air circulation.
- In case of placing the refrigerator on an uneven surface, adjust the adjustable bolt to make the refrigerator stands stably.

## Moving or shifting



- When moving or shifting the refrigerator, remove ice twister, pan water evap (refer to page 11 for detail) etc, and check to be sure that there is no water in the refrigerator and install in the location, adjust adjustable bolt for locking.

## Power cord setting


- To bring power cord for use, pan water evap from left should be lifted up. Then bring the power cord out and then insert pan water evap into the block by pressing at both the sides.

## LED lamp and Grounding


- The refrigerator LED lamp, specially designed for this refrigerator, does not function on individual replacing. If you need replacement, please contact Panasonic Service Center.
- If there is no grounding wiring plug in refrigerator, it should be connected with grounding connection or prevent electrical hazard from electric leakage.

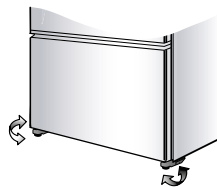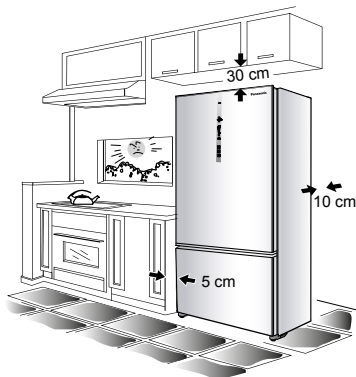

# Parts identification

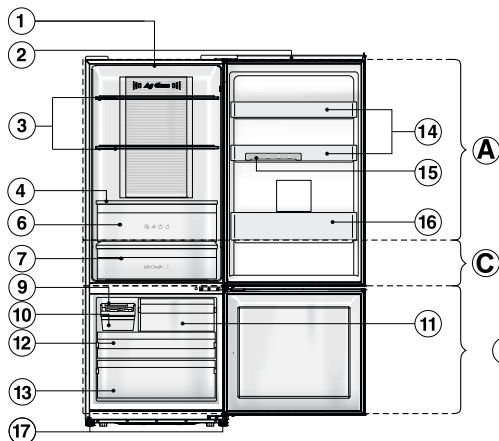


NR-BX418X, NR-BX468X  
NR-BX418G, NR-BX468G

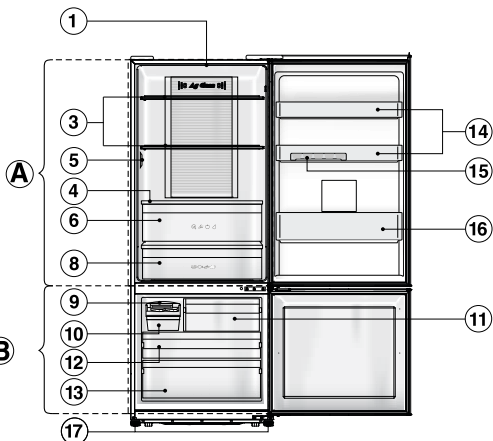


NR-BX418V, NR-BX468V

- (A) Fridge room
- (B) Freezer room
- (C) Prime Fresh room
- ① LED lamp
- ② Control Panel (Model: NR-BX418X, NR-BX468X  
NR-BX418G, NR-BX468G)
- ③ PC Glass tray
- ④ Glass tray crisper
- ⑤ Control Panel (Model: NR-BX418V,  
NR-BX468V)
- ⑥ Vegetable case
- ⑦ Prime Fresh case
- ⑧ Chill case
- ⑨ Ice twister
- ⑩ Ice box
- ⑪ Top freezer case
- ⑫ Middle freezer case
- ⑬ Bottom freezer case
- ⑭ Egg shelf
- ⑮ Egg tray
- ⑯ Bottle shelf
- ⑰ Adjustable bolt
- ⑱ Pan water evap
- ⑲ Compressor

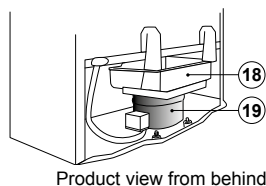


Product view from behind

② Control Panel  
(Model: NR-BX418X, NR-BX468X,  
NR-BX418G, NR-BX468G)

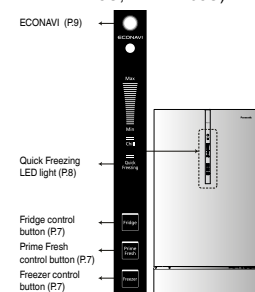

The controls are located on the front of the refrigerator.

⑤ Control Panel  
(Model: NR-BX418V, NR-BX468V)

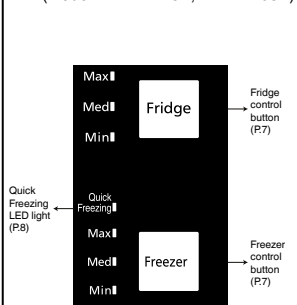

## SPECIAL FEATURE












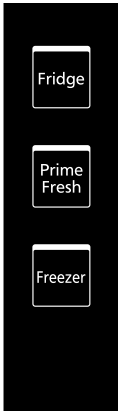


### 1) NON-FLON

This unit uses totally NON-FLON MATERIALS both for refrigerant (iso-butane (R600a)) and for insulation (Cyclo-Pentane). So, this refrigerator does not damage the earth's ozone layer and has almost no effect on global warming.

### 2) INVERTER

In accordance with temperature change inside the compartment, the motor runs at different speed. When the temperature is stable, the motor runs at a lower speed (energy saving & lower noise). When powerful cooling is required, the motor runs at a higher speed.


## Temperature control (Model: NR-BX418X, NR-BX468X NR-BX418G, NR-BX468G)

 <p>The temperature can be adjusted for Min - Max levels. Press  or  or  to adjust temperature in Fridge, Prime Fresh or Freezer room respectively.</p>	"Fridge"	 "Max"	Lower than Med by 2°C ~ 3°C
		 "Med"	Approx. 1°C ~ 6°C
		 "Min"	Higher than Med by 2°C ~ 3°C
	"Prime Fresh"	 "Max"	Lower than Med by 2°C ~ 3°C
		 "Med"	Approx. -5°C ~ -1°C
		 "Min"	Higher than Med by 2°C ~ 3°C
		 Chill	Approx. -1°C ~ 3°C
	"Freezer"	 "Max"	Lower than Med by 2°C ~ 3°C
		 "Med"	Approx. -23°C ~ -17°C
		 "Min"	Higher than Med by 2°C ~ 3°C


## Temperature control (Model: NR-BX418V, NR-BX468V)

The temperature can be adjusted for Min-Max levels. Press  to adjust temperature in Freezer room and press  to adjust temperature in Fridge Room.

### Fridge Room temperature control

"Max" Lower than Med by 2°C ~ 3°C	
"Med" Approx. 1°C ~ 6°C	
"Min" Higher than Med by 2°C ~ 3°C	

### Freezer Room temperature control

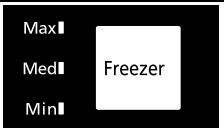"Max" Lower than Med by 2°C ~ 3°C	
"Med" Approx. -23°C ~ -17°C	
"Min" Higher than Med by 2°C ~ 3°C	

Temperature in Chill case is automatically set at approximately -1°C ~3°C

### Remark

While operating the refrigerator for the first time, after connecting the plug, adjust the temperature to "Med" position of each control and leave it for 24 hours for the effective cooling operation. After that, adjust the temperature as you prefer. If you want to save the energy, do not adjust the temperature lower than the actual operating condition.

# Temperature control (Fine adjustment mode)

This refrigerator is specially designed for appropriate use, which can adjust the temperature level to detailed 9 levels with the following details.

## How to operate the “9 levels” mode

### For the Freezer room

1. Set LED display to “Min” with the “Freezer” button.
2. Press and hold the “Freezer” button (for a few seconds) until the LED display return to show at “Min” position.
3. Set “9 levels” mode following below table mentioned by pressing the “Freezer” button.

### ■ LED Display table (Model: NR-BV418X, NR-BX468X, NR-BX418G, NR-BX468G)

Cooling Level									
Step	1	2	3	4	5	6	7	8	9
LED DISPLAY									

Lighting

Blinking

Not lighting

### ■ LED Display table (Model: NR-BX418V, NR-BX468V)

Cooling Level	<div><div>Minimum</div><div><div></div><div></div><div></div></div><div>Maximum</div></div>									
Step	1	2	3	4	5	6	7	8	9	
LED DISPLAY	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>	<div>Max  </div> <div>Med  </div> <div>Min  </div>

Lighting

Blinking

Not lighting

### For the Fridge room

Operate above 1 ~ 3 steps with pressing “Fridge” button instead of “Freezer” button.

## To reset the setting “9 levels” mode

Repeat step 1 and 2, then the refrigerator return to normal operation mode.

### Remark:

Temperature control varies depends on the changing of environment and food storage quantity.

# Quick freezing

## How to operate the “Quick Freezing” mode

- Press the button “Freezer” until Blue light LED turns on. “Quick Freezing” mode starts after 10 seconds.
- The system will stop operating automatically when it runs for 120 mins (as ambient temperature is below 25°C) or 150 mins (as ambient temperature is above 25°C) and return to normal mode (Blue light LED turns off.)

### Remarks :

- If you want to stop the operation immediately, press and hold the button “Freezer” until Blue light LED turns off.
- Blue light LED flashing means that the defrosting system is now working “Quick Freezing” mode will start right after the defrosting operation is finished.
- Freezer temp. control does not operate during “Quick Freezing” mode.



## ECONAVI operation

### Model : NR-BX418X, NR-BX468X, NR-BX418G, NR-BX468G


Detect opening and closing of door and brightness around refrigerator, and automatically controls operation to save energy<sup>1</sup>.

#### ECONAVI lamp is on during ECONAVI operation

- This refrigerator will learn the lifestyle patterns of your family from opening and the time periods of infrequent use to perform ECONAVI operation.

##### Remark :

- The refrigerator learns your lifestyle pattern from the previous 3 weeks, and uses what it has learned from the 4<sup>th</sup> week onwards. Therefore, the ECONAVI lamp "ON/OFF" pattern may change from the 4<sup>th</sup> week onwards.
- The brightness of the lamp is lowered approximately 5 minutes after the lamp turns on.

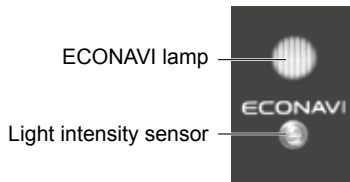

#### Setting for enabling ECONAVI operation

- ECONAVI operation is enabled automatically only when the temperature control of the freezer compartment are set to "Med".  
(However, ECONAVI does not operate while quick freezing is operating.)
- It is not possible to forcefully start ECONAVI operation.


##### Remark :

<sup>1</sup> Effectiveness differs depending on the ambient temperature, ambient brightness, number of times and when doors are opened and closed, and state in which food is stored.

### Model : NR-BX418V, NR-BX468V

This model also has ECONAVI mode, but it does not feature ECONAVI lamp and light intensity sensor.

## Food storage in the Freezer room

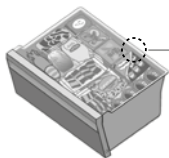

### Freezer Case

#### Maximum Storage

If the stored food exceeds edge of container, the freezer door can not close completely and the room may become frosted.


## How to make ice cubes

**Please use only the drinking water for ice making.**

1. Pull out the ice twister.
2. Fill water in the ice twister until the water level line, then place it back.
3. To remove ice cubes
  - 1) Be sure to put in an ice box inside.
  - 2) Twist the ice twister clockwise.  
(The ice cubes will drop into the ice box.)

##### Remark

- If an ice twister is twisted while ice box is pulled out, ice and water will fall inside or on the floor.  
Please be sure to put in an ice box to receive the falling ice.
- Don't pour water into ice box for ice-making, otherwise the box may crack.

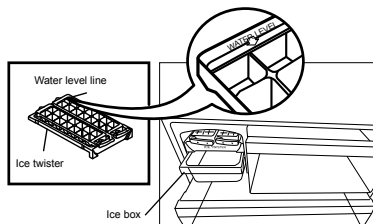

# Usage tips

**Freezer Room** For storage of frozen or dried foods.

**Fridge Room** For regular storage of food and drinks or temporary storage of those to be served soon.

**Prime Fresh Case** For storage of fresh food such as meat or fish for 1 week with soft freezing.

**Chill Case** For processed food or dairy products.



## How to clean the refrigerator

### 1 Interior cleaning

Wipe off the stain with warm water. When stains can not be removed easily, wipe them with warm water and soap by using a soft cloth.

Then wipe the soap off using damp soft cloth.

### 2 Exterior cleaning

Cleaning by using soft cloth with warm water and soap.

Then wipe off the soap with warm soft cloth.

### 3 Gasket door PC

- Clean by wiping softly. This area, petroleum gel was applied to reduce the friction of the refrigerator body. Be careful not to wipe off them.
- The door opening seal is replaceable when reaching end of life. While cleaning, push it back to the groove if it comes off.



**Note:** Do not use the following items. (Otherwise, the surface will be scratched.)



Kitchen detergents  
(They crack plastic!)

Alkaline or weak  
Alkaline



Cleanser or soap  
powder



Benzine, thinner, alcohol,  
acid, petroleum



Scrubber




Hot Water

## Removing trays for cleaning

### • Removing

1. Unhook the protrusion at the back by lifting it upward and pulling the tray outward until removing.

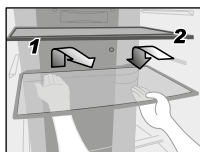

### • Attaching

2. Push the tray until it reached the end lock.


### Remark

- When removing tray above vegetable case, please pull out the vegetable case first and then follow to removing the tray as above details.
- In case of attaching the tray and it does not lock, make sure that you did not attach the wrong tray.
- Make sure that you don't attach the upper side of the tray downward.
- Two PC Glass trays can be used alternately, but Glass tray crisper should only be attached right above crisper case.

## Removing the freezer case, vegetable case and chill case for cleaning


### • Removing

1. Pull the case until it reached the end of stopper.
2. Raise up the front of case a bit and then completely take out.

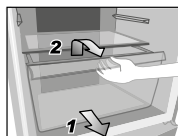

### • Attaching

1. Push the case on both supporters.
2. Raise it up, then push until it reached the end.

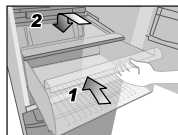


## Removing egg shelf, bottle shelf for cleaning.

### • Removing

1. Lift it upward, alternating between the right and left side.

### • Attaching



2. Placing it on both supporters, and then press until it reached the end of supporters.

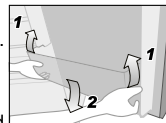

## Evap pan (Backside of the refrigerator)

### Removing


1. Tilt up the evap pan a bit and then lift it upward until the evap pan hole unlocks from the hook evap pan.
2. Pull the evap pan until it touches with the evap pipe then carefully take it out under the evap pipe.

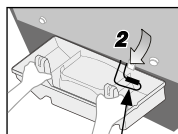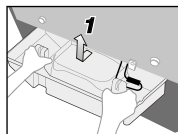

Evap pipe

### Attaching

1. Insert the evap pan under the evap pipe.
2. Insert the evap pan hole into the hook evap pan as well as press-fitting both sides.

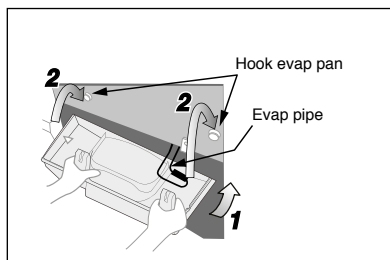

### Requests

- Do not damage or deform the evap pipe.

## Troubleshooting

### The refrigerator does not operate.

- Check that the plug and its socket are in good condition.
- Check if there is any problem on main fuse and electrical system of the house.
- Check by unplugging and wait for 10 minutes before plugging it back in.

### The refrigerator does not cool enough.

- Check to be sure that light in control panel is displayed at proper position.
- Check to see if the refrigerator is overloaded with stuff or there is any hot foodstuff refrigerated inside.
- Is the refrigerator exposed directly to sunlight or heat source?
- Is the refrigerator door completely closed?
- Is the refrigerator door opened frequently?

### Vapor generated inside and outside the cabinet / surface of door.

- Condensation may appear on the surface of cabinet when humidity is high, e.g. during rainy season or the air circulation is not good.
- If there is condensation inside, check if the door is completely closed. Is the refrigerator frequently opened or left open for a long time? Is there any hot foodstuff refrigerated inside?

### The refrigerator generates noise.

- Check if the refrigerator is located on a stable floor or is installed properly.
- Check if there is any object in contact with the refrigerator.
- After installation, the refrigerator may make loud noise. The noise become small when the refrigerator has been cooled.

### Food becomes frozen

- Do you put the food near cold air duct?
- Do you adjust the temperature control at "Max"? Adjust to "Min".
- Do you put food in chill case?

**ECONAVI does not operate.**  
(the ECONAVI lamp does not light)

- Is the quick freezing operating?
- Are the temperature setting of Freezer room set to something other than "Med" ?
- Did you open the doors frequently, or store very hot food?
- The learning function may automatically disable ECONAVI operation during times of frequent use.

**ECONAVI operation is rarely performed.**

- Is there a power failure?  
If a power failure occurs, the learning function data collected up until that will be lost. ECONAVI operation will rarely be performed until the learning function has collected the data again.

**ECONAVI operation is stopped part way through.**

- If for example, defrosting (auto) is turned on during ECONAVI operation, the normal cooling operation will need to be performed afterwards so ECONAVI operation may be stopped.
- The learning function may be sometimes restart the normal cooling operation.

**ECONAVI operation is performed too often (the ECONAVI lamp rarely turns off).**

- Is the light intensity sensor covered?
- Is there dirt scratches on the control panel (light intensity section)?
- ECONAVI operation may be performed while the refrigerator is being used depending on the conditions of use, but the cooling performance is maintained.



## Specifications

Model No.		NR-BX418X NR-BX418V	NR-BX418G	NR-BX468X NR-BX468V	NR-BX468G
Freezer Star Rating		✱✱✱			
Capacity (L) (IS 15750:2006)	Total	407		450	
	Freezer	134			
	Refrigerator	273		316	
Outside Dimensions Width x Depth x Height (mm)		685 x 698 x 1,624	680 x 700 x 1,624	685 x 698 x 1,764	680 x 700 x 1,764
Net Weight (kg/lb)		64 / 142	72 / 160	66 / 145	74 / 164
Refrigerant Type		R600a			
Rated Voltage (V) Rated Frequency (Hz)		Refer to the rating label attached inside the cabinet.			

## Memo

[illegible]

# Memo

## Disposing of Waste Electrical & Electronic Equipment

Declaration of Conformity with the requirements of the e-waste (Management and Handling) Rules, 2011 (adopted by Notification S.O.1035(E) of Ministry of Environment and Forests)

The Product is in conformity with the requirements of Rule 13 of the e-waste Rules.

The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr<sup>6+</sup>) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.



For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized Collection Centre, registered Dismantler or Recycler, or Panasonic Service Centre when disposing of this product.

Please see the Panasonic website for further information on Collection Centres, etc.

<http://www.panasonic.com/in/corporate/sustainability/panasonic-india-i-recycle-program.html>

**Panasonic Corporation**

Web site : <http://www.panasonic.com>

© Panasonic Appliances Thailand Co., Ltd. 2015