
Panasonic Battery Shaver

## **Panasonic**

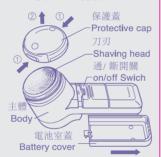

## 使用方法:

- 1.打開電池室蓋·對正⊕⊖ 記號將兩個"AA"乾電池 装妥。
- 2. 打開保護蓋,將開關移至 "on"位置。刀刃製造得很 薄,宜小心使用。
- 3. 清理: 拆下刀刃,用附屬 刷子將髮毛刷乾淨。 请勿使用水或酒精清理。
- 4. 若鬚刨久而未用,應將電 芯取出,以免漏泄。



Made in Thailand

## **Panasonic**



**Battery Shaver** 

## How to use:

- 1. Remove the battery cover and insert two AA size batteries so that the positive and negative markings match those in the battery holder. Always replace both batteries at the same time.
- 2. Remove the protective cap. Slide the switch to the "on" position. Because the shaving head is thin and precise, handle it carefully.
- 3. To clean: Remove the shaving head by turning it counter-clockwise. Use the cleaning brush provided to brush away the bits of hair inside the cutter housing.
- 4. If the shaver is not be used for a long time, remove the batteries to prevent possible leakage.

この商品は日本国内での補修サービス はできません。

Panasonic ES 534 DP

**Battery Shaver** 



CAD NO.10A048 FILM NO.12B232A /M DATE:13/02/12 ANN CTP, Portrait, 175 Lpi

10A048 MST