

Operating & Installation Instructions

Fully Automatic Washing Machine
(Household Use)

Model No. **NA-FD125V3**



Contents

Safety Precautions	2
Part Names / Accessories	6
Before Washing	7
Operation Panel	8
Washing	9
Variety of Programs	10
Detergent / Softener / Bleach	12
Washing Options	14
• Preset	
• Wash / Rinse / Spin	
• Delicates	
• Blanket	
• Stain Master +	
• Air Dry (90 min)	
• ECONAVI	
Convenient Functions	18
Contents of Programs	19
Maintenance	20
Installation	24
Error Display	28
Troubleshooting	30
Specifications	32

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

AWW9901CD3C0-0C0

A0224-0(M)

Printed in Vietnam

02-2024



Safety Precautions



WARNING


May cause serious injury or death.

Children must not use it alone.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Do not touch the tub until it stops.

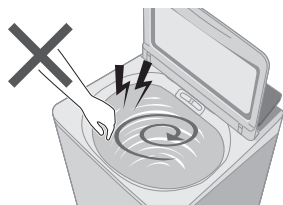

- If the tub does not stop within 15 sec:

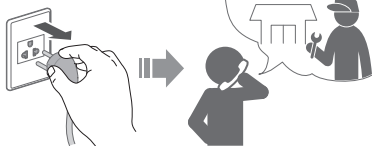


May cause fire or electric shock.


Do not touch it with wet hands.




Do not hold or pull on the cord.

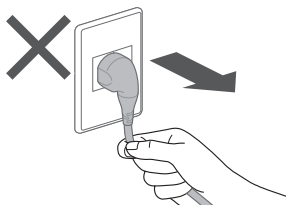


Do not use.

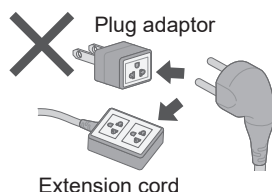

Fully insert it.

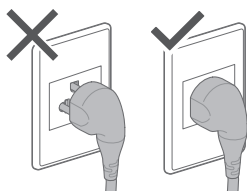


Do not use.

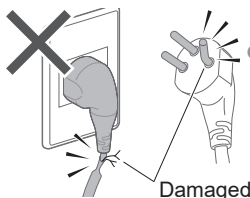


- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


In case of failure or damaged power cord, stop use and ask the service centre.

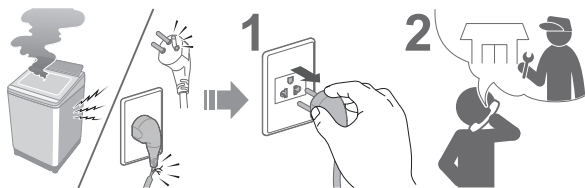

**Securely insert the ground prong.
Call your local dealer for a new socket.**

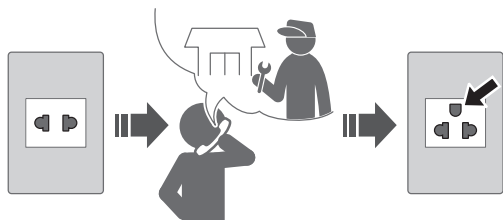


 Use a socket appropriate for this appliance.



• The plug shape, socket shape and rating requirement varies with the region.

Accumulated dust may cause fire.

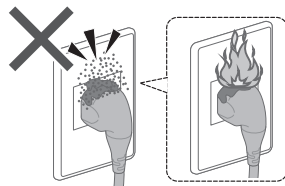

Wipe the power plug periodically.



Keep away from flammable materials.



May cause failure.

Never disassemble, repair or modify it by yourself.




Safety Precautions (continued)



CAUTION

May cause injury.

Be careful not to get your fingers caught.

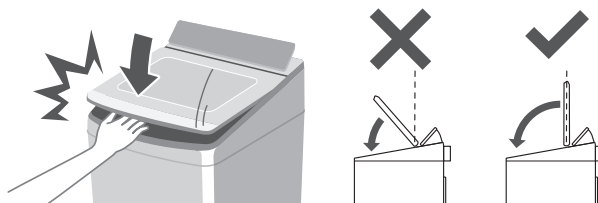

Do not climb or put objects on the appliance.

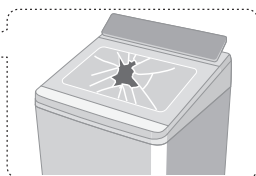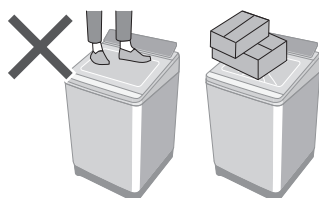


- If the lid is broken, immediately stop using.

Do not touch when it is hot.




Be careful of your hands and feet.

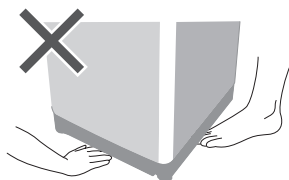


May cause water leakage.

Turn off the water faucet.

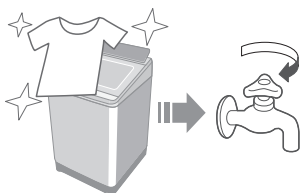


Use new hose-sets.

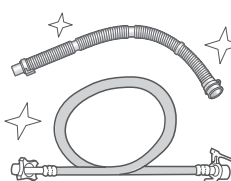

- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

May cause failure.


Keep away from heat and direct sunlight.

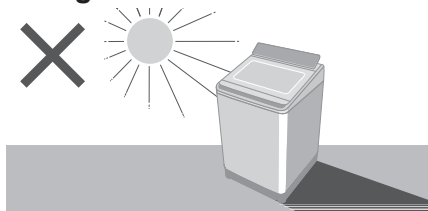

Do not wash waterproof items.




Do not obstruct.

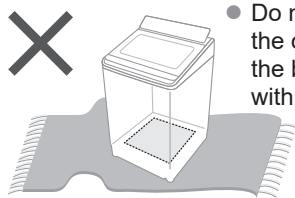

- Do not obstruct the openings of the bottom face with carpet, etc.

Do not use hot water.

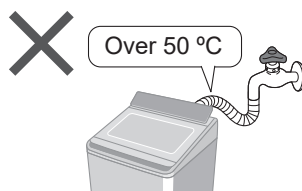


For Machine-washable items only.



- This appliance is intended to be used in household. This appliance is not intended to be used in applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in laundrettes.


Part Names / Accessories

Part names

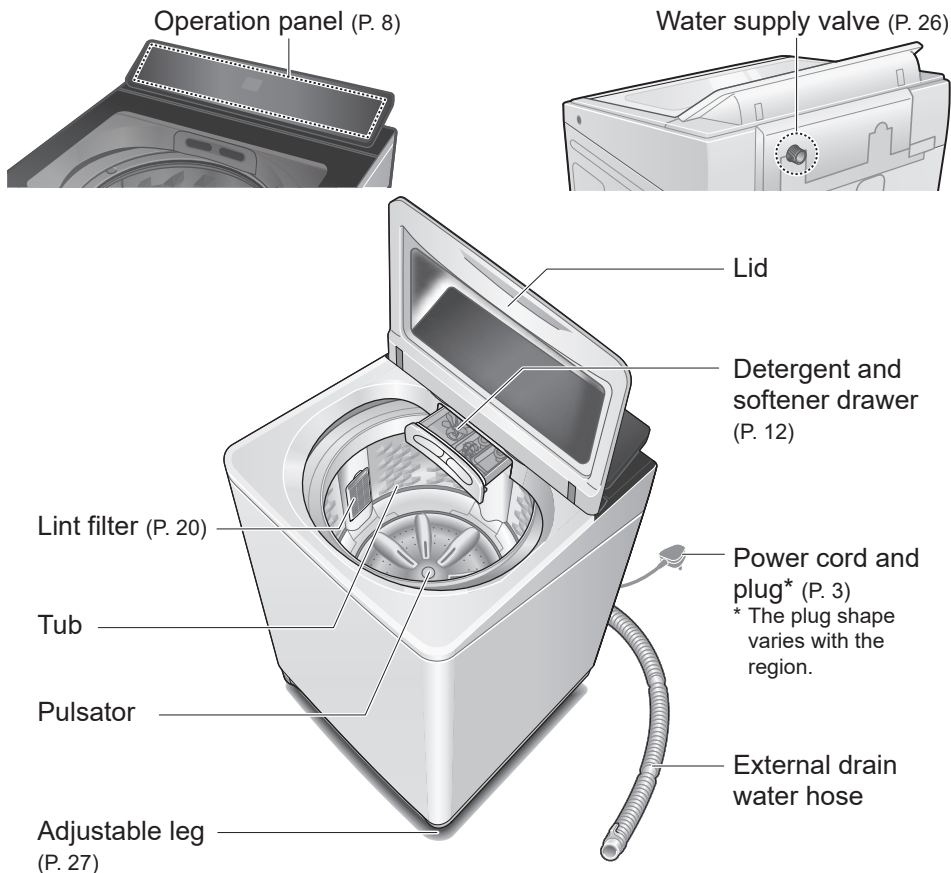


Accessories


☐ Water supply hose (1)
(P. 26)

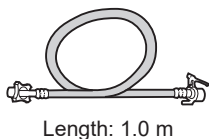

☐ External drain water hose (1)
(P. 25)

 

☐ Bottom cover (1) / Screw (1)
(P. 25)

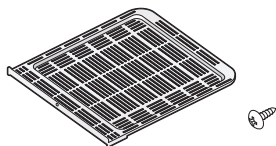





☐ Water tap adaptor (1) (P. 26)




Before Washing

Laundry preparation and check

Pre-laundry check

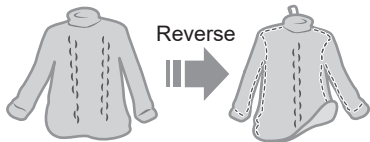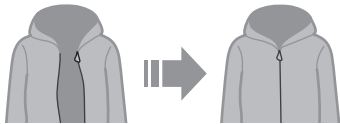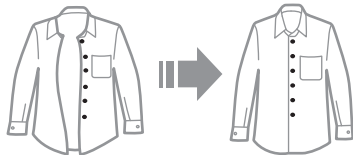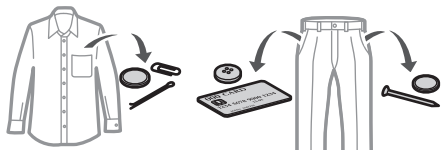


Clothes likely to pill

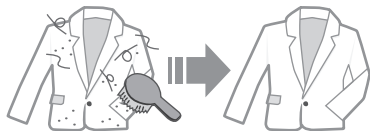


Paper diapers

To prevent colour staining

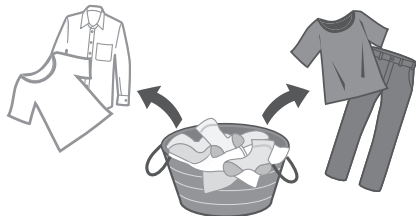


Use laundry nets for delicates

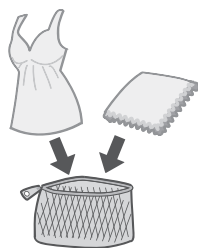

For "Stain Master +" (P. 16)

- Pretreatments for heavily stains

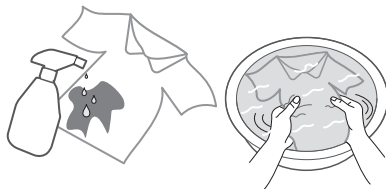

- Observe the clothes' care labels



- For  60 °C Steam Bacteria Elimination

- Coloured clothes
- Shirts with stiff fabric



- Rubber clothes
- Graphic shirts



Operation Panel

Change process settings (P. 14)



Flashing (in progress)

Water amount



77 L

▼ Approx. 5 sec

Remaining time



Time Left
60 min

Detergent volume

Water level (L)			Detergent *
77	70	65	
60	55	50	
45	40	35	
25			

* : 1 scoop of detergent



Refill (P. 19)

Child Lock lamp (P. 18)

Auto Tub Clean (P. 18)

Tangle Care (P. 10)

Preset (P. 14)

Air Dry (90 min) (P. 17)

Child Lock (P. 18)

Time Left

88

hours min

Start/Pause

ECONAVI (P. 17)

Stain Master + (P. 16)

Program selection (P. 10)

Power On/Off


Heater On: Lamp flashes

NOTE


- In case of a power failure.
 - ⇒ Operation will resume from where it stopped when the power recovers.
- If you do not press  within 10 minutes after power-on.
 - ⇒ Auto power off.
- The wash process setting of the “Stain Master +” and “Soak” programs cannot be changed.

Washing

1

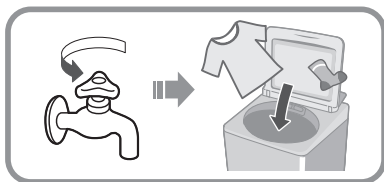

2

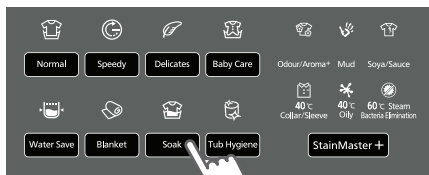

(P. 10)

■ Preset timer



(P. 14)

3

Measures the amount of laundry.



10 sec



77 L

5 sec



Time Left
60 min


20 sec



4

77 L

(P. 8)

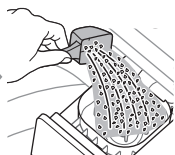


(P. 12)

5



■ After pressing “Start”

 
- To change each operation (while washing).



- To check or change the water level (while washing).
- You cannot change the program.



 Variety of Programs

	Program	Purpose	Max. capacity (kg)
Wash	 Normal (P. 9)	● Everyday clothes 	12.5
	 Tangle Care (P. 9)	● Anti-tangling • Washing more gently than “Normal” to reduce tangle. • Disentangling clothes after spin: 6 kg or less.	
	 Speedy (P. 9)	● For light soil 	12.5
	 Delicates (P. 15)	● Washing gently 	4.2
	 Baby Care (P. 9)	● Clothes for babies & sensitive skin - Rinsing thoroughly 	12.5
	 Water Save (P. 9)	● Saving water 	12.5
	 Blanket (P. 15)	● Comforters and blankets  With a machine-washable tag	4.2


	Program	Purpose	Max. capacity (kg)
Wash	 Soak (P. 9)	For heavy soil Presoaking to wash 	12.5
	StainMaster + (P. 16)	For the following stains	6.0
	Light  Odour/ Aroma+	Use more softener to keep the scent longer	
	 Mud		5.0
	 Soya/Sauce		
	 Collar/Sleeve (40 °C)		
	Heavy  Oily (40 °C)		
	Bacteria Elimination (60 °C Steam)		
Dry	 Air Dry (90 min) (P. 17, 23)	Drying synthetic fibre clothes 	2.0
Maintenance		Tub drying 	—
	 Tub Hygiene (P. 23)	Tub cleaning Removing black mould and smell 	—

NOTE


- “Normal” program and “Water Save” program are recommended for a normally soiled load at the rated capacity of this washing machine.

Detergent / Softener / Bleach


- Follow the instructions on each package.
- For cleaning (P. 21)
- Close auto dosing drawer completely before use.

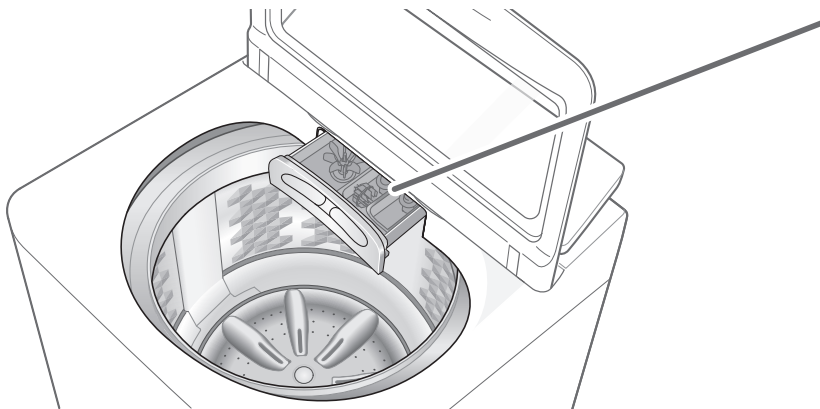

Detergent

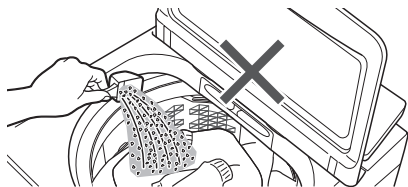

- **Do not pour detergent directly into the tub.**
- The level of foaming depends on the load size, soil, detergent, and water hardness.



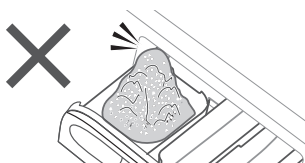


Bleach

Whiten bleach
(chlorine bleach)




- To use bleach, put bleach in the powder detergent case (if bleach is in powder form) or liquid detergent case (if it is liquid bleach).

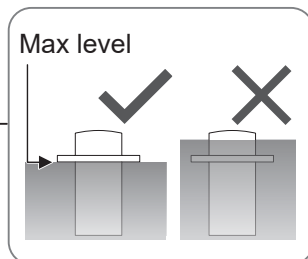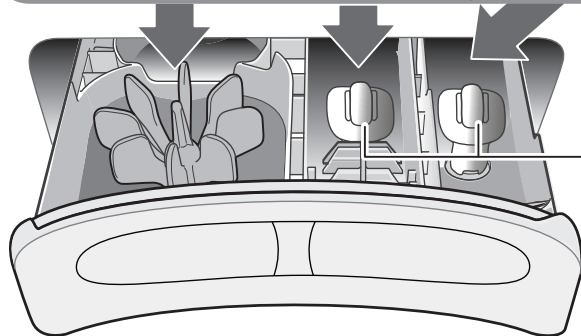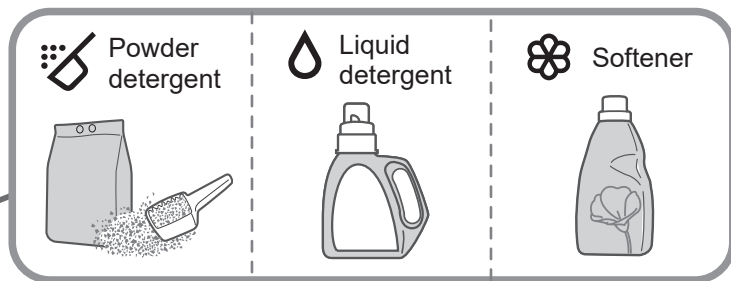

Softener

- To put softener while the machine is operating:

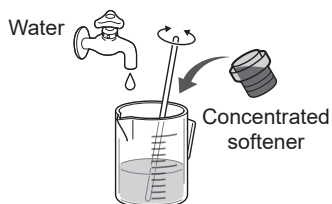


Do not use separated or solidified softeners

- Softener cannot be used with the "Water Save" program.

Washing Options

Preset

Set how many hours later to finish operation.

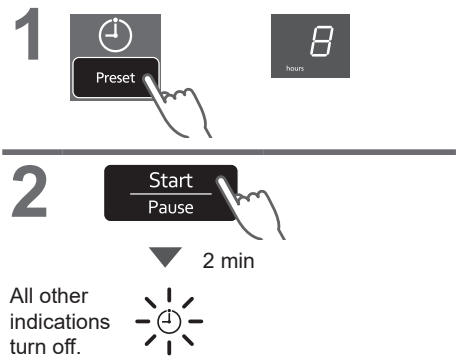

Normal	2 - 24
Speedy	1 - 24
Delicate	-
Baby Care	2 - 24
Water Save	2 - 24
Blanket	-
Soak	3 - 24
StainMaster +	(P. 16)
Air Dry (90 min)	-
Tub Hygiene	-


■ To confirm



■ To cancel or change



Wash / Rinse / Spin

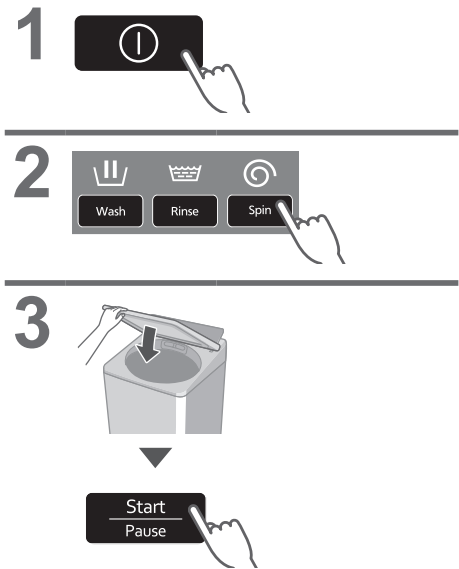

NOTE


- Not available for "Tangle Care".



Delicates

65 L	4.2 kg
55 L	3.0 kg

NOTE

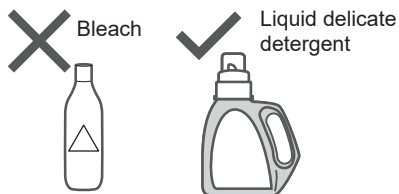


■ After operation ends




Blanket

Max. water amount	4.2 kg • 100 % synthetic fibre • 100 % cotton
----------------------	---

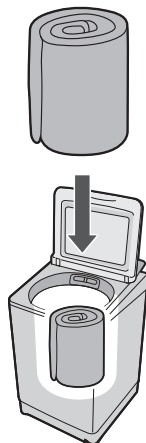

NOTE

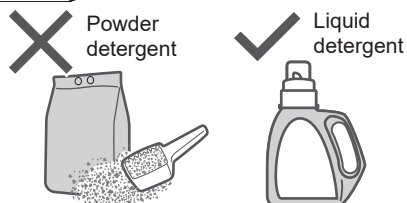

NOTE

- The water amount indication shows the maximum and cannot be changed.

Washing Options (continued)

Stain Master +

Preparation: (P. 7)



1



2



- Timer preset (hours) (P. 14)
- Collar/Sleeve: 3 - 24
- Oily: 3 - 24
- Bacteria Elimination: 4 - 24
- Others: 2 - 24


3



4




5

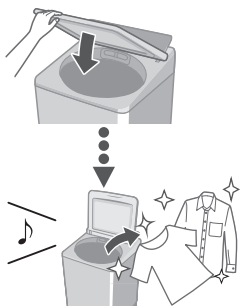

NOTE


- Max. capacity (P. 11)

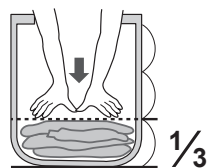

- Max. water amount: 65 L
- You cannot change the wash process setting of this program.
- When using




- Make sure to close the lid.

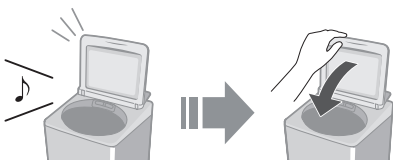

- Dew condensation may occur on the lid, etc.

Condensation

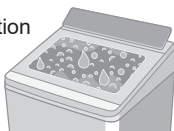

Air Dry (90 min)

The air blown from the tub rotation removes water from clothes.

- Dryable clothes: Synthetic fibre (Max. 2.0 kg)




NOTE


- Clothes may not be sufficiently dried (depends on amount and type of clothes, and the temperature).
- This function does not use a heater. Clothes may be cold and half dry.

ECONAVI


- “Normal” program only

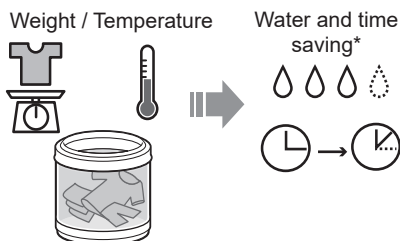

■ Lamp indications

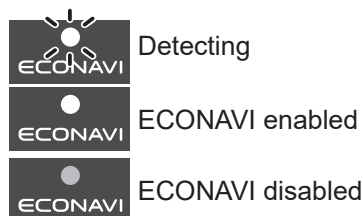

■ To turn on/off

 

* Test conditions:

- “Normal” program
- Comparison between ECONAVI-enabled operation (amount of laundry: 2.0 kg, water temperature: above 35 °C) and ECONAVI-disabled operation (amount of laundry: 12.5 kg (rated capacity), water temperature: below 15 °C)
- Test was conducted based on IEC60456 except for water temperature.

Convenient Functions

Setting Auto Tub Clean

Preventing black mould, available with all programs except "Water Save" and "Air Dry (90 min)".

■ Lamp indications



Operating



Function enabled



Function disabled

■ To turn on/off

- 1
- 2
- 3 Hold 3 sec
- 4 to select ↔ off on
- 5


Cancelling end buzzer

- 1 & Hold 3 sec

■ To reset:

same procedure

Setting Child Lock

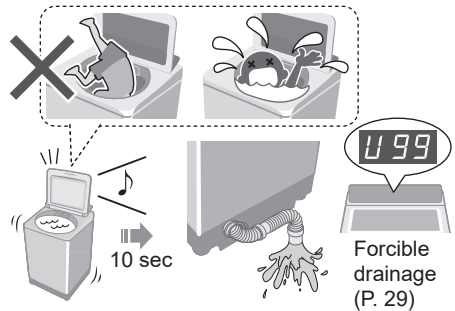


* This function does not lock the lid and button operations.

- 1
- 2 Hold 5 sec

■ To cancel: same procedure

NOTE

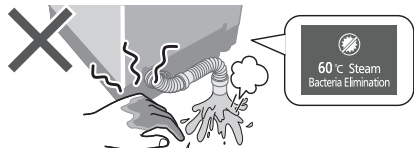

Contents of Programs


Program		Total time* ¹ (min)	Wash (min)	Rinse (times)	Spin (min)
	Normal	60	9	2	7
	Tangle Care	70	13	2	7
	Speedy	45	3	2	5
	Delicates	50	9	2	1
	Baby Care	70	9	2	7
	Water Save	85	12	4	5
	Blanket	70	12	2	5
	Soak	125 * ²	71 (Soak 59)	2	7
Stain Master +	Odour/Aroma+	80	13	2	7
	Mud	90	40	2	7
	Soya/Sauce	115 * ²	62 (Soak 29)	2	7
	Collar/Sleeve	150 * ²	33 * ³	2	7
	Oily	155 * ²	38 * ³	2	7
	Bacteria Elimination	195 * ²	30 * ³	2	7
	Tub Hygiene	150 * ²	65 (Soak 62)	2	30

*1 Total time is approximate (When the standard water supply rate is 15 L / min and the water temperature is 28 °C).

*2 Remaining time of 99 minutes or less will be displayed. -- → 99

*3 Excluding water heating time. Symbol -- will be displayed during the water heating process.

 - “Refill”: to fill the tub with water and rinse while supplying water.




Maintenance


Lint filter

After each operation




1

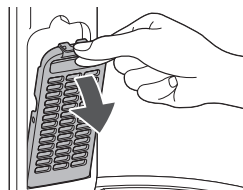


2

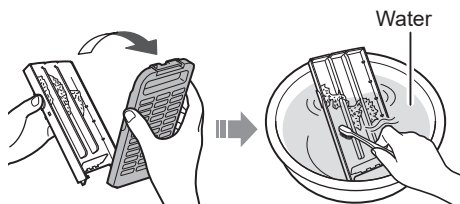


3

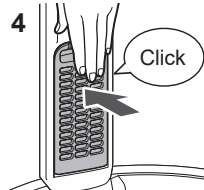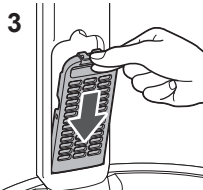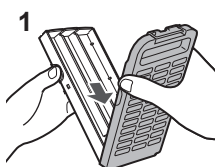

NOTE

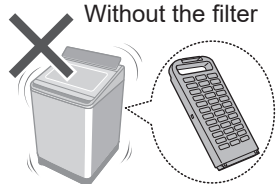

If it is difficult to remove the filter

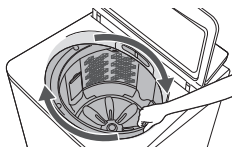

If the filter is broken


Local dealer



Detergent and softener drawer


If stained with detergent or softener

1


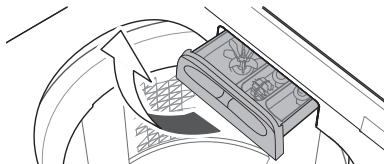


Remove


2

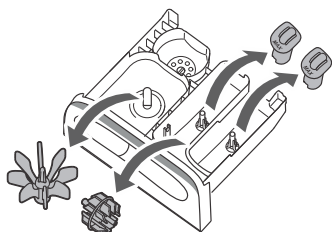


4

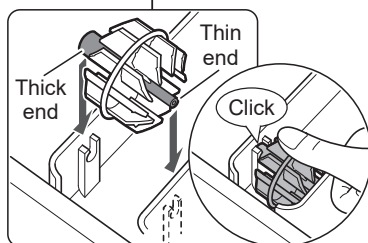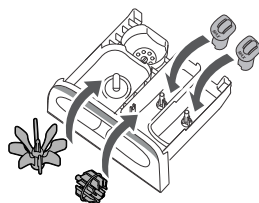

3

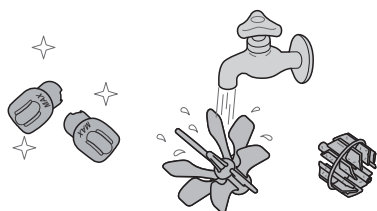

5

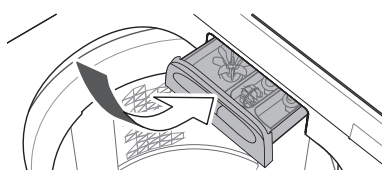


Attach

Main unit, lid




For heavy soil

 Neutral kitchen detergent




×

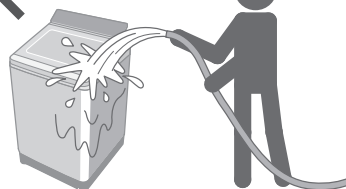

Maintenance (continued)

Water supply filter


If water does not flow smoothly

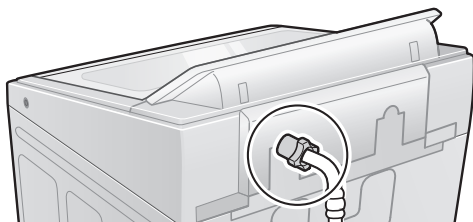


1



5

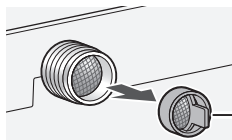


2

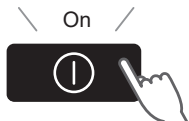


6




3

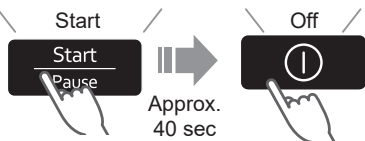


7

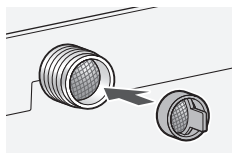

4

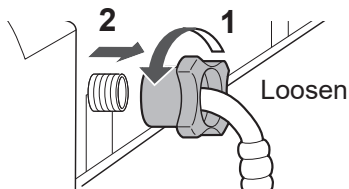


8

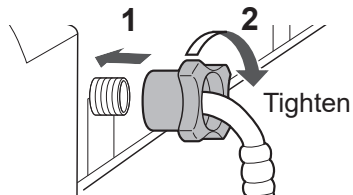

Tub

Once a week <Air Dry>

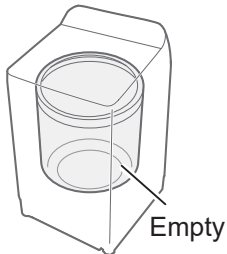


Once a month <Tub Hygiene>


1




5

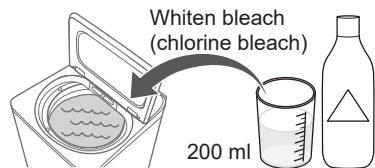


2

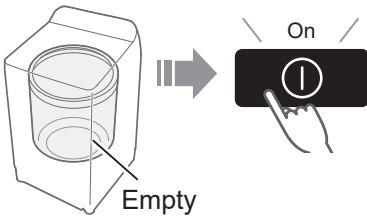



6

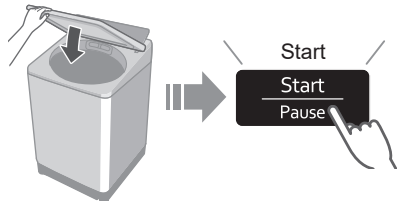

3



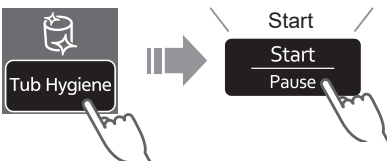


4

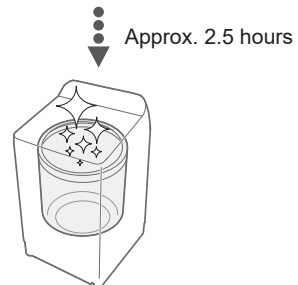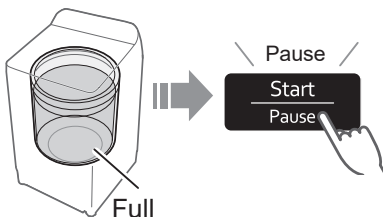

Installation


Check the location.

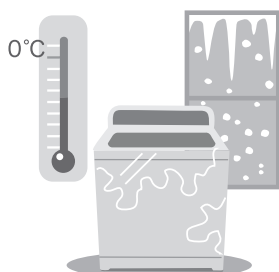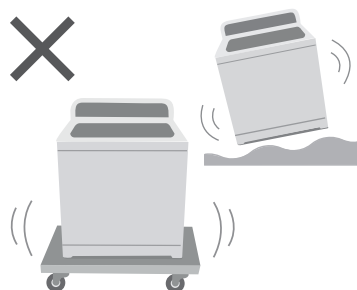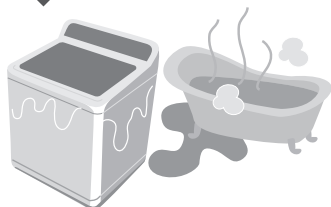



Make sure to ask a service person for installation.








- Do not install by yourself.
- Follow this installation method.
If you do not, Panasonic will not be liable for any accident or damage.

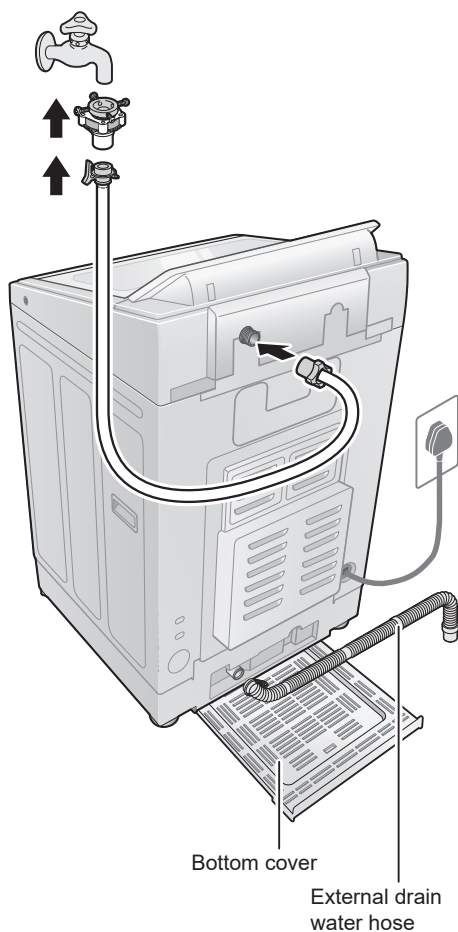

Attach the bottom cover

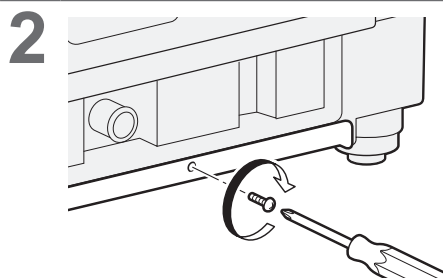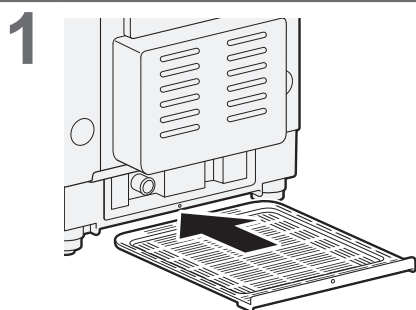


Attach the external drain water hose

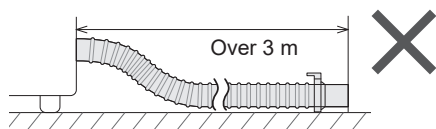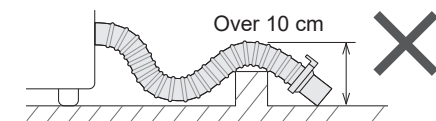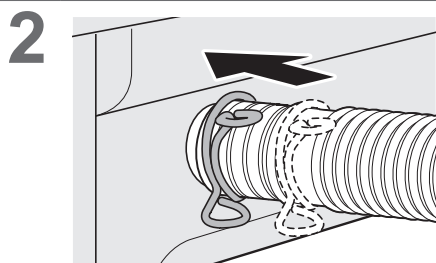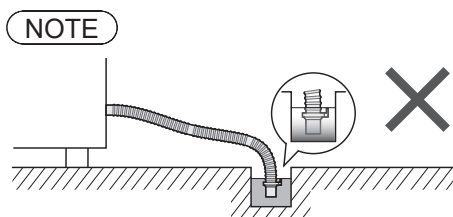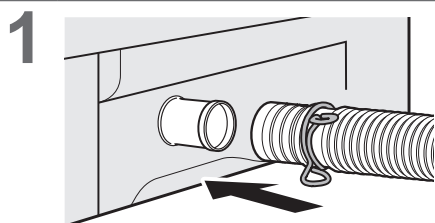


Installation (continued)


Connect the water supply hose

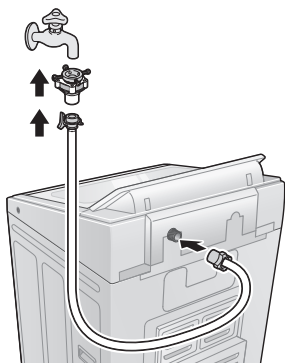


1

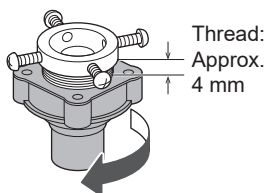


2

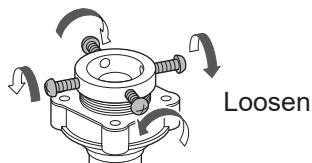


3

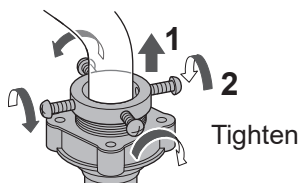


4

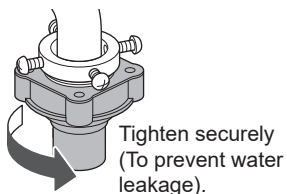

5

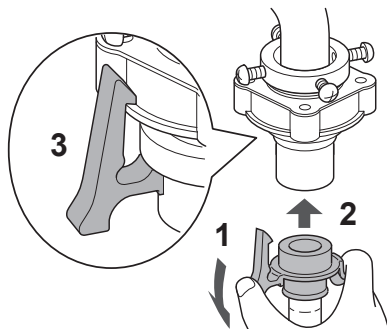

6

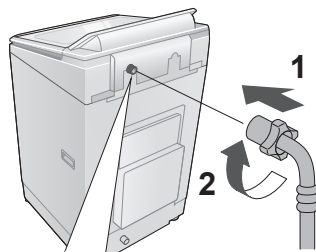

3


Check that the elbow is not loose.



CAUTION

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.


Connect the power plug and grounding

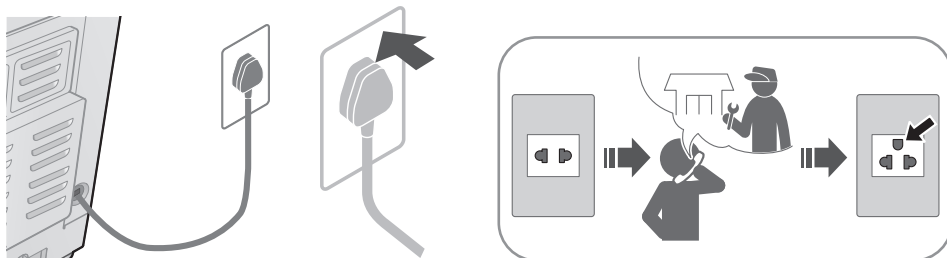


Check that the washing machine is level

■ If the washing machine wobbles


Loosen

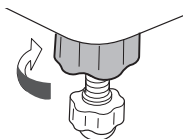


Adjust

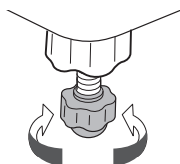


Tighten

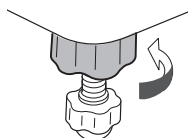

Trial operation

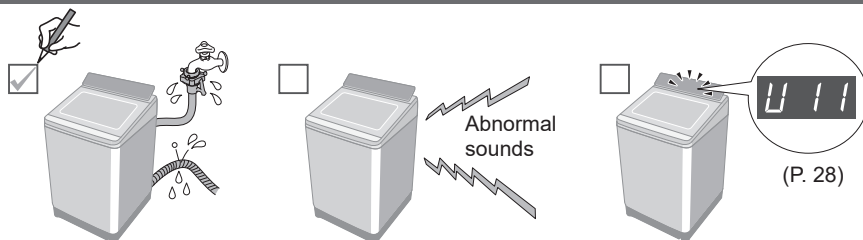

Error Display

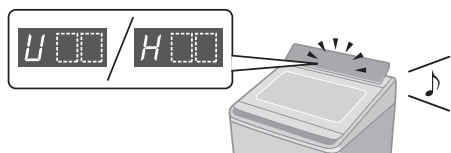


■ Preparation


Cancel Child Lock (P. 18)
if it is set.

Error Display	Points to be checked
Water cannot drain.	1 Check 2 Lint Over 10 cm Over 3 m
The lid is open.	1
Spin or "Air Dry" is not possible.	Uneven 1 Even 2 Unstable or incline 1 Stable 2

Error Display	Points to be checked
U 14 Water cannot be supplied.	
U 99 Water has been forcibly drained.	
H Inspection is required.	

Troubleshooting

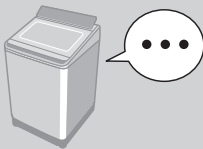	Symptoms	Points to be checked
Time	Indication increases or does not decrease. 	Time indication is approximate. Remaining time is corrected during operation. 
	Longer than the indication. 	When clothes are uneven.  When the water drainage is not good.  When the water supply is not good. 
	Operation passes the preset time. 	 The operation time may be longer.
Main unit	No operation 	☐ Check ● Power failure  ● Timer preset  ☐ Try ● Close the lid.  ● Turn on.  ● Insert the power plug completely.  ● Press "Start".  ● Turn breaker on. 
	Cannot change process settings (after start). 	☐ Try ● During wash process 1 Pause  2  3 Start  ● After wash process 1 Off  2 On 

 	Symptoms	Points to be checked
Wash	Water is supplied while washing. 	When water level drops.  When amount of laundry is large.  ⇒ Water is added automatically.
	The water level too high 	When laundry is wet.  When there is water in the tub before operation.  ⇒ The water level may be higher.
	too low 	When clothes are light (synthetic fibre, etc.).  ⇒ The water level may be lower.
Rinse	Operation started with rinse, but water is not supplied. 	When there is no water in the tub.  ⇒ Water is supplied after spin. When there is water in the tub.  ⇒ Water is supplied after water discharge and spin.
Spin	Spin changes to rinse. Rinse starts instead of spin. 	If clothes are uneven, this appliances automatically corrects unevenness by rinse process. 
	Irregular rotation 	The tub rotation speed is adjusted to reduce vibration. 


Troubleshooting (continued)

	Symptoms	Points to be checked
Others	Power failure/Breaker off. 	Operation will resume from where it stopped when the power is recovered. 
	StainMaster + has no effect. 	☐ Check ● Max. capacity (P. 11)  ☐ Try ● Pretreatments (P. 7)  ● Select according to the stain type. (P. 11) 

Specifications

Model No.	NA-FD125V3
Rated voltage	220 - 240 V
Rated frequency	50 Hz
Rated power consumption	1475 - 1750 W
Standard water amount	77 L
Maximum mass of dry cloth	12.5 kg
Product dimensions	639 mm (W) x 725 mm (D) x 1085 mm (H)
Product weight	40 kg
Pressure of tap water	0.01 - 1 MPa

 Penyelesaian Masalah (sambungan)

Gejala		Lain-lain
Kegagalan kuasa / Pemutus litar mati.		
		
Apabila kuasa pulih semula, operasi akan bersambung semula dari mana ia berhenti.		
		
Perkara perlu diperiksa		
Kegagalan kuasa / Pemutus litar mati.		
Apabila kuasa pulih semula, operasi akan bersambung semula dari mana ia berhenti.		
		
Perkara perlu diperiksa		

Spesifikasi

No. Model	NA-FD125V3
Voltan terkadar	220 - 240 V
Frekuensi terkadar	50 Hz
Penggunaan kuasa terkadar	1475 - 1750 W
Jumlah air standard	77 L
Berat maksimum kain kering	12.5 kg
Ukuran produk	639 mm (L) x 725 mm (D) x 1085 mm (T)
Berat produk	40 kg
Tekanan air paip	0.01 - 1 MPa



Dipilih mengikut jenis kotoran. (H. 11)

Memcuba

- Prawatan (H. 7)
- Maks. kapasiti (H. 11)

 
 
Semak

- Maks. kapasiti (H. 11)

Lain-lain

StainMaster+ tidak memberi kesan.




Gejala		Perakera perlu diperiksa	
Basuh	Air dibekalkan semasa mencuci.		Apabila paras air menurun. 
	Paras air		Apabila pakaian basah. 
	Tertialu tinggi		Dengan pakaian ringan (gentian sintetik, dll.). 
	Tertialu rendah		Paras air mungkin lebih tinggi. 
Bilas	Operasi bermula dengan proses bilas, namun, air tidak dibekalkan.		Apabila terdapat air di dalam tab. 
	Perubahan perah untuk bilas.		Jika pakaian tidak sekata, mesin basuh akan mengembalikan ketaksamarataan itu secara automatik dengan proses bilas. 
Perah	Bilas bermula bukan perah.		Kelajuan putaran tab dilaraskan bagi mengurangkan getaran. 
	Putaran tidak tetap		

Paparan ralat


Perkara perlu diperiksa

U 14

Air tidak boleh
dibekalkan.

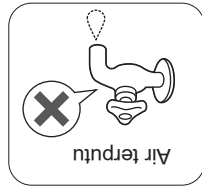

Air terputu

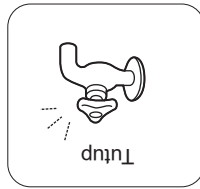

Tutup




1




Penapis bekalan
air (H. 22)

2

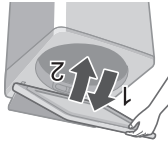

Air disalurkan
keluar secara
paksa.

U 99

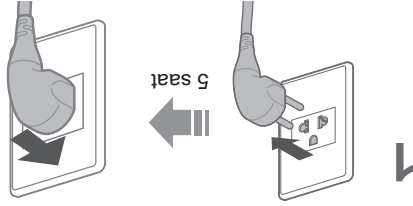

5 saat

1



Dengan Kunci Kanak-kanak
diletakkan



10 saat


Keluar secara paksa

Pemeriksaan
diperlukan.

H




1

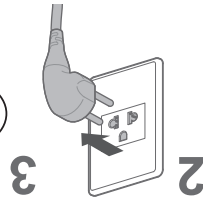


2

3

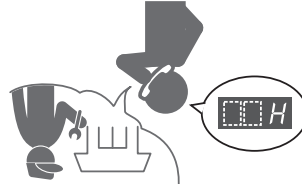



Paparan Ralat

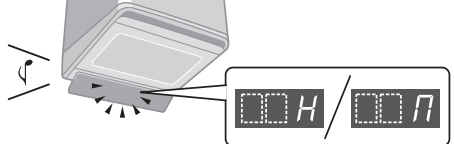

■ **Persediaan**
Batalan Kunci Kanak-kanak
(H. 18) jika ia telah ditetapkan.


Paparan ralat

Paparan ralat

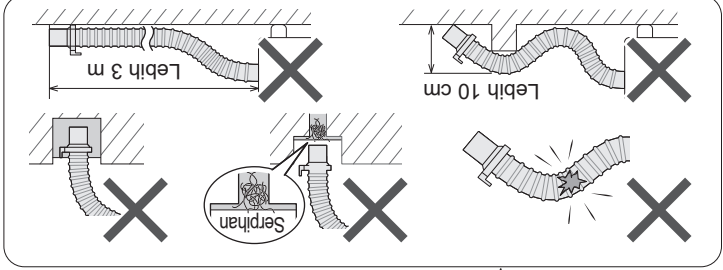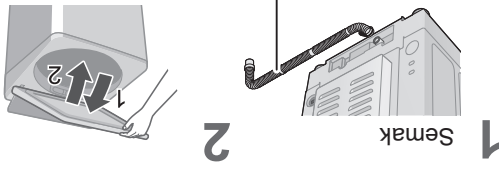

Air tidak boleh
disalurkan
keluar.

U 11

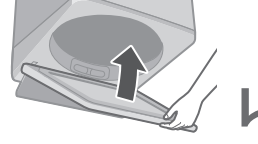

Penutup terbuka.


U 12



Tidak sekata

Sekata

2

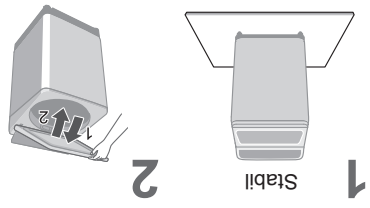


Tidak stabil atau condong

Stabil


2

Perah atau "Air
Dry (Kering
Udara)" tidak
boleh dipilih.


U 13

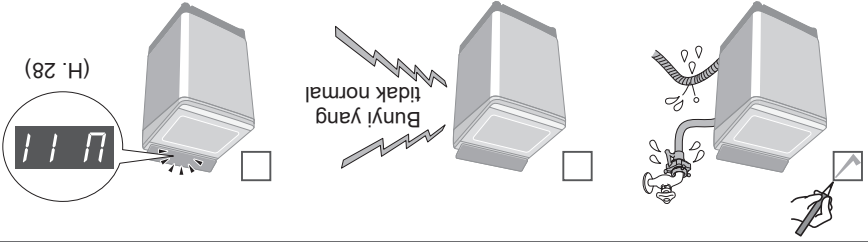


Operasi percobaan

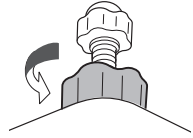

Ketatkan

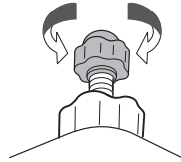



Melaraskan

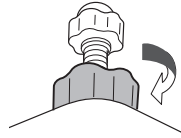

Longgarkan

■ Jika mesin basuh bergoyang







Pastikan mesin basuh adalah sekata

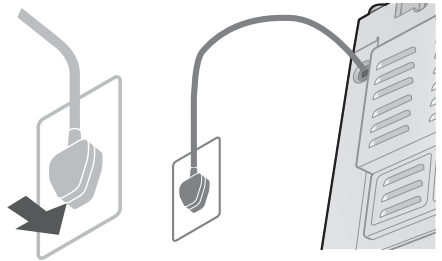
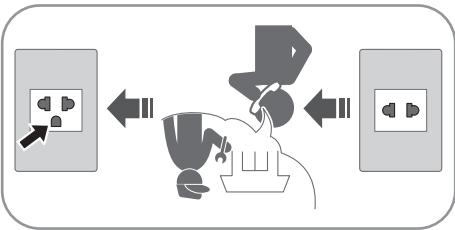


Sambungkan palam kuasa dan wayar pembumian



Pemasangan (sambungan)

Sambungkan hos bekalan air

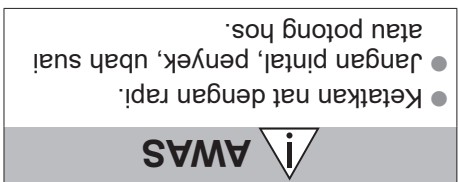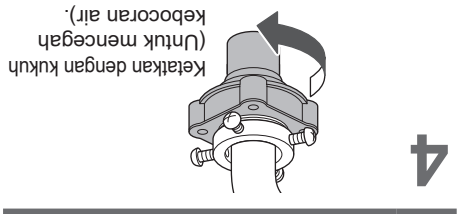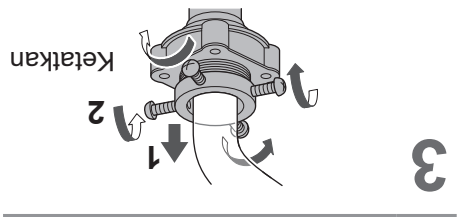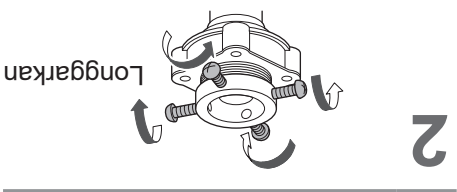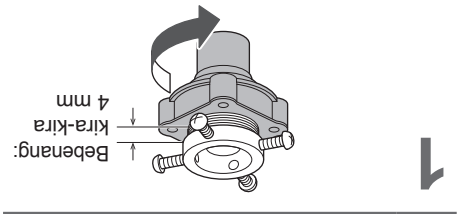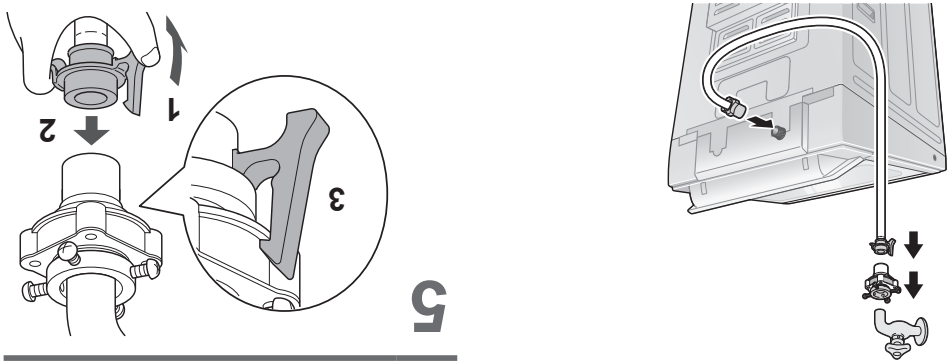

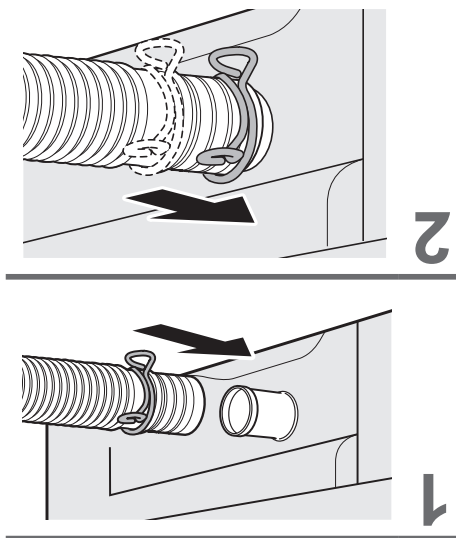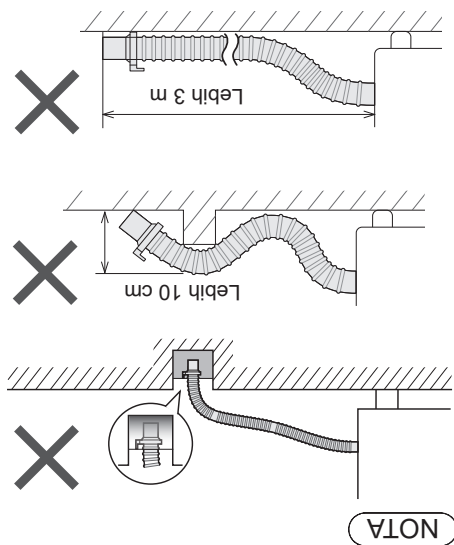





Pasangkan hos air saluran luar

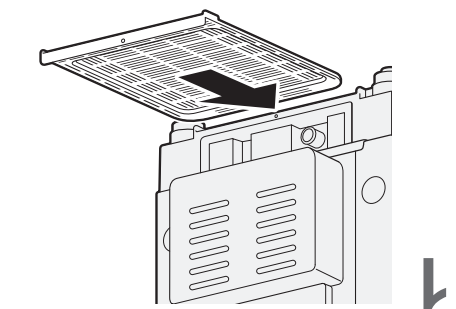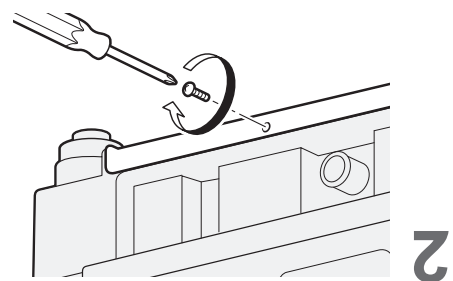

Pasangkan penutup bawah


Pemasangan

Periksa lokasi.

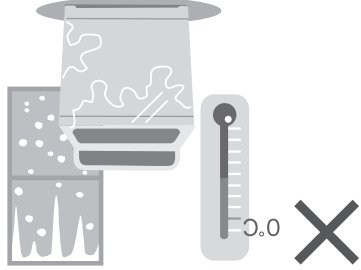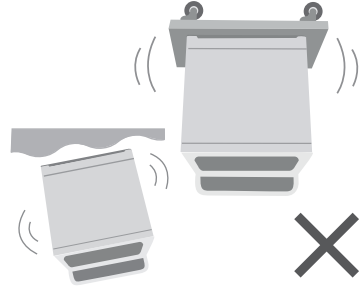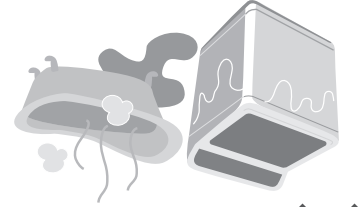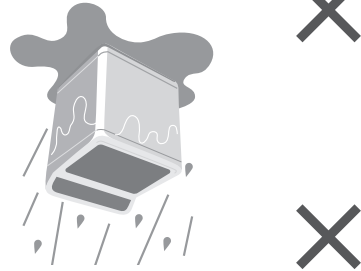


Pastikan anda meminta juruservis melakukan pemasangan.

■ Jangan pasang sendiri.
■ Mengikut kaedah pemasangan ini. Jika kamu tidak, Panasonic tidak akan bertanggungjawab atas sebarang kemalangan atau kerosakan.

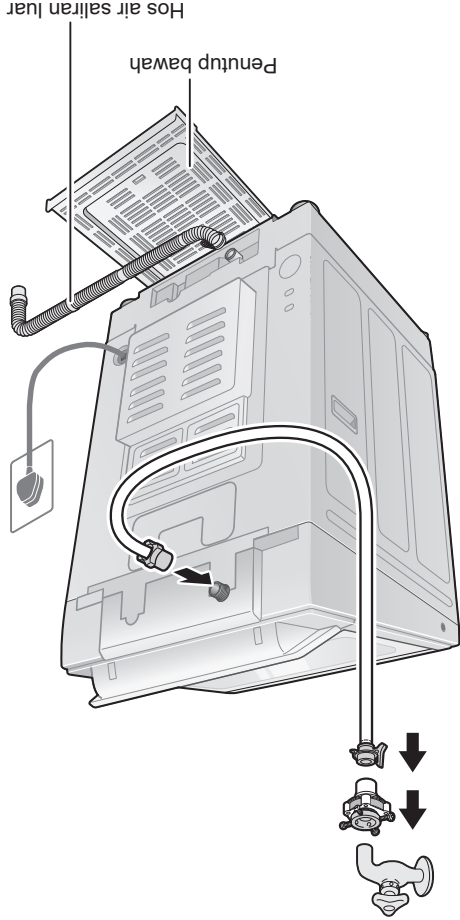

Tab

Sekali seminggu <Air Dry (90 min) (Kering Udara (90 min))>

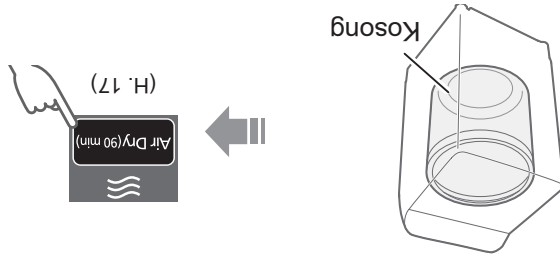


Sekali sebulan <Tub Hygiene (Kebersihan Tab)>

1




2

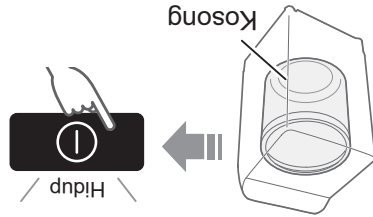


3




4

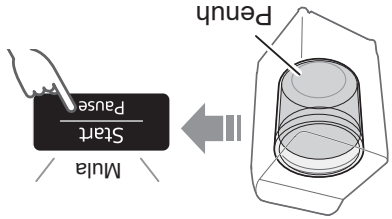


6

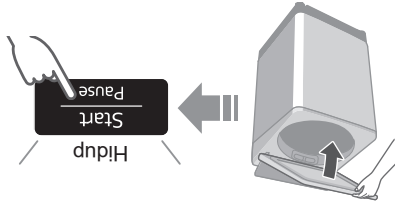

5

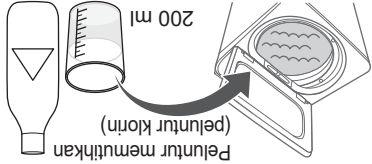



Anggaran 2.5 jam

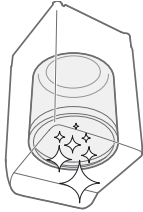


Penyenggaraan (sambungan)






Penapis bekalan air

Jika air tidak mengalir dengan lancar

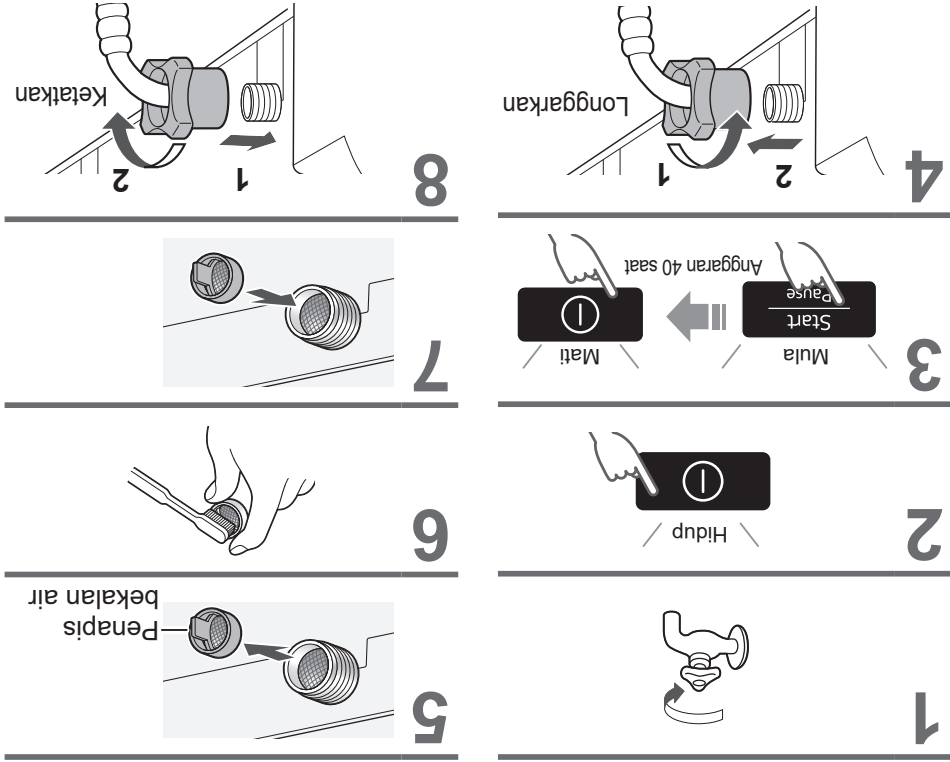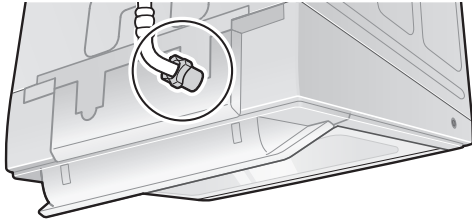

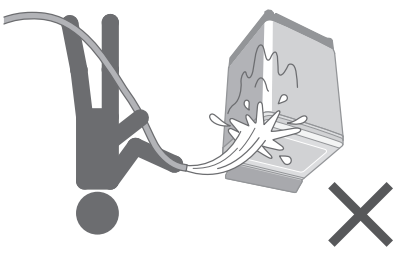

Unit utama, penutup

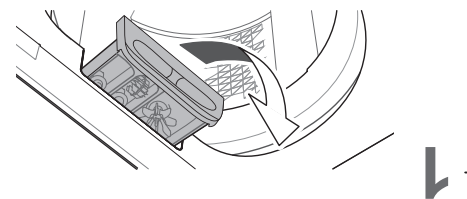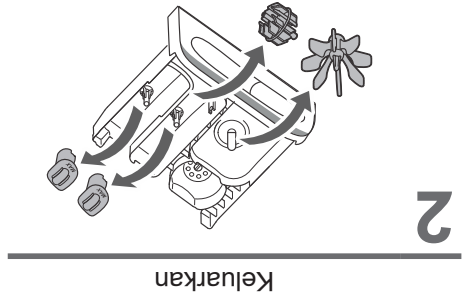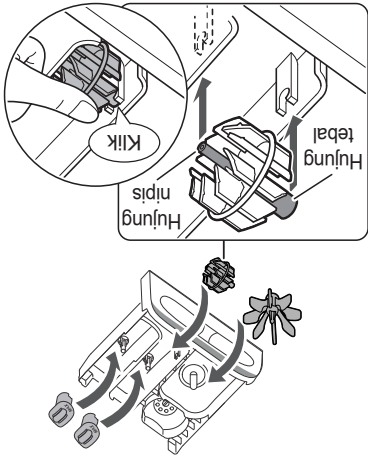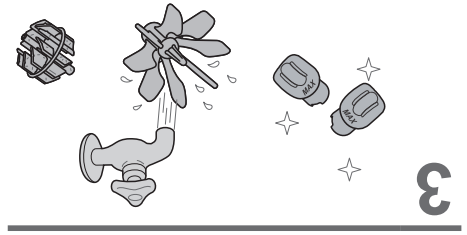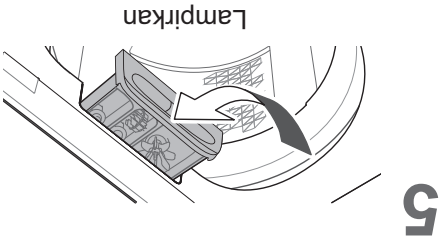

Jika ada kotoran sisa detergen atau pelembut


Laci detergen dan pelembut

Penyenggaraan


Penapis rumbai

Selepas setiap operasi


1

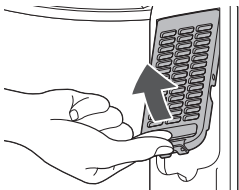


2

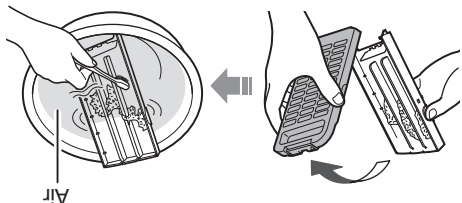


3

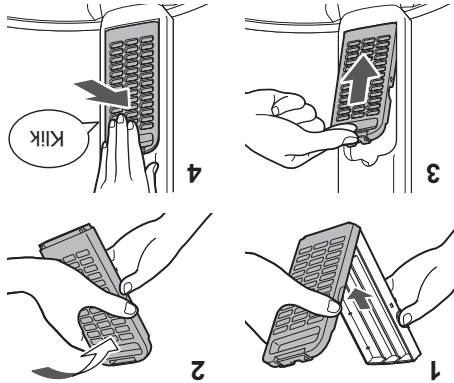

NOTA

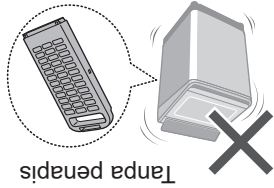

Tanpa penapis

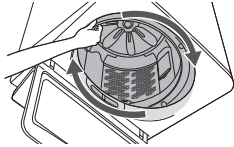

Jika sukar untuk menanggalkan penapis



Jika penapis rosak

Peniaga tempatan

Kandungan Program


Program	Jumlah masa ¹ (anggaran)	Wash (Basuh) (minit)	Rinse (Bilas) (kall)	Spin (Perah) (minit)
Normal (Biasa)	60	9	2	7
Tangle Care (Penjagaan Kusut)	70	13	2	7
Speedy (Cepat)	45	3	2	5
Delicates (Halus)	50	9	2	1
Baby Care (Penjagaan Bayi)	70	9	2	7
Water Save (Jimat Air)	85	12	4	5
Blanket (Selimut)	70	12	2	5
Soak (Rendam)	125 ²	71 (Rendam 59)	2	7
Stain Master +	Odour/Aroma+ (Bau/Aroma+)	80	13	2
	Mud (Lumpur)	90	40	2
	Soya/Sauce (Kicap/Sos)	115 ²	62 (Rendam 29)	2
	Collar/Sleeve (Kolar/Lengan)	150 ²	33 ³	2
	Oily (Berminyak)	155 ²	38 ³	2
	Bacteria Elimination (Penyingkiran Bakteria)	195 ²	30 ³	2
Tub Hygiene (Kebersihan Tab)	150 ²	65 (Rendam 62)	2	30

*1 Jumlah masa adalah anggaran (Apabila kadar standard bekalan air 15 L / min dan suhu air adalah bersuhu 28 °C).

*2 Baki masa 99 minit atau kurang akan dipaparkan. --> 99

*3 Tidak termasuk masa pemanasan air. Simbol -- akan dipaparkan semasa proses pemanasan air.

 ● “Refill”: untuk mengisi air ke dalam tab dan kemudian memblas muatan sambil membekalkan air.




Fungsi! Menyenangkan


Menetapkan Auto Tab Bersih

Menyegah kulupuk, tersedia dengan semua program kecuali "Water Save (Jimat Air)" dan "Air Dry (90 min) (Kering Udara (90 min))".


■ Penunjuk lampu

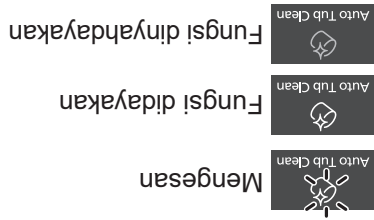

■ Hidup / matikan

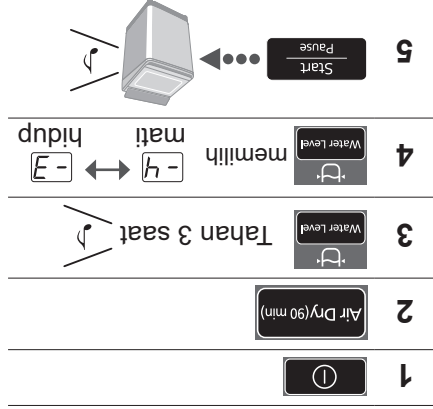

Membatalkan pembaz akhir

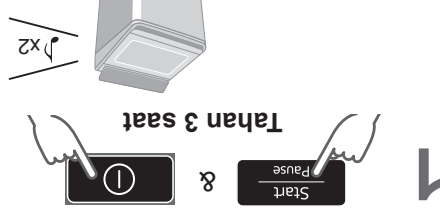


■ Menetapkan semula:

prosedur yang sama

18

Menetapkan Kunci Kanak-kanak

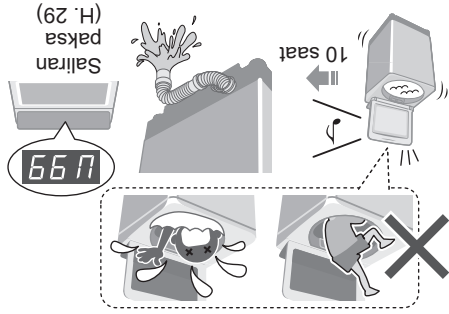

* Fungsi ini tidak mengunci penutup dan operasi butang.



2 **Tangle Care**




Tahan 5 saat

■ **Membatalkan:** prosedur yang sama $\int x^4$




NOTA

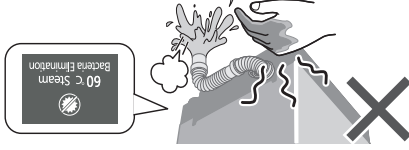

60°C Steam
actera Elimination

Air Dry (90 min) **(Kering Udara (90 min))**

- Air disingkirkan daripada pakaian dengan tiupan udara daripada putaran tab.
- Pakaian kering: Gentian sintetik (Mask 2.0 kg)

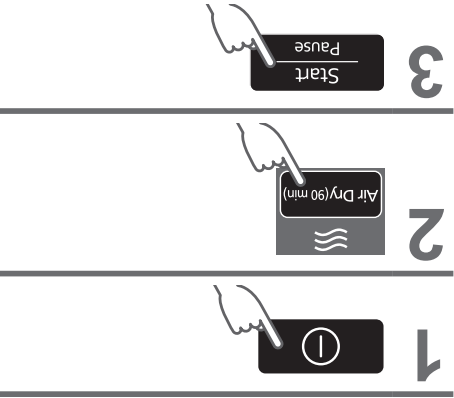


NOTA

- Basuhan mungkin tidak cukup kering (bergantung pada jumlah dan jenis pakaian dan suhu).
- Memandangkan tiada alat pemanas digunakan untuk fungsi ini, anda mungkin berasa bahawa cucian sejuk dan tidak cukup kering.


ECONAVI

- Program "Normal (Biasa)" sahaja Berat / Suhu
- Air dan penjimatan masa*
-

■ Penunjuk lampu

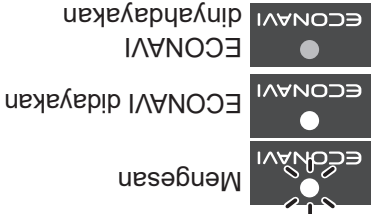


■ Hidup / matikan

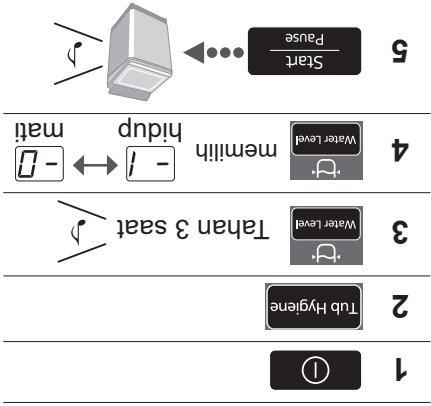

*Keadan ujian:

- Program "Normal (Biasa)"
- Perbandingan antara operasi yang mendayakan ECONAVI (jumlah basuhan: 2.0 kg, suhu air: atas 35 °C) dan operasi yang melumpuhkan ECONAVI (jumlah basuhan: 12.5 kg (kapasiti terkadar), suhu air: di bawah 15 °C)
- Ujian dijalankan berdasarkan IEC60456

Stain Master +

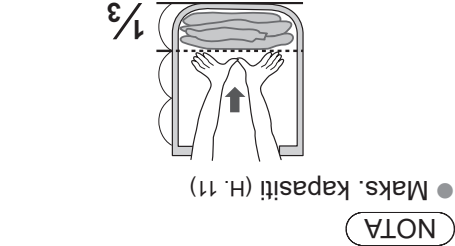

NOTA

- | | | |
|---|-------------|----------------------|
|  | 40 °C | Collar/Sleeve |
|  | 40 °C | Oil |
|  | 60 °C Steam | Bacteria Elimination |

-

1. Press the **SteamMaster+** button.

2. Press the **Pratetapan permasa (jam) (H. 14)** button.

3. The display shows **55** and **Pause**. Press the **Start** button.

4. Insert the sleeve into the soleplate.

5. The iron is shown steaming the fabric.

Blanket (Selimut)

Maksimum jumlah air	
• Kapas 100 %	4.2 kg
• Gentian sintetik 100 %	

Delicates (Halus)

65 L	4.2 kg
55 L	3.0 kg

Selepas operasi berakhir

NOTA



Detergen halus
cecair



Peluntur

Keluarkan pakaian dengan segera.

NOTA



Detergen
serbuk




Detergen
cecair

- Penunjuk jumlah air menunjukkan jumlah maksimum dan tidak boleh ditukar.

Pilihan Membasuh

Preset (Pratetapan)

Tetapkan berapa jam kemudian untuk menyelesaikan operasi.

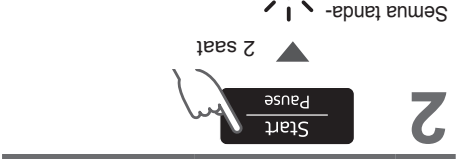

Normal	2 - 24	
Speedy	1 - 24	
Delicate	-	
Baby Care	2 - 24	
Water Save	2 - 24	
Blanket	-	
Soak	3 - 24	
StainMaster +	(H. 16)	
Air Dry (90 min)	-	
Tub Hygiene	-	



■ Untuk mengesahkan



■ Untuk membatalkan atau menukar



Wash (Basuh) / Rinse (Bilas) / Spin (Perah)

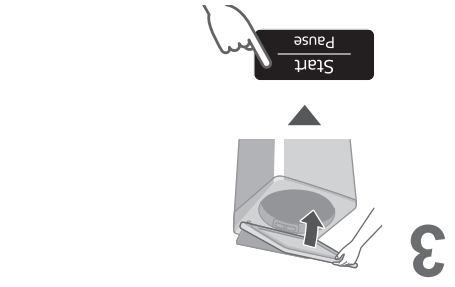
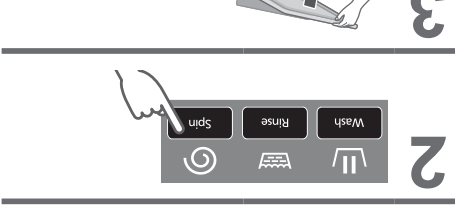


NOTA

● Tidak tersedia untuk "Tangle Care" (Penjagaan Kusut).




- Bahan pelembut tidak boleh digunakan dengan program "Water Save (Jimat Air)".

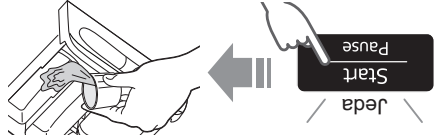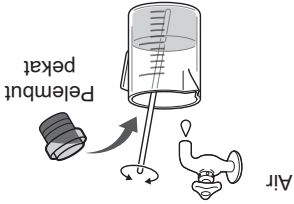


- Untuk menambah pelembut semasa operasi:

Pelembut

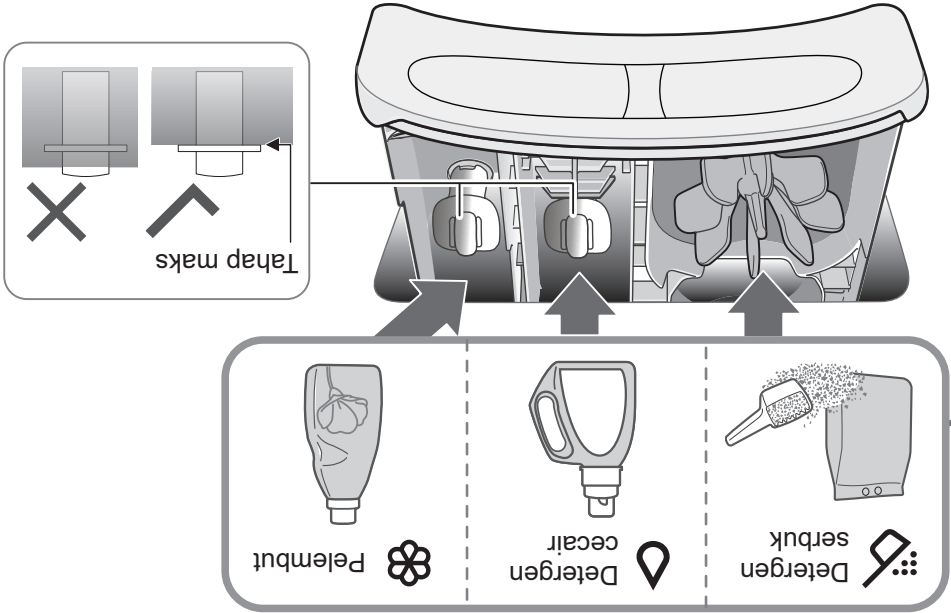



Detergen / Pelembut / Peluntur

- Ikut arahan di setiap bungkusan.
- Untuk pembersihan (H. 21)
- Tutup laci detergen dan pelembut sepenuhnya sebelum digunakan.

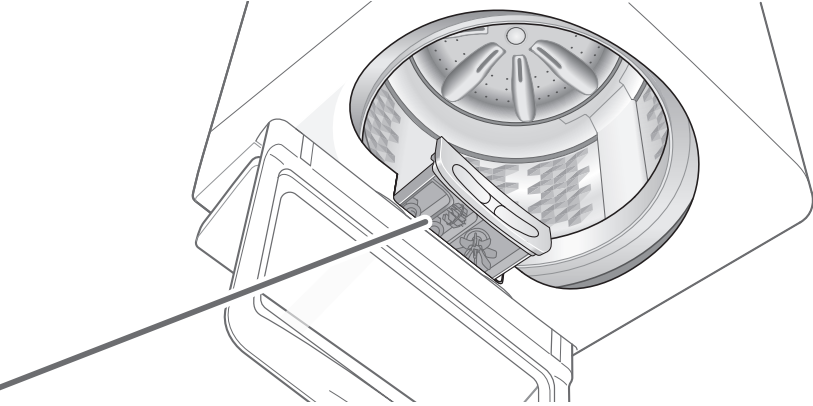


Detergen

- JANGAN masukkan detergen terus ke dalam tab.
- Tahap berbuli bergantung kepada keadaan seperti saiz beban, takat kekotoran, jenis detergen, dan kekerasan air.

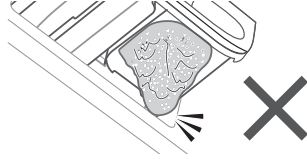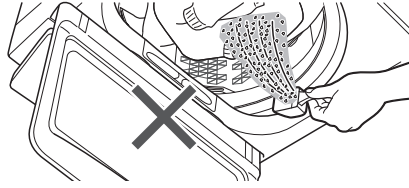

Peluntur


Peluntur memutihkan (peluntur klorin)

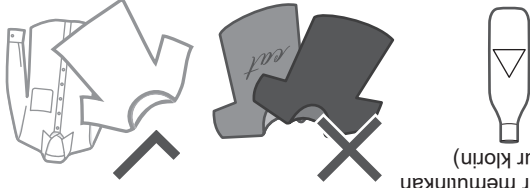

- Untuk menggunakan peluntur, letakkan peluntur dalam petak detergen serbuk (untuk peluntur serbuk) atau dalam petak detergen cecair (untuk peluntur cecair).

- Program "Normal (Biasa)" dan program "Water Save (Jimat Air)" disyorkan untuk beban dengan kotoran biasa pada kapasiti terkadar mesin basuh ini.

NOTA

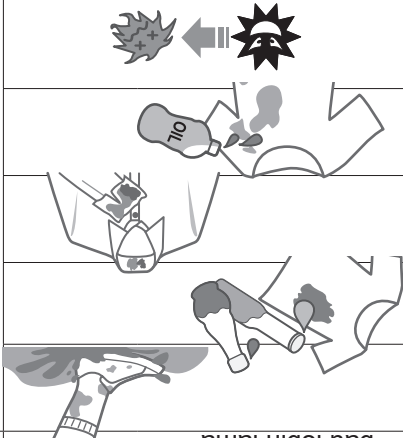
Kapasiti maksimum (kg)	Tujuan	Program		Penyenggaraan	
		Program	Tujuan		
12.5	● Untuk sangat kotor ● Prarendam untuk membasuh	 Soak (Rendam) (H. 9)		Kering	
6.0	● Gunakan lebih banyak pelembut untuk mengekalkan bau lebih lama	StainMaster + (H. 16) ● Untuk jenis noda yang berikut	Kotoran ringan Mud (Lumpur) Soya/Sauce (Kicap/Sos) Collar/Sleeve (40 °C) (Kolar/Lengan) Oily (40 °C) Kotoran berat (Berminyak) Bacteria Elimination (60 °C Steam) (Penyingkiran Bakteria)		Basuh
5.0				Kering	
2.0	● Meringankan pakaian gentian sintetik		 Air Dry (90 min) (Kering Udara (90 min)) (H. 17, 23)		Penyenggaraan
—	● Pengeringan tab		Tub Hygiene (Kebersihan Tab) (H. 23)		
—	● Pencucian tab ● Pencegah kulupuk dan bau busuk			Penyenggaraan	

Pelbagai Program

Program		Tujuan	Kapasiti maksimum (kg)
Basuh			
Normal (Biasa)	 (H. 9)	 Tangle Care (Penjagaan Kusut) (H. 9) • Anti-kusut • Mencuci lebih lembut daripada "Normal (Biasa)" untuk mengurangkan kusut. • Melerai kusut pakaian selepas memutar: 6 kg atau lebih rendah.	12.5
Speedy (Cepat)	 (H. 9)	 ● Untuk kotoran ringan	12.5
Delicates (Halus)	 (H. 15)	 ● Membasuh dengan lembut	4.2
Baby Care (Penjagaan Bayi)	 (H. 9)	 ● Pakaian untuk bayi & mereka yang berkulit sensitif Membilas sebersih-bersihnya	12.5
Water Save (Jimat Air)	 (H. 9)	 ● Menjimatkan air	12.5
Blanket (Selimut)	 (H. 15)	 ● Selimut Dengan tag mesin boleh dibasuh	4.2

Membasuh


1

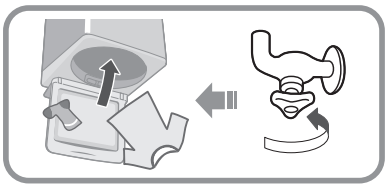

2



(H. 10)

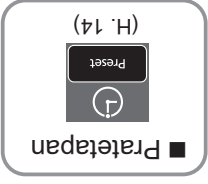

(H. 14)

3

Mengukur jumlah dobi



10 saat

 


5 saat




20 saat

4




(H. 8)

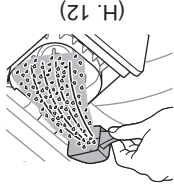

(H. 12)

5

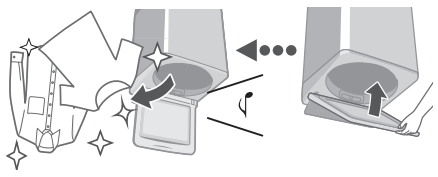

■ Selepas menekan "Start (Mula)"

- Untuk menukar setiap operasi (semasa membasuh).








- Untuk memeriksa atau menukar paras air (semasa membasuh).
- Anda tidak boleh menukar program tersebut.


Sebelum Membasuh

Persediaan dan pemeriksaan basuhan

Pemeriksaan sebelum membasuh

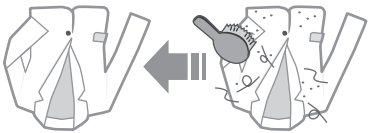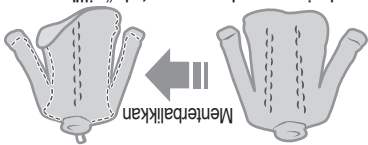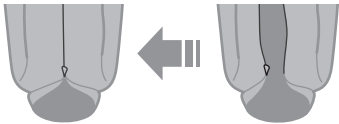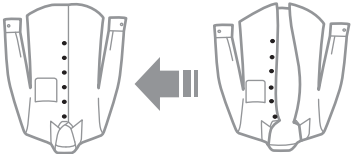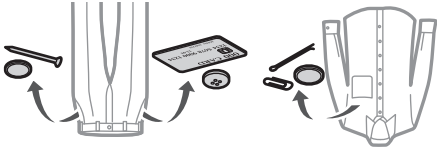

Untuk mengelakkan pudar

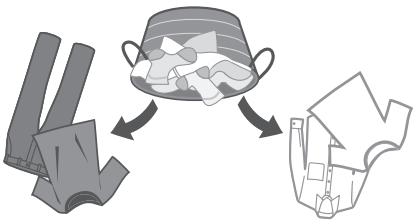

• bahan getah




• Baju grafik




• Untuk

• Pakaihan berwarna

• Baju dengan fabrik yang keras


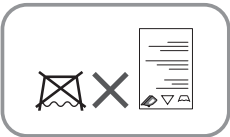


• Mematuhi label pengiraan pakaian

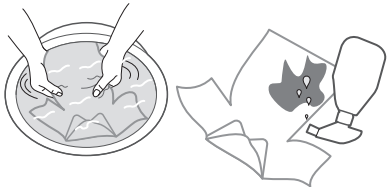

• Pretreatments untuk noda berat



Untuk "Stain Master+" (H. 16)

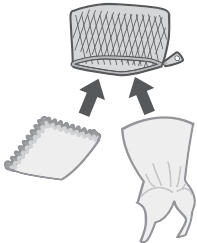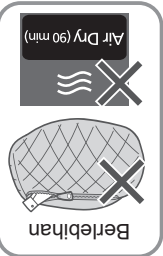


Menggunakan jaring dobi untuk kain halus

Nama Bahagian / Kelengkapan

Nama bahagian

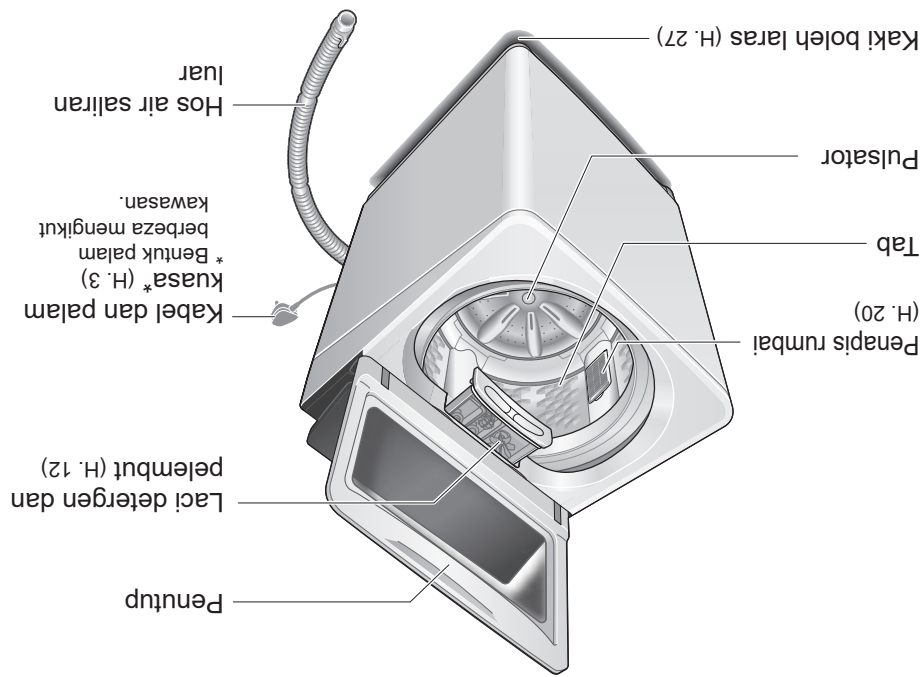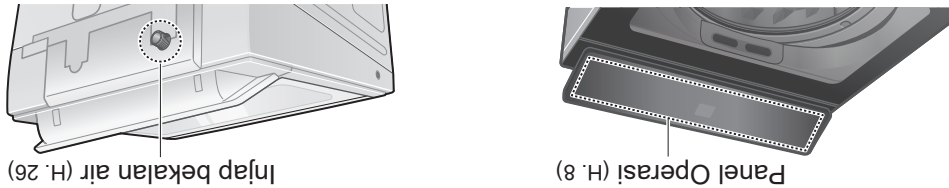


Kelengkapan

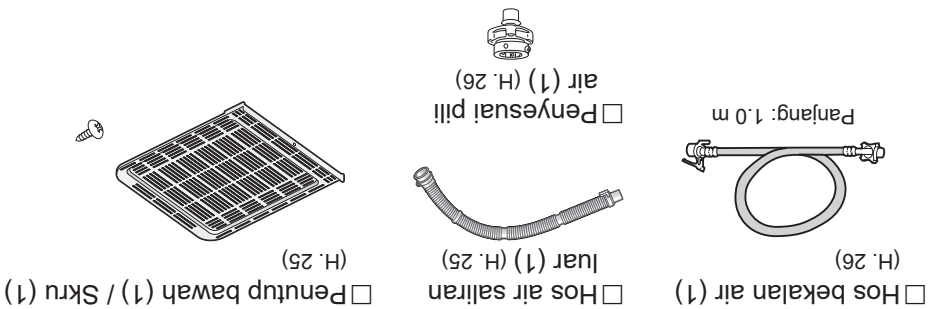


Boleh menyebabkan kegagalan.


Jauhi daripada haba dan sinaran matahari secara langsung.

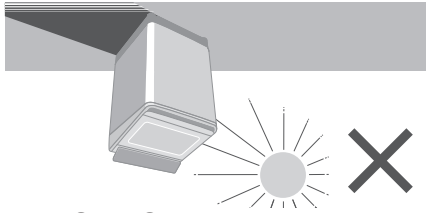


Jangan basuh barang kalis air.

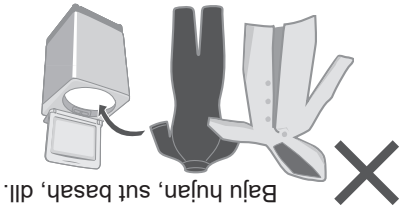

Jangan halang.

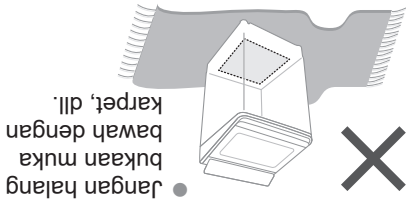


Untuk pakaian yang boleh dibasuh mesin sahaja.

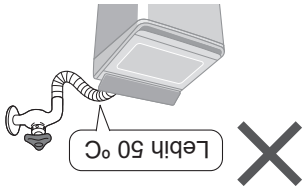

Jangan gunakan air panas.

- Perkas ini adalah untuk kegunaan rumah. Perkas ini bukan untuk digunakan di:
 - kawasan dapur kakitangan di kedai, pejabat dan persekitaran kerja yang lain;
 - rumah ladang;
 - klien di hotel, motel dan persekitaran jenis tempat tinggal yang lain;
 - persekitaran penginapan dan sarapan;
 - kawasan untuk penggunaan bersama di blok atau rumah pangsa atau di kedai dobi layan diri.

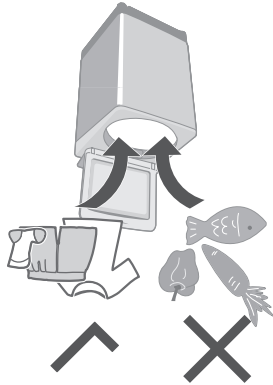


Langkah Berjaga-jaga Keselamatan (sambungan)


AWAS 

Boleh menyebabkan kecederaan.

Berhati-hati agar jari anda tidak tersepit.

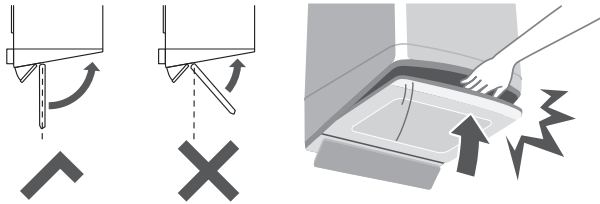


Jangan panjat atau letakkan benda di atas mesin basuh.

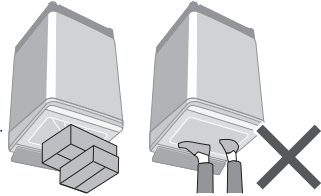


● Jika penutupnya rosak, berhenti menggunakan serta-merta.

Berhati-hati dengan tangan dan kaki anda.

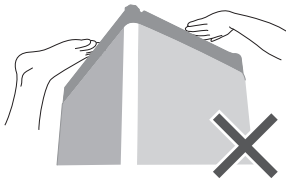


Jangan sentuh tab dan air panas yang mengalir.

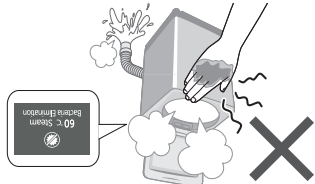


Boleh menyebabkan kebocoran air.

Tutup pili air.

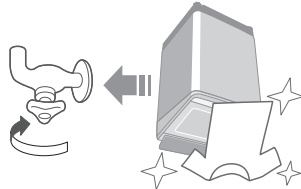

Gunakan set hos baru.

● Anda hendaklah menggunakan set hos baru yang dibekalkan dengan mesin basuh ini dan jangan gunakan semula set hos yang lama.

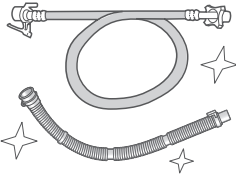


■ Untuk berat maksimum kain kering dan tekanan air paip, lihat halaman 32.



Jangan buka, baik atau ubah sual mesin ini sendiri.


Boleh menyebabkan kegagalan.

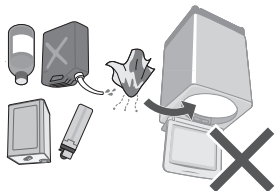


Jauhkan daripada bahan mudah terbakar.




Lap palam kuasa secara berkala.

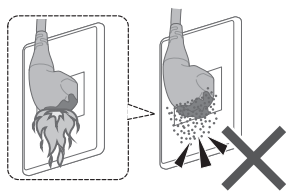

Jika kegagalan dan rosak pada kabel kord kuasa, berhenti menggunakan dan hubungi juruteknik elektrik. Habuk yang terkumpul boleh menyebabkan kebakaran.

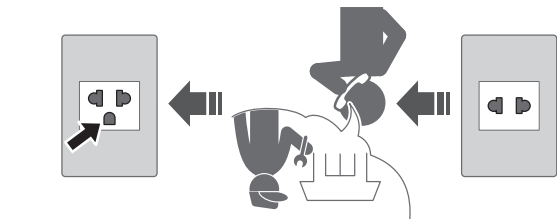


Masukkan palam dengan kemas. Hubungi juruteknik elektrik untuk soket baharu.

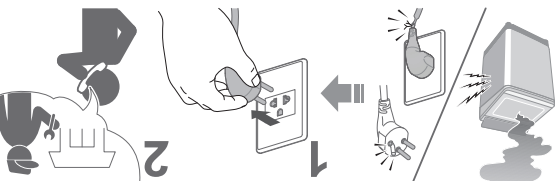

Jika kegagalan dan rosak pada kabel kord kuasa, berhenti menggunakan dan hubungi juruteknik elektrik.

 ● Bentuk palam, bentuk soket dan keperluan kadaran adalah berlainan mengikut rantau.



Gunakan soket yang bersesuaian untuk peralatan ini.

Langkah Berjaga-jaga Keselamatan

⚠️ AMARAN



Boleh menyebabkan kecederaan serius atau kematian.

Kanak-kanak tidak boleh menggunakannya keseorangan.

- Perengkapan ini bukan untuk kegunaan individu (termasuk kanak-kanak) yang kurang kepayaan fizikal, deria atau mental, atau kurang pengalaman atau pengetahuan, kecuai! Jika mereka telah diberikan penyeliaan atau arahan berkaitan penggunaan perengkapan ini oleh individu yang bertanggungjawab keatas keselamatan mereka.
- Kanak-kanak harus diperhatikan untuk memastikan yang mereka tidak bermain dengan perengkapan ini.




Jangan sentuh tab sehingga ia betul-betul berhenti.

- Jika tab tidak berhenti dalam masa 15 saat:

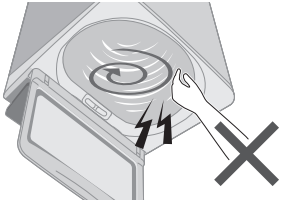
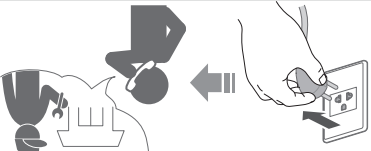


Boleh menyebabkan api atau kejutan elektrik.

Jangan sentuh dengan tangan basah. tarik kabel. Jangan pegang atau Jangan guna.

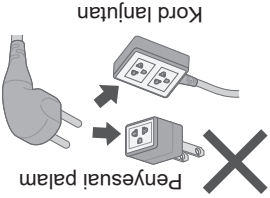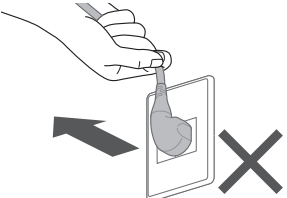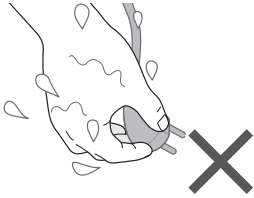

Masukkannya sepenuhnya. Jangan guna.

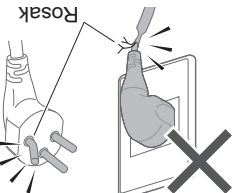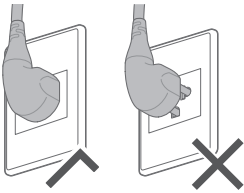

- Jika kord kuasa rosak, ia mesti diganti oleh pengilang, wakil servisnya, atau orang yang berelayakan bagi mengelakkan bahaya.

Arahan Pengendalian & Pemasangan

Mesin Basuh Automatik Sepenuhnya
(Penggunaan Rumah)

No. Model **NA-FD125V3**

Kandungan	
2	Langkah Berjaga-jaga Keselamatan
6	Nama Bahagian / Kelengkapan
7	Sebelum Memasuh
8	Panel Operasi
9	Memasuh
10	Pelbagai Program
12	Detergen / Pelembut / Peluntur
14	Pilihan Memasuh • Preset (Pratetapan) • Wash / Rinse / Spin • Delicates (Halus) • Blanket (Selimut) • Stain Master + • Air Dry (90 min) • ECONAMI
18	Fungsi Menyenggarakan
19	Kandungan Program
20	Penyenggaraan
24	Pemasangan
28	Paparan Ralat
30	Penyelesaian Masalah
32	Spesifikasi



Terima kasih kerana membeli produk ini.

- Untuk mendapatkan prestasi dan keselamatan yang optimum, sila baca arahan ini dengan teliti sebelum menggunakan.
- Simpan manual ini untuk rujukan pada masa akan datang.



AWW9901CD3C0-0C0
A0224-0(M)
Dicetak di Vietnam
02-2024