 


# Panasonic<sup>®</sup>

Model No.:  
TH-32L400K/KX  
TH-40L400K

## Operating Instructions

### LED TV

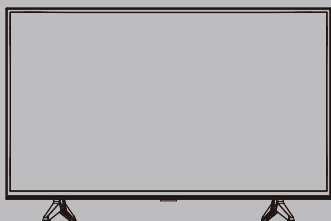

For the purpose of recycling to facilitate effective utilization of Resources, please return this product to a nearby authorized collection center, registered dismantler or recycler, or Panasonic service center when disposing of this product.

Thank you for purchasing this Panasonic product.  
Please read these instructions carefully before operating this product and retain them for future reference.

The images shown in this manual are for illustrative purposes only.

English



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

**WARNING:** To reduce the risk of fire or electric shock.



### CAUTION

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.

#### Notice for Digital terrestrial broadcasting functions

- Function related to Digital broadcasting will work in the areas where the digital terrestrial broadcasting services are received. Consult your local Panasonic Dealer with coverage areas.
- Not all the features are available depending on the country, area, broadcaster and service provider.
- This TV has the capability for Digital broadcasting specifications. But future Digital broadcasting services cannot be guaranteed.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

1. The mains plug/appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
2. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
3. To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.

## Contents

|                                       |    |
|---------------------------------------|----|
| <b>Safety Precautions</b> .....       | 3  |
| <b>Setting Up the TV</b> .....        | 4  |
| <b>Connecting the TV</b> .....        | 6  |
| <b>Initial Setup</b> .....            | 8  |
| <b>Operating the TV</b> .....         | 9  |
| <b>Using TV Guide</b> .....           | 10 |
| <b>Watching External Inputs</b> ..... | 11 |
| <b>Using Media Player</b> .....       | 11 |
| <b>Using the Menu Functions</b> ..... | 13 |
| <b>Additional Information</b> .....   | 18 |
| <b>Troubleshooting</b> .....          | 20 |
| <b>Maintenance</b> .....              | 21 |
| <b>Specifications</b> .....           | 22 |

# Safety Precautions

 
To help avoid risk of electrical shock, fire, damage or injury, please follow the warnings and cautions below:

## Mains plug and lead

### Warning

If you detect anything unusual, immediately remove the mains plug.

- Mains plug types vary between countries.



- This TV is designed to operate on AC 100 - 240 V, 50/60 Hz.
- Insert the mains plug fully into the socket outlet.
- Ensure that the mains plug is easily accessible.
- Disconnect the mains plug when cleaning the TV.
- Do not touch the mains plug with wet hands.



- Do not damage the mains lead.
  - Do not place a heavy object on the lead.



- Do not place the lead near a high temperature object.



- Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.



- Do not move the TV with the lead plugged into a socket outlet.
- Do not twist the lead, bend it excessively or stretch it.
- Do not use a damaged mains plug or socket outlet.
- Ensure the TV does not crush the mains lead.
- Do not use any mains lead other than that provided with this TV.

## Take care

### Warning

- Do not remove covers and never modify the TV yourself as live parts are accessible when they are removed. There are no user serviceable parts inside.



- Do not expose the TV to rain or excessive moisture. This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV.



- Do not insert foreign objects into the TV through the air vents.
- Do not use an unapproved pedestal / mounting equipment. Be sure to ask your local Panasonic dealer to perform the setup or installation of approved wall-hanging brackets.
- Do not apply strong force or impact to the display panel.
- Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base.



- This TV is designed for table-top use.
- Do not expose the TV to direct sunlight and other sources of heat.



**To prevent the spread of fire, keep candles or other open flames away from this product at all times**



## Dangerous part / Small object

### Warning

- This product contains possibly dangerous parts such as plastic bags, that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

## Pedestal

### Warning

- Do not disassemble or modify the pedestal.

### Caution

 
- Do not use any pedestal other than the one provided with this TV.
- Do not use the pedestal if it becomes warped or physically damaged. If this occurs, contact your nearest Panasonic dealer immediately.
- During setup, make sure that all screws are securely tightened.
- Ensure that the TV does not suffer any impact during installation of the pedestal.
- Ensure that children do not climb onto the pedestal.
- Install or remove the TV from the pedestal with at least two people.
- Install or remove the TV by the specified procedure.

## Ventilation

### Caution

Allow sufficient space around the TV in order to help prevent excessive heat, which could lead to early failure of some electronic components.

Minimum distance (cm)



- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, tablecloths and curtains.



- Whether you are using a pedestal or not, always ensure the vents at the bottom of the TV are not blocked and there is sufficient space to enable adequate ventilation.

## ■ Moving the TV

### Caution

Before moving the TV, disconnect all cables.

- Move the TV with at least two people. Support as shown to avoid injury by the TV tipping or falling.



## ■ When not in use for a long time

### Caution

This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

- Remove the mains plug from the wall socket when the TV is not in use for a prolonged period of time.

## ■ Use conditions

### Caution

- This appliance is intended for use in tropical climates.

## ■ Battery for the Remote Control

### Caution

- Incorrect installation may cause battery leakage, corrosion and explosion.
- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable batteries (Ni-Cd, etc.).
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.

# Setting Up the TV

## Supplied accessories

Accessories may not be placed all together. Take care not to throw them away unintentionally.

## Operating Instructions

### Remote Control

- RC818P



<400K model only>

### Batteries (AAA) × 2

► (p.5)



## Pedestal

32-inch model

• Base

Assembly screws

**A**  (ST4 x 15) x 4



40-inch model

• Base

Assembly screws

**A**  (ST4 x 20) x 4



### Note

- Illustrations shown may be different between models and countries.

 
## Preparation

Take out the pedestal and the TV from the packing case and put the TV onto a work table with the screen panel down on the clean and soft cloth (blanket, etc.)

- Use a flat and firm table bigger than the TV.
- Do not hold the screen panel part.
- Make sure not to scratch or break the TV.

## Attaching the pedestal

### 1 Assemble the pedestal

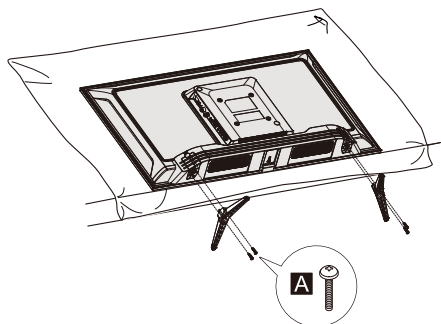


### Removing the pedestal from the TV

Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV.

- 1 Lay the TV on a foam mat or thick soft cloth on a table.
- 2 Remove the assembly screws **A** from the TV.

 
## Inserting remote's batteries

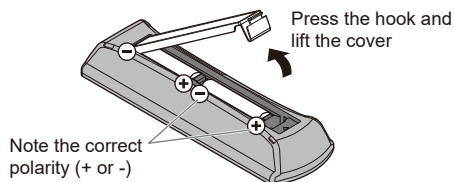

## Wall mounting the TV (optional)

Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

 Rear of the TV (View from the side)

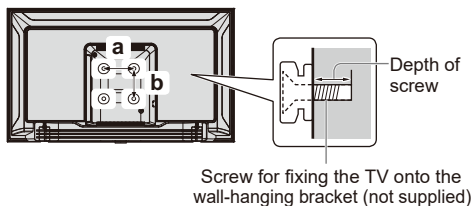

Screw for fixing the TV onto the wall-hanging bracket (not supplied)

### Holes for wall-hanging bracket installation

| Model   | a      | b      |
|---------|--------|--------|
| 32-inch | 100 mm | 100 mm |
| 40-inch | 200 mm | 100 mm |

### Screw specification

| Model   | Type | Depth of screw |         |
|---------|------|----------------|---------|
|         |      | Minimum        | Maximum |
| 32-inch | M4   | 8 mm           | 9 mm    |
| 40-inch | M6   | 10 mm          | 12 mm   |

### Warning

 
- When optional accessories such as wall brackets etc. are used, always read and follow the manufacturer installation and usage instructions.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- When installing wall brackets you must ensure the wall bracket is not electrically grounded to metal wall studs. Always ensure that there are no electrical cables, pipes etc. in the wall before you begin the wall bracket installation.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

# Connecting the TV

- Please ensure the TV is disconnected from the mains socket/ power point before attaching or disconnecting any RF/ AV leads.
- External equipment and cables are for illustrative purposes only and not supplied with this TV.
- Check the type of terminals and cable plugs are correct when connecting.
- When using an HDMI cable, use the fully wired one.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor. Otherwise, distortion of image/ sound may occur or operation of other equipment may be interfered.
- Also read the manual of the equipment being connected.


## Terminals

Rear of the TV **32-inch model**

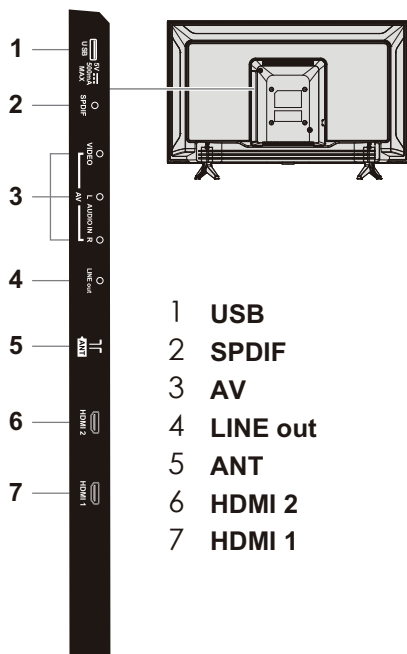

- 1 **USB**
- 2 **SPDIF**
- 3 **AV**
- 4 **LINE out**
- 5 **ANT**
- 6 **HDMI 2**
- 7 **HDMI 1**

 
Rear of the TV **40-inch model**

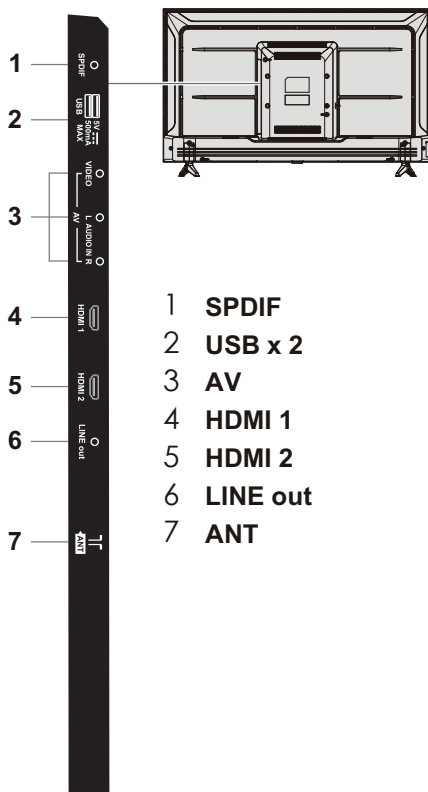



- 1 **SPDIF**
- 2 **USB x 2**
- 3 **AV**
- 4 **HDMI 1**
- 5 **HDMI 2**
- 6 **LINE out**
- 7 **ANT**

## Connections
 
### Aerial

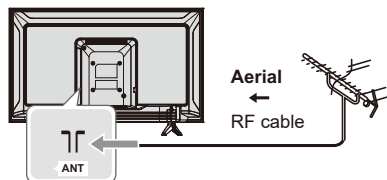


- Keep RF (aerial) cable away from the mains lead to avoid and minimise mains interference pickup.
- Do not place the RF cable under the TV.
- An aerial, correct cable (75  $\Omega$  coaxial) and correct terminating plug are required to obtain optimum quality picture and sound.
- If a communal aerial system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the customer.
- If the aerial is placed in the wrong location, interference might happen.

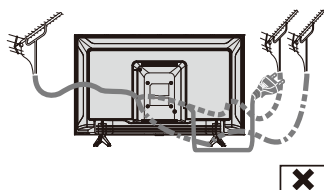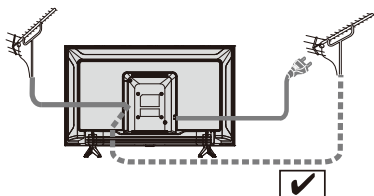  


## AV / Game equipment

 
### Using HDMI terminal



### Using AV terminals

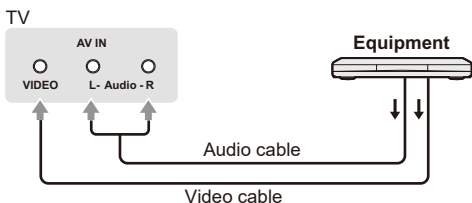 

## Speaker system

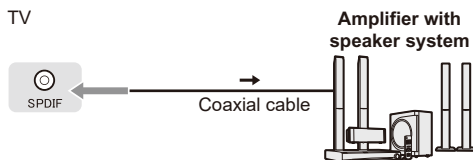 

- To enjoy the sound from the external equipment in multi-channel sound (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.


# Initial Setup

 When you first turn on the TV, a series of steps will pop-up to guide you to setup your TV.

- These steps are not necessary if the setup has been completed by your local dealer.

## 1 Plug the mains plug into the socket outlet and turn on the TV.


It may take a few seconds before the screen is displayed.

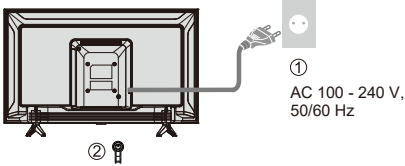

## 2 Select your language.


 
## 3 Select [Home].



- [Shop] is for shop display.

**Setup is now complete and your TV is ready for viewing.**

 
## 4 Select your country.



## 5 Select channel type.



## 6 Scanning starts.

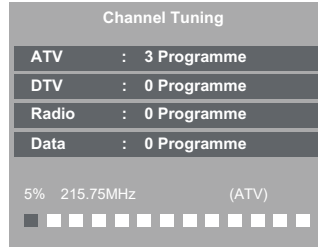


- This function searches and stores TV channels.
- The stored channels and sorted channel order vary depending on the area, broadcasting system and conditions of signal reception.

### Note

 - If tuning has failed, check the connection of the RF cable, then follow the on-screen instructions.

# Operating the TV

## Using the remote control

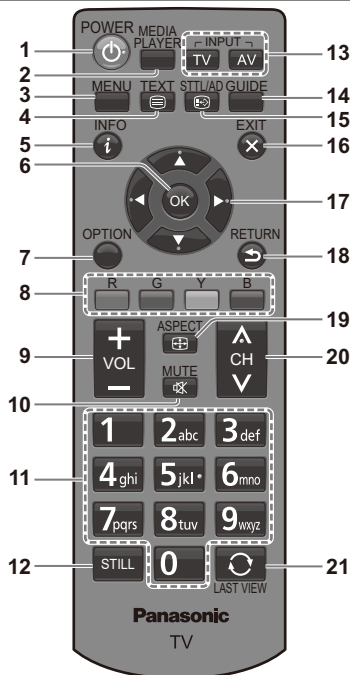

### 13 Input mode selection

- TV - switches to TV input mode.
- AV - displays [Input Source] screen (p.11).

### 14 TV Guide ➔ (p. 10)

### 15 Displays subtitles / AD switch

### 16 Exits to the TV viewing screen

### 17 Cursor buttons

- Makes selections or adjustments.

### 18 Returns to the previous menu / page

### 19 ASPECT

- Displays the [Aspect Selection] screen. Follow the operation guide to select the mode. [4:3] / [16:9] / [Zoom1] / [Zoom2] / [Auto]. ➔ (p. 18)

### 20 Channel Up / Down

### 21 Returns to the last viewed channel

## [Color Buttons]

Lists out channels based on Analogue / Digital

- R** In Programme Edit, delete channels. Or delete file in Media Player.
- G** In Programme Edit, rename channels. (only appear in ATV source)
- Y** In Programme Edit, move channels. (only appear in DTV source)
- B** In Programme Edit, skip channels. Change audio type between stereo and mono while watching program

 
 
When using the TV Guide, color buttons can also work as the menu displayed.

## About operation guide

When operating the TV with the remote control, follow the operation guide available at the bottom of the screen to perform the operation you want.

Referring to the operation guide:

- To select the mode
- To change to the selected mode
- To return to the previous menu
- To exit from the menu



### 1 Switches the TV On / Standby

### 2 MEDIA PLAYER ➔ (p. 11)

### 3 Displays [Main Menu] ➔ (p. 13)

### 4 Switches to Teletext mode

### 5 Displays Information banner

### 6 OK

- Confirms selections.
- Press after selecting channel positions to quickly change channel.
- Displays the [Channel List].

### 7 Displays [Option Menu]

- Quick to access Picture mode and Sound mode.
- Follow the operation guide to select / change the settings.

### 8 Colored buttons

- Performs multiple operations which correspond to the operation guide displayed on the menu screen.

### 9 Volume Up / Down

 
### 10 Sound Mute On / Off

### 11 Numeric buttons

- Changes channel and teletext pages.
- Sets characters.

### 12 Freezes / unfreezes picture

## Using the TV controls

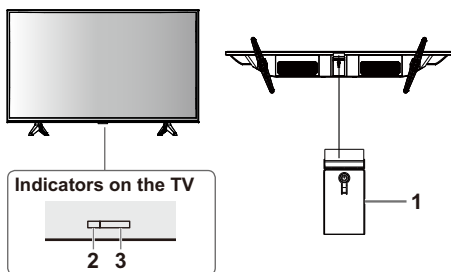

### 1 Power On /Power Off

- Turn on the TV/turn off the TV
- The TV is on, press it to display Button menu.
- In the Button menu, short press it to select the menu, long press it to confirm the selection.

### 2 Power LED

- Red: Standby
- Green: On

### 3 Remote control signal receiver

## Using TV Guide

 
The TV Guide - Electronic Programme Guide (EPG), shows a list of broadcasts for several days (depending on the broadcasters).

- When this TV is turned on for the first time, or switched off for more than a week, it may take some time before the TV Guide is completely shown.
- This function varies depending on the country.
- Channels are displayed on the same TV Guide screen. There will be no programme listings for Analogue channels.
- DTV mode only.

## Display the TV Guide.



Example:

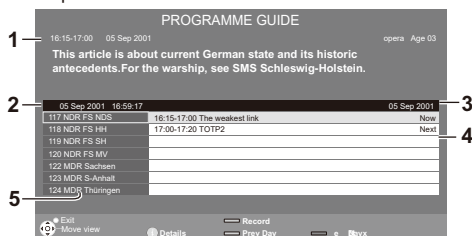

1 TV Guide date and time

2 Current date and time

3 TV Guide time

4 Programme

5 Channel position and name


**Follow the operation guide to operate the TV Guide.**
 
### Note


- It may be slow to response when pressing the **UP** / **DOWN** / **LEFT** / **RIGHT** cursor button for TV program guide. This is due to program data downloading.

# Watching External Inputs

- 1 Connect the external equipment.  
→ (p. 6 - 7)
- 2 Display the [Input Selection] menu, then select the input of the connected equipment.

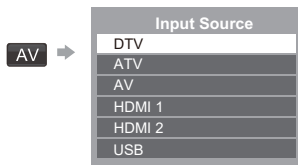

Press OK to access.

 

## Note

 
- If the external equipment has an aspect adjustment function, set it to "16:9".

# Using Media Player

Media Player allows you to enjoy photo, music or video recorded on a USB Flash Memory.

- The picture may not appear correctly on this TV depending on the digital cameras used.
- Display may take some time when there are many files and folders in the USB Flash Memory.
- Partly degraded files might be displayed at a reduced resolution.
- The folder and file names may be different depending on the digital camera used.

## Inserting / Removing the USB Flash Memory



- Insert or remove straight and completely.

## Starting Media Player

- 1 Insert the USB Flash Memory.
- 2 Select the mode.



**[Photo]:** Displays the thumbnail of all photos in the USB Flash Memory.

**[Movie]:** Displays the thumbnail of video titles in the USB Flash Memory.

 
**[Music]:** Displays the thumbnail of music folders in the USB Flash Memory.

## [Contents Display]

Follow the operation guide to perform available operations.

When the cursor stays on the icon, it displays the information of the highlighted content.

## Photo mode

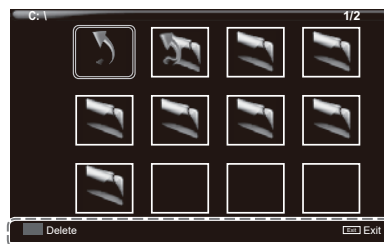

Operation guide

## [Play Folder]

■ To play the selected file

Plays back all photo in the selected folder.

Select the folder.



Select the file.

 


**[Menu]****[Photo show Settings]**

- ▶/|| Play or pause the showing.
- ◀ Play previous photo.
- ▶▶ Play Next photo.
- Stop photo show.
- ↺ Slideshow repeat.  
[Repeat 1] / [Repeat all] / [Repeat none].
- 🎵 Background music during photo viewing.
- ☰ Show all the photo list.
- ⓘ Show the details of the choosen photo.
- ↻/↻ Rotate the direction of photo in the direction of arrow.
- 🔍 Zoom in the photo.
- 🔍 Zoom out the photo.
- ✳ Adjust the positon when zoom in.

**Note**

- Picture quality may become lower depending on the slideshow settings.

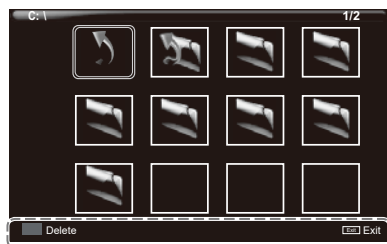**Movie mode**

Operation guide

**[Play Folder]**

Playbacks all movies in the selected folder.

**To playback the selected file**

Select the folder.

 


Select the file.

**[Option Menu]****[Movie Setup Menu]**

- ▶/|| Play or pause the playing.
- ◀ Fast backward.
- ▶ Fast forward.
- ◀ Play previous video.
- ▶ Play Next video.
- Stop video show.
- Ⓐ Choose Charset .

- ↺ Repeat mode.  
[Repeat 1] / [Repeat all] / [Repeat none].
- ⌚ Set the repeat time from A to B.
- ☰ Show all the video list.
- ⓘ Show the details of the choosen file.
- ▶ Play the video in slow speed.
- ▶ Play the video by frames.
- ⌚ Set the time point to play.
- 🔍 Zoom in the viewing.
- 🔍 Zoom out the viewing.
- ⚙ Adjust the ratio.
- ✳ Adjust the positon when zoom in.

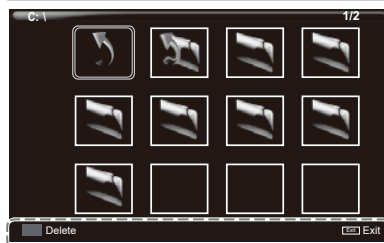**Music mode**

Operation guide

**[Play Folder]**

Playbacks all music in the selected folder.

**To playback the selected file**

Select the folder.



Select the file.

**[Option Menu]****[ Music Setup Menu]**

 
- ▶/|| Play or pause the playing.
- ◀ Fast backward.
- ▶ Fast forward.
- ◀ Play previous music.
- ▶ Play Next music.
- Stop music playing.
- ↺ Repeat mode.  
[Repeat 1] / [Repeat all] / [Repeat none].
- 🔇 Mute.
- ☰ Show all the music list.
- ⓘ Show the details of the choosen file.
- ⌚ Set the time point to play.

# Using the Menu Functions

## 1 Display the menu.




Example:

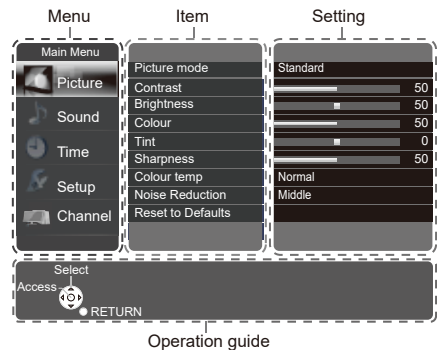

## 2 Select the menu.



 
## 3 Select the item.



## 4 Change the setting.

 Example:

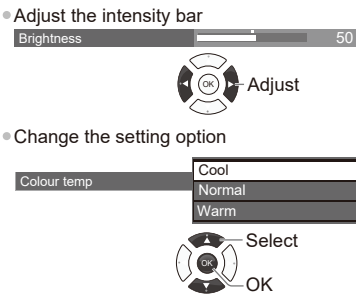

### Note

- Only available items can be selected.

## Picture

### [Picture Mode]

Sets the picture mode for each input. **[Dynamic]** / **[Standard]** / **[Mild]** / **[Personal]**

**[Dynamic]:** Improves contrast and sharpness for viewing in a bright room.

**[Standard]:** For viewing in a normal lighting condition.

**[Mild]:** For viewing in a soft way for eyes.

**[Personal]:** adjust the picture according to your preference.

### [Contrast], [Brightness], [Colour], [Tint], [Sharpness]

Increases or decreases the levels of these options according to your personal preference.

These options only available in Personal mode.

Tint only available in NTSC signal.

### [Colour Temp]

Selects the colour temperature of the picture.

**[Cool]** / **[Normal]** / **[Warm]**

### [Noise reduction]

Reduces picture "static" or any type of interference.

This feature is especially useful for providing a clearer picture in weak analog signal conditions. **[Off]** / **[Low]** / **[Middle]** / **[High]**

### [Reset to Defaults]

Resets the current picture settings to defaults.

## Sound

### [Sound Mode]

Select a sound type from the list. **[Standard]** / **[Music]** / **[Movie]** / **[Sports]** / **[Personal]**.

### [Treble]

Adjusts level to enhance or minimise sharper, higher sound output. (Only available in Personal mode.)

### [Bass]

Adjusts level to enhance or minimise lower, deeper sound output. (Only available in Personal mode.)

### [Balance]

Adjusts volume level of right and left speakers.

### [Auto Volume]

Select **[On]** mode to reduce the annoying blasts in volume during commercial breaks and also amplifies softer sounds in program material. Eliminates the need to constantly adjust the volume.

The options offered depend on the programme you are watching.

### [AD Switch]

Audio Description Function. Choose on for visually impaired person.

### [SPDIF Mode]

Connect to an audio device through the SPDIF output. Select a proper sound type from the list for digital programmes. **[Off]** / **[Auto]** / **[PCM]**

### [MPX]

Changes multiplex sound mode (if available).

### [Reset to Defaults]

Resets the current sound settings to defaults.

## Time

### [Clock]

Auto synchronization the time, TV will get the time automatically from TV signals.

### [Sleep Timer]

Sets the duration until the TV automatically goes to Standby mode.

**[Off]** / **[15 / 30 / 45 / 60 / 75 / 90 / 120 min]**

### [Auto Standby]

Enables the TV to turn into Standby mode automatically if no operation is performed after the 4 hours.

- Automatic input switching with the connected equipment affects this function and time-count will be reset.

### [Time Zone]

Adjusts the time data based on GMT.

### [OSD Timer]

Sets the duration when main menu disappear if there is no operation.

**[5 S]** / **[15 S]** / **[30 S]**

## Setup

### [OSD Language]

Changes language for on-screen displays.

[English] / [ Chinese]

### [Audio Languages]

Set the primary language of audio language of current TV. [ Primary] / [ Secondary]

Default setting is Indonesia.

### [Subtitle Language]

Set the primary language of subtitle language appear on the screen. [ Primary] / [ Secondary]

Default setting is Indonesia.

### [Hearing Impaired]

Provides aids in understanding and enjoyment with Digital TV subtitles (depending on the broadcaster).

### [Aspect Ratio]

Displays the [Aspect Ratio] screen. Follow the operation guide to select the mode. [4:3] / [16:9] / [Zoom 1] / [Zoom 2] / [Auto]

### [Blue Screen]

If [on] selected, when there is no input, the background will be blue screen. (only available on some source)

### [Lock]

You can lock specific channels. When the locked channel is selected, a message appears. Enter the Password to watch.

If Lock System is on, password will be needed when tuning.

#### Enter the number (4 digits).

Please enter password

- Make a note of the Password in case you forget it. (The initial password is 0000)

#### Set Password (4 digits).

Please enter old password

Please enter new password

Confirm new password

## Block Program

|   |            |     |
|---|------------|-----|
| 1 | BBC ONE    | DTV |
| 2 | BBC TWO    | DTV |
| 3 | BBC CHOICE | DTV |
| 4 | BBC NEWS   | DTV |

Choose channels you want to lock.

### [Reset]

Choose it to enter Initial Setup.

### [HDMI CEC]

When set to [On], the TV will automatically switch to the appropriate HDMI input whenever an HDMI connected equipment is initially turned on and play mode is selected. [Off] / [On]

### [Input]

Select input source of connected equipment.

## Channel

 
Use the [Tuning Menu] to retune the TV automatically or manually.

### [Auto Tuning]


Automatically searches and adds available channels to the memory.

### Example: DVB-T


Choose DVB-T.




Choose tune type.

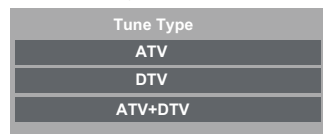 

Choose your country.

 


Start tuning.

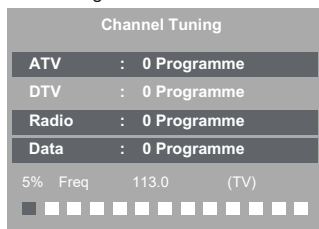 


### [DTV Manual Tuning]

 Choose frequency to install channels. Press OK to search.

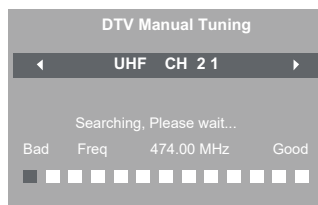

### [ATV Manual Tuning]

 Set correct options to install channels.

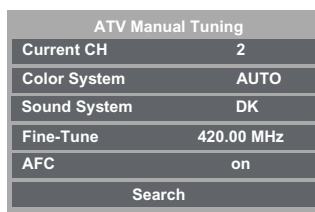

### [Programme Edit]

Edits channel settings.

Use colour key to delete, rename, remove and skip programme.

**R** In Programme Edit, delete channels.

**G** In Programme Edit, rename channels. (only appear in ATV source)

**Y** In Programme Edit, move channels. (only appear in DTV source)

**B** In Programme Edit, skip channels.

### [Signal Information]

Show signal information of the current channel.  
(Only available in DTV source.)

| Signal Information        |
|---------------------------|
| Parameter:24 (562.00 MHz) |
| Quality 0                 |
| Strength 0                |
| Network ...               |

### [Channel Update]

DTV automatically searches for channels for channel updates.

# Additional Information

## Auto power standby function

The TV will automatically go into Standby mode in the following conditions:

- No signal is received and no operation is performed for 15 minutes in all signal source(except USB media).
- [Sleep timer] is active in the [Time] menu (p. 14).
- No operation is performed for the period selected in [Auto Standby] (p. 14).

## Information banner

 
### To display information banner (Digital TV)

INFO



(Press again to hide the banner.)

Example : Digital TV

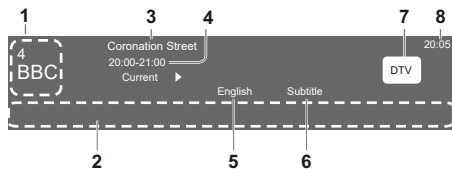

- 1 Channel number and name
- 2 Programme details
- 3 Programme name
- 4 Programme Start / Finish time (Digital TV)
- 5 Audio language (Choose Primary in [Setup])
- 6 Subtitle (If available)
- 7 Input signal
- 8 Current time

## Aspect

- **[4:3]**  
Displays the image at the standard 4:3 without distortion.
- **[16:9]**  
Directly displays the image at 16:9 without distortion (anamorphic).
- **[Zoom1]**  
Displays the image with amplification that greater than original ratio.
- **[Zoom2]**  
Displays the image with amplification that greater than zoom1 ratio.
- **[Auto]**  
Displays the image based on the TS stream.

## Input signal that can be displayed

| Signal name                   | COMPONENT | HDMI                  |
|-------------------------------|-----------|-----------------------|
| 525 (480) / 60i, 60p          |           | <input type="radio"/> |
| 625 (576) / 50i, 50p          |           | <input type="radio"/> |
| 750 (720) / 60p, 50p          |           | <input type="radio"/> |
| 1,125 (1,080) / 60i, 50i      |           | <input type="radio"/> |
| 1,125 (1,080) / 60p, 50p, 24p |           | <input type="radio"/> |

- Mark : Applicable input signal
- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

## Supported file format in Media Player

### Photo

JPEG (.jpg, .jpeg), PNG, BMP

### Movie

H.264, MPEG4, MPEG2, MPEG1, etc..

### Music

MP3 (.mp3)

### Subtitles

- The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
- If there are more than one subtitles text file inside the same folder, they are displayed in the following order of priority: ".srt", ".sub".

#### Note

- Even if these conditions are fulfilled, some files may not play depending on how they are encoded.
- Do not use two-byte characters or other special codes for data.
- Connected devices may become unusable with this TV if the file or folder names are changed.

## HDMI connection

This TV incorporates HDMI™ technology. HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard. HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

### Applicable HDMI features

- Input audio signal:  
2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)
- Input video signal:  
➡ **"Input signal that can be displayed" (p. 18)**  
Match the output setting of the digital equipment.

### DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When the DVI to HDMI adaptor cable is used, connect the audio cable to the audio input terminal (use AV IN AUDIO terminals).

#### Note

- Audio settings can be made on [HDMI 1/2 Input(HDMI)] in the [Sound] menu.
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.

## USB Flash Memory

For playing back in Media Player

Format: FAT16, FAT32

Compliance:

Supports USB2.0 standard.

Maximum USB capacity supported is 1TB.

USB Hub or card adapter is not supported.

#### Note

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Insert the device in the correct direction. Otherwise this can damage device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device. Panasonic is not liable for any deterioration or damage of data or device during operations with the TV.
- It is recommended to connect the USB Flash Memory directly to the TV's USB port.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- Additional information for USB devices may be on the following website. (English only)  
<http://panasonic.jp/support/global/cs/tv/>

# Troubleshooting

Before requesting service or assistance, please follow these simple guides to resolve the problem.

If an error message appears, follow the message's instructions.

If the problem still persists, please contact your local Panasonic dealer for assistance.

## Screen

### Red, blue, green or black spots on the screen.

→ This is the characteristic of liquid crystal panels. The liquid crystal panel is built with very high precision technology. Occasionally, a few non-active pixels may appear on the screen as points of red, green, blue or black. This does not affect the performance of your TV and it is not a quality problem.

### Chaotic image, noisy.

- Set [Noise reduction] in the [Picture] menu to remove noise (p. 13).
- Check nearby electrical products (car, motorcycle, fluorescent lamp).

### No image is displayed.

- Check the settings of [Contrast] or [Brightness] in the [Picture] menu (p. 13).
- Check the TV is in AV mode. If the TV is in AV mode, check the selected input mode match the output of the external equipment (p. 11).

### Unusual image is displayed.

- Turn the TV off with Mains power On / Off switch (p. 10), then turn it on again.

### Pictures from equipment connected via HDMI are unusual.

- Check the HDMI cable is connected properly.
- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment (p. 18).
- Use equipment compliant with EIA/CEA-861/861D.

## Sound

### No sound is produced.

- Check the sound mute setting (p. 9) and volume.

### Low level or distorted sound.

- Sound signal reception may be deteriorated.

### Sound output via HDMI connection is unusual.

- Set the sound setting of the connected equipment to "2ch L.PCM".
- Check the [HDMI 1/2 Input(HDMI)] setting in the [Sound] menu (p. 14).
- If digital sound connection has a problem, select analogue sound connection (p. 19).

## General

### The TV goes into Standby mode.

- This TV is equipped with auto power standby function (p. 18).

### The remote control does not work or is intermittent.

- Replace the batteries (p. 5).
- Point the remote control directly at the remote control signal receiver of the TV (within about 7 m and 30 degree angle).
- Situate the TV away from sunshine or block sources of bright light from shining on the remote control signal receiver of the TV.

### Parts of the TV become hot.

- Even if the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.

### The TV panel moves slightly when it is pushed with a finger.

### Clattered sound might be heard.

- There is some flexibility around the panel to prevent damage. This is not a malfunction.

### Overcurrent error message appears.

- The connected USB device might cause this error. Remove the device and turn the TV off with Mains power On / Off switch, then turn it on again.
- Check foreign objects are not inside the USB port.

# Maintenance

**First, remove the mains plug from the socket outlet.**

## Regular care

- Gently wipe the surface of the display panel, cabinet and pedestal by using a soft cloth.
- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

## For stubborn dirt

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Wring the cloth and wipe the surface. Finally, wipe away all the moisture.

### Caution

- Do not use a hard cloth or rub the surface too hard as this could scratch the surface.
- Do not subject the TV's surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Do not subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

# Specifications

## Model no.

**32-inch model**  
TH-32L400K/KX

**40-inch model**  
TH-40L400K

## Power source

AC 100 - 240 V, 50/60 Hz

## Power consumption (Rated power / Standby power)

**32-inch model**  
50 W / 0.5W

**40-inch model**  
70 W / 0.5W

## Display panel

**Panel**  
LCD panel (LED backlight)

### Visible screen size (diagonal)

**32-inch model:** 80 cm

**40-inch model:** 102 cm

### Display resolution

**32-inch model**  
1,366 (W) × 768 (H)

**40-inch model**  
1,920 (W) × 1080 (H)

## Dimensions (W × H × D)

**32-inch model**  
725.9 × 475.4 × 178 mm (With Pedestal)  
725.9 × 427.5 × 81.7 mm (TV only)

**40-inch model**  
903.6 × 565.0 × 214.5 mm (With Pedestal)  
903.6 × 520.2 × 85.3 mm (TV only)

## Mass

**32-inch model**  
3.6 kg (With Pedestal)  
3.5 kg (TV only)

**40-inch model**  
5.9 kg (With Pedestal)  
5.8 kg (TV only)

## Connection terminals

### AV IN ( VIDEO)

**VIDEO**  
RCA, 1.0 V[p-p] (75

**AUDIO L - R**  
0.5 V[rms]

### HDMI 1/2 input

TYPE A Connectors

### USB

USB 2.0 TYPE A Connectors  
DC 5 V, Max. 500 mA

### EARPHONE

130mV rms~ 150mV rms

## Sound

### Audio output

**32-inch model**  
10 W (5 W + 5 W)

**40-inch model**  
16 W (8 W + 8 W)

## Receiving systems / Band name

### 9 Systems

| Systems             | Function                                                    |
|---------------------|-------------------------------------------------------------|
| 1 PAL B, G          | Reception of broadcast                                      |
| 2 PAL I             |                                                             |
| 3 PAL D, K          |                                                             |
| 4 SECAM B, G        |                                                             |
| 5 SECAM D, K        |                                                             |
| 6 PAL               | Playback from Special VCR's or DVD                          |
| 7 PAL 60 Hz/5.5 MHz | Playback from Special Disc Players and Special VCR's or DVD |
| 8 PAL 60 Hz/6.0 MHz |                                                             |
| 9 PAL 60 Hz/6.5 MHz |                                                             |

## Receiving channels (Analogue TV)

### VHF BAND

- 2-12 (PAL/SECAM B, K1)
- 0-12 (PAL B AUST.)
- 1-9 (PAL B N.Z.)
- 1-12 (PAL/SECAM D)

### UHF BAND

- 21-69 (PAL G, H, I/SECAM G, K, K1)
- 28-69 (PAL B AUST.)
- 13-57 (PAL D, K)

## Aerial input

VHF / UHF

## Operating conditions

### Temperature

0 °C - 45 °C

### Humidity

20 % - 80 % RH (non-condensing)

### Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

This product incorporates the following software:

- (1) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0) and/or,
- (2) open sourced software other than the software licensed under the GPL.

The software categorized as (1) - (2) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the "Software License" menu on this product.

At least three (3) years from delivery of this product, **Panasonic Entertainment & Communication Co., Ltd.** will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: [cdrequest@unipf.jp](mailto:cdrequest@unipf.jp)

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/DTV13ET/>

### Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

### Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

**Model Number** \_\_\_\_\_

**Serial Number** \_\_\_\_\_

---

**Panasonic Entertainment & Communication Co., Ltd.**

Web Site: <http://www.panasonic.com>

English

**72-L400KM-X63Z2**