

 


Operating and Installation Instructions

RANGE HOOD

Household Use

Model No. : FV-UX6AEB
FV-UX6AES



Thank you for purchasing this Panasonic product.

- This appliance is intended for household use only.
- Please read these instructions carefully before attempting to install, operate or service this product.
- For optimum performance and safety, please read these instructions carefully and follow safety precautions when using this product.
- This unit contains reusable materials, so please assist in proper disposal or recycling when discarding them to protect the environment.
- Before using this product **please pay extra attention to “Safety Precautions” (Page 3 - 5).**

Keep these Operating and Installation Instructions for future use.



Table of Contents

Safety Precautions 3 - 5

Precautions for Use5

Parts Identification and Sizes 6

How to Use 7

Cleaning and Maintenance..... 8 - 9

Troubleshooting 10

Specifications 11

List of Accessories 12

For Installer

Installation Instructions 13 - 16

- **Safety precautions for installation** **13**
- Introduction..... 13
- Checking before installation14
- Installing the unit to the cabinet.....15
- Installing the unit to the wall15
- Choosing Venting Mode16

Test Operation 17

Safety Precautions

Make sure to follow these instructions

In order to prevent accidents or injuries to the users, other people, and damage to property, please follow the instructions below.

■ The following charts indicate the degree of damage caused by wrong operation.



WARNING

Indicate serious injury or death.



CAUTION

Indicate risk of injury or property damage.

■ The symbols are classified and explained as follows.



These symbols indicate prohibition.



This symbol indicates requirement that must be followed.



This symbol indicates an action that should be performed carefully.



WARNING



- **Do not bake this product directly on the stove.**
(Accessible parts may become hot when used with cooking appliances.)
- **Do not use this product in humid places.**
(So as not to cause fires or malfunction.)
- **Do not touch the power plug with wet hands.**
(So as not to cause electric shocks.)
- **Do not insert sharp metal into any gaps in the unit.**
(So as not to touch the inside of the unit and cause electric shocks.)
- **Do not install, remove, disassemble, modify or reinstall this product by yourself.**
(So as not to cause malfunctions, fires, electric shocks or other accidents.)
- **Do not put any objects on this product.**
(So as not to cause a malfunction or injury.)
- **Do not use this product on the gas range when gas leakage may occur.**
(So as not to cause gas explosion.)
- **Do not install this product on the wall of flammable materials (such as wooden wall, etc.).**
(So as not to cause fires.)
- **The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.**
(So as not to cause fires.)

Safety Precautions

Make sure to follow these instructions



WARNING



- **Be sure to use a 220-240 V AC power socket separately.**
(So as not to cause fires.)
- **Be sure to remove the power plug before cleaning the product.**
(So as not to cause electric shocks.)
- **There is a fire risk if cleaning is not carried out in accordance with the instructions, the details concerning the method and frequency of cleaning, please see the instructions.**
(If the range hood is not cleaned and maintained according to the instructions specified in the manual, it may catch fire.)
- **When inserting or removing the power, hold the power plug itself instead of pulling the supply cord as you like.**
(So as not to cause fires or electric shocks.)
- **There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.**
(So as not to cause intoxication.)
- **Stop using this product immediately when oil catches fire during cooking.**
(So as not to cause fires.)
- **Stop using this product, and turn off the power switch or remove the power plug in case of any anomaly/malfunction.**
(So as not to cause fires or electric shocks.)
Examples of abnormal failures:
 - Abnormal noise or heat.
 - An unusual smell/smoke emitted.
 - Burning.
- **This product shall be installed by professionals, and it shall be installed firmly and horizontally.**
(So as not to cause injury due to falling of the product.)
- **Be careful when removing the unit to prevent it from dropping or falling accidentally.**
(So as not to cause injury due to falling of the product.)
- **It shall be grounded. Connect the power plug to a power socket with a grounding continuity terminal.**
(So as not to cause electric shocks in case of malfunction or leakage.)
- **When installing this product on the wall, make sure that the metal parts and mounting screws do not touch any metalwork in the wall, such as metal slats, cable slats and metal plates.**
(So as not to cause electric shocks.)

Safety Precautions

Make sure to follow these instructions



CAUTION



- **Do not put any objects on this product.**
(So as not to cause a malfunction or injury.)




- **Wear gloves when cleaning.**
(So as not to cause hand injury by the edge of the product.)
- **If the interior needs cleaning, entrust a professional to do so.**
- **The minimum distance shall be at least 650 mm between the supporting surface for the cooking vessels on the hob and the lowest part of the product.**
(So as not to cause malfunctions or burns due to high temperature of the unit.)
- **The product shall be installed on a wall or cabinet that is strong enough. If installation strength cannot be ensured, reinforcement measures are a must. The wall or cabinet used to support the installation of this product shall be able to bear the weight 5 times of the product.**
(So as not to cause injury due to falling of the unit.)
- **Range hood is only intended to be installed over a hob with no more than four hob elements.**
(CAUTION: Accessible parts may become hot when used with cooking appliances.)
- **When the range hood is no longer to be used, it must not be left in place but removed.**
(So as not to cause injury due to possibly falling of the unit.)


Precautions for Use

- Do not use gasoline, benzene, thinner or any other similar chemicals for cleaning.
- When using a gas range, it is suggested turning on this product.
- When using with cooking utensils at the same time, the accessible parts may become hot.
- When using steam to clean the range hood, the steam may hit the electronic components, causing damage to the components or leading to a short circuit.


Parts Identification and Sizes

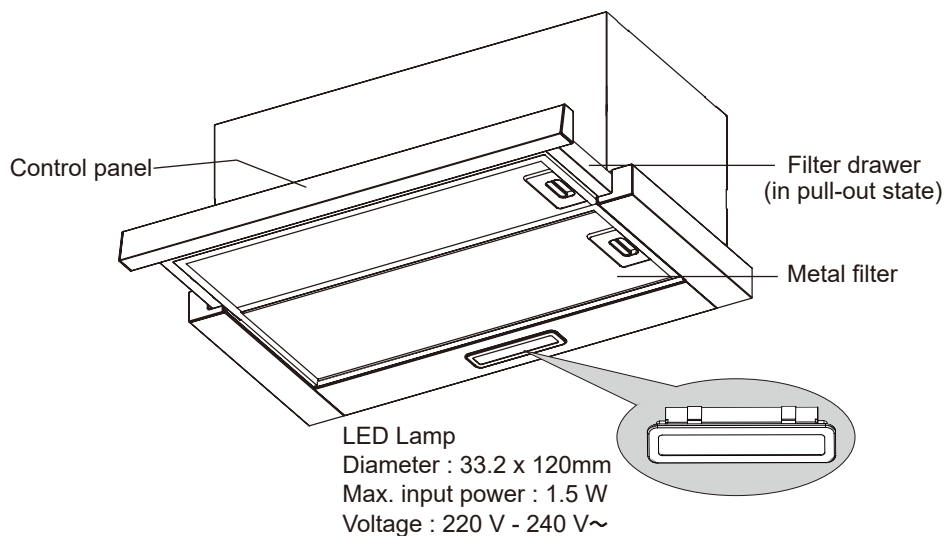

Top View

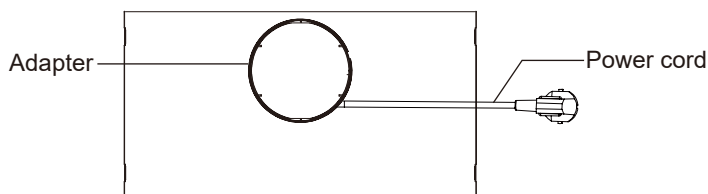


Unit : mm

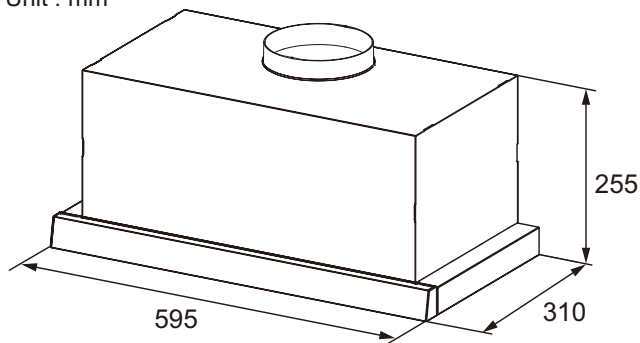

How to Use

Control Panel

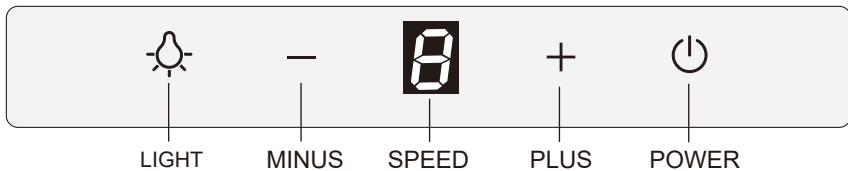

Insert the plug into the power socket, hold the filter drawer by the middle to pull it out. With a beep, all the keys on the control panel light up and last for about 1 second, and then go out, the unit enters the standby state.

Power on/off

In standby state touch the  key to enter power-on state. The  key lights up, the fan starts to run at speed level 1 and the SPEED display shows "1".

Touch the  key when the fan is working, the  key flashes, and the system starts to perform the "Power-off latency" function. The fan will stop running automatically after running at low speed for 3 minutes.

- If you touch the  key during the latency, the current latency function will be canceled and the unit will enter the standby state.

Push the filter drawer back into the hood, the unit enters power-off state.

Fan speed setting

In power-on state, touch the  or  key repeatedly to decrease or increase the fan speed. The SPEED display shows the level (level 1 - level 3).

Light on/off

In standby state or power-on state, touch the  key, the  key turns white highlight, and the light turns on; touch the  key again, the  key goes out, and the light goes out.

Cleaning and Maintenance

Constant maintenance ensures the correct operation and efficiency of the appliance over time. Special attention should be paid to the metal grease-trapping filters and the charcoal filters. Frequent cleaning of the filters and their supports will ensure that fats and grease do not accumulate on the cooker hood, with the consequent risk of fire.

Cleaning the outside of the unit

It is advised to clean the external hood surfaces at least every 15 days in order to avoid that oily or greasy substances affect the steel surfaces.


The outside of the cooker hood should be cleaned using a damp cloth and neutral liquid detergent or denatured alcohol.


In case of fingerprint-less finish clean only with a soft cloth, rinse and wipe dry thoroughly. Do not use products that contain abrasive substances or cloths NOT specially designed for cleaning steel. Using abrasive substances or rough cloths will inevitably damage the finish of steel. The steel surface will be irrevocably damaged if the instructions above are not complied with. Keep these instructions together with the instructions for use of your hood.

Metal grease-trapping filters

These filters trap the fat and grease particles suspended in the air, and therefore should be washed every month in hot water and detergent, without bending them. Wait until they are completely dry before repositioning them.

To remove metal filters:

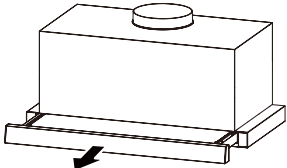1. Pull out the filter drawer to completely expose both filters. The wide filter (Filter A) is installed on the hood body; the narrow filter (Filter B) is installed on the drawer. 
2. Filter A should be removed first, then remove filter B. Press the locks and simultaneously pulling the filters downwards. When cleaning is completed, insert the filter tabs into the holes first, then push the filters fitting into the lock. Reverse the procedure when returning filters into position.

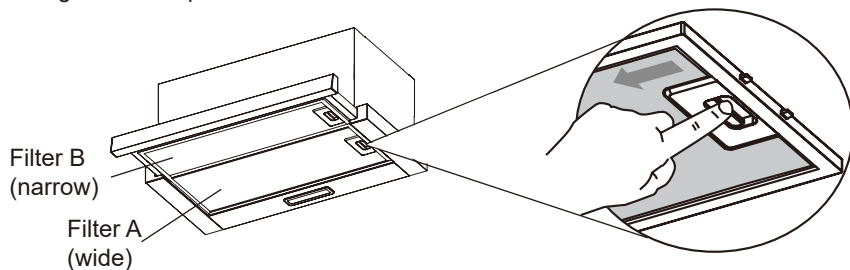

Note:

- The color of the filters surface may change throughout the time but this has no influence to the filter efficiency.

Charcoal filters

These filters trap the odours present in the stream of air that passes through them. The air is purified by passing a number of times through the filters and being recirculated into the kitchen. The charcoal filters cannot be cleaned, and should be replaced on average every 3-4 months (according to use).

Always pull out the filter drawer before installing or replacing the charcoal filters.



To install the charcoal filters:

Align the positioning post with the corresponding hole, rotate the charcoal filter until the locking mechanism engages with the base, then rotate the charcoal filter in the indicated direction to lock the charcoal filter.

To replace the charcoal filters:

Remove the metal filters (as described on page 8). The motor compartment can be accessed and it is possible to proceed with the assembly/disassembly of the charcoal filters as illustrated.

To order new charcoal filters, contact your distributor/dealer.

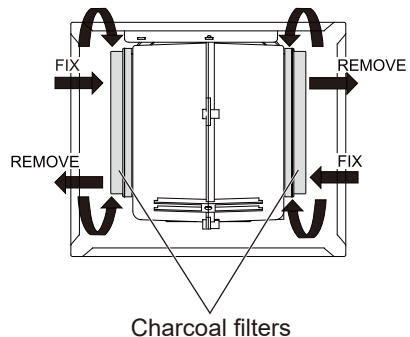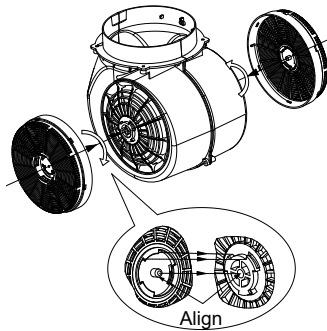

WARNING

Do not use abrasive products. All the above operations must be performed after having disconnected the unit from the mains power supply. There is a fire risk if cleaning is not carried out in accordance with the instructions.

Troubleshooting

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated do not solve the problem, consult your dealer for instructions.

Symptom	Possible causes	Solutions
The light is not lit and the motor does not work	1. The power plug is not inserted into the power socket. 2. The product wire fails.	1. Insert it into the power socket. 2. Contact the Customer Consulting Service Center.
The motor does not work	The motor or capacitor fails.	Contact the Customer Consulting Service Center.
The light is not lit	1. The light wire or connection fails. 2. The light circuit board fails. 3. The light lamp fails.	Contact the Customer Consulting Service Center.
Abnormal noise	The smoke duct is loose or excessively bent, causing poor air flow.	Contact the Customer Consulting Service Center for reinstalling of the smoke duct.
Oil fume absorption is not effective	1. The smoke duct is loose or excessively bent, causing poor air flow. 2. The range hood is not set at the highest fan speed. 3. Oil fume is blown off or blown away due to high air volume in the kitchen. 4. The distance between the cooking stove and the range hood is too far.	1. Contact the Customer Consulting Service Center for reinstalling of the smoke duct. 2. Set to the highest fan speed. 3. Keep the windows or door closed in a proper way. 4. Reinstall the range hood with reduced distance from cooking stove.
Oil leakage	The filters are dirty.	Clean the filters.
An abnormal sound is heard when the fan rotor works	The fan rotor is loose, and the fan rotor cap is not tightened.	Contact the Customer Consulting Service Center.
Touch keys do not work properly	The control switch fails.	Contact the Customer Consulting Service Center.

Specifications

Rated voltage	220 V - 240 V~
Rated frequency	50 Hz
Rated total input power	106.5 W
Rated input power of main motor	105 W
Max. input power of LED lamp	1.5 W
Number of fans	Single fan
Air volume (IEC standard)	440 m³/h
Air volume (unrestrained)	750 m³/h
Max. static pressure	190 Pa
Airborne acoustical noise	64 dB(A)
Net weight	Approx. 7.3 kg
Outer diameter of smoke duct	Φ 150 mm
Dimension L × W × H	595 × 310 × 255 mm

Note:

- The data of air volume and electrical properties are values at a static pressure of 0 Pa.
- Noise: A-weighted sound power level with a tolerance of +3 dB.
- Air volume, max. static pressure: the allowable difference between the actual measured value and the indicated value shall not exceed -10% of the indicated value.
- The parameters above are subject to change without notice.

List of Accessories

No.	Appearance	Name and usage	Quantity
1		Plastic expansion tubes	4
2		Screw (Φ5 x 50)	4
3		Operation/ Installation Instructions	1
4		Charcoal filter	2

Note:

- The smoke duct is not supplied, please refer to the Installation Instructions for the diameter of the duct and purchase it separately.

Installation Instructions

For installer

Safety precautions for installation

Please read these precautions fully



WARNING

Failure to follow these instructions may cause a risk of personal injury or death.

- The distance between the hob and the lowest part of the kitchen cooker hood cannot be smaller than $X=65$ cm. Should the instructions of the gas hob specify a greater distance, take this into consideration.
- In the outside suction version, the diameter of the fume discharge duct must be no smaller than the cooker hood connection. We recommend using pipes with 150 mm diameter. If using pipes with 120 mm diameter, install a duct adapter to the discharge hole of the cooker hood.
- In the horizontal sections, the duct must slope slightly (around 10%) upwards, so as to better convey the air outside of the room. The duct must be installed not to bend it in the immediate vicinity of the discharge hole. Otherwise, the return valve will get stuck with the duct, and will not work for the exhaust properly. Reduce curves to the bare minimum, and check that the length of the ducts is also the bare minimum.
- Comply with the current regulations on air discharge into the atmosphere.
- If other appliances that use gas or other fuels are being used at the same time (boiler, stove, fireplaces, etc.), make sure the room where the fumes are extracted is well ventilated, in compliance with the current regulations.
- When screwing or installing metallic parts to the wall which metal lath, wire lath or metal plate is lined, do not let them come in contact with metal part. Otherwise, it may cause electric leakages or fires.

Introduction

Hood version with external exhaust

In this version the kitchen fumes and vapours are conveyed outside through an exhaust pipe. The exhaust conveyor that protrudes from the upper part of the hood must be connected with the pipe that conducts the fumes and vapours in an external output.

In this version, charcoal filters supplied on the hoods must be removed.

When the kitchen hood is used simultaneously with other appliances that use gas or other fuels, the room must have sufficient ventilation according to the standards in force.


Hood version with internal recirculation (filtering)

In this version, the area passes through the charcoal filters to be purified and is then introduced into the kitchen environment.

Checking before installation

Suggested installation of the range hood is as shown in the figure below:

Unit : mm

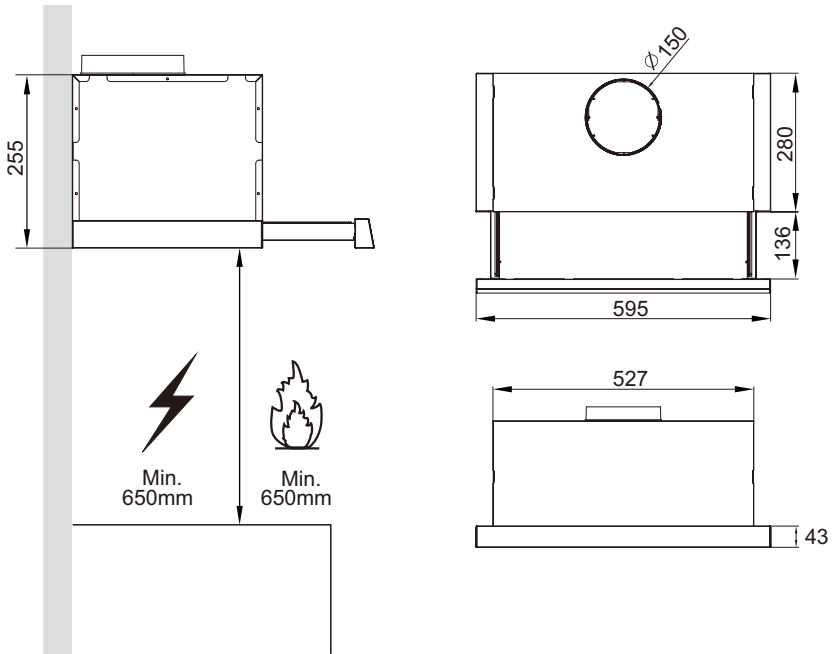

Tools required:

- Electric drill
- 10 mm drill bit
- Screwdriver
- Hammer
- Tape measure or steel ruler
- Spirit level

Note:

- This product may have sharp edges. Do wear gloves when installing.
- The range hood shall be aligned with the center of cooking stove.
- This installation height is only applicable to electric stove, if installed above the gas stove, the installation height should be in accordance with the installation height requirements of gas stove.
- Do not install it in the place exposed to direct sunlight.
- Ensure that the gas can be discharged to outside or common flue through smoke duct.

Installing the unit to the cabinet

1. According to Fig.1 to make 4 holes at the corresponding positions on the cabinet where the range hood is installed.
2. Fix the range hood to the cabinet with 4 screws (supplied) as shown in Fig. 2.

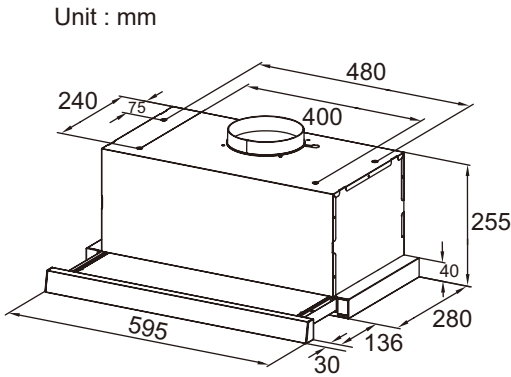


Fig.1

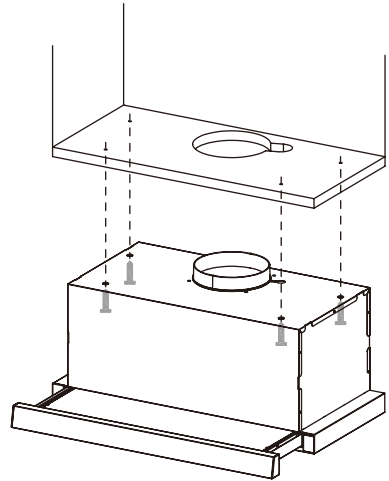


Fig.2

Installing the unit to the wall

1. According to Fig.3, use an electric impact drill to make 4 holes with a diameter of 10 mm and a depth of 50 mm at the corresponding positions on the wall where the range hood is installed, embed the plastic expansion tubes.

Unit : mm

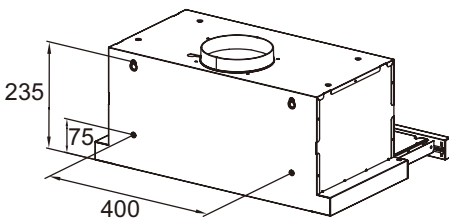


Fig.3

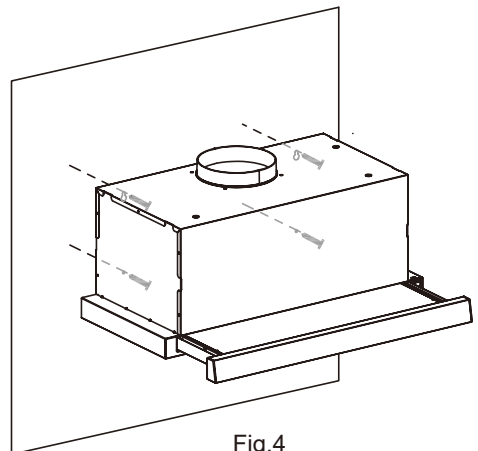


Fig.4

2. Install 2 screws (supplied) to the upper plastic expansion tubes corresponding to the hanging holes on the hood. The extent of screwing should be convenience to the next step installation.
3. Hang the range hood onto the installed screws on the wall, then fix the other 2 screws (supplied) from inside of the hood to secure it in place and prevent it from falling (Fig.4).

Note:

- After installation, make sure that the range hood is not shaking or detached, and try to ensure that it is in a horizontal state.


Choosing Venting Mode

For external exhaust mode:

Fix the smoke duct (not supplied) on the valve on the hood body. Stretch the smoke duct, extend it into the wall opening or connect it to the common flue securely, and adjust the smoke duct to ensure that it is not bulging or compressed, and it bends freely. If the smoke duct is extended directly into the common flue, it shall not go too deep into the common flue, so as not to affect exhaust effect; if oil fume is exhausted directly to the outside, it is suggested that a shutter (available in hardware stores) be attached at the end of the outdoor smoke duct.

Unit : mm

Smoke duct of $\Phi 150\text{mm}$ is recommended.

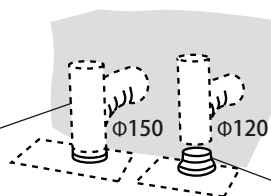

For smoke duct of $\Phi 120\text{mm}$, a duct adapter (not supplied) is needed.

For internal recirculation mode:

Assemble the charcoal filters as shown on page 9.

After finishing all installations and connections, insert the power plug into the socket securely. The power socket shall be a special one with a reliable grounding wire. Do not change the plug without permission.

Test Operation

After installation, turn on the power, press each function key on the control panel, and check the following items:

- Do the fan blades rotate properly?
- Is there any abnormal vibration or noise?
- Is each function key on the control panel working properly?

Panasonic Corporation

Website: <http://www.panasonic.com>

Printed in China

© **Panasonic Corporation** 2025

v1.0