

Operating & Installation Instructions

Fully Automatic Washing Machine
(Household Use)

Model No. **NA-FD145X3** **NA-FD135X3**
NA-FD125X3 **NA-FD115X3**



Contents

Safety Precautions	2
Part Names / Accessories	6
Before Washing	7
Operation Panel	8
Washing	9
Variety of Programs	10
Detergent / Softener / Bleach	12
Washing Options	14
• Preset • Wash / Rinse / Spin • Delicates • Blanket • Stain Master • Air Dry (90 min)	
Convenient Functions	18
Contents of Programs	19
Maintenance	20
Installation	24
Error Display	28
Troubleshooting	30
Specifications	32

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.



AWW9901CD8C1-0C0
A0823-1064(S)(P)
Printed in Vietnam
06-2024

Safety Precautions



WARNING


May cause serious injury or death.

Children must not use it alone.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Do not touch the tub until it stops.

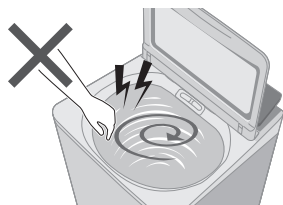

- If the tub does not stop within 15 sec:

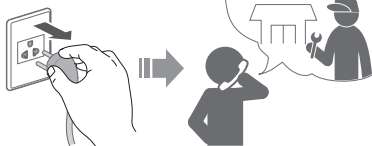


May cause fire or electric shock.


Do not touch it with wet hands.




Do not hold or pull on the cord.

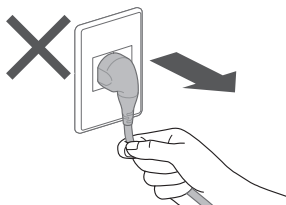


Do not use.

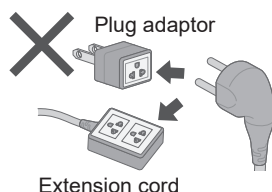

Fully insert it.

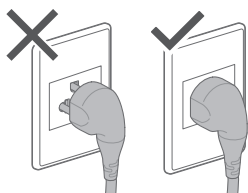


Do not use.

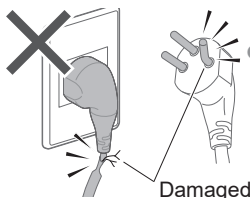


- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


In case of failure or damaged power cord, stop use and ask the electrical technician.

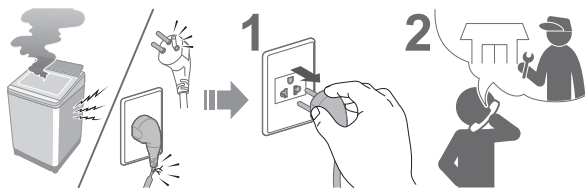

Accumulated dust may cause fire.

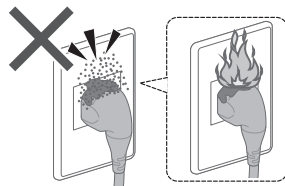


**Securely insert the ground prong.
Call your local dealer for a new socket.**

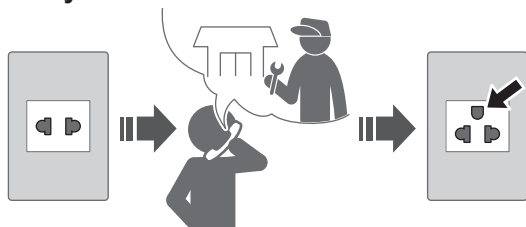

Wipe the power plug periodically.




 Use a socket appropriate for this appliance.



- The plug shape, socket shape and rating requirement varies with the region.

Keep away from flammable materials.

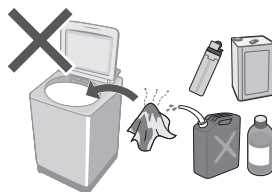

May cause failure.

Never disassemble, repair or modify it by yourself.




Safety Precautions (continued)


CAUTION

May cause injury.

Be careful not to get your fingers caught.

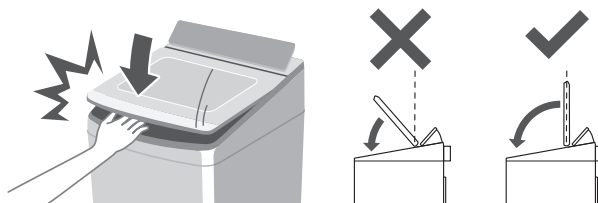


Do not climb or put objects on the appliance.

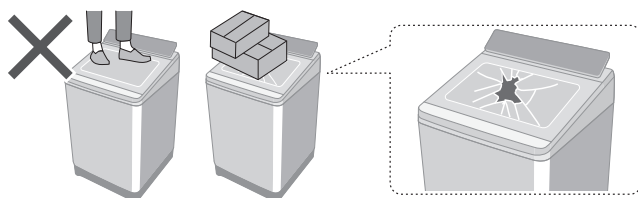


- If the lid is broken, immediately stop using.

Be careful of your hands and feet.

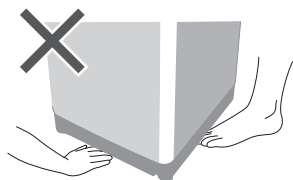


May cause water leakage.

Turn off the water faucet.

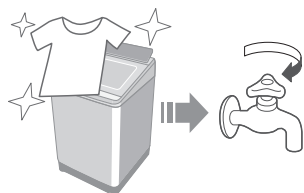


Use new hose-sets.

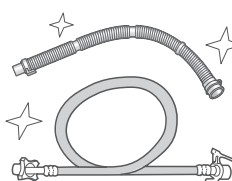

- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

May cause failure.


Keep away from heat and direct sunlight.

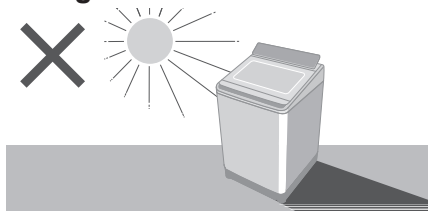

Do not wash waterproof items.




Do not obstruct.

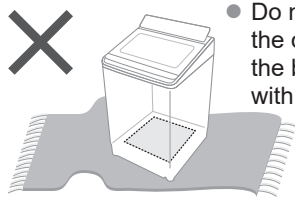

- Do not obstruct the openings of the bottom face with carpet, etc.

Do not use hot water.

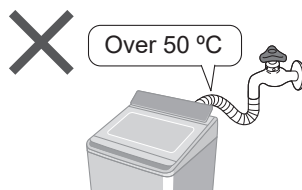


For machine-washable items only.



- This appliance is intended to be used in household. This appliance is not intended to be used in applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in laundrettes.

Part Names / Accessories



Part names

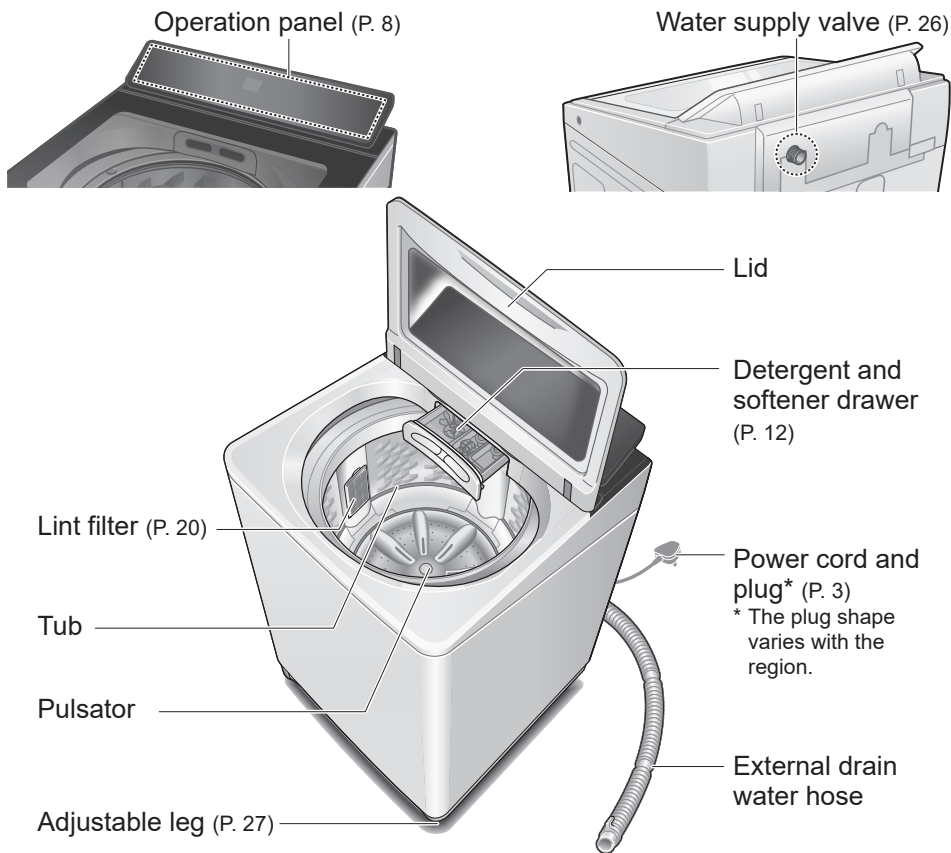


Accessories

☐ Water supply hose* (1) (P. 26)

* The hose supplied depends on the region the unit is sold in.
(Joint type) (Screw type)

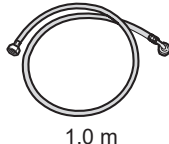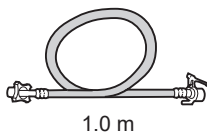

☐ Bottom cover (1) /
Screw (1) (P. 25)

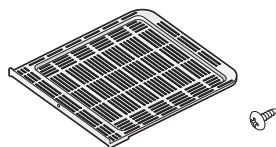


☐ Water tap adaptor* (1) (P. 26)



* For Joint type only

 
☐ External drain water
hose (1) (P. 25)




Before Washing

Laundry preparation and check

Pre-laundry check

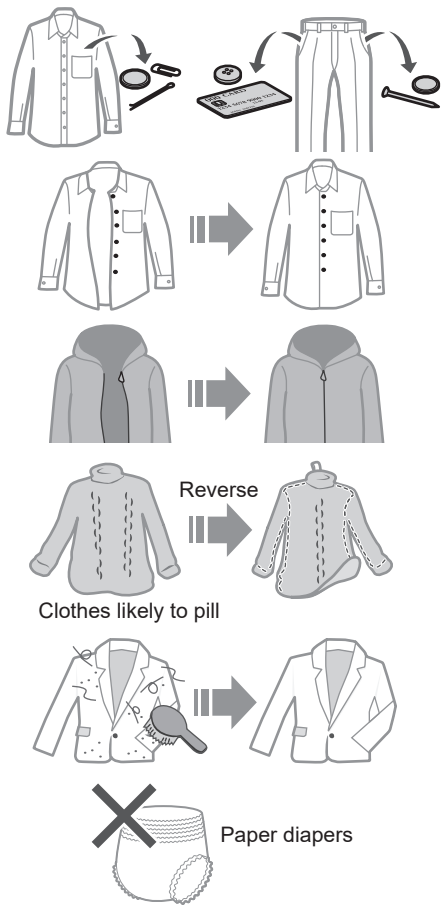

Use laundry nets for delicates

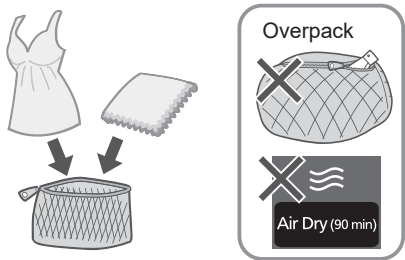

For “Stain Master” (P. 16)


- Pretreatments for heavily stains



- Observe the clothes' care labels



To prevent colour staining

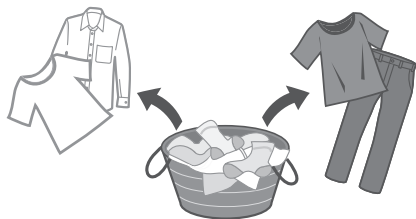

Operation Panel

Change process settings (P. 14)



Flashing (in progress)

Water amount



79 L

Approx. 5 sec

Remaining time



Time Left

60 min

Detergent volume

Water level (L)			Detergent *2
79 *1	70	65	
60	55	50	
45	40	35	
25			

*1 NA-FD145X3・NA-FD135X3: 79 L
NA-FD125X3: 77 L
NA-FD115X3: 75 L
*2  : 1 scoop of detergent

Water Level

Wash

Rinse

Spin

Auto Tub Clean

Tangle Care

Preset

Air Dry(90 min)

Time Left

88

hours min

Start/Pause

Normal

Speedy

Delicates

Baby Care

Water Save

Blanket

Soak

Tub Hygiene

Odour/Aroma*

Mud

Soya/Sauce

StainMaster

Power On/Off

Auto Tub Clean (P. 18)

Tangle Care (P. 10)

Preset (P. 14)

Air Dry (90 min) (P. 17)

Start/Pause

Program selection (P. 10)

Stain Master (P. 16)

Power On/Off

Child Lock (P. 18)

Child Lock lamp (P. 18)

Refill (P. 19)


- NOTE
- In case of a power failure.
⇒ Operation will resume from where it stopped when the power recovers.
 - If you do not press  within 10 minutes after power-on.
⇒ Auto power off.
 - The wash process setting of the “Stain Master” and “Soak” programs cannot be changed.

Washing


1




2

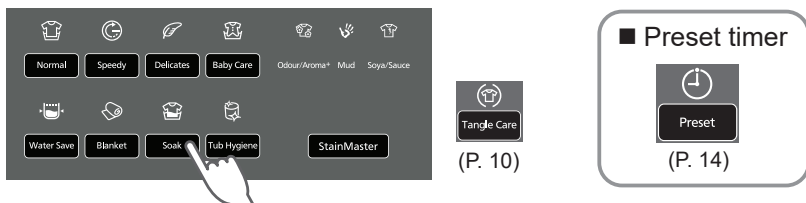


3

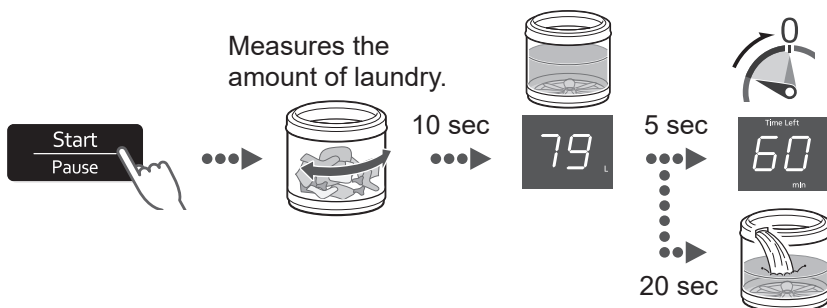

4

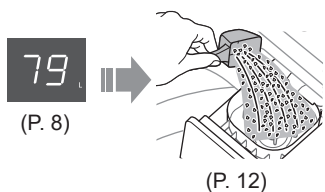


5

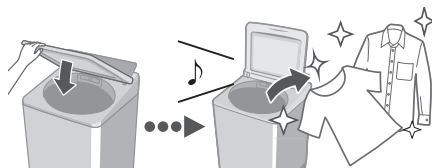


■ After pressing “Start”


- To change each operation (while washing).

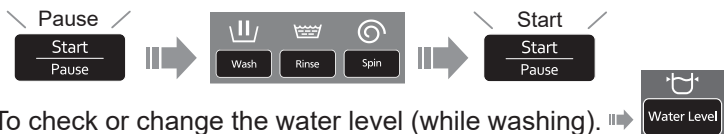

- To check or change the water level (while washing).
- You cannot change the program.

 Variety of Programs

	Program	Purpose	Max. capacity (kg)
Wash	 Normal (P. 9)	● Everyday clothes 	
	 Tangle Care (P. 9)	● Anti-tangling • Washing more gently than “Normal” to reduce tangle. • Disentangling clothes after spin: 6 kg or less.	
	 Speedy (P. 9)	● For light soil 	(FD145X3) 14.5 (FD135X3) 13.5
	 Soak (P. 9)	● For heavy soil Presoaking to wash 	(FD125X3) 12.5
	 Baby Care (P. 9)	● Clothes for babies & sensitive skin Rinsing thoroughly 	(FD115X3) 11.5
	 Water Save (P. 9)	● Saving water 	
	 Blanket (P. 15)	● Comforters and blankets  With a machine-washable tag	4.2

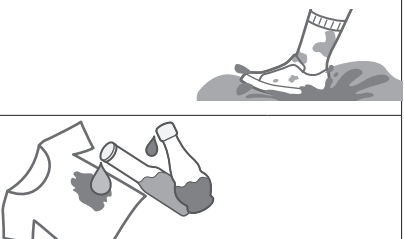
	Program	Purpose	Max. capacity (kg)
Wash	 Delicates (P. 15)	● Washing gently 	4.2
	StainMaster (P. 16)	● For the following stains	6.0
	Light         Heavy	● Use more softener to keep the scent longer	
	Odour/ Aroma+		5.0
	Mud		
Dry	 Air Dry (90 min) (P. 17, 23)	● Drying synthetic fibre clothes 	2.0
		● Tub drying 	—
Maintenance	 Tub Hygiene (P. 23)	● Tub cleaning Removing black mould and smell 	—

NOTE


- “Normal” program and “Water Save” program are recommended for a normally soiled load at the rated capacity of this washing machine.
- “Water Save” program is recommended for Singapore.

Detergent / Softener / Bleach


- Follow the instructions on each package.
- For cleaning (P. 21)
- Close auto dosing drawer completely before use.

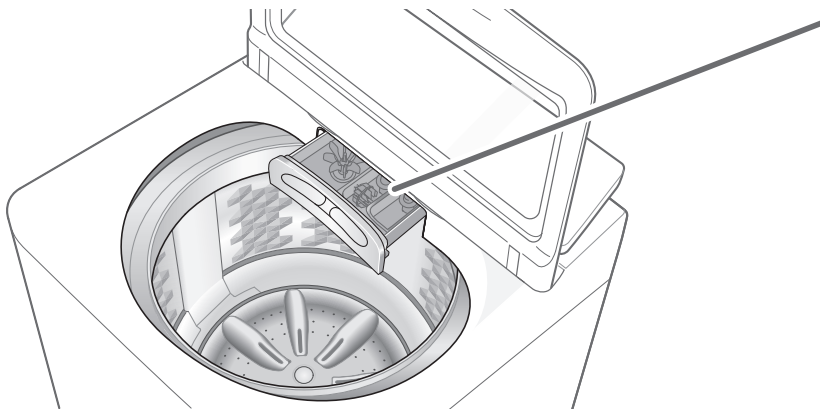

Detergent

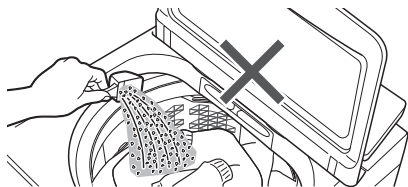

- **Do not pour detergent directly into the tub.**
- The level of foaming depends on the load size, soil, detergent, and water hardness.



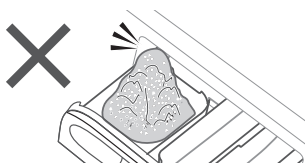


Bleach

Whiten bleach
(chlorine bleach)




- To use bleach, put bleach in the powder detergent case (if bleach is in powder form) or liquid detergent case (if it is liquid bleach).

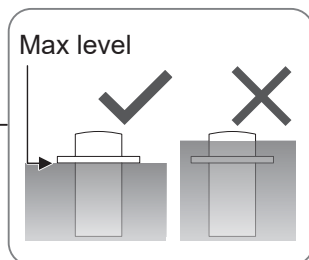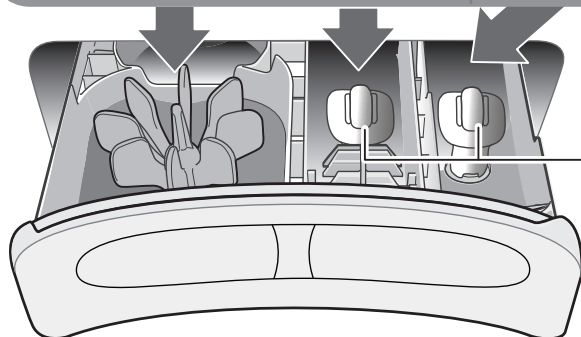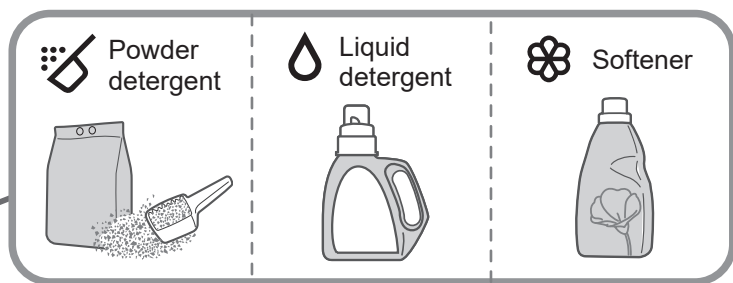

Softener

- To put softener while the machine is operating:

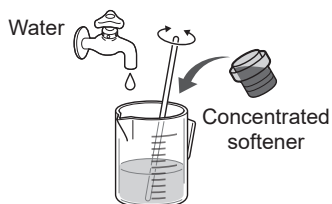

Do not use separated or solidified softeners

- Softener cannot be used with the "Water Save" program.

Washing Options

Preset

Set how many hours later to finish operation.

1



2



2 min

All other indications turn off.



	2 - 24
	1 - 24
	-
	2 - 24
	2 - 24
	-
	3 - 24
	2 - 24
	-
	-

■ To confirm



■ To cancel or change



Wash / Rinse / Spin

1




2



Wash Rinse Spin



3

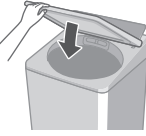

Start/Pause



NOTE

- Not available for “Tangle Care”.



Delicates

65 L	4.2 kg
55 L	3.0 kg

NOTE



Bleach




Liquid delicate detergent



■ After operation ends



Take out immediately.

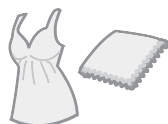


Blanket

Max.
water amount *

4.2 kg

- 100 % synthetic fibre
- 100 % cotton

 * NA-FD145X3 • NA-FD135X3: 79 L /
NA-FD125X3: 77 L / NA-FD115X3: 75 L



NOTE



Powder detergent



Liquid detergent




NOTE

- The water amount indication shows the maximum and cannot be changed.

Washing Options (continued)

Stain Master

Preparation: (P. 7)

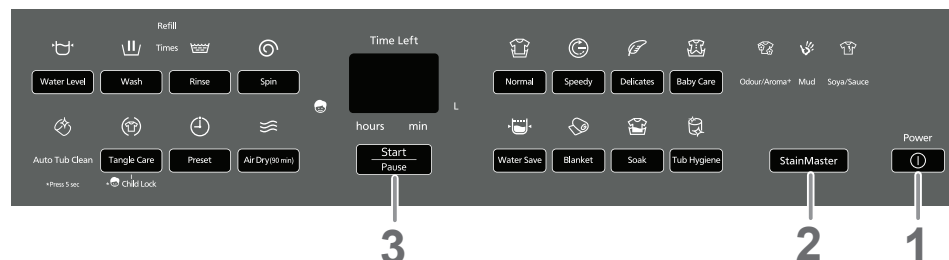

1



2



■ Timer preset (hours) (P. 14)


3



4




5

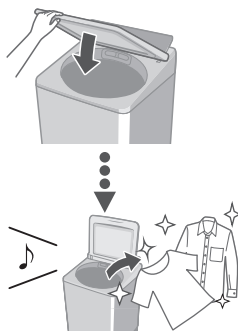

NOTE

- Max. capacity (P. 11)

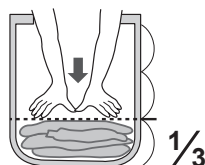

- Max. water amount: 65 L
- You cannot change the wash process setting of this program.

Air Dry (90 min)

The air blown from the tub rotation removes water from clothes.

- Dryable clothes: Synthetic fibre
(Max. 2.0 kg)



NOTE

- Clothes may not be sufficiently dried (depends on amount and type of clothes, and the temperature).
- This function does not use a heater. Clothes may be cold and half dry.

Convenient Functions

Setting Auto Tub Clean

Preventing black mould, available with all programs except "Water Save" and "Air Dry (90 min)".

■ Lamp indications



Operating



Function enabled




Function disabled

■ To turn on/off

- 1
- 2
- 3 Hold 3 sec
- 4 to select off on
- 5

Setting Child Lock

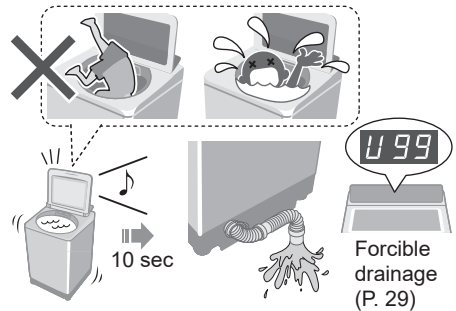

* This function does not lock the lid and button operations.

- 1
- 2 Hold 5 sec

■ To cancel: same procedure x4

Cancelling end buzzer

- 1 & Hold 3 sec x2

■ To reset:
same procedure x4


Contents of Programs

Program		Total time ^{*1} (min)	Wash (min)	Rinse (times)	Spin (min)
	Normal	60	9	2	7
	Tangle Care	70	13	2	7
	Speedy	45	3	2	5
	Delicates	50	9	2	1
	Baby Care	70	9	2	7
	Water Save	85	12	4	5
	Blanket	70	12	2	5
	Soak	125 ^{*2}	71 (Soak 59)	2	7
Stain Master	Odour/Aroma+	80	13	2	7
	Mud	90	40	2	7
	Soya/Sauce	115 ^{*2}	62 (Soak 29)	2	7
	Tub Hygiene	150 ^{*2}	65 (Soak 62)	2	30

***1 Total time is approximate (When the standard water supply rate is 15 L / min and the water temperature is 28 °C).**

 ***2 Remaining time of 99 minutes or less will be displayed. -- → 99**


- “Refill”: to fill the tub with water and rinse while supplying water.





Maintenance

Lint filter

After each operation

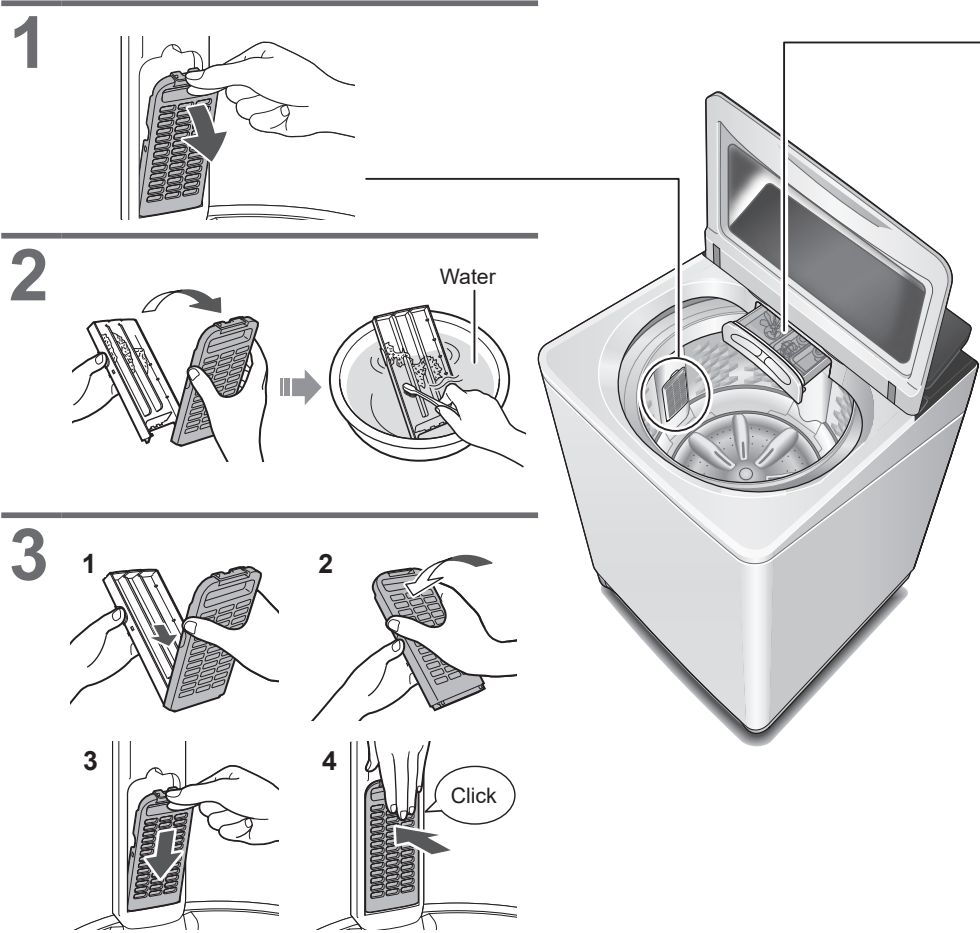


NOTE

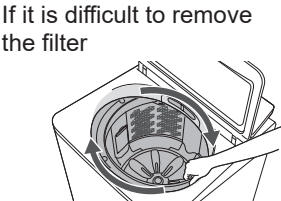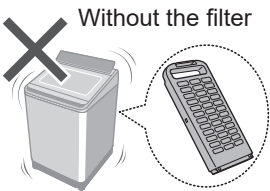

Detergent and softener drawer


If stained with detergent or softener

1


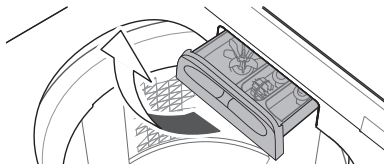


Remove


2

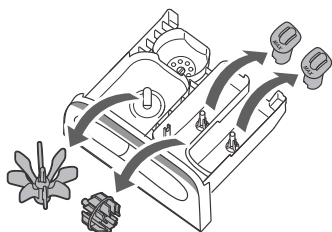


4

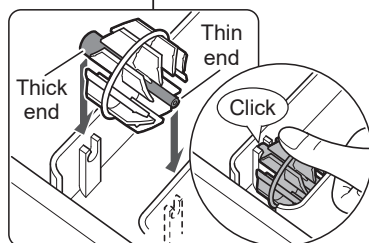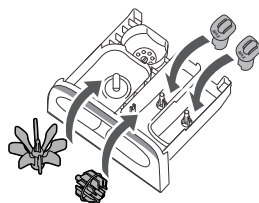

3

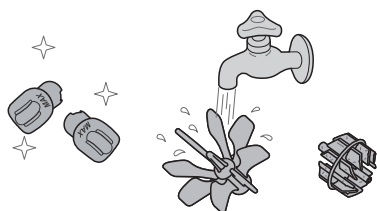

5

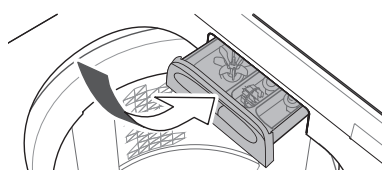



Attach

Main unit, lid



For heavy soil

 
Neutral kitchen detergent

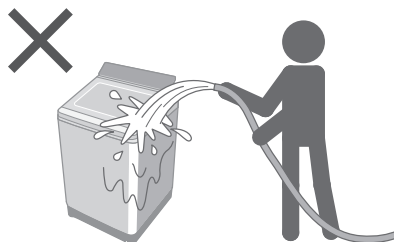

Maintenance (continued)

Water supply filter


If water does not flow smoothly

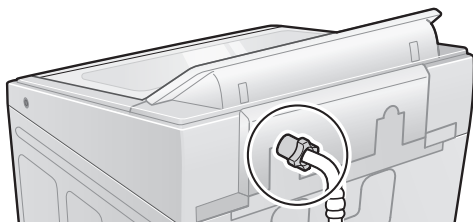


1



5

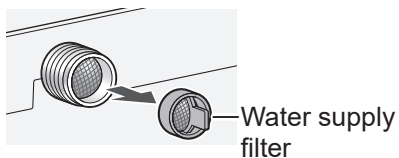


2

 


6




3

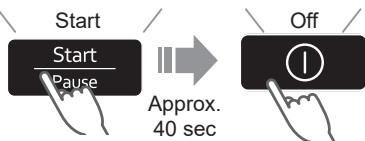


7

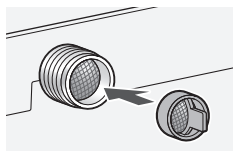

4

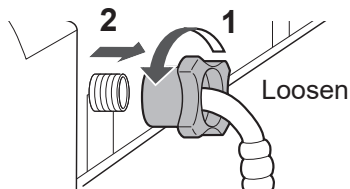


8

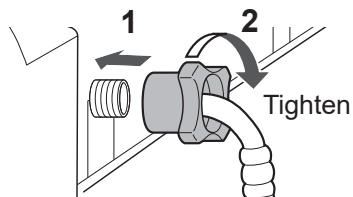

Tub

Once a week <Air Dry>

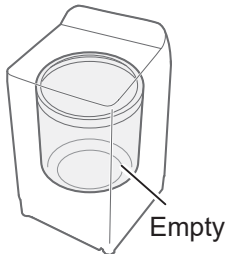


Once a month <Tub Hygiene>


1




5

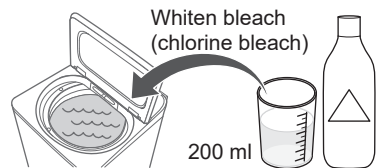


2

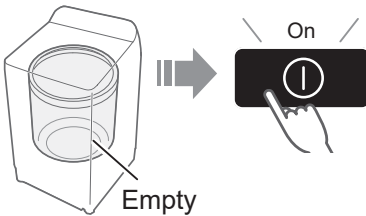



6

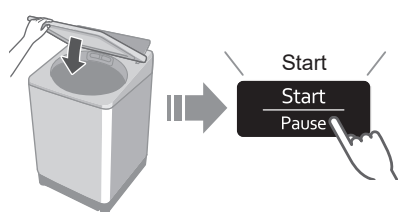

3



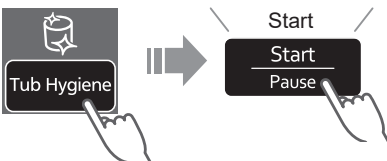


4

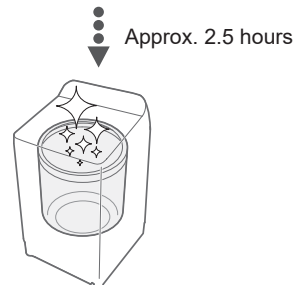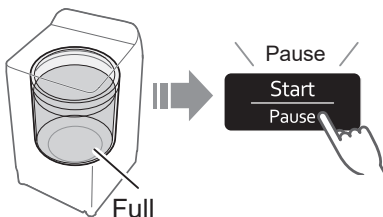

Installation


Check the location.

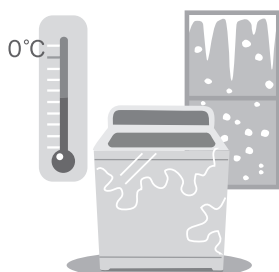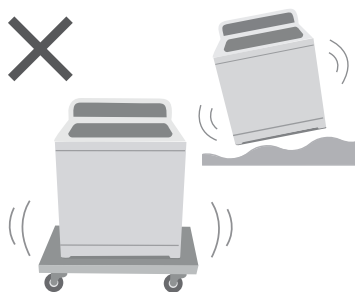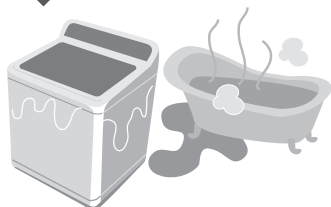



Make sure to ask a service person for installation.








- Do not install by yourself.
- Follow this installation method.
If you do not, Panasonic will not be liable for any accident or damage.

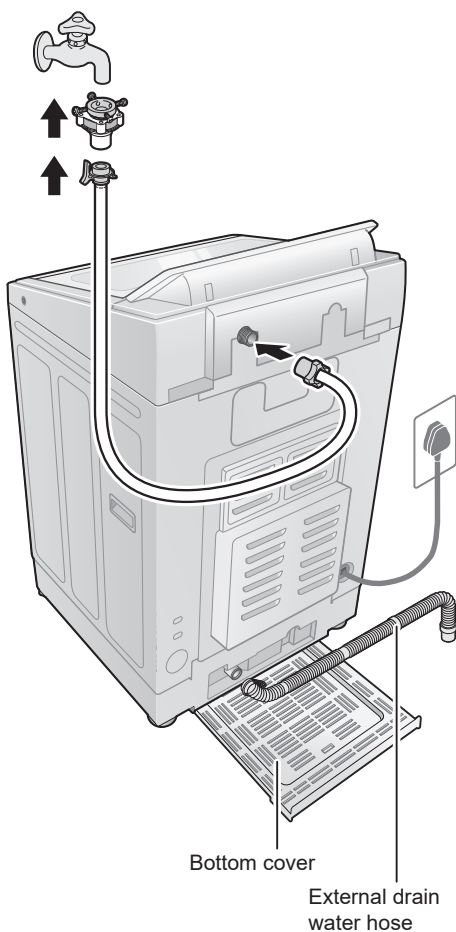

Attach the bottom cover

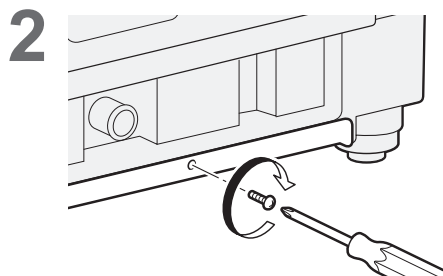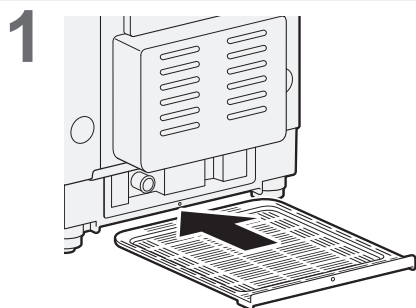


Attach the external drain water hose

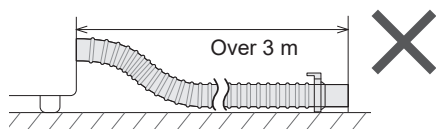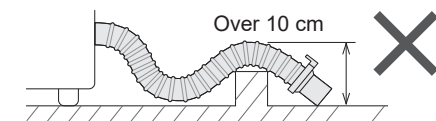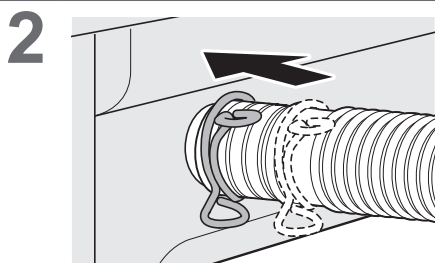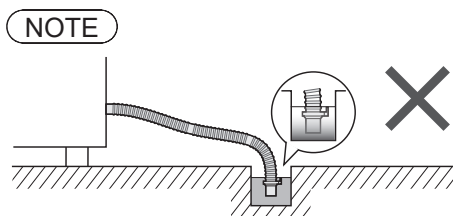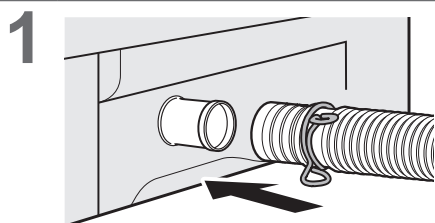


Installation (continued)

Connect the water supply hose



Joint type

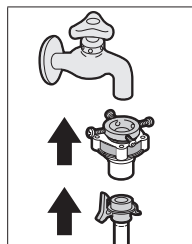

Screw type

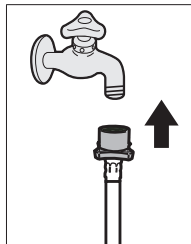


■ Screw type

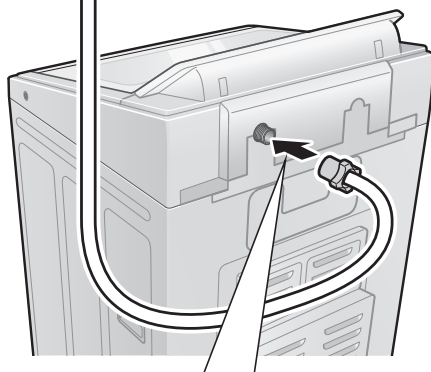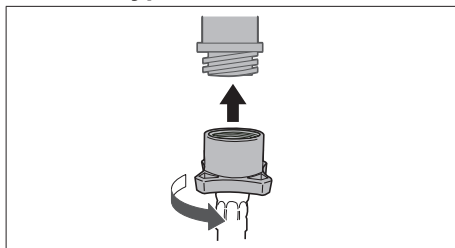

Check that the elbow is not loose.




■ Joint type

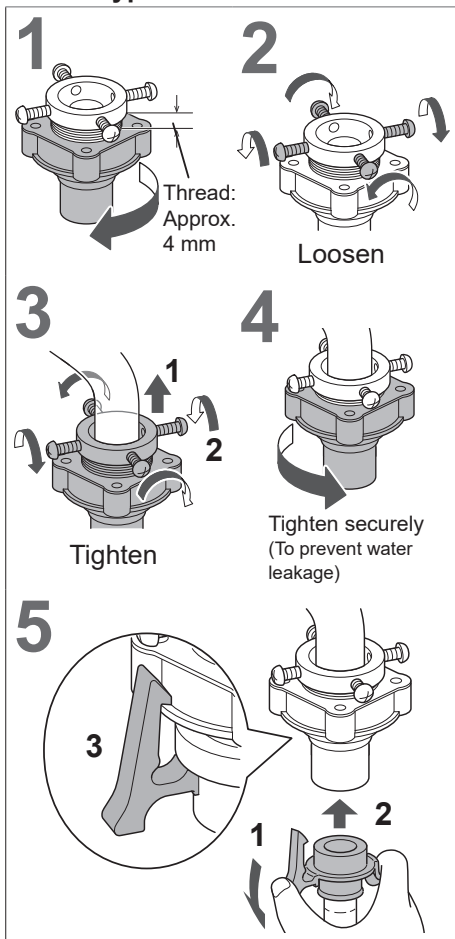

CAUTION

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.


Connect the power plug and grounding

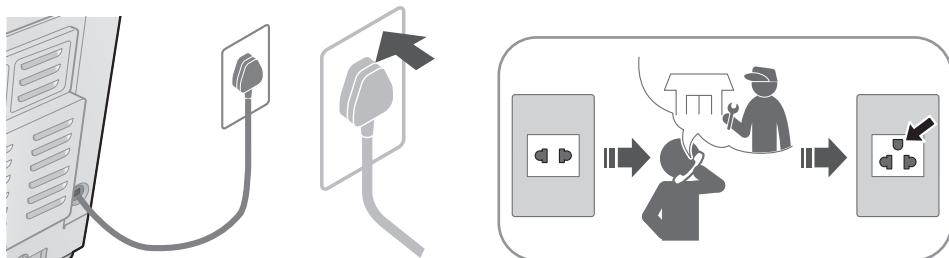


Check that the washing machine is level

■ If the washing machine wobbles


Loosen

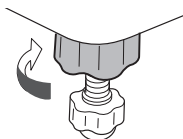


Adjust

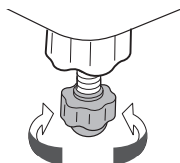


Tighten

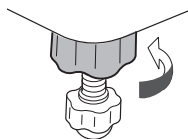

Trial operation

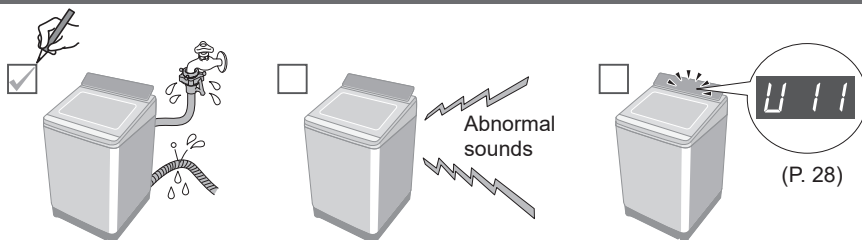





Error Display

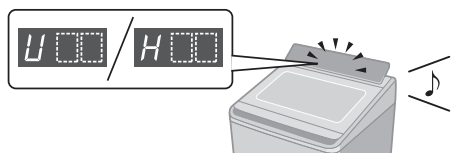




■ Preparation



Cancel Child Lock (P. 18)
if it is set.

Error Display	Points to be checked
Water cannot drain.	1 Check 2 Lint
The lid is open.	1
Spin or "Air Dry" is not possible.	Uneven 1 Even 2 Unstable or incline 1 Stable 2

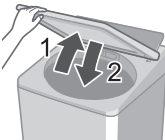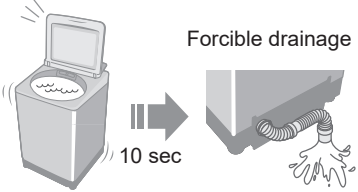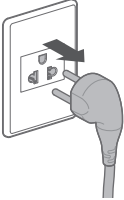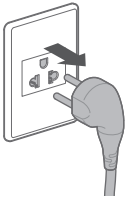Error Display	Points to be checked
 Water cannot be supplied.	Water outage  Turned off   1  Water supply filter (P. 22) 2 
 Water has been forcibly drained.	With Child Lock set   Forcible drainage 10 sec 1   
 Inspection is required.	1  2  3 

  Troubleshooting

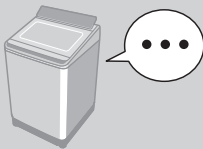	Symptoms	Points to be checked
Time	Indication increases or does not decrease. 	Time indication is approximate. Remaining time is corrected during operation. 
	Longer than the indication. 	When clothes are uneven.  When the water drainage is not good.  When the water supply is not good. 
	Operation passes the preset time. 	
Main unit	No operation 	☐ Check ● Power failure  ● Timer preset  ☐ Try ● Close the lid.  ● Turn on.  ● Insert the power plug completely.  ● Press "Start".  ● Turn breaker on. 
	Cannot change process settings (after start). 	☐ Try ● During wash process 1 Pause  2  3 Start  ● After wash process 1 Off  2 On 

  	Symptoms	Points to be checked
Wash	Water is supplied while washing. 	When water level drops.  When amount of laundry is large.   Water is added automatically.
	The water level too high 	When laundry is wet.  When there is water in the tub before operation.   The water level may be higher.
	too low 	When clothes are light (synthetic fibre, etc.).   The water level may be lower.
Rinse	Operation started with rinse, but water is not supplied. 	When there is no water in the tub.   Water is supplied after spin. When there is water in the tub.   Water is supplied after water discharge and spin.
	Spin changes to rinse. Rinse starts instead of spin. 	If clothes are uneven, this appliances automatically corrects unevenness by rinse process. 
Spin	Irregular rotation 	The tub rotation speed is adjusted to reduce vibration. 

Troubleshooting (continued)

	Symptoms	Points to be checked
Others	Power failure/Breaker off. 	Operation will resume from where it stopped when the power is recovered. 
	StainMaster has no effect. 	☐ Check ● Max. capacity (P. 11)  ☐ Try ● Pretreatment (P. 7)  ● Select according to the stain type. (P. 11) 

Specifications

Model No.	NA-FD145X3	NA-FD135X3		NA-FD125X3	NA-FD115X3	
Rated voltage	230 V	220 - 240 V	230 V	230 V	220 - 240 V	230 V
Rated frequency	60 Hz	50 Hz	60 Hz	60 Hz	50 Hz	60 Hz
Rated power consumption	480 W					
Standard water amount	79 L			77 L	75 L	
Maximum mass of dry cloth	14.5 kg	13.5 kg		12.5 kg	11.5 kg	
Product dimensions	639 mm (W) x 725 mm (D) x 1085 mm (H)				639 mm (W) x 725 mm (D) x 1065 mm (H)	
Product weight	39 kg					
Pressure of tap water	0.01 - 1 MPa					

Panasonic Corporation

<https://www.panasonic.com>

© Panasonic Appliances (Vietnam) Co., Ltd. 2023