 


# Panasonic®

Operating Instructions  
使用说明书

(Household Use only) Electric Dry Iron  
(仅供家庭使用) 电熨斗

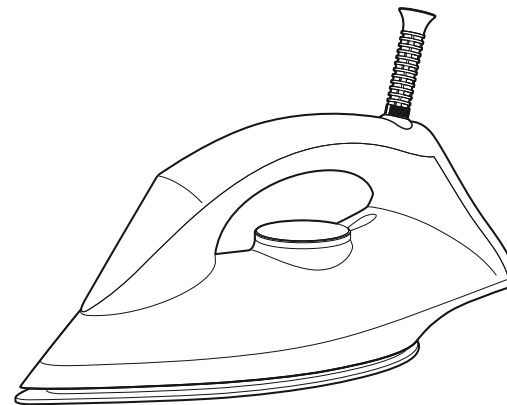

\* Illustration may vary from actual product.

Model No. **NI-327T**

#### Warranty registration

The warranty can be registered online.  
Please visit the website by scanning  
the QR code.



Panasonic Manufacturing Malaysia Berhad (196501000304)  
Website: <http://www.panasonic.com>

G0626Y0

© Panasonic Corporation 2026

i8200E-OT20A

© Panasonic Corporation 2026

Printed in China



English

Operating Instructions  
(Household Use only) Electric Dry Iron

Model No. **NI-327T**

## Contents

|                                          |           |
|------------------------------------------|-----------|
| Safety precautions .....                 | EN4 - EN7 |
| Parts identification .....               | EN8       |
| Fabric and ironing recommendations ..... | EN8       |
| How to use .....                         | EN9       |
| After use .....                          | EN9       |
| Cleaning .....                           | EN9       |
| Specifications .....                     | EN9       |

|                   |           |
|-------------------|-----------|
| <b>EN</b> English | EN4 - EN9 |
| <b>CS</b> 简体中文    | CS4 - CS9 |

Thank you for purchasing this Panasonic product.  
**Before operating this unit, please read these instructions completely and save them for future use.**

## Safety precautions

To reduce the risk of electric shock, injury, fire, loss of life, and damage to equipment or property, always observe the following safety precautions.

### Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

|                                                                                                  |                                                                               |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
|  <b>WARNING</b> | Denotes a potential hazard that could result in serious injury or death.      |
|  <b>CAUTION</b> | Denotes a hazard that could result in minor injury or damage your belongings. |

The following symbols are used to classify and describe the type of instructions to be observed.

|                                                                                   |                                                                                                                                 |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
|  | This symbol is used to alert users to a specific operating procedure that must not be performed.                                |
|  | This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely. |

### WARNING

 **Do not use when the Power Plug or Power Cord is damaged or hot.**  
**Never use the product if the Power Plug fits loosely in a household outlet.**

- Doing so may cause electric shock, or fire due to a short circuit.

 **The iron must not be left unattended while it is connected to the supply mains.**  
- Doing so may cause fire.

 **Do not connect or disconnect the Power Plug to a household outlet or the power base with wet hands.**  
- Doing so may cause electric shock or injury.

 **Do not damage, modify, forcibly bend, pull, or twist the Power Cord.**  
**Do not place anything heavy on or pinch the Power Cord.**  
- Doing so may cause electric shock or fire due to a short circuit.

 **Do not allow the Power Cord to touch hot surfaces of the iron.**  
- Doing so may cause electric shock or injury.

 **Do not use the iron while the Power Cord is bundled.**  
- Doing so may cause electric shock or fire due to a short circuit.

### WARNING

 **Do not use the product with wet hands.**  
- Doing so may cause electric shock or fire due to a short circuit.

 **Never modify, disassemble, or repair the product by yourself.**  
- Doing so may cause ignition or injury due to abnormal operation. Contact an authorized service agent for repair.

 **Do not use in proximity of flammable materials (such as benzine or the like).**  
- Doing so may cause an explosion or fire.

 **Do not wrap the Power Cord around the product for storage.**  
- Doing so may cause breakage to the wire of the Power Cord, and may cause electric shock or fire due to a short circuit.

 **Do not immerse the product in water or other liquids.**  
- Doing so may cause burns, electric shock or fire due to a short circuit.

 **The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.**  
- Refer servicing to authorized service personnel.

 **Do not use in a way exceeding the rating of the household outlet or the wiring.**  
- Exceeding the rating by connecting too many Plugs to one household outlet may cause fire due to overheating.

 **Always ensure the product is operated on an electric power source matched to the rated voltage indicated on the product.**  
**Fully insert the Power Plug.**  
- Failure to do so may cause injury, electric shock or fire.

 **Regularly clean the Power Plug to prevent dust from accumulating.**  
- Disconnect the Power Plug and wipe with a dry cloth.

 **Independently use a household outlet, and do not use extension cord.**  
- Failure to do so may cause electric shock or fire.

 **This product must use the electrical outlet with earth connection.**  
- Failure to do so may cause fire or electric shock.

## ⚠ WARNING

- ! This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
  - Failure to do so may cause an accident or injury.
- ! Immediately stop using and remove the Power Plug if there is an abnormality or malfunction.
  - Using it in such conditions may cause fire, electric shock, or injury.

<Abnormality or malfunction cases>

  - The Power Cord is damaged (like it cracks, or the core wire is exposed).
  - The main body, Power Cord or Power Plug is abnormally hot, deformed or discolored.
  - The product cannot power on occasionally after the Power Cord is moved.
  - The Power Plug or Power Cord smells of burning.
  - Immediately request inspection or repair at an authorized service center.
- ! When leaving the room even for a short time, disconnect the Plug and place the iron in an upright position. Keep the iron away from small children.
  - Failure to do so may cause an accident or injury.

- ! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - Failure to do so may cause an accident or injury.
- ! The iron must be used and rested on a flat, stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
  - The iron may be scratched, or even injuries or scald may be caused if the iron falls over.

## ⚠ CAUTION

 
- ⊘ Do not insert pins or needles into the iron or use the product on clothes with sewing needles or the like inserted.
  - Doing so may cause electric shock or injury.
- ⊘ Use the product only for ironing fabric.
  - Failure to do so may cause damage it.
- ⊘ The iron must not be stored until it has cooled.
  - Doing so may cause scalds.
- ⊘ Do not store the product while the Power Cord is twisted.
  - Doing so may cause breakage to the wire of the Power Cord, and may result in scalds, electric shock or fire due to a short circuit.

## ⚠ CAUTION

- ⊘ Do not use the product near walls or furniture that cannot withstand high temperature or humidity.
  - Doing so may damage the wall or furniture.
- ⊘ Do not use the product with Power Cord entangled.
  - Doing so may damage the Power Cord, thus resulting in electric shock or a fire.
- ⊘ Do not touch the hot surface (such as the surface of the Soleplate) during use.
  - Doing so may cause scalds.
  - Do not place your hands, feet, etc. under the ironing board.
  - Do not place the iron on your hand, knee or any other part of the body.
- ⊘ Avoid ironing over hard objects such as zipper, metallic button and similar items.
  - Doing so may damage surface of Soleplate.
- ⊘ Do not use any abrasive materials.
  - Doing so may damage surface of Soleplate.
- ⊘ Do not put the iron on a carpet or the floor.
  - Doing so may damage the product, carpet or floor.
- ! Disconnect the Power Plug by holding the Power Plug instead of pulling the Power Cord.
  - Failure to do so may break the Power Cord, and may cause burns, electric shock, or fire due to a short circuit.

- ! Use the product only for its intended purpose, for ironing fabrics.
  - Failure to do so may cause injury.
- ! When using with following fabric, test on an inconspicuous area, or place a cloth over the fabric to prevent the fabric from marking.
  - Expensive or specially processed fabrics (velvet, acrylic, nylon, cashmere, etc.).
  - Fabrics that are labeled as “low heat” or “medium heat”, or dark colored fabrics.
  - Failure to do so may cause damage to fabric.
- ! The iron should always be turned to MIN before plugging in or unplugging from outlet.
  - Failure to do so may cause an accident or injury.
- ! Always unplug the Power Plug during not in use.
  - Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.
- ! Place the iron correctly as instructed after use.
  - Failure to do so may cause the product to fall over, thus resulting in injury or scalds.


### Parts identification

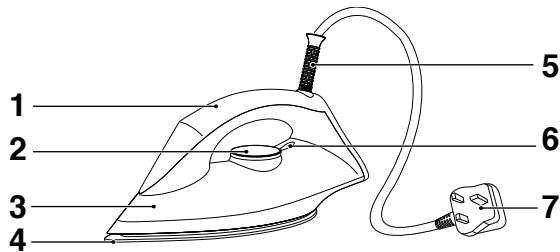

|   |              |   |              |
|---|--------------|---|--------------|
| 1 | Handle Cover | 5 | Cord Bushing |
| 2 | Dial Knob    | 6 | Pilot Lamp   |
| 3 | Handle       | 7 | Power Cord ※ |
| 4 | Soleplate    |   |              |

※ Plug type may vary comply with respective country or region requirement.

### Dial Knob

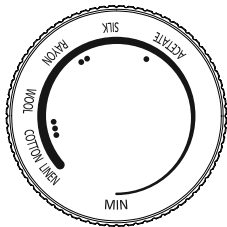 

### Fabric and ironing recommendation

- Sort the clothes according to the group of fabrics indicated on the Fabric Guide.
- Check the label attached to the clothes and follow the manufacturer's instructions.
- First, iron the clothes that require the lowest temperature. After that, iron those that require higher temperatures. This is because it takes more time for the iron to cool down than to heat up.
- To avoid scorching or damaging the fabric, pay attention to the fabric composition of the clothes.
- For blended fabrics, select the temperature suitable for the fabric that requires the lowest temperature.
- If the fabric composition of the clothes is unknown, perform a test ironing on a less visible area before ironing the entire garment.
- Start with a lower temperature, then gradually increase the temperature to find the ideal temperature for the material.

| Selector Level Setting | Selector Temperature °C (Approximately) |
|------------------------|-----------------------------------------|
| Acetate                | 85                                      |
| Silk                   | 112                                     |
| Rayon                  | 140                                     |
| Wool                   | 165                                     |
| Cotton                 | 185                                     |
| Linen                  | 200                                     |

### How to use

1. Place the iron in an upright position.
2. Set the Dial Knob to the **MIN** position.
3. Connect the Plug into the socket outlet.
4. Set the Dial Knob to the desired fabric setting.
5. Wait approximately 2 minutes until the iron gets hot.
6. Start ironing.

### After use

1. Let the iron cool completely, before storing it.
2. Loop cord loosely next to the iron and store it in an upright position.

### Cleaning

1. After ironing, allow the iron to cool and then wipe it with a piece of soft cloth.
2. For any stubborn dirt, use a piece of soft cloth soaked with water, soap or neutral detergent.

### Specifications

|                              |                    |
|------------------------------|--------------------|
| <b>Model</b>                 | NI-327T            |
| <b>Rated Voltage</b>         | 230 V ~ 50 - 60 Hz |
| <b>Rated Power</b>           | 1 000 W            |
| <b>Weight</b>                | Approx. 0.7 kg     |
| <b>Dimension (L X W X H)</b> | 245 x 106 x 115 mm |

This product is intended for household use only.

目录

|           |           |
|-----------|-----------|
| 重要安全注意事项  | CS4 - CS7 |
| 各部位的名称    | CS8       |
| 衣物纤维及熨烫方式 | CS8       |
| 使用方法      | CS9       |
| 使用后       | CS9       |
| 清洁        | CS9       |
| 规格        | CS9       |

 
感谢您购买 Panasonic 的产品。  
在使用本产品前，请仔细阅读本说明书并妥善保管，以备将来参考。

重要安全注意事项

为减少受伤、死亡、触电、火灾以及财产损坏的危险，请务必遵守以下安全注意事项。

标志说明

以下标志用于对因无视标志说明和使用不当而导致的危险、伤害和财产损失的程度进行分类和描述。

|                                                                                   |           |                                  |
|-----------------------------------------------------------------------------------|-----------|----------------------------------|
|  | <b>警告</b> | 如果您没有遵照此指示操作，您可能会受到严重的伤害甚至死亡。    |
|  | <b>注意</b> | 您必须注意，否则潜在的危险可能使您受到轻度的伤害或损坏您的物品。 |

以下标志用于对需要遵循的说明的种类进行分类和描述。

|                                                                                   |                                 |
|-----------------------------------------------------------------------------------|---------------------------------|
|  | 此标志用于提醒用户禁止采取的操作步骤。             |
|  | 此标志用于提醒用户注意为了安全操作本产品而必须遵循的操作步骤。 |

 警告

-  电源线插头或电源线在损坏或发烫的情况下请勿使用。如果插入家用电源插座的电源插头松动时，请勿使用。
  - 否则可能会导致触电或因短路而引起火灾。
-  电熨斗连接电源时，切勿让其无人看管。
  - 否则可能会引起火灾。
-  切勿在手湿的情况下将电源插头连接到家用电源插座或从家用电源插座中拔出。
  - 否则可能会导致触电或受伤。
-  请勿损坏或改造，或用力弯曲，拉扯，扭曲电源线，也不要放置任何重物在电源线上或挤压到电源线。
  - 否则可能会导致触电或短路引起火灾。
-  请勿让电源线接触熨斗的高温表面。
  - 否则可能会导致触电或受伤。
-  请勿在捆绑着电源线的状态下使用。
  - 否则可能会导致触电或短路引起火灾。

 警告

-  不要在手湿的时候使用本产品。
  - 否则可能会导致触电或短路引起火灾。
-  请勿改装，拆卸或修理本产品。
  - 否则可能会因为异常操作而导致火灾或伤害，请务必委托本公司指定的维修店修理。
-  不要让本产品靠近易燃物品（如汽油或类似物品）。
  - 否则可能会引起爆炸或火灾。
-  请勿在存放时将电源线缠绕在熨斗上。
  - 否则可能导致电源线断线，发生触电，或由于短路而导致火灾。
-  请不要把产品浸入水中或其他液体中。
  - 否则可能会导致烫伤，触电或短路引起火灾。
-  如果产品跌落、有可见的损坏迹象或有渗漏现象，则不能使用。
  - 请送指定的维修店修理。

-  请不要超载使用家用电源插座或线路。
  - 在同一家用电源插座插入过多插头而超载使用时，可能会因过热而导致火灾。
-  输入电压必须符合产品底座上标明的额定电压。请将电源插头完全插入插座中。
  - 否则可能会导致受伤、触电或火灾。
-  定期清洁插头，以防止灰尘堆积。
  - 请拔下插头，并用干布擦拭。
-  请单独使用插座，不要使用电源接线板。
  - 否则会造成触电或火灾。
-  本产品只能使用带接地线的插座。
  - 否则可能会引起火灾或触电。

警告

- 本产品不宜供肢体、感官或精神上有残疾者、或缺乏经验和知识者(包括儿童)使用，必须有监护者从旁监督并对本产品的使用加以指导，且对使用者的安全能承担责任。应照看好儿童，确保他们不玩耍本器具。
  - 否则可能导致意外的发生或受伤。
- 发生异常和故障时，请立即停止使用并拔下电源插头。
  - 否则可能会造成火灾、触电或受伤。

<异常或故障的例子>

  - 电源线损坏，如出现裂纹或露出芯线。
  - 本体、电源插头或电源线异常发热、变形或变色。
  - 移动电源线后，设备有时无法通电。
  - 电源插头或电源产品线有烧焦的气味。
  - 请咨询本公司授权的服务人员。
- 即使需短暂时间离开房间，请拔掉插头并将熨斗直立放置。请将熨斗放在小孩触碰不到的地方。
  - 否则可能导致意外的发生或受伤。

- 如果电源线损坏，必须由制造商、其服务代理商或具有类似资质的人员更换，以避免发生危险。
  - 否则可能导致意外的发生或受伤。

- 熨斗必须在平坦、稳定的表面上使用和放置。将熨斗放在支架上时，请确保支架所在的表面稳固。
  - 否则会造成熨斗刮伤，熨斗掉落会造成身体受伤或烫伤。

注意

- 请勿将针或其他类似物品插入底板，或将其用于插着缝纫针或其他类似物品的衣物上。
  - 否则可能会导致触电或受伤。
- 切勿将本产品用于织物以外的物品。
  - 否则可能会导致其损坏。
- 熨斗必须冷却后才能存放。
  - 否则会造成烫伤。
- 电源线在扭曲的状态下请勿收纳。
  - 否则可能导致电源线断线，发生烫伤，触电，或由于短路而导致火灾。

注意

- 请勿在不耐高温或者不防潮的墙壁或者家具附近使用本产品。
  - 否则可能会损坏墙壁或者家具。
- 请勿在电源线缠结的状态下使用本产品。
  - 否则可能会造成电源线损坏，触电或火灾。
- 使用期间，不要用手接触高温部位(底板表面、附近的高温部)。
  - 否则会造成烫伤。
  - 不要将手，脚等部位置于熨烫板下方。
  - 不要将熨斗放在手、膝盖或身体的其他部位。
- 避免在拉链、金属扣等硬物上熨烫。
  - 否则可能会损坏底板表面。
- 请勿使用任何磨料。
  - 否则可能会损坏底板表面。
- 不要把熨斗放在地毯或地板上。
  - 否则会造成产品、地板和地毯损坏。
- 将电源插头拔出时必须抓住电源插头，不能拉电源线或用湿手触及电源线。
  - 否则会损坏电源线，继而导致烫伤、触电或由于短路而引起火灾。

- 只能使用本产品应有的功能熨烫衣物。
  - 否则可能会导致受伤。

 
- 烫如下衣物时，在不显眼部位先试熨，或在衣物上放一块布，以防衣物熨烫后留下烫痕。
  - 昂贵或经过特殊处理的布料(天鹅绒、丙烯酸纤维、尼龙、羊绒等)。
  - 标签上注有“ 低温熨烫 ”的衣物，或暗色衣物。
  - 否则可能会损坏衣物。

- 在插入或拔出插头之前，熨斗应始终调到 **MIN**。
  - 否则可能会导致事故或受伤。

- 不使用产品的时候必须将电源插头拔掉。
  - 否则会造成触电或因电源线绝缘层老化而起火。

- 使用完毕，请按指示正确放置熨斗。
  - 否则会造成产品掉落、受伤或烫伤。


各部位的名称

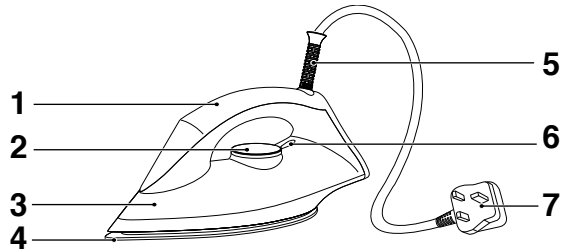

|   |     |   |      |
|---|-----|---|------|
| 1 | 手柄盖 | 5 | 电线套管 |
| 2 | 旋钮  | 6 | 指示灯  |
| 3 | 手柄  | 7 | 电源线※ |
| 4 | 底板  |   |      |

※ 插头形状根据不同国家或地区要求而异。

 旋钮

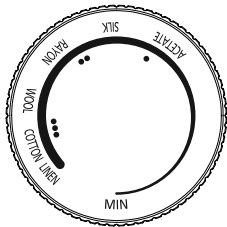

衣物纤维及熨烫方式

- 根据布料指南中指示的布料类别对衣物进行分类。
- 查看衣物上的标签，并遵循制造商的说明。
- 首先，熨烫需要最低温度的衣物。然后，再熨烫那些需要更高温度的衣物。  
这是因为熨斗冷却所需的时间比加热所需的时间长。
- 为了避免烧焦或损坏面料，请注意衣物的布料成分。
- 对于混纺布料，请选择适用于所需最低温度面料的温度。
- 如果衣物的面料成分未知，请先在不显眼的地方试烫，然后再熨整件衣服。
- 从较低的温度开始，然后逐渐升温，以找到布料的理想温度。

| 选择器等级设置 | 选择温度 °C<br>(大约) |
|---------|-----------------|
| 醋酸纤维    | 85              |
| 丝绸      | 112             |
| 人造丝     | 140             |
| 羊毛      | 165             |
| 棉布      | 185             |
| 亚麻      | 200             |

使用方法

1. 将熨斗直立放置。
2. 将旋钮调至 **MIN** 位置。
3. 将插头插入插座。
4. 将旋钮调到合适的布料设置。
5. 等待大约 2 分钟，直到熨斗变热。
6. 开始熨衣服。

使用后

1. 在存放熨斗之前，让它完全冷却。
2. 将电源线松松地盘好放在熨斗旁，并将熨斗直立存放。

清洁

1. 熨烫后，让熨斗冷却，然后用一块柔软的布擦拭。
2. 对于顽固污垢，可用浸有水、肥皂或中性洗涤剂的软布擦拭。

规格

|                |                    |
|----------------|--------------------|
| 型号             | NI-327T            |
| 额定电源           | 230 V ~ 50 - 60 Hz |
| 额定功率           | 1 000 W            |
| 重量             | 约 0.7 kg           |
| 尺寸 (长 X 宽 X 高) | 245 x 106 x 115 mm |

本产品仅适合家庭使用。