


FY-E15DZ1

UNIT: mm

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

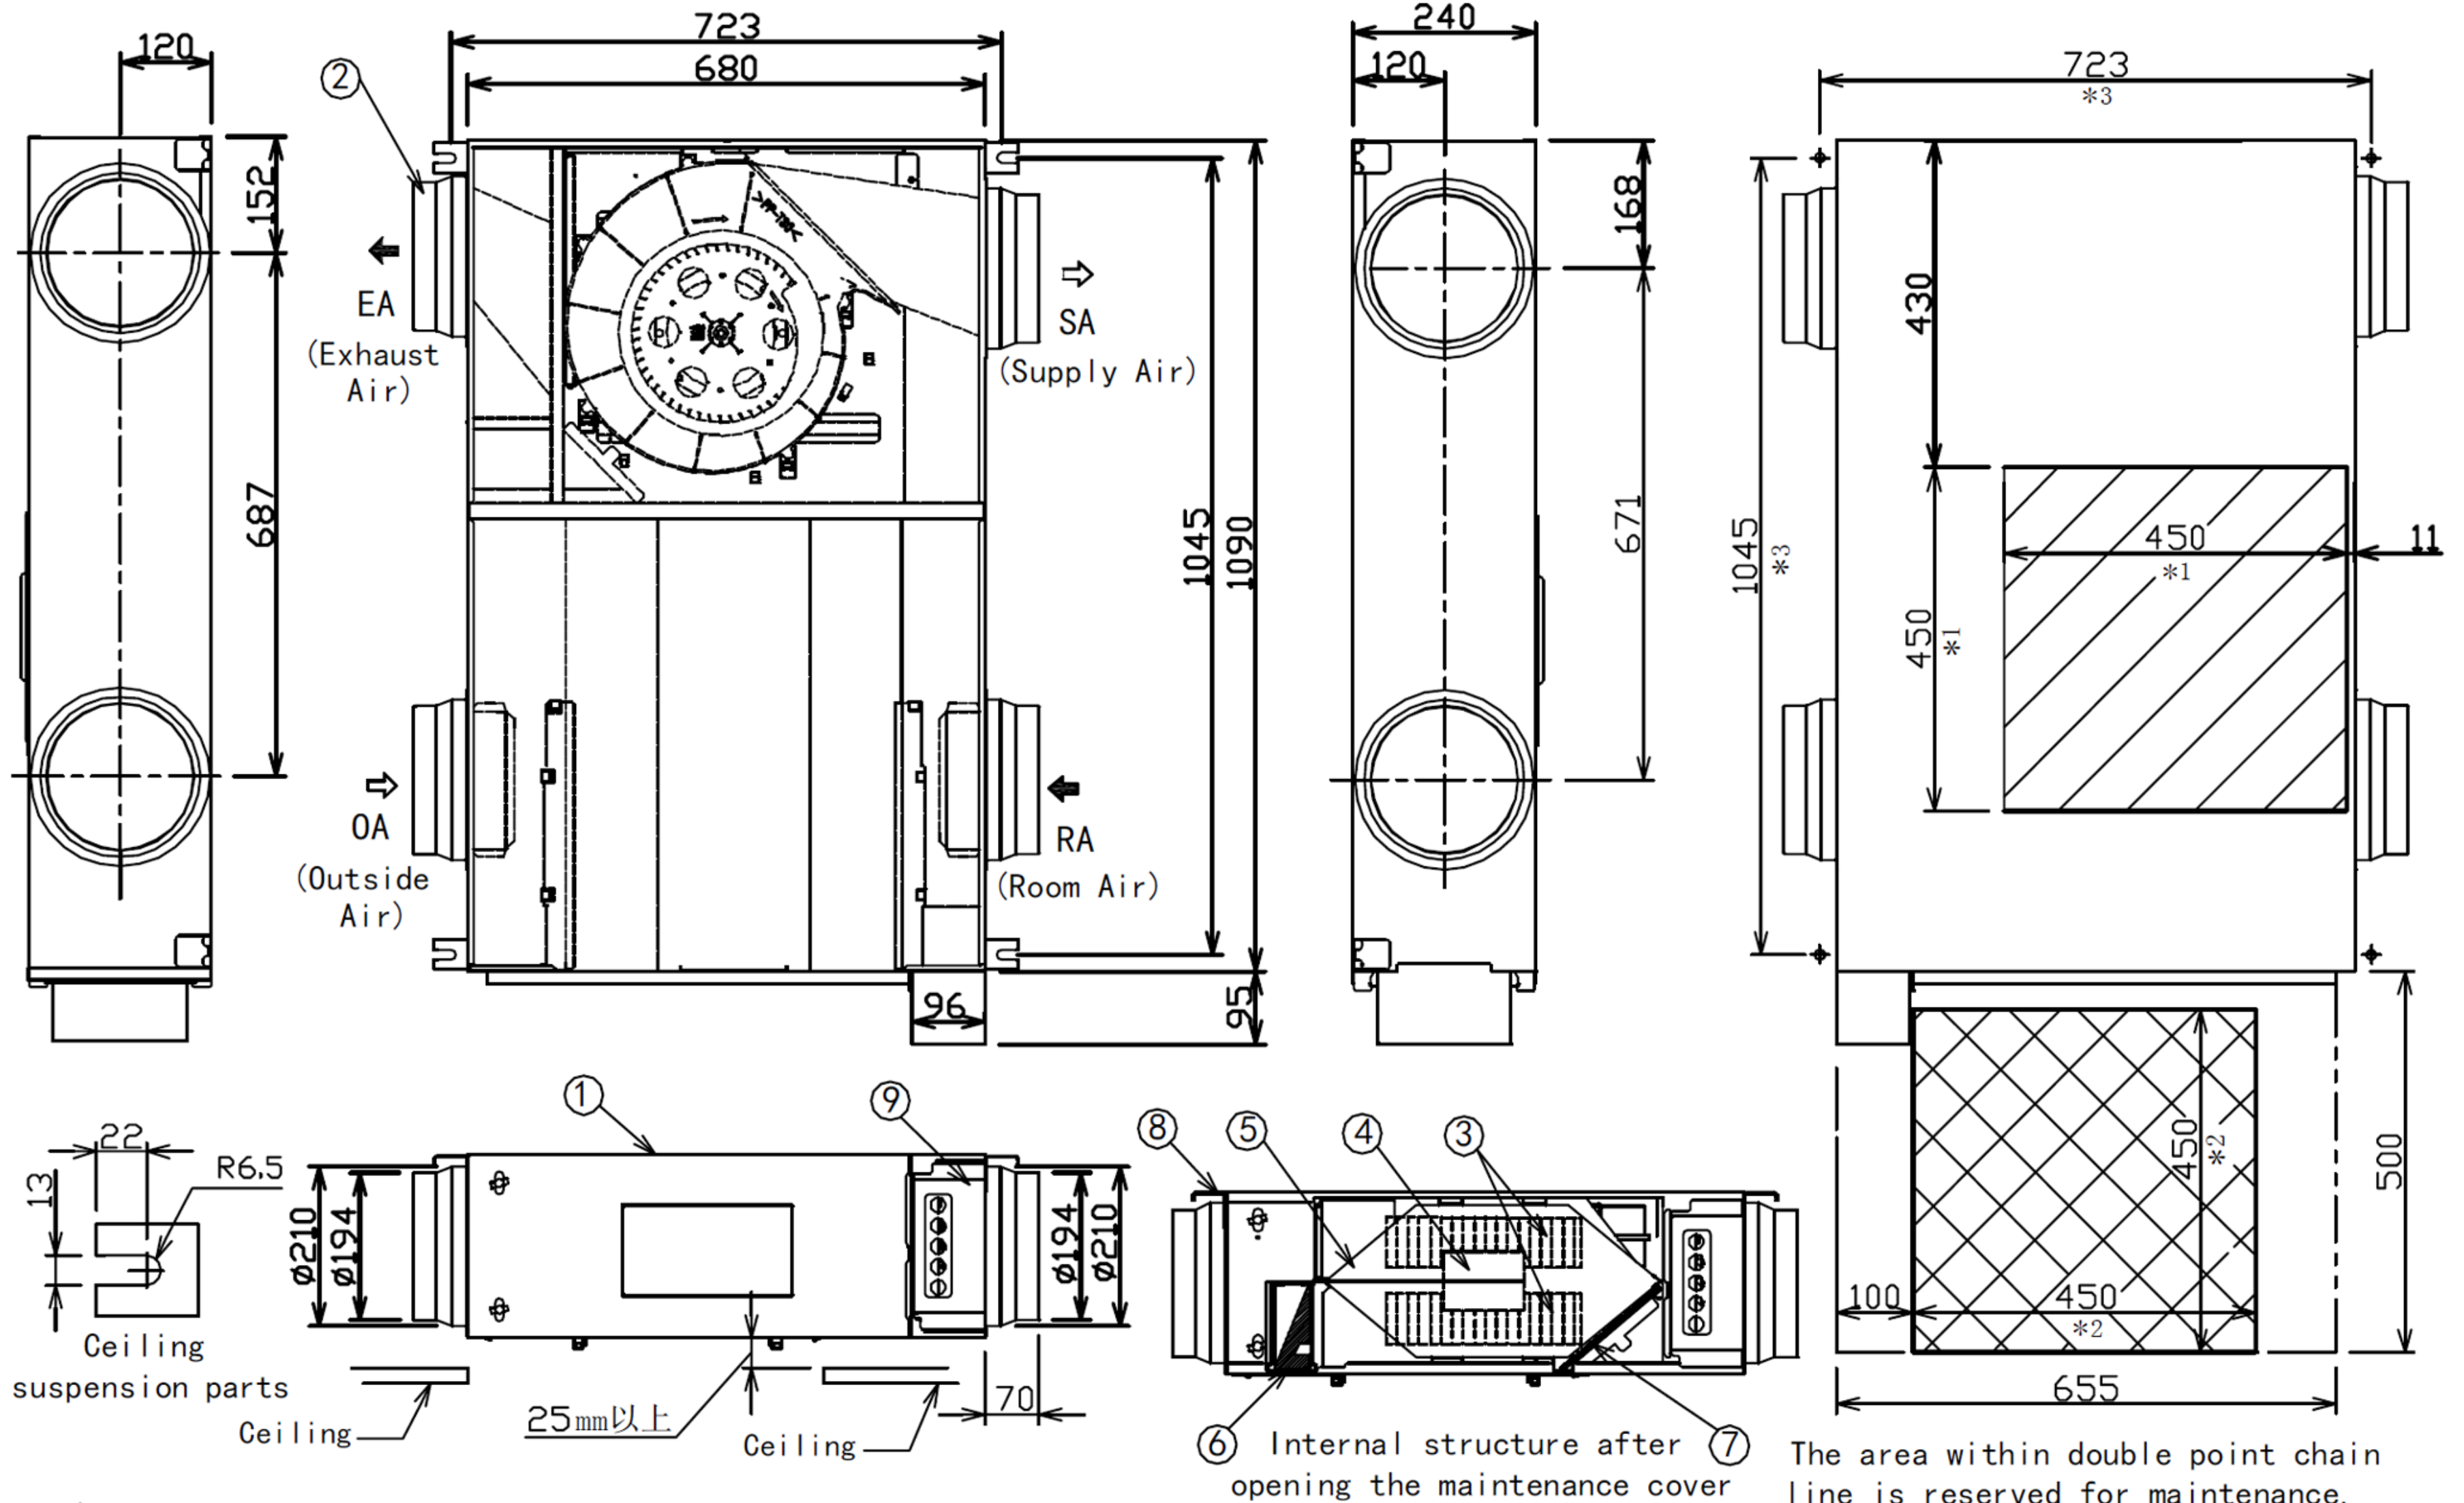

*1. Dimension of filter maintenance cover.

*2. Dimension of maintenance cover.

*3. Suspension point dimension


The area within double point chain line is reserved for maintenance, it's prohibited to place other devices.

FY-E15DZ1L

UNIT: mm

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

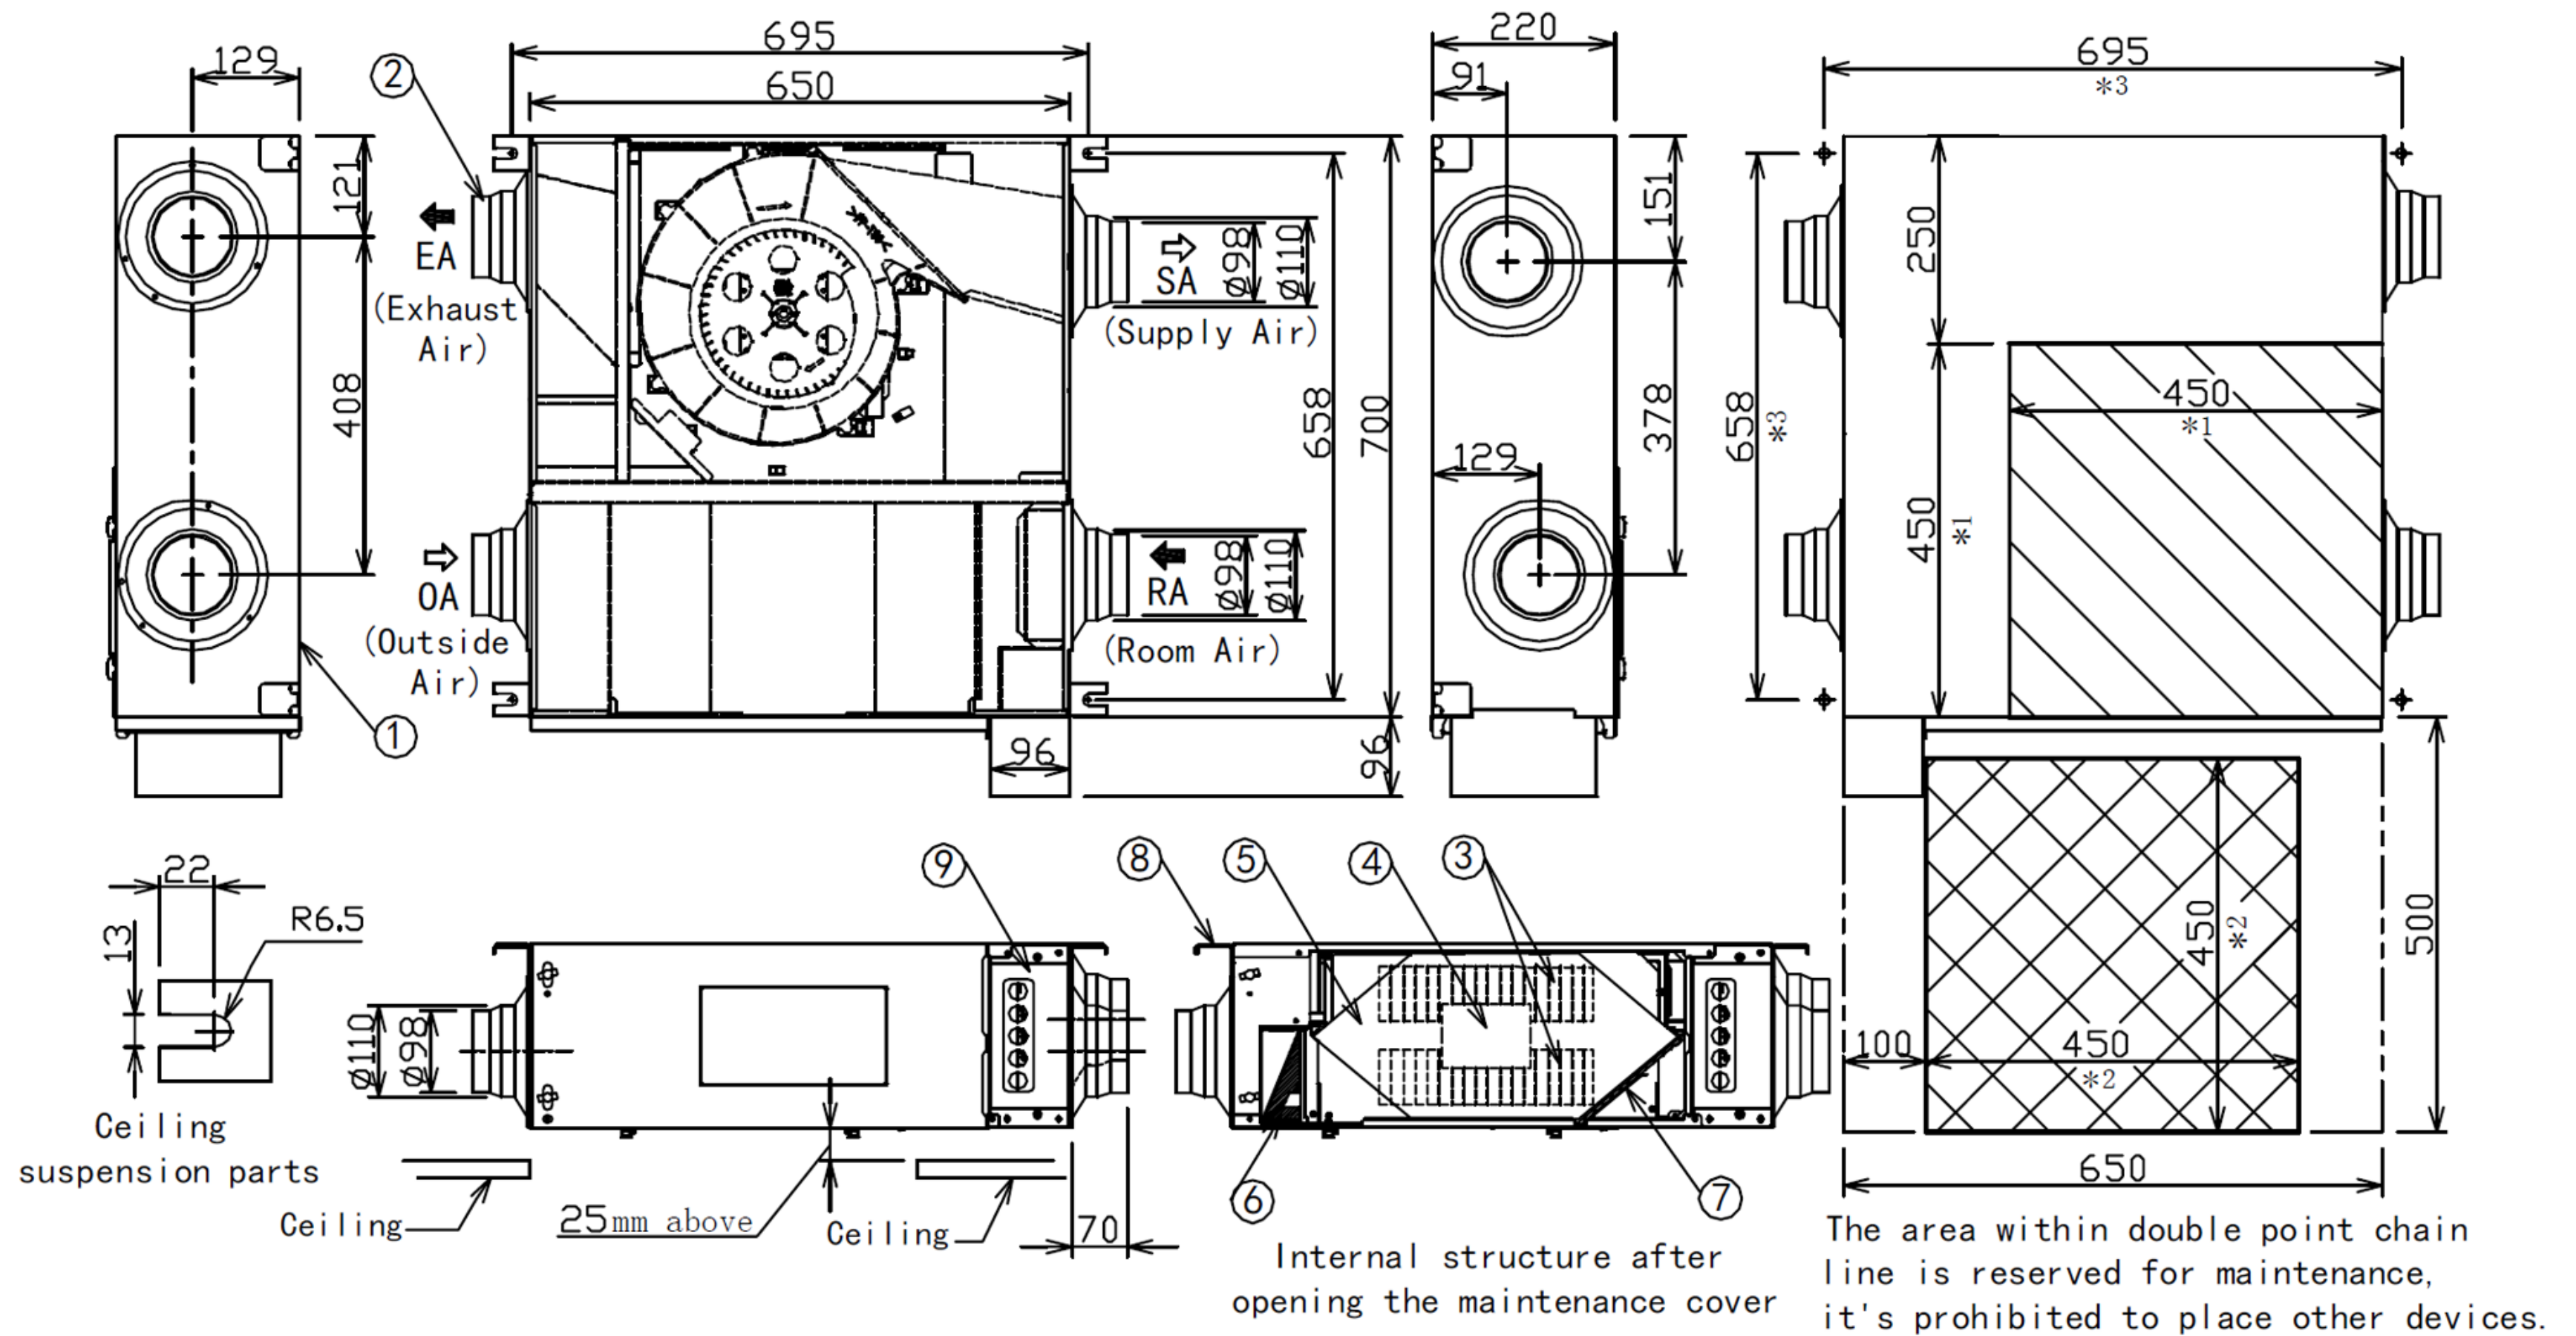

*1. Dimension of filter maintenance cover.

*2. Dimension of maintenance cover.


*3. Suspension point dimension

FY-E25DZ1

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

UNIT: mm

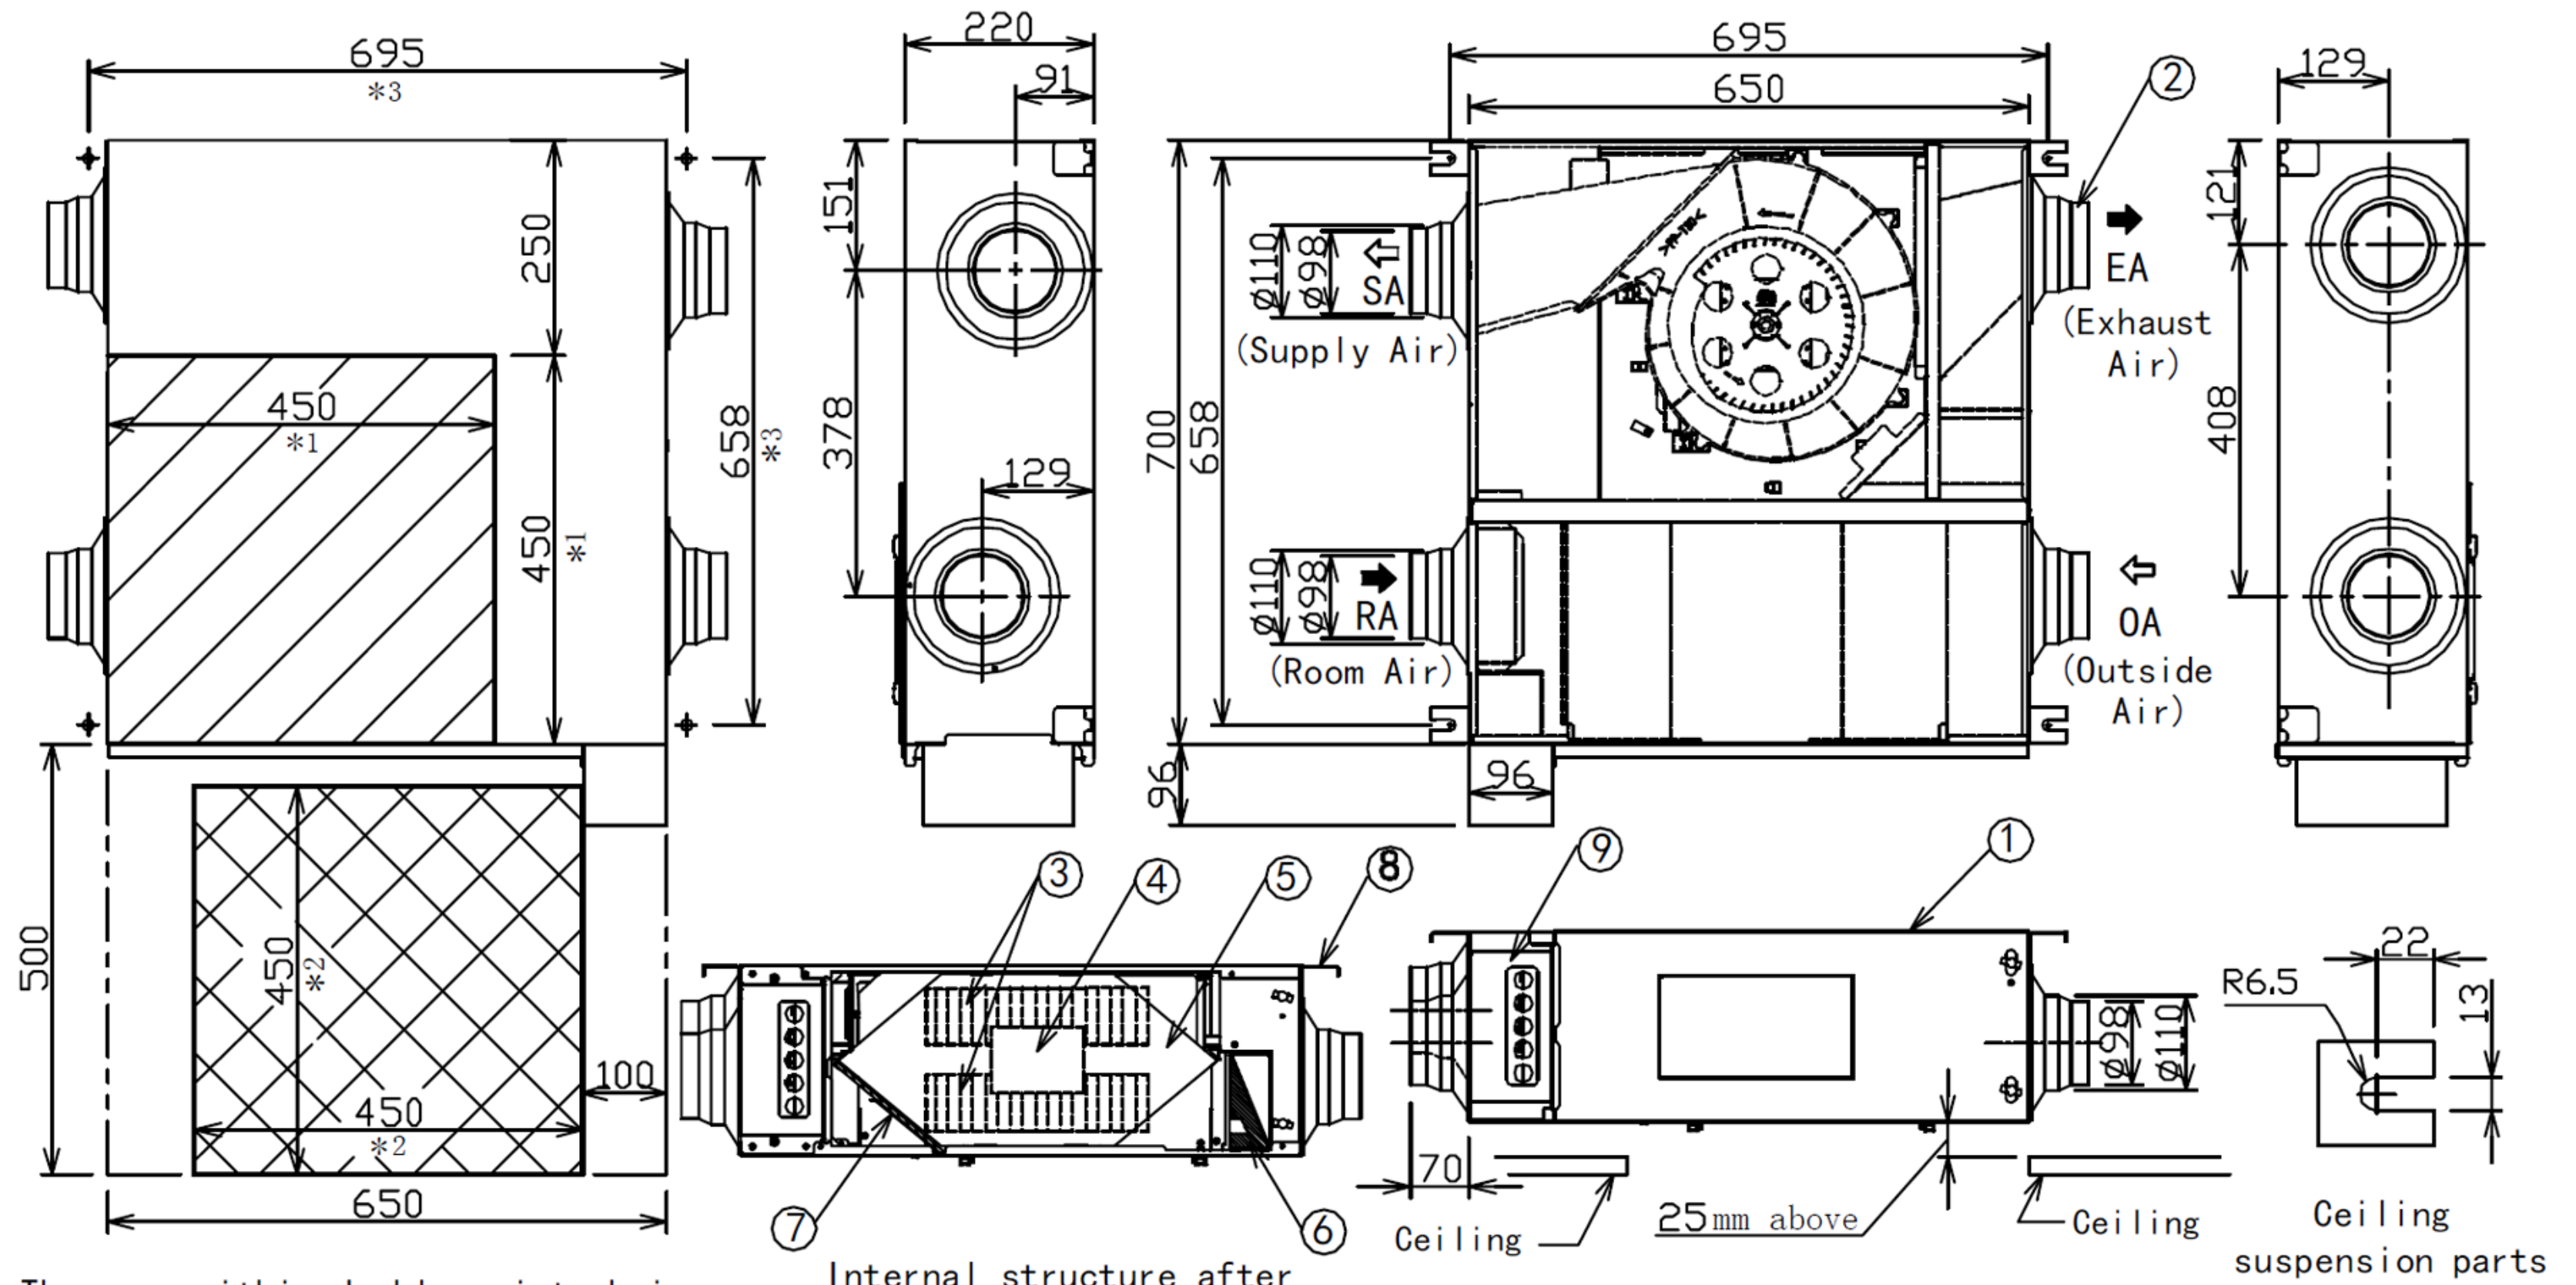

The area within double point chain line is reserved for maintenance, it's prohibited to place other devices.

Internal structure after opening the maintenance cover


- *1. Dimension of filter maintenance cover.
- *2. Dimension of maintenance cover.
- *3. Suspension point dimension

FY-E25DZ1L

UNIT: mm

■ Maintenance Dimension

It must be set the maintenance cover , and clean the filter and heat exchange core as specified in instruction.

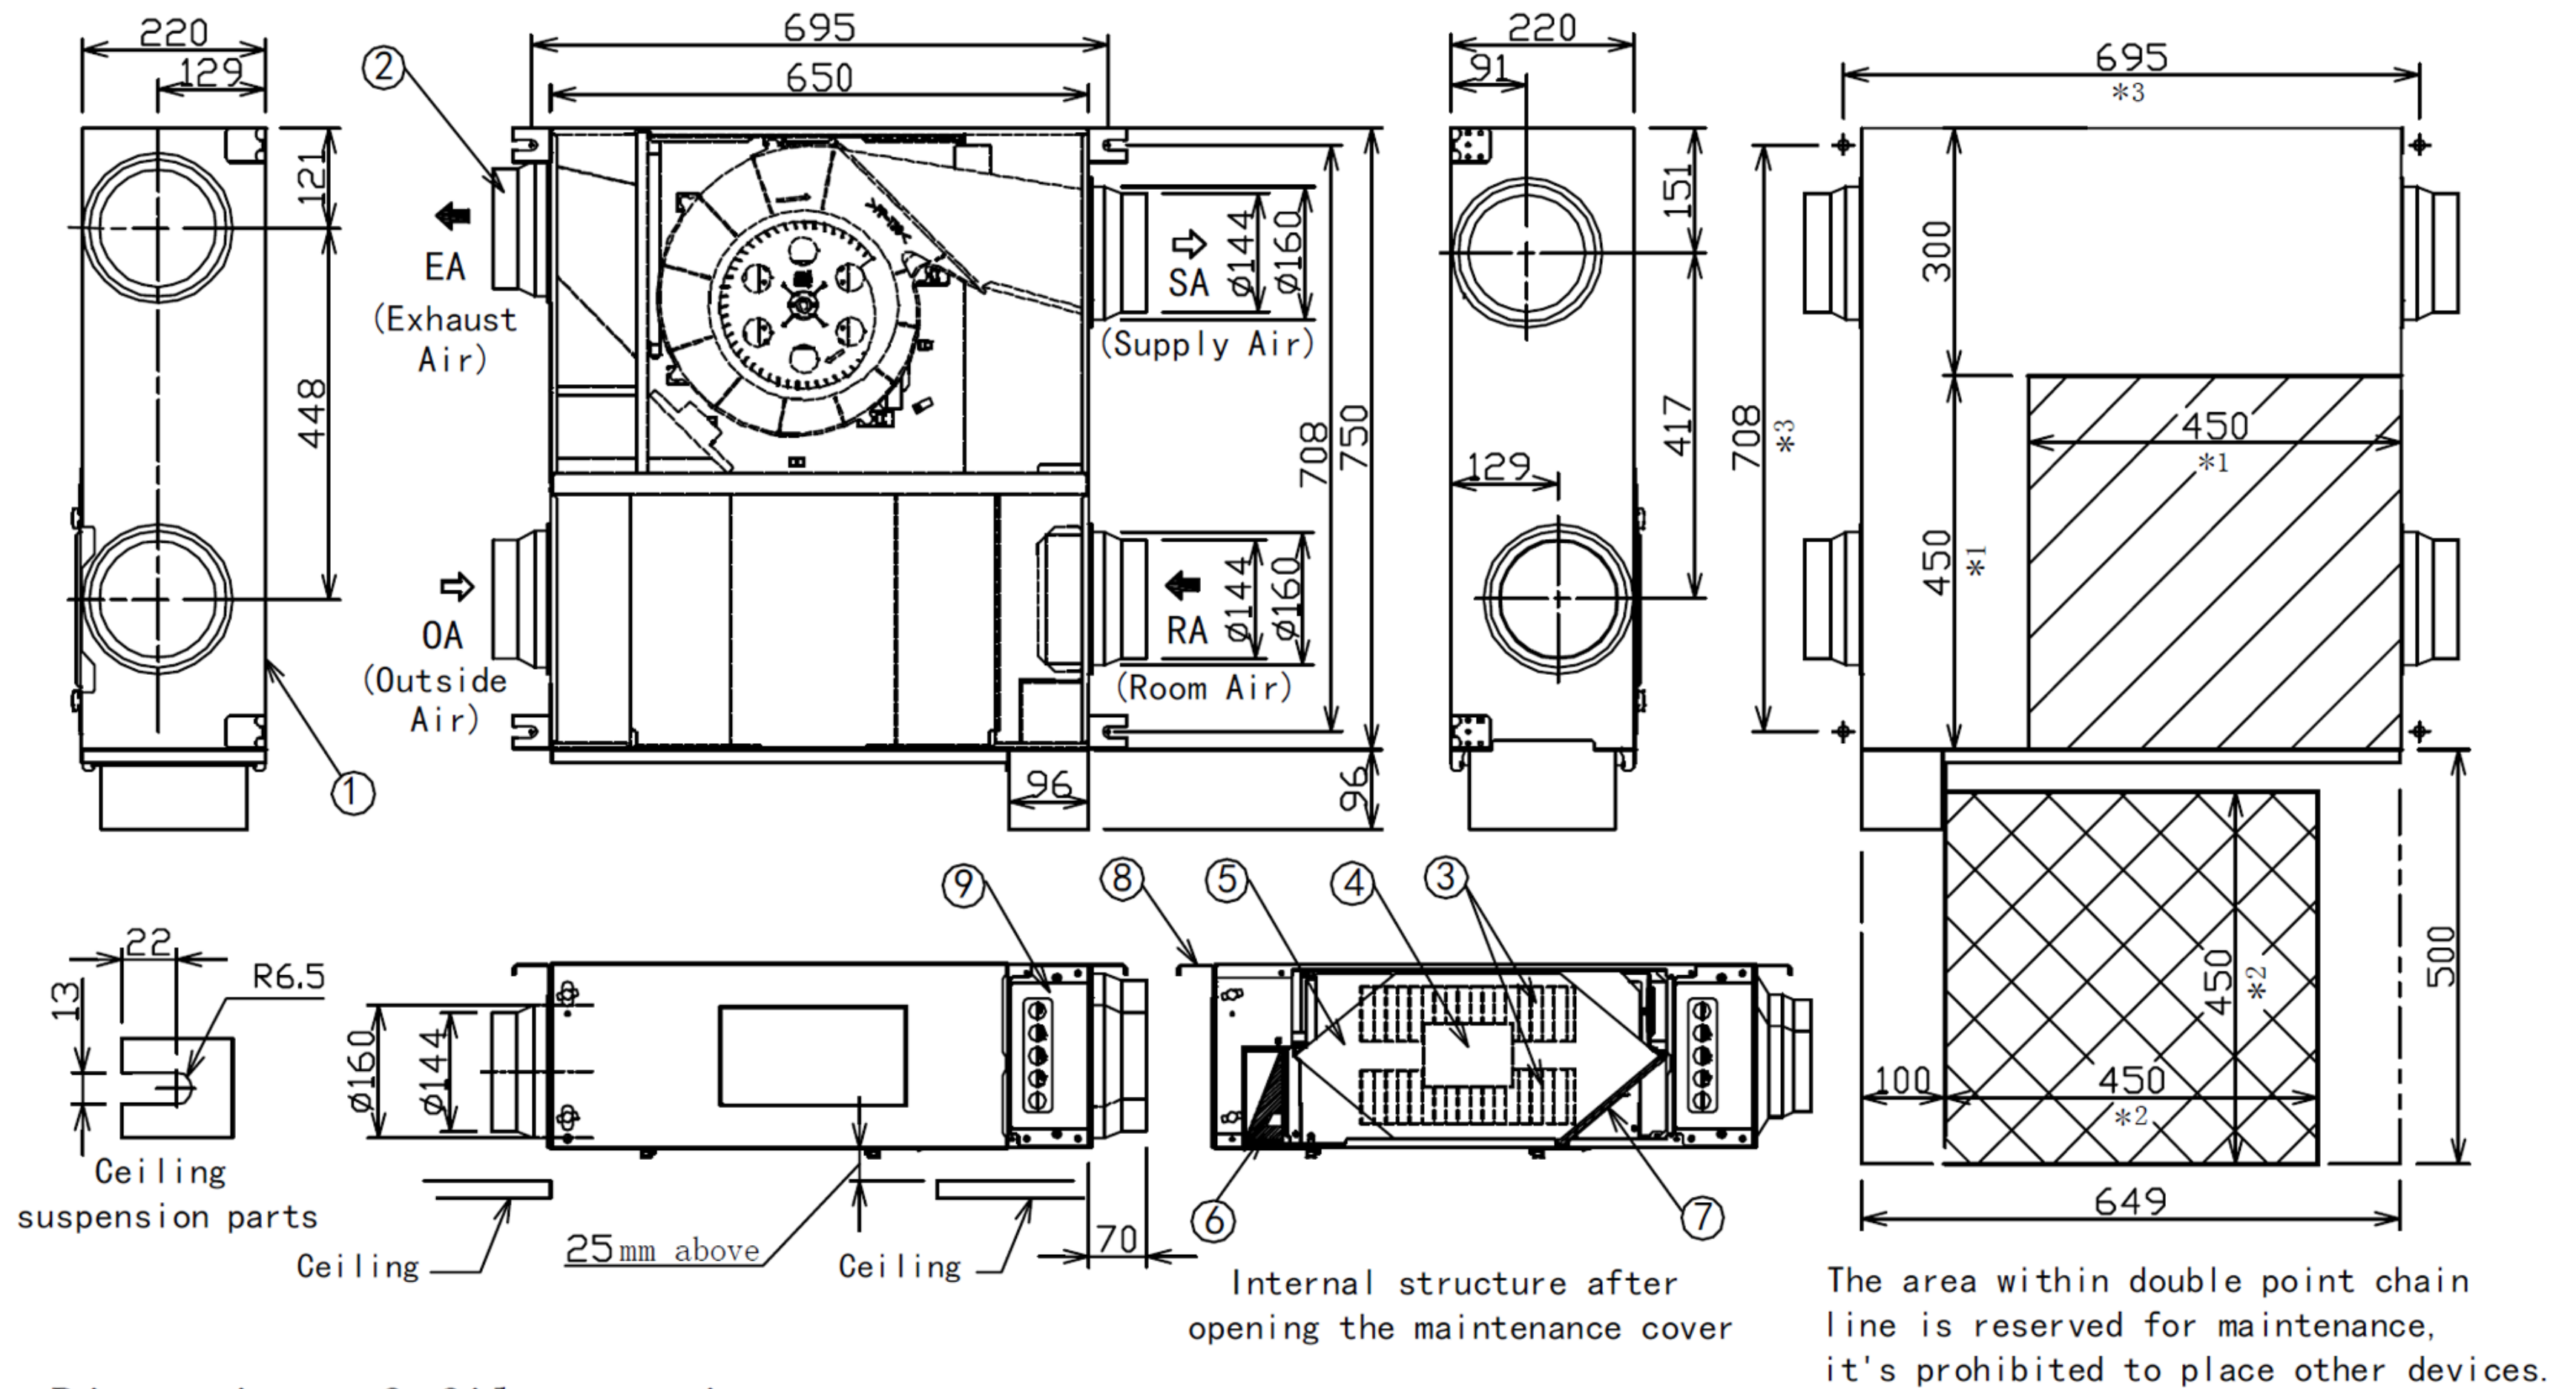

*1. Dimension of filter maintenance cover.

*2. Dimension of maintenance cover.

*3. Suspension point dimension


■ Installation diagram

FY-E35DZ1

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

UNIT: mm

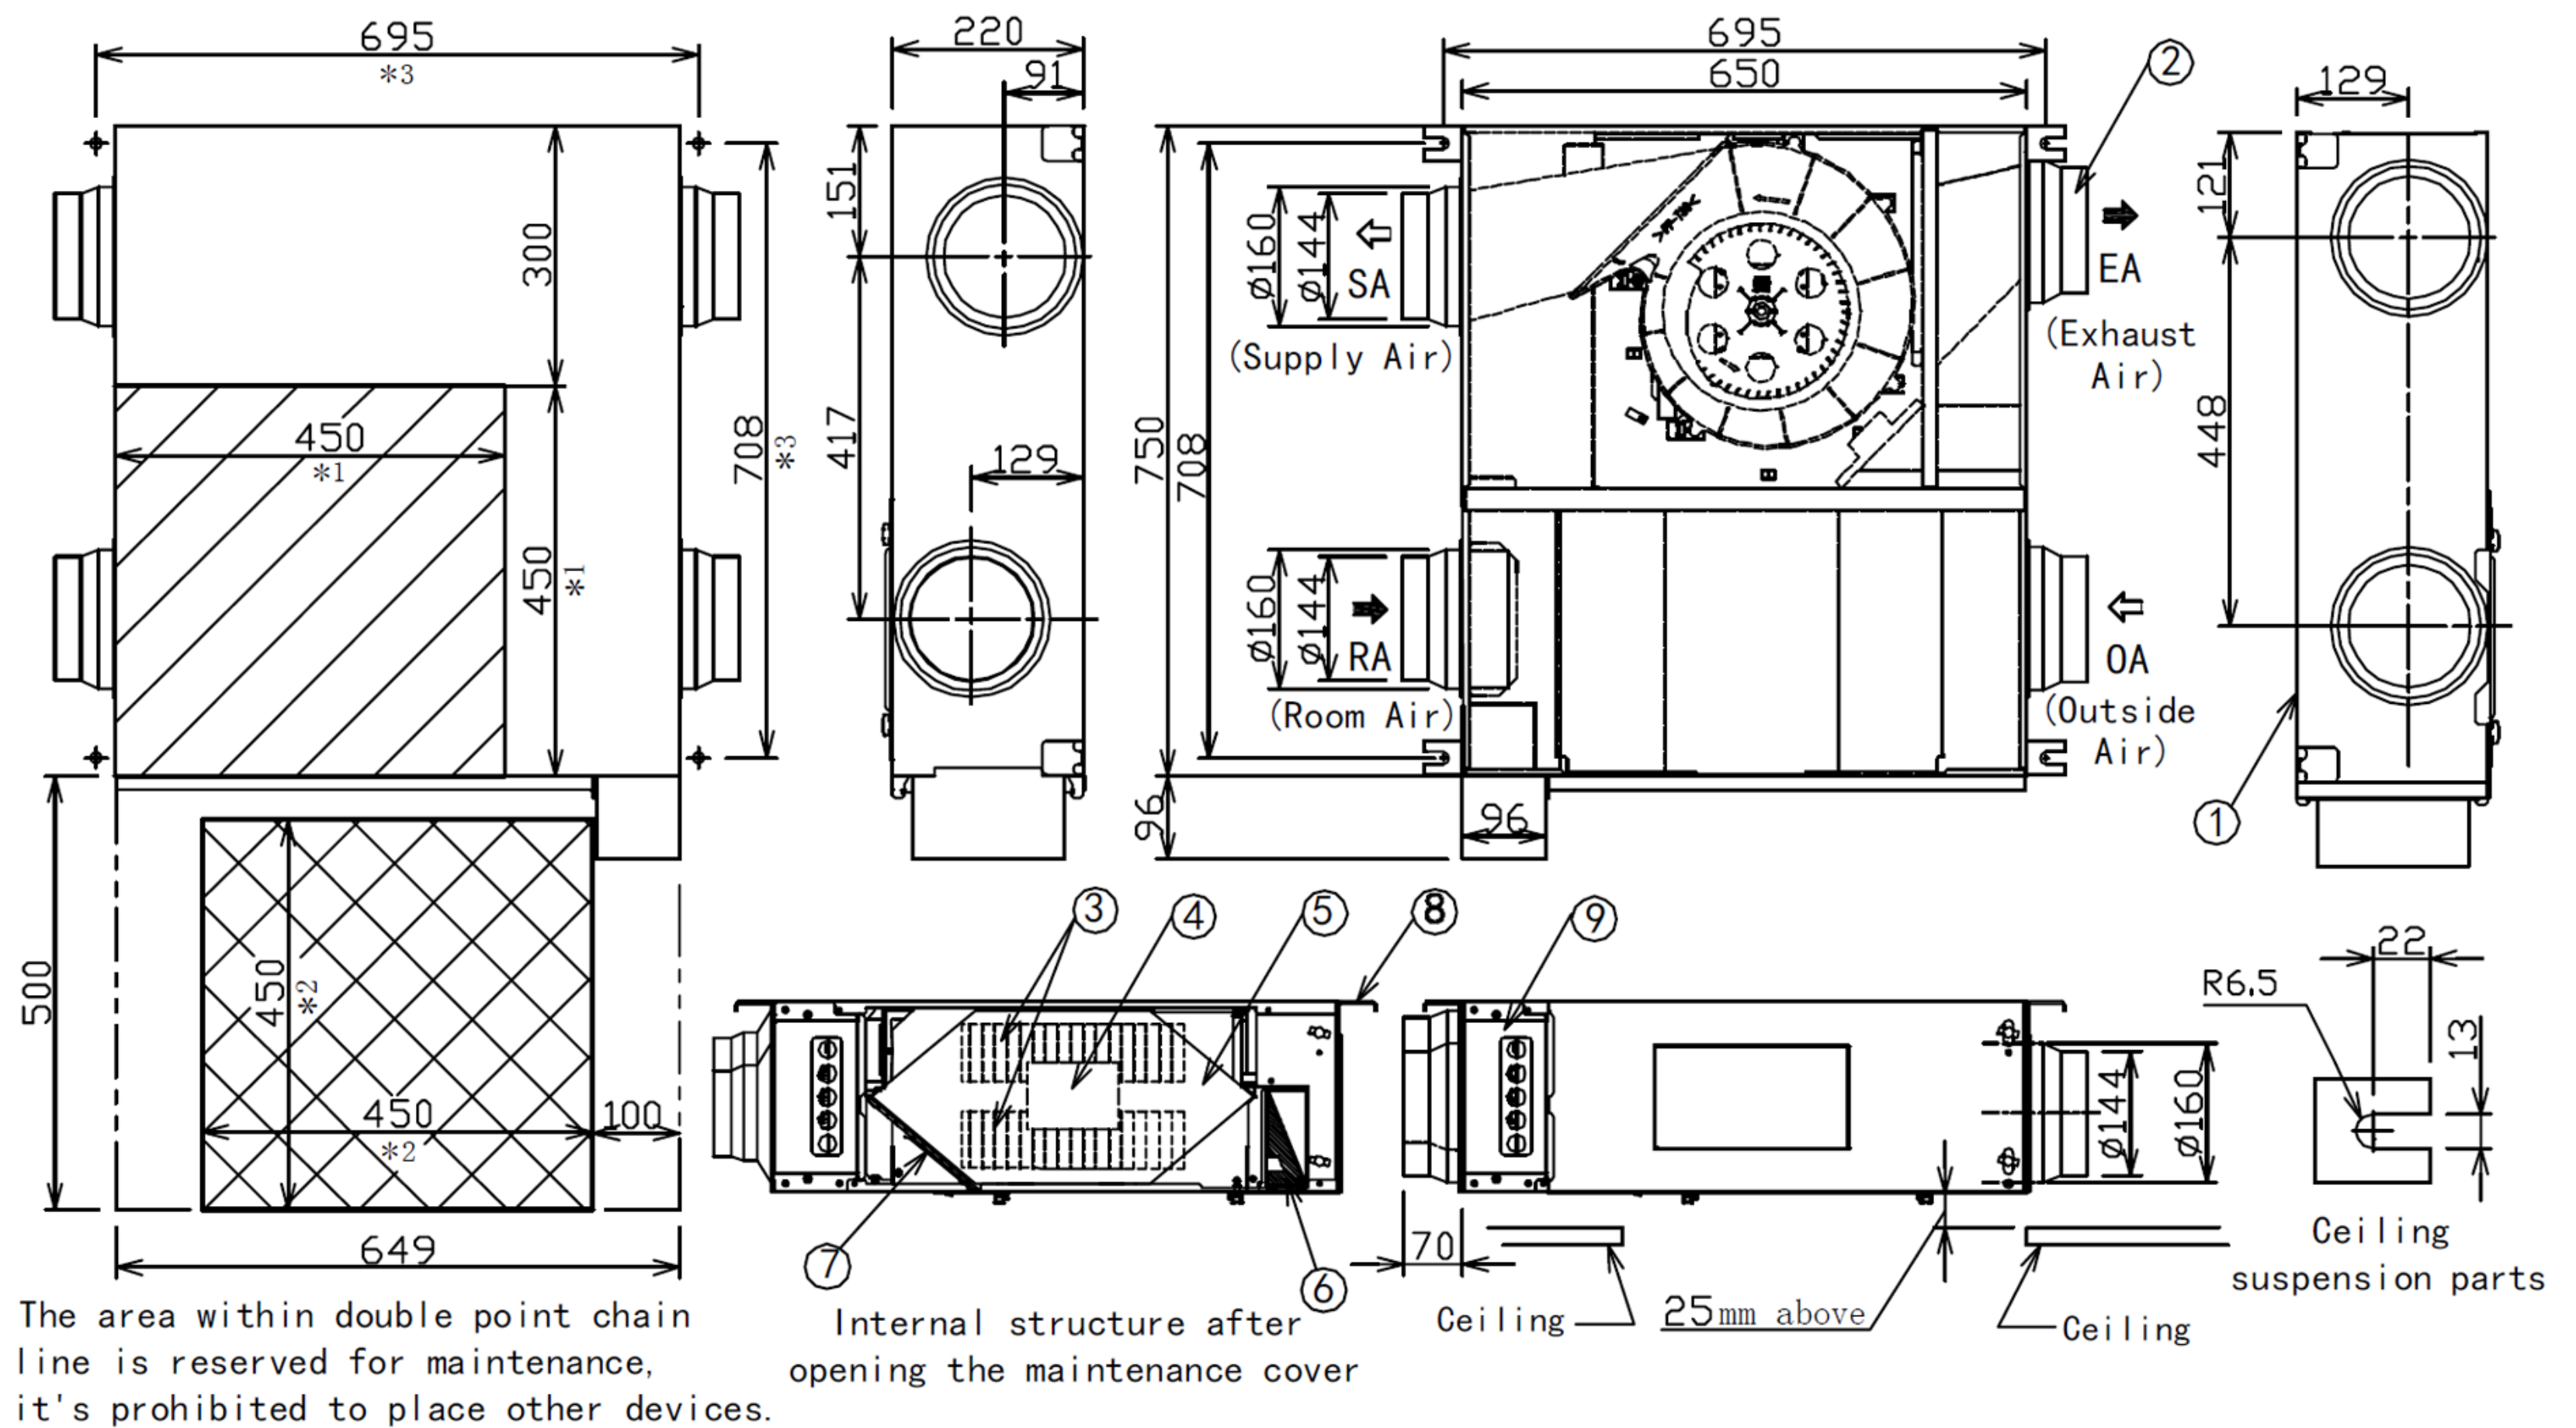

*1. Dimension of filter maintenance cover.

*2. Dimension of maintenance cover.


*3. Suspension point dimension

FY-E35DZ1L

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

UNIT: mm

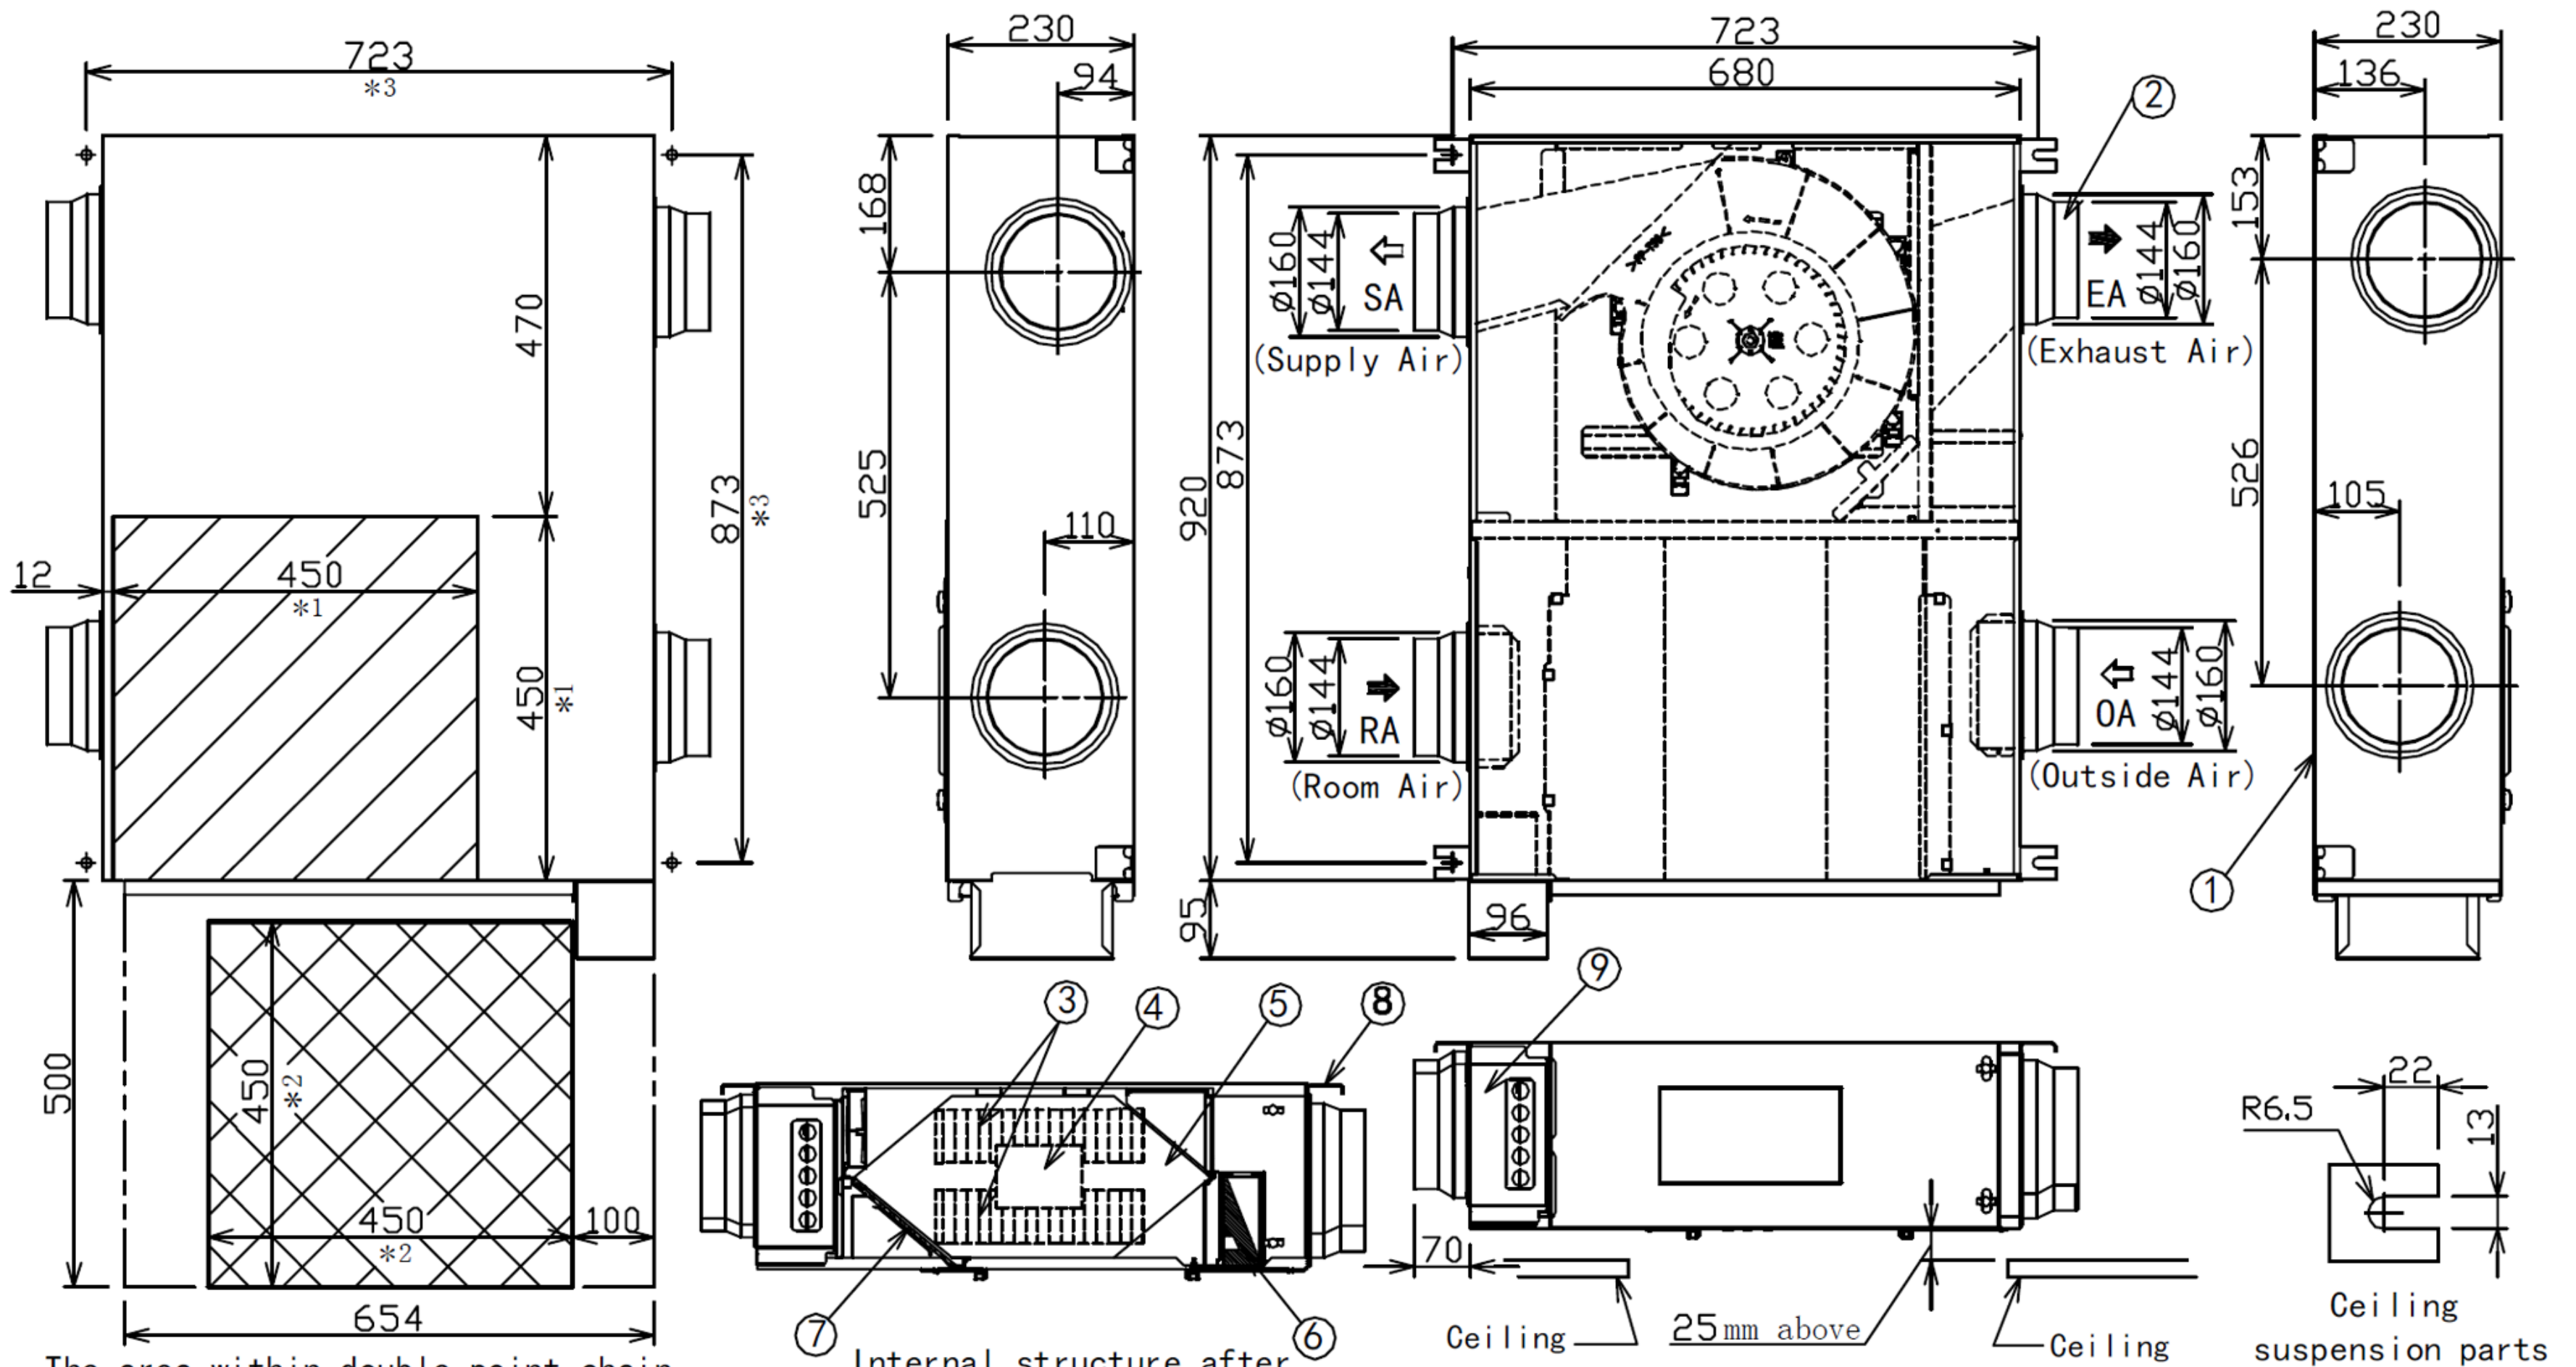

The area within double point chain line is reserved for maintenance, it's prohibited to place other devices.

Internal structure after opening the maintenance cover

Ceiling 25mm above Ceiling

Ceiling suspension parts


- *1. Dimension of filter maintenance cover.
- *2. Dimension of maintenance cover.
- *3. Suspension point dimension

FY-E50DZ1

UNIT: mm

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

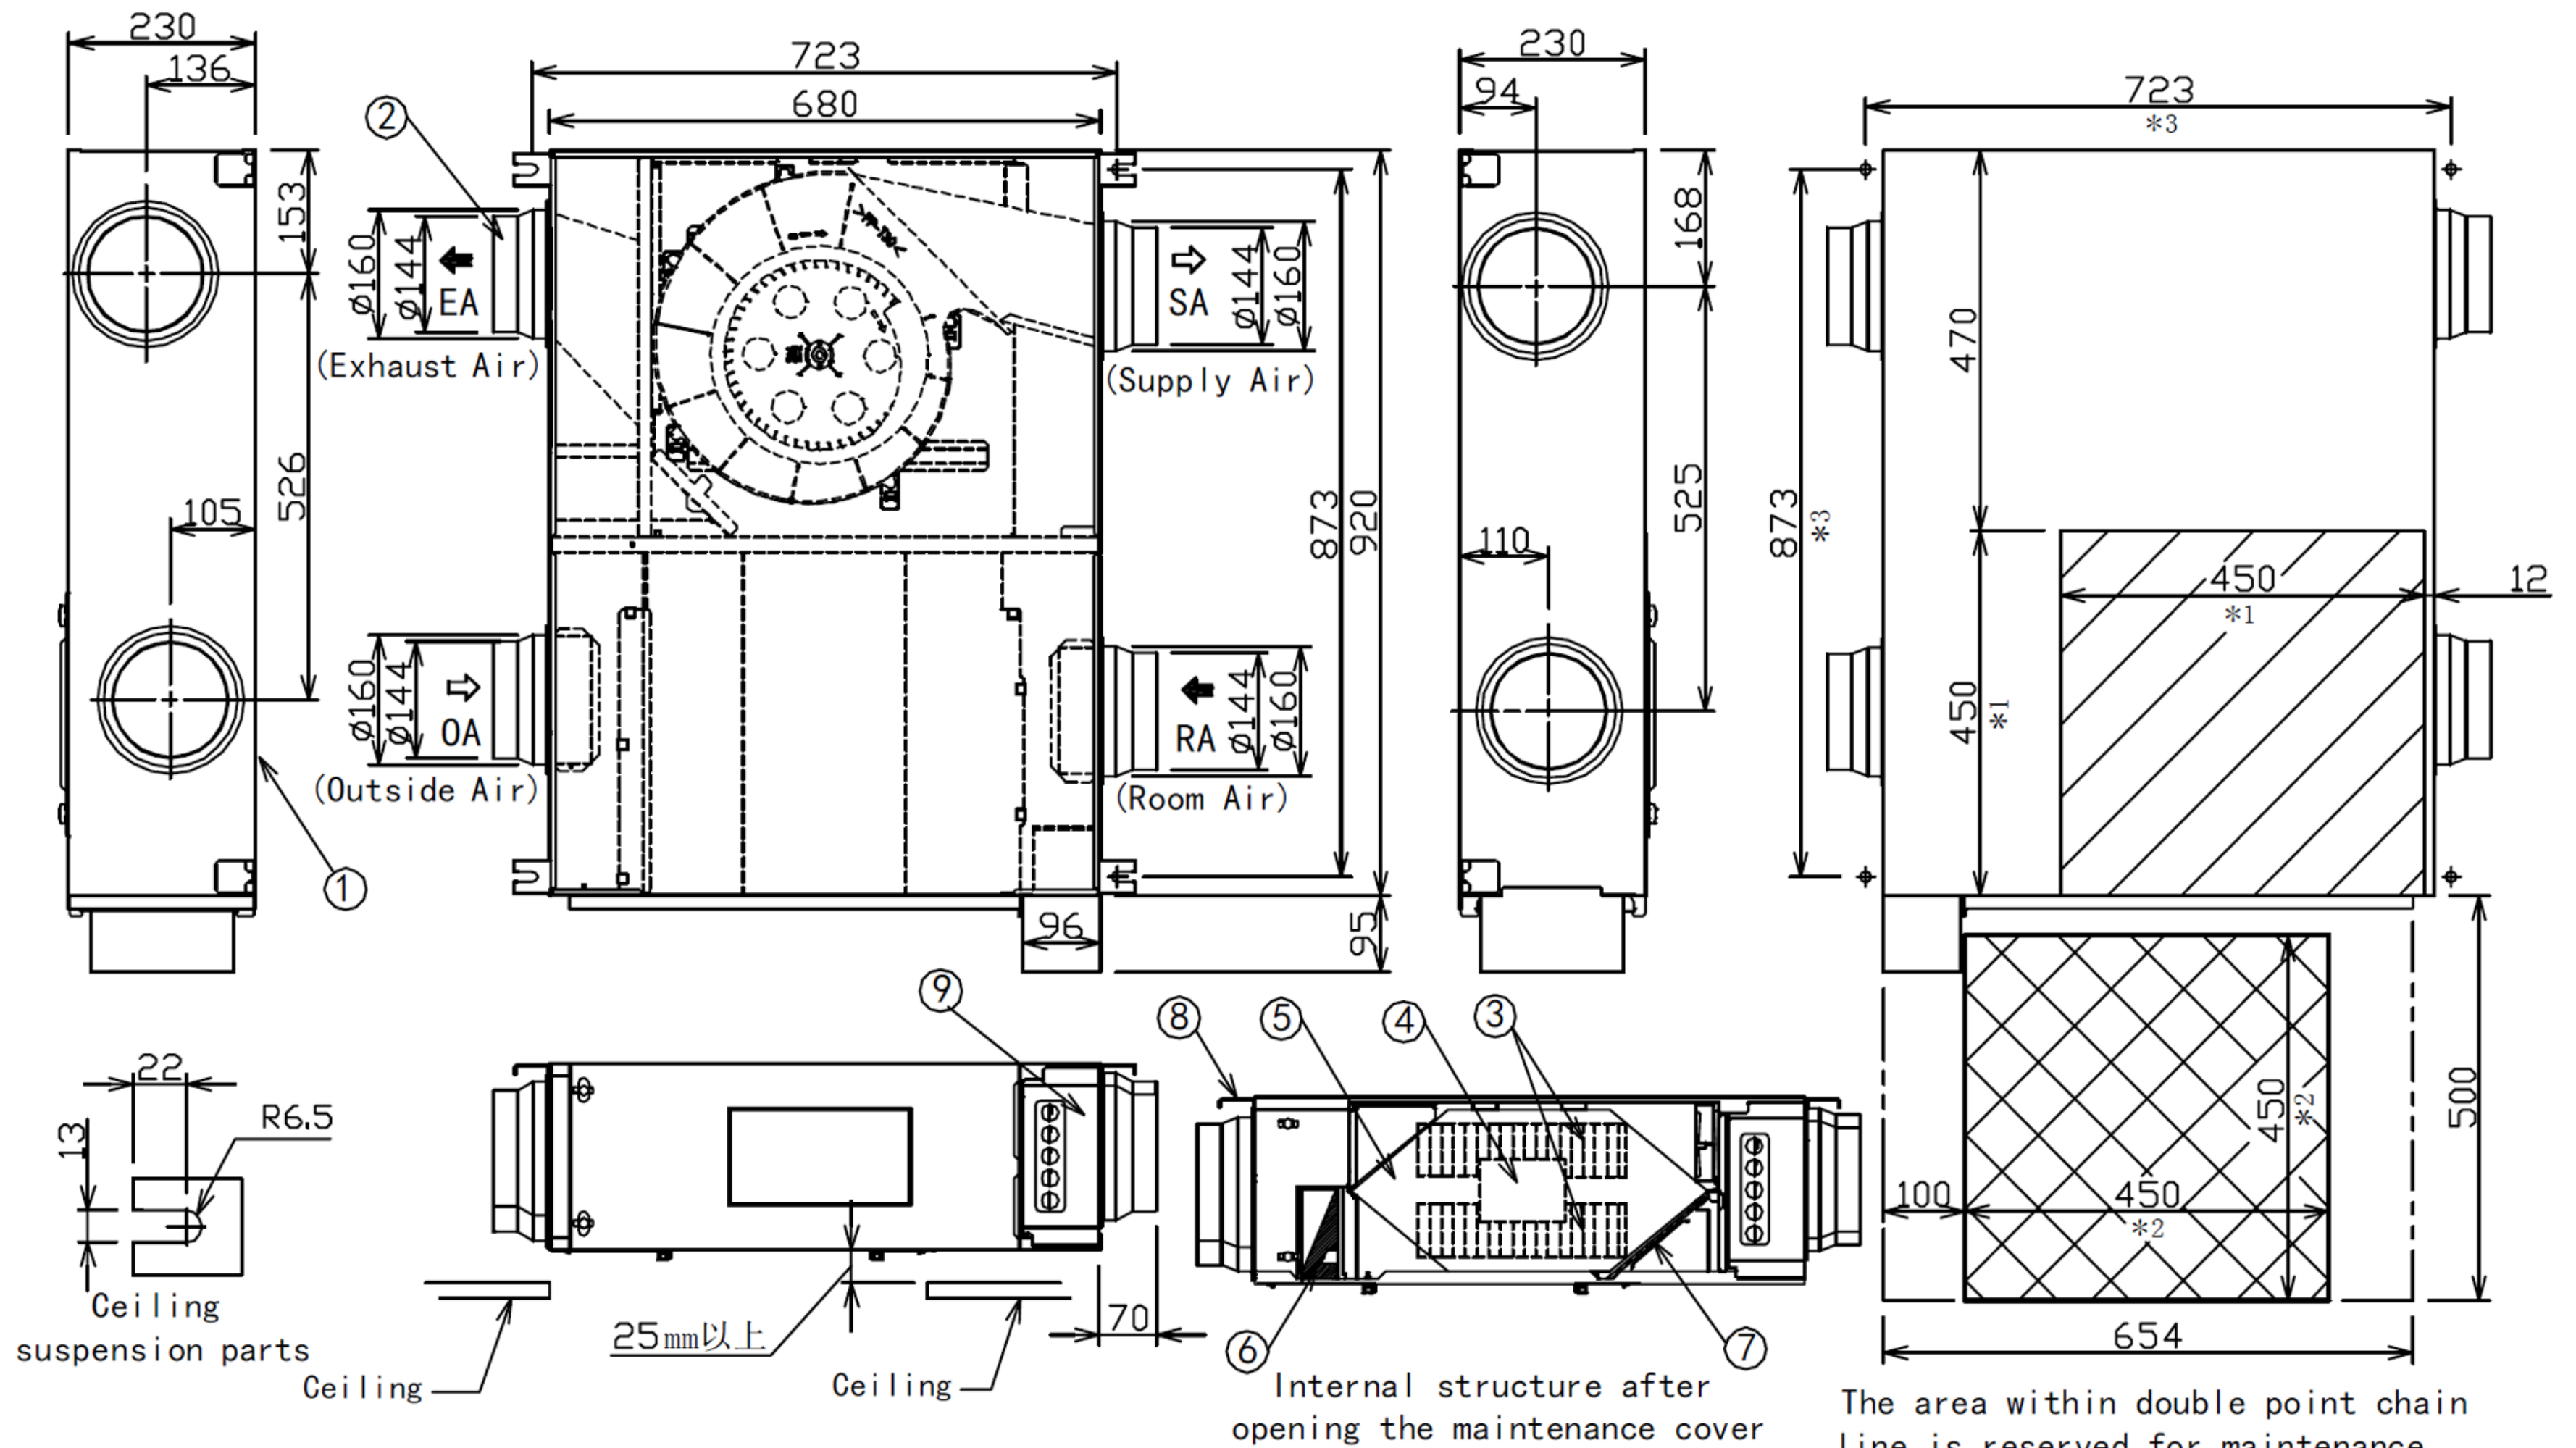

*1. Dimension of filter maintenance cover.

*2. Dimension of maintenance cover.


*3. Suspension point dimension

FY-E50DZ1L

■ Maintenance Dimension

It must be set the maintenance cover, and clean the filter and heat exchange core as specified in instruction.

UNIT: mm

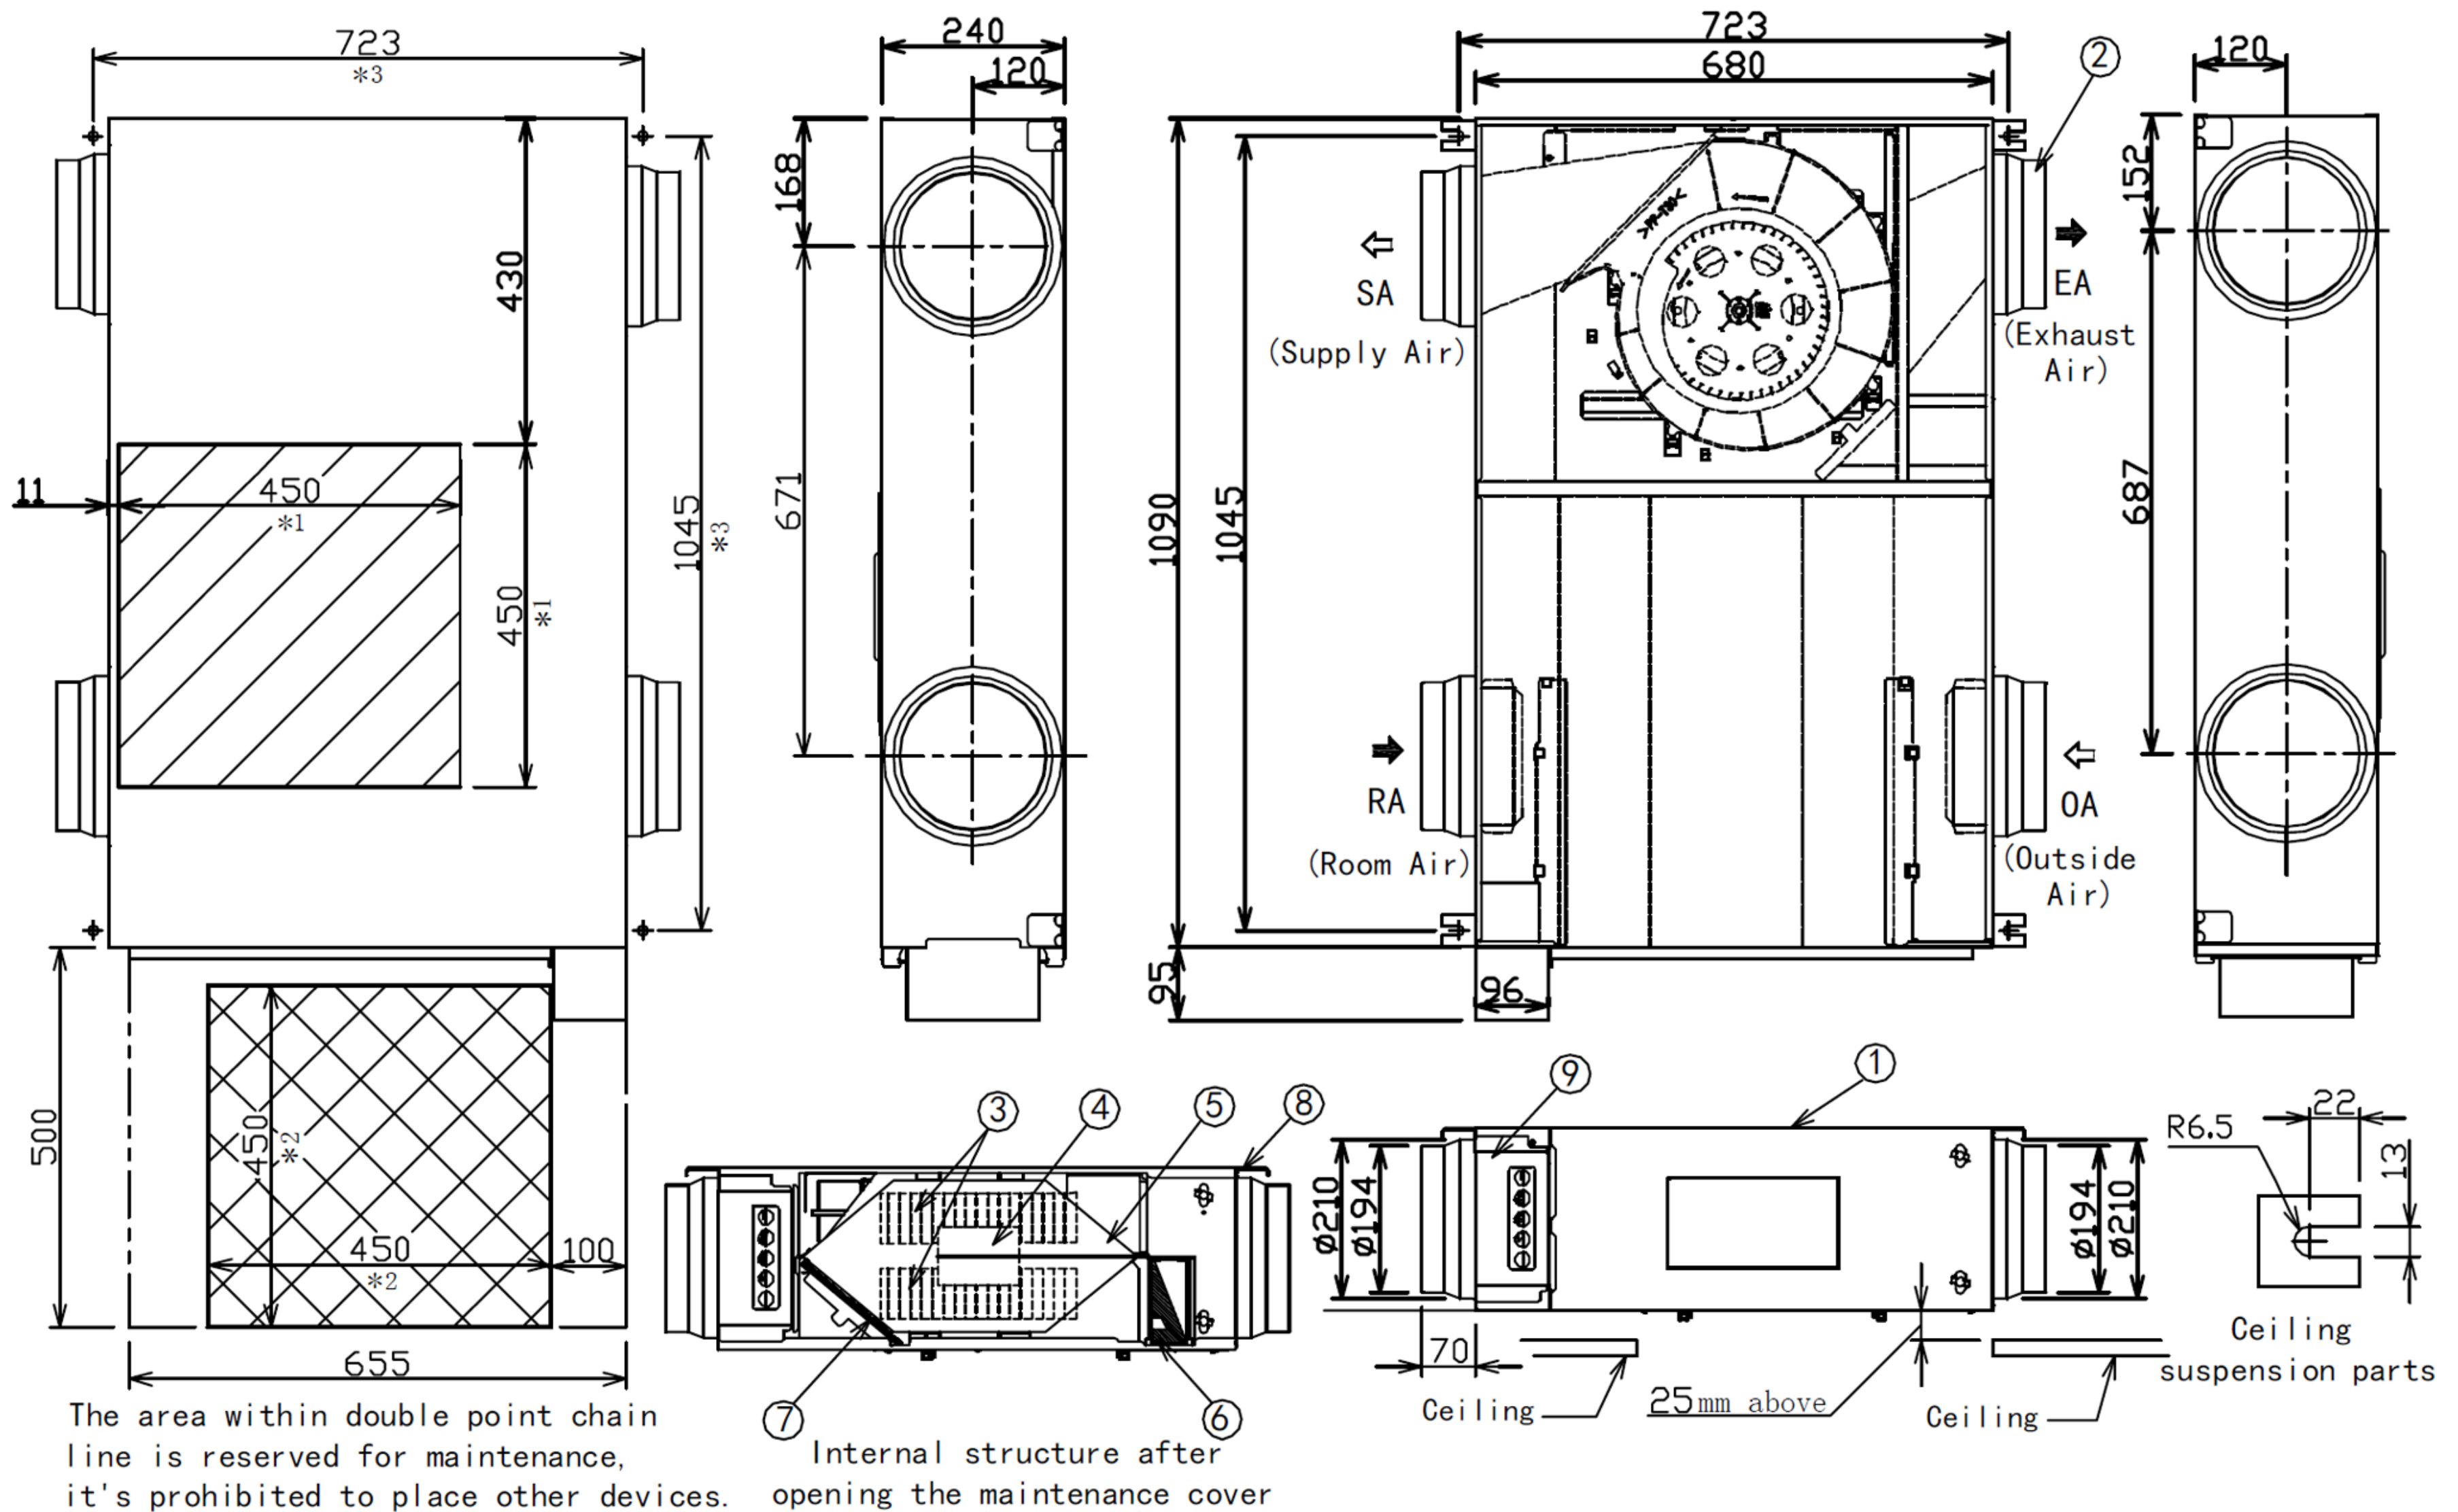

- *1. Dimension of filter maintenance cover.
- *2. Dimension of maintenance cover.
- *3. Suspension point dimension