


Panasonic[®]

Operating Instructions Network Video Recorder Model No. PM-VN64CH/PM-PN64CH/PM-PN128CH

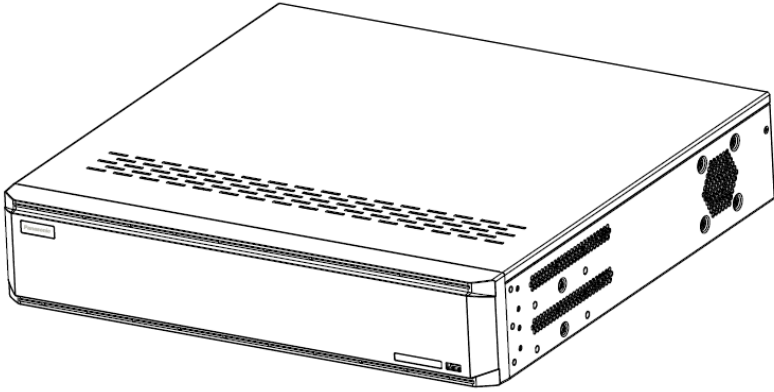

(The above pictures are for illustration purposes)

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

Notes

- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- There may be several technically incorrect places or printing errors in this manual. The updates will be added into the new version of this manual. The contents of this manual are subject to change without notice.
- This device should be operated only from the type of power source indicated on the marking label. The voltage of the power must be verified before using the same. Kindly remove the cables from the power source if the device is not to be used for a long period of time.
- Do not install this device near any heat sources such as radiators, heat registers, stoves or other devices that produce heat.
- Do not install this device near water. Clean only with a dry cloth.
- Do not block any ventilation openings and ensure proper ventilation around the machine.
- Do not power off the device at normal recording condition.
- This machine is for indoor use only. Do not expose the machine in rain or moist environment. In case any solid or liquid get inside the machine's case, please turn off the device immediately and get it checked by a qualified technician.
- Do not try to repair the device by yourself without technical aid or approval.
- In this manual, the trademarks, product names, service names, company names, products that are not owned by our company are the properties of their respective owners.
- It is recommended to back up and clear the personal data stored in the device before the device is returned to us for repair or replacement except those data that are essential for purposes of repair or replacement. The device will be restored to the default factory settings and all personal data will be cleared after repair or replacement. Our company ensures that the customer's data is not made available to third parties if the device is exchanged.
- This manual is suitable for many models. All examples and pictures used in the manual are from one of the models for reference purpose.
- The local language versions of this manual will be provided to users in the corresponding regions and countries.

Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations. In the event of any conflicts between this manual and the applicable law, the later prevails.

- The storage of the personal data depends on the capacity of the storage devices the users use and all data stored in the device shall be handled by themselves. Our company shall not be responsible for the data loss.

Cybersecurity Recommendations

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Set the password expiration time and regularly change the passwords of your devices to ensure that only authorized users can access the system. (recommended time is 90 days).
- The system will automatically check the latest firmware version once a day. Once the latest version is checked, you'd better update it to ensure the system is current with the latest security patches and fixes.
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the device to the public network. When it is necessary to be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.
- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of WEB client access, please create a TLS certificate to enable HTTPS.
- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.
- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your device has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

Regulatory Information

FCC Information

Please take care that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. FCC compliance


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to the radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2. FCC conditions:

- This device complies with part 15 of the FCC Rules. The operation of this product is subject the following two conditions:
- This device may not cause harmful interface.
- This device must accept any interference received, including interference that may cause undesired operation.

CE Information

 The products have been manufactured to comply with the following directives.
EMC Directive 2014/30/EU

RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

Table of Contents

1	Introduction	1
	1.1 Summary	1
	1.2 Features	1
	1.3 Front Panel Descriptions	5
	1.4 Rear Panel Descriptions	6
	1.5 Connections	7
2	Basic Operation Guide.....	10
	2.1 Startup & Shutdown	10
	2.1.1 Startup	10
	2.1.2 Shutdown.....	10
	2.2 Remote Controller	10
	2.3 Mouse Control.....	13
	2.4 Text-input Instruction	14
	2.5 Common Button Operation	14
3	Wizard & Main Interface	16
	3.1 Startup Wizard.....	16
	3.2 Main Interface	21
	3.2.1 Main Interface Introduction	21
	3.2.2 Setup Panel	24
	3.2.3 Main Functions.....	25
4	Camera Management.....	27
	4.1 Add/Edit Camera	27
	4.1.1 Add Camera	27
	4.1.2 Edit Camera.....	29
	4.2 Add/Edit Camera Group.....	30
	4.2.1 Add Camera Group.....	30
	4.2.2 Edit Camera Group.....	31
	4.2.3 IP Planning	31
5	Live View Introduction	33
	5.1 Live View Interface Introduction	33
	5.2 View Mode	34
	5.2.1 Preview by Display Mode	34
	5.2.2 Quick Sequence View	37
	5.2.3 Camera Group View in Sequence	37
	5.2.4 Scheme View in Sequence	38
	5.3 POS Settings.....	40
	5.4 Preview Image Configuration	42
	5.4.1 OSD Settings.....	42
	5.4.2 Image Settings	43
	5.4.3 Mask Settings	44
	5.4.4 Fisheye Settings.....	44
	5.4.5 Image Adjustment	45
6	PTZ	48

6.1 PTZ Control Interface Introduction.....	48
6.2 Preset Settings	53
6.3 Cruise Settings.....	54
6.4 Cruise Group Settings	55
6.5 Trace Settings	55
6.6 Task Settings.....	56
6.7 Smart Tracking	57
7 Record & Disk Management.....	60
7.1 Record Configuration	60
7.1.1 Mode Configuration	60
7.1.2 Schedule Settings	62
7.1.3 Advanced Configuration	65
7.2 Encode Parameters Settings	66
7.3 Record Mode	66
7.3.1 Manual Recording	66
7.3.2 Timing Recording.....	66
7.3.3 Motion-based Recording	66
7.3.4 Sensor Based Recording.....	67
7.3.5 AI Event Recording	67
7.4 Disk	67
7.4.1 Disk Management	67
7.4.2 Storage Mode Configuration	71
7.4.3 View Disk Information	71
8 Playback & Backup.....	73
8.1 Instant Playback	73
8.2 Playback Interface Introduction	73
8.3 Smart Playback.....	78
8.3.1 Smart Playback Settings.....	79
8.3.2 Smart Playback Based on Motion Detection.....	79
8.3.3 Smart Playback by Face Search	80
8.3.4 Smart Search by License Plate	82
8.3.5 Smart Search by Object Attributes	83
8.4 Record Search, Playback & Backup	84
8.4.1 Search, Playback & Backup by Time-sliced Image	84
8.4.2 Search, Playback & Backup by Time.....	86
8.4.3 Search, Playback & Backup by Event.....	86
8.4.4 Search & Playback by Tag	87
8.4.5 Image Management	88
8.4.6 View Backup Status.....	88
9 AI Event Management	90
9.1 Face Recognition.....	90
9.1.1 Face Detection Settings	90
9.1.2 Face Database Management.....	92
9.1.3 Face Recognition Settings	94
9.2 License Plate Recognition	96
9.2.1 License Plate Detection Settings	96
9.2.2 Plate Database Management	97

9.2.3 License Plate Recognition Settings	98
9.3 Line Crossing Detection	99
9.4 Intrusion Detection	101
9.5 Abandoned/Missing Object Detection	102
9.6 Crowd Density Detection	102
9.7 Target Counting	103
9.8 Exception Detection	105
9.9 Fire Detection	106
9.10 Temperature Detection	106
9.11 Video Metadata	108
10 Intelligent Analytics.....	110
10.1 Target Detection View	110
10.1.1 Human Body/Vehicle Detection View	110
10.1.2 Face Detection/Match View	111
10.1.3 License Plate Detection/Recognition View	114
10.1.4 Object Attribute View	116
10.2 Smart Search	116
10.2.1 Face Search	116
10.2.2 Track Playback	120
10.2.3 Face Search by Snapshot	122
10.2.4 Human Body Search	123
10.2.5 Vehicle Search	124
10.2.6 Combination Search	125
10.3 View Statistical Information	125
11 General Event Management.....	128
11.1 Sensor Alarm	128
11.2 Motion Alarm	129
11.2.1 Motion Configuration	129
11.2.2 Motion Alarm Handling Configuration	130
11.3 Combination Alarm	131
11.4 Exception Alarm	132
11.4.1 IPC Offline Settings	132
11.4.2 Exception Alarm Settings	133
11.5 Alarm Event Notification	133
11.5.1 Alarm-out	133
11.5.2 E-mail	133
11.5.3 Display	134
11.5.4 Buzzer	134
11.5.5 Push	134
11.5.6 Audio	135
11.5.7 Light	136
11.5.8 Alarm Server	137
11.6 Manual Alarm	137
11.7 View Alarm Status	138
11.8 System Disarming	138
12 Application	140
12.1 Face Attendance	140

12.2 Face Check-In	141
12.3 Parking Lot Settings	142
12.3.1 Basic Settings	142
12.3.2 Parking Space Settings	142
12.3.3 Entrance/Exit Management	143
12.3.4 Parking Lot Management	143
12.3.5 Search Vehicle Entry/Exiting Records	144
12.4 Access Control Management	145
12.4.1 Access Control Settings	145
12.4.2 Open the Door Manually	146
13 Account & Permission Management	147
13.1 Account Management	147
13.1.1 Add User	147
13.1.2 Edit User	148
13.2 User Login & Logout	150
13.3 Permission Management	150
13.3.1 Add Permission Group	150
13.3.2 Edit Permission Group	151
13.4 Black and White List	151
13.5 Preview on Logout	152
13.6 Network Security	152
13.7 Password Security	153
13.8 View Online User	153
14 Device Management	154
14.1 Network Configuration	154
14.1.1 TCP/IP Configuration	154
14.1.2 Port Configuration	155
14.1.3 PPPoE Configuration	158
14.1.4 DDNS Configuration	158
14.1.5 E-mail Configuration	161
14.1.6 UPnP Configuration	162
14.1.7 802.1X	163
14.1.8 NAT Configuration	163
14.1.9 FTP Configuration	164
14.1.10 SNMP	165
14.1.11 Cloud Upgrade	166
14.1.12 Platform Access	166
14.1.13 UPnP Report Access	167
14.1.14 ONVIF	167
14.1.15 Network Status	168
14.2 Basic Configuration	168
14.2.1 Common Configuration	168
14.2.2 Date and Time Configuration	169
14.2.3 Recorder OSD Settings	170
14.2.4 Hot Standby Settings	170
14.2.5 PoE Power Management	171
14.3 Factory Default	172
14.4 Device Software Upgrade	172

14.5 Backup and Restore.....	173
14.6 Restart Automatically.....	173
14.7 View Log.....	174
14.8 View System Information.....	174
15 Remote Surveillance.....	175
15.1 Mobile Client Surveillance.....	175
15.2 Web LAN Access.....	175
15.3 Web WAN Access.....	176
15.4 Web Remote Control.....	178
15.4.1 Remote Preview.....	179
15.4.2 Remote Playback.....	182
15.4.3 Remote Search and Backup.....	183
15.4.4 Intelligent Analysis.....	184
15.4.5 Application.....	184
15.4.6 Remote Configuration.....	184
Appendix A FAQ.....	185
Appendix B Calculate Recording Capacity.....	190
Appendix C Compatible Device List.....	192
Appendix D Personal Data Collection Description.....	193

1 Introduction

1.1 Summary

Based on the most advanced SOC technology and embedded system in the field, this series of NVR adopt the new designed human interface and support the smart management of the IP camera and the record search of slice. This series of the NVR which are powerful and easy to use are provided with excellent image quality and stable system. They are centralized monitoring management products with high performance and high quality specially designed for network video monitoring field.

This series of the NVR can be widely used to security system of banks at home and abroad, schools, intelligent mansions, traffic, environmental protection, supermarkets, petrol service stations, residential quarters and factories and so on.

1.2 Features

Basic Functions

- Supports network device access including our company's and third-party IP cameras
- Some NVRs support the H.265S/H.265+/ H.265 and H.264S/H.264+/ H.264 IP cameras
- Supports standard ONVIF protocol
- Supports dual stream recording for each camera
- Supports the addition of IP cameras both automatically and manually
- Support collective or individual configuration of the cameras' OSD, video parameters, mask, motion and so on
- Supports multiple smart detection access and linkage for IPC's, such as scene change, video color cast detection, video blur detection, intrusion detection (region entrance/exiting detection), target counting, abandoned object detection, missing object detection, crowd density detection, face detection, license plate detection, smart tracking, fire detection, temperature detection, video metadata, etc.
- Supports playback and backup
- Supports multiple user permission groups, including Administrator, Advanced and common, which are the default permission groups of the system
- Supports multiple web client logins by using one username at the same time and the ability to enable or disable user permissions
- Supports multiple web client logins at the same time
- Supports binding NVR to the account of the mobile APP
- Supports parking lot management

Live View

- Supports 8K (7680×4320)/4K/1920×1080/1280×1024 HDMI and 1920×1080/1280×1024 VGA high-definition synchronous display
- Supports multi-screen modes such as 1/4/6/8/9/13/16/25/36 /64(varies by model)
- Some models support face capture view, face match view, license plate recognition view, human/motor vehicle /non-motor vehicle view

- Support auto adjustment of the camera's image display proportion
- Supports enabling or disabling audio monitoring of a camera
- Supports manual snapshot of a camera live view
- Supports camera sequence adjustment
- Supports adding and saving display modes, and saved modes can be recalled directly
- Supports quick tool bar operation from the preview window
- Supports camera group view and scheme view in sequence, quick sequence view and dwell time setting
- Supports motion detection and video masking
- Supports multiple popular PTZ control protocols and setup of preset and cruise
- Supports direct mouse control of the IP dome including rotating, zoom, focusing and so on
- Supports the zoom of a single camera image by sliding the scroll wheel of the mouse
- Supports the zoom of any area of a camera image up to a maximum of 16 times the current size
- Supports image and lens adjustment (only available with some cameras)
- Supports quick camera addition in the camera window of the live view interface
- The live camera sequence of the web client will stay consistent with the NVR after adjusting the live camera sequence of the NVR, but the live camera sequence of the NVR will not be changed if the web client is changed

Disk Management

- The NVRs with the 3U case can add a maximum of 16 SATA HDDs; a maximum of 8 SATA HDDs with the 2U case
- Each SATA interface (varies by unit) on the NVR supports HDDs with a max storage capacity of 10TB. Some models may support a max storage capacity of 12TB per HDD
- Supports 2 E-SATA interfaces
- Supports hot swap
- Supports disk group configuration and management and each camera can be added into different disk groups with different storage capacity
- Supports disk information and viewing of disk operating status
- Support formatting disks in batches

Record Configuration

- Supports mainstream and sub stream recording, as well as collective or individual configuration of the recording stream
- Supports custom and auto recording modes
- Supports schedule recording, sensor alarm recording and motion detection recording, etc
- Supports schedule recording and event recording setting with different recording streams
- Supports recording schedule setting and recycle recording (overwriting)
- Supports pre-recording and delay recording configuration of an event

Record Playback

- Supports time scale operation in quick playback and the playback date and time can be set randomly by scrolling the mouse; the time interval of the time scale can be zoomed
- Support record searching by time slice/time/event/tag

- Support smart playback by drawing grid, line or quadrilateral and vehicle smart playback (some models also support smart playback by face)
- Supports time view and camera view in searching by time slice mode
- Supports time slice searching by month, by day, by hour and by minute and time slice to be displayed with camera thumbnail
- Supports a maximum of 4/8/16 cameras to be searched at a time (varies by unit channel size)
- Supports event search by manual/motion/sensor/intelligent events
- Supports tag searching by the manual added tags
- Supports instant playback of the selected camera in the live view interface
- Support a maximum of 16 synchronous playback cameras
- Support acceleration (to a maximum 32 times the normal speed), deceleration (to a minimum 1/32 times the normal speed) and 30s' addition or reduction to current playing time

Record Backup

- Supports backup of a recording through USB (U disk, mobile HDD)
- Supports backup of a recording by time/event/image search
- Supports record cutting for backing up when playing back
- Supports multiple backup tasks in background and backup status viewing

Event Management

- Supports alarm schedule setting
- Supports enabling or disabling of the motion detection, external sensor alarm input, combination alarm, intelligent alarm and exception alarms including IP address conflict alarm, disk IO error alarm, disk full alarm, no disk alarm, illegal access alarm, network disconnection alarm, IPC offline alarm and so on, alarm trigger configuration supportable
- Supports IPC offline alarm trigger configuration of PTZ, snap, pop-up video, etc.
- Supports event notification modes of alarm-out, pop-up video, pop-up message box, buzzer, e-mail and so on
- Captured images can be attached to an e-mail when an alarm is triggered
- Supports alarm status view of alarm-in, alarm-out, motion detection and exception alarm
- Supports triggering and clearing an alarm manually
- Supports auto-reboot of the system when an exception happens
- Support alarm linkage based on face detection, vehicle detection and license plate recognition
- Some models support face match alarm

Face Recognition (available for some models)

- Supports adding 5000 face pictures to the face database (some models support adding 10,000 face pictures to the face database)
- Supports face capture and face match
- Supports image search by image, track playback and database management
- Supports face information statistics
- Supports face match alarm

LPR Function

- Supports registration of up to 50,000 license plates (some models only support registration of 1,000 license plates)
- Supports license plate detection, matching and search
- Supports vehicle information statistics
- Supports license plate match alarm

Application

- Supports parking lot management
- Supports access control management
- Supports face attendance and face check in (varied by model)

Network Functions

- Supports TCP/IP and PPPoE, DHCP, DNS, DDNS, UPnP, NTP, SMTP protocol and so on
- Supports allow and block list function and the allow and block IP address/IP segment address can be set
- Supports multiple browsers including IE8/9/10/11, Firefox, Opera, Chrome and Safari on Macs
- Support remote configuration, import and export of the NVR parameters and other system maintenance operations including remote upgrading and system restart
- Supports remote camera configuration through the NVR including video parameters, image quality and so on
- Supports remote search, playback and backup through the NVR
- Supports triggering and clearing manual alarms remotely
- Motorized zoom cameras can be adjusted through the web client
- Supports NVMS or other platform management software to access the NVR and manage it
- Supports NAT function and QR Code scanning by mobile phones and tablets
- Supports mobile surveillance by phones or tablets with iOS or Android OS
- If one camera recording is enabled or disabled manually through the web client, it will be simultaneously enabled or disabled on the NVR
- Supports direct jumping from NVR web client to IPC web client
- The installation mode and display mode of the fisheye camera can be set via Web client

Other Functions

- The NVR can be controlled and operated by the buttons on the front panel (on applicable models), the remote controller and the mouse
- Set up interfaces can be conveniently switched by clicking the main menus at the top
- Supports NVR information viewing including basic, camera status, alarm status, record status, network status, disk and backup status
- Support factory restore, import and export of the system configuration, log view and export and local upgrading by USB mobile device
- Supports auto recognition of the displayer's resolution
- You can click the right mouse button at any interface to go back to the upper interface
- You can click the mouse wheel at any interface to go to the live view interface
- The display language and video format of the NVR will not be changed, and the system logs will be preserved if you restore to the default parameters

- Press and hold the right mouse button for 5 seconds in any interface to switch the output cyclically.



1.3 Front Panel Descriptions

The following descriptions are for reference only.

Type I:

Name	Descriptions
REC	The light will be blue when recording
Net	The light will be blue when there is access to a network
Power	The light will be blue when there is power
Fn	Currently no function

Type II:

Name	Descriptions
Power	The light will be blue when there is power
HDD	The light will be blue when reading/writing HDD
Net	The light will be blue when there is access to a network
Backup	The light will be blue when backing up files and data
Play	The light will be blue when playing video
REC	The light will be blue when recording
AUDIO +/-	1. Adjust audio 2. Increase the value in setup
P.T.Z / -	1. Enter PTZ mode 2. Decrease the value in setup
MENU	Enter Menu in live
INFO	Check the information of the device
BACKUP	Enter backup mode in live
SEARCH	Enter search mode in live
Exit	Exit the current interface
	Manually record
	Play/Pause
	Speed down
	Speed up
1-9	Input digital number and select camera
0/--	Input number 0, the number above 10
Direction Key	Change direction
Multi-Screen Switch	Change the screen mode
Enter	Confirm selection
USB	To connect external USB device like USB mouse or USB flash

Power cord inlet [AC IN]: Connect the provided power cord to this inlet.

VGA/HDMI OUT: This connector is used to connect to a VGA/HDMI ready monitor.

HDMI IN: HDMI input

RESET: Press RESET to display a shutdown interface.

Audio output: RCA pin jack. Audio from live images or recorded images is output. Connect such device as a powered speaker.

Audio input: Audio from live images is input or for two-way talk. Connect such device as microphone.

LAN: Use this port to connect the recorder to a network. When the port is being accessed and linked, the orange light blinks, and the green light is steady on.

USB ports: To connect external USB devices, like USB mouse or USB flash drive.

E-SATA: Connector for the external HDD with E-SATA interface.

SFP1/2: SFP (Small Form-factor Pluggable) port

Alarm input: this connector is used when connecting an external device such as a sensor that outputs alarm signals.

Alarm output: This connector is used when installing an external alarm device such as a buzzer or a lamp.

RS 485(K/B): Connect such device as a keyboard.

RS 485 (P/Z): Currently no function.

RS 232: Serial port, used for debugging.

1.5 Connections

● Video Connections

Video Output: Supports VGA/HDMI video output. You can connect to a monitor through these video output interfaces simultaneously or independently.


● Audio Connections

Audio Input: Connect to microphone, pickup, etc.

Audio Output: Connect to headphone, powered speaker (ex, ASPC20), amplifier, or other audio output devices.

● Alarm Connections


Some models may not support this function. Take 16 CH alarm inputs and 1 CH alarm output for example.

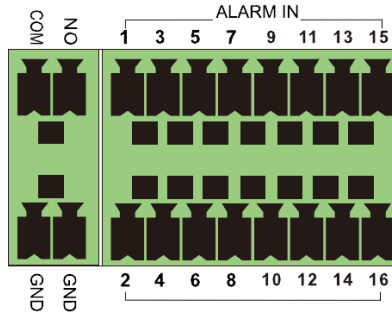


Alarm Input:

Alarm IN 1~16 are 16 CH alarm input interfaces. There are no type requirements for sensors. NO type and NC type are both available.

The way to connect the sensor and the device is as shown below:

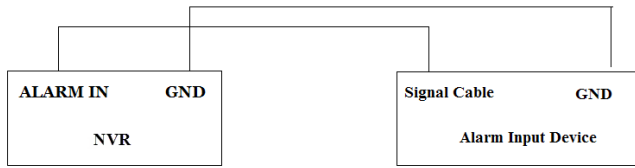


The alarm input is an open/closed relay. If the input is not an open/closed relay, please refer to the following diagram:

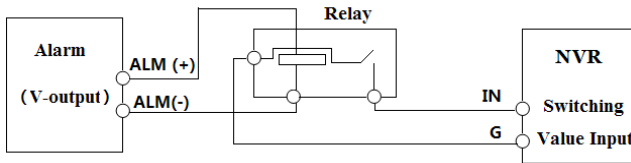

Alarm Output:


The way to connect alarm output device:

Pull out the green terminal blocks and loosen the screws in the alarm-out port. Then insert the signal wires of the alarm output devices into the port of NO and COM separately. Finally, tighten the screws. Provided that the external alarm output devices need power supply, you can connect the power supply as per the following figures.

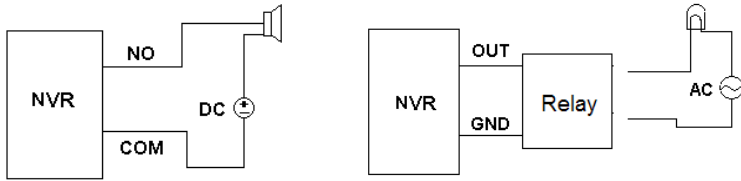

● RS485 Connection

There are two types of RS485 interfaces:

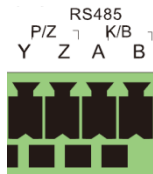

(Type 1)



(Type 2)

Type 1: The P/Z interfaces are unavailable temporarily. K/B interfaces are used to connect keyboards.

Type 2: The RS485 interfaces are used to connect keyboard. A is TX+; B is TX-.

2 Basic Operation Guide

2.1 Startup & Shutdown

Please make sure all the connections are done properly before you power on the unit. Proper startup and shutdown are crucial to extending the life of your device.

2.1.1 Startup

- ① Connect the output display device to the VGA/HDMI interface of the NVR.
- ② Connect the mouse and power. When powered on, the device will boot, and the power LED would turn blue.
- ③ After you read the privacy statement, a WIZARD window will pop up (you should select the display language the first time you use the NVR). Refer to [Startup Wizard](#) for details.

2.1.2 Shutdown

You can power off the device by using a remote control or mouse.

By remote control:

- ① Press Power button. This will take you to a shutdown window. The unit will power off after clicking the “OK” button and verifying the username and password.
- ② Disconnect the power.

By mouse:

- ① Click **Start** → **Shutdown** to open the Shutdown window. Select “Shutdown” in the window. The unit will power off after clicking the “OK” button and verifying the username and password.
- ② Disconnect the power according to the prompt shown on the screen.

2.2 Remote Controller

- ① Uses two AAA size batteries. (Not included)
- ② Open the battery cover of the remote controller.
- ③ Place batteries. Please note the polarity (+ and -) and insert properly.
- ④ Replace the battery cover.

Key points to check in case the remote doesn't work.



1. Check batteries polarity.
2. Check the remaining charge in the batteries.
3. Check IR controller sensor for any masking.


If it still doesn't work, please contact your distributor. Note that the remote control is the same for all units of the same model. Be sure to point the IR sensor of the remote control directly towards the IR receiver of the NVR you wish to control if you have multiple devices.

It's also recommended to place the recorders away from each other if possible.

There are two kinds of remote controller. The interface of remote controller is shown below.




Type I:

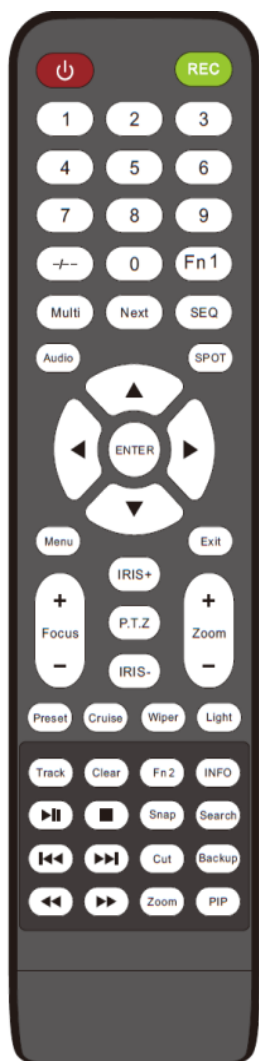



Button	Function
 Power Button	Turn device on and off
Record Button	To start recording
-/-- /0-9	Input number or choose camera
Fn1 Button	Currently no function
Multi Button	Choose multi screen display mode
Next Button	Switch camera
SEQ	Go to sequence view mode
Audio	Enable audio output in live mode
SPOT	Currently no function
Direction button	Move cursor in setup or pan/title PTZ
Enter Button	Confirm a choice or setup
Menu Button	Go to the main menu
Exit Button	Exit the current interface
Focus/IRIS/Zoom/PTZ	Control PTZ camera
Preset Button	Enter into preset setting in PTZ mode
Cruise Button	Go to cruise setting in PTZ mode
Track Button	Currently no function
Wiper Button	Currently no function
Light Button	Currently no function
Clear Button	Currently no function
Fn2 Button	Currently no function
Info Button	Get information about the device
	Control playback. Play(Pause)/Stop/Previous Frame/Next Frame/Speed Down/Speed Up
Snap Button	Take snapshots manually
Search Button	Go to the search and backup interface
Cut Button	Currently no function
Backup Button	Go to the search and backup interface
Zoom Button	Zoom in
PIP Button	Currently no function



Calling login box: After the device starts successfully, the login box will appear by pressing “Menu” or “Enter” button.

Password input: Move to the password edition box by pressing ▲ ▼ ◀ ▶ and then press the digital numbers to enter the password; press “Exit” to delete the input digital number; But the “digital number + letter” password cannot be input by the remote controller. You need to input by mouse-click.







Playback control: Press  to enter the playback interface. Press  or  to speed

down or up the recorded video; press “Next” to switch the playback camera (channel); press “Multi” to switch the screen display mode; press  to stop playing; press  to pause; after the playback pauses, press /  to play the previous or next frame.

PTZ control: Select the PTZ camera through the direction buttons and then press “PTZ” button to go to the PTZ control mode. Press the direction buttons to move the PTZ camera; press “Preset”+ “digital number” (e.g. 3) to call preset 3; press “Cruise” + “digital number” (eg.1) to call cruise 1. Note that the corresponding preset and cruise must be set by mouse-click in advance, or they cannot be called.

Type II:



Button	Function
REC	Record manually
Search	Enter the search and backup interface
MEUN	Enter the main menu
Exit	Exit the current interface
ENTER	Confirm the choice or setup
Direction button	Move cursor in setup
ZOOM	Zoom in
PIP	Currently no function
  	Control playback. Play (Pause)/Next Frame/Speed Up/Stop/Previous Frame/Speed Down
  	
Multi	Choose multi-screen display mode
Next	Switch camera
SEQ	Go to sequence view mode
INFO	Get information about the device

Playback control: the operations are the same as above.

PTZ control: select the PTZ camera and then press “Enter” to go to the PTZ control mode. Press the direction buttons to move the PTZ camera.

Note: Before using the remote controller without digital numbers, you need to log in the device by mouse-click first. Then turn the IR sensor of the remote controller towards the IR receiver of the NVR to control it.

2.3 Mouse Control

➤ Mouse control in Live Display & Playback interface

In the live display & playback interface, double click on any camera window to show the window in single screen mode; double click the window again to restore it to the previous size.

In the live display & playback interface, if the interfaces display in full screen, move the mouse to the top of the interface to have the tool bar appear. The tool bar will disappear automatically

after you move the mouse away from it; move the mouse to the right side of the interface to pop up a panel and the panel will disappear automatically after you move the mouse away from it.

➤ Mouse control in text-input

Move the mouse to the text-input box and then click the box. The input keyboard will pop up automatically.

Note: Mouse is the default tool for all operations unless an exception is indicated.

2.4 Text-input Instruction







The interface has two types of input boxes. Refer to the above pictures. The left box is the number-only input box and the right box provides inputs of numbers, letters and punctuation characters. The introductions of keys on the input boxes are shown below.

Button	Meaning	Button	Meaning
	Backspace key		Switch keyboard to see more punctuation characters
	Delete Key		Enter key
	Switch between upper and lower letter		Space key
	Switch language		




2.5 Common Button Operation

Button	Meaning
	Click to show the menu list.
	Click to change the sequence of the list.
	Click to change the camera displaying mode.

	
	Click to close the current interface.
	Click to go to the earliest date of camera recording.
	Click to go to the latest date of camera recording.


3 Wizard & Main Interface

3.1 Startup Wizard

The disk icons will be shown on the top of the startup interface. You can view the number and status of each disk quickly and conveniently through these icons (: no disk; : unavailable disk; : RW available disk).

You can quickly configure the NVR by wizard setup to make the NVR work normally. You must configure the wizard if you start the NVR for the first time (or click “Skip” to cancel the wizard until the next time you login). Maybe different versions have different wizard steps. The following steps are for reference only.

- ① Choose the language and locality as needed if it is the first time for you to use the wizard and then read the privacy statement, checkmark “*I have read and agree*” and click “OK”.
- ② **Date and Time Configuration.** The date and time of the system needs to be set up if you use the wizard for the first time. Refer to the following figure. Set the time zone, system time, date format, time format and video format. The DST will be enabled by default if the time zone selected includes DST. Click “Next” to continue.

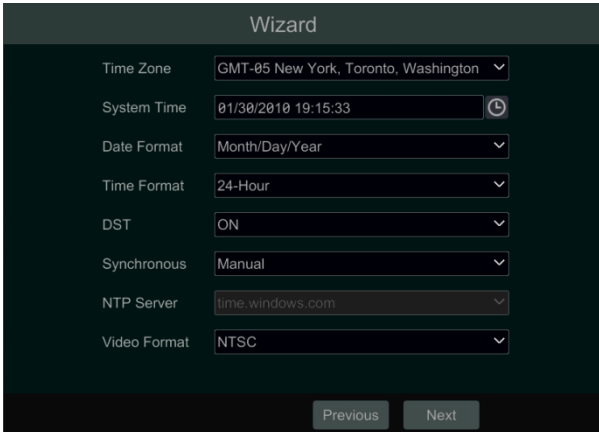


The screenshot shows a 'Wizard' configuration window with the following settings:


Setting	Value
Time Zone	GMT-05 New York, Toronto, Washington
System Time	01/30/2010 19:15:33
Date Format	Month/Day/Year
Time Format	24-Hour
DST	ON
Synchronous	Manual
NTP Server	time.windows.com
Video Format	NTSC

At the bottom of the window, there are two buttons: 'Previous' and 'Next'.

- ③ **System Login.** Set your own password when you use the wizard for the first time (the default username of the system is *admin*); select the login username and enter the corresponding password next time.

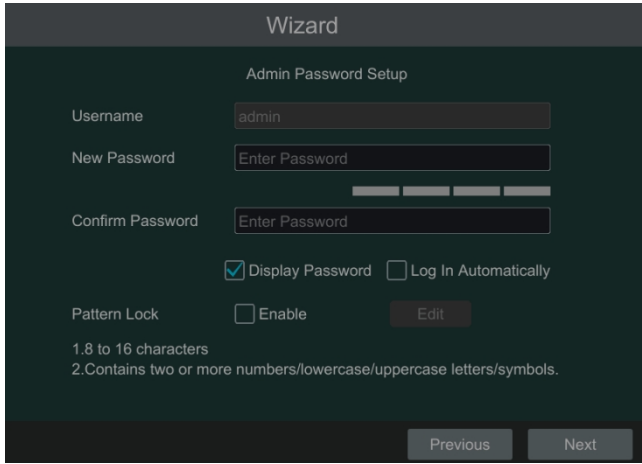

Enable pattern lock and click “Edit” to set the pattern lock.

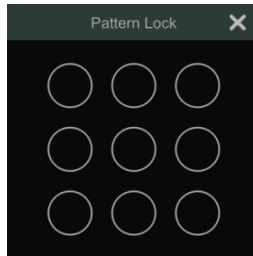

Click “Next” to set questions and answers for password security of admin. If you forget the password, please refer to Q4 in [Appendix A FAQ](#) for details.

Click “Next” to continue.

④ **Disk Settings.** You can view the disk number, disk capacity of the NVR and serial number, R&W status of the disk. Click “Format” to format the disk. Click “Next” to continue. Then click “Wizard Setup”.

⑤ **Network Settings.** Select the network parameters as required. Select the work pattern: Network Fault Tolerance and Multiple Address Setting are available. Refer to the pictures below. Check “Obtain an IP address automatically” and “Obtain DNS automatically” to get the IP address and DNS automatically (the DHCP function of the router in the same LAN should also be enabled) or manually enter them. Enter the HTTP port, HTTPS port and Server port (please see [Port Configuration](#) for details). Please refer to [TCP/IP Configuration](#) for more detailed information.

Click “Next” to continue.

Wizard

Network Settings > Disk Mode > QRCode > Cloud Upgrade

Work Pattern: **Multiple Address Setting** (Modifying work pattern need to reboot)

NICs: Ethernet Port 1 (Online)

Obtain an IP address automatically

Address: 0 . 0 . 0 . 0

Subnet Mask: 0 . 0 . 0 . 0

Gateway: 0 . 0 . 0 . 0

Obtain DNS automatically

Preferred DNS:

Alternate DNS:

Default Route: Ethernet Port 1

Port

HTTP Port: 80 HTTPS Port: 443

Server Port: 6036

Previous Next Cancel

Wizard

Network Settings > Disk Mode > QRCode > Cloud Upgrade

Work Pattern: **Network Fault Tolerance** (Modifying work pattern need to reboot)

Bonds: **Bond 1 (Online)**

Obtain an IP address automatically

Address: 10 . 15 . 1 . 200

Subnet Mask: 255 . 255 . 255 . 0

Gateway: 10 . 15 . 1 . 1

Obtain DNS automatically

Preferred DNS: 8 . 8 . 8 . 8

Alternate DNS:

Primary Card: Ethernet Port 1


Ethernet Port 1 (Online) Ethernet Port 2 (Offline)



MAC Address: 00 : 18 : AE : 29 : 10 : 2C MAC Address: 00 : 18 : AE : 29 : 10 : 2D


Default Route: Bond 1

Previous Next Cancel


⑥ **Add Camera.** Click “Refresh” to refresh the list of online IP cameras which are in the same local network with NVR.


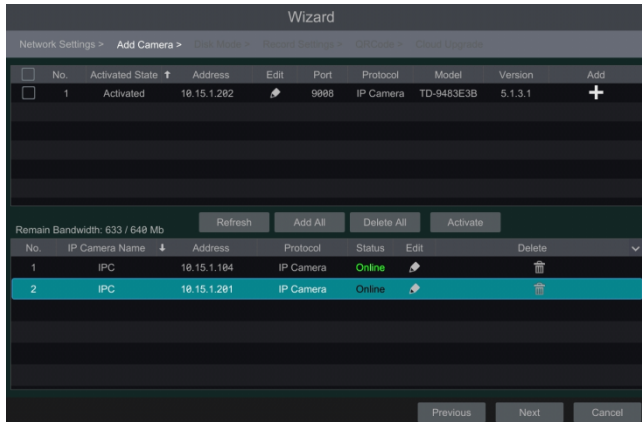



In the above interface, the device activation state can be viewed. For the activated device, you can click  to add the searched camera. Click “Add All” to add all the cameras in the list. If the default password is not used by the activated device, you need to modify it manually. Click  to delete the added camera. Click “Delete All” to delete all the added cameras. For the unactivated devices, you can activate one by one or in batches. Check the unactivated device, click “Activate” to pop up an activation box.

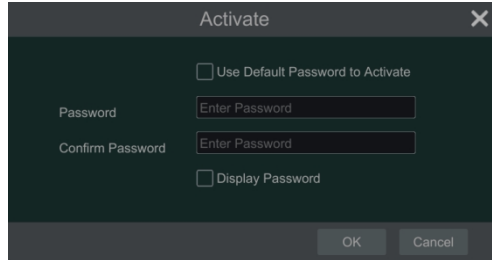

You can use default password to activate. If your camera needs to be activated by self-defined password, you need to manually enter the password to activate.


Click  to edit the searched IP camera as shown on the below left. Enter the new IP address, subnet mask, gateway, username and the password of the camera. Click “OK” to save the settings.

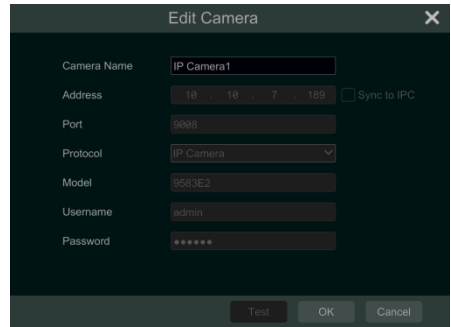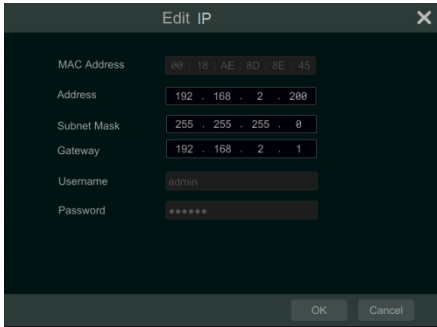

Click  to edit the added camera as shown on the above right. Enter the new camera name, IP address, port, username and the password of the camera. You can check “Sync to IPC” to modify the IP address of the IPC via different network segments for being in the same network segment with the NVR. Then click “Test” to test the connection. Click “OK” to save the settings. You can change the IP camera name only when the added camera is online. Click “Next” to continue.


- ⑦ **Disk Mode.** Click “Enable RAID” to enable the RAID function. Click “Next” to continue.
- ⑧ **Create an array.** Set the array name and select array type which includes RAID0, RAID1, RAID5, RAID6 and RAID10. The global hot spares and array capacity can also be viewed here. See [Disk](#) for details. Click “Next” to continue.

- ⑨ **Record Settings.** Two record modes are available: auto and customization.
Auto: Select one auto mode in the interface as shown below and then click the “Next” to save the settings. Click “Advanced” to self-define record mode. See [Mode Configuration](#) for details.

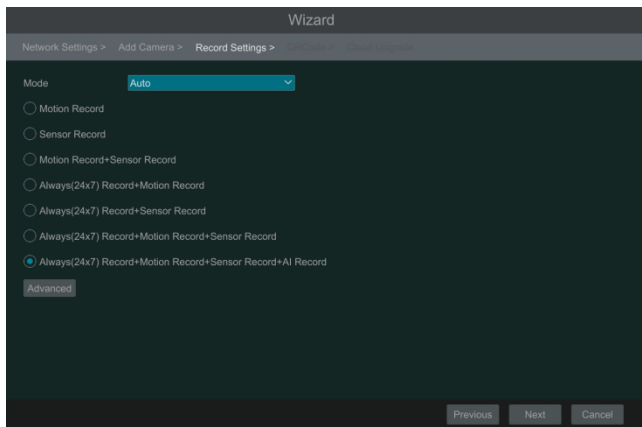

Customization: Set the “Sensor Record”, “Motion Record”, “AI Record”, “POS Record” and “Schedule Record” of each camera. Click “OK” to save the settings. See [Mode Configuration](#)

for details.

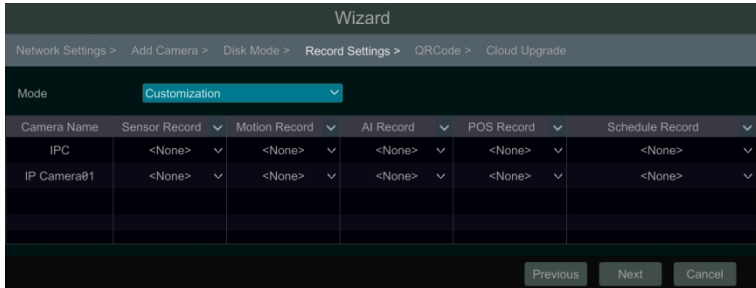


⑩ **QR Code.** Enable the NAT function in the interface or set it in the network configuration after exiting the wizard (please refer to [NAT Configuration](#) for details). You can scan the QR Code through mobile client which is installed in the mobile phone or tablet PC to log in the mobile client instantly. Please refer to [Mobile Client Surveillance](#) for details. Click “OK” to save the settings.







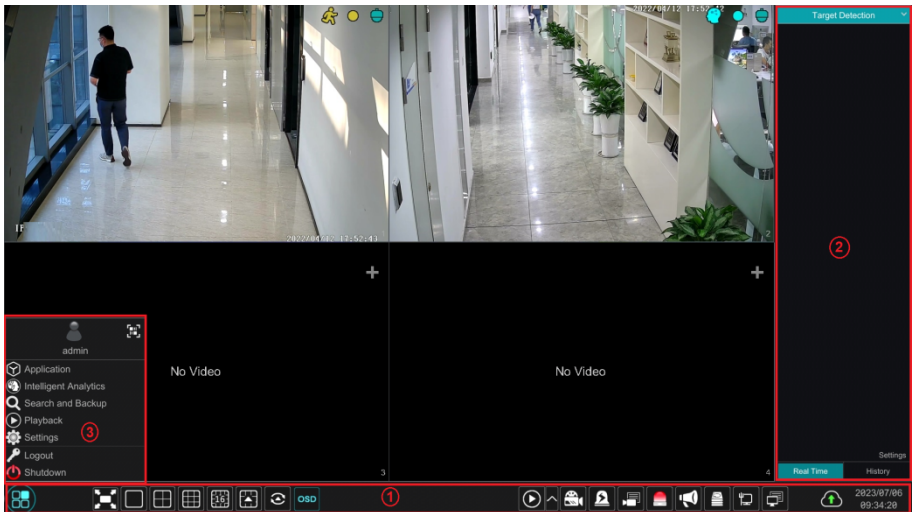










⑪ **Cloud Upgrade.** Enable “Cloud Upgrade” and then click “OK” to save. If this function is enabled, you can get the latest version from the cloud server. Please refer to [Cloud Upgrade](#) for details. Only user levels with “Network” access will be able to enable/disable cloud upgrades.

3.2 Main Interface


3.2.1 Main Interface Introduction



The buttons in area ① are described in the table below.


Button	Meaning
	Start button. Click to pop up area ③.
	Full screen button. Click to show full screen; click it again to exit the full screen.
	Screen mode button.
	Dwell button (see Quick Sequence View and Scheme View In Sequence for details).
	Click to enable OSD; click again to disable OSD.
	Click  to set the default playback time before starting instant playback (Instant Playback) or going to the playback interface for playback operations (Playback Interface Introduction); click  to go to the playback interface. For instance, if you choose “5 minutes ago” as the default playback time, you can playback the recording from the past five minutes.
	Manual record button. Click to enable/disable record.
	Manual alarm button. Click to trigger or clear the alarm-out manually in the popup window.
	Record status button. Click to view the record status.
	Alarm status button. Click to view the alarm status.
	Voice broadcast button. Click to select the channel to broadcast.
	Disk status button. Click to view the disk status and RAID status.
	Network status button. Click to view the network status.
	Information button. Click to view system information.
	Click to enable the cloud upgrade feature.


Note: Different models may have different buttons on the live view interface. See the following picture. All pictures in this manual are for reference only; the real product shall prevail.

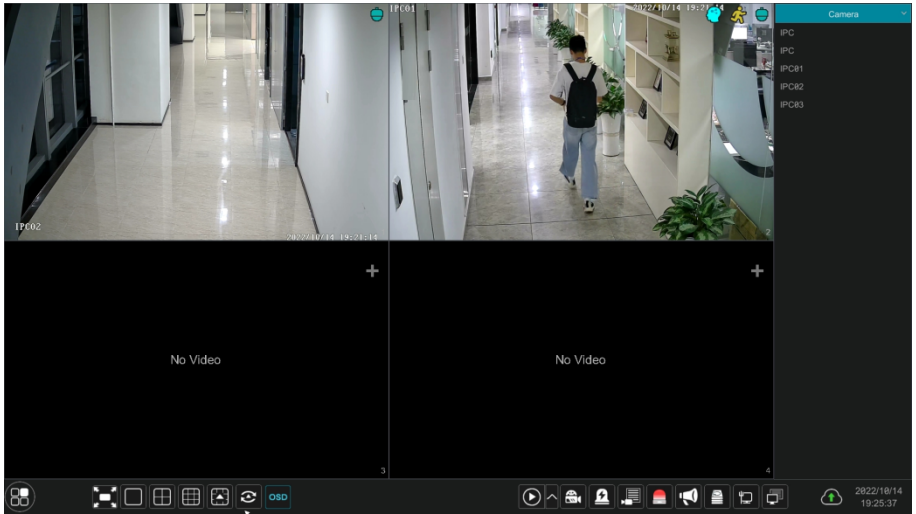


Introduction of area ②:


Area ② is hidden by default. Move the cursor to the right to reveal this area. Click “Camera” to view all the added cameras in the camera list. Select one camera window on the left side of the interface and then double click one camera in the list to preview the camera image in the selected window.

Click  on the top right corner and then select “Single Channel Sequences” to view all the added groups in the group list; click one group in the list to view all the added cameras in the group (refer to [Add/Edit Camera Group](#) for detail configuration of the camera group). Select one camera window on the left side of the interface and then double click one group in the group list to preview the cameras’ images one by one in the selected window.

Click  on the top right corner and then select “Customize Display Modes” to view all the display modes in the display mode list (refer to [Preview by Display Mode](#) for detail configuration of the display mode). Double click one display mode in the list to switch to the display mode for previewing.

Click  on the top right corner and then select “Target Detection” to go to target detection interface. This tab will show the captured humans, vehicles, license plates and face images. (This function is only available for some models). Note that only some models support multi-channel target detection display.


Introduction of area ③:

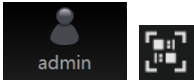Icon / Button	Meaning
	It shows the current login user. Click the QR code icon to view the QR code and security code. Users can quickly add the NVR to the server list of the mobile APP by scanning this QR code.

Icon / Button	Meaning
Intelligent Analytics	Click to go to the intelligent analytics interface.
Application	Click to set parking lot, access control, face attendance and face check-in (depending on models)
Search and Backup	Click to go to record search and backup interface, see Record Search, Playback & Backup for details.
Playback	Click to go to playback interface (click on the tool bar at the bottom of the live view interface to set the default playback time), see Playback Interface Introduction for details.
Settings	Click to open the setup panel, see Setup Panel for details.
Logout	Click to log out the system.
Shutdown	Click it and then select “Logout”, “Reboot” or “Shutdown” in the popup window.


3.2.2 Setup Panel

Click **Start** → **Settings** to open the setup panel as shown below.

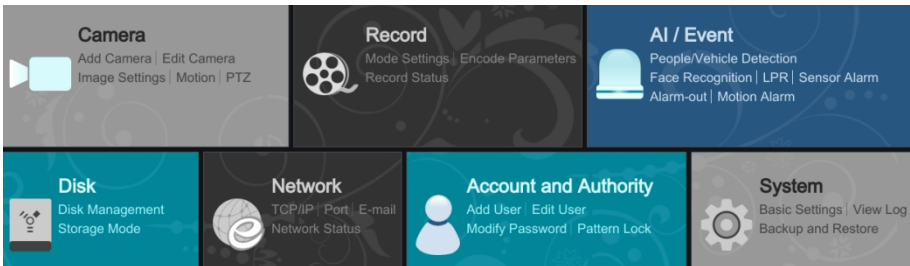


The setup panel includes seven modules. Each module provides some functional entries with links for convenient operation.

Here we take **Camera** module as an example. The **Camera** module provides convenient links such as “Add Camera”, “Edit Camera”, “Image Settings”, “Motion” and “PTZ”. Click **Camera** to go to the camera management interface as shown below.

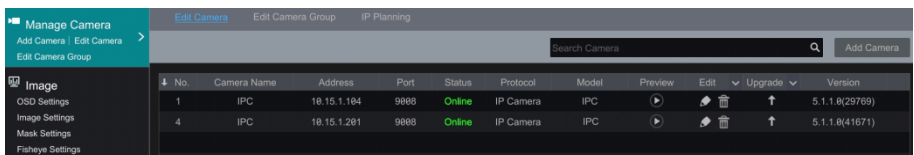

There are some function items on the left side of the camera management interface. Click each

item to go to the corresponding interface or window. For instance, click “Add Camera” to open the window as shown below.

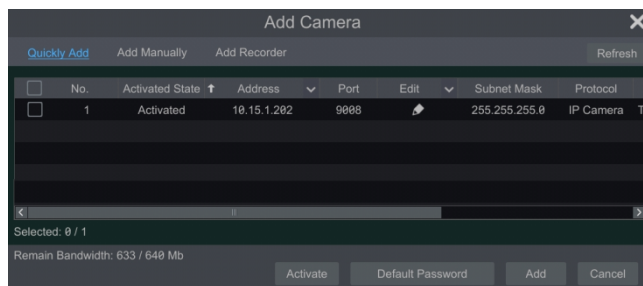

Click the main menus on the top of the camera management interface to go to corresponding interfaces. Refer to the picture below. For instance, you can go to system setup interface by clicking “System” tag.



3.2.3 Main Functions

➤ Camera

The module covers the functions such as **Camera Management** (see [Camera Management](#) for details), **Image Settings** (see [Preview Image Configuration](#) for details), **Motion Alarm** (see [Motion Alarm](#) for details), and **PTZ** (see [PTZ](#) for details) and so on.

➤ Record

The module covers the functions such as **Encode Parameters** and **Record Schedule** and so on. Please see [Record & Disk Management](#) for details.

➤ AI/Event

The module covers the functions such as **Smart Event**, **Combination Alarm**, **Exception**, **Sensor and Motion Alarm Handling** and **Alarm Out Settings**. Please see [AI Event Management](#) and [General Event Management](#) for details.

➤ Disk

The module covers functions such as **Disk Management**, **Storage Mode** and **Disk Information** and so on. Please see [Record & Disk Management](#) for details.

➤ Network

The module covers the functions such as **TCP/IP**, **DDNS**, **Port**, **E-mail** and **Network Status** and so on. Please see [Network Configuration](#) for details.

➤ **Account and Authority**

The module covers the functions such as *Account Management* (see [Account Management](#) for details) and *Permission Management* (see [Permission Management](#) for details) and so on.

➤ **System**


The module covers the functions such as *Basic Configuration* (see [Basic Configuration](#) for details), *Device Information* (see [View System Information](#) for details), *Log Information* (see [View Log](#) for details) and *Configuration File Import & Export* (see [Backup and Restore](#) for details) and so on.


4 Camera Management

4.1 Add/Edit Camera


4.1.1 Add Camera

The network parameters of the NVR should be set before adding an IP camera (see [TCP/IP Configuration](#) for details).


Refer to the pictures below. Click **Add Camera** in the setup panel or  in the top right corner of the preview window to open the “Add Camera” window as shown below. You can quickly add from a list, or add the IP camera manually.

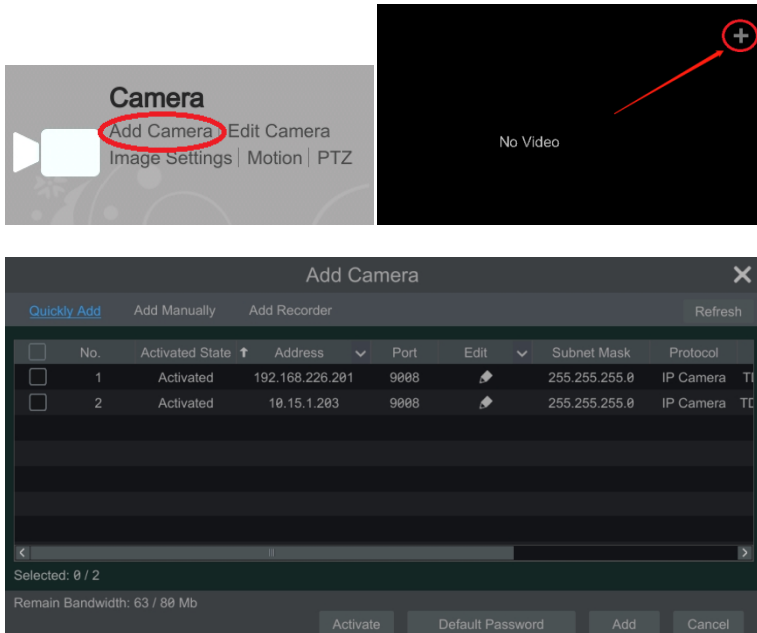



➤ Quickly Add

Check the cameras and then click “Add” to add cameras. Click  to edit the camera’s IP address, subnet mask and gateway as needed. Click “Refresh” to refresh the device list. Click “Default Password” to set the default username and password of each camera.

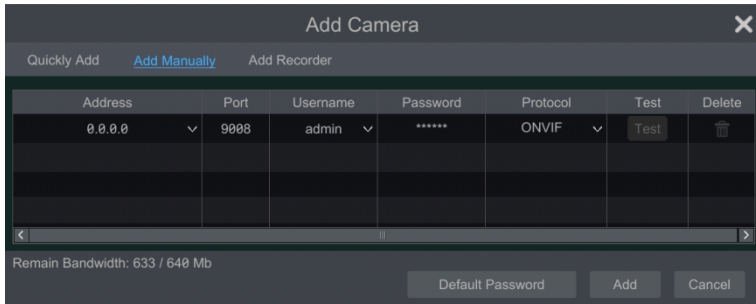If the activation state is “Unactivated”, you can check the device and click “Activate” to activate it.




➤ **Add Manually**

Enter the IPv4/IPv6 address or domain name (click  in the IP address column to open the IPv4/IPv6/domain name input window), port, username and password of the camera and then select the protocol. Click “Test” to test the accuracy of the input information and then click the “Add” button (you can input one camera’s information or above such as IP address, username and password before clicking the “Add” button). Click  to delete the camera. Click “Default Password” to set the default username and password of each camera.

Note: Some models may not support this function.


Click *Start* → *Settings* → *System* → *Basic* → *General Settings* to check “Enable Add IPC by Zero Operation”. If the NVR has unoccupied channels, it can add IPC without any operation by restarting.

➤ **Add Recorder**

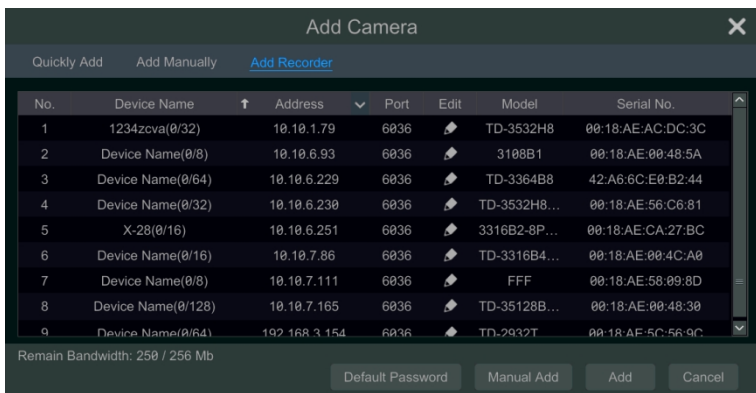

- Quickly Add: Select the searched NVR/NVR and the click “Add” to add NVR in the same local network.
- Manually Add: Click “Manual Add” and then enter the IP address or domain name,


port, username and password of the NVR/NVR. Check the added remote channel number and click “Test”. Then click “OK” to return to the previous interface.

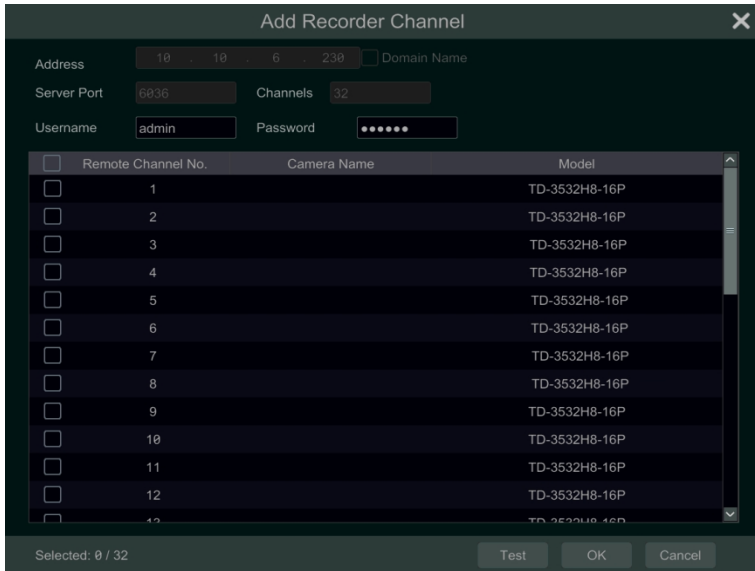

Note: IPC from other NVR/DVR on the same local network can only be added if your NVR has open channels and the added IPCs support previewing and recording.

4.1.2 Edit Camera

Click “Edit Camera” in the setup panel to go to the interface as shown below. Click to view the live image of the camera in the popup window. Click to edit the camera (see *Add camera* in [Startup Wizard](#) for details). Click to delete the camera. Click in the “Edit” header line and then click “Modify IPC Password” to open a window(check the IPCs in the window, set the new password and then click “OK”; only the online IPCs’ passwords can be modified and a batch of IPCs’ passwords can be modified at the same time). Click to upgrade an online IPC (or click in the “Upgrade” header line and then click “IPC Batch Upgrade” to upgrade a batch of IPCs), select the device which stores the upgrade file in the “Device Name” item of the popup window and the upgrade file in the list(you should select the upgrade IPC model in the window if a batch of IPCs’ passwords need to be modified) and then click “Upgrade” to start upgrading(the IPC will restart automatically after the upgrade is completed successfully).

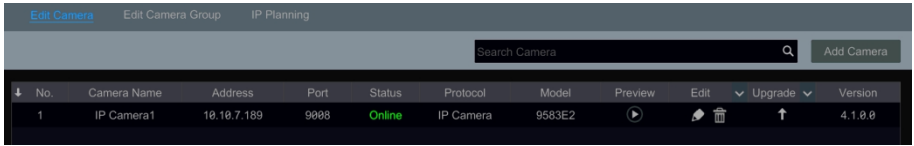


4.2 Add/Edit Camera Group

4.2.1 Add Camera Group


Click “Edit Camera Group” in the above interface to go to the interface as shown below.




Click “Add Group” to open the window as shown below. Set the group name and dwell time (the dwell time of the camera group sequence view) in the window. Check the cameras and then click “Add” to add group. Click to view the cameras in the group after adding group.

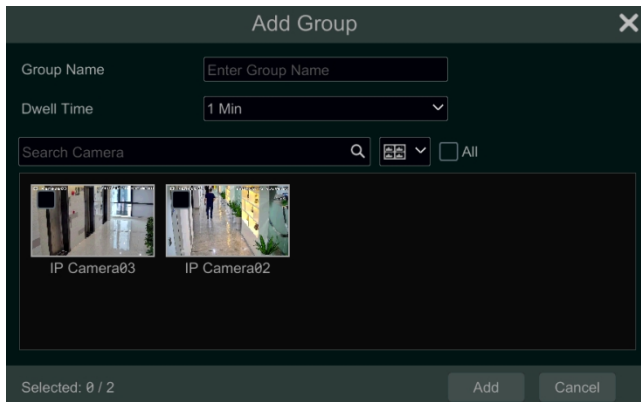

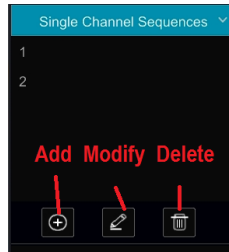


You can also add the camera group in the live view interface. Click on the top right corner of the live view interface and then select “Single Channel Sequences”. Click to add the camera group

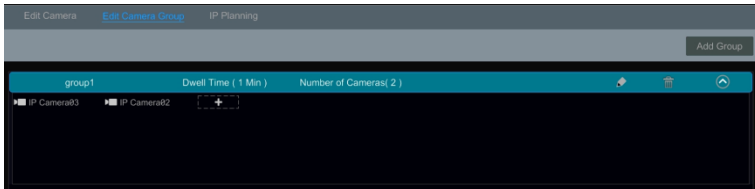

4.2.2 Edit Camera Group




Click  to modify the group information such as group name and dwell time. Click  to delete the group. Click  to add cameras to the group.


4.2.3 IP Planning



Some models may not support this function.

Click “IP Planning” to go to the interface as shown below. This function supports searching other NVRs/DVRs that is in the same local network as the local NVR. You may add the IPC of other NVRs/DVRs into the unoccupied channels of the local NVR.

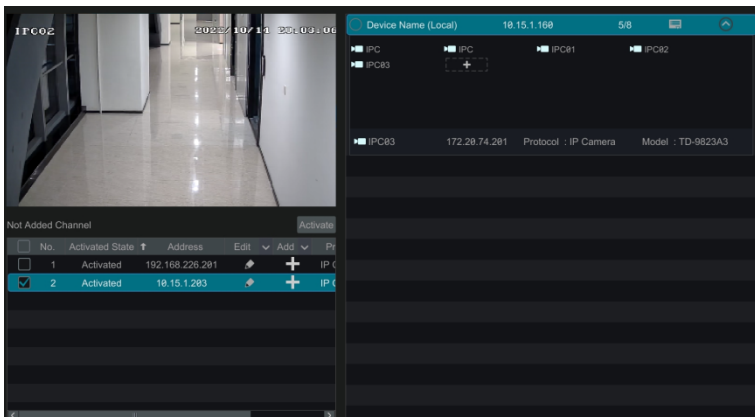For the searched channel, if its state is “unactivated”, you can activate it first and then add it.




Click  to edit the IP address, user name or password and other information of the NVRs.

Click  behind the “Add” button to add the IPC selected and the user may edit the IP address, user name or password by clicking  behind the “Edit” button.

5 Live View Introduction





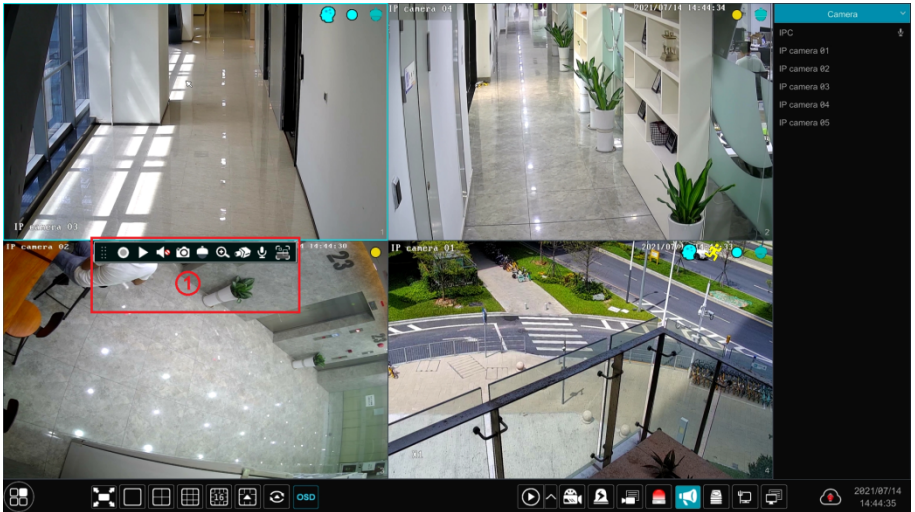

5.1 Live View Interface Introduction



You should add a camera when first logging on to the system (see [Add Camera](#) for details). Refer to the interface as shown below and drag one camera in the preview window to another window to exchange windows. Click **OSD** button and then you can view the record symbols. The record symbols with different colors in the live view window refer to different record types when recording: green stands for manual record, red stands for sensor-based record, yellow stands for motion-based record, blue stands for schedule record, cyan stands for AI record.



Click the preview window to show the tool bar as shown in area ①; right click the preview window to show the menu list. The tool bar and menu list are introduced in the table below.

Button	Menu List	Meaning
	--	Move tool. Click to move the tool bar anywhere.
	Manually Record On	Click to start recording.
	Instant Playback	Click to playback the record; click “Instant Playback” to select or self-define the instant playback time. See Instant Playback for details.
	Enable Audio	Click to enable audio. You can listen to the camera audio by enabling audio.
--	Original Proportions/ Overspread window	Click to select the display proportion of the window.

Button	Menu List	Meaning
	Snapshot	Click to pop up the snap window. Click “Save” in the window to save the image. Click “Export” to export the image.
	PTZ Control	Click to go to PTZ control interface. See PTZ for details.
	Zoom In	Click to go to single channel amplification interface.
	--	Click to go to image adjustment interface. Refer to Image Adjustment for details.
	Start/Close Talk	Click to start talk.
	Target detection	Click to go to single channel target detection interface; the target includes faces, human bodies and vehicles.
--	Camera Info	Click to view the camera information.


The single channel zoom amplification interface is as shown below. Press and drag the blue box to select the area to zoom in. Click  /  to zoom the image. Click the camera selection box to select other cameras for amplification. Click “Back” to return to the live view interface.



5.2 View Mode



5.2.1 Preview by Display Mode

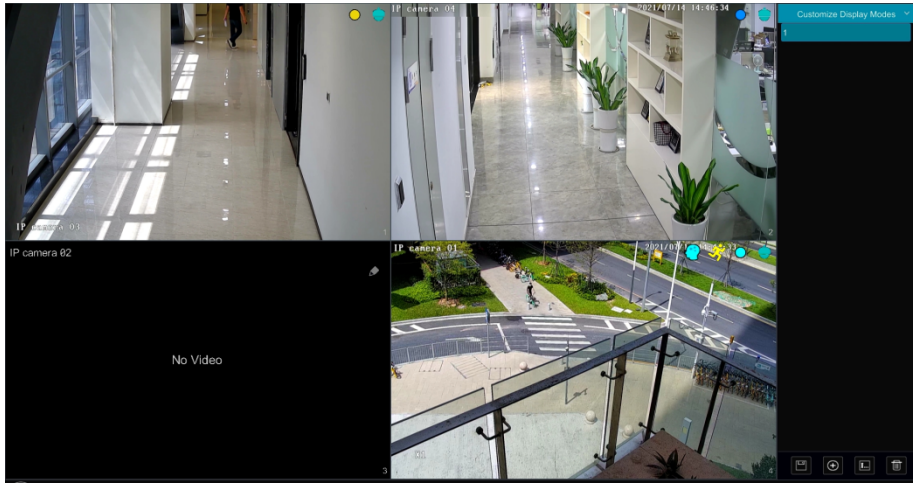Set different screen modes and camera display sequences as needed and then save the display modes classified by surveillance areas, priorities and so on. Refer to the picture below. Double click one display mode in the display mode list to view the live images in this mode.




➤ Add Display Mode



Method One:

- ① Click “Customize Display Modes” in the above interface
- ② Click  to add a display mode name and then set the screen mode.
- ③ Add the cameras and adjust the cameras’ display sequence as required.
- ④ Click  under the display mode list.

Method Two:

- ① Click *Start* → *Settings* → *System* → *Basic* → *Output Settings* to go to the interface and then set the screen mode.
- ② Double click the camera or camera group in the list to add them to the selected window.
- ③ Click  to save the current display mode (refer to [Scheme View In Sequence](#) for detail configurations). The display mode will be saved and displayed in the display mode list in the live view interface.


➤ Edit Display Mode

Click “Customize Display Modes” tab in the live view interface and then select one display mode in the list. Click  to edit the display mode name; click  to delete the display mode.

➤ Corridor Pattern

Some models may not support this function.


Select corridor pattern in display mode. You can change the direction of the video image by using this function. Please refer to User Manual of the relevant camera.

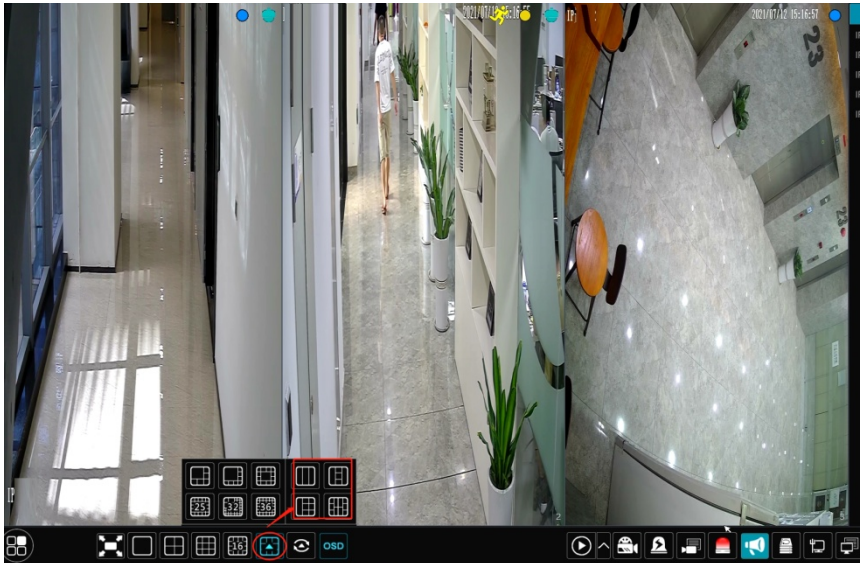

Change to corridor mode

➤ Fisheye Mode


In the live view interface, select the view mode according to the installation mode and display mode of the fisheye camera. Please refer to the User Manual of the relevant fisheye camera.

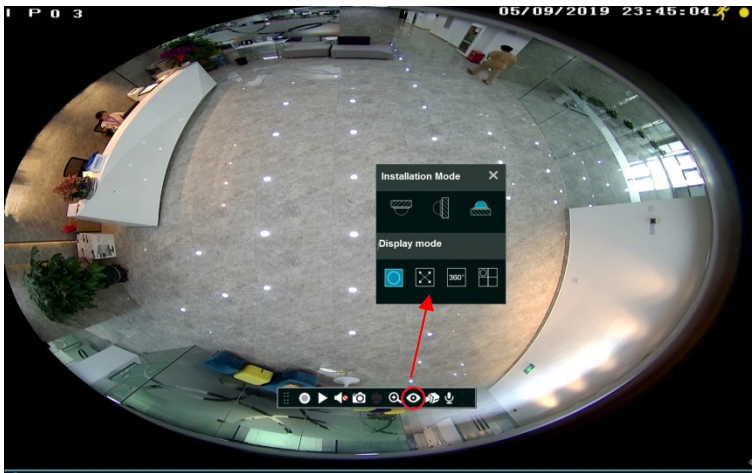




In addition, if this function is unavailable in the device, you can set the display mode and the installation mode via Web Client. To log in the web client, please refer to [Remote Surveillance](#) for details.

5.2.2 Quick Sequence View

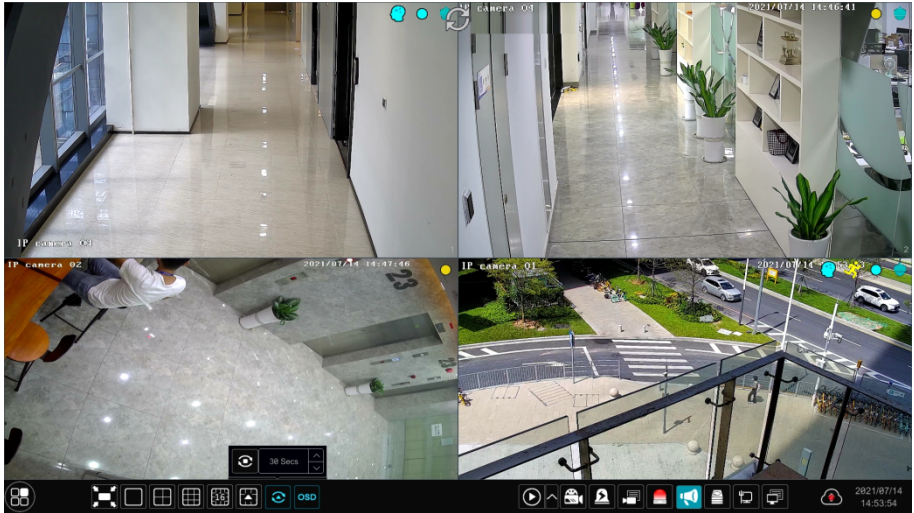You can start quick sequence view if the scheme has not been created. If the scheme has been created, please refer to [Scheme View in Sequence](#) for details.




Go to the live view interface and then click  to open a small window. Set the dwell time in the window and then click  to view the live group by group according to the camera number of the current screen mode. Double click the sequence view interface to pause the view; double click again to restore the view. Click  to stop the view.




5.2.3 Camera Group View in Sequence

You can start camera group view in sequence if camera group has been created (see [Add Camera Group](#) for details).

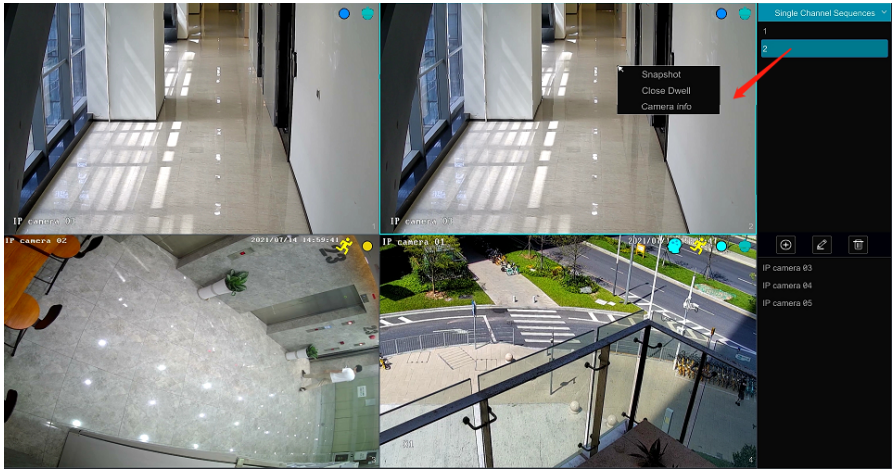

- ① Go to the live view interface and then select a camera window.




② Double click one camera group on the right side of the interface. The cameras in the group will start the camera group view one by one in the selected camera window. You can also drag the group directly to any preview window. Right click on the group view window and then click “Close Dwell” to stop the view.



Click  to add camera group. Select a group and click  to modify the group name and dwell time; Select a group and click  to delete the group.

5.2.4 Scheme View in Sequence

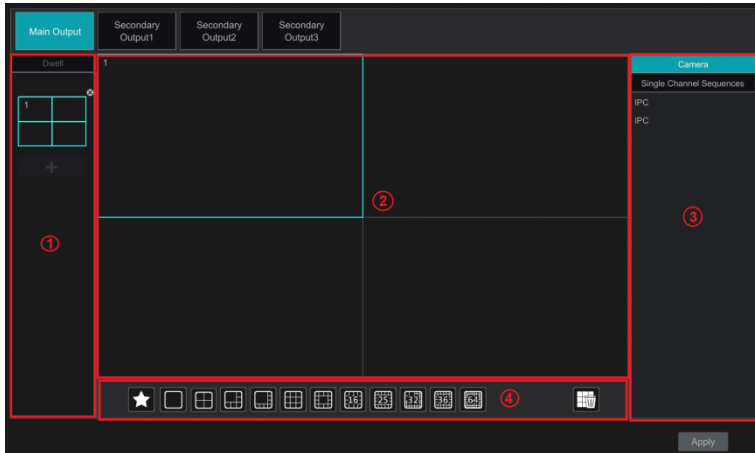
Click *Start* → *Settings* → *System* → *Basic* → *Output Settings* to go to the interface as shown below. Area ① displays all the dwell schemes; area ② shows the detailed information of the scheme; area ③ displays all the cameras and groups; area ④ is the tool bar (: clear button; : favorite button, click to open a window, enter the display mode name in the window and then click “OK” to save the current display mode; other buttons are screen mode buttons).






➤ Add Scheme

Click  in area ① to create a new scheme. Click  on the top right corner of the scheme to delete it.

➤ Configure Scheme


- Select a scheme in area ① and then click the screen mode button on the tool bar to set the screen mode of the scheme.
- Select a camera window in area ② and then double click the camera or group in area ③. The camera or group will be added into the selected window. You cannot repeat a camera in the same scheme. You can click the right-click menu “Clear” in area ② to remove a single camera or click  to remove all the cameras.
- Click “Apply” to save the settings.

➤ Start Sequence View

Go to the live view interface and then click  to open a window. Set the dwell time in the window and then click  to start scheme view in sequence. Double click the sequence view interface to pause the view; double click again to restore the view. Click  to stop the view.

Note:

You can set the secondary output preview if the NVR has dual outputs. Refer to the interface as shown below.

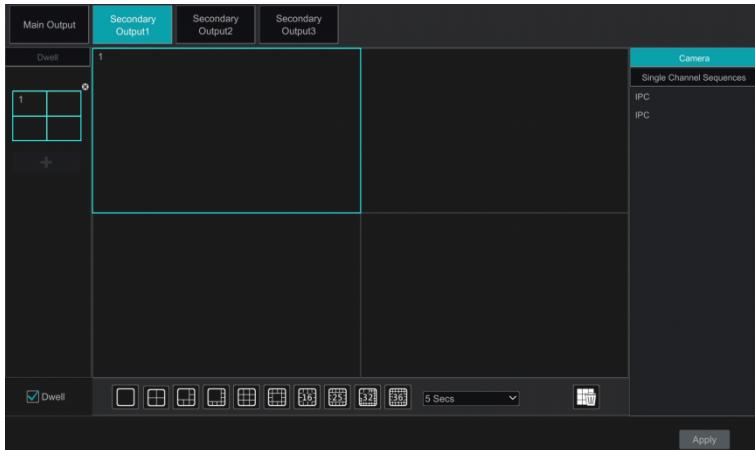


Check “Dwell” and then set scheme view in sequence of the adjuvant output. The setting steps are similar to those of the main output.

Set quick sequence view if “Dwell” is not checked. The setting steps are as follows:

- ① Set screen mode by clicking the relevant buttons on the tool bar.
- ② Select one window and then double click one camera or group in the list.
- ③ Click “Apply” to save the settings after adding cameras or groups to the windows.


5.3 POS Settings

- ① Click **Start** → **Settings** → **Basic** → **POS Settings** to go to the interface.
- ② Enable POS and click “Configure” under “Connection Settings” to go to the following interface. The connection method includes TCP Server, TCP Client, UDP and Multicast.
- ③ Enter the IP address of the POS you want to add.
- ④ Check “POS port” and then enter POS port.

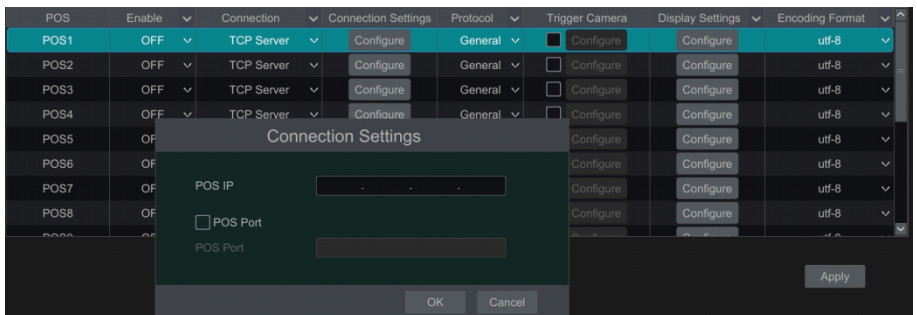


- ⑤ Select the POS protocol.
- ⑥ Check “Trigger Camera” and click “Configure” under it to bind POS to the camera. One

POS can be bound for multiple channels, but one channel can only be bound to one POS.

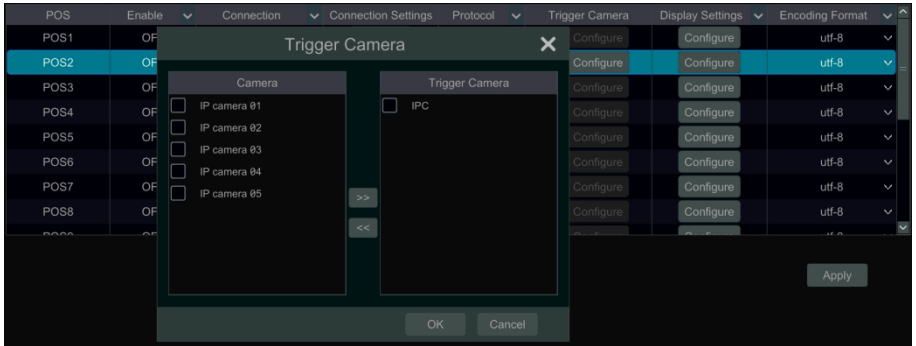

⑦ Click “Configure” under “Display Settings” to set the general settings, the position and display color of the POS information. Set the start character and the end character and display time-out period in the general settings interface. Drag your mouse to set the position of the POS information in the display position interface. Then click “OK” to confirm your settings.

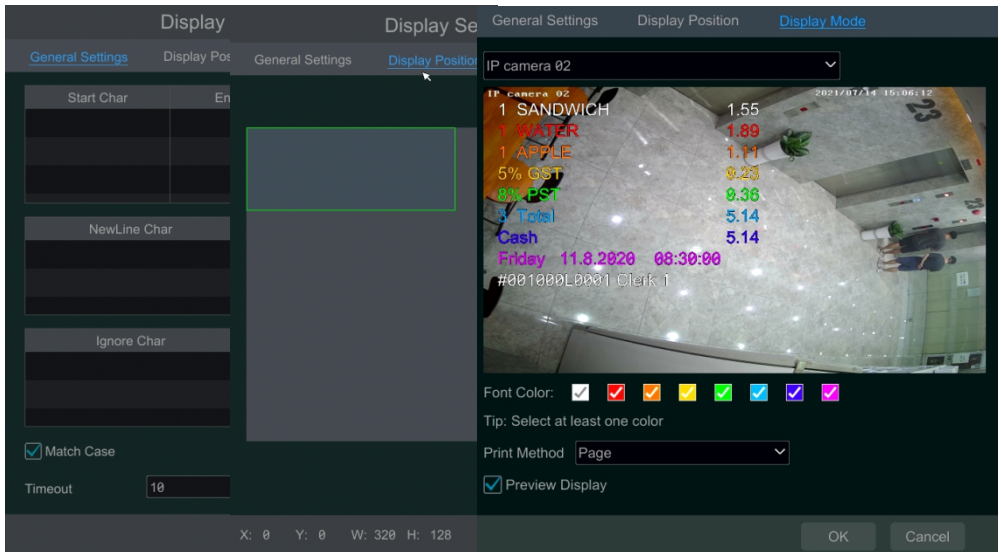


Click the “Display Color” tag and then choose the color you want to display on the screen. Multi-color can be selected at the same time. In addition, print methods and preview display can be set here. If “Preview Display” is enabled, the POS contents can be displayed on the live view/playback interface.


⑧ Select the encoding format as needed.

- ⑨ Choose the manufacturer of the POS device.
- ⑩ Click “Apply” to save the settings and then the transaction information will be displayed on the preview image in real-time.

One POS is bound to one camera:

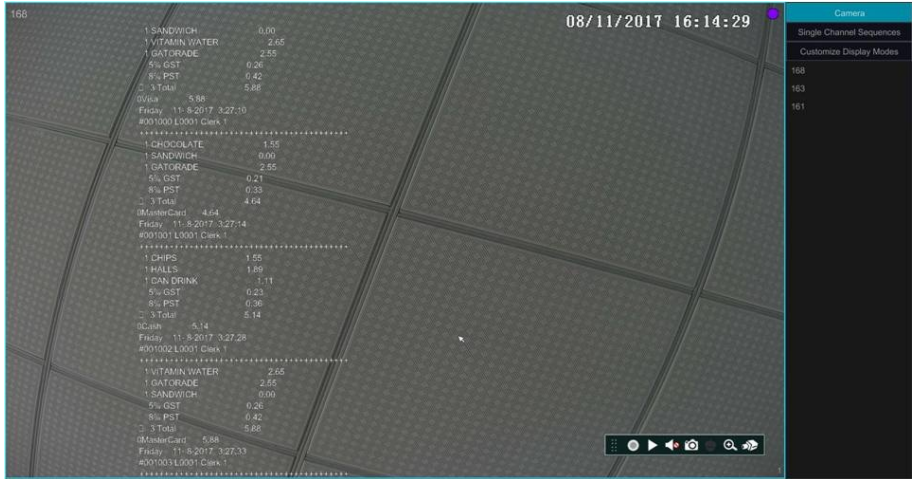


One POS is bound to multiple cameras:

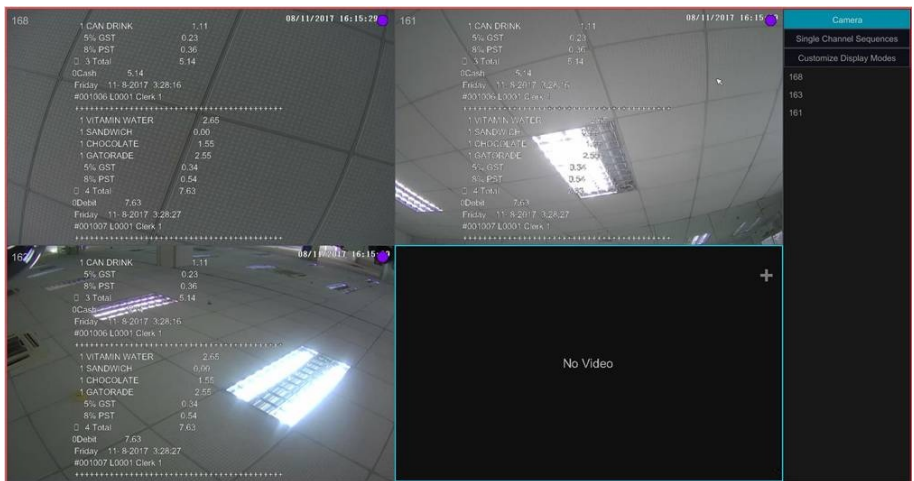

5.4 Preview Image Configuration


5.4.1 OSD Settings

Click **Start** → **Settings** → **Camera** → **Image** → **OSD Settings** to go to the interface as shown below.

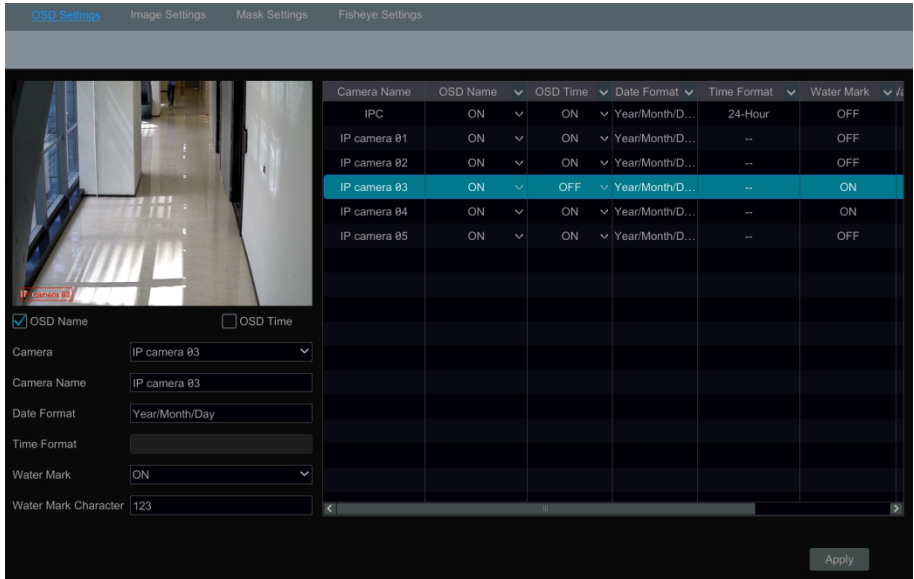


Select the camera, enter the camera name (or double click the camera name in the camera list to change the camera name), enable or disable the name and time OSDs (if enabled, drag the red name and time OSDs directly in the image view area to change the OSDs' display position) and select the date and time format (24h or 12h is optional). Additionally, water mark can be enabled or disabled here. Having enabled the water mark function, you can enter the information of the water mark as needed. Finally, click “Apply” to save the settings.

5.4.2 Image Settings


Click *Start* → *Settings* → *Camera* → *Image* → *Image Settings* to go to the following interface. Select the camera and then set the brightness, contrast, saturation and hue of the camera. Click the “Advanced” button or  in the camera list on the right side of the interface to open the “Image Adjust” interface and then set the relevant setting items. Please refer to [Image Adjustment](#) for detailed introductions of these items.

You can click “Default” to restore the image settings to the default factory settings.

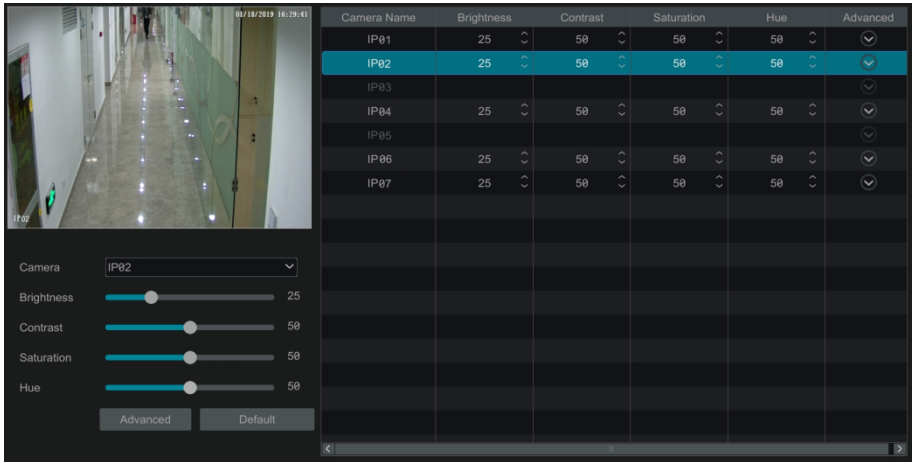

5.4.3 Mask Settings

Some areas of the image can be masked for privacy. Up to four mask areas can be set for each camera. Click **Start** → **Settings** → **Camera** → **Image** → **Mask Settings** to go to the interface as shown below.

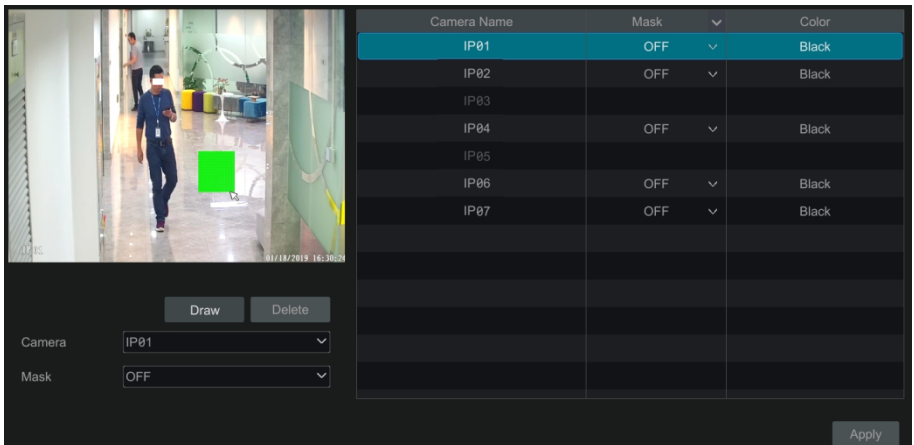

Select the camera and enable the mask. Click the “Draw” button and then drag the mouse on the image area to set the mask area; click the “Delete” button to delete the mask areas; click “Apply” to save the settings.

5.4.4 Fisheye Settings

Click **Start** → **Settings** → **Camera** → **Image** → **Fisheye Settings** to go to the interface as shown below. Select the camera and the mode of fisheye and installation.

Note: For some IPCs, if you have set HWDR in the NVR, these IPCs will automatically reboot after setting the following image parameters, including exposure/shutter mode, gain mode, gain, corridor pattern or smart IR. After these IPCs successfully reboot, HWDR will be disabled.



The introductions of these parameters are as follows:


Parameter	Meaning
Brightness	The brightness level of the camera's image.
Contrast	The color difference between the brightest and darkest parts.
Saturation	The degree of color purity. The image appears brighter than the purer the color is.
Hue	Relates to the total color degree of the image.
Sharpness	Relates to the resolution level of the image plane and the sharpness level of the image edge.
Wide Dynamic	The wide dynamic range (WDR) function helps the camera provide clear images even under back light circumstances. When there are both very bright and very dark areas simultaneously in the field of view, WDR balances the brightness level of the whole image and provides clear images with details.
Denoise	Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.
White Balance	Adjust the color temperature according to the environment automatically.
BLC	HLC: lowers the brightness of the entire image by suppressing the brightness of the image's bright area and reducing the size of the halo area. BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.
Corridor Pattern	0°, 90°, 180° or 270° can be selected. (Only some cameras support this pattern)
Image Mirror	Turn the current video image horizontally.
Image Flip	Turn the current video image vertically.
High FPS Mode	High frame rate mode, if it is enabled, the frame rate of the camera's main stream can be set to 1080P/720P @60fps/50fps. (Only some cameras support this mode)
Gain Mode	Choose "Auto" or "Manual". If "Auto" is selected, the gain value will be automatically adjusted according to the actual situation. If "Manual" is selected, the gain value shall be set manually. The higher the value is, the brighter the image is.
Infrared Mode	Choose "Auto", "On" or "Off" as needed.
Shutter Mode	Choose "Auto" or "Manual". If manual is chosen, the digital shutter speed can be adjusted.
Day & Night Mode	Choose "Auto", "Day", "Night" or "Timing" as needed.
White Light Mode	"Auto", "Manual" or "Off" can be selected. (Only some cameras support this mode).

Note: The above-mentioned descriptions of the image parameters are for reference only. The







cameras made by different manufacturers may have different parameter settings.

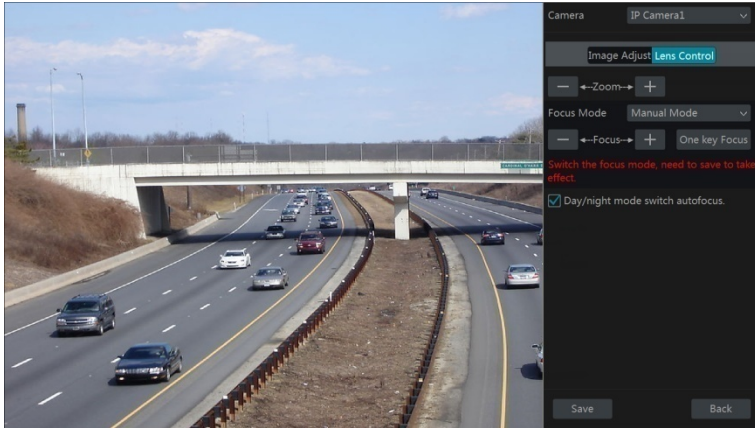➤ **Lens Control**

Select the camera and then click “Lens Control” to go to lens control tab. Click  or  to adjust the zoom and focus parameters of the camera’s lens. Click “Save” to save the settings.

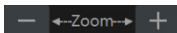

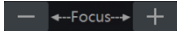The introductions of these parameters and buttons are as follows.


Button/Parameter	Meaning
	Click  /  to zoom in/out the image.
Focus Mode	If manual mode is selected, focus button & “One Key Focus” & “Day/night mode switch autofocus” will be available; if auto mode is selected, the time interval setup will be available.
	Click  /  to increase/decrease the focal length.
One key Focus	Click to focus instantly.
Day/night mode switch autofocus	If checked, the lens will focus automatically when the camera is switching day/night mode.
Time Interval	It is the time interval when camera lens is auto focusing. The interval can be set in the drop-down list.


Note: This function is only available for motorized zoom cameras.

6 PTZ


6.1 PTZ Control Interface Introduction

You can control the IP dome or PTZ connected to the IP camera for PTZ control.



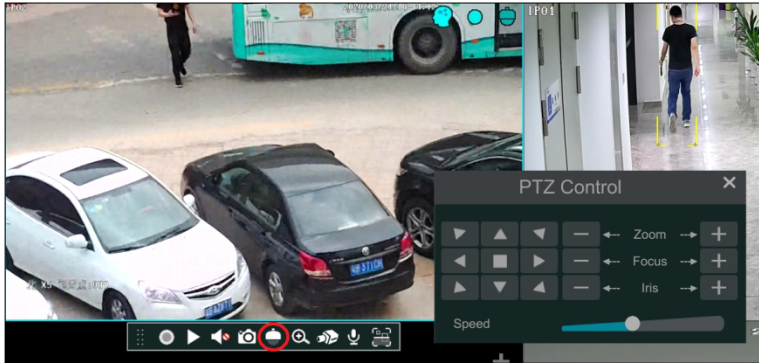



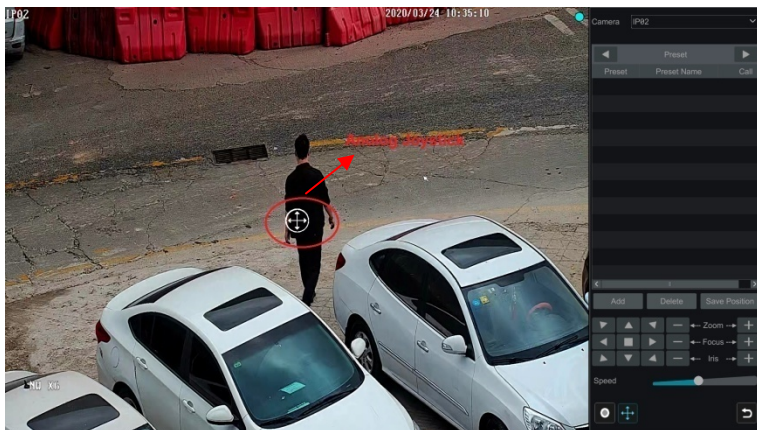



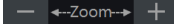













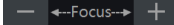


Click  on the tool bar at the bottom of the live preview window to go to the PTZ control interface as shown below.

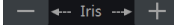

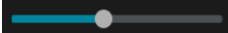The direction, zoom, focus, iris and speed can be controlled in the small PTZ control window. Right click the PTZ/speed dome camera window and select “PTZ Control” to go to the PTZ control panel as shown below.



Introductions of the buttons on the bottom right of the interface:

Button	Meaning
	Click  /  /  /  /  /  /  /  to rotate the dome. Click  to stop rotating the dome.
	Click  /  to zoom in / out the camera image.
	Click  /  to increase / decrease the focal length.
	Click  /  to increase / decrease the iris of the dome.
	Drag the slider to adjust the rotating speed of the dome.
	Click  /  to start / stop recording.
	Click  /  to hide / show the analog joystick.
	Click to return to the live view interface.

➤ Analog Joystick Control

The analog joystick on the left side of the interface provides quick PTZ control. The dome or PTZ will rotate when you drag the analog joystick. The farther you drag the analog joystick from the middle of the image, the faster the dome or PTZ rotates. The dome or PTZ will stop rotating when you stop dragging the analog joystick.

➤ 3D Control

Click the camera image on any area and then the image will be centered on the clicked point. Refer to the picture as shown below. Drag the mouse from A to B to get a green rectangle and the rectangle area will be zoomed in.



Refer to the picture as shown below. Drag the mouse from C to D to get a green rectangle and the rectangle area will be zoomed out.



➤ Advanced 3D Control


Double click the left button of the mouse on any area of the camera image and then the image size will be doubled and centered on the clicked point.


Press and hold the left button of the mouse on any area of the camera image to zoom in the image; press and hold the right button to zoom out the image.

Move the cursor of the mouse to the camera image and then slide the scroll wheel of the mouse forward to zoom in the image, slide the scroll wheel of the mouse backward to zoom out the image.

➤ Preset Settings


Click “Preset” to go to preset operation tab and then click “Add” to open the window as shown below. Select the preset and then enter the preset name in the window; finally click “OK” to save the settings. You can add up to 255 presets for each dome.

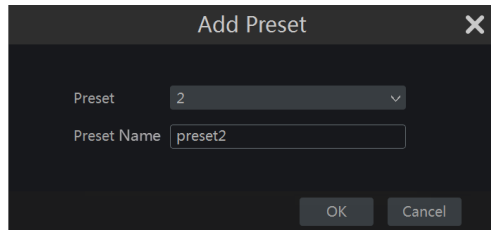



Adjust the dome’s direction and then click “Save Position” to save the current preset position (you can also click another preset in the preset list and then save the preset position after adjusting the dome’s direction); click  in the preset list to call the preset; click “Delete” to delete the selected preset.



You can also go to preset setting interface for preset setting, see [6.2 Preset Setting](#) for details.

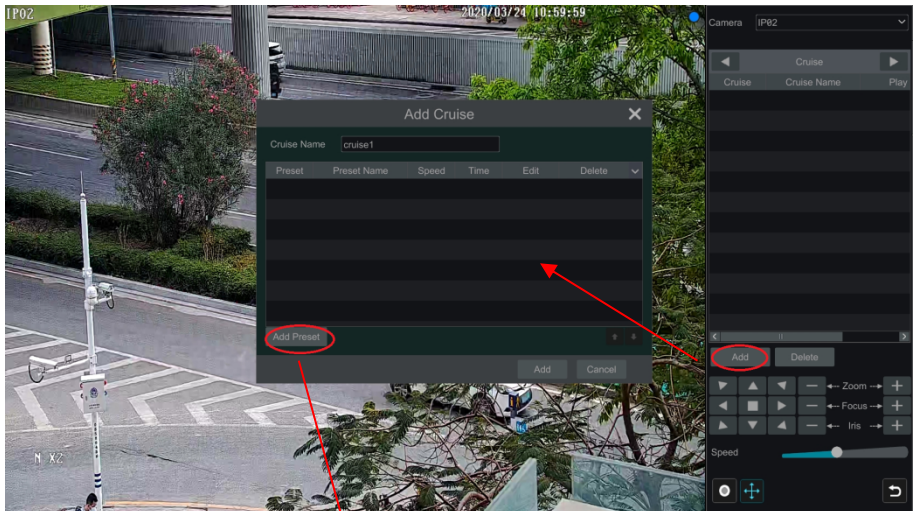

➤ Cruise Settings

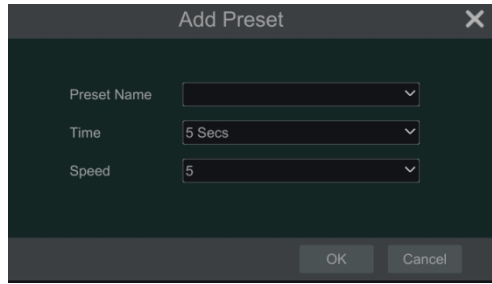On the right panel, click  to go to cruise operation tab and then click “Add” to open the window as shown below. You can add up to 8 cruises for each dome.






- ① Enter the cruise name in the “Add Cruise” window and then click “Add preset” to open the “Add Preset” window (Before adding preset to the cruise, please add preset of the dome first).
- ② In the “Add Preset” window, select the preset name, preset time and preset speed and then click “OK”.
- ③ In the “Add Cruise” window, you can click  to reselect the preset, then change the preset time and speed. Click  to delete the preset. Click “Add” to save the cruise.

Click  to start the cruise and click  to stop the cruise in the cruise list of the cruise operation tab; click “Delete” to delete the selected cruise.

You can also go to cruise setting interface for cruise setting, see [Cruise Setting](#) for details.


➤ Cruise Group Settings


On the right panel, click  to go to the cruise group setting tab. Click “Add” to add a cruise group as shown below.



In the “Add Cruise” window, select the cruise group name. After that, click “Play” to play the cruise groups in sequence.

➤ Trace Settings


On the right panel, click  to go to the trace setting tab. Click “Add” to add the trace name. Then click “OK” to save this name. Please refer to the following picture.

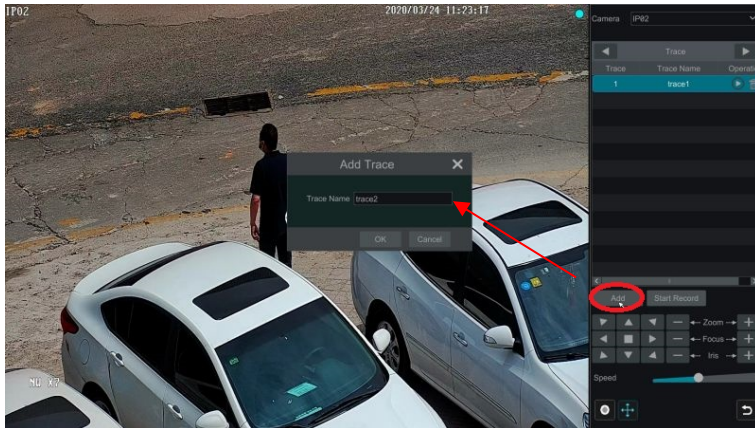



After that, click “Start Record” to record the trace. Then click “Stop Record” to finish recording. Click  to play the recorded trace. Click  to delete the trace.

6.2 Preset Settings


Click *Start* → *Settings* → *Camera* → *PTZ* → *Preset* to go to the interface as shown below.

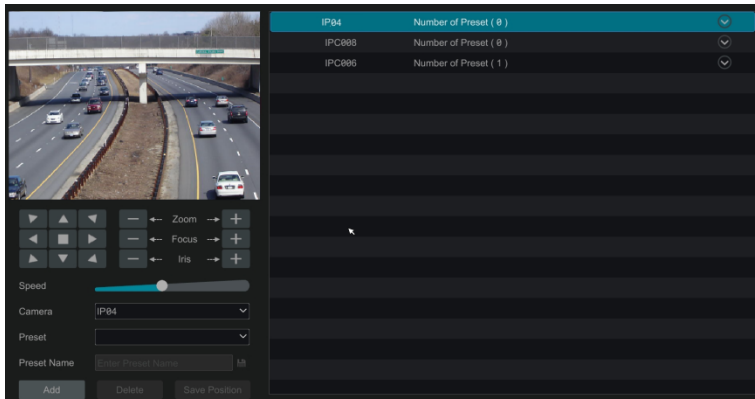

➤ Add preset

Select camera and then click “Add” to add preset; or click  in the camera list on the right side of the interface to display the preset information of the dome and then click  to add preset. The operations of the “Add Preset” window are similar to that of the PTZ control interface; please see [PTZ Control Interface Introduction](#) for details.

➤ Edit preset


Select camera and preset. You can enter the new name of the preset and then click  to save the new preset name. Adjust the rotating speed, position, zoom, focus and iris of the preset and then click “Save Position” to save the preset.

➤ Delete Preset



Select camera and preset and then click “Delete” to delete the preset.

6.3 Cruise Settings

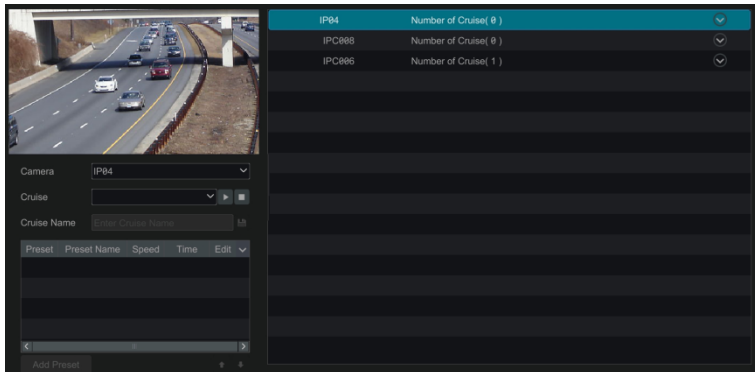






Click *Start* → *Settings* → *Camera* → *PTZ* → *Cruise* to go to the interface as shown below.




➤ Add Cruise


Click  in the camera list on the right side of the interface to display the cruise information of the dome and then click  to add cruise. The operations of the “Add Cruise” window are similar to that of the PTZ control interface; please see [PTZ Control Interface Introduction](#) for details.

➤ Edit Cruise

Select the camera and cruise in the “Cruise” interface. Enter the new cruise name and then click  to save the cruise name. Click “Add Preset” to add preset to the cruise. Click  to edit the preset. Click  to delete the preset from the cruise. Click one preset in the preset list and then click  to move down the preset and click  to move up the preset. Click  to start the cruise and click  to stop it.


➤ Delete Cruise

Click  in the camera list on the right side of the interface to display the cruise information

of the dome and then click  on the top right corner of the cruise to delete the cruise.

6.4 Cruise Group Settings

Click *Start* → *Settings* → *Camera* → *PTZ* → *Cruise Group* to go to the interface as shown below.

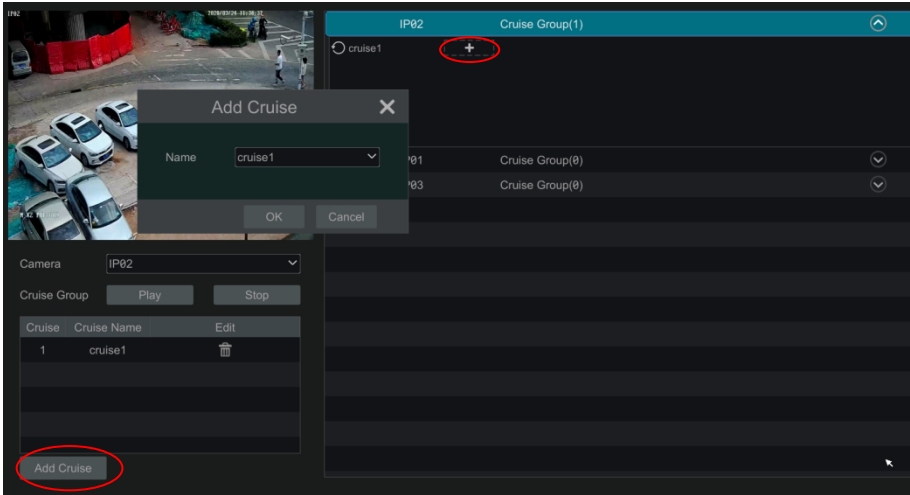

➤ Add Cruise Group

Click “Add Cruise” to add the cruise or click  to extend the cruise list and then click  to add the cruise. After that, click “Play” on the left panel as shown below to play the cruise lines in sequence.



➤ Delete Cruise


In the cruise list, click  to delete the cruise.

6.5 Trace Settings



Click *Start* → *Settings* → *Camera* → *PTZ* → *Trace* to go to the interface as shown below.

➤ Trace Record

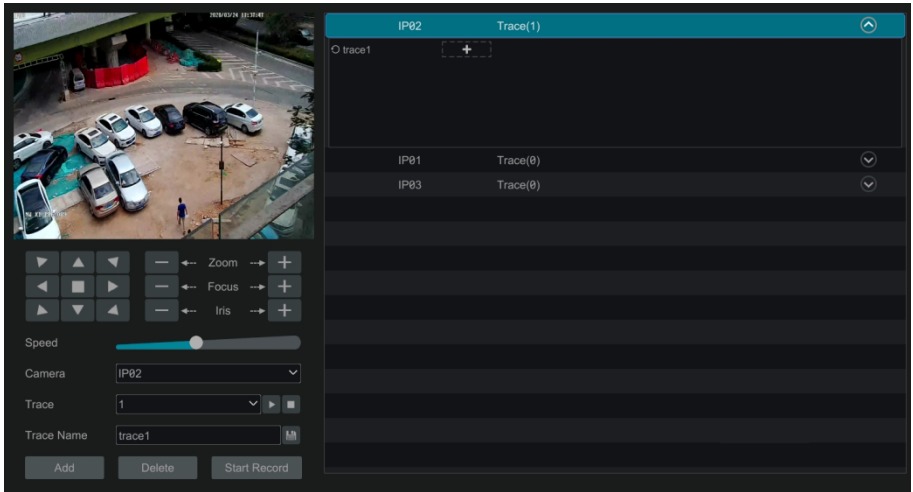
Select the PTZ camera and then click “Add” or extend the IPC information by clicking  and then click  to add a trace name. After that, click “Start Record” and move the speed dome to change its position and set its trace. Then click “Stop Record” to complete the trace record.





➤ Play or Stop Trace

Select the trace and click  to play the trace; click  to stop the trace.

➤ Modify the Trace Name


On the left panel, enter the new trace name and click  to modify and save the trace name.

➤ Delete the Trace

Click  to delete the trace. Or put the cursor on the trace name (right panel) and then  will appear on the right corner of the trace name; click to delete this trace.

6.6 Task Settings

Click *Start* → *Settings* → *Camera* → *PTZ* → *Task* to go to the interface as shown below.

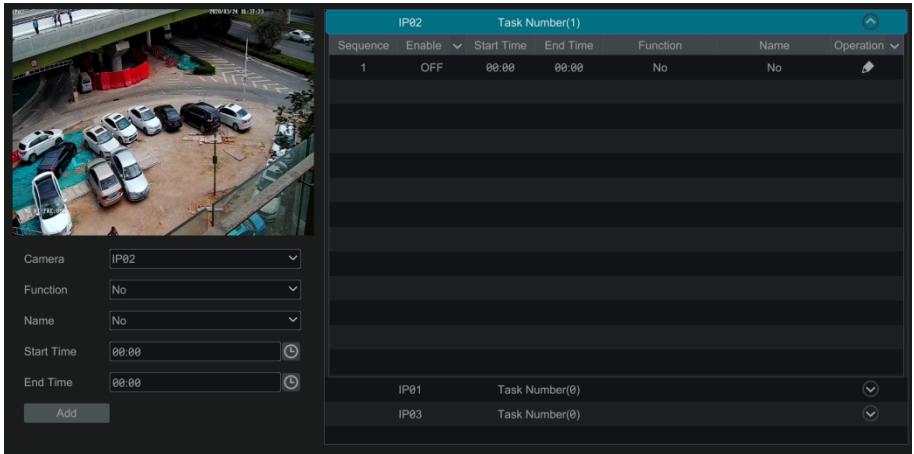

- ① Select a PTZ camera.
- ② Select functions, such as preset, cruise, trace, random scanning, etc.
- ③ Select a name, such as preset name, cruise name, etc.
- ④ Select the start and end time.
- ⑤ Click “Add” to add the task.
- ⑥ Click to extend the tasks of the PTZ camera. Click beside “Enable” to enable the task. After the task is enabled, the PTZ camera will start the specific task at the specified time.


6.7 Smart Tracking

This function is only available for AI PTZ camera. Please add an AI PTZ camera to the NVR for this function to take effect.

Smart Tracking: When people or vehicles cross the alarm line or intrude into the predefined area, the PTZ camera can automatically track them and the target image will be automatically zoomed in and centered on the screen until the target disappears from the screen. After that, the PTZ camera will return to the tracking starting position.

To set smart tracking:

1. Click *Settings* → *Camera* → *Smart Tracking* to go to the smart tracking interface.

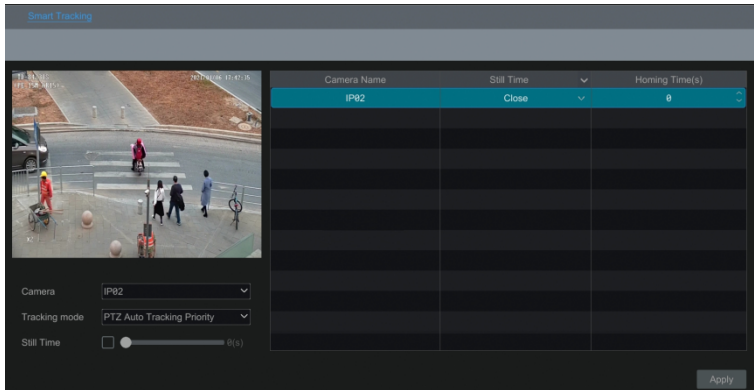

2. Select the tracking mode and set the “still time” as needed.

Tracking Mode: choose “PTZ Auto Tracking Priority” or “Manual PTZ Control Priority”


PTZ Tracking Priority: if this mode is selected, after enabling “Trigger track” in one of the following events, you cannot control PTZ by clicking the buttons on the PTZ control panel in the live view interface.

Manual PTZ Control Priority: if this mode is selected, after enabling “Trigger track” in one of the following events, you can control PTZ by clicking the buttons on the PTZ control panel in the live view interface during the process of smart tracking. After you stop controlling for 5 seconds, the PTZ camera will return to the pre-defined detection area and start tracking again when detecting a target.

Still time: If it is enabled and the time is set, when the target stops, the PTZ camera will return to the tracking start position after the set time expires. During this time, if the target moves, the PTZ will continue tracking. If it is not enabled, when the target stops for 5 seconds, the PTZ camera will return to the start tracking position.

For example: At the stoplight, if a car is waiting for the red light for 30 seconds, and the still time is set as 20 seconds, the tracking will stop following; however, if the still time is set as 40 seconds, when the red light changes to green and the car starts to move, the PTZ will continue tracking this car.

3. Click *Settings* → *AI/Event* → *AI Event*. Select the AI PTZ camera and the event as needed (Line Crossing/Intrusion). For example: intrusion.

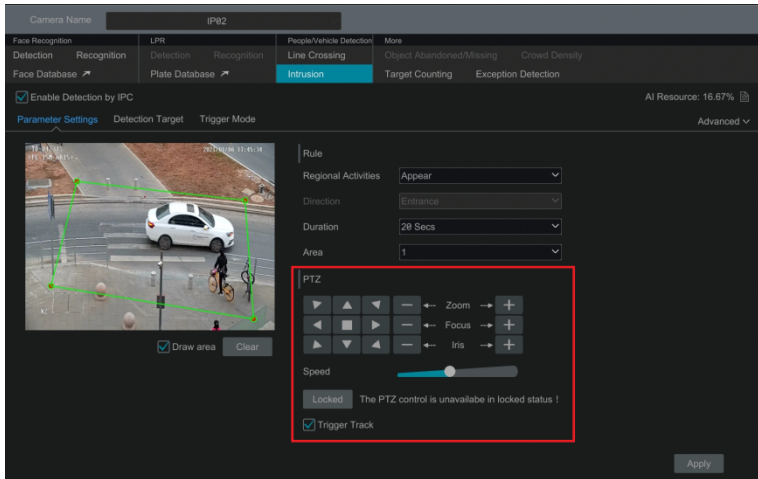

4. Enable the event, set the rule and then click “Locked”. This button will be changed to “Unlock”. Now the PTZ control panel in the above interface will be activated. Set the detection area by clicking the directional buttons in the above interface. After that, click “Unlock” to lock the detection area.

Note: The PTZ must be locked, or the smart tracking cannot take effect.

5. Click “Draw area” and then draw the intrusion region on the screen. After that, check “Trigger Track” and click “Apply” to save the settings.

6. Set the detection target.


7. Click “Apply” to save settings.

7 Record & Disk Management

7.1 Record Configuration

7.1.1 Mode Configuration

Please format the HDDs before recording (refer to [Disk Management](#) for details). Click **Start** → **Settings** → **Record** → **Mode Settings** to go to the mode settings interface. You can set the record time under the “Manual Record Settings” and then click “Apply” to save the settings. There are two record modes: auto mode and customization mode.

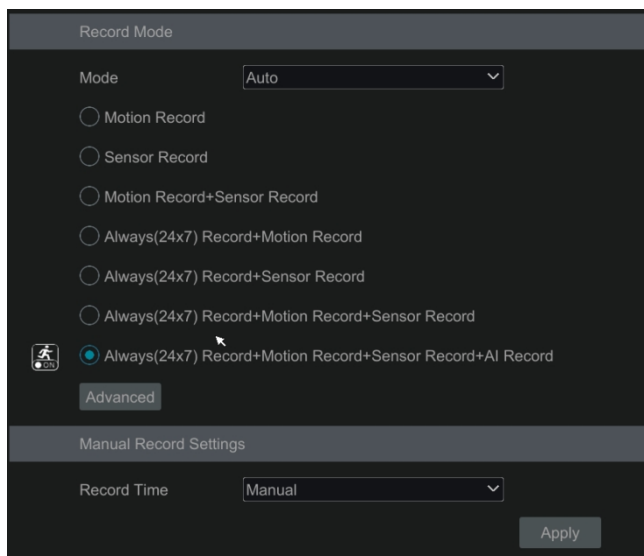

➤ Auto Mode

Motion Record: Motion alarm record will be enabled when motion alarm happens.

Sensor Record: Sensor alarm record will be enabled when sensor alarm happens.

Motion Record+Sensor Record: Motion/sensor alarm record will be enabled when motion/sensor alarm happens.

Always(24x7) Record+Motion Record: Normal record is enabled all the time; motion alarm record will be started when motion alarm happens.


Always(24x7) Record+Sensor Record: Normal record is enabled all the time; sensor alarm record will be started when sensor alarm happens.

Always(24x7) Record+Motion Record+Sensor Record: Normal record is enabled all the time; motion/sensor alarm record will be enabled when motion/sensor alarm happens.

Always(24x7) Record+ Motion Record + Sensor Record + AI Record: Normal record is enabled all the time; AI record will be enabled when AI event happens.

You can add more auto modes on analytics record. Click “Advanced” to pop up a window as shown below. Check the modes in the window and then click “Add” to show the modes in the

record mode list (in the window, the checked modes can be shown in the record mode list while the unchecked modes cannot).

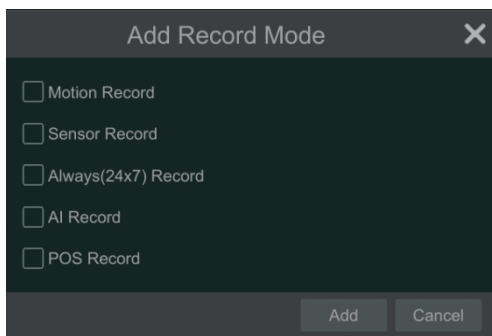

Select one auto mode for the corresponding window to open. Set the encode, GOP, resolution, FPS, bitrate type, quality, max bitrate and audio of each camera and then click “OK” to save your settings. Please adjust the parameters according to the actual condition.



Video Encode: the available options will be H.265S, H.265+, H.265 and H.264 depending on what the camera supports.

Resolution: the higher the resolution is, the clearer the image is.

FPS: the higher the frame rate is, the more fluency the video has, with the tradeoff of using more storage.

Bitrate Type: CBR and VBR are optional. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This will help to optimize network bandwidth.


Quality: when VBR is selected, you need to choose image quality. The higher the image quality you choose, the more bitrate will be required.

Max Bitrate: 32Kbps ~10240Kbps are optional.

GOP: group of pictures.

➤ Customization Mode

If the customization mode is selected, you need to set the record schedules of each camera. See [Schedule Settings](#) for details.

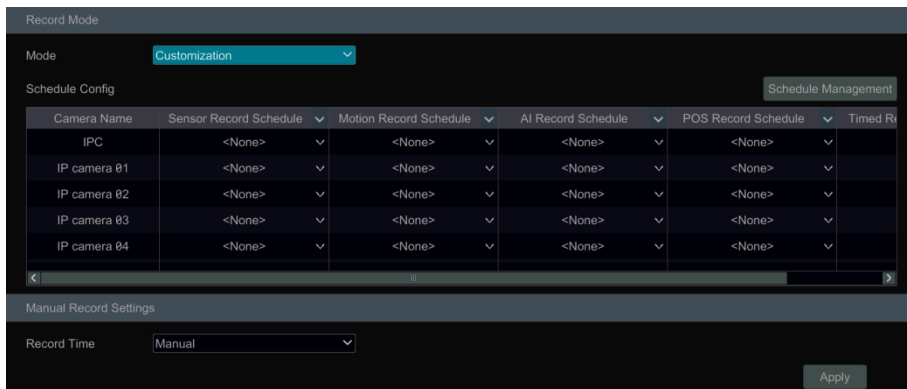


In this interface, you can also set the record period of the manual record in the live view interface.


7.1.2 Schedule Settings



➤ Add Schedule

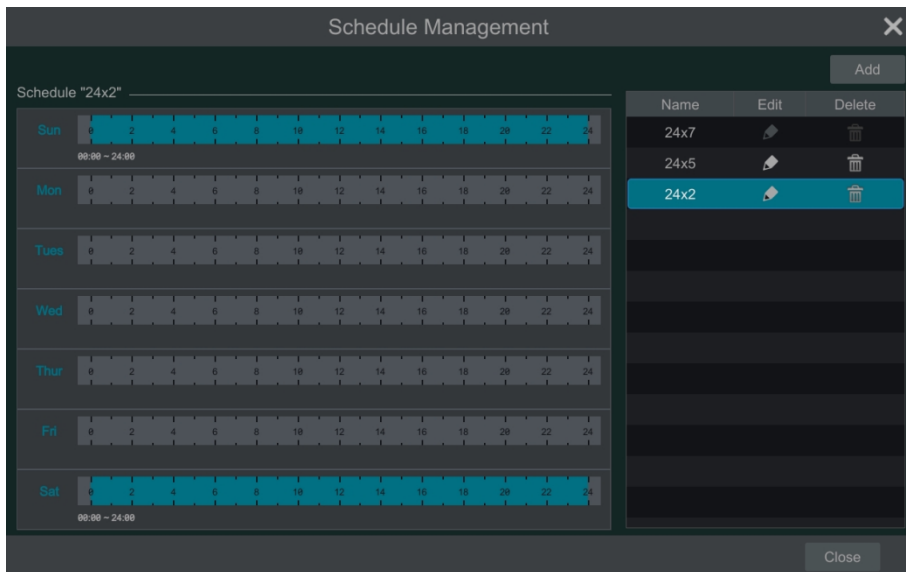Click **Start** → **Settings** → **Record** → **Mode Setting** to go to the mode setting interface. Then select “Customization” mode and click “Schedule Management” to set the schedule as shown below. “24x7”, “24x5” and “24x2” are the default schedules; you cannot edit or delete “24x7” while “24x5” and “24x2” can be edited and deleted. Click the schedule name to display the detailed schedule information on the left side of the interface. The seven rows stand for seven days in a week and each row stands for 24 hours in a day. Blue stands for the selected time and gray stands for unselected time.



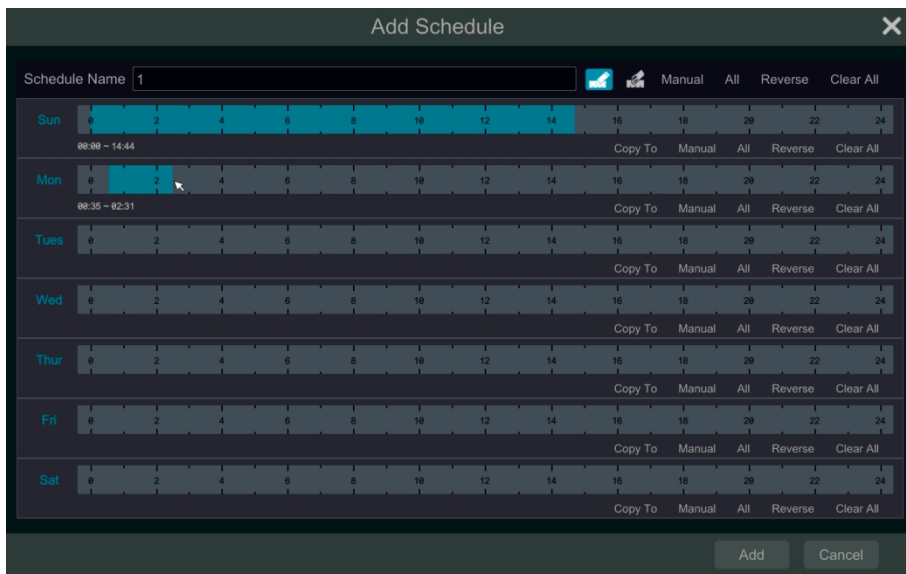



Click “Add” to add a new schedule. Refer to the picture below.




Set the schedule name and schedule time and then click “Add” to save the schedule. You can set a day schedule or week schedule. : add button; : delete button.

➤ Set Day Schedule


Click  and then drag the cursor on the time scale to set record time; click  and then drag the cursor on the time scale to delete the selected area.

You can manually set the record at the start time and end time. Click  or  and then click “Manual” on each day to open a window as shown below. Set the start and end time in the window and then click “OK” to save the settings.

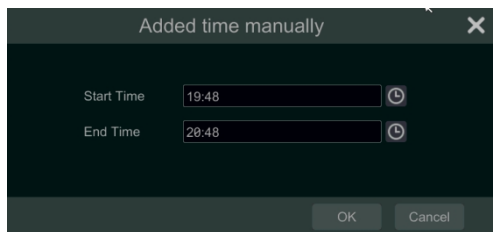




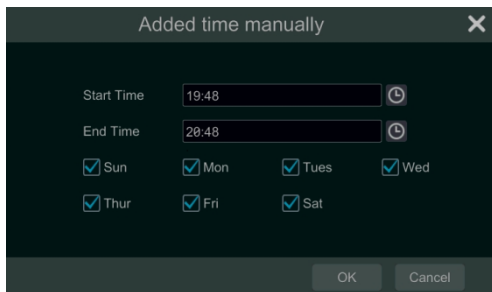
Click “All” to set all day recording; click “Reverse” to swap the selected and unselected time in a day; click “Clear All” to clear all the selected area in a day.

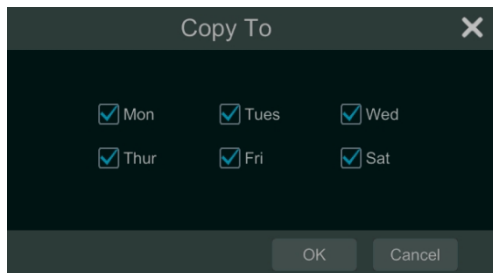Click “Copy To” to copy the schedule of the day to other days. Refer to the picture below. Check the days in the window and then click “OK” to save the settings.



➤ Set Week Schedule


Click  or  and then click “Manual” beside  to set the week schedule. Refer to the picture below. Set the start and end time, check the days in the window and then click “OK” to save the settings.



Click “All” to set all week recording; click “Reverse” to swap the selected and unselected time in a week; click “Clear All” to clear all the selected area in a week.

7.1.3 Advanced Configuration

Click *Start* → *Settings* → *Record* → *Advanced* to go to the following interface. Enable or disable cycle record (cycle record: the earliest record data will be replaced by the latest when the disks are full). Choose the record stream. Set the pre-alarm record time, post-alarm record time and expiration time of each camera and then click “Apply” to save the settings.

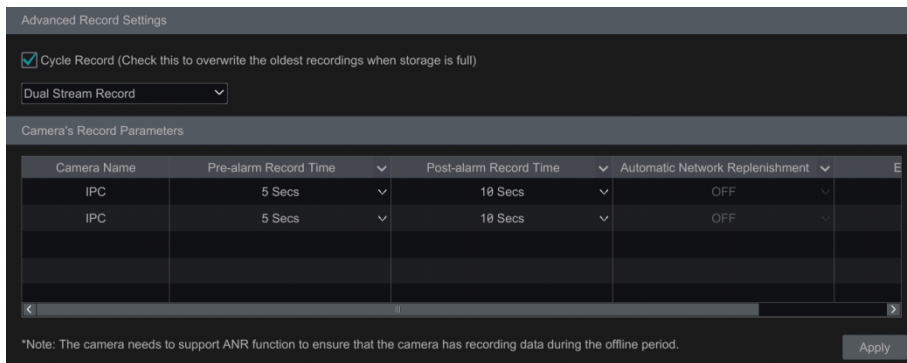

Pre-alarm Record Time: set the time to record before the actual recording begins. You can disable pre-alarm record or select 3/5/10/15/20/25/30 seconds as needed.

Post-alarm Record Time: set the time to record after the actual recording is finished. You can disable post-alarm record or select 5s/10s/30s/1Min/2Mins/5Mins/10Mins as needed.

Expiration Time: set the expiration time for recorded video. If the set date is overdue, the recorded data will be deleted automatically.

Automatic Network Replenishment: If the IPC connected to the NVR is offline, the NVR will automatically download the record files from the IPC during its offline period. Note that the camera must support the ANR function too, or this function cannot take effects.

7.2 Encode Parameters Settings

Click **Start** → **Settings** → **Record** → **Encode Parameters** to go to the interface as shown below. Set the encode, resolution, FPS, GOP, bitrate type, quality, max bitrate and audio of mainstream for each camera in “Event Recording Settings” and “Schedule Recording Settings” interfaces. Additionally, the record sub stream of each camera can be viewed. Click “Apply” to save the settings. You can set the record stream of each camera one by one or set them in batches for all cameras.


Camera Name	Stream Type	Encode	Resolution	FPS	Bitrate Type	Quality	Max Bitrate	Bitrate Limit Recommendation
IP01	Main Stream	H.265	1920x1080	25	VBR	Higher	2048Kbps	2358-3930Kbps
IP05	Main Stream	H.265	1920x1080	25	VBR	Higher	2048Kbps	2358-3930Kbps
IP03	Main Stream	H.265	1920x1080	25	VBR	Higher	2048Kbps	2358-3930Kbps
IP04	Main Stream	H.265	3840x2160	30	VBR	Higher	5120Kbps	5632-19338Kbps


Remain Bandwidth: 54 / 80 Mb

Apply

7.3 Record Mode

7.3.1 Manual Recording

Method One: Click  on the tool bar at the bottom of the live view interface to enable recording of the camera.

Method Two: Go to the live view interface and then click the right-click menu “Manually Record On” in the camera window or click  on the tool bar under the camera window to start recording.

Note: Click Start → Settings → Record → Mode Settings and then set the manual record time in the interface. Click “Apply” to save the settings.

7.3.2 Timing Recording

Timing Recording: the system will record automatically according to the schedule. Set the timing record schedule of each camera. See [Schedule Settings](#) for details.

7.3.3 Motion-based Recording

Motion-based Recording: the system will start motion-based recording when the motion object appears in the setup schedule. The setup steps are as follows:

- ① Set the motion-based recording schedule of each camera. See [Schedule Settings](#) for details.
 - ② Enable the motion and set the motion area of each camera. See [Motion Alarm](#) for details.
- The camera will start motion-based recording once you finish the above settings.

7.3.4 Sensor Based Recording

- ① Set the sensor-based recording schedule of each camera. See [Schedule Settings](#) for details.
- ② Set the NO/NC type of the sensor, enable the sensor alarm and then check and configure the “Record”. See [Sensor Alarm](#) for details.

7.3.5 AI Event Recording

- ① Set the analytics recording schedule of each IP camera. See [Schedule Settings](#) for details.
- ② Enable the intelligent alarm detection (object detection, exception, line crossing, intrusion or face detection) and draw alert surface or warning area of each IP camera. See [AI Event Management](#) for details.

The camera will start analytic recording once you finish the above steps. This function is only available for some IPCs.

7.4 Disk

7.4.1 Disk Management

The HDD can be plugged in or pulled out when the NVR is on. When the HDD is in abnormal status, the abnormal information will be prompted on the screen (such as “No HDD”, “Only read”, “Unformatted”, “The HDD is unavailable”, etc.)

For the model with 8HDDs or more, in order to avoid video frame loss, it is recommended to use 7200RPM HDDs or above and add cameras to different disk groups or create one or more RAIDs (if applicable) to record.

➤ Disk Management

Click **Start**→**Settings**→**Disk**→**Disk Management** to go to disk management interface. You can view the NVR’s disk number and disk status and so on in the interface. Click “Format” to format the HDD.

Disk	Free/Capacity[GB]	Disk Serial No.	Disk Model	Status	Type	Cycle Record	Operation	Record P
Disk1	448.00/465	Z3TG0DPZ	ST500DM002-1BD142	RW(Not Encrypted)	Ordinary Pl...	ON	Format	2023/07/6
Disk4	208.00/465	WD-WMAV94003209	WDC WD5000AVDS-6...	RW(Not Encrypted)	Ordinary Pl...	ON	Format	2023/07/6
Disk6	464.00/465	W2A3F7XW	ST500DM002-1BD142	RW(Not Encrypted)	Ordinary Pl...	ON	Format	
Disk8	464.00/465	Z3T0QMCM	ST500DM002-1BD142	RW(Not Encrypted)	Ordinary Pl...	ON	Format	

Data Encryption:

- ① Click “Data Encrypt”.
- ② Enter the username and password used to log into the NVR. This username and password must have the permission of disk management.
- ③ Check the disk you want to encrypt and then enter the password.

After you encrypt the data of a disk, this disk cannot be read by other NVRs unless it is

unlocked.

Data Decryption:

- ① Click “Change Encryption”.
- ② Enter the username and password used to log into the NVR. This user must have the permission of disk management (only admin user has the permission).
- ③ Check the disk you want to decrypt and then clear the password.
- ④ Click “Close Encryption”.


Unlock the disk: when one encrypted disk is transferred from another NVR to this NVR, it will be locked. You can select this locked disk and click “Unlock”. After you enter the password of its data encryption, its status will be “Read Only”. Now you can read the data of this disk but nothing can be written to it.

Some models may not support RAID function. RAID settings are as follows. Please skip the settings of physical disk, array and disk mode if the NVR doesn't support this function. Check the datasheet for your model to confirm if it supports RAID.

➤ RAID

- ① Enable RAID


(Go to **Start** → **Settings** → **Disk** → **Disk Mode**)

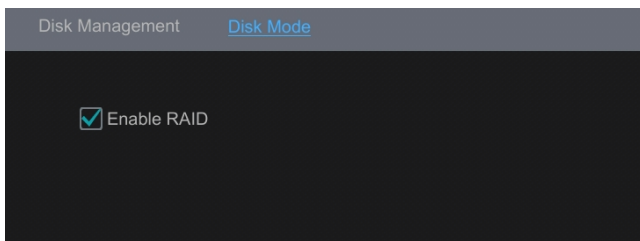

After verifying the username and password, the RAID function will be enabled after reboot.


- ② Create an array. (Go to **Start** → **Settings** → **Disk** → **Physical Disk**)


- a. Click “Physical Disk” tab and then click “Create an array”.
- b. Enter the username and password which has the authority of Disk Management. If you don't have one, you can use the username and password for system login (the default username: admin).
- c. Enter array name and select array type (like RAID5).

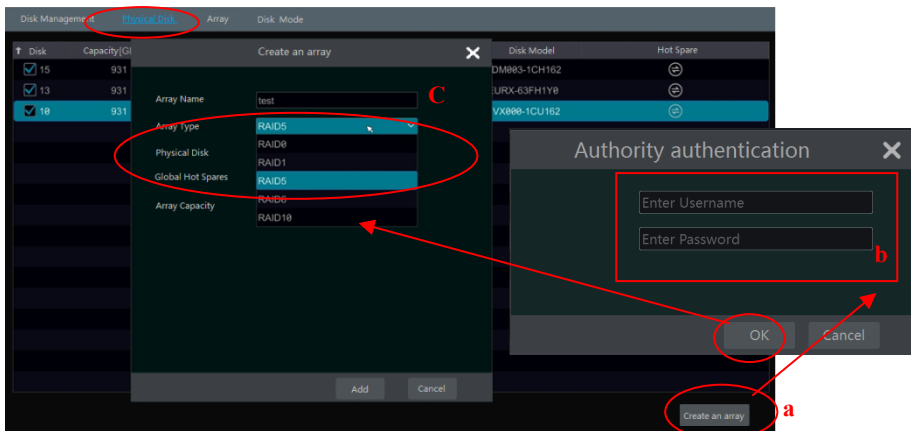

d. Select physical disk.


If you have 16 disks, please check 15 disks. The remaining one should be set to a hot spare. If higher data security is needed, you can decrease physic disks and increase hot spare disks. Please set them as needed.

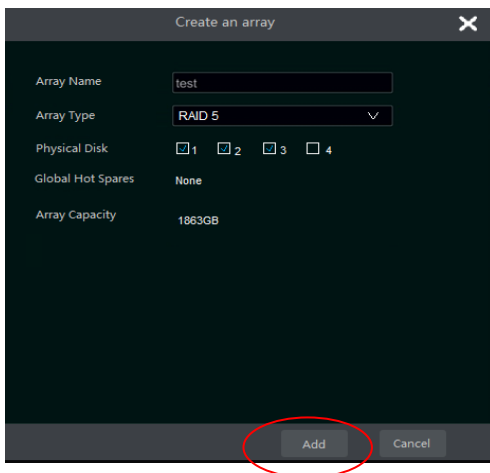

e. Select a hot spare. In the physical disk interface, select the disk that is not in the array and click  as shown in the following pictures.


Disk	Capacity[GB]	Array	Type	Status	Disk Model	Hot Spare
1	931	test	Array disk	Normal	xxxxx	
2	931	test	Array disk	Normal	xxxxx	
3	931	test	Array disk	Normal	xxxxx	
4	931		Ordinary plate	Normal	xxxxx	



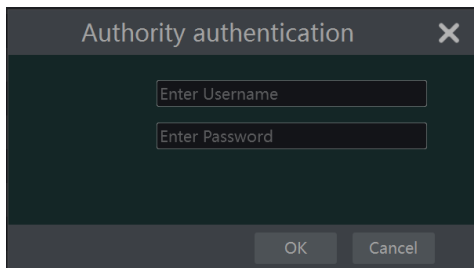


- RAID Rebuilding

If one of your disks is defective, the disk indicator on the front panel will turn red. A warning tip will pop up if the relevant HDD exception alarm is set. You need to rebuild the RAID after you replace the broken disk with a new one.

Disk Management							
Physical Disk		Array		Disk Mode			
No.	Name	Capacity[GB]	Physical Disk	Hot Spare Position	Status	Type	Rebuild
1	test	1862	2 3	4	Downgrade	RAID5	


Click the above circled icon and then select the physical disk to rebuild.

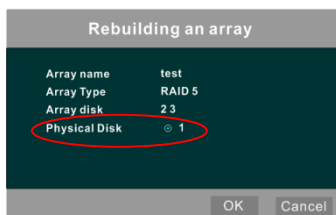


Note: If the HDD you want to install has been used in a RAID of another device, it is recommended to install it after the device starts up. Having installed the HDD, you can set it as a hot spare disk or add it to a new RAID. If you have installed the HDD in shutdown state, the RAID you have created before is unavailable after the device runs. Now, you need to reboot your device to solve this problem.


7.4.2 Storage Mode Configuration

Click **Start** → **Settings** → **Disk** → **Storage Mode** to go to the interface as shown below.

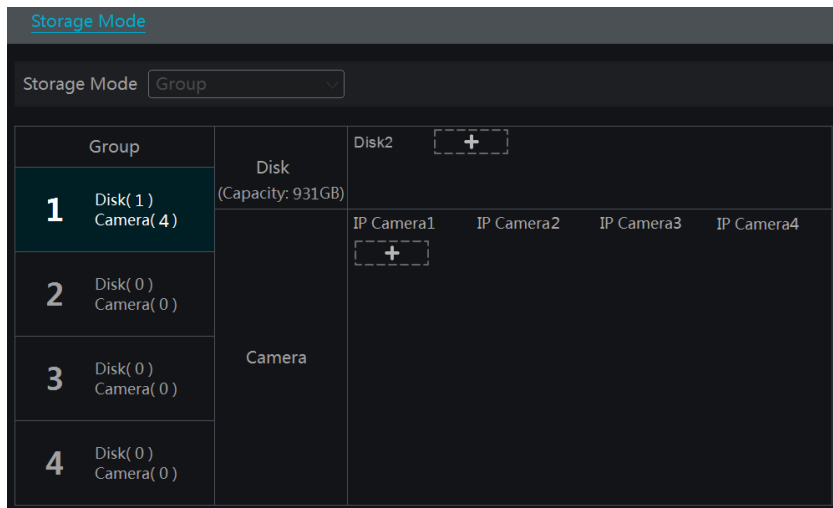

By using a disk group, you can correspond a camera to disk (the record data of the camera in the group will be stored into the disks in the same group). The NVR with e-SATA interface supports e-SATA recording.

The added disks and cameras will be added into group one automatically. The disks/array and cameras in the groups can be deleted except group one (select a disk group and then click  on the top right corner of the added disk/array or camera to delete it from the group). The deleted disks and cameras will be moved into group one automatically.

Each group can add disks/arrays and cameras from other groups. Each disk and camera can only be added into one group. Select a disk group and then click  in the disk or camera row to open a window. Check the disks or cameras in the window and then click “Add”.

Note: Each HDD only can exist in one group.

7.4.3 View Disk Information

Click **Start** → **Settings** → **Disk** → **View Disk Information** to view the HDD information; click “S.M.A.R.T. Information” to view the working status of the HDD (refer to the picture below); click “Health Status Check” to check the western digital purple disks’ health status.



ID	Attribution	Value	Worst Value	Threshold	Raw Value	Status
0x01	Read Error Rate	109	99	6	22129616	Normal
0x03	Spin-Up Time	100	97	0	0	Normal
0x04	Start/Stop Count	88	88	20	12317	Normal
0x05	Reallocated Sector Count	100	100	36	0	Normal
0x07	Seek Error Rate	80	60	30	658989752	Normal
0x09	Power-On Hours	80	80	0	18179	Normal
0x0a	Spin Retry Count	100	100	97	0	Normal
0x0c	Power Cycle Count	99	99	20	1345	Normal
0xb7	SATA Downshift Error Count	90	90	0	10	Normal
0xb8	End-to-End error	100	100	99	0	Normal
0xbb	Reported Uncorrectable Errors	97	97	0	3	Normal
0xbc	Command Timeout	100	100	0	0	Normal
0xbd	High Fly Writes	100	100	0	0	Normal

In addition, you can view the plug-in or pull-out details of the HDD from the logs to check whether someone moves your HDD or not. Click **Start** → **Settings** → **System** → **View Log**.

No.	Main Type	Log Time	Content	Details	Play
1	Operation	2021/01/06 18:13:50	LocalMaintenance	Log Search	—
2	Operation	2021/01/06 18:13:45	LocalInsert a new HDD	Disk2(Z3T6S6BE)	—
3	Exception	2021/01/06 18:13:44	HDD is pulled out	Disk1(Z3T6S6BE)	—
4	Exception	2021/01/06 18:13:43	Disk IO Error	Disk1(Z3T6S6BE) IO Error	—



8 Playback & Backup


8.1 Instant Playback

Click  on the tool bar at the bottom of the preview camera window to play back the record (click  on the tool bar at the bottom of the live view interface to set the default playback time). Refer to the picture below. Drag the playback progress bar to change the playback time. You can also click the right-click menu “Instant Playback” in the camera window and then set the instant playback time to play back the record.



8.2 Playback Interface Introduction



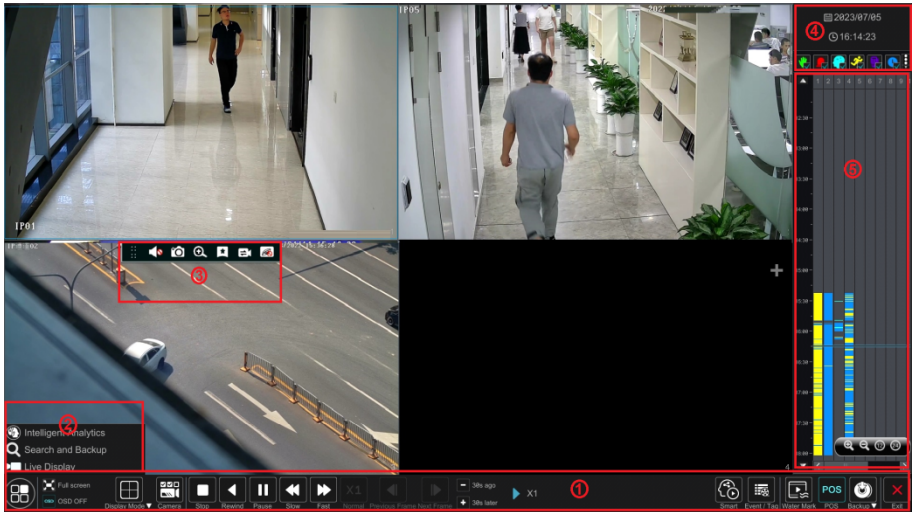



Click  on the tool bar at the bottom of the live view interface or click **Start→Playback** to go to the playback interface as shown below (click  on the tool bar at the bottom of the live view interface to set the default playback time).





















The panel on the right will show you the channel number and the recorded data coded by color. The bar that runs across them represents the playback time being viewed. You can move around this bar. To export, highlight a section of the desired recording, click export and follow the prompts. You can export single or multiple channels at the same time.

The added cameras will playback their recordings in the playback interface automatically. You can also add the playback camera manually. Click **+** in the playback window to open the “Add Camera” window. Check the cameras in the window and then click “Add” to add playback camera. The system supports a maximum of 16 synchronous playback cameras.




The buttons on the tool bar (area ①) at the bottom of the playback interface are introduced in the table below.

Button	Meaning
	Start button. Click to pop up area ②.
	Full screen button. Click to show full screen; click again to exit the full screen.
	Screen display mode button. 1/4/9/16 screen display mode can be selected (depending on models); in addition, the playback channel will be switched by continuous selection of the same screen display mode, for example, after selecting 1-screen display mode, click this mode again and then the current playback channel will switch to the next playback channel.
	OSD ON button. Click to enable OSD; click again to disable OSD.
	Quick channel selection button
	Stop button.

Button	Meaning
	Rewind button. Click to play video backward.
	Play button. Click to play video forward.
	Pause button.
	Slow Play button. Click to decrease the playing speed.
	Fast Play button. Click to increase the playing speed.
	Previous frame button. It works only when the forward playing is paused in single screen mode.
	Next frame button. It works only when the forward playing is paused in single screen mode.
	Click  to step backward 30s and click  to step forward 30s.
	Click to enter the smart playback interface
	Event list/tag button. Click to view the event recording of manual/schedule/sensor/ motion and the tag information.
	Watermark button. Click to enable watermark; click again to disable watermark.
	Open/close POS information.
	 Backup button. Drag the mouse on the time scale to select the time periods and cameras, and then click the button to back up the record.  Backup status button. Click to view the backup status.
	Back button. Click to return.

Note: Some models may not support face search and face smart playback.

Introduction of area ②:

Button	Meaning
 Intelligent Analytics	Click to go to the intelligent analytics interface.
 Search and Backup	Click to go to record search and backup interface; see Record Search, Playback & Backup for details.
 Live Display	Click to go to the live view interface; see Live View Introduction for details.

Click on the playback window to show the tool bar as shown in area ③; right click on the window to show the menu list. The tool bar and menu list are introduced in the table below.






Button	Menu List	Meaning
	--	Move tool. Click to move the tool bar anywhere.
	Enable Audio	Click to enable audio. You can listen to the camera audio by enabling audio.
	Snap	Click to take a snapshot.
	Zoom In	Click to go to the zoom in interface. The zoom in interface is similar to that of the camera window in the live view interface. Click to pause the record playing; click to play the record. When the record is paused in forward playing mode, you can click to view the previous frame and click to view the next frame.
	Fisheye	Adjust fisheye camera's installation mode and display mode (only available for fisheye cameras)
	Add Tag	Click to add tag. You can play back the record by searching for the added tag. Click and then enter the tag name in the popup window. Click "Add" to add tag.
	Switch Camera	Click to switch the playback camera. Click it and then check the camera in the popup window. Click "OK" to change the camera.
	Close Camera	Click to close the playback camera.

Introduction of area ④:

Click to set the date; click to set the time and then the playback camera will play the record from the time you set. You can check the record type as needed for record playback; first you should click on the tool bar at the bottom of the interface to clear all the playback camera, then check the record type (: manual record; : sensor based record; : motion-based record; : schedule record; : AI record; : POS record, if you want view the detailed smart playback icons, click to switch, as shown below). Finally, click in the playback window to add camera for playback (the record time scale will show the record data of the checked record type only after the above operations).




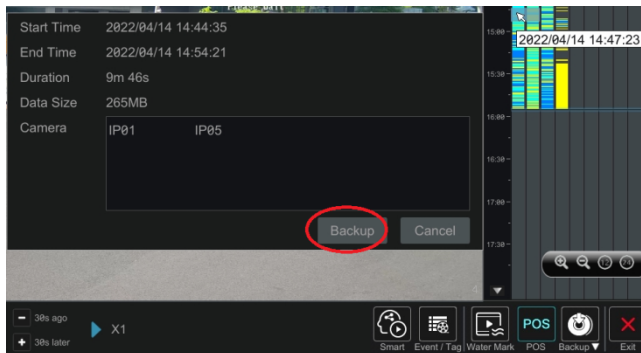
Introduction of the record time scale (area ⑤):

A tool bar will appear after moving the mouse to the record time scale. Click  /  to zoom the timeline; click  to recover the timeline to 24 hours' ratio. Drag the timeline or slide the scroll wheel of the mouse on the time scale to show the hidden time on the top or bottom of the timeline. You can also click  to show the hidden time on the top of the timeline or click  to show the hidden time on the bottom of the timeline. Drag the slider at the bottom of the time scale to show the hidden playback cameras.

The record time scale shows different record types with different colors. The green block stands for manual record, red block stands for sensor-based record, yellow block stands for motion-based record, blue block stands for schedule record and cyan block stands for intelligence record. Click the record block to set the time and then the playback camera will play the record from the time you set.

Backup Introduction:


Insert the storage device into the device. Drag the color block on the time scale to select the backup area and then right click the area or click  to pop up a backup information window. Click the “Backup” button in the window to pop up the backup window. Select the device, backup path and backup format and then click the “Backup” button.




In the backup window, you can select backup path and format. Then click “Backup”.


Backup format: Private, AVI or MP4.

Please select “Encryption” or “No Encryption” as needed. After that, click “OK”.

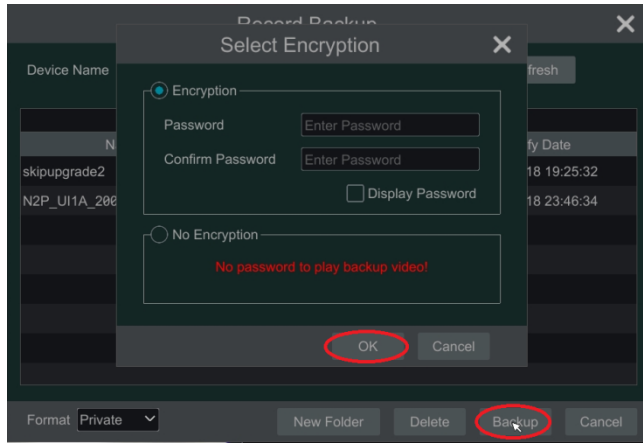





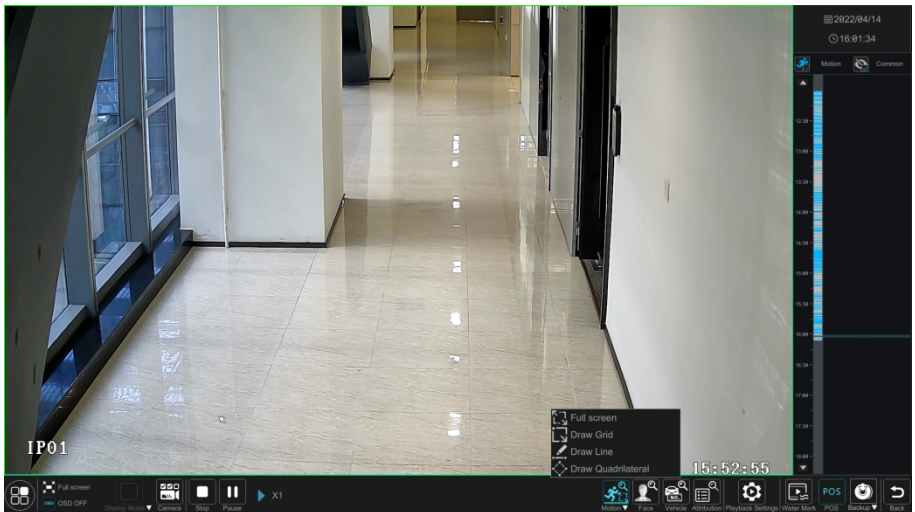






8.3 Smart Playback

In the playback interface, click  to go to the smart playback interface as shown below.




Descriptions of buttons in the smart playback interface


Button		Description
		Full screen motion button.
		Draw grid. You can search for the record of motion detection in the pre-defined area.

Button		Description
		Draw line. You can search for the record of crossing the line after drawing the line.
		Draw quadrilateral. You can search the record in this quadrilateral after drawing it.
	Face	Search by face (only some models support)
	Vehicle	Search by license plate number
	Search by attributes	Search by human/vehicle attributes
		Playback settings button
		Return button. Click to return to the previous interface.

8.3.1 Smart Playback Settings


Click  to set “Motion/Face/Vehicle video playback speed”, “Ordinary video playback speed”.

You can disable “Common” to view motion/face vehicle video playback in the right corner of the smart playback interface.

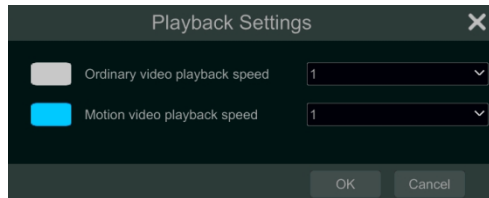


8.3.2 Smart Playback Based on Motion Detection

- **Smart Playback by Drawing Grid**


Click  and draw a rectangle in the desired area. The system will automatically search the record files of this area. The cyan blocks indicate that there are intelligent recording files. Move the cursor to such block and click to play the recording.

- **Smart Playback by Drawing Line**

Click  and draw a line in the desired area. Then the system will automatically search for the record files where this line was crossed. The cyan blocks indicate that there are intelligent recording files. Move the cursor to such block and click to play the recording.




- **Smart Playback by Drawing Quadrilateral**


Click  and draw a quadrangle in the desired area. Then the system will automatically search the record files of this area. The cyan blocks indicate that there are intelligent recording files. Move the cursor to such block and click to play the recording.



8.3.3 Smart Playback by Face Search


Before starting this function, the face recognition function must be enabled. Please see Face Recognition for details. If your device doesn't support such a function, please skip the following instructions.

- ① In the smart playback interface, click  to open the following window.

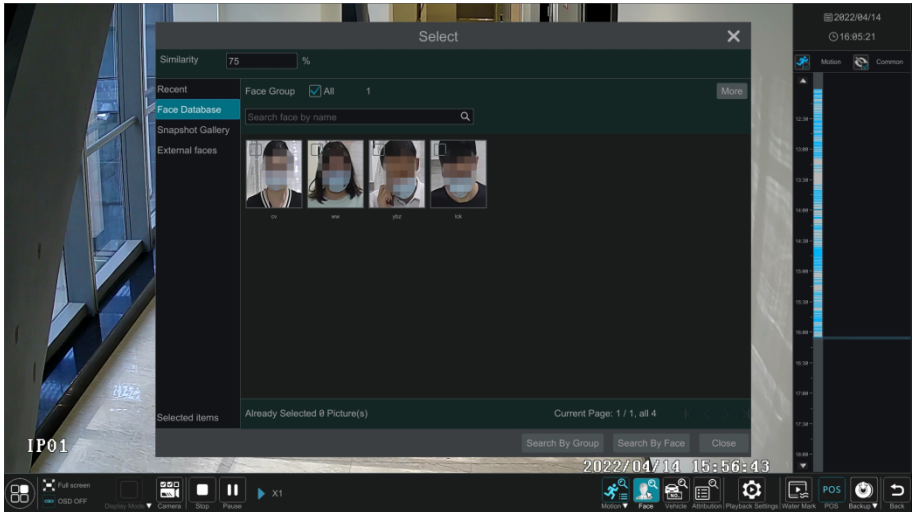


- ② Set similarity. The higher the sensitivity value is, the lower the searching accuracy is, and vice versa.
- ③ Select targets. You can select targets from recent, face databases, snapshot gallery or external faces.
- ④ Select search mode. There are two search modes: search by group and search by face.
Search by group: Choose “Face Database” and then click “More” to choose one or more groups.


Move the cursor to the time block where the record exists and click to play those records. You can only check “Face” to view the face records.

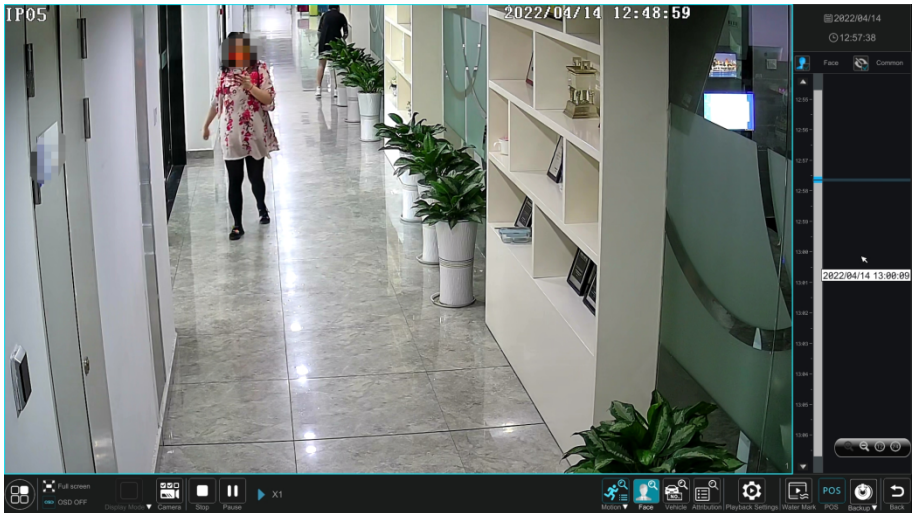


8.3.4 Smart Search by License Plate

Before starting smart search by plates, please add ANPR cameras first and enable the LPR function. Please refer to the License Plate Recognition section for details.

Click  button to go to the following interface.

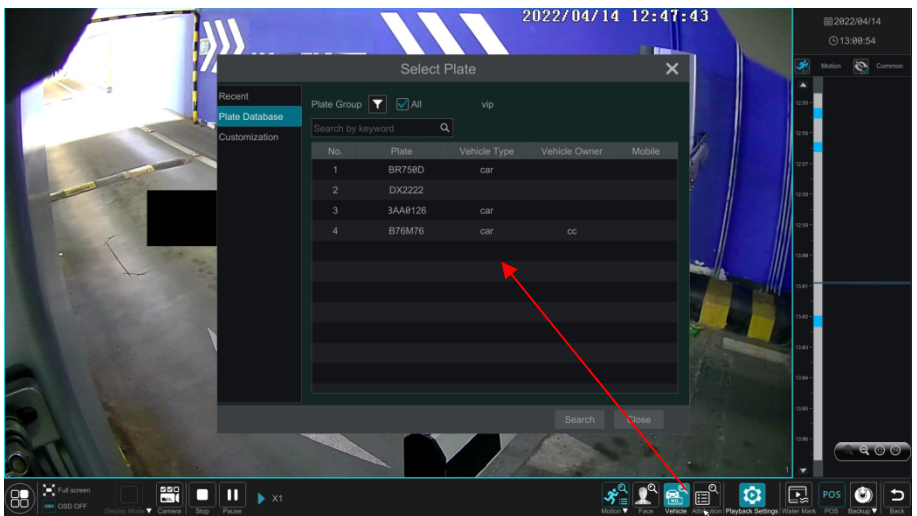


Select the plate from “Recent”, “Plate Database” or “Customization” and then click “Search” to search recorded files and play. Here is an example of plate search from “Plate Database”.

Click  to choose a group. Then plates will be listed in the table automatically. Click “Search”


to play.



8.3.5 Smart Search by Object Attributes

Before searching objects by attributes, please enable video metadata function of cameras. *Please note that this function will only work with specific cameras running the newest firmware.* Click  to select the attributes.

Select the attributes of human/motor vehicle/non-motor vehicle as needed to search the results.

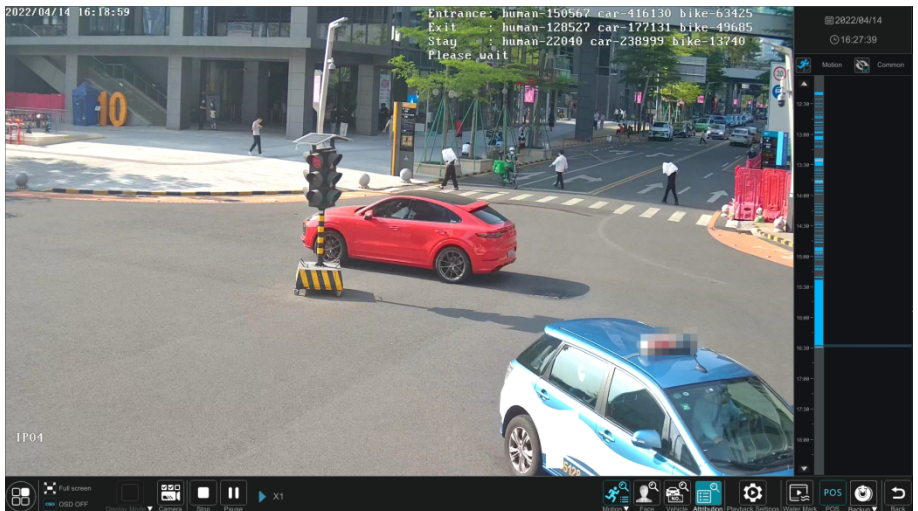


8.4 Record Search, Playback & Backup

The record data and the captured pictures can be backed up through the network or USB (U disk or USB mobile HDD). The file system of the backup devices should be FAT32 format.

8.4.1 Search, Playback & Backup by Time-sliced Image


① Click *Start* → *Search and Backup* → *By Time-sliced Image* to go to “By Time-sliced Image” tab. There are two view modes: by time and by camera. In the time view mode, a maximum of 64 camera thumbnails can be shown. If the camera thumbnail number is more than 64, the cameras will be listed directly by their camera name, not the thumbnail. A maximum of 196 camera names can be listed. If the camera names exceed 196, the time view mode will be disabled and only the camera view mode will be available.

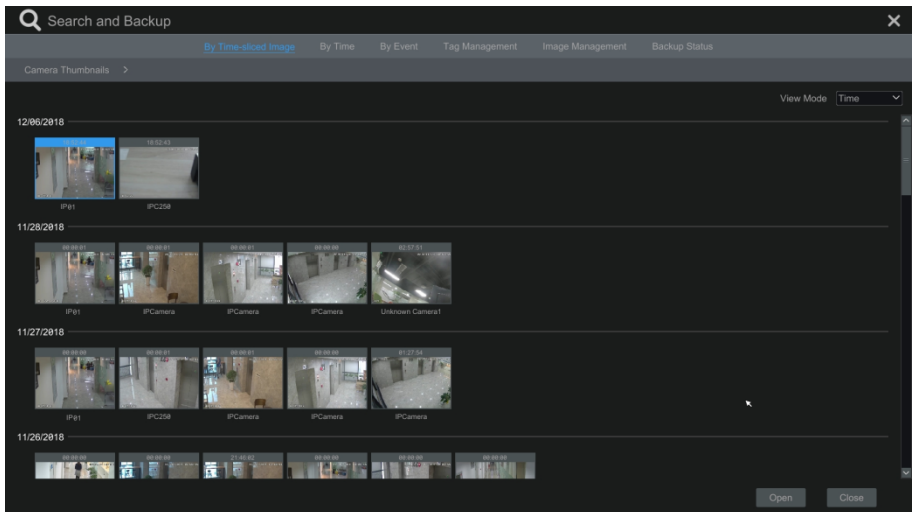

② Select one camera in the interface and then click the “Open” button.


③ Click the image box to play the recording in the small playback box on the left side of the interface (the box which has image inside indicates that the recording data exists).

④ Refer to the picture below. Drag the color blocks on the time scale to select the recording data and then click the “Backup” button to open the “Record Backup” window as shown below. Select the device name, backup format and path and then click the “Backup” button to start the backup.

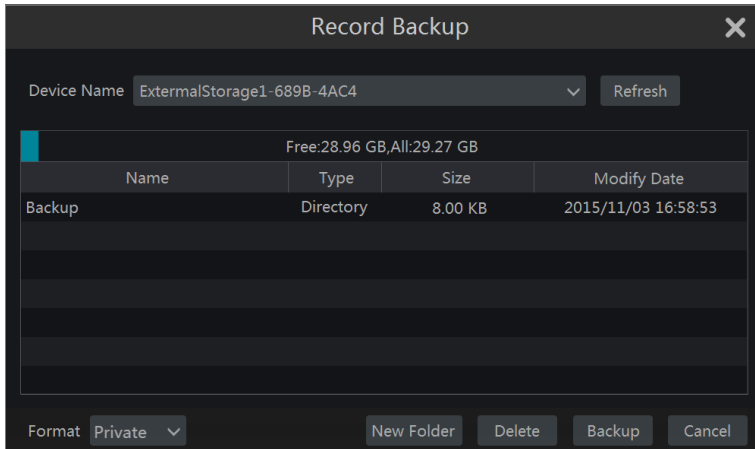

Note: If you back up the record in private format, the system will back up a RPAS player to USB device automatically. The private format record can be played by RPAS player only.


- ⑤ Click “Playback” to play the record in the playback interface (refer to [Playback Interface Introduction](#) for details). Click “Close” to close the interface.

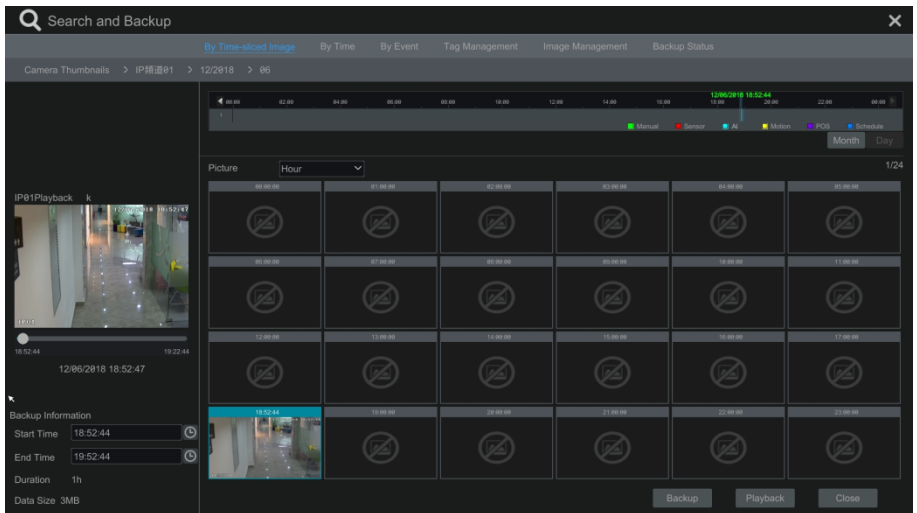

Time Slice Search:



Method One: Click “Year”, “Month” or “Day” button under the record time scale to select the time slice mode. In “Day” mode, click ◀ / ▶ on the left/right side of the time scale to view the record of the last/next day; click “Minute” in the “Picture” option under the time scale


to select “Minute” mode (in “Minute” mode, click the time scale to change the time of the 60 display windows) and click “Hour” to select “Hour” mode.

Method Two: Click  beside “Camera Thumbnail” on the left top corner of the interface to select the time slice mode.

Method Three: Right-click the mouse on any area of the time-sliced interface to go back to the upper interface.

8.4.2 Search, Playback & Backup by Time


- ① Click **Start** → **Search and Backup** → **By Time** to go to “By Time” tab as shown below.
- ② Click  on the bottom of the interface to add playback camera. A maximum of 16 cameras can be added for playback. Click “Modify” on the top right corner of the camera window to change the camera and click “Clear” to remove the camera.
- ③ Click the camera window to play the recording in the small playback box on the left side of the interface. You can set the date on the top left of the interface; check the event type as needed and click the time scale or click  under the time scale to set the time. The camera window will play the recording according to the time and event type you set.
- ④ Drag the color blocks on the time scale to select the record data (or click “Set Backup Time” on the bottom left corner of the interface to set the backup start time and end time) and then click “Backup” for record backup. Click “Playback” to play the recording in the playback interface.

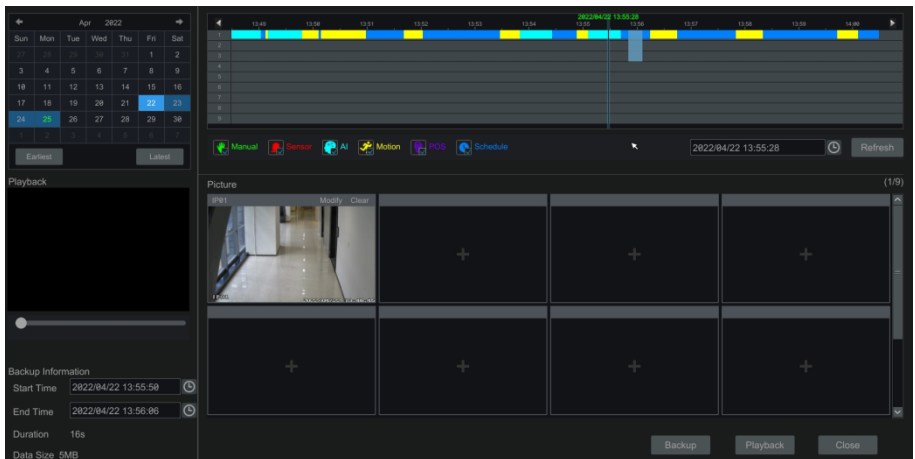

8.4.3 Search, Playback & Backup by Event

Some models may support searching for POS event.

- ① Click **Start** → **Search and Backup** → **By Event** to go to “By Event” tab as shown below.

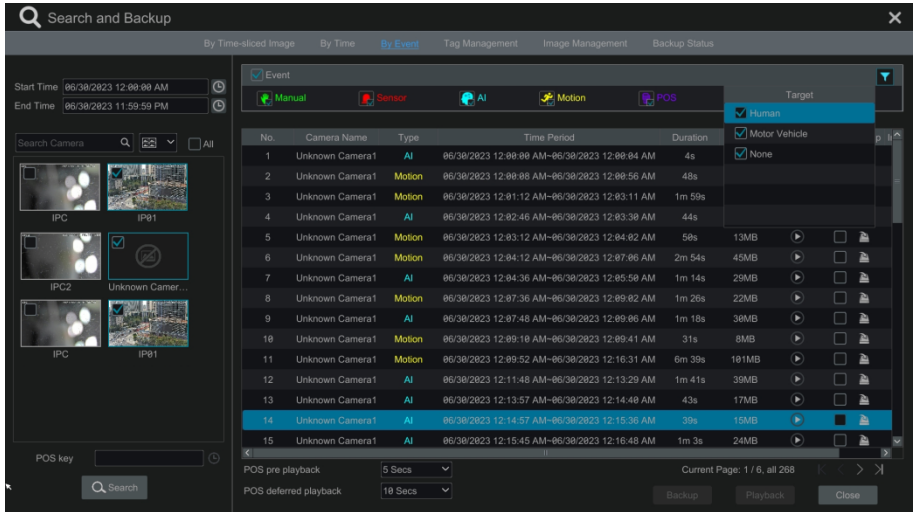

② Check the event type in the interface as required.

③ Click to set the start time and end time on the top left of the interface. Select “Human” or “Motor Vehicle” to show motion (human) or (motor vehicle) as shown below. If “None” is selected, all events will be searched except motion (human) or (motor vehicle).

Note: Only the camera with SMD function has the data of motion (human/vehicle classification).

No.	Camera Name	Type	Time Period	Duration	Data Size	Playback	Backup
1	Unknown Camera1	AI	06/30/2023 12:00:00 AM-06/30/2023 12:00:04 AM	4s	2MB	[Play]	[Backup]
2	Unknown Camera1	Motion	06/30/2023 12:00:00 AM-06/30/2023 12:00:56 AM	48s	13MB	[Play]	[Backup]
3	Unknown Camera1	Motion	06/30/2023 12:01:12 AM-06/30/2023 12:03:11 AM	1m 59s	31MB	[Play]	[Backup]
4	Unknown Camera1	AI	06/30/2023 12:02:46 AM-06/30/2023 12:03:30 AM	44s	17MB	[Play]	[Backup]
5	Unknown Camera1	Motion	06/30/2023 12:03:12 AM-06/30/2023 12:04:02 AM	50s	13MB	[Play]	[Backup]
6	Unknown Camera1	Motion	06/30/2023 12:04:12 AM-06/30/2023 12:07:06 AM	2m 54s	45MB	[Play]	[Backup]

④ Check cameras on the left side of the interface or check “All” to select all the cameras and then click to search the record. The searched record will be displayed in the list.


⑤ Click in the list to play back the record in the popup window. Click to back up one record data or check multiple record data in the list and then click “Backup” for record batch backup. When the record event type is POS record, you can also view the POS information.

⑥ Select one record data in the list and then click “Playback” to play the record in the playback interface.

8.4.4 Search & Playback by Tag

Only if you add the tags can you play the record by tag search. Click **Start** → **Playback** to go to the playback interface and then click on the bottom of the camera window to add tag when you want to mark the playback time point of the selected camera.


Click *Start* → *Search and Backup* → *Tag Management* to go to “Tag Management” tab.

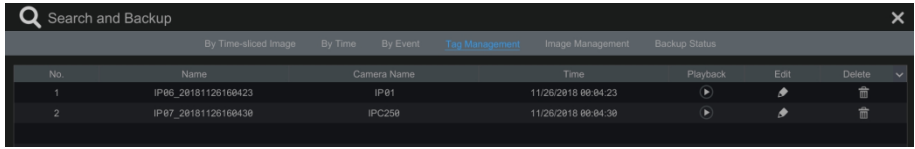


Click in the interface to play the record. Click to edit the tag name. Click to delete the tag.

8.4.5 Image Management

Click *Start* → *Search and Backup* → *Image Management* to go to “Image Management” tab. The system will display all the snapped images automatically in the list.

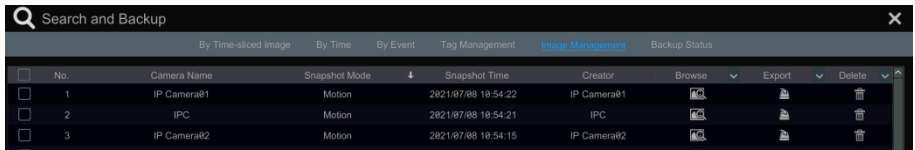

Click to delete the image. Click to open the “Export” window. Select the device name and save path in the window and then click the “Save” button. Click to pop up the “View Image” window. Click to export the image. Click to view the previous image; click to view the next image; click to delete the image; click to play all the images.

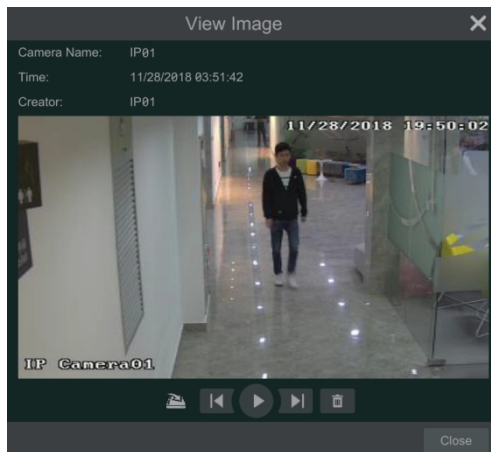

8.4.6 View Backup Status

Click *Start* → *Search and Backup* → *Backup Status* or click on the tool bar at the bottom of

the playback interface to view the backup status.

9 AI Event Management

9.1 Face Recognition

Only some models support alarm trigger based on face comparison. If your device doesn't support face recognition function, please skip the face database and face recognition instructions.


The following are instructions on how to set up the Face Recognition function for the first time:

Set face detection and alarm linkage → Add face group → Add faces to the face group → Enable and set successful recognition (or stranger) → Set successful recognition (or stranger) alarm linkage

9.1.1 Face Detection Settings

Face Detection: Alarms will be triggered if someone intrudes into the pre-defined alarm areas.

① Click *Start* → *Settings* → *AI/Event* → *AI Event* → *Face Recognition* → *Detection* to go to the following interface.

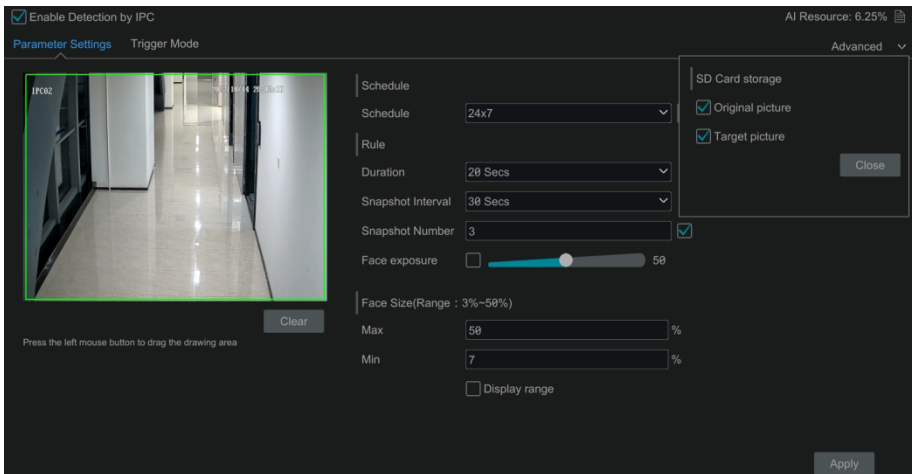


② Select the camera, check “Enable Detection by IPC” and set the duration.

Note: Some models may support face detection by NVR. For these models, the camera without AI function also can be added and used to detect faces through NVR. However, if face detection by NVR is enabled for a camera (without AI), people/vehicle perimeter detection cannot be enabled simultaneously, and vice versa.

③ Set the schedule. Click “Manage” to set the desired schedule. Please refer to [Schedule](#)

Settings for details.

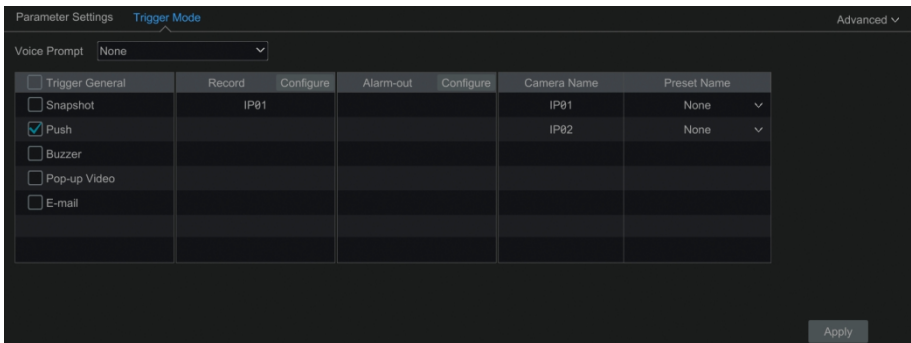

- ④ Set the snapshot interval and snapshot number. The snapshot interval refers to the time interval that the camera captures the same face during its continuous tracking period. The snapshot number refers to the picture number of the same face captured during its continuous tracking period (For example: the snapshot interval is set to “30 seconds” and the snapshot number is set to “3”; then the camera will capture the same face once every 30 seconds and it will capture this face 3 times at most during its continuous tracking period).
- ⑤ Enable face match exposure as needed. When the brightness of the captured face is not enough, it can be enabled. (Only some IPCs support this function)
- ⑥ Set the alarm area. Drag the mouse to draw a detection area. Click “Clear” to delete the alarm area. Then set the detectable face size by defining the maximum value and the minimum value (The default size range of a single face image occupies from 3% to 50% of the entire image).
- ⑦ Enable “Original picture” or/and “Target picture” as needed. If enabled, the system will automatically save the corresponding images on the SD card.
- ⑧ Click “Apply” to save the settings.
- ⑨ Click “Trigger Mode” to go to face detection alarm linkage setting interface:




Face Detection Alarm Linkage Configuration:

- Trigger “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail” as needed.

Voice Prompt: Please upload the audio file in local audio alarm interface first (click Start→Settings→AI/Event→Event Notification→Audio). Please see [Audio](#) for details.

Record: Click the “Configure” button to open the window. Select a camera on the left side and then click  to set the camera as the trigger camera. Select a trigger camera on the right side and then click  to cancel the trigger camera. Click “OK” to save the settings. The trigger cameras will record automatically when faces are detected.

Alarm-out: Click the “Configure” button to open the window. Then the “Trigger Alarm-out” window will pop up automatically. Configure the trigger alarm-out in the window. The system will trigger the alarm-out automatically when faces are detected. You need to set the delay time and the schedule of the alarm outputs. See [Alarm-out](#) for details.

Preset: Click  and then select the preset for each camera. To add presets, please see [6.2 Preset Setting](#) for details.

Snapshot: If it is enabled, the current camera will capture images automatically when faces are detected.

Push: If it is enabled, the system will send messages when faces are detected.

Buzzer: if it is enabled, the system will begin to buzz when faces are detected. To set the delay time of the buzzer, please see [Buzzer](#) for details.

Pop-up Video: if it is enabled, the system will open the corresponding video automatically when faces are detected. To set the duration time of the video, please see [Display](#) for details.


E-mail: if it is enabled, the system will send an e-mail when faces are detected. In the meanwhile, it will attach the captured face picture and the original picture so that you can view the whole scene when the alarm occurs. Before you enable the email, please configure the recipient's e-mail address first (see [E-mail Configuration](#) for details).

Enable “IPC_Audio” or “IPC_Light” as needed (only some IPCs support these two functions). To set the IPC voice and its times and volume, please refer to [Audio](#) for details. To set the light flashing time and frequency of the IPC, please refer to [Light](#) for details.

⑩ Click “Apply” to save the settings.

9.1.2 Face Database Management


① Click *Start* → *Settings* → *AI/Event* → *AI Event* → *Face Recognition* → *Face Database* to go to the following interface as shown below.

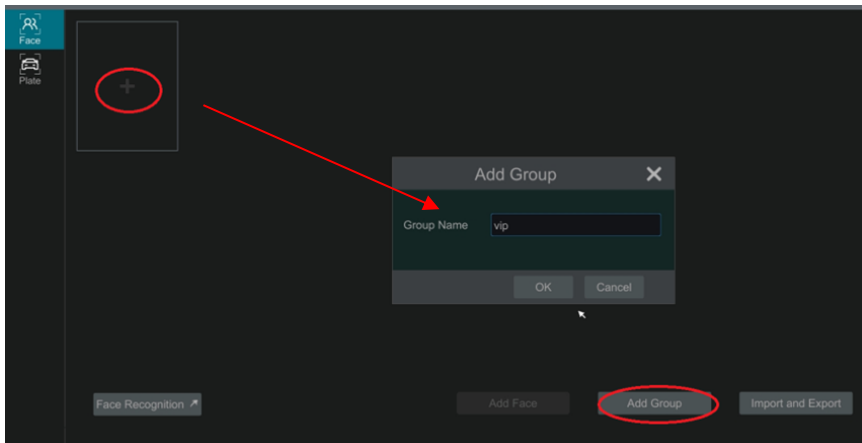

For the first time, you can click “+” or “Add Group” to add groups.

② To add targets for each group.


- Select a list and then click  to expand the list as shown below.

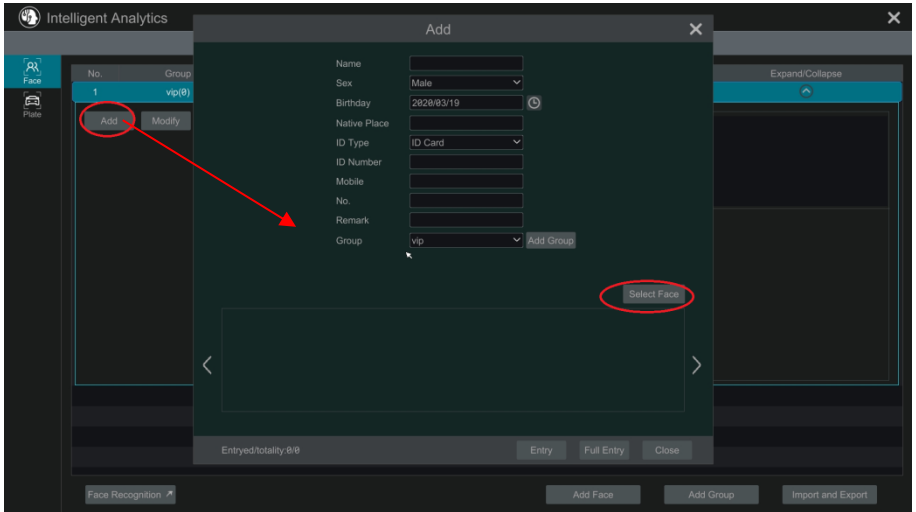

- Click “Add” and then click “Select Face” to add face images. You can add faces from snapshot gallery or external faces.

Adding faces from snapshot gallery: Select search time or self-define the search time and then click “Search” to search target faces. Then select the desired faces and click “Select”.

Note: The picture marked with a green icon can be added to the face database. Those can’t likely have resolution issues.

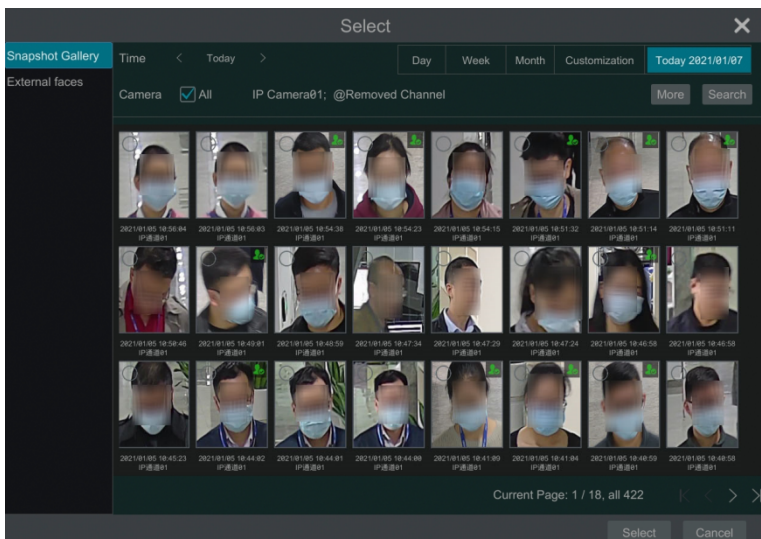

Add external faces


Save the face pictures on your USB storage device and then insert the USB storage device into the USB port of the NVR.

Go to the face database interface. Click to expand the group and then click “Add”. Select “External faces” to select face pictures. You can select one face to add or multiple faces to add. To add multiple faces: a. put face pictures and the description file (.csv or .txt) to one specific folder (please edit the detailed descriptions of these pictures according to the personal information description); b. clicks “All” to select all face pictures; c. clicks “Full Entry”.

Note: the added image must be less than 70KB and the image format shall be “.jpg” and “.jpeg”.

- After that, add the corresponding information, like name, gender, birthday, ID number, phone number and so on.


Having saved the target image, click the image and then the detailed information will be listed on the right.

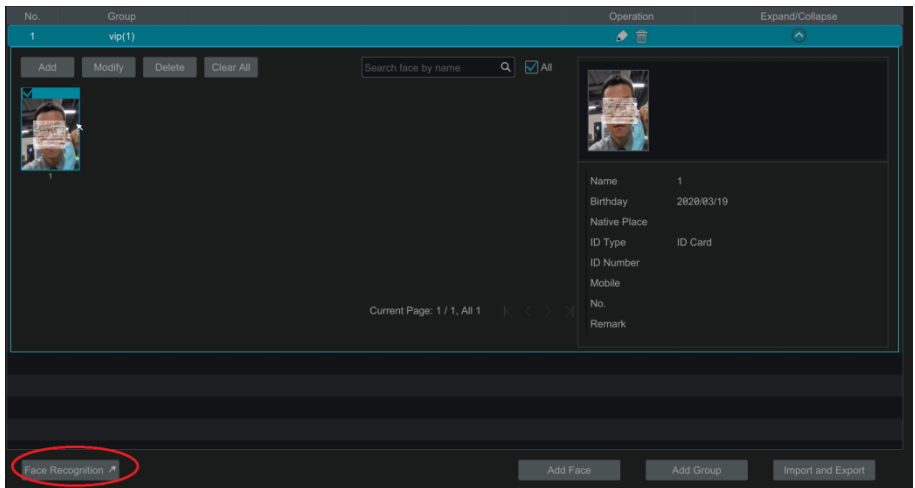


- Import and Export Face database
Insert your mobile storage device into the USB interface of the NVR and then click “Import and Export” to import or export the face database settings.
The exported face database file (cvs+jpg/tbd) can be directly imported to the face database to make it very convenient for you to transfer one NVRs face database file to other NVRs.

9.1.3 Face Recognition Settings

After the face database and face pictures are added, click “Face Recognition” to return to the face recognition setting interface. Click the “Recognition” tab to go to the following interface.

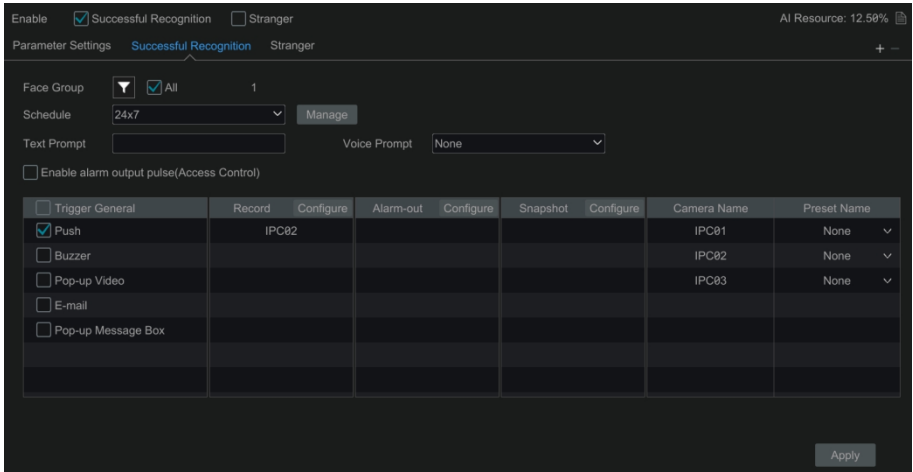


- ① Enable “Successful Recognition” or “Stranger”. Click “Parameter Settings” to set the similarity of the matching face group.

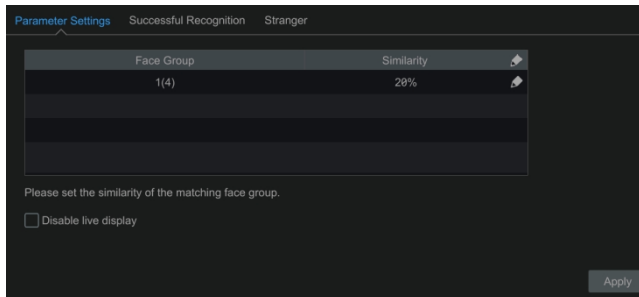

Disable live display: if checked, the live view interface (target detection tab) will not display captured faces in real time.

- ② Set the alarm linkage items for successful recognition.
- Select one or more face groups and then choose the schedule. Click “Manage” to set the schedule.
 - Set the text prompt. When the captured face is matched successfully, the text will appear on the right of the live view interface.
 - Enable alarm output pulse (access control).
 - Trigger record, snapshot, alarm-out, buzzer, push, pop-up video, E-mail and pop-up message box as needed. The alarm linkage settings are similar to the face detection alarm (see [Face Detection Settings](#) for details).
 - Click “Apply” to save the settings.
- ③ Set the stranger alarm linkage items. When the captured face picture doesn’t match the face

pictures in the face database or their similarity is lower than the set value, the captured person will be regarded as a stranger.

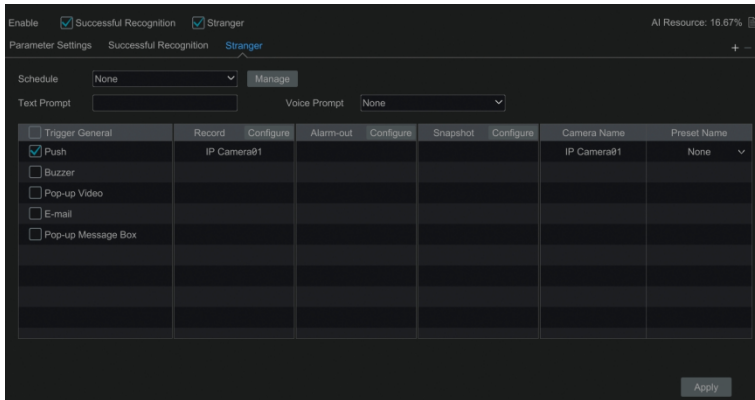


- Configure the schedule
- Set the text prompt. The text will show on the captured picture.
- Trigger record, snapshot, alarm-out, buzzer, push, pop-up video, E-mail, Preset and pop-up message box as needed. The alarm linkage settings are similar to the face detection alarm (See [Face Detection Settings](#) for details).
- Click “Apply” to save the settings.

④ Click “+” to add more successful recognition tasks. Select the added task and then click “-” to delete it.

9.2 License Plate Recognition


Please add an ANPR camera before you are using this function. If your camera doesn’t support this function, please skip the following instructions.

When setting up an LPR for the first time, please use the following procedures:

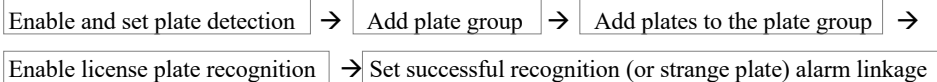

9.2.1 License Plate Detection Settings

Click *Start* → *AI/Event* → *AI Event* → *LPR* to go to the following interface. Select an ANPR camera and click the “Detection” tab as shown below.

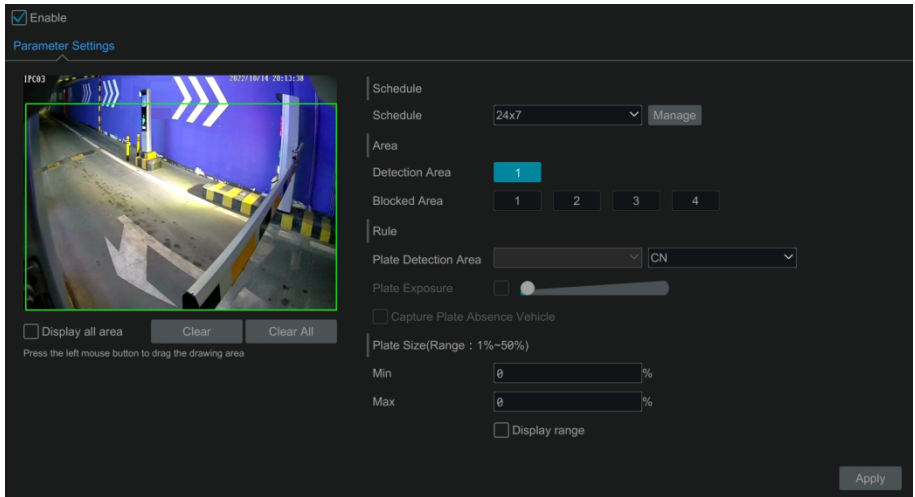


- Set the schedule.
- Set the area and plate exposure as needed.
 - Set the alarm area. Drag the mouse to draw a detection area. Click “Clear” to delete the alarm area.
 - Set the blocked area. Select the number and then draw a blocked area. Up to 4 areas can be set up. After you set the blocked area, this area will not be detected.
 - Click “Display all area” to view all blocked and detection areas.
 - Click “Clear All” to clear all blocked and detection areas.
- Check “Capture plate absence vehicle” as needed.
- Set the plate size by defining the maximum value and the minimum value (The default size range of a single plate occupies from 5% to 50% of the entire image).
- Display range: if enabled, the set maximum detection box and the minimum detection box can be displayed on the left window.
- Click “Advanced” to set the recognition mode as needed (only some LPR cameras support).


9.2.2 Plate Database Management


In the LPR interface, click the “Plate Database” tab to go to the plate database management interface as shown below.

For the first time, you can click “+” or “Add Group” to add groups.

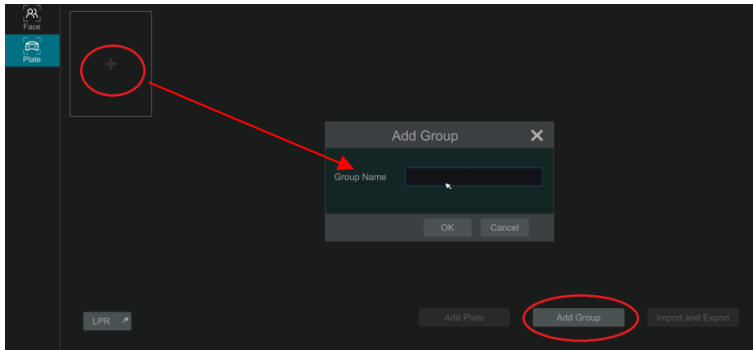



Add plates to each group:

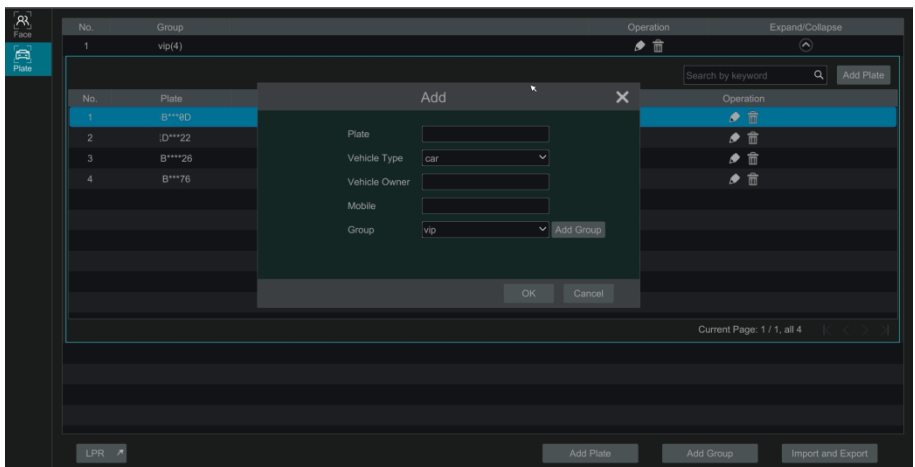- 1 Click  to extend the group. Click “Add Plate” to pop up the following window.



- 2 Enter the plate, vehicle owner and mobile phone number.
- 3 Select the vehicle type and group.
- 4 Finally, click “OK” to complete.

Select the added plate and then click  to modify its information; click  to delete this plate. The plates can be imported and exported in bulk by clicking “Import and Export”. You can click “Plate Information Description” to view the detailed information about how to import or export the plate list.

9.2.3 License Plate Recognition Settings

- 1 In the LPR interface, click the “Recognition” tab. Then enable “Successful Recognition” or

“Strange Plate”.

The screenshot shows the configuration interface for the 'Strange Plate' alarm. At the top, there are checkboxes for 'Enable', 'Successful Recognition' (checked), and 'Strange Plate'. Below this, there are tabs for 'Successful Recognition' and 'Strange Plate'. The 'Successful Recognition' tab is active, showing a 'Plate Group' dropdown set to 'All' with a count of 1. The 'Schedule' is set to '24x7' with a 'Manage' button. There are input fields for 'Text Prompt' and 'Voice Prompt' (set to 'None'). A checkbox for 'Enable alarm output pulse(Access Control)' is present. Below these settings is a table with columns for 'Trigger General', 'Record', 'Configure', 'Alarm-out', 'Configure', 'Snapshot', 'Configure', 'Camera Name', and 'Preset Name'. The table contains several rows for different alarm actions: 'Push', 'Buzzer', 'Pop-up Video' (highlighted), 'E-mail', and 'Pop-up Message Box'. The 'Record' column for 'Push' is set to 'IPC03'. The 'Camera Name' column for 'Push', 'Buzzer', and 'Pop-up Video' is set to 'IPC01', 'IPC02', and 'IPC03' respectively. The 'Preset Name' column for 'Push', 'Buzzer', and 'Pop-up Video' is set to 'None'. An 'Apply' button is located at the bottom right.


- ② Set the successful recognition alarm linkage.
 - Select one or more plate groups and then choose the schedule. Click “Manage” to set the schedule.
 - Set the text prompt. When the captured plate is matched successfully, the text will appear on the right of the live view interface.
 - Enable alarm output pulse (access control).
 - Trigger record, snapshot, alarm-out, buzzer, push, pop-up video, E-mail and pop-up message box as needed. The alarm linkage settings are similar to the face detection alarm (See [Face Detection Settings](#) for details).
- ③ Set the strange plate alarm linkage. When the captured plate picture doesn’t match the plates in the plate database or their similarity is lower than the set value, the captured plate will be regarded as a strange plate.

9.3 Line Crossing Detection

Tripwire/Line Crossing Detection Configuration:

Alarms will be triggered if the people or vehicles cross the pre-defined alarm line.

- ① Click **Start**→**Settings**→**AI/Event**→**AI Event** →**Line Crossing** to go to the following interface.

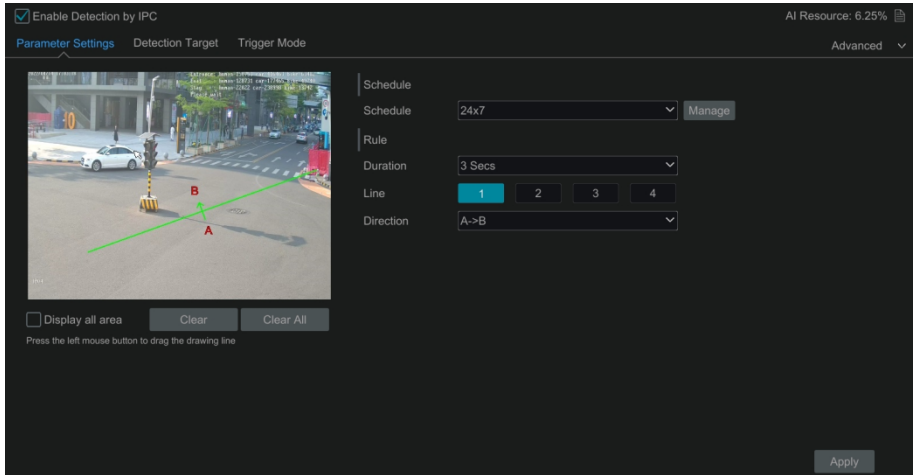

② Select the camera, enable line crossing detection by IPC and set the duration.

Note: Some models may support line crossing detection by NVR.

③ Set the schedule.

④ Select the direction.

Direction: A<->B, A->B and A<-B optional. It is the crossing direction of the target that crosses over the alert line.

A<->B: the alarm triggers when the target crosses over the alert line from B to A or from A to B.

A->B: the alarm triggers when the target crosses over the alert line from A to B.

A<-B: the alarm triggers when the target crosses over the alert line from B to A.

⑤ Draw line. Refer to the interface as shown above. Drag the mouse in the image to draw an alert line. Click the “Clear” to delete the alert line.

⑥ Click “Detection Target” to choose the detection target and the sensitivity. The detection target includes human, motor vehicle and non-motor vehicle. Only some IPCs can detect human or vehicle separately. If the camera doesn’t support this function, please skip this step.

⑦ Click “Advanced” to choose “Save original picture” or “Save target picture” on the SD card of the camera. (If your camera doesn’t support this function, please skip this step).

⑧ Click “Trigger Mode” to configure line crossing alarm linkage items.

- Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm linkage settings are the same as the face detection alarm (see [Face Detection Settings](#) for details).

- Enable “IPC_Audio” or “IPC_Light” as needed (only some IPCs support these two functions). To set the IPC voice and its times and volume, please refer to [Audio](#) for details. To set the light flashing time and frequency of the IPC, please refer to [Light](#) for details.

⑨ Click “Apply” to save the settings.

9.4 Intrusion Detection


Intrusion Detection Configuration:

Alarms will be triggered if the people or vehicles intrude into the pre-defined area.

- ① Click **Start** → **Settings** → **AI/Event** → **AI Event** → **Intrusion** to go to the following interface.
- ② Select the camera, enable the intrusion detection by IPC and set the duration.

Note: Some models may support line crossing detection by NVR.

- ③ Set the schedule.
- ④ Select regional activities. “Appear” or “Cross” can be selected (if your camera doesn’t support region entrance/exiting detection, “Cross” will not be enabled). If “Cross” is selected, you can choose the crossing direction.
- ⑤ Select the alarm area. Up to 4 alarm areas can be set up.
- ⑥ Draw the alarm area of the intrusion detection. Refer to the interface as shown below. Click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area).

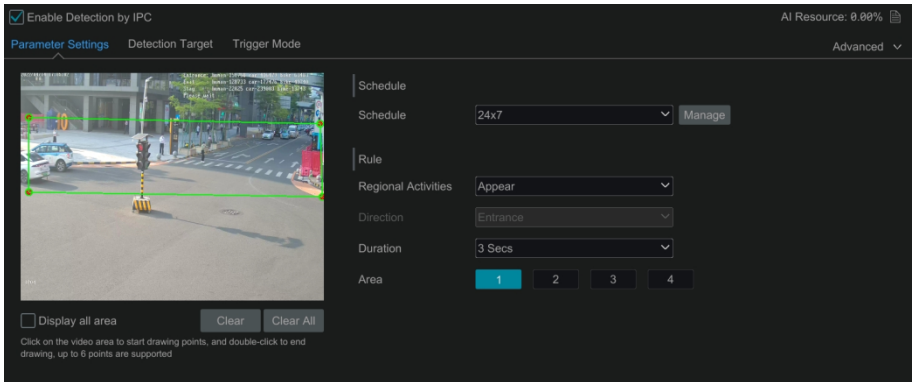

- ⑦ Click “Detection Target” to choose the detection target and the sensitivity. The detection target includes human, motor vehicle and non-motor vehicle.
- ⑧ Click “Trigger Mode” to configure intrusion detection alarm linkage items.
 - Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm linkage settings are the same as the face detection alarm (see [Face Detection Settings](#) for details).
 - Enable “IPC_Audio” or “IPC_Light” as needed. (only some IPCs support these two functions). To set the IPC voice and its times and volume, please refer to [Audio](#) for details. To set the light flashing time and frequency of the IPC, please refer to [Light](#) for details.
- ⑨ Click “Copy To” to copy all settings to other cameras.
- ⑩ Click “Apply” to save the settings.

9.5 Abandoned/Missing Object Detection

① Click **Start**→**Settings**→**AI/Event**→**AI Event**→**Object Abandoned/Missing** to go to the following interface.

② Set the schedule.


③ Select the camera, enable the object detection and set the duration and detect type. There are two detection types: Abandoned object and missing object.

Abandoned object: Alarms will be triggered if there are articles left in the pre-defined detection area.

Missing object: Alarms will be triggered if there are articles missing in the detection area drew by the users.

④ Select the alarm area and area name. A maximum of 4 alarm areas can be set.

⑤ Draw the alarm area of the object detection. Refer to the interface as shown below. Click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the “Clear” to delete the alarm area.

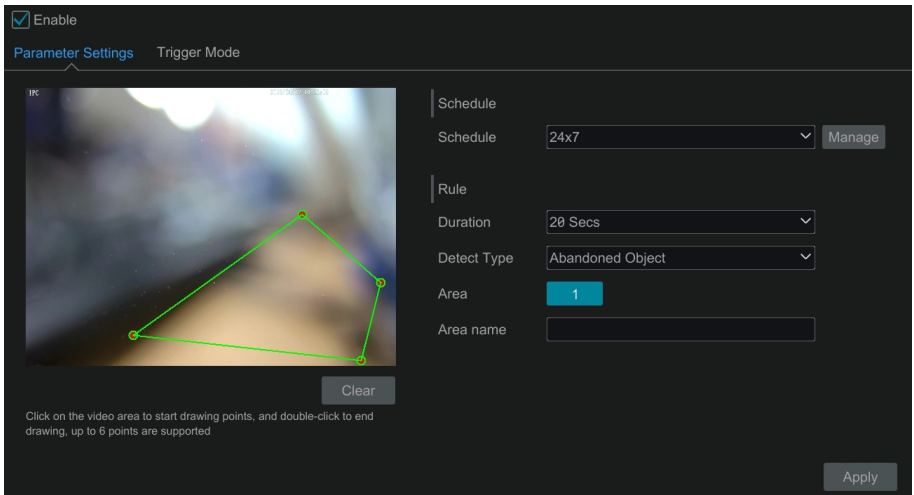

⑥ Click “Trigger Mode” to configure abandoned/missing object detection alarm linkage items. Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm linkage settings are the same as the face detection alarm (see [Face Detection Settings](#) for details).

⑦ Click “Apply” to save the settings.


9.6 Crowd Density Detection

Only some IPCs may support this function.

Crowd Density Configuration:

Alarms will be triggered if the crowd density exceeds the set threshold value in the pre-defined area.

① Click *Start* → *Settings* → *AI/Event* → *AI Event* → *Crowd Density* to go to the following interface.

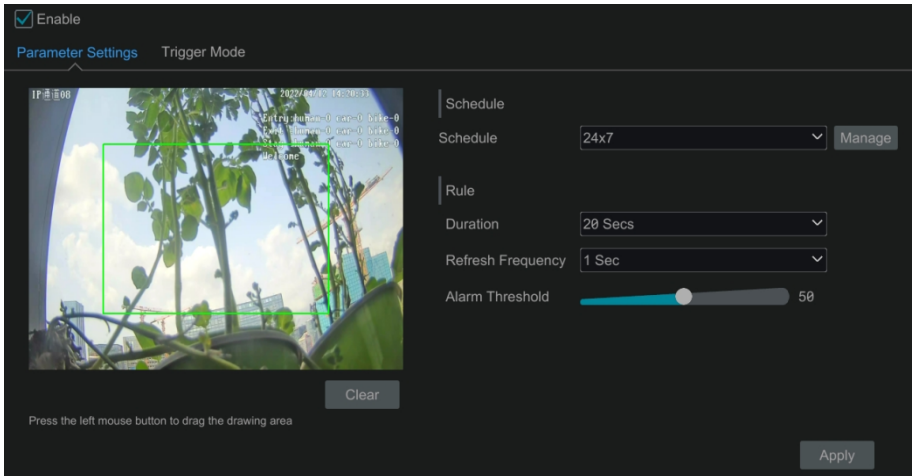


② Select the camera, enable crowd density detection and set the schedule, duration, refresh frequency and alarm threshold.

Refresh Frequency: Refers to the refresh time of the detection result report.

Alarm Threshold: Alarms will be triggered once the percentage of the crowd density in a specified area exceeds the pre-defined threshold value.

③ Select the alarm area. Draw the alarm area for the crowd density detection. Refer to the interface as shown above. Drag the mouse to draw a rectangle area. Click the “Clear” to delete the alarm area.

④ Click  to configure crowd density detection alarm linkage items. Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm linkage settings are the same as the face detection alarm (see [Face Detection Settings](#) for details).

⑤ Click “Apply” to save the settings.

9.7 Target Counting


Only some IPCs may support this function.

- **Human/Motor Vehicle/Non-Motor Vehicle Counting**

The information of human/motor vehicle/non-motor vehicle can be calculated and sent by day, by week and by month, so that you can receive and analyze these statistics on time.

Only some IPCs support this function. If your camera doesn't support this function, please skip the following instructions.

① Click **Start**→**Settings**→**AI/Event**→**AI Event**→**Target Counting** to go to the following interface.

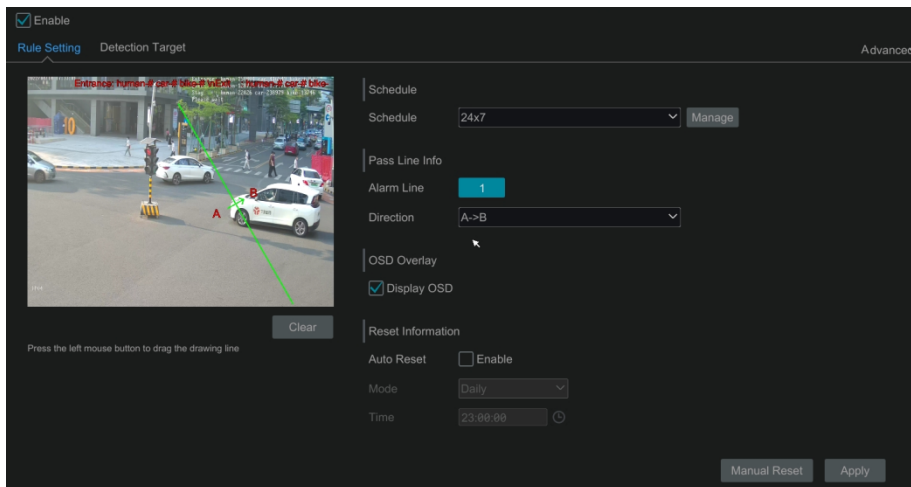

② Enable line crossing counting.

③ Set the schedule.

④ Drag the mouse on the small window to draw the crossing line. Click “Clear” to delete the alert line.


Direction: A->B and A<-B are optional. It is the crossing direction of the target that crosses over the alert line.

⑤ Check “Statistical OSD”, the statistical information will be displayed on the live view interface.

⑥ Set the reset information. You can set reset information manually or enable “Auto Reset” as needed.

⑦ Click the “Detection Target” tab to set the detection target, including human, motor vehicle and non-motor vehicle.

⑧ Click “Advanced” to open the following window. You can select “Save original picture” or “Save target picture”.

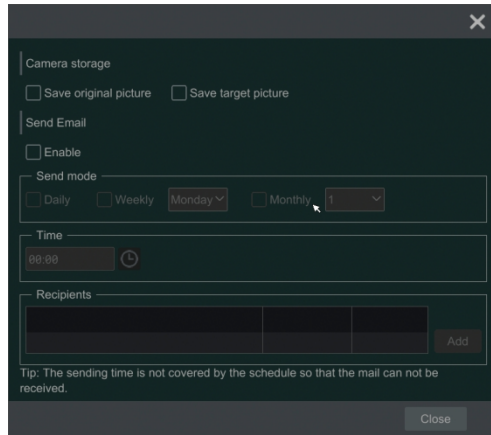


In the above interface, you can send an Email to a specified person on a daily/weekly/monthly basis regarding the target counting. Click “Add” to add the recipient” and then enable “Send Email” and select “Send mode” and time.

⑨ Click “Apply” to save the settings.

9.8 Exception Detection

Exception Detection Configuration:

① Click **Start** → **Settings** → **AI/Event** → **AI Event** → **Exception Detection** to go to the following interface.

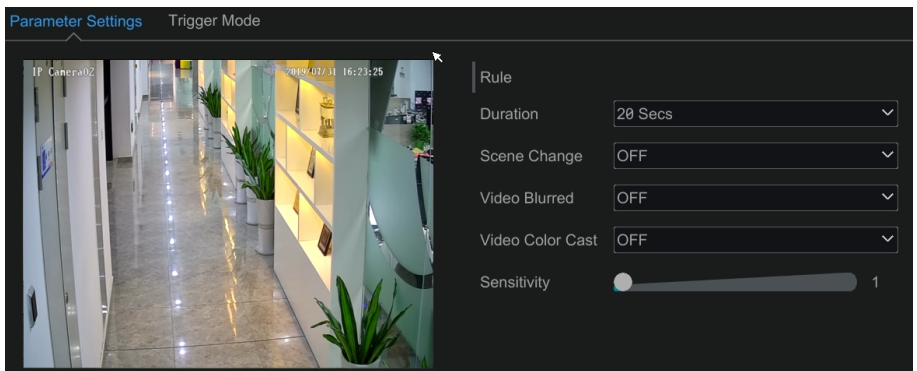

② Select the camera and detection duration and then enable the relevant detection as needed.

Scene Change: Alarms will be triggered if the scene of the monitor video has changed.

Video Blurred: Alarms will be triggered if the video becomes blurry.

Video Color Cast: Alarms will be triggered if the image is abnormal caused by color deviation.

- ③ Set the sensitivity of the exception detection.
- ④ Click “Trigger Mode” to configure exception alarm linkage items. Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm linkage settings are the same as the face detection alarm (see [Face Detection Settings](#) for details).
- ⑤ Click “Apply” to save the settings.


9.9 Fire Detection

Only when the security thermal cameras are connected, can the fire detection be available.

Please note this is only intended as a supplement to official fire detection methods and should not be relied on as a primary alert source.

Fire Detection: Alarms will be triggered when the camera detects a fire source through the thermal imaging.

- ① Click *Start* → *Settings* → *AI/Event* → *AI Event* → *Fire Detection* to go to the following interface.

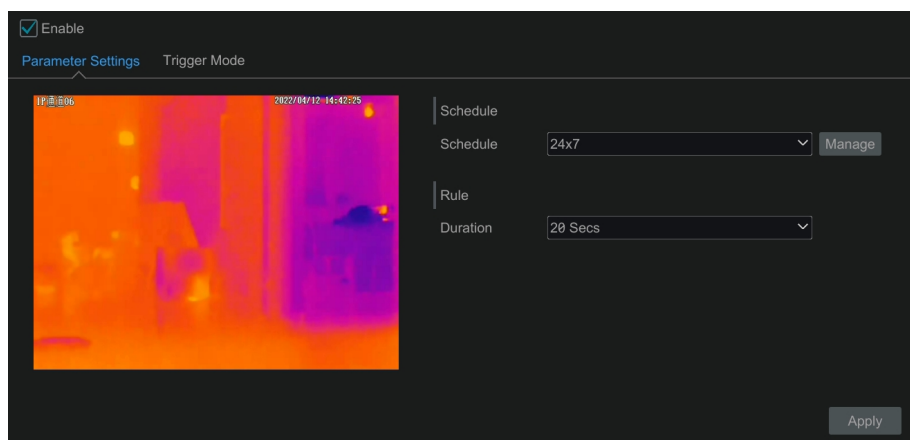

- ② Set the schedule and the alarm duration time.
- ③ Click “Trigger Mode” to configure exception alarm linkage items. Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail”. The alarm linkage settings are the same as sensor alarm (see [Sensor Alarm](#) for details).
- ④ Click “Apply” to save the settings.


9.10 Temperature Detection

Only when the security thermal cameras are connected can the temperature detection be available.

Temperature Measurement: When a temperature of the pre-defined point/line/area exceeds the

temperature threshold value, alarms will be triggered.

① Click **Start**→**Settings**→**AI/Event**→**AI Event**→**Temperature Detection** to go to the following interface.

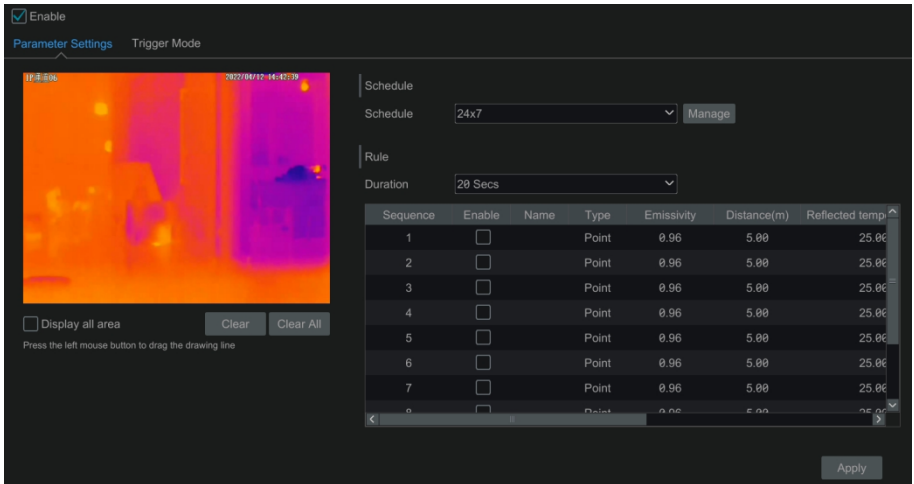

② Set the schedule and the alarm duration time.

③ Set thermography rule. Select the rule type, including Point, Line and Area.

Emissivity: Set the emissivity of the target. The emissivity of each object is different.

Distance: The distance between the target and the camera.

Reflected temperature: If there is any object with high emissivity in the scene, set the reflective temperature to correct the ambient temperature. The reflective temperature should be set the same as the temperature of the high emissivity object.

Set the alarm rule, alarm temperature and alarm output. For example, select Alarm Rule as Above (Average Temperature), set the alarm temperature to 100°C and check alarm output. Alarms will be triggered when the average temperature of the target is higher than 100°C.

④ Set the point, line or area on the small window.

Point setup: After the type is set to “Point”, click on the image to set the point. Up to 10 points can be set in the above interface.

Line setup: After the type is set to “Line”, drag the mouse on the image to draw a line. To ensure the accuracy of temperature measurement, it is recommended to set not more than two lines at the same time.

Area setup: Click around the area where you want to set as the alarm area on the image (the alarm area should be a closed area). To ensure the accuracy of temperature measurement, it is recommended to set not more than two areas at the same time.


⑤ Click “Trigger Mode” to configure exception alarm linkage items. Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail”. The alarm linkage settings are the same as sensor alarm (see [Sensor Alarm](#) for details).

- ⑥ Click “Apply” to save the settings.

9.11 Video Metadata

Video Metadata: Human, motor vehicle and non-motor vehicle in the video can be classified, counted and captured and the relevant features can be extracted and displayed on the live interface.

- ① Click *Start* → *Settings* → *AI/Event* → *AI Event* → *Video Metadata* to go to the following interface.

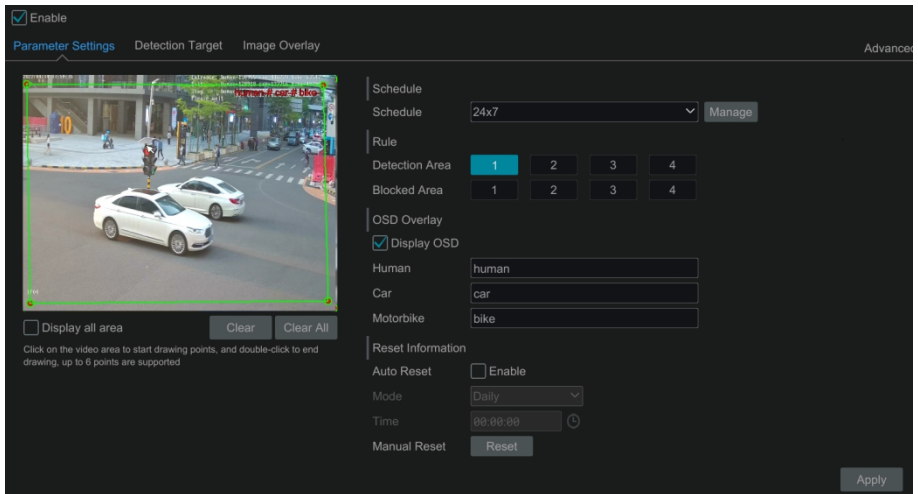

- ② Enable video metadata and then set the schedule.

- ③ Set the detection area and blocked area.

Detection Area: 4 detection areas can be set. Targets that enter the pre-defined detection area will be counted and captured.

Blocked Area: 4 blocked areas can be set. Targets that enter the pre-defined blocked area will not be counted and captured.

To set the detection area: Select the number and then set the detection area. Then click around the area where you want to set as the alarm area on the image (the alarm area should be a closed area).

To set blocked area: Select the number and then set the blocked area. The setting steps are the same as detection area settings.

Display OSD: If enabled, you can see the statistical information of human, motor vehicle and non-motor vehicle on the screen. Statistical OSD information can be customized as needed.

- ④ Set the reset information. Auto reset or manual reset can be set as needed.

- ⑤ Advanced settings. Click “Advanced” to enter the advanced setting interface. Select the recognition mode as needed. Interval mode and instant mode can be selectable.

Interval mode: the system will push the captured picture to the live interface according to the set interval time.

Instant mode: the system will push the captured picture immediately once a target is detected.

- ⑥ Set the detection target and sensitivity.
- ⑦ Select the attribute information of the target. When the target is detected, the information you select will be displayed under the captured image.
- ⑧ Click “Apply” to save the settings

10 Intelligent Analytics



10.1 Target Detection View


Only some models support target detection view. If your device doesn't support it, please skip the following instructions.

10.1.1 Human Body/Vehicle Detection View

Only when the camera supports human body/vehicle detection, can you view the real-time captured people or vehicle pictures. The setting steps are as follows:

① Enable the Line crossing/Intrusion/Target counting function of IPCs/NVR, draw the line or area and choose the detection target (see [Line Crossing Detection](#), [Intrusion Detection](#) and [Target Counting](#) for details).

② Go to the live view interface and then click  to go to the target detection interface of this channel. In this interface, you can switch the channel on the top right. You can also click  on the top right corner of the live view interface and then choose the target detection tab to go to the target detection interface of multi-channel as shown below. Note that only some models support multi-channel target detection function. Click the captured picture on the right of the live interface to see the detailed snapshot information, such as snapshot time, camera, event type and target type.

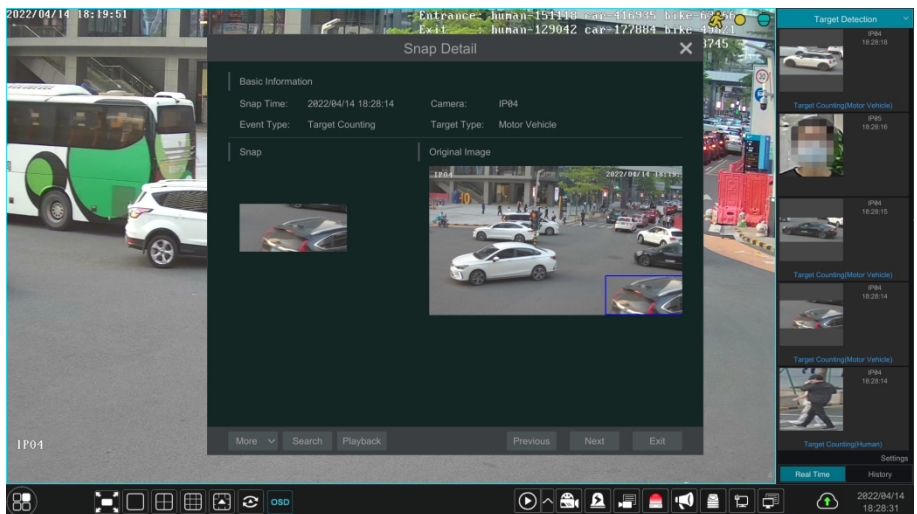



Click “More” to see a dropdown list. You can export the captured pictures by clicking “Export” or view the target ID by clicking “Information”. Click “Search” to go to smart human body/vehicle search interface. The system will automatically search for captured people/vehicles. Click “Playback” to go to the playback interface.


10.1.2 Face Detection/Match View





Only the face recognition NVR supports the following functions. If your NVR doesn't support them, please skip the following instructions.

The setting steps are as follows:

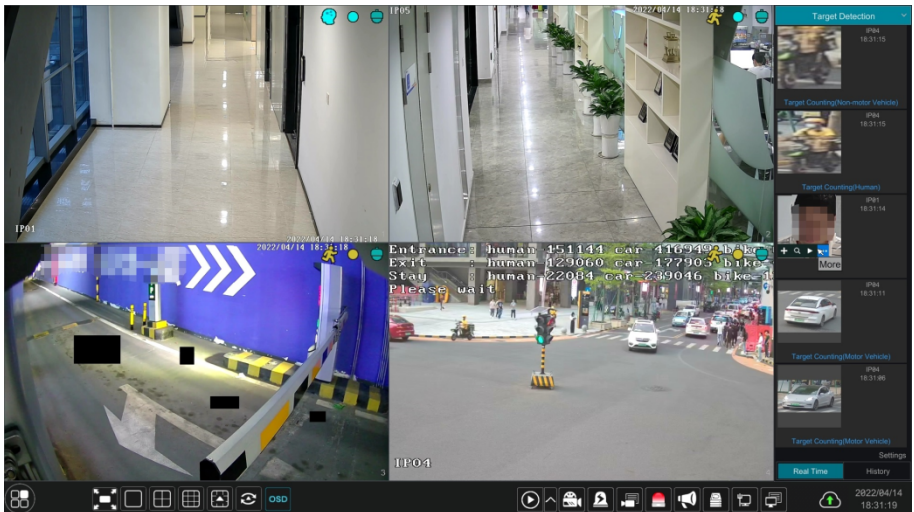- ① Enable face detection function (see [Face Detection Settings](#) for details).
- ② Enable face recognition function and set the alarm linkage items (see [Face Recognition Settings](#) for details).
- ③ Go to the live view interface and click on a face detection channel. This will bring a toolbar under the channel. Then click  to go to the target detection interface of this channel. In this interface, you can switch the channel on the top right. You can also click  on the top right corner of the live view interface and then choose the target detection tab to go to the target detection interface of multi-channel as shown below.


Note: Multi-channel target detection function is only available for some models.



For unknown faces, you can select this face and click  under the captured face to register this face (see the following picture); click  to quickly go to the smart face search interface where you can search the matching facial information; click  to quickly go to the smart face playback interface; click  to view snapshot details.

Before registering face pictures, please add groups for them in advance (see [Face Database Management](#) for details).


After the face pictures are registered, the system will compare them automatically the next time the corresponding faces are captured. Refer to the following picture.

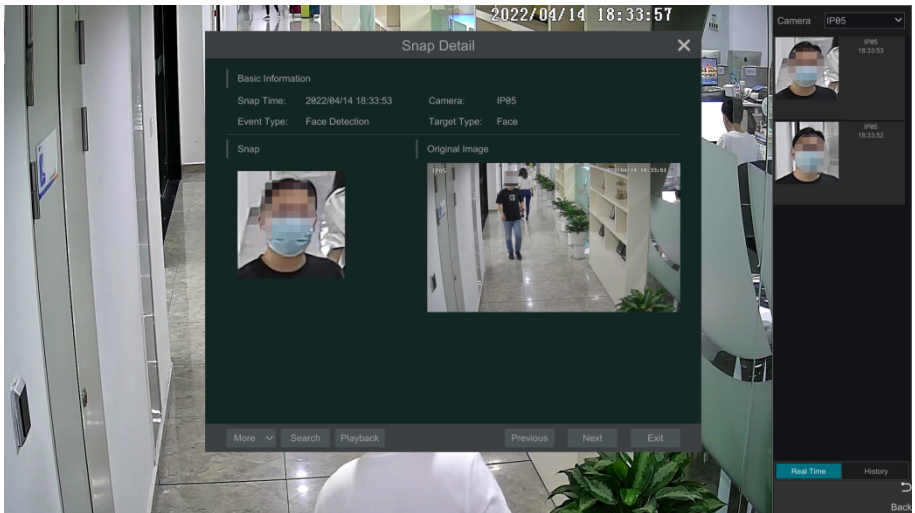

Double click a face picture to see the snapshot details, such as snapshot picture, original image, snapshot time and camera. Click “more” and then a dropdown list will display with more options. Click “Register” to register the current snapshot. Click “Search” to go to face search interface.

Click “Playback” to go to the playback interface. Click “Export” to export this snapshot details. Click “Information” to view face ID.

In the face match interface, click “Settings” to open the following window.

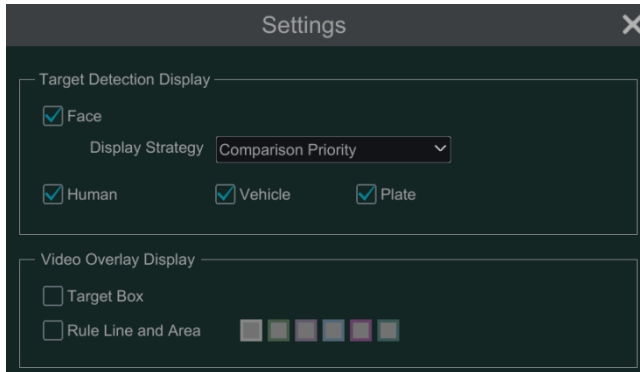


Target Detection Display: Face, human body, vehicle or plate can be enabled. If disabled, the captured target picture will not be displayed under the target detection tab in the live view interface.

Display Strategy: Two options: Comparison priority and only comparison

Video Overlay Display:

If “Target box” is clicked, you will see the target traced by a little red box.

If “Rule Line and Area” is checked, you will see the rule line of line crossing detection and detection area of intrusion detection displayed on the screen. You can select the color of the rule line and area as needed.

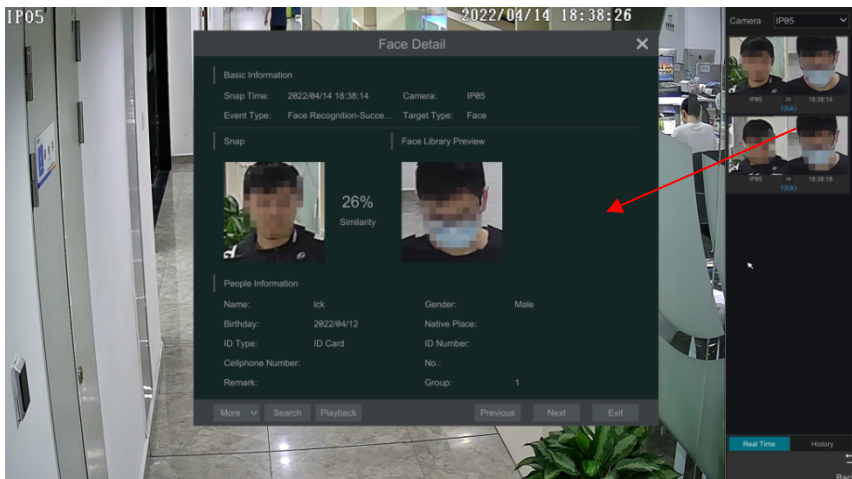

When a captured face picture is successfully recognized, click the picture on the right to open a face detail window as shown above. In this window, you can see the captured face picture, the matched picture from face library and the relevant information. You also can view the original image, search image by snapshot, play back by snapshot and export the face details by clicking “More” button.


Additionally, you can view the history of captured face pictures and face match information in the face match interface by clicking “History” tab. Besides registering face pictures in the live view interface, you can also add target face pictures in the face database interface.


Note: if you enter a remark when adding a face picture to the face database, the remark information (instead of the person’s name) will be shown under the picture after successful recognition.


10.1.3 License Plate Detection/Recognition View




Only when the ANPR camera is added and enabled can license plates be captured and matched. The setting steps are as follows

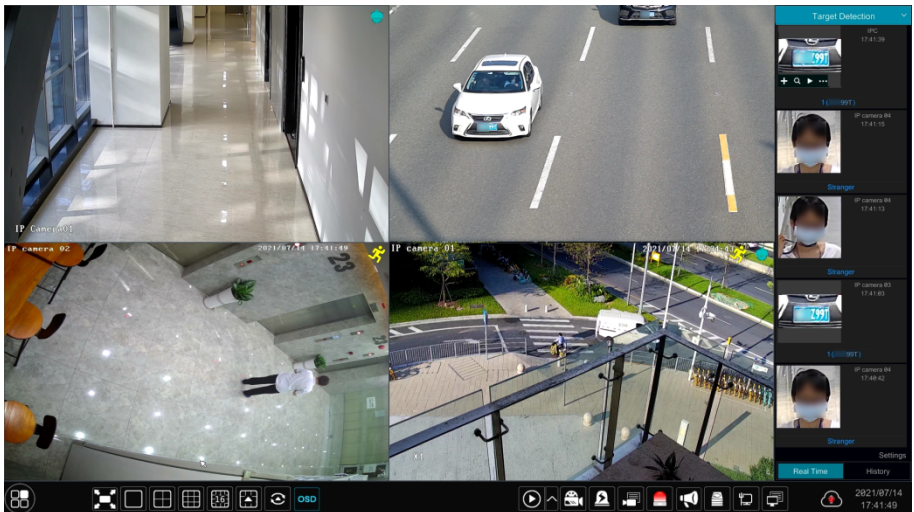- ① Enable the plate detection function (See [License Plate Detection Settings](#) for details). Then you can see the captured plates displayed in the live view interface as shown below.

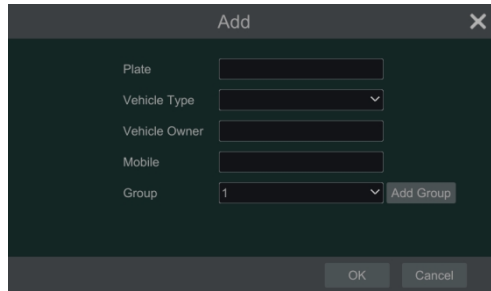


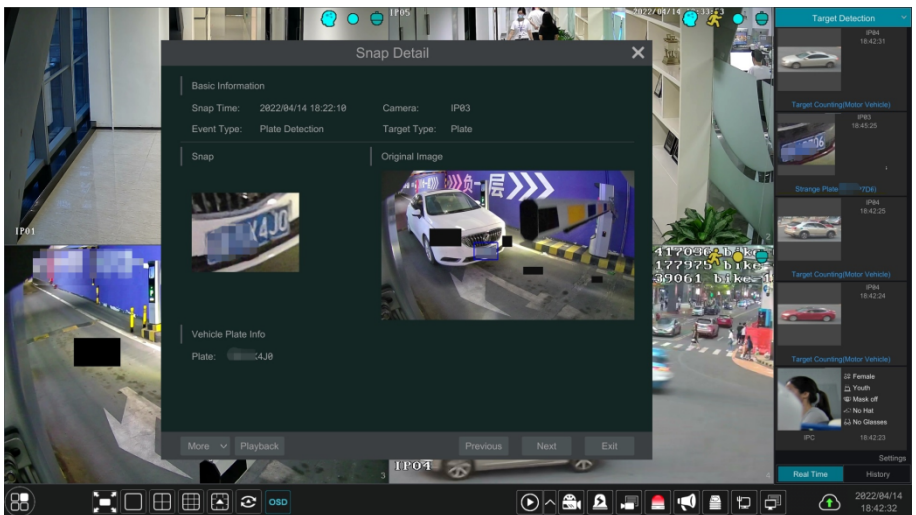
Put the cursor on the captured plate picture and then click  to register this plate as shown below.



Click  to view the captured detail information. Click  to quickly enter the vehicle search interface. You can search for the matched plate information in this interface. Click  to go to the smart playback interface.



② Enable license plate recognition function and set the alarm linkage items (see [License Plate Recognition Settings](#) for details).


③ Go to the live view interface and click  on the top right corner of the live view interface and then choose the target detection tab to go to the target detection interface of multi-channel as shown below. When a plate is captured, it will be displayed on the right panel. A strange plate will show “Strange plate” under the plate picture.



Click the captured plate picture and then it will open a detailed information window. You can view the snapshot picture, original picture, snapshot time, camera, etc. Click “More” to view the ID information of the target and export the captured picture. Click “Search” to go to the vehicle search interface. Click “Playback” to go to the playback interface.

10.1.4 Object Attribute View

- ① Enable video metadata function and then select the detection target and display attributes (see [Video Metadata](#) for details).
- ② Go to the live view interface and click on an AI camera channel (where video metadata function is supported). This will bring a toolbar under the channel. Then click  to go to the target detection interface of this channel. In this interface, you can switch the channel on the top right. You can also click  on the top right corner of the live view interface and then choose the target detection tab to go to the target detection interface of multi-channel. Click “Settings” at the bottom right to select the attribute information of people/motor vehicle/non-motor vehicle you want to view under the captured picture.

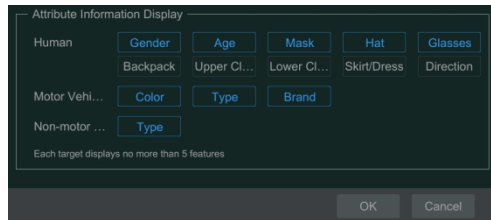

Click the captured picture to view the details. In the detail interface, you can view the captured picture, original picture, object attributes, etc.


10.2 Smart Search


10.2.1 Face Search

Only some models support this function. If your device doesn't support it, please skip the following instructions.


➤ Face Search by Event

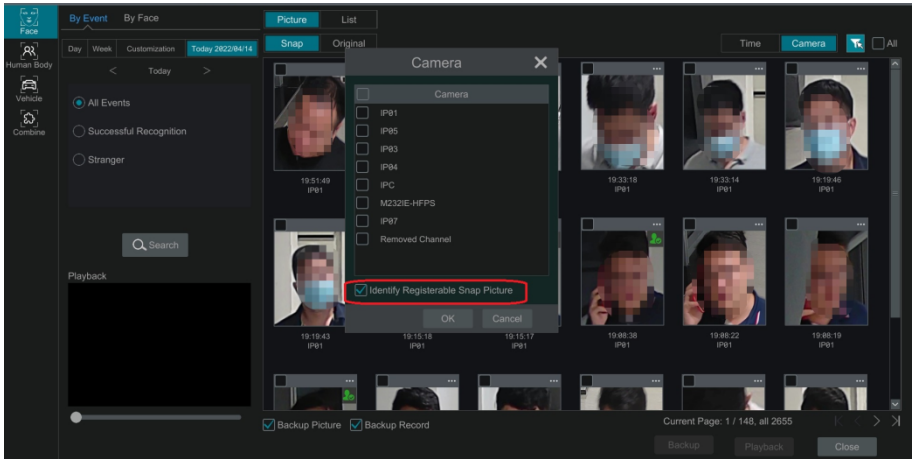

- ① Click *Start* → *Intelligent Analytics* → *Search* → *Face* to go to the following interface.



- ② Click  to choose face detection cameras. You can enable “Identify Registerable Snap Picture”. Then the picture which can be added to the face database will be marked with a green icon.
- ③ Select all events, successful recognition or strangers.
- ④ Click “Search” to search face pictures. You can view face pictures by time or by camera.
- ⑤ Click the searched face picture to play in the small playback window; select a face picture and click “Backup” to export it.

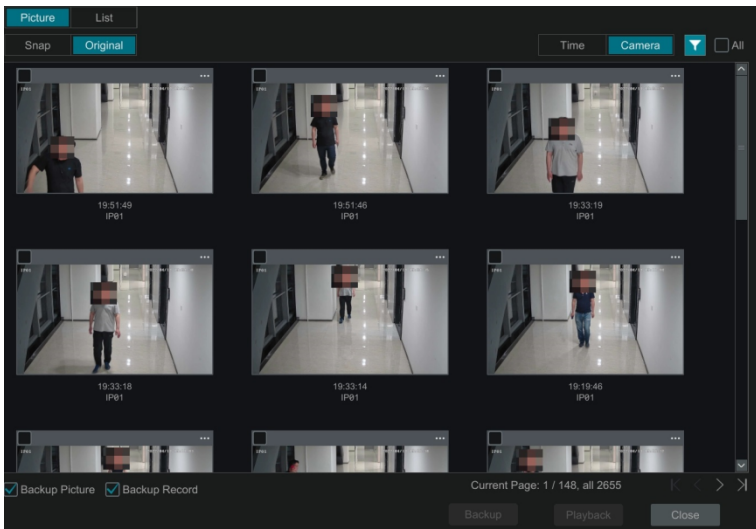
Click “Original” to see the original image as shown below.




Click “List” to view the snapshot information list. Click  to view the detailed information; click  to back up the image.

➤ Face Search by Face

In the face picture search interface, click “By Face” to go to the following interface.

① Click  to add the target face which can be searched and added from recent, face database, snapshot gallery and external faces. A single face picture or multiple face pictures can be added and searched. (Taking a single face picture for example)

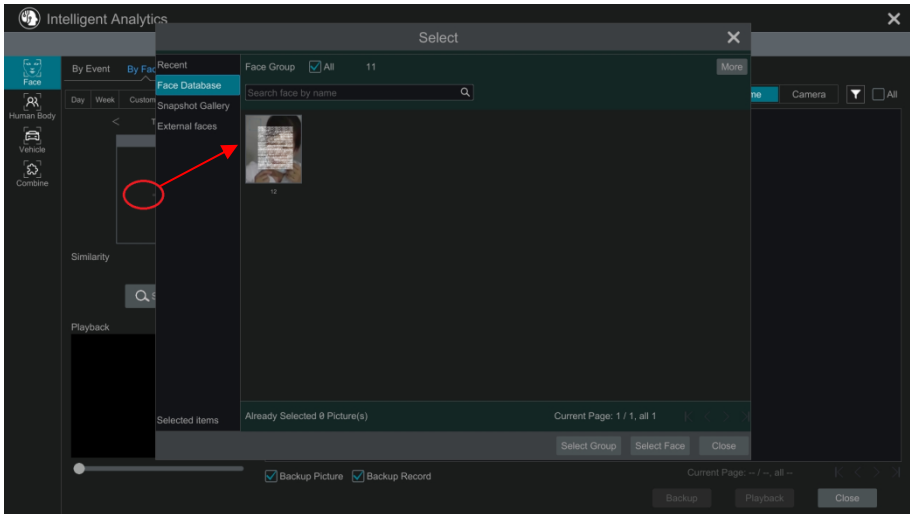

To add a single target face from recent faces

- Choose the face.
- Click “Select Face”.

To add a single target face from the face database:

- Click “More” to choose groups.
- Select a target face and click “Select Face”.


To add a single target face from the snapshot gallery:

- Select time and click “More” to choose cameras.
- Click “Search”.
- Check a face and click “Select Face”.

To add a single target face from external faces:


- Save the target face to the mobile storage device and then insert this device into the USB interface of NVR.
- Select “External Face” to import the face in this interface.

- ② Set similarity and then click “Search”.
- ③ Click the searched image to play records in the small window.
- ④ Select the searched image and click “Backup Picture” or “Backup Record”. Then click “Backup” to build backups for pictures or records.

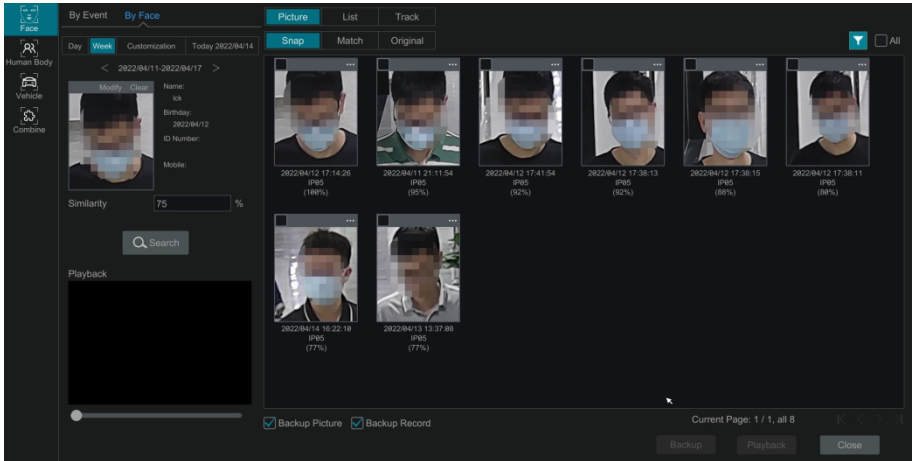

● View Image by List

Click “List” tab to view images by time as shown below.

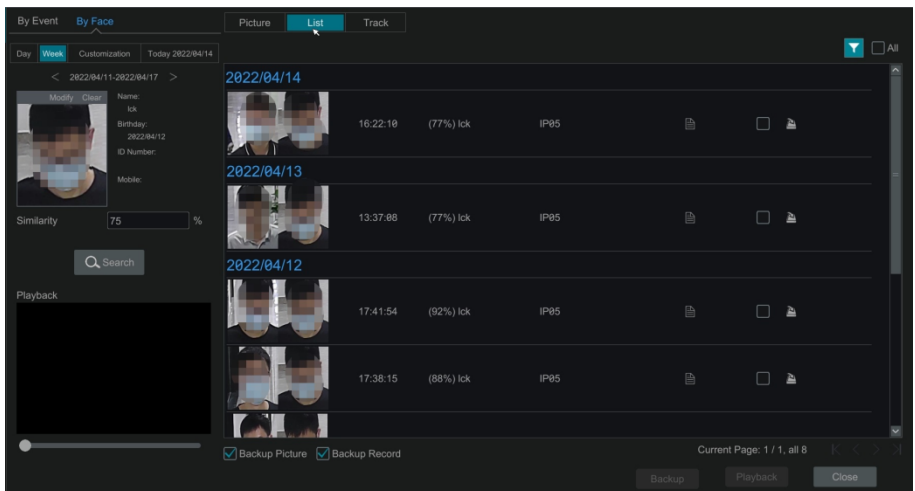


Click the searched image to play a clip. Click  to view the detail information of the

comparisons to the target face.


- **View Match Images**

Click “Match” tab to view matching images as shown below.

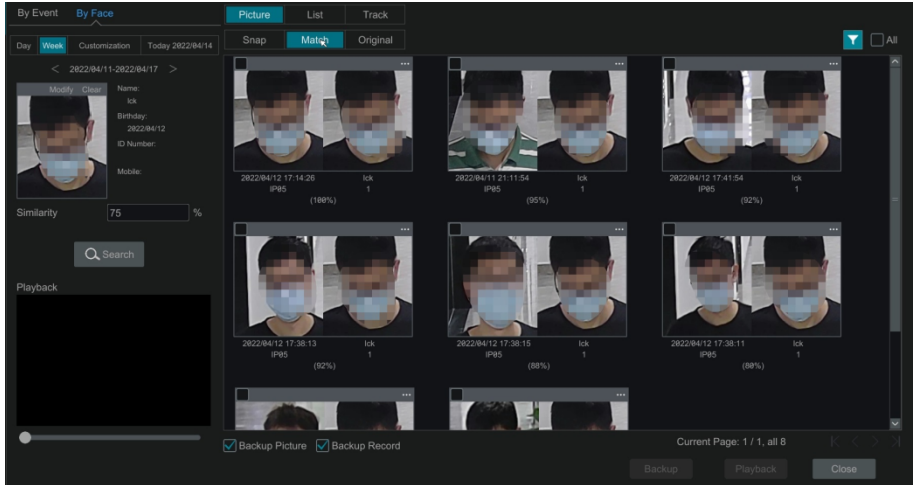





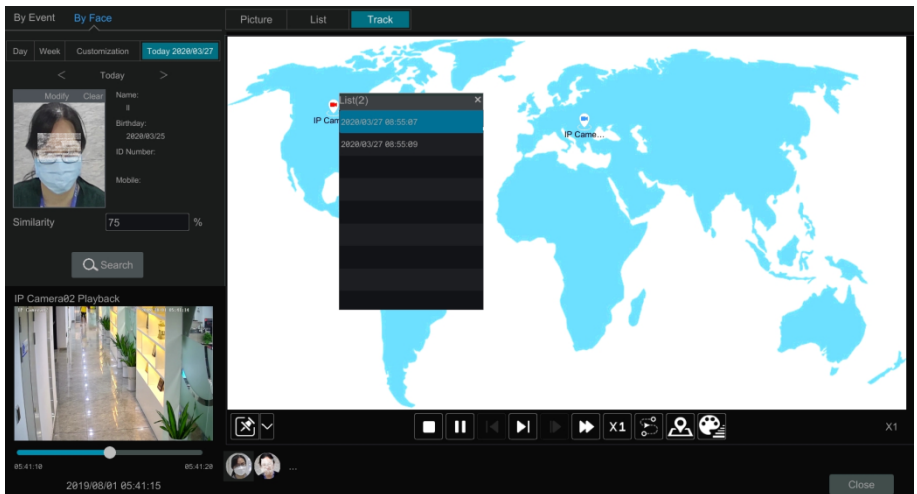








10.2.2 Track Playback


Select “Track” to go to the following interface.






Note: Tracking will only work if two or more cameras have viewed and recorded the subject.
Descriptions of buttons on the track interface

	Fixed Window		Frame
	Followed Window		Fast Forward (x2;x4)
	Exchange Window		Normal Speed
	Stop		Start/Stop Track
	Play		Edit Map
	Previous		Edit Color
	Next		


Click on a camera name and then an event list appears. Click one item to play the recording.

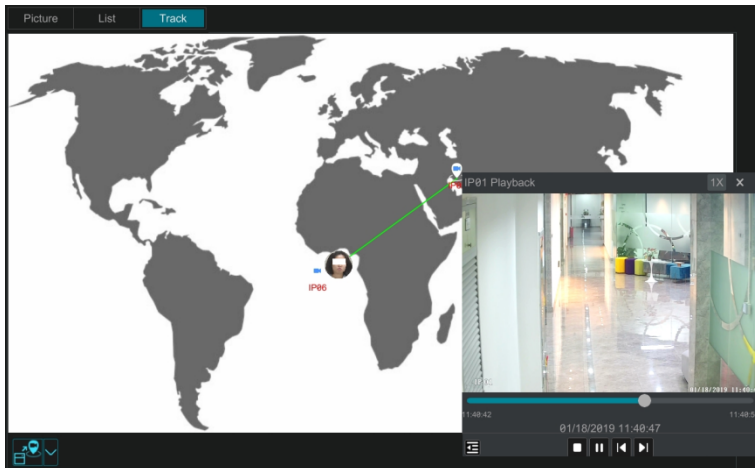
Click  button beside the fixed window icon to show “Followed Window” and “Exchange Window” icons. The small playback window will float on the map window by clicking “Followed Window” as shown below.



Click  to switch play speed. 1x and 2x can be switched. Click  to view the event list. Click one item to play this event.


Click “Exchange Window” to switch the position of the map window and the playback window.

Click  button to go to the following interface.

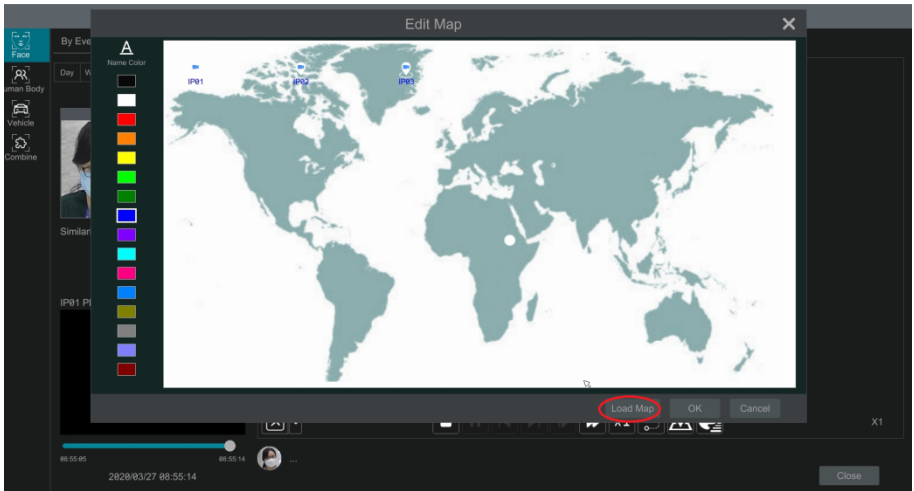


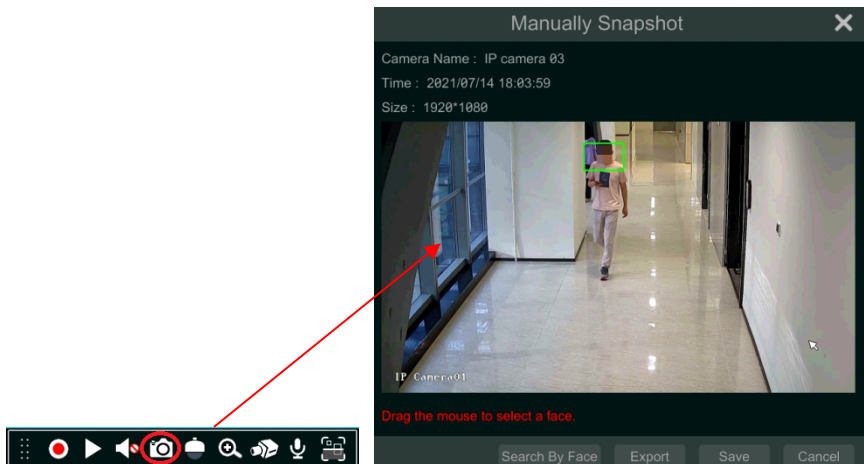
Click “Load Map” to add a map. Then drag the camera names onto and around the map to change their locations. Choose a color from the left color list to set your favorite color for camera names.

Load Map: ① Save the map to the USB storage device and then insert the USB storage device into the NVR. ② Click “Load Map” button to upload the map.

Click  button to modify the colors of camera names and track lines and set the line width.

10.2.3 Face Search by Snapshot

In the live or playback interface, click on a face detection camera and then select  on the toolbar. This will bring the following window.




Drag the mouse to select a face and then click “Search by Face” to go to the face search by face

interface. You can see its snapshot pictures, match pictures, original pictures and so on by clicking the corresponding tab.

10.2.4 Human Body Search



Click **Start** → **Intelligent Analytics** → **Search** → **Human Body** to go to the human body search interface.


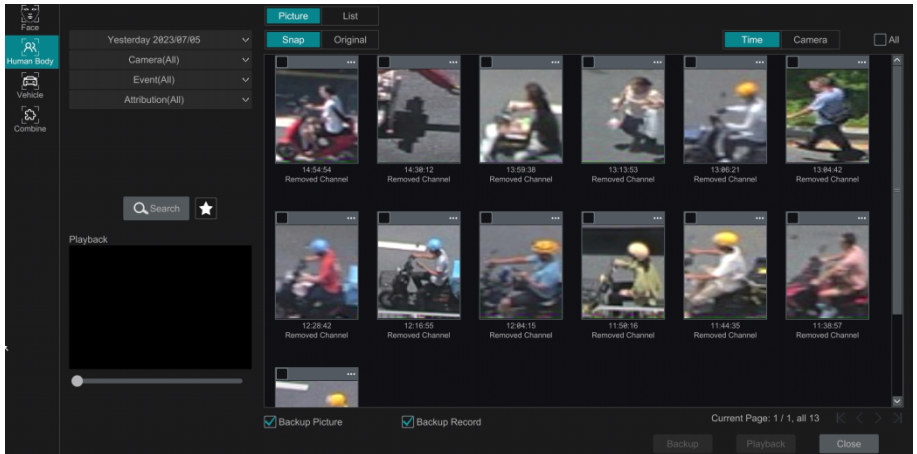
Select the search time, camera and event and then click “Search” to view the searched pictures.



You can also select the attributes of people to filter (like gender, age, mask-wearing status, glasses-wearing status, color of clothes, etc.). Note that only the searched camera with video metadata function can filter attributes.

Click a searched picture to play the recording in the small window on the left. Select pictures and check “Backup Picture” and/or “Backup Record” and then click “Backup” to back up the pictures and /or records. Click “Original” to view the captured original pictures. Click “List” to view the file list of the captured pictures.

Click  and select “Add to favorite” to add a favorite group and save the current searched pictures to the favorite group. Then you can quickly view these figure pictures by clicking  and choosing the group name.

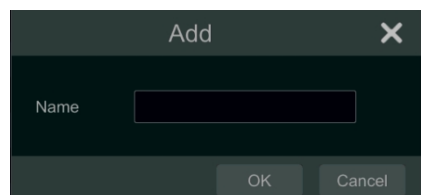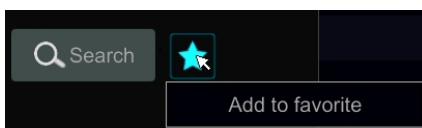

10.2.5 Vehicle Search


① Click **Start** → **Intelligent Analytics** → **Search** → **Vehicle** to go to the vehicle search interface.

② Select the time, camera, event and vehicle type. Then click “Search” to search vehicles.

Event: Intrusion, Line Crossing, Target Counting, Plate Detection, Plate Match-Successful Recognition and Plate Match-Strange Plate can be selected.



Attribution: Vehicle or non-vehicle attributes can be selected as needed. For example, you can search vehicles according to the color, brand or type. Note that only the searched camera with video metadata function can filter attributes.

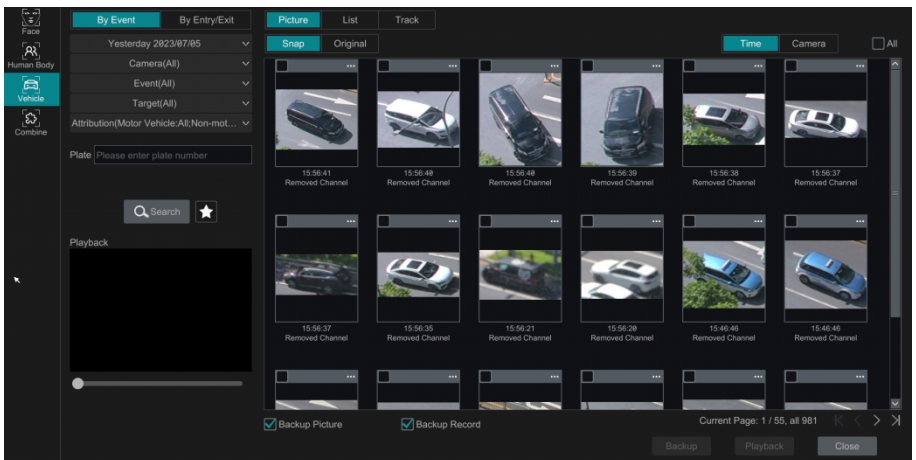You can view vehicle pictures by time or by camera.




Click a searched vehicle picture to play the clip in the small window on the left. Select vehicle pictures and check “Backup Picture” and/or “Backup Record” and then click “Backup” to back up the pictures and /or records.

③ Click “Original” to see the original pictures; click “List” to view the snapshot information list.

Click  to view the detailed information; click  to back up the image.

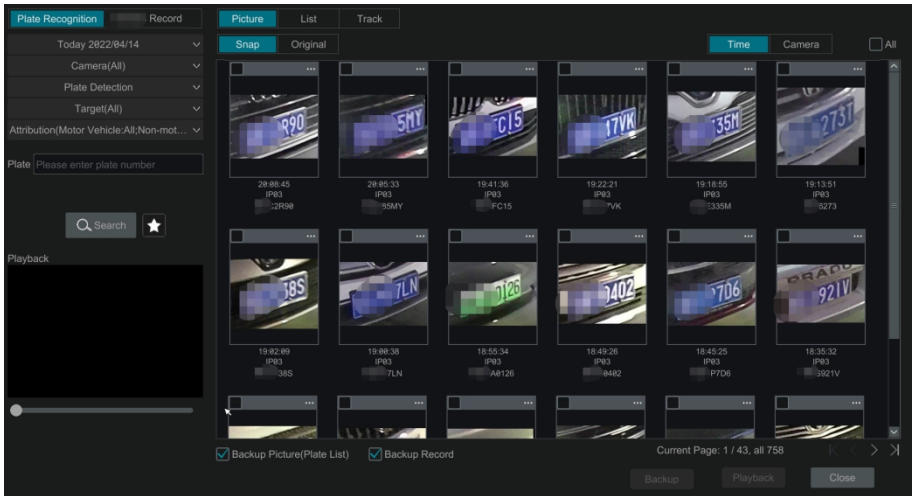

Select “Plate Detection” or “Plate Recognition” to view plate image. You can also enter the plate number to search for the plate pictures. Then you can view the track of this vehicle.



Click “Track” to view the track of the vehicle.

Note: Only one plate can be traced at a time and two or more ANPR cameras must have detected this vehicle to create a track to follow.

The track setting steps are similar to the face track setup steps. Please refer to face track settings for details.



Click  to add a favorite group and save the current searched pictures to the favorite group. Then you can quickly view these vehicle pictures by clicking  and choosing the group name.

10.2.6 Combination Search

If you want to view the human body, vehicle or face pictures simultaneously, you can choose combination search.


- ① Click “Combine”.
- ② Select the search time, camera, event and vehicle as needed.

Click a searched picture to play it in the small window. Select pictures and check “Backup Picture” and/or “Backup Record” and then click “Backup” to back up the pictures and /or records.

Click  to add a favorite group and save the current searched pictures to the favorite group. Then you can quickly view these pictures by clicking  and choosing the group name.

10.3 View Statistical Information

Click **Start** → **Intelligent Analytics** → **Statistics** to go to the following interface. Through this interface, you can view statistical information for people and vehicles, and you can customize the statistical information.

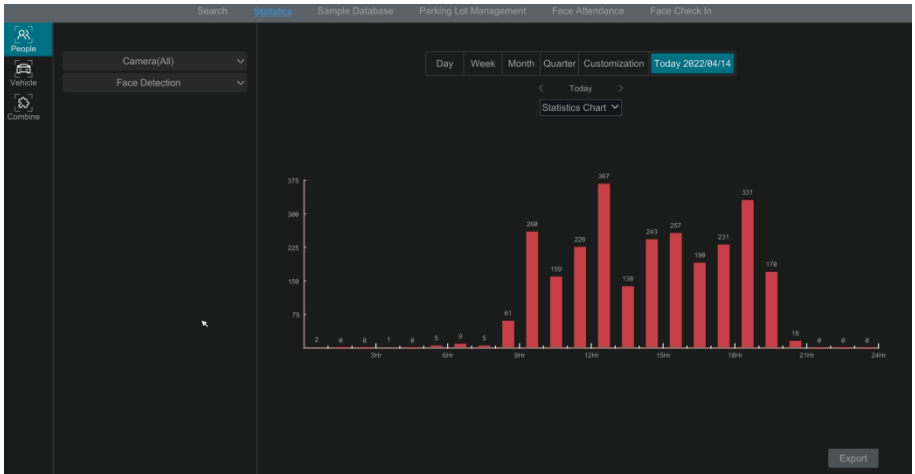

View People Information:


Note: The person information includes face information and figure information.

- ① Select the time.
- ② Select cameras.
- ③ Select events as needed, such as face detection, face recognition, intrusion, line crossing, target counting, etc.

Note: Face recognition events (successful recognition & stranger) are available for some models. If Face Recognition-Successful Recognition event is selected, you can choose “Detail Chart” to view.

View Vehicle Information:

- Click “Vehicle”
- Select the time and cameras.
- Select events as needed.
- Select the vehicle attribution.

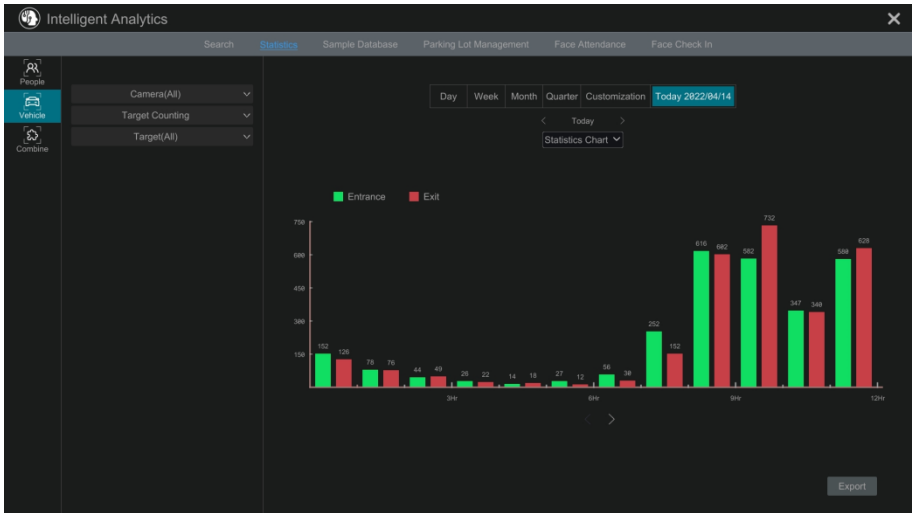

If “Remove duplicate license plate numbers” is checked, the duplicate statistics of the same license plate in the same day will not be displayed in the chart.

To customize statistical information:


Click “Combine” and then select events, people and vehicle as needed. For target counting, you can view the human, motor vehicle and non-motor vehicle information from the exported file.

11 General Event Management

11.1 Sensor Alarm

To ensure complete setup of the Sensor Alarm function, you should enable the sensor alarm of each camera and then immediately set up the alarm handling for that camera.



- 1 Click **Start** → **Settings** → **Alarm** → **Sensor** to go to the following interface.

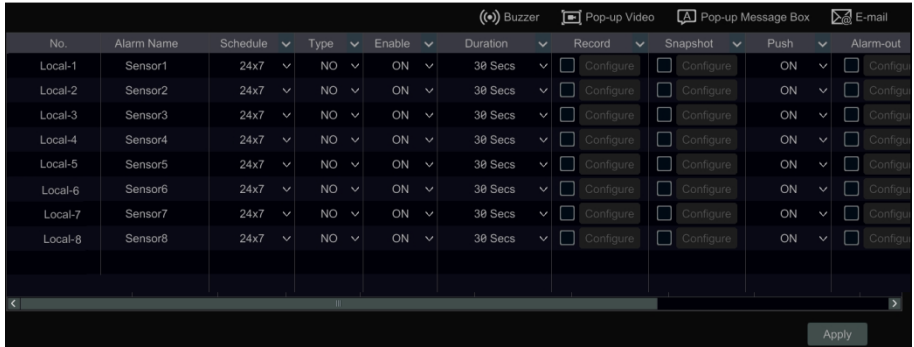

- 2 Select the alarm type (NO or NC) according to trigger type of the sensor.
- 3 Enable the sensor alarm of each camera and select the schedule.
- 4 Check the “Duration”, “Record”, “Snapshot”, “Push”, “Alarm-out” and “Preset” and enable or disable the “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail” as required.
- 5 Click “Apply” to save the settings.

The configuration steps of the above-mentioned alarm links are as follows.

Duration: it refers to the interval time between the adjacent motion detections. For instance, if the duration time is set to 10 seconds, once the system detects a motion, it will go to alarm and would not detect any other motion (specific to camera) in 10 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise, it will be considered as a single motion.

Record: If checked, the “Trigger Record” window will open automatically (you can also click the “Configure” button to open the window). Select a camera on the left side and then click  to set the camera as the trigger camera. Select the trigger camera on the right side or click  to cancel the trigger camera. Click “OK” to save your settings. The trigger camera will record automatically when the sensor alarm is triggered.

Snapshot: If checked, the “Trigger Snapshot” window will open automatically. You can configure the trigger camera in this window. The trigger camera will capture images automatically when the sensor alarm is activated.

Push: If checked, choose ON or OFF. If ON, the system will send messages when the sensor alarm is triggered.

Alarm-out: If checked, the “Trigger Alarm-out” window will open automatically. The system will

trigger the alarm-out automatically when the sensor alarm is tripped. You need to set the delay time and the schedule of the alarm outputs. See [Alarm-out](#) for details.

Preset: If checked, the “Trigger Preset” window will open automatically. Here you can configure the trigger preset for each camera. To add presets, please see [Preset Setting](#) for details.

Buzzer: if enabled, the system will emit an audible buzz when the sensor alarm is triggered. To set the delay time of the buzzer, please see [Buzzer](#) for details.

Pop-up Video: After camera setup, the corresponding video will pop up automatically when the sensor alarm is triggered. To set the duration time of the video, please see [Display](#) for details.

Pop-up Message Box: if enabled, the system will pop up the corresponding alarm message box automatically when the sensor alarm is triggered. To set the duration time of the message box, please see [Display](#) for details.

E-mail: if enabled, the system will send an e-mail when the sensor alarm is triggered. Before you enable email, please configure the recipient’s e-mail address first (see [E-mail Configuration](#) for details).

Virtual alarm: This function should be used with API server. If you want to enable it, please make sure the API Server is enabled first (Start→Network→Port) and then set the authentication as “Digest”.

11.2 Motion Alarm

Motion Alarm: when a motion object appears in the specified area, it will trigger the alarm. You should enable the motion of each camera first and then set the alarm handling of the camera to complete the whole configuration of the motion alarm.

11.2.1 Motion Configuration


- ① Click **Start** → **Settings** → **Camera** → **Motion Settings** to go to the following interface.

Camera Name	Schedule	Record	Snapshot	Audio	Push	Alarm-out	Preset	
IP01	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF
IP05	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF
IP03	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF
IP04	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF
IPC	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF
M232IE-HFPS	24x7	<input checked="" type="checkbox"/> Configure	<input checked="" type="checkbox"/> Configure	<None>	ON	<input type="checkbox"/> Configure	<input type="checkbox"/> Configure	OFF

- ② Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Audio”, “Preset”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm handling setting of motion alarm is similar to that of the sensor alarm (see [Sensor Alarm](#) for details).
- ③ Click “Apply” to save the settings. You can click “Motion Settings” to go to the motion configuration interface.

11.3 Combination Alarm

- ① Click *Start* → *Settings* → *Alarm* → *Combination Alarm* to go to the following interface.
- ② Customize combination alarm. Set alarm name and click “Configure” under the Combined Alarm Configuration item (motion/sensor/intrusion/face recognition/line crossing). Then select alarm type and alarm source. Finally, click “OK” to save the settings.
(Only some models support face recognition)

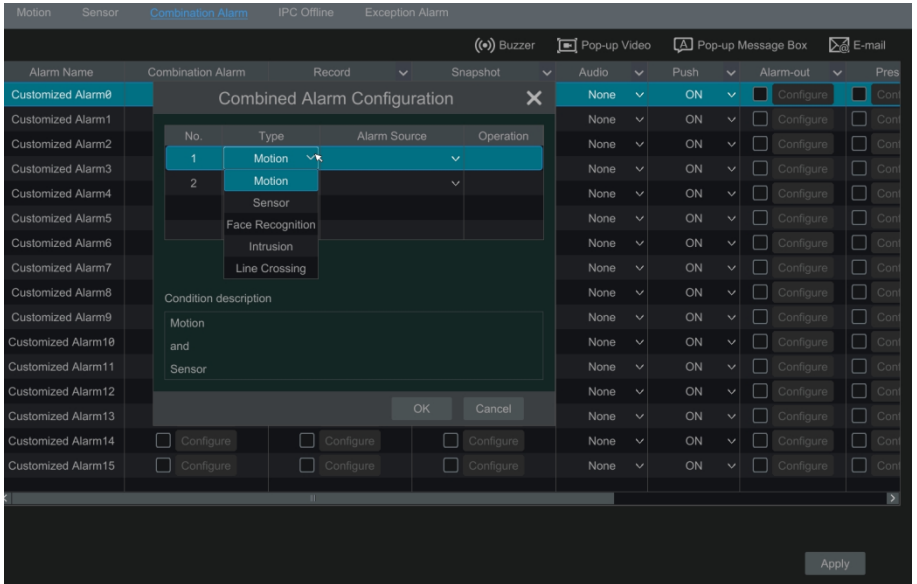

③ Enable or disable “Record”, “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Audio”, “Pop-up Video” and “E-mail”. The alarm handling setting of combination alarm is similar to that of the sensor alarm (see [Sensor Alarm](#) for details).

Click “Apply” to save the settings.


11.4 Exception Alarm

11.4.1 IPC Offline Settings

① Click *Start* → *Settings* → *AI/Event* → *IPC Offline Settings* to go to the interface as shown below.


② Enable or disable “Snapshot”, “Push”, “Alarm-out”, “Preset”, “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail”. The IPC Offline Settings are similar to that of the sensor alarm (see [Sensor Alarm](#) for details).

③ Click “Apply” to save the settings.

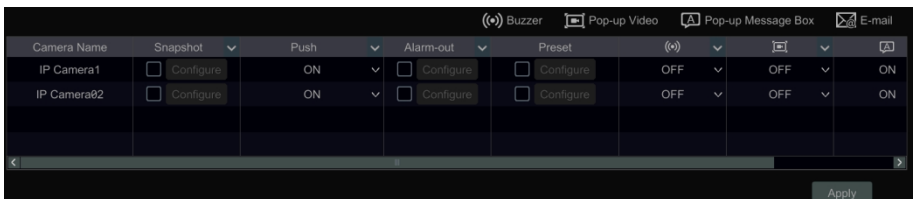

11.4.2 Exception Alarm Settings

- ① Click **Start** → **Settings** → **AI/Event** → **Exception Alarm** to go to the interface as shown below.

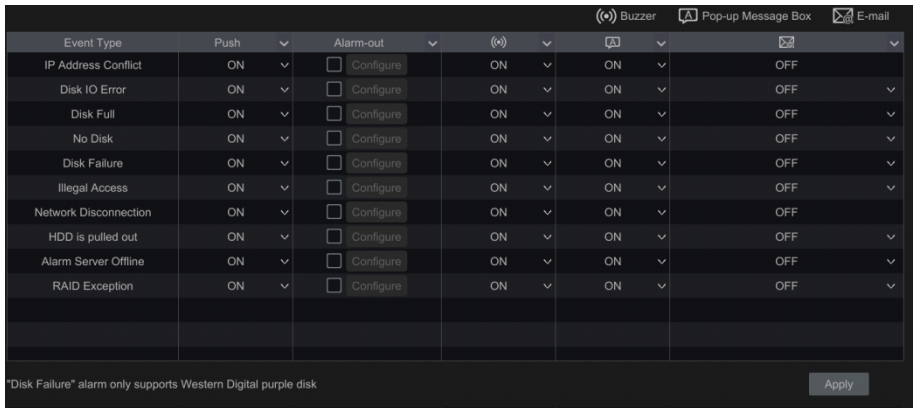

- ② Enable or disable “Push”, “Alarm-out”, “Buzzer”, “Pop-up Message Box” and “E-mail”. The exception handling settings are similar to those of the sensor alarm (see [Sensor Alarm](#) for details).
- ③ Click “Apply” to save the settings.

11.5 Alarm Event Notification

11.5.1 Alarm-out

- ① Click **Start** → **Settings** → **AI/Event** → **Event Notification** to go to the following interface.

No.	Name	Delay	Schedule	Type	Test
Local-1	AlarmOut1	10 Secs	24x7	NO	Test
Local-2	AlarmOut2	10 Secs	24x7	NO	Test
Local-3	AlarmOut3	10 Secs	24x7	NO	Test
Local-4	AlarmOut4	10 Secs	24x7	NO	Test


- ② Set the delay time the schedule and type of each alarm-out. You can click “Edit Schedules” to edit the schedules (see [Schedule Settings](#) for details).
- ③ Click “Apply” to save the settings. You can click “Test” to test the alarm output.

11.5.2 E-mail

Click **Start** → **Settings** → **AI/Event** → **Event Notification** → **E-mail** to go to the e-mail configuration interface. Set the e-mail address of the recipients. See [E-mail Configuration](#) for details.

11.5.3 Display

Click **Start** → **Settings** → **AI/Event** → **Event Notification** → **Display** to go to the display configuration interface. Set the duration time of the pop-up video and the pop-up message box. If your device support two outputs, please set the output of the pop-up video as needed. After that, click “Apply” to save the settings.

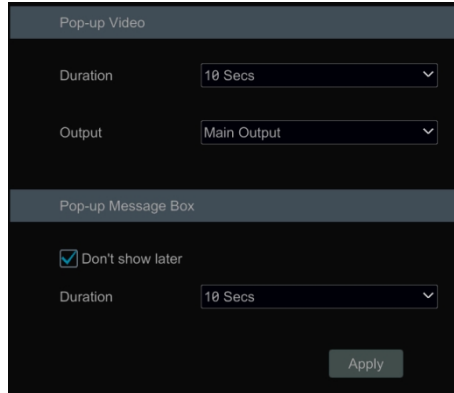

Pop-up Video

Duration 10 Secs

Output Main Output

Pop-up Message Box


Don't show later

Duration 10 Secs

Apply

11.5.4 Buzzer

Click **Start** → **Settings** → **AI/Event** → **Event Notification** → **Buzzer** to go to the buzzer configuration interface. Set the delay time of the buzzer and then click “Apply” to save the setting. You can click “Test” to test the buzzer.

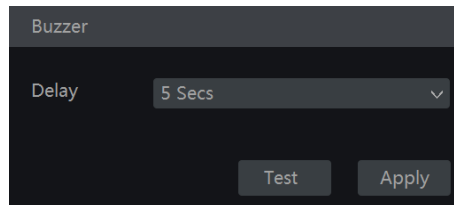


Buzzer

Delay 5 Secs

Test Apply


11.5.5 Push

Click **Start** → **Settings** → **AI/Event** → **Event Notification** → **Push** to go to the interface as shown below. Check “Enable”, select the schedule and then click “Apply” to save the settings. If Push Server is online, it will push text to the mobile clients according to the set schedule.

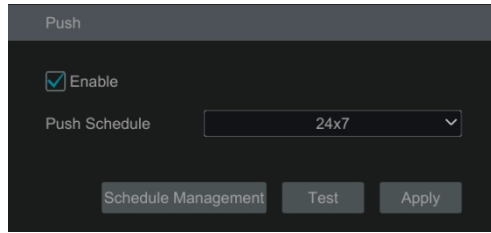

11.5.6 Audio

Click *Start* → *Settings* → *AI/Event* → *Event Notification* → *Audio* to go to the interface as shown below.

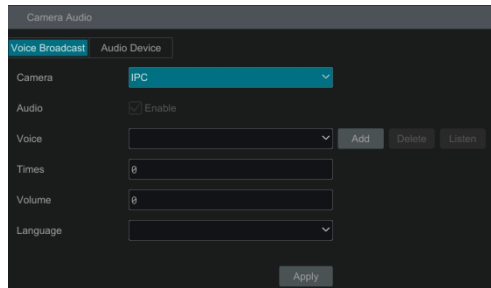


Camera audio settings:

For perimeter alert cameras, voice broadcast can be set up. Select the camera, voice, broadcast times, volume and language. Then click “Apply” to save the settings. When an alarm is triggered, the camera will broadcast the voice you set.

Audio: please enable or disable as needed. If your camera doesn’t support this switch, this function is not available.

Voice: click “Add” to add the alarm voice in WAV format. Click “Listen” to listen to the uploaded audio.

Click “Audio Device” to set the audio of the camera.

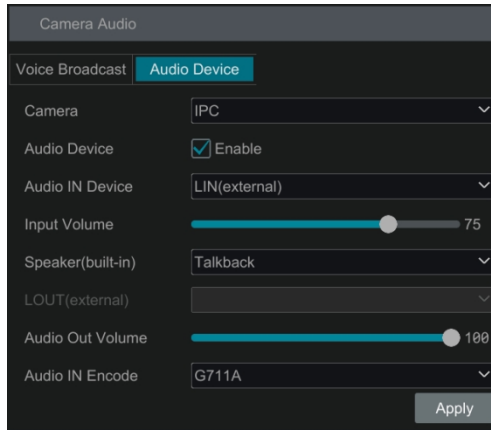

Select the camera and then enable audio device.


Audio IN Device: Please select it according to the actual device configuration.

Speaker (built-in): Please select its function as needed.

LOUT (Line Output): Select the function of the external audio device as needed.

Audio Input Encode: G711A/G711U

Audio Linkage Schedule: Set the schedule of audio linkage alarm. After the schedule is set, the audio alarm will be triggered by events within the schedule.

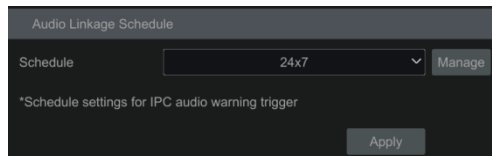


Note: Only some perimeter alert cameras support schedule settings for audio alarm linkage.

11.5.7 Light

Click **Start** → **Settings** → **Alarm** → **Event Notification** → **Light** to go to the interface as shown below. In this interface, you can enable and set the light flashing time and frequency when an alarm is triggered.

Camera	Enable	Flashing Time(s)	Flashing Frequency
IPC	ON	20	Low

Flashing light linkage schedule: Set the schedule of light linkage alarm. After the schedule is set, the light alarm will be triggered by events within the schedule.

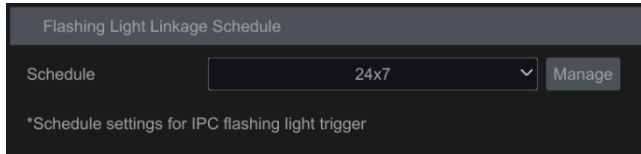


Note: Only some perimeter alert cameras support schedule settings for light alarm linkage.


11.5.8 Alarm Server

Go to **Alarm** → **Alarm Server** interface as shown below.

Enable the alarm server and enter the server address, URL and port of the alarm server. Next, select the protocol. If “Send Heartbeat” is enabled, set the interval times. After that, test the effectiveness of the alarm server. After a successful test, please click “Apply”. When an alarm occurs, the device will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

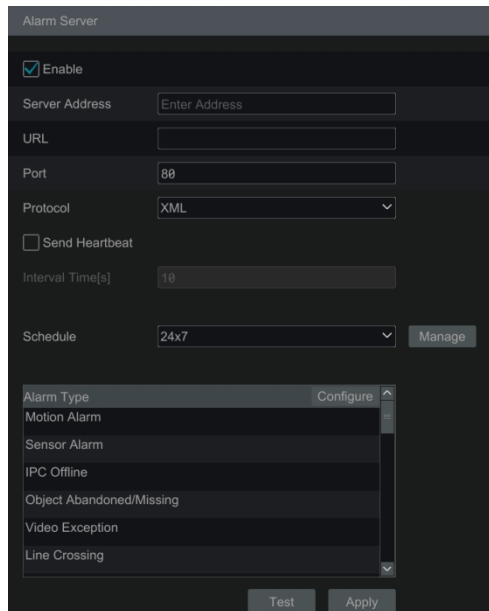


11.6 Manual Alarm


Click  on the tool bar at the bottom of the live view interface to open a window. Click “Trigger” to start alarm. Click “Clear” to stop alarm.


Alarm-out Name	Status	Trigger	Clear
AlarmOut1	Normal	Trigger	Clear
AlarmOut2	Normal	Trigger	Clear
AlarmOut3	Normal	Trigger	Clear
AlarmOut4	Normal	Trigger	Clear
IP Camera1_AlarmOut1	Normal	Trigger	Clear
IP Camera2_AlarmOut1	Normal	Trigger	Clear


Close




11.7 View Alarm Status

Click **Start** → **Settings** → **Alarm** → **Alarm Status** or click  on the tool bar at the bottom of the live view interface to view the alarm status.

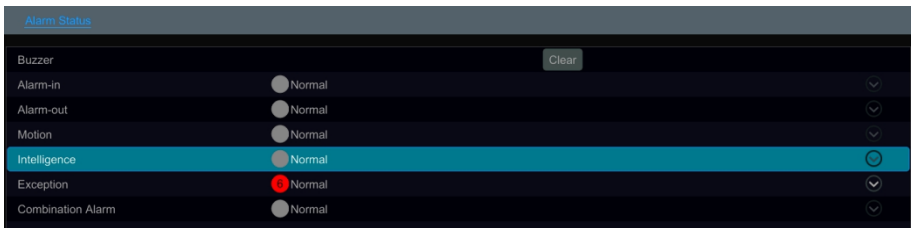

Click “Clear” to stop the buzzer when a buzzer alarm is triggered. Click  to view the detailed information as shown below.

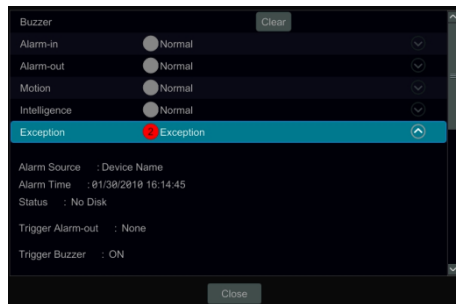

If the exception information is more than one page, you can enter the number in the box and then click  to jump to the specified page. Click  /  to view the exception alarm information in the previous/next page.

11.8 System Disarming

You can quickly disarm the device through the alarm host or a remote client (such as the mobile APP).

Control model

Alarm Host

*The remote control of Disarm/Close Disarm is valid when the alarm host is enabled,please make sure the selected sensor is enabled and in the schedule

Input Sensor: Sensor1 ▼

Remote client

*The remote control of Disarm/Close Disarm and paramiters setting is valid when the remote switch is enabled

Disarm Set

Status : Arming One Key Disarm

Disarm Channel/Sensor Add

Channel/Sensor	Disarm Link Item	Configure	Delete

*At the State of disarm,the parameters of channel and sensor is invalid

Apply

You can self-define the channels and sensors you want to disarm by clicking “Add”. Only the selected channels and sensors can be disarmed by clicking “One Key Disarm”.


Note: If you want to control system disarm by a client, you must check “Remote client” in the above interface, or “One key disarms” function cannot be used in the client (like Web/APP client).

12 Application


12.1 Face Attendance

This function is only available for some models. If your device doesn't support it, please skip the following instructions.

Click **Start** → **Application** → **Face Attendance** to go to the following interface.

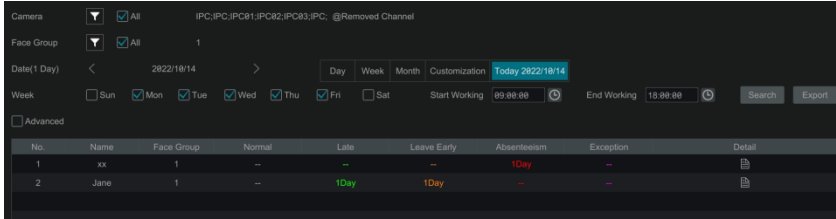




To search for attendance information

- ① Click  behind camera and group to choose the desired cameras and groups.
- ② Set the attendance date. You can choose day, week, month and today or customize the time period.
- ③ Set the start time and the end time of working.
- ④ Click “Search” to view the attendance state.

If you need to know the attendance status of a specific person, you can click “Advanced” and then enter the name and choose the type.

Click “Export” to export the searched attendance information.


Click  to view the detailed information of attendance. In this interface, click  to go to the face search interface.

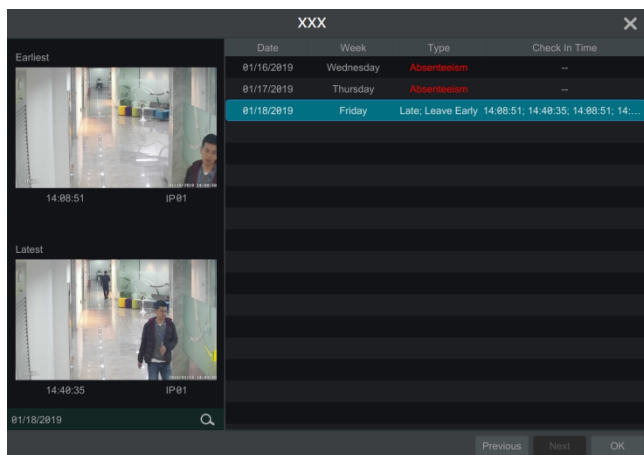


12.2 Face Check-In


Click **Start** → **Application** → **Face Check-In** to go to the following interface.


The search steps of face check-in are as follows.


- ① Click  behind camera and group to choose the desired cameras and groups.
- ② Set the check-in date. You can choose day, week, month and today or customize the time period.
- ③ Set the start time and the end time of face check-in.
- ④ Click “Search” to view the check-in state.

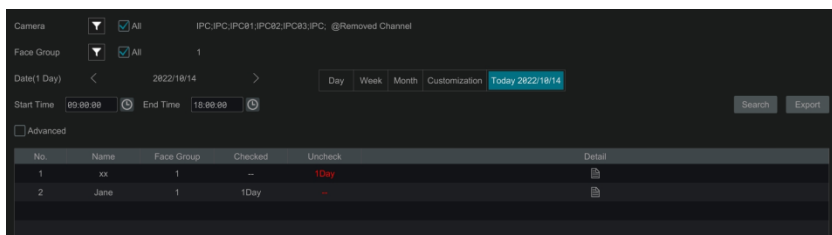

If you want to know the check-in status of a specific person, please click “Advanced” and then enter the name and choose the type to search.

Click  to view the detailed information. In this interface, the checked image can be viewed.


Click  to view the registered face picture of this person.

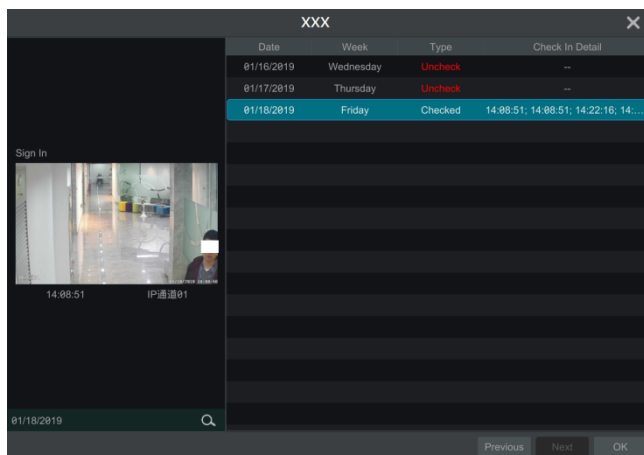

12.3 Parking Lot Settings

You can manage the parking lot through the NVR. Before using this function, please add the professional ANPR camera.

Click **Start** → **Application** → **Parking Lot Management** to go to the parking lot setting interface.

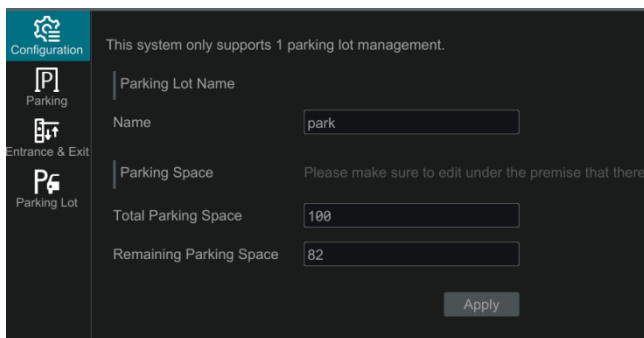

12.3.1 Basic Settings

The recorder only supports the management of one parking lot. Please enter the parking lot name, total parking spaces and remaining parking spaces. To ensure the accuracy of the parking spaces, please enter the parking space information while there are no vehicles entering or exiting.

12.3.2 Parking Space Settings

Only the vehicles added into the plate database with the proper permission are allowed to pass through automatically. You can set the parking spaces according to the vehicle groups or directly use the total parking spaces. For the block list, you can set “No parking allowed”. After that, set

the schedule and Email as needed.

Configuration	No.	Parking Group Name	Parking Options	Total Parking ...	Remaining Pa...	Schedule
Parking	1	vip	Use the total parking space to park			24x7

12.3.3 Entrance/Exit Management

Set the passing direction of vehicles (Enter/Exit) and bind LED screen as needed.

Configuration	No.	Lane Name	Direction	Camera	Status	Enable LED screen	Associated LED screen
Entrance & Exit	1	IP83	Enter	IP83(172.28.74.281)	Online	<input checked="" type="checkbox"/>	LED display

12.3.4 Parking Lot Management

After the above settings are completed, click “Parking Lot” on the left menu to go to the following interface.

1
2022/10/17 09:31:02


100 / 100
Remaining Parking Space/Total Parking Space

0
Vehicle Entry Today

281
Vehicle Exit Today

The vehicle entry information is not matched.

Vehicle Exiting IPC83 2022/10/17 09:38:38



39VS3 Correct Gate Opening

Direction Exit

Entering Time --

Exiting Time 2022/10/17 09:38:38

Parking Duration --


Entry/Exit Results Vehicle Entry Unmatched-Driven Away

Plate	Parking Duration	Entry/Exit Results	Entrance	Entering Time	Entrance Gate-o...	Exit	Exiting Time	Exit Gate-openin...	Detail
39VS3	--	Vehicle Entry Un...	--	--	--	IPC83	2022/10/17 09:38:38	Automatic Release	
7K1U1	--	Vehicle Entry Un...	--	--	--	IPC83	2022/10/17 09:29:41	Automatic Release	
Q28028	--	Vehicle Entry Un...	--	--	--	IPC83	2022/10/17 09:28:17	Automatic Release	
U977R	--	Vehicle Entry Un...	--	--	--	IPC83	2022/10/17 09:27:54	Automatic Release	
59278	--	Vehicle Entry Un...	--	--	--	IPC83	2022/10/17 09:27:43	Automatic Release	


In this interface, you can view the detailed information of the parking lot, including the total parking space, remaining parking space, number of vehicles entering today, number of vehicles exiting today and vehicle entry/exit records.


Only vehicles added into the plate database are allowed to pass automatically. If the vehicle is a stranger/unknown vehicle, it will not be allowed to enter unless it is manually approved. You can


release it manually by clicking “Gate Opening”. While entering, if the plate number captured is not matched with the actual one, you can click “Correct” to correct it manually.

Click  to view the detailed information of vehicle entry/exiting.


Click “More” to register the license plate or view the ID information.


Click  to go to search for the records of vehicles entering/exiting.

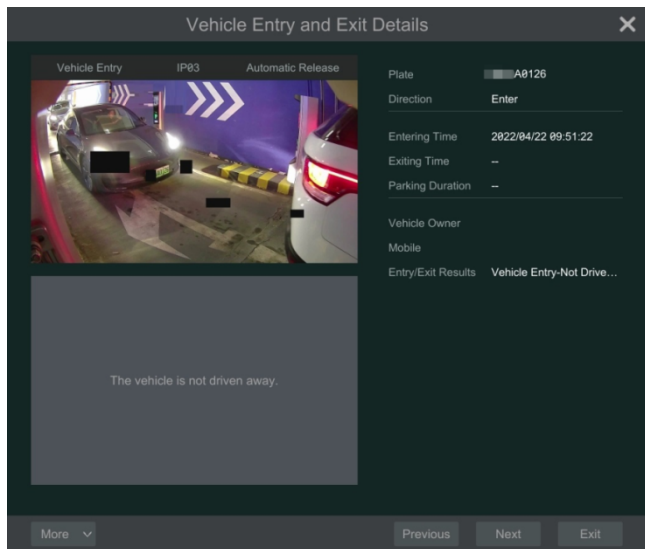


Click “” to return to the live view interface.

12.3.5 Search for Vehicle Entry/Exiting Records

In the parking lot management interface, click  to search the records of vehicles entering/exiting the parking lot.

You can search these records by setting filtering conditions (including time/direction/license plate). Click  in the right corner of the searched picture to view the details; click “Backup” to export the searched picture.

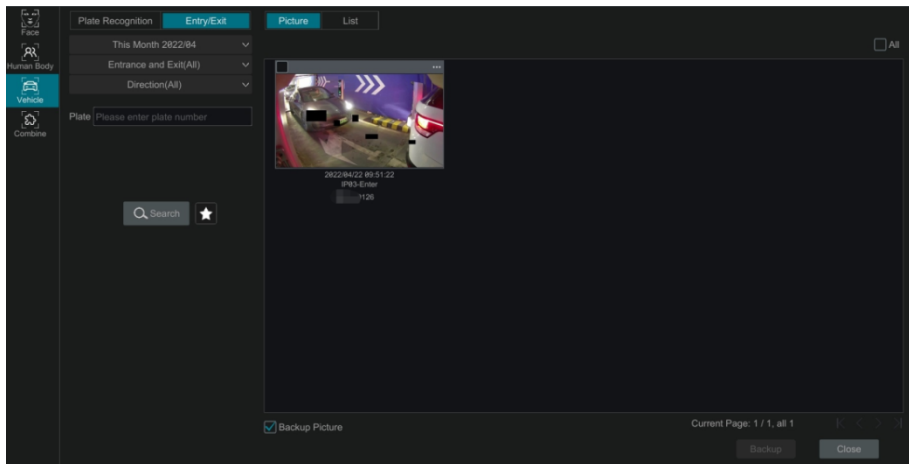


12.4 Access Control Management

The recorder supports access control parameter configuration and remote door opening. Before using the access control function, please add access control devices (face recognition & access control terminal/panel). Go to **Start** → **Settings** → **Camera** → **Add Camera** interface to add devices.

12.4.1 Access Control Settings

Click **Start** → **Application** → **Access Control Management** to go to the following interface.

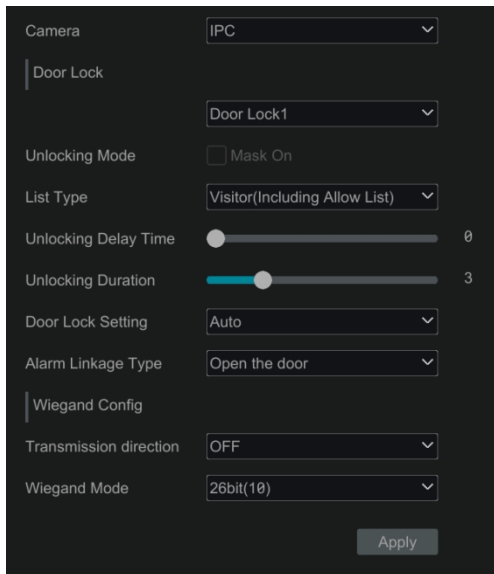

Select the access control device you want to configure the parameters.

Lock: Choose the lock you want to control.

Unlocking Mode: if “Mask On” is selected, the door will be opened when the matched person wearing a mask

List Type: Allow list, visitor (including allow list), stranger (including visitor and allow list).

Unlocking Delay Time: Set the door unlocking delay time. The time range is from 0 to 10 seconds. For example, the unlocking mode is “Face only” and the delay time is set to “2” seconds; the door will be opened 2 seconds later after face recognition.

Unlocking Duration: If the door has been unlocked for a period that exceeds the duration, the door will be automatically locked. The time range is from 0 to 10 seconds. For example, the unlocking mode is “Face only” and the duration is set to “3” seconds; the unlocking door will be automatically locked 3 seconds later.

Door Lock Setting: Choose “Auto”, “NO” or “NC”. Please select it according to your door lock type.

Alarm Linkage Type: Open/close the door


Wiegand Config: Wiegand Input, Wiegand Output or Off can be selected. If the card reader is connected to the Wiegand interface, please select “Wiegand Input”. If the access controller is connected to the Wiegand interface, please select “Wiegand Output”.

Wiegand Mode: 26bit(8), 26bit(10), 34bit, 37bit, 42bit, 46bit, 58bit or 66bit can be selectable. After clicking “Apply”, the configuration will be synchronized with the camera.

When someone wants to enter, the access control device will open the door according to the set condition.

12.4.2 Open the Door Manually

In the live view interface, select an access control camera. Right click on the window to pop up a dropdown list. Select “Manually Open the Door” to open the door via the NVR.

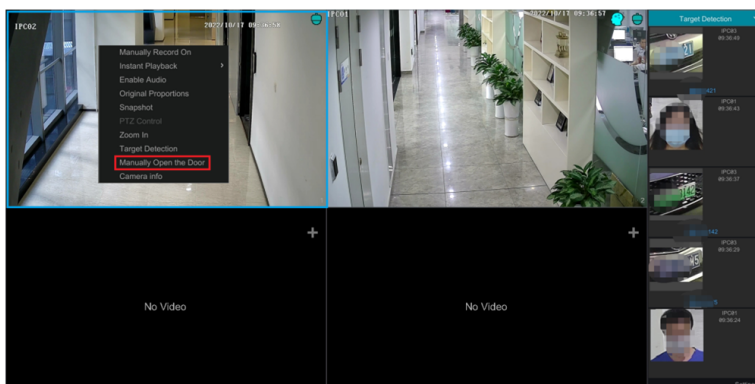


If you want to view the real-time face snapshots and comparison of access control devices, please enable face detection or comparison function as needed. Then the corresponding results will display under the target detection tab in the live interface.

13 Account & Permission Management

13.1 Account Management

Click **Start** → **Settings** → **Account and Authority** → **Account** → **Edit User** to go to the interface as shown below.

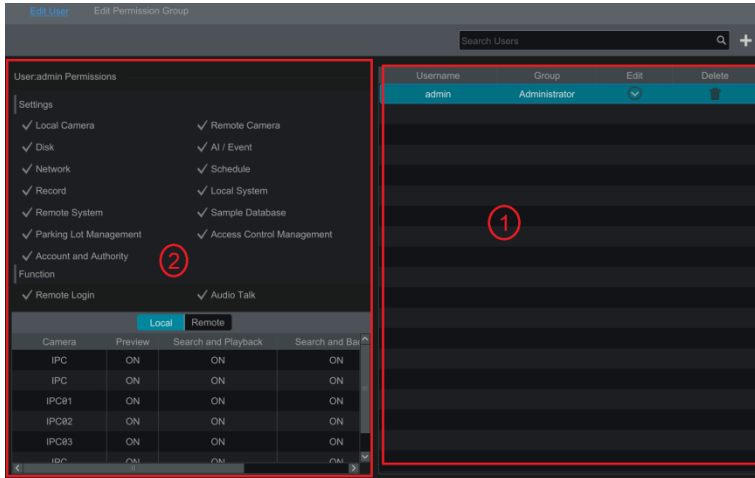


Area ① displays the user permissions. Area ② displays the user list. Click the user in the list to display its user permissions in area ①.

There are three default permission groups (“Administrator”, “Advanced” and “Common”) available when adding accounts. You can manually add a new permission group (see [Add Permission Group](#) for details).

Only **admin** and the users that have the “Account and Authority” permission can manage the system’s accounts. Group “Administrator” owns all the permissions displayed in area ① except “Account and Authority” and its permissions cannot be changed while the permissions of “Advanced” and “Common” can be changed.

13.1.1 Add User

① Click **Start** → **Settings** → **Account and Authority** → **Account** → **Add User** or click  beside the search box to open a window as shown below.



The 'Add User' dialog box includes the following fields and options:


- Username:** Text input field with placeholder 'Enter Username'.
- Password:** Text input field with placeholder 'Enter Password'.
- Confirm Password:** Text input field with placeholder 'Enter Password'.
- Display Password:** checkbox.
- Allow Modify Password:** checkbox.
- Pattern Lock:** checkbox and an **Edit** button.
- E-mail:** Text input field.
- Group:** Dropdown menu with 'Administrator' selected.

Buttons at the bottom: **Add** and **Cancel**.

② Set the username, password and group. Users can also set the pattern lock and e-mail address as needed. Click “Add” to add the user.

13.1.2 Edit User

Click **Start** → **Settings** → **Account and Authority** → **Account** → **Edit User** and then click  in the user list or double click the user to edit the user information. Click  to delete the user (the user *admin* cannot be deleted).

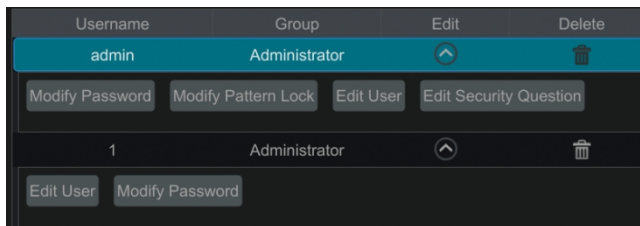

➤ Edit Security Question

You can set password security only for *admin*. Click “Edit Security Question” and then set questions and answers in the popup window. If you forget the password for *admin*, please refer to Q4 in [Appendix A FAQ](#) for details. The passwords of other users can be recovered by *admin* or the users that have the “Account and Authority” permission.


➤ Modify Password

The password of *admin* can be modified. Click “Modify Password” to pop up a window. Enter the current password and then set new password. Click “OK” to save the settings. In addition, the admin user can modify the common/advanced user’s password.


➤ Modify Pattern Lock

Some models may not support this function.

Click “Modify Pattern Lock” to pop up a window.


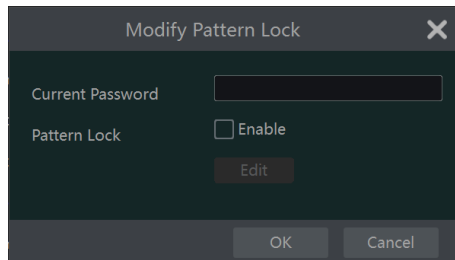


Input current password and then check “Enable” to set pattern lock.

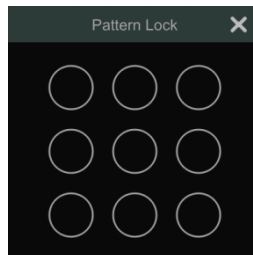

➤ Edit User

Click “Edit User” to pop up the window as shown below. The **admin** is enabled, its permission control is closed, and permission group cannot be changed by default. You can enable or disable other users (if disabled, the user will be invalid), open or close their permission control (if closed, the user will get all the permissions which **admin** has) and set their permission groups. Click “OK” to save the settings.

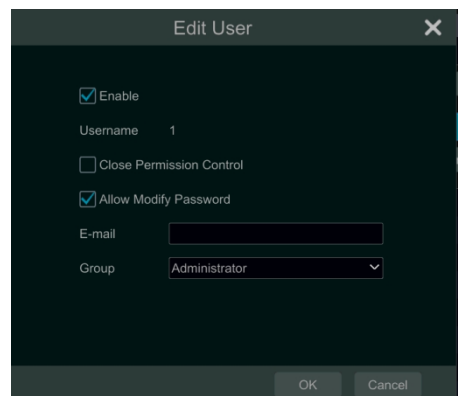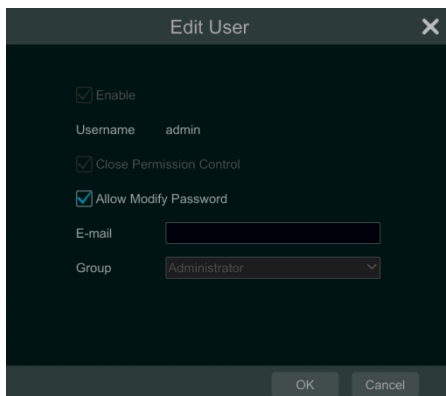

13.2 User Login & Logout


Login: Click **Start** → **Login** or directly click the preview interface and then select username and enter the password in the popup window. Click the “Login” button to log in the system.

Logout: Click **Start** → **Logout** or click **Start** → **Shutdown** to pop up the “Shutdown” window. Select “Logout” in the window and then click “OK” to log out the system.


13.3 Permission Management

13.3.1 Add Permission Group

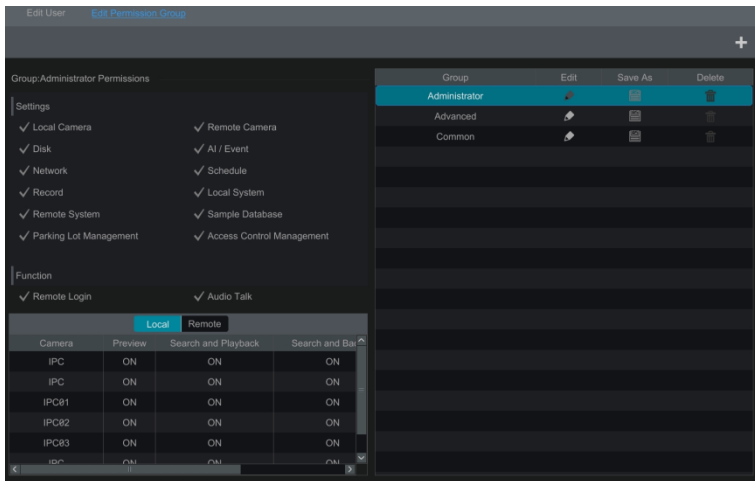


Click **Start** → **Settings** → **Account and Authority** → **Account** → **Edit Permission Group** to go to the interface as shown below.

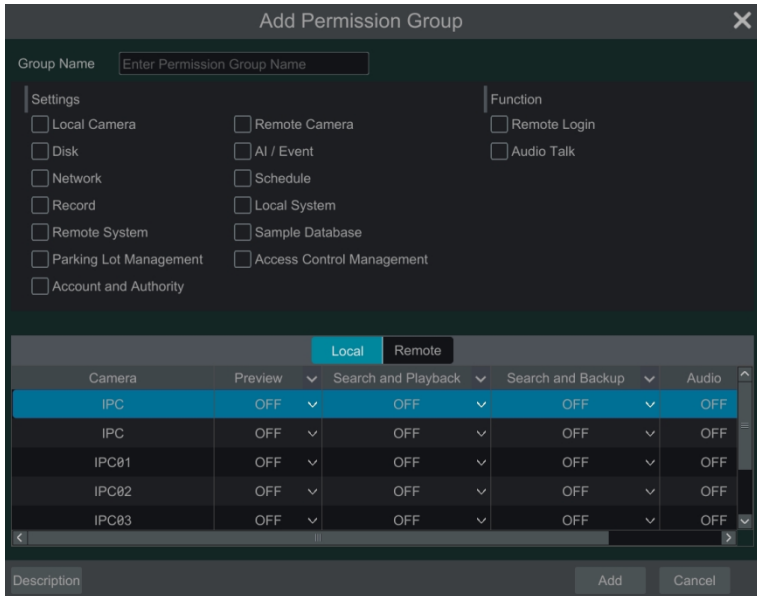

Click **+** to add permission group. Set the group name, check the permissions as needed and then set the “Local” and “Remote” permissions. Click “Add” to save the settings.






13.3.2 Edit Permission Group

Go to “Edit Permission Group” interface and then click  in the group list to edit the permission group (the operations of the “Edit Permission Group” are similar to that of the “Add Permission Group”, please see [Add Permission Group](#) for details). Click  to save the group as another group. Click  to delete the permission group. The three default permission groups (“Administrator”, “Advanced” and “Common”) cannot be deleted.

13.4 Black and White List

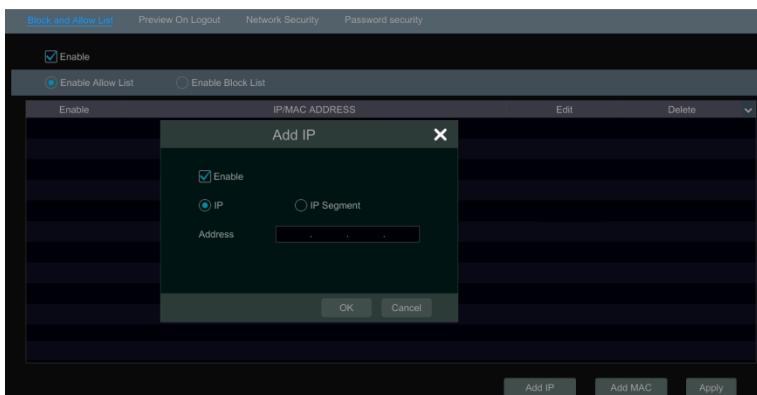① Click *Start* → *Settings* → *Account and Authority* → *Security* to go to the following interface.



- ② Check “Enable” and then choose “Enable Allow List (whitelist)” or “Enable Block List (blacklist)” (the PC client of which the IP address is in the whitelist can access NVR remotely while the PC client in the blacklist cannot).
- ③ Add IP/IP segment/MAC. Click “Add IP” or “Add MAC” and then check “Enable” in the popup window (only if you check it can the IP/IP segment/MAC you add be effective). Enter the IP/IP segment/MAC and then click “OK”. In the above interface, click  to edit IP/IP segment/MAC, click  to delete it. Click “Apply” to save the settings.

13.5 Preview on Logout


Click *Start*→*Settings*→*Account and Authority*→*Security*→*Preview on Logout* to go to the following interface.

Set a camera and then enable or disable the preview permission on logout as needed. If a camera’s preview permission on logout is “ON”, you can view the live image of the camera when the system is logged out, or the live image of the camera cannot be seen when logged out.



13.6 Network Security

Click *Start*→*Settings*→*Account and Authority*→*Security*→*Network Security* to go to the following interface. You can enable the ARP Guard.

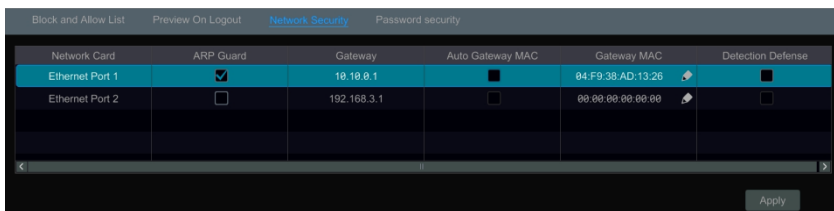

ARP (Address Resolution Protocol) Guard: This function can protect the LAN from ARP attacks and increase network stability. If it is enabled, you can enable an auto gateway MAC or manually set gateway MAC. Additionally, detection defense also can be enabled as needed.


13.7 Password Security

Click *Start* → *Settings* → *Account and Authority* → *Security* → *Password Security* to go to the following interface.



In this interface, you can set the security level and expiration time of the password. It's recommended to force a new password periodically to enhance system security.

13.8 View Online User

Click *Start* → *Settings* → *Account and Authority* → *User Status* to view the online user information (you can view the online username, login type, IP address and login time; click  to open a window showing the preview occupied channel number and playback occupied channel number).

14 Device Management

14.1 Network Configuration

14.1.1 TCP/IP Configuration

Click **Start** → **Settings** → **Network** → **TCP/IP** to go to the following interface. You can select the network work pattern as required. Click “Advanced” to modify the MTU value according to the network condition (MTU, Maximum Transmission Unit, can be modified according to network condition for higher network transmission efficiency). Click “Apply” to save your settings.

The screenshot shows the 'IP Address Settings' window. At the top, 'Work Pattern' is set to 'Multiple Address Setting' with a note '(Modifying work pattern need to reboot)'. Below this, two network ports are listed: 'Ethernet Port 1 (Online)' and 'Ethernet Port 2 (Offline)'. An 'Advanced' button is on the right. A checkbox 'Obtain an IP address automatically' is checked. The IPv4 section has fields for Address (10.15.1.200), Subnet Mask (255.255.255.0), and Gateway (10.15.1.1). A checkbox 'Obtain DNS automatically' is checked. The IPv6 section has an 'Enable' checkbox checked, and fields for Address, Mask Length (64), and Gateway. Another checkbox 'Obtain IPv6 DNS automatically' is checked. At the bottom, 'Preferred DNS' is 192.168.0.5 and 'Alternate DNS' is 114.114.114.114. A 'Default Route' dropdown is set to 'Ethernet Port 1'.

Multiple Address Setting:


If “Multiple Address Setting” is selected, the IP addresses of the two Ethernet ports should be set respectively. Refer to the picture as shown below.

Check “Obtain an IP address automatically” and “Obtain DNS automatically” to get the network addresses automatically or manually enter IPv4/IPv6(if IPv6 is enabled) address; select one Ethernet port as the default route and then click “Apply” to save the settings.

Network Fault Tolerance:


The two network ports will be bound to one IP address if you select the “Network Fault Tolerance” pattern. There are many advantages of this work pattern: 1. increase the bandwidth; 2. form a network redundant array to share the load. When a failure happens to one network port, the other port will take over the entire load immediately. The takeover process is seamless, and the network service will not be broken off.

Refer to the figure as shown below. If “Network Fault Tolerance” is selected, check “Obtain an IPv4 address automatically”, and “Obtain DNS automatically” to get the network addresses automatically or manually enter IPv4/IPv6(if IPv6 is enabled) address select one Ethernet port as the primary card and then click “Apply” to save the settings.

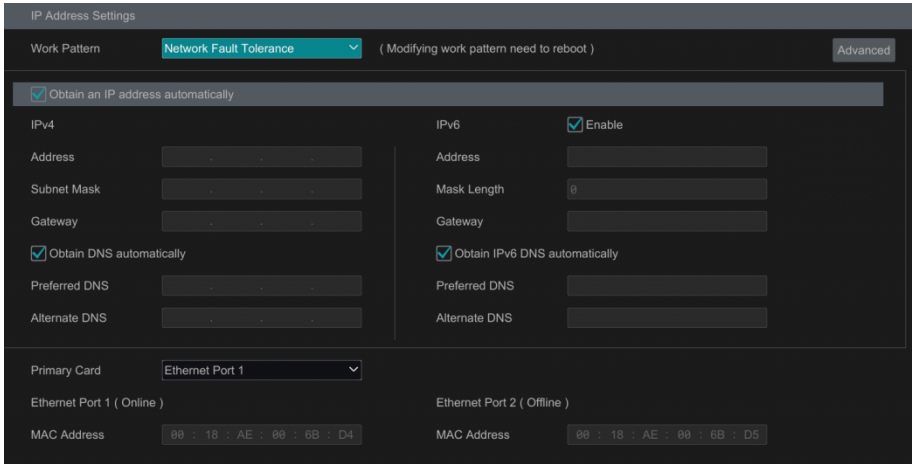

14.1.2 Port Configuration

Click *Start* → *Settings* → *Network* → *Port* to go to the interface as shown below. Enter the HTTP port, HTTPS port, server port and POS port of the NVR, and then click “Apply” to save the settings. You can also enable and set RTSP port (please check “Anonymous” as required).

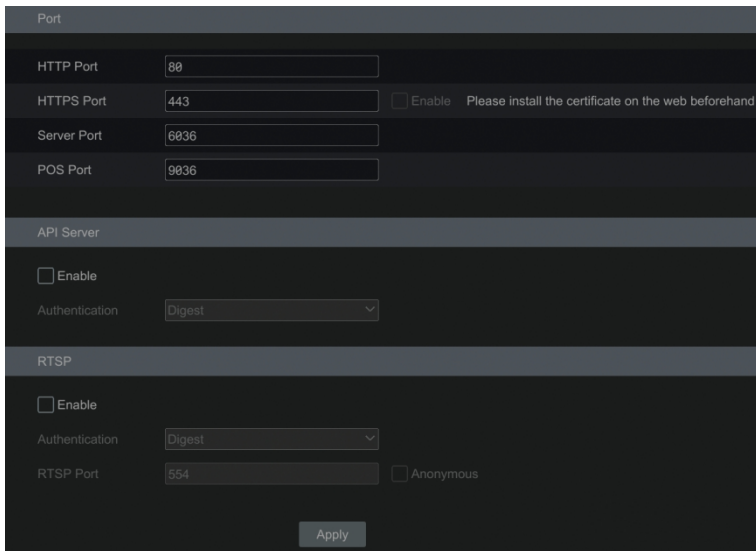

HTTP Port: the default HTTP port of the NVR is 80. The port number can be changed to another number such as 81. The port is mainly used for web client access. If you want to access the NVR through a web browser, you should enter the IP address plus HTTP port in the address bar of the


web browser like <http://192.168.11.61:81>.

Note: The HTTP port and server port of the NVR should be mapped to the router before you access the NVR via WAN.

HTTPS Port: the default HTTPS port of the NVR is 443.


HTTPS provides authentication of the web site and protects user privacy. You can enter IP address plus HTTPS port in the address bar of the web browser. Then enter username and password to log in. Click Functional Panel→Network→HTTPS to go to the following interface. There are three ways to enable HTTPS service.

A. Create a private certificate.

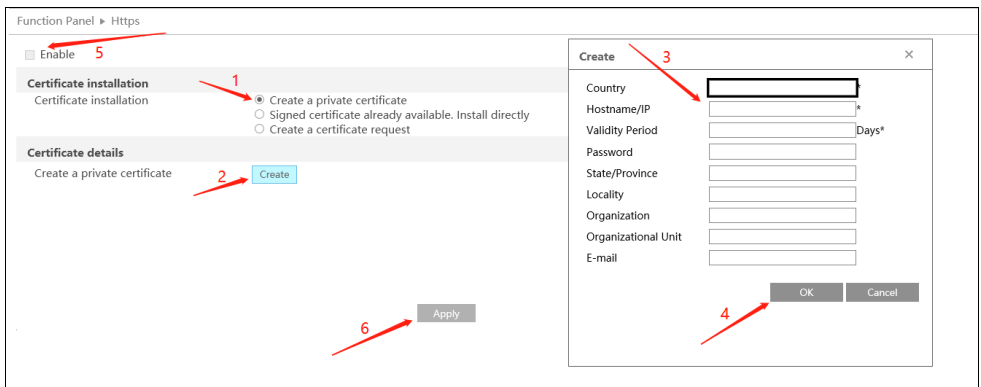

- ① Select “Create a private certificate”.
- ② Click “Create”.
- ③ Fill out the corresponding information in the above creation box. Enter the country (only two letters available), domain (NVR’s IP address/domain), validity date, password, province/state, region and so on.
- ④ Click “OK”.
- ⑤ Check “Enable” checkbox.
- ⑥ Click “Apply” to save the setting.

B. Install a signed certificate

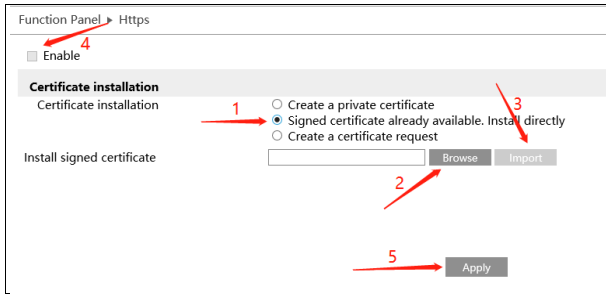


- ① Check “Signed certificate already....”.
- ② Click “Browse” to select the certificate you want to import.
- ③ Click “Import”.
- ④ Check “Enable”.
- ⑤ Click “Apply” to save the settings.

Please note that the certificate uploaded here shall be a certificate with private key.

To attach the private key to the certificate, please open the certificate and the private key files with an editor (like Notepad++) and then copy the private key to the certificate.

C. Create a certificate request

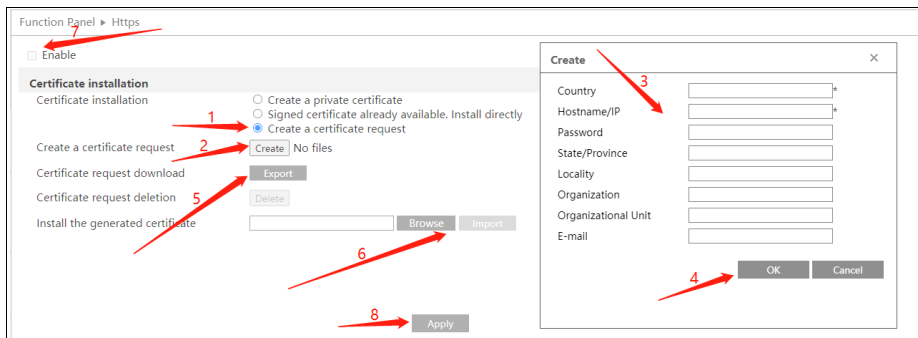

- ① Check “Create a certificate request”.
- ② Click “Create”.
- ③ Fill out the corresponding information in the above creation box. Enter the country (only two letters available), domain (NVR’s IP address/domain), validity date, password, province/state, region and so on.
- ④ Click “OK”. Then a certificate request file (CSR) will be created.
- ⑤ Click “Export” to export the certificate request file. Then send this file to the trusted third-party CA to apply for a signed certificate.

- ⑥ Click “Browse” and select the signed certificate issued by the CA and then import this certificate.
- ⑦ Click “Enable”.
- ⑧ Click “Apply” to save the settings.

After that, the device can be accessed by entering <https://IP: https port> via the web browser (eg. <https://192.168.1.201:443>).

Server Port: the default server port of the NVR is 6036. The server port number can be changed as required. The port is mainly used in network video management systems.

POS Port: the default POS port of the NVR is 9036.

API Server: You can log into a media player which supports the RTSP protocol. Moreover, the third-party can further develop performance through an API service.

Authentication: Basic authentication and digest authentication are optional.

RTSP Port: RTSP real-time stream protocol can be used to control the transfer of real-time data. Through a media player which supports the RTSP real-time stream protocol (Such as VLC player), you can view live images synchronously. The default RTSP port is 554 and it can be changed as needed. (The address format: <rtsp://IP address:554/chID=1&streamType=main> or <rtsp://IP address:554/chID=1&streamType=sub>; main indicators mainstream; sub indicators sub stream; chID indicators channel ID).

Examples: Enable RTSP and “Anonymous”. Then open the VLC player and enter the address (for example: <rtsp://192.168.1.88:554/chID=1&streamType=main>) in the network address bar of the VLC player. Then you can view the video of channel 1.

14.1.3 PPPoE Configuration

Click **Start** → **Settings** → **Network** → **PPPoE** to go to the interface as shown below. Check “Enable” in “PPPoE Settings” and then enter the username and password obtained from the dealer. Click “Apply” to save the settings.

The screenshot shows the 'PPPoE Settings' window. At the top, it says 'PPPoE Settings'. Below that is a checked checkbox labeled 'Enable'. Underneath are two input fields: 'Username' with the text 'abc' and 'Password' with masked characters (dots). At the bottom right, there is an 'Apply' button.

14.1.4 DDNS Configuration

The DDNS is used to control the dynamic IP address through a domain name. You can access

the NVR easily if the DDNS is enabled and configured.

Click **Start** → **Settings** → **Network** → **DDNS** to go to the interface as shown below.

Check “Enable” and then select the DDNS type. Enter the server address, domain name, username and password according to the selected DDNS type. Click “Test” to test the effectiveness of the input information. Click “Apply” to save the settings. After that, the successful connection status can be viewed.

Note: Only when the DDNS type is “dyndns”, can the heartbeat interval be configurable.


You will have to enter the server address and domain name if some DDNS types are selected. Go to the relative DNS website to register domain name and then enter the registered domain information here). Now we take **www.dvrddns.com** for example.

① Enter **www.dvrddns.com** in the address bar to visit its DNS website.

② Click **Registration** to go to the interface as shown below. Set the DDNS account information (username, password and so on) and then click **Submit** to save the account.

DDNS account creation.

NEW USER REGISTRATION

USER NAME	<input type="text"/>
PASSWORD	<input type="password"/> ?
PASSWORD CONFIRM	<input type="password"/>
FIRST NAME	<input type="text"/>
LAST NAME	<input type="text"/>
SECURITY QUESTION.	My first phone number. ▾
ANSWER	<input type="text"/>
CONFIRM YOU'RE HUMAN	<div style="text-align: center;">  <p>New Captcha</p> <input type="text"/> </div> <p>Solve the problem above.</p>

Already have an account? [Click here to login.](#)

③ Create domain name and then click **Request Domain**.

Domain Name Creation

Enter a new domain name below.

You must create a domain name to continue.

Domain name must start with (a-z, 0-9), must be least 3 char1. Cannot end or start, but may contain a hyphen and is not case-sensitive.

.dvrddns.com ▾

④ After you successfully request your domain name, you will see your domain name information in the list.

My Domains

Your domain names are listed below. Choose create new domain to add additional domain names.

Your domain was successfully created.

Click a name to edit your domain settings.

NAME	STATUS	DOMAIN
REDSUNSHINE	✔	redsunshine.dvrddns.com

Last Update: Not yet updated IP Address: 210.21.229.138

Create additional domain names [1]

- ⑤ Click **Start** → **Settings** → **Network** → **DDNS** to go to DDNS setting interface. Enable DDNS and then select the **www.dvrdydns.com** DDNS type. Enter the registered username, password and domain name and then click “Apply”.
- ⑥ Map the IP address and HTTP port in the router (you can skip this step if UPnP function is enabled).
- ⑦ Enter the registered domain name plus HTTP port like **http://www.xxx.dvrdydns.com:81** in the address bar and then press Enter key to go to the web client.


14.1.5 E-mail Configuration

Click **Start** → **Settings** → **Network** → **E-mail** to go to the following interface.

Enter the sender’s name, e-mail address, SMTP server and SMTP port (you can click “Default” to reset the SMTP port to the default value) and then enable or disable the SSL and attaching image.

Attaching Image: Choose “NO”, “A Picture” or “Multiple Pictures”. If “A Picture” or “Multiple Pictures” is selected, snapshot image or original image can be selected to attach. Select the username (the username list will be updated automatically according to the email address you input) and enter the password of the sender and then click “Apply” to save your settings (you don’t have to enter the username and password if “Anonymous Login” is enabled). Click “Test” to open a window. Enter the e-mail address of the recipient in the window and then click “OK.” The e-mail address of the sender will send an e-mail to the recipient. If the e-mail is sent successfully, it indicates that the e-mail address of the sender is configured correctly.

Click “Edit Recipient” to go to the following interface:

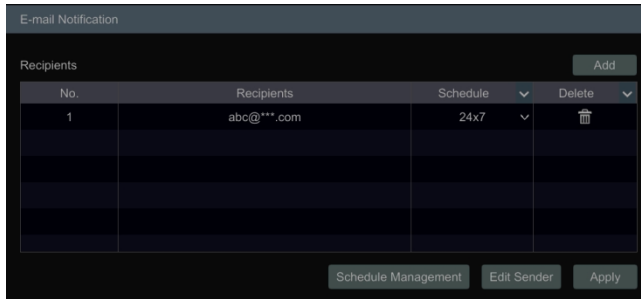


Click “Add” and then enter the recipient’s e-mail address and select the schedule (if a schedule is selected, the system will send the alarm email, and the recipient will receive it only in the selected schedule time) in the popup window. Click “Add” in the window to add the recipient. You can also change the recipient’s receiving schedule by clicking in the “Schedule” column. Click to delete the recipient in the list. Click “Apply” to save your settings. Click “Edit Sender” to go to the e-mail configuration interface of the sender.

14.1.6 UPnP Configuration

By UPnP you can access the NVR through the web client which is on the WAN via a router without port mapping.


- ① Click **Start** → **Settings** → **Network** → **UPnP** to go to the following interface.
- ② Make sure the router supports UPnP function, and the UPnP is enabled in the router.
- ③ Set the NVR’s IP address, subnet mask and gateway and so on corresponding to the router.
- ④ Check “Enable” in the interface as shown below and then click “Apply”.

Click “Refresh” button to refresh the UPnP status. If the UPnP status is still “Invalid UPnP” after refreshing, the port number is wrong. Please change the mapping type to “Manual” and then click to modify the port until the UPnP status turns to “Valid UPnP”. Refer to the picture below. You can view the external IP address of the NVR. Enter the external IP address plus port in the address bar of your browser to access the NVR (example: <http://183.17.254.19:81>).

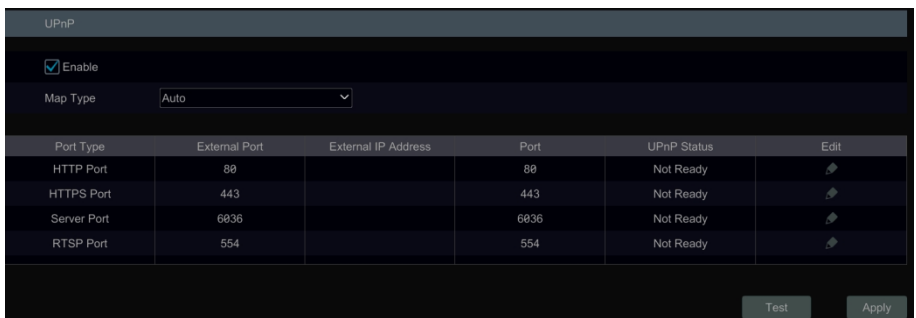

14.1.7 802.1X

If it is enabled, the NVR data can be protected. When the NVR is connected to the network protected by the IEEE 802.1X, user authentication is needed.

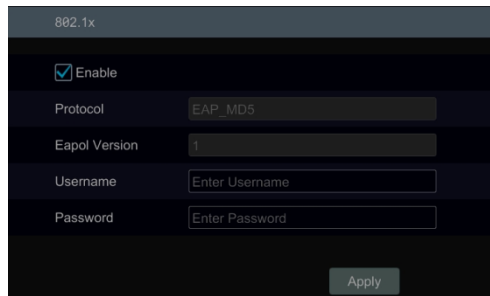

802.1x	
<input checked="" type="checkbox"/> Enable	
Protocol	EAP_MD5
Eapol Version	1
Username	Enter Username
Password	Enter Password
Apply	


To use this function, the NVR shall be connected to a switch supporting the 802.1x protocol. The switch can be considered as an authentication system to identify the device in a local network. If the NVR connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

Username and password: The username and password must be the same with the username and password applied for and registered in the authentication server.

14.1.8 NAT Configuration

Click *Start* → *Settings* → *Network* → *NAT* to go to the interface for NAT configuration.

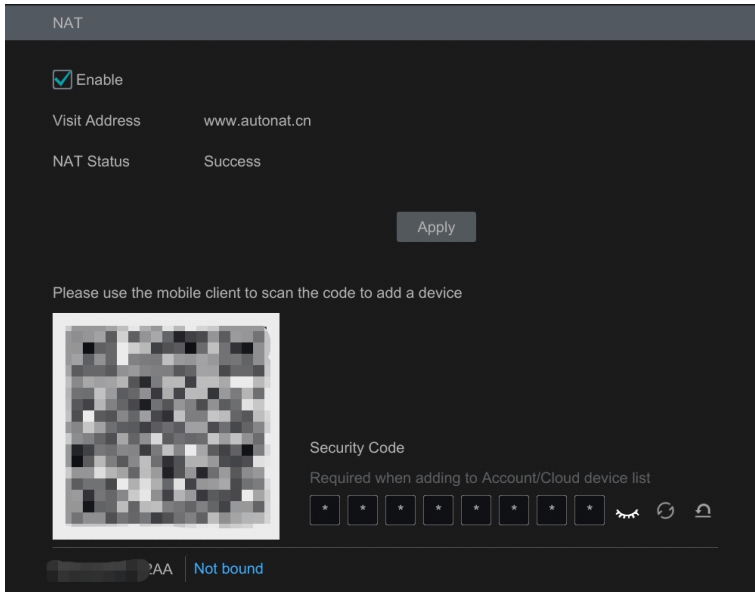

Check “Enable” and then select the NAT server address. Click “Apply” to save the settings. You can scan the QR Code through mobile APP which is installed on a mobile phone or tablet PC to quickly add the device to the server list of the mobile APP. Click “Advanced” to select the area as needed.

Note:

1. After the NAT is enabled, use the mobile APP to scan the QR code and then the device can be added to the server list of the mobile APP. After you bind the device to you APP account and enable this function, a verification code will be required when logging onto the web client by using the above visit address (different areas and regions maybe have different visit addresses). Please enter the correct verification code that getting from the APP.
2. Currently, only the latest APP version can receive the verification code.
3. After the NAT is enabled, when you add the device to the account of the mobile APP, you must enter the security code of the device here. Please refer to the mobile surveillance user manual for details.

After the device is bound to the account of the mobile APP, the blue binding information will be shown under the QR code. Click this blue information to unbind it.

14.1.9 FTP Configuration

Some models may not support this function.

Click **Start** → **Settings** → **Network** → **FTP** to go to the interface for FTP configuration. Check “Enable” and enter the server name, port, username and password, max file size and remote

directory.

Please enable “Resume Uploading” as needed.

After that, you can choose the camera, set the schedule and then select the video records, images and alarm information to upload as needed in this interface.

FTP

Enable

Server Address Port

Username Password Anonymous

Max File Size M Remote Directory

Resume Uploading Note:After FTP is successfully reconnected , the device will automatically upload the videos shot during FTP disconnection period.

Uploading Settings

No.	Camera Name	Schedule	Uploading record				Uploading Image		Uploading File(txt)
			Motion	Intelligence	Sensor	Stream Type	Snapshot	Alarm Info	
1	IPC	24x7	OFF	OFF	OFF	Sub Stream	OFF	OFF	
2	IP camera 01	24x7	OFF	OFF	OFF	Sub Stream	OFF	OFF	
3	IP camera 02	24x7	OFF	OFF	OFF	Sub Stream	OFF	OFF	

14.1.10 SNMP

- Click **Start** → **Settings** → **Network** → **SNMP** to go to the interface for SNMP configuration.

SNMP

Enable SNMPv1

Enable SNMPv2

SNMP Port

Read Community

Write Community

Trap Address

Trap Port

- Check SNMPv1 or SNMPv2 to enable this function.
- Set the port of the SNMP.
- Set the trap address and the trap port.
- Click “Apply” to save the settings.


Trap Address: The IP address of SNMP host.

Trap Port: The port of SNMP host.

Tips: Before setting the SNMP, please download the SNMP software and manage to receive the device information via SNMP port. By setting the trap address, the device is allowed to send the alarm event and exception message to the monitoring center.

14.1.11 Cloud Upgrade

- ① Click *Start* → *Settings* → *Network* → *Cloud Upgrade* as shown below.

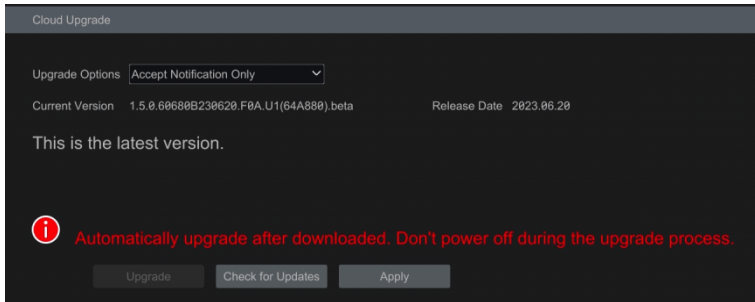

- ② Select “Accept Notification Only” or click “Check for Updates” to check whether the current version is the latest. If your software version is not the latest, click “Upgrade” to download and upgrade from the cloud server.
- ③ Please don't power off during the upgrade process.

Note: Only users with Network user authority can activate and use this feature. If the dealer does not wish to provide this capability to their users, they can ensure that only the main Admin login has network authority.

14.1.12 Platform Access

Some models may not support this function.

This function is mainly used for connecting NVMS. The setting steps are as follows.

Click *Start* → *Settings* → *Network* → *Integration* → *Platform Access* to go to the interface.

Platform Access

- ① Set “Access Type” as “Platform Software” and select “Enable” as shown below.
- ② Check the IP address and port of the transfer media server in the NVMS. The default server port for auto report is 2009. If it is modified, please go to the transfer media interface to check.
- ③ Enable the auto report in the NVMS when adding a new device. Then self-define device ID and complete the remaining information of the device in the NVMS.
- ④ Enter the above-mentioned server address, port and report ID in the server interface. Then click “Apply” to save the settings.

14.1.13 UPnP Report Access

In this interface, you can also access the third-party platform by UPnP Report. Click **Start → Settings → Network → Integration → UPnP Report**. If this one is enabled, please enter the server address, port and manufacturer ID.

14.1.14 ONVIF

The device supports ONVIF (Profile G/T/S) and the model name can be searched on the ONVIF official website. After ONVIF is enabled, it can be searched and connected to a third-


party platform via ONVIF protocol.

Click *Start* → *Settings* → *Network* → *Integration* → *ONVIF* to enter the following interface.

The screenshot shows the ONVIF configuration interface. At the top, there is a checkbox labeled 'Enable ONVIF' which is checked. Below it is a 'User List' table with a header row containing 'No.' and a column for user details. To the right of the table is an 'Add' button. The main part of the interface is a 'Add User' dialog box. It has a title bar with 'Add User' and a close button. Inside the dialog, there are three input fields: 'Username' (placeholder: 'Enter Username'), 'Password' (placeholder: 'Enter Password'), and 'Confirm Password' (placeholder: 'Enter Password'). Below the password fields, there are two lines of instructions: '1. 8 to 16 characters' and '2. Contains two or more numbers/lowercase/uppercase letters/symbols.'. Below these instructions are three radio buttons for 'User Type': 'Video User' (selected), 'Operator', and 'Admin'. At the bottom of the dialog are 'OK' and 'Cancel' buttons. In the bottom right corner of the main interface, there is an 'Apply' button.

Note: when adding the device to a third-party platform with ONVIF protocol, please check “Enable ONVIF” first and then enter the username and password created in the above interface.

14.1.15 Network Status

Click *Start* → *Settings* → *Network* → *Network Status* to view the network status or click  on the tool bar at the bottom of the live view interface to view network status conveniently.

Click *Start* → *Settings* → *Network* → *Network Status Detection*. Enter the IP address and then click “Test” to check the network connection status (like network delay, packet loss).

14.2 Basic Configuration

14.2.1 Common Configuration

Click *Start* → *Settings* → *System* → *Basic* → *General Settings* to go to the following interface. Set the device name, device No., language, video format and main output. Enable or disable wizard, “Log In Automatically”, “Log Out Automatically” (if checked, you can set the wait time), “App Live Self-Adaption” and “Dwell Automatically” (if checked, you can set the wait time). Click “Apply” to save the settings.

Device Name: The name of the device. It may display on the client end or CMS to help users to recognize the device remotely.

Video Format: Two modes: PAL and NTSC. Select the video format according to the camera.

Main Output: Enable “Fixed display resolution” and then select the main output as needed.


Note: You can set the resolutions of the main output (VGA/HDMI1) and secondary output1/2/3 (HDMI2/3/4) respectively if the NVR has dual outputs.

Dwell Automatically: Switch automatically. Check it and set “wait time”. The system will sequence automatically if it is not operated during the time you set.

14.2.2 Date and Time Configuration

Click **Start** → **Settings** → **System** → **Basic** → **Date and Time** to go to the interface as shown below. Set the system time, date format, time format and time zone of the NVR. The default time zone is GMT+08 Beijing, Hong Kong, Shanghai, Taipei. If the selected time zone includes DST, the DST of the time zone will be checked by default. Click “Apply” to save the settings.

You can manually set the system time or synchronize system time with network through NTP.

Manual: select “Manual” in the “Synchronous” option and then click  after the “System Time” option to set the system time.

NTP: select “NTP” in the “Synchronous” option and then enter the NTP server.

Date and Time

System Time 2019/07/31 05:01:29

Date Format Year/Month/Day

Time Format 24-Hour

Sync Time With Network

Synchronous Manual

NTP Server time.windows.com

Time Zone / DST

Time Zone GMT-05 New York, Toronto, Wash

DST Enable

14.2.3 Recorder OSD Settings

Click *Start* → *Settings* → *System* → *Basic* → *Recorder OSD settings* to go to recorder OSD setting interface. OSD name and icon can be enabled here.

14.2.4 Hot Standby Settings

This series of products support N+1 hot standby function. The system consists of several host devices (NVRs) and a hot standby device (NVR).

N is the number of host devices; the maximum of “N” is 32.


1 refers to a hot standby NVR. When a failure happens on one host NVR, the hot standby NVR will take over the host NVR to avoid the loss of data.

Note:

1. It is recommended to use the same model and version NVRs for N+1 hot standby function.
2. If the time and date of the host NVRs and the hot standby NVR are not synchronized, some recorded videos will overlap.
3. When the host NVR fails and the hot standby NVR takes over it and keeps recording, both will lose a few seconds of recordings.
4. The hot standby NVR only takes over the mainstream of the host NVR.
5. To improve the reliability, the work pattern of the network ports of the NVR which you want to set as “hot standby mode” should be set to “Network Fault Tolerance” mode.
6. The hot standby NVR only can take over one NVR at a time. If multiple host devices cannot work normally simultaneously, only one of them can be taken over and the others need to wait. The hot standby NVR will take over next offline host NVR until the previous one is online again.

Hot Standby Settings:

1. Click *Start* → *Settings* → *System* → *Basic Settings* → *Hot Standby Settings*.

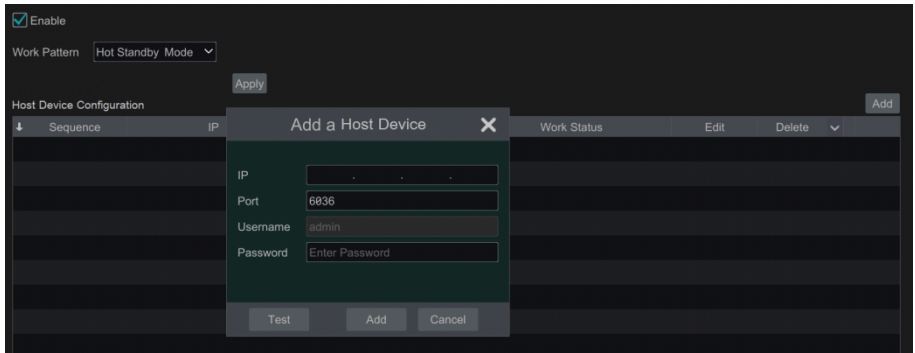

2. Check “Enable” and select the work pattern as “Hot Standby Mode”. After verifying the username and password, the device will reboot.

3. Click “Add” in the above-motioed interface to enter the IP address and password of the host device. After the host devices are added, you can view their connection status, working status, etc.

4. When detecting an offline NVR, the hot standby NVR will take over it and log into the network cameras (IPCs) managed by the offline NVR to obtain the video streams.

5. After the host NVR is online again, the hot standby NVR will stop backing up videos and synchronize the record to the host NVR. If there are offline records in the IPCs, the host NVR also needs to synchronize them.

6. After synchronizing the records, the hot standby NVR will delete these videos and restore monitoring state.

If the NVR is set to “Hot Standby Mode”, AI events cannot be configured and you can only monitor the status of the host devices and perform maintenance operations, such as basic settings, viewing logs, user management, disk management, network management, upgrade, etc.

14.2.5 PoE Power Management


Click *Start* → *Settings* → *System* → *Basic Settings* → *PoE Power Management* to go to the following interface. This function is only available for recorders with built-in PoE.

PoE Port	Enable	Current Power
Poe[01]	ON	0.00W
Poe[02]	ON	0.00W
Poe[03]	ON	0.00W
Poe[04]	ON	0.00W
Poe[05]	ON	0.00W
Poe[06]	ON	0.00W
Poe[07]	ON	0.00W
Poe[08]	ON	0.00W

In this interface, you can view the current power consumption of any attached POE cameras. The PoE power supply of the PoE camera/panel can be enabled or disabled by selecting “ON” or “OFF” as needed. This can also be done remotely through the Web browser.

14.3 Factory Default

Click *Start* → *Settings* → *System* → *Maintenance* → *Factory Default* to go to the following interface. Please choose the item as needed.

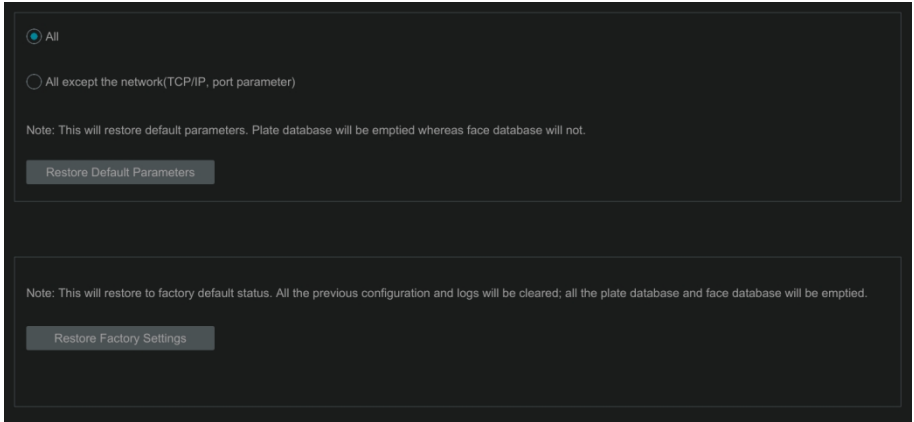

Note: Restoring default parameters will not change time zone and video format, except that, the password of the admin will be preserved.

14.4 Device Software Upgrade

● Upgrade

You can click *Start* → *Settings* → *System* → *Information* → *Basic* to view MCU, kernel version and firmware version and so on. Before upgrading, please get the upgrade file from your dealer.

The upgrade steps are as follows:

- ① Copy the upgrade software onto the USB flash drive.
- ② Insert the USB flash drive into the USB interface of the NVR.
- ③ Click *Start* → *Settings* → *System* → *Maintenance* → *Upgrade* to go to “Upgrade” interface. Select the USB device in “Device Name” option and go to the path where the upgrade software resides. Select the upgrade software and then click “Upgrade”. The system may automatically restart during upgrading. Please wait for the upgrade to finish and it’s critical not to turn the power off during the upgrade process.

● USB Flash Drive Upgrade

The upgrade steps are as follows:

- ① Copy the upgrade files into the home directory of your USB flash drive.

- ② Insert the USB flash drive into the USB interface of the NVR.
- ③ Turn the power of the device off and then turn on the power after 5 seconds. The device will automatically upgrade.
- ④ The system may automatically restart during upgrading. Please wait for the upgrade to finish and it's critical not to turn the power off during the upgrade process.

Note: 1.The file system of the USB mobile device which is used for upgrade, backup and restoration should be FAT32/NTFS format (only some models support NTFS format).

2. Do not save too many folders and files in the home directory. It is suggested to only keep the upgraded files.

14.5 Backup and Restore

You can back up the configuration file of the NVR and export the file to other storage devices; in this way, you can implement the configuration to other NVRs of the same model and save setup time.

Insert the USB storage device into a USB interface on the NVR and then click **Start → Settings → System → Maintenance → Backup and Restore** to go to the interface.

- **Backup**


Select the USB device in “Device Name” option; go to the path where you want to store the configuration backup file and then click “Backup”; finally, enter the password and click “OK” in the popup window.

- **Recover**


Select the USB device in “Device Name” option; find the configuration backup file and then click “Recover”; enter the password you set when backing up the configuration files and click “OK” in the popup window.


14.6 Restart Automatically

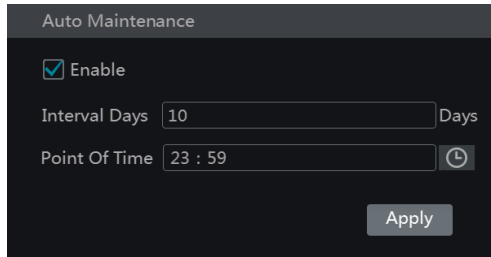

You can set the automatic restart time for the NVR to maximize performance. Click **Start → Settings → System → Maintenance → Auto Maintenance** to go to the interface as shown below. Enable auto maintenance, set the interval days and point of time and then click “Apply” to save the settings. The NVR will restart automatically at the pointed time every *interval* days.



14.7 View Log

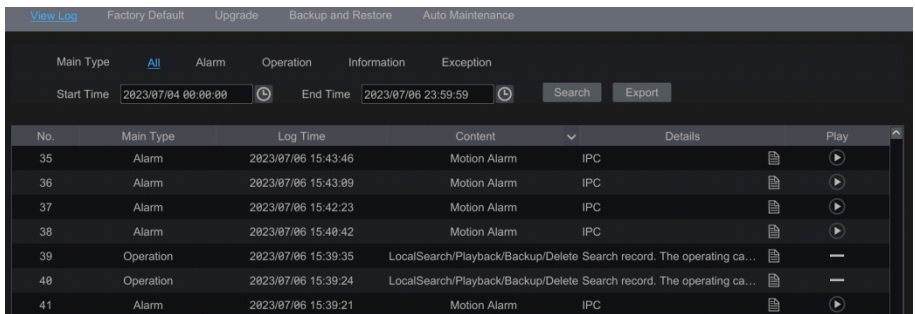Click *Start* → *Settings* → *System* → *Maintenance* → *View Log* to go to the log view interface. Select the log main type, click  to set start time and end time and then click “Search”. The searched log files will be displayed in the list.



Choose the log file in the list and then click “Export” button to export the log file. Click  on the “Content” title bar to pop up a menu list. Using the check box, check contents on the menu list and then the log list will show only the checked log contents. Click  to play the video log.


14.8 View System Information

Click *Start* → *Settings* → *System* → *Information* and then click the corresponding menu to view the “Basic”, “Camera Status”, “Alarm Status”, “Record Status”, “Network Status” and “Disk” information of the system.

15 Remote Surveillance

15.1 Mobile Client Surveillance


- ① Enable NAT in the NVR. Refer to [NAT Configuration](#) for details.
- ② Download and install the mobile client “SuperLive Plus” into the mobile device with the Android or iOS system.
- ③ Run the mobile client, go to the “Server List” interface to scan the QR Code of the NVR (Go to Start→Settings→Network→NAT to view the QR Code of the NVR).

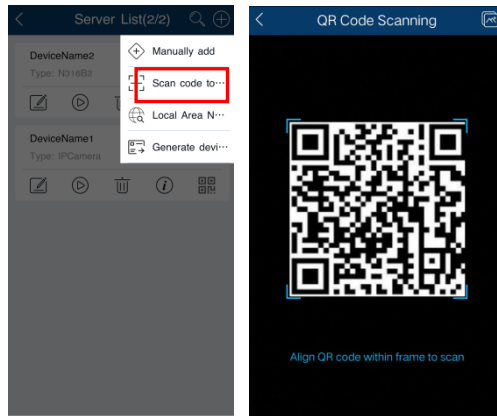

If you want to add the device to the account of the mobile APP, you must enable NAT2.0 and enter the security code. Please refer to the mobile surveillance user manual for details.

15.2 Web LAN Access

- ① Click **Start→Settings→Network→TCP/IP** to go to the “TCP/IP” interface. Set the IP address, subnet mask, gateway, preferred DNS and alternate DNS of the NVR.
- ② Open a web browser on your computer, enter the IP address of the NVR in the address bar and then press enter to go to the login interface as shown below. You can change the display language on the top right corner of the login interface. Enter the username and password of the NVR in the interface and then click “Login” to go to the live view interface.

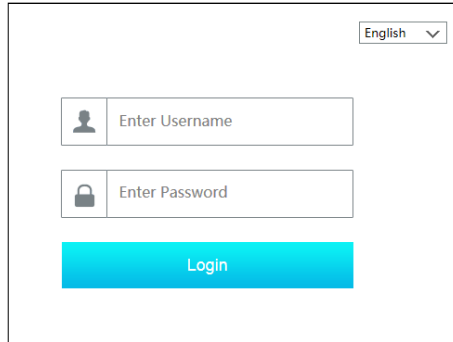

Notes:


1. Please make sure that the IP address of the NVR and the computer are both in the same local network segment. For example, supposing that the IP address of the computer is 192.168.1.41, the IP address of the NVR shall be set to 192.168.1.XXX.
2. If the HTTP port of the NVR is not 80, but another number, you need to enter the IP address plus port number in the address bar when accessing the NVR over a network. For example, the HTTP port is 81. You should enter `http://192.168.1.42:81` in the address bar.

15.3 Web WAN Access

➤ NAT Access

- ① Set the network of the NVR. Please refer to [TCP/IP Configuration](#) for details.
- ② Enable NAT and then set the NAT server address. Please refer to [NAT Configuration](#) for details.
- ③ Open a web browser on your computer, enter the NAT server visit address (such as www.autonat.us) in the address bar and then press enter to go to the interface as shown below (download and install the relative plug-in according to the tip if you access the NVR through NAT for the first time).

Note: Different regions may have different visit addresses. Please go to the NAT interface to view the detailed visit address (click **Start** → **Settings** → **Network** → **NAT**).

Enter the serial number (click  on the tool bar at the bottom of the live view interface to see the serial number of the NVR), user name (the user name of the NVR, **admin** by default) and password of the NVR, select the display language on the top right corner of the interface and then click “Login” to go to the web client interface.

Note: If your device is bound to the APP, the verification code that getting from the APP is needed.

➤ PPPoE Access

- ① Click **Start** → **Settings** → **Network** → **PPPoE** to go to the “PPPoE” interface. Check “Enable” in the “PPPoE settings” and then enter the username and password you get from your ISP. Click “Apply” to save the settings.
- ② Click **Start** → **Settings** → **Network** → **Network Status** to view the IP address of the NVR.
- ③ Open a web browser on your computer, enter the IP address of the NVR like <http://210.21.229.138> in the address bar and then press enter to go to the login interface. Enter the username and password of the NVR in the interface and then click “Login” to go to the live view interface.

➤ Router Access

- ① Click **Start** → **Settings** → **Network** → **TCP/IP** to go to the “TCP/IP” interface. Set the IP address, subnet mask, gateway, preferred DNS and alternate DNS of the NVR.
- ② Set the HTTP port (it is suggested to modify the HTTP port because the default HTTP port 80 might be taken up) and enable UPnP function in both the NVR and the router. If the UPnP function is not available in the router, you need to forward the LAN IP address, HTTP port and server port of the NVR to the router. Port mapping settings may be different in different routers, so please refer to the user manual of the router for details.
- ③ Get the WAN IP address of the NVR from the router. Open a web browser on your computer, enter the WAN IP address plus HTTP port like <http://116.30.18.215:100> in the address bar and then press enter to go to the login interface. Enter the username and password of the NVR in the interface and then click “Login” to go to the live view interface.

Note: If the WAN IP address is a dynamic IP address, it is necessary for you to use the domain name to access the NVR. Click Start → Settings → Network → DDNS to set DDNS (see 14.1.4 DDNS Configuration for details). By using DDNS function you can use the domain name plus HTTP port like <http://sunshine.NVRdydns.com:100> to access the NVR via the Internet.

15.4 Web Remote Control

The NVR supports web client access with or without plug-in. The plug-in for HTML5 browsers offers much improved features and performance.

The supported browsers (green color) for remote access with the plug-in are as follows. The red versions are not supported.

IE	Edge *	Firefox	Chrome	Safari	Opera	Safari on iOS *	Android Browser *	Opera Mobile *	Chrome for Android *	Firefox for Android	Samsung Internet
		2-6									
6-9		7-10		3.1-4	10-11.5	3.2-4.1	2.1-4.3	12			
10	12-98	11-97	4-98	5-15.3	12.1-82	4.2-15.3	4.4-4.4.4	12.1			4-15.0
11	99	98	99	15.4	83	15.4	99	64	99	96	16.0
		99-100	100-102	TP							

When you access the NVR through the above web browser for the first time, the browsers need to download and install the relative components for normal preview and playback.

If your browser asks for permission on the configuration modifications after the plug-in runs, please allow it, or the interface will not display normally; if the relevant ports of the plug-in (port 11563; port 12863; port 13863) are occupied, the system will tell you which program currently occupies the port. Please stop the occupying program.

The supported browsers (green color) for remote access without the plug-in are as follows. The red versions are not supported.

IE	Edge *	Firefox	Chrome	Safari	Opera	IOS Safari *	Opera Mini *	Android Browser *	Opera Mobile *	Chrome for Android *	Firefox for Android	UC Browser for Android	Samsung Internet	QQ Browser	Baidu Browser	KaiOS Browser
		2-46														
	12-14	47-51	4-50		10-37											
	15	52	51-56	3.1-10.1	38-43	3.2-10.3							4-6.4			
6-10	16-84	53-79	57-84	11-13.1	44-69	11-13.7		2.1-4.4.4	12-12.1				7.2-11.2			
11	85	80	85	14	70	14.0	all	81	59	85	79	12.12	12.0	10.4	7.12	2.5
		81-82	86-88	TP												

Please refer to the tips in the remote interfaces for details. The buttons and icons on the top right corner of the remote interface are introduced as follows.

admin: the current login username.

Logout: click to log out and return to the login interface.

Modify Password: click to change the password of the currently active user. Enter the current password and then set a new password in the popup window. Click “OK” to save the new password.

Local Settings: click to change the local settings. Set the snapshot number and click “Browse” to set the snapshot path and record path as shown below. Click “Apply” to save the settings.


Snapshots number	5	▼
Save snapshots to	C:\Users\Administrator\Pictures	Browse
Save record files to	C:\Users\Administrator\Videos	Browse
Apply		

Below as an introduction is a web browser with the applicable plug-in installed.


15.4.1 Remote Preview

Click “Live Display” in the remote interface to go to the preview interface.

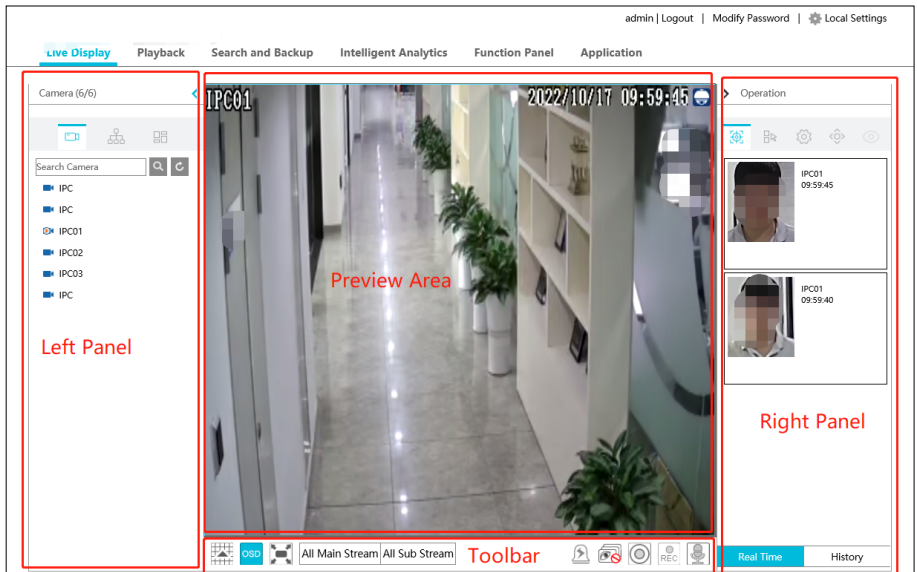

The preview interface consists of the four areas marked in the following picture.






➤ Start Preview

Select a window in the preview area and then click one online camera on the left panel to preview the camera in the window. You can click  in the tool bar to preview all the cameras.


➤ Left Panel Introduction

Click  on the left panel to hide the panel and click  to show the panel. You can view all the added cameras and groups on the left panel.


● View Camera

Click  to view the cameras. You can view the number of all the added cameras and the online cameras. For instance, the left number 3 in **Camera (3/4)** on the left panel stands for the number of online cameras; the right number 4 stands for the number of all the added cameras. Enter the camera name in the search box and then click  to search for the camera. Click  to refresh the camera list.




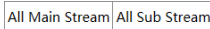








● View Group

Click  to view the groups. The top side of the left panel displays all the groups and the bottom displays all the cameras in the group.



● View Scheme



Click  to view the scheme. All schemes can be shown in the left panel. Double click the scheme name to invoke it quickly.

➤ Tool Bar Introduction







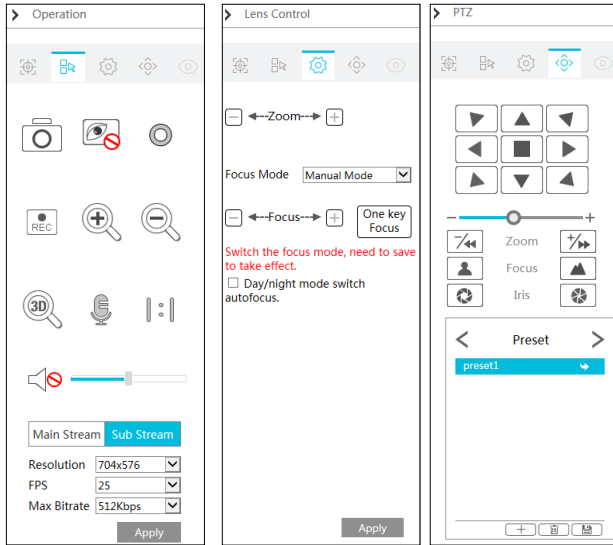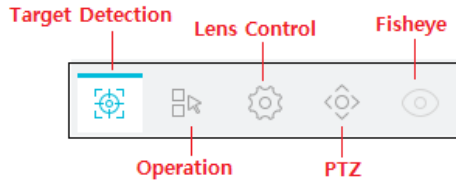

Button	Meaning
	Screen mode button.
	Click to enable/disable OSD.
	Click to show full screen. Right click on the full screen to exit full screen.
	Click “All Main Stream” or “All Sub Stream” to set the stream of all the cameras.
	Manual alarm button. Click to open a window and then trigger and clear the alarm-out in the window manually.
	Click to preview all cameras.
	Click to close all the preview cameras.
	Click to start recording all cameras to computer. Click  to stop recording.
	Click to start recording all cameras to the NVR. Click  to stop recording.
	Click to enable talk through the NVR.



➤ Right Panel Introduction



Click  on the right panel to show the panel and click  to hide the panel.












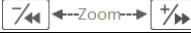





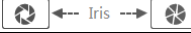










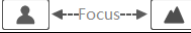



Operation panel introduction:

Button	Meaning
	Click to take snapshots
	Click to start recording to computer
	Click to start recording to the NVR.
	Click to zoom in the image of the camera and then drag the mouse on the camera image to view the hidden area.
	Click to zoom out the image of the camera.
	Click to start two-way talk.
	The 3D zoom in function is designed for P.T.Z. Click the button and then drag the image to zoom in or zoom out the image; click the image on different areas to view the image of the dome omni-directionally.
	Click to close the preview camera.

	Click to display original size
	Click to enable audio and then drag the slider bar to adjust the volume. You can listen to the camera audio by enabling audio.

Click one camera window in the preview area and then click  to set the camera's live preview stream and record stream to mainstream in manual record mode; click  to set the camera's live preview stream and record stream to sub stream. In sub stream tab, set the resolution, FPS and bitrate and then click "Apply" to save the settings.

PTZ panel introduction:



Button	Meaning
	Click  /  /  /  /  /  to rotate the dome; click  to stop rotating the dome.
	Drag the slider to adjust the rotating speed of dome.
	Click  /  to zoom in/out camera image.
	Click  /  to increase/ decrease the focal length.
	Click  /  to increase/decrease the iris of the dome.
Preset	Click to view the preset list and then click the button in the list to call the preset. Click  to add a preset; click  to save the preset setting; click  to delete the selected preset
Cruise	Click to view the cruise list. Click  to add a cruise; click  to play the cruise; click  to stop cruise.
Cruise Group	Click to view the cruise group list. Click  to add a cruise group; click  to play the cruise group; click  to stop cruise group.
Trace	Click to view the trace list. Click  to add a trace; click  to play the trace click  to start record.

If the camera you added is motorized lens camera, click the lens control icon to adjust the lens. If the camera you added is a fisheye camera, click the fisheye icon to set the relevant parameters as needed.

15.4.2 Remote Playback

Click "Playback" in the remote interface to go to the playback interface.

















① Check the record event types and cameras on the left panel. Set the record date on the calendar beside the time scale.

② Click  to search the record data and then click  or directly click the time scale to play the record.

The operation of the playback time scale is similar to that of the time scale in the main program

of the NVR. Please refer to [8.2 Playback Interface Introduction](#) for details.



Introduction of playback control buttons:

Button	Meaning
	Stop button.
	Rewind button. Click to play video backwards.
	Play button. Click to play video forwards.
	Pause button.
	Deceleration button. Click to decrease the playing speed.
	Acceleration button. Click to increase the playing speed.
	Previous frame button. It works only when the forward playing is paused in single screen mode.
	Next frame button. It works only when the forward playing is paused in single screen mode.
	Click  to step backward 30s and click  to step forward 30s.
	Backup start time button. Click the time scale and then click to set the backup start time.
	Backup end time button. Click the time scale and then click to set the backup end time.
	Backup button.
	Backup tasks button. Click to view the backup status.
	Event list button. Click to view the event record of manual/schedule/sensor/motion.

15.4.3 Remote Search and Backup

Click “Search and Backup” in the remote interface to go to the backup interface. You can back up the record by event or by time.

➤ By Event

Check the record type on the left side of the interface and then click  to set the start time and end time; check the cameras and then click  on the right side to search the record (the searched record data will be displayed in the list); check the record data in the list and then click “Backup” to back up the record.

➤ By Time







Click  to set the start time and end time on the left side of the interface; check the cameras and then click  on the right side to back up the record.

Image Management: Click “Image Management” to go to image management interface. The system will display all captured images automatically in the list. Click  to delete the image. Click  to open the “Export” window. Click  to open the “View Image” window. Click

 to export the image.

View Backup Status: Click “Backup Status” to view the backup status. Click “Pause” to pause; click “Resume” to continue the backup; click “Delete” to delete the task.

15.4.4 Intelligent Analysis

Click “Intelligent Analysis” in the remote interface to configure smart search, statistics and sample database. All of these settings are similar to that of the NVR. See the configurations of the NVR for details.


15.4.5 Application

The application of this system includes parking lot management, access control management, face attendance, face check-in and so on. Note that face attendance and face check-in functions are only available for some modes. All of these settings are similar to that of the NVR. See the configurations of the NVR for details.
















15.4.6 Remote Configuration


Click “Function Panel” in the remote interface and then configure the camera, record, alarm, disk, network, account and authority and system of the NVR remotely. All of these settings are similar to that of the NVR. See the configurations of the NVR for details.

➤ Jumping to IPC Web Client

Except for IPCs that access RTSP protocol, the IPC can be directly jumped from the NVR web client to the IPC web client by clicking  in the above-mentioned interface.

1. Please log in to the Web Client of NVR (See [Web LAN Access](#) or [Web WAN Access](#) for details).
2. Click **Function Panel** → **Camera** → **Edit Camera** to go to the following interface.

No.	Camera Name	Address	Port	Status	Protocol	Model	Preview	Edit	Delete	Settings	Upgrad	Version
1	IPC	10.20.23.37	9008	Offline	IP Camera	IPC						
2	IP Camera01	10.10.10.153	9008	Online								7208
3	IPC	10.20.52.201	9008	Online	IP Camera							8020

3. Select the camera and click  to log into the web client of the camera. From there, you can set the parameters of the camera as needed.

Appendix A FAQ

Q1. Why can't I find the HDD?

- a. Please check the power and SATA data cables of the HDD to make sure they are properly connected.
- b. For some NVRs with the 1U or small 1U case, the power of the adapter may be not enough for operating your HDD. Please use the power adaptor supplied along with your specific NVR.
- c. Please make sure the HDDs are compatible with the NVR. See [Appendix C Compatible Device List](#) for details.
- d. The HDD could have gone bad.

Q2. Why are there no images in some or all the camera windows?

- a. Please make sure the resolutions of the cameras are supported by the NVR.
- b. Please make sure the network cables of the IP camera and NVR are both connected properly, and the network parameters are set correctly.
- c. Please make sure the network and the switch both works normally.

Q3. Why does my screen have no output after booting the NVR normally?


- a. Please make sure the screen, HDMI or VGA cables are functioning and properly connected.
- b. Please make sure the screen supports the resolution of 1280*1024, 1920*1080 or 3840*2160 (4K*2K) or 8K. The NVR cannot adapt to a screen of which the resolution is lower than 1280*1024, In that event, the screen will remind you that the resolution is not supported by the NVR or just not display anything. Please change the screen to 1280*1024, 1920*1080 or 3840*2160 resolution before booting the NVR.

Q4. What do I do if I have forgotten my password?

- a. The password for *admin* can be reset through the “Edit Security Question” function. Click “Edit Security Question” in the login window and then enter the corresponding answer to the selected question in the popup window. After you correctly answer all questions, you can reset the password for *admin*. If you forget the answers to these questions, there is no other way to restore the *admin* password, and you’ll have to contact your dealer for assistance.
- b. The passwords of other users can be reset by *admin*, please refer to [Edit User](#) for details.

Q5. Why will my NVR not accept the maximum number of IP cameras?

Take a 16 CH NVR as an example. Some 16 CH NVRs support a maximum of 120Mbps bandwidth input (please take the real device as a standard). Refer to the picture below. The remaining bandwidth should be larger than the bandwidth of the IP camera you want to add, or you would fail to add an IP camera. You should lower the added cameras’ bitrate to relieve the bandwidth. It is recommended to add cameras by “Quickly Add” for batch adding.

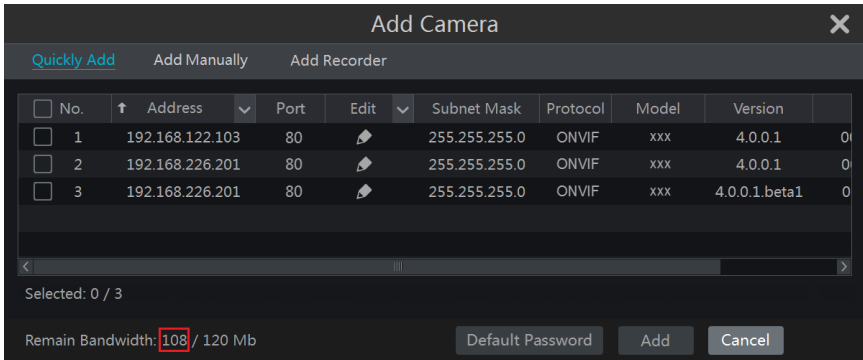

Q6. Why is my system not recording?


- Make sure the HDD was formatted prior to use.
- The recording schedule has not been set in customization mode. Please refer to [Schedule Settings](#) for details.
- It's possible your HDD is full, and the NVR is not able to record. Check HDD information from Disk Management and if required, please enable the recycle function (please see [Advanced Configuration](#) for details).
- There is no disk in the disk group, so please add at least one disk to the group. Refer to [Storage Mode Configuration](#) for details.
- The HDD could have gone bad. Please change to another one.

Q7. Fail to access the NVR remotely through IE.

- Note that Internet Explorer is no longer supported by Microsoft and it's recommended to use another browser such as Chrome, Edge, Firefox, etc
- Please make sure the IE version is IE8 or above.
- Please check whether the PC has enabled the firewall or installed the antivirus software. Please try to access the NVR again after you disable the firewall and stop the antivirus software.
- Allow & block list may have been set in Account and Authority setting. The PC of which the IP address is in the block list or out of the allow list cannot access the NVR remotely.

Q8. ActiveX control cannot be downloaded. What can I do?

- IE browser blocks ActiveX control. Please do setup as per the steps mentioned below.
 - Open IE browser. Click → Internet Options.

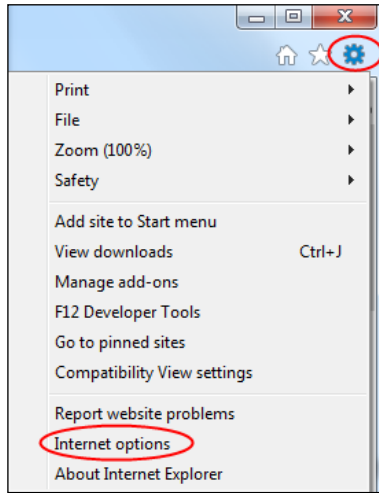

- ② Select **Security** → **Custom Level**. Refer to Fig 8-1.
- ③ Enable all the sub options under “ActiveX controls and plug-ins”. Refer to Fig 8-2.
- ④ Then click “OK” to finish setup.

b. Other plug-ins or anti-virus may block ActiveX. Please disable or do the required settings.

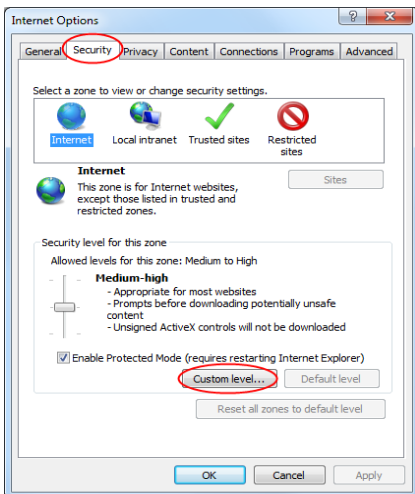


Fig 8-1

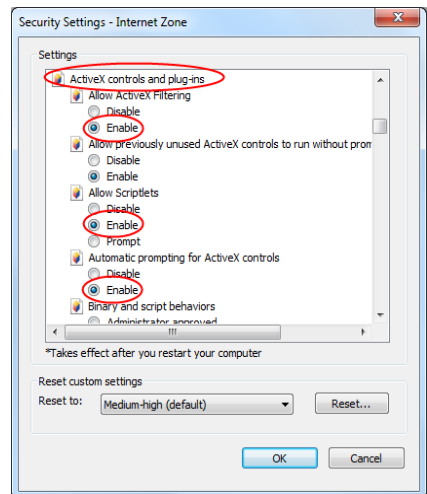



Fig 8-2

Q9. How do I play backup files?

- a. Recorded video backed up by NVR: insert the USB device with the recorded video backup files into the USB interface of a PC, and then open the USB device path. The recorded video can

be backed up in the private format and AVI format by NVR.

- If you select the private format when backing up recorded video by NVR, a RPAS compression package will be backed up to the USB device automatically along with the recorded video data. Uncompress the “RPAS.zip” and then click “RPAS.exe” to set up RPAS. After the setup is completed, open RPAS player and then click “Open Folder” in the middle of the interface to select the record data. Refer to Fig 9-1.

Select a camera in the resource tree on the left side of the interface to play the camera record. Click  on the tool bar under the camera image to enable audio. Refer to Fig9-2.

Note: The record will not have audio output if you disable the audio when recording by NVR. Please see [Mode Configuration](#) and [Encode Parameters Settings](#) for details.

- If you select the AVI format when backing up recorded video by NVR, the recorded video backup data can be played by a video player that supports this format.
 - Recorded video backed up through web. The recorded video can only be backed up using AVI format. The recorded video can be backed up to PC and played by the video player which supports this format.

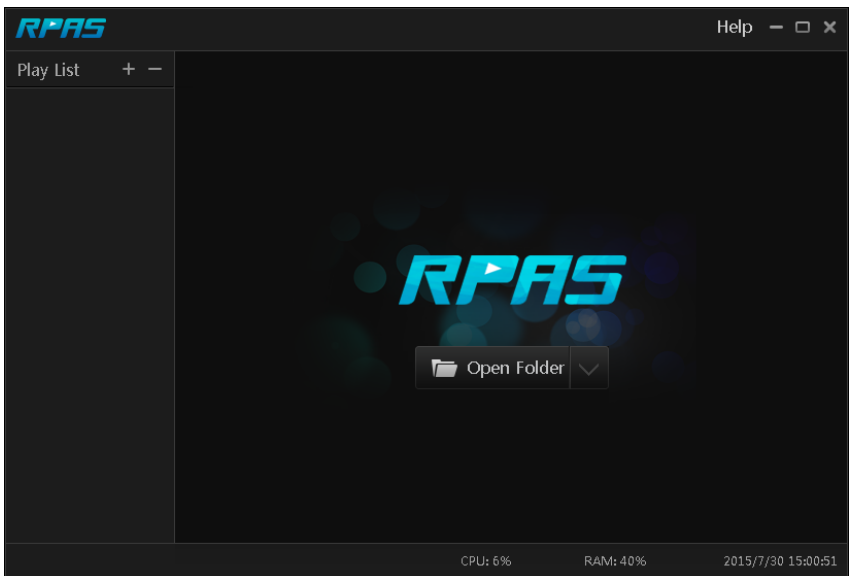


Fig 9-1

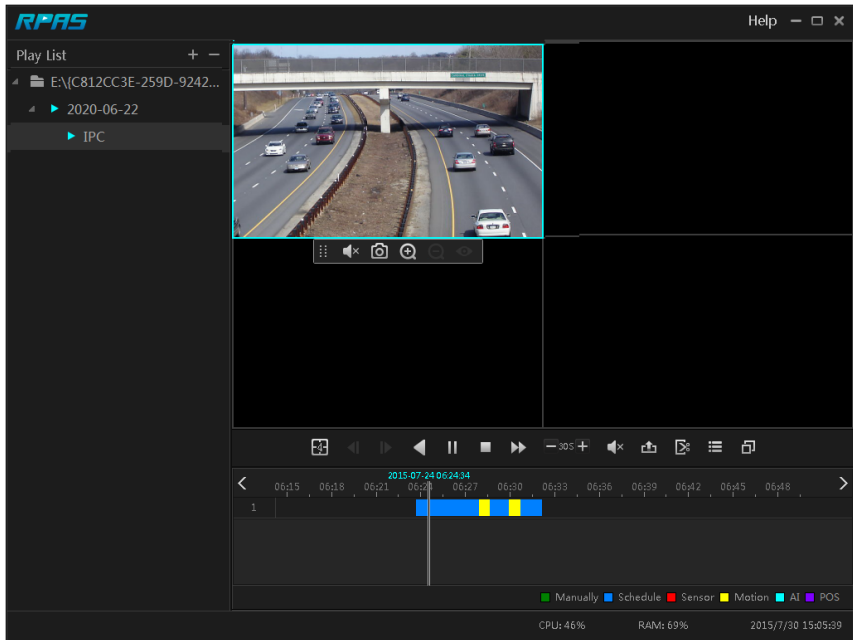


Fig 9-2

Q10. HTTPS service cannot work normally after directly installing the signed certificate.

- When importing the certificate, the private key is not attached to the certificate.
- When importing the certificate, the private key is attached to the certificate, but it is encrypted. At present, the NVR doesn't support the certificate with the encrypted private key.

Q11. You are prompted with the unsafe statements/tips when using HTTPS service.

- Please make sure your certificate is trusted.
- Make sure whether the Common Name (domain information) of the certificate matches with the domain name of the visiting website.
- Whether the certificate is within the period of validity.

Appendix B Calculate Recording Capacity

The recording capacity is mainly up to the record resolution, record stream and bitrate. Different image quality parameters decide different disk capacity occupation under equal circumstances. The higher the recording resolution, recording stream and recording bitrate is, the more disk capacity is taken up under equal circumstances. The calculation format of the recording capacity is shown below.

Recording Capacity (MB) = Bitrate (Kbps) ÷ 1024 ÷ 8 × 3600 × Recording hours per day × Record Storage Days × channel numbers

3600 means record for an hour(1TB=1024GB, 1GB=1024MB, 1MB=1024KB, 1Byte=8bit).

Record Bitrate (Kbps)	Used Space (MB/H)	Used Space (MB/D)
10240	4500	108000
8192	3600	86400
6144	2700	64800
4096	1800	43200
3072	1350	32400
2048	900	21600
1024	450	10800
768	337.5	8100
512	225	5400
384	168.75	4050
256	112.5	2700

The table below shows the recording capacity requirements for record storage in 30 days.

Record Bitrate (Kbps)	Recording Capacity (TB)					
	1CH	4CH	8CH	16CH	32CH	64CH
10240	3.09	12.36	24.72	49.44	98.88	197.76
8192	2.48	9.89	19.78	39.56	79.11	158.21
6144	1.86	7.42	14.84	29.67	59.33	118.66
4096	1.24	4.95	9.89	19.78	39.56	79.11
3072	0.93	3.71	7.42	14.84	29.67	59.33
2048	0.62	2.48	4.95	9.89	19.78	39.56
1024	0.31	1.24	2.48	4.95	9.89	19.78
768	0.24	0.93	1.86	3.71	7.42	14.84
512	0.16	0.62	1.24	2.48	4.95	9.89
384	0.12	0.47	0.93	1.86	3.71	7.42
256	0.08	0.31	0.62	1.24	2.48	4.95

For instance, there is a 32CH NVR recording 24 hours per day and the recordings are stored for 30 days, and the NVR adopts dual stream recording. If the mainstream is 4096Kbps and the sub stream is 1024Kbps, then the total recording capacity is 49.45TB (39.56TB + 9.89TB).

Considering the format loss of the disk is about 10%, the required disk capacity will be 55TB (49.45TB ÷ (1-10%)).

Appendix C Compatible Device List

Compatible HDD list


Brand and Series		Capacity
Seagate	Barracuda Series	500GB/1TB/2TB/3TB
	SV35 Series (recommended)	1TB /2TB /3TB
	Surveillance HDD Series (recommended)	1TB/2TB/3TB/4TB/6TB/ 8TB/10TB
Western Digital	Blue Series	500GB/1TB
	Green Series	2TB/3TB/4TB
	Purple Series (recommended)	1TB/2TB/3TB/4TB/6TB/ 8TB/10TB

Compatible USB mobile device

Brand	Capacity
SSK	2GB
Netac	4GB
Kingston	2GB/8GB/16GB/32GB
Aigo	2GB
Smatter vider	1GB
SanDisk	4GB/8GB/16GB/32GB

Appendix D Personal Data Collection Description

There are five functions concerning the personal data collection under the network modules of the device, including PPPoE, DDNS, E-mail, 802.1x and FTP. In the device, these functions are used by the client-end of the device to communicate with the server of the customer's company (or service supplier). As the client-end, our device needs to keep the authentication credentials (username and password) used to connect the server. These credentials can be configured through the Web client of the device and then sent to the device. The process of data transmission and storage are as follows.

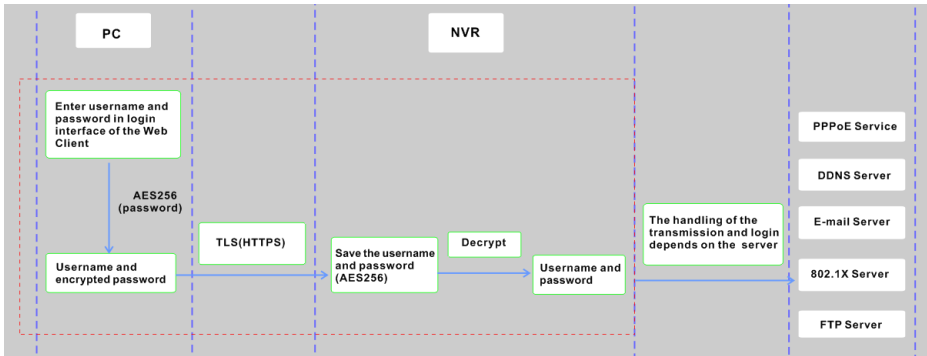

Function	Personal Data Type	Transmission Type	Storage Type	Authentication
PPPoE	Username, Password	TLS+AES256(password)	Password: AES256	Username/Password
DDNS	Username, Password	TLS+AES256(password)	Password: AES256	Username/Password
E-mail	Username, Password, E-mail address	TLS+AES256(password)	Password: AES256 The E-mail address will be desensitized before it is displayed on the page.	Username/Password
802.1x	Username, Password	TLS+AES256(password)	Password: AES256	Username/Password
FTP	Username, Password	TLS+AES256(password)	Password: AES256	Username/Password

Statement:

Except for service authentication when communicating with the server, we will never share these personal data stored on the device to the third-party or use it by ourselves without the client's authorization.

The log will record the operator's operation steps and change records but will not contain any information about the collected personal data.