


Panasonic®

Operating & Installation Instructions

Washing Machine
(Household Use)

Model No. NA-25CEW1

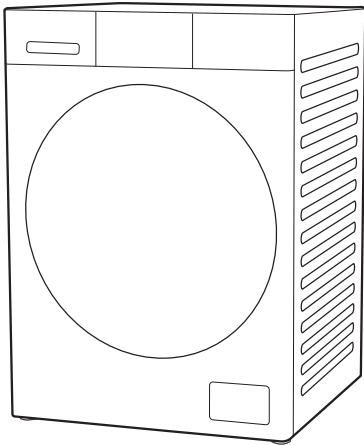

Contents

| | | |
|--------------|-------------------------------|----|
| | Safety Precautions | 2 |
| | Checking Your Washing Machine | 6 |
| Installation | Choosing the Right Location | 7 |
| | Moving and Installing | 8 |
| | Connecting the Hoses | 10 |
| | Test Run | 12 |
| | Before Washing | 13 |
| | Control Panel | 14 |
| | Detergent | 16 |
| | Washing | 18 |
| | Program List | 20 |
| | Details of Programs | 22 |
| | Washing Tips | 24 |
| | Changing Program Settings | 26 |
| | Changing Appliance Settings | 32 |
| | Maintenance | 33 |
| | Troubleshooting | 37 |
| | Error Display | 43 |
| | Specifications | 44 |

EN



It is essential to read these instructions.

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.




AWW9901BR8B1-0B0

Safety Precautions

WARNING


May cause serious injury or death

Children must not use it alone.

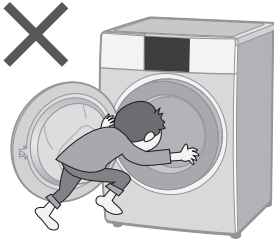

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Setting the Child Lock. (P. 32)

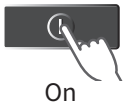


**Hold
5 sec.**




May cause fire or electric shock


Do not touch it with wet hands.

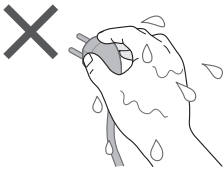


Do not hold or pull on the cord.

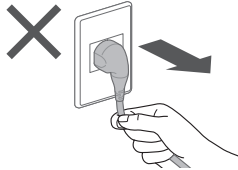

Do not use.

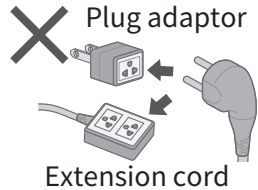

Fully insert it.

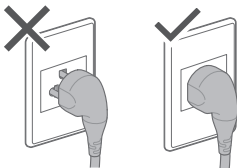

Do not use.




Do not bind, twist, or bend




- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


In case of failure or damaged power cord, stop use and ask the electrical technician.

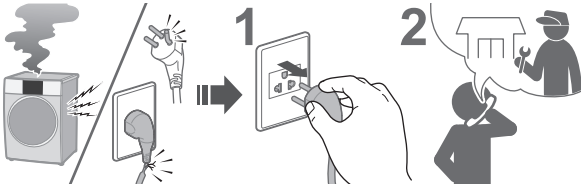

Accumulated dust may cause fire.

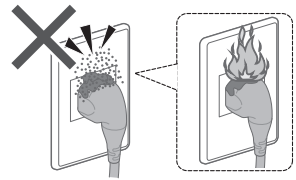


Securely insert the ground prong. Ask the electrical technician for a new socket.

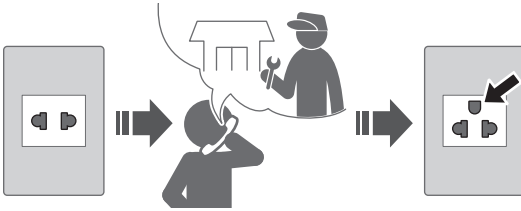

Wipe the power plug periodically.




Use a socket appropriate for this appliance.

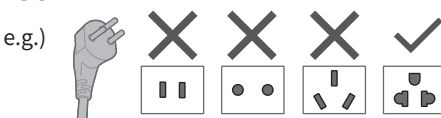

- The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.

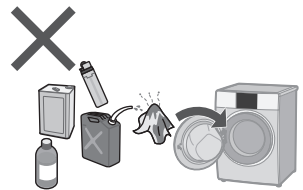

May cause failure

Do not disassemble, repair or modify it by yourself.




Safety Precautions (continued)




CAUTION

May cause injury


Be careful not to get your fingers caught.

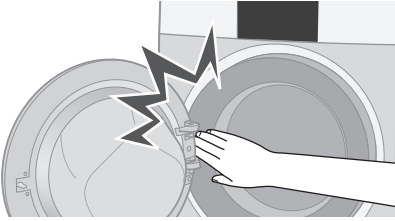



Do not climb on the appliance.

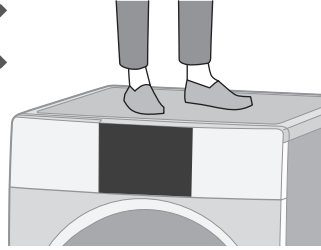

Do not touch when it is hot.

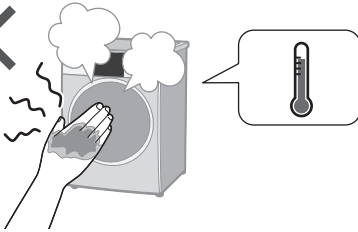

Install the appliance correctly.

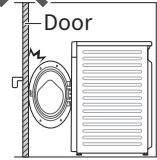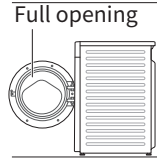


- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.

May cause water leakage

Turn off the water faucet.



Use new hose-sets.

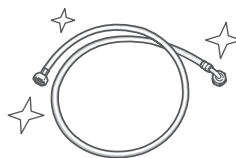


- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.


■ For maximum mass of dry cloth and pressure of tap water, see P. 44.

May cause failure


Keep away from heat and direct sunlight.

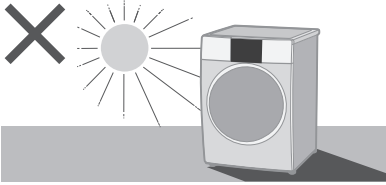

Remove anchor bolts before operation.

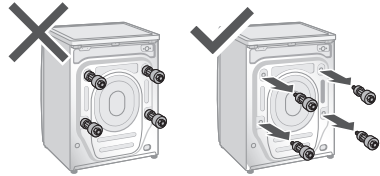


Do not obstruct.

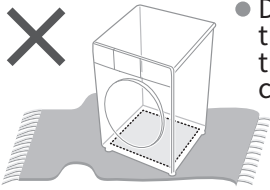


- Do not obstruct the openings of the bottom with carpet, etc.

Do not use hot water.

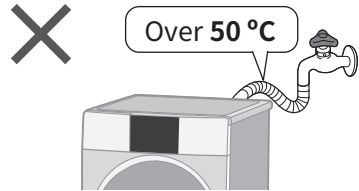


For machine-washable items only.

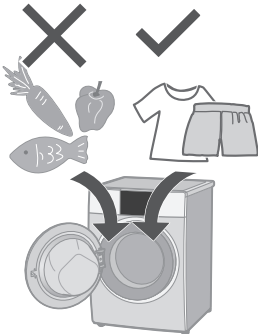

- This appliance is intended to be used in household. This appliance is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in laundrettes.

Do not wash excessively oily clothes.

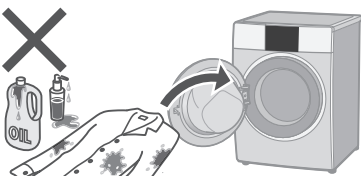


Follow the instructions.



- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Checking Your Washing Machine

Part names

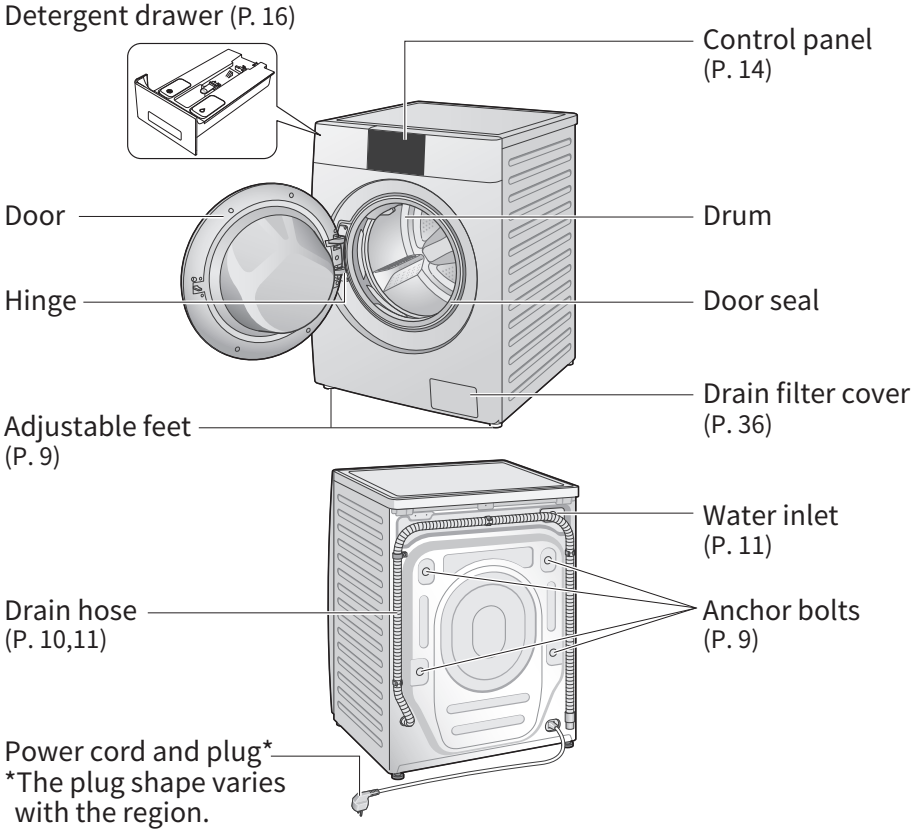

Accessories

Elbow (P. 11)




Spanner (P. 9)




Cover caps (4) (P. 9)



Water supply hose (P. 10, 11)

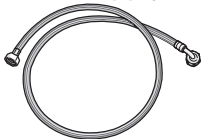

Bottom plate (P. 8)

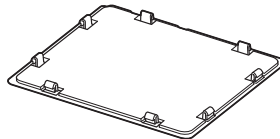


Choosing the Right Location




Make sure to ask a service person for installation.

- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.

Appliance dimensions




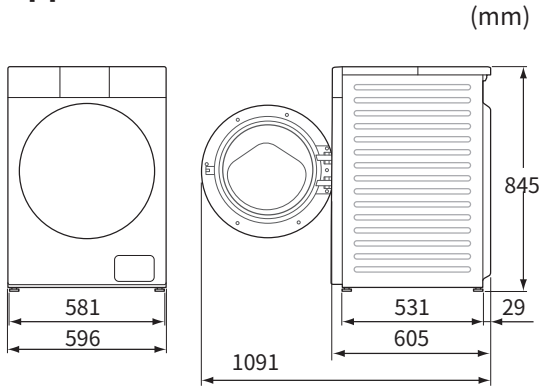


■ Set-in installation

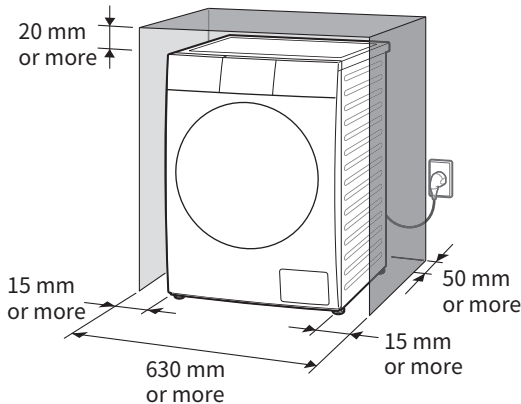

- Install the appliance with easy access to the power plug and socket.
- Do not let the metallic portions of the appliance come into contact with metal sinks or other appliances.


Check the location.

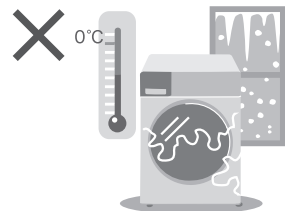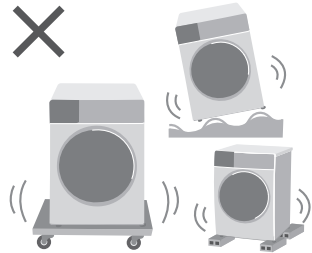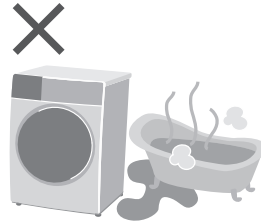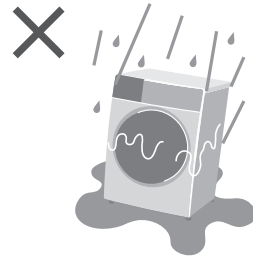


Moving and Installing

Carrying the appliance

Do not do it alone.






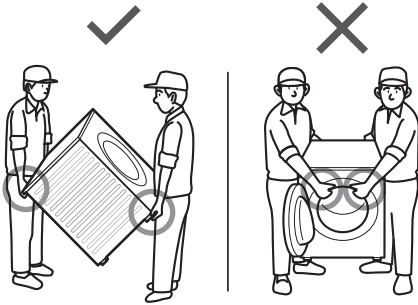


Installation of bottom plate

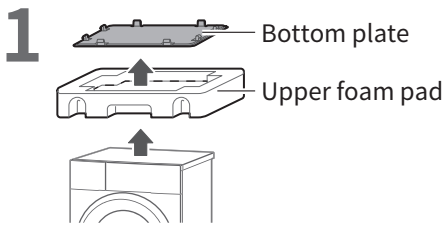


NOTE




Bottom plate

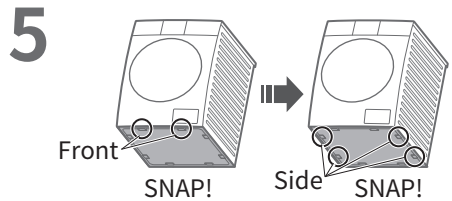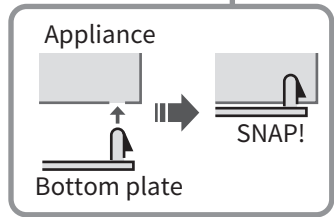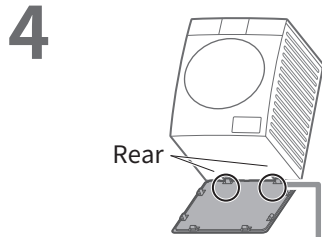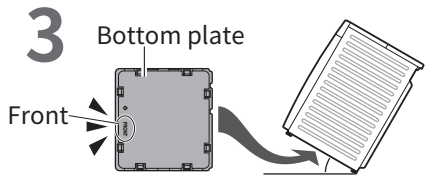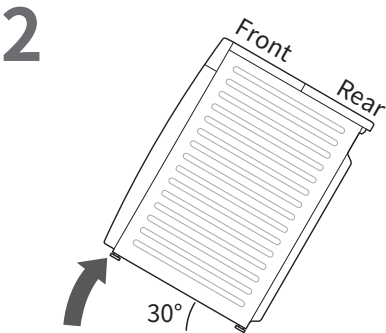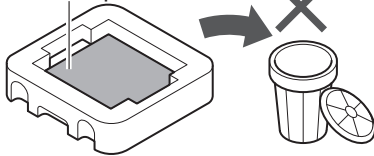


NOTE

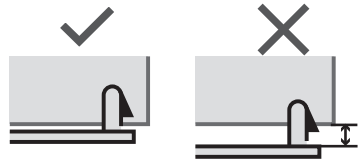


Removing the anchor bolts

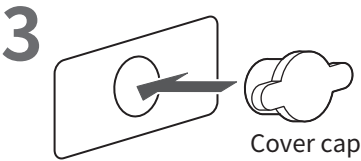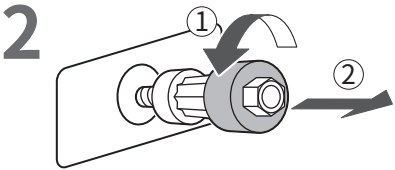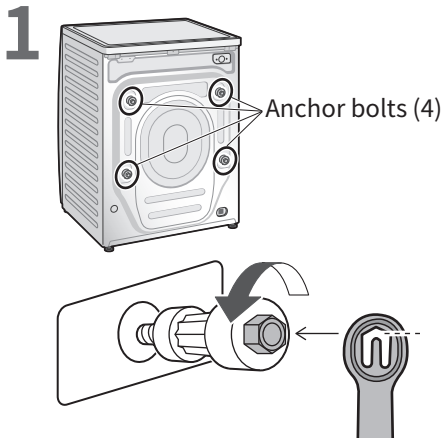





NOTE

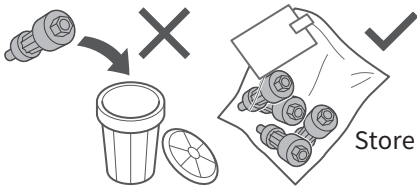


■ Moving the appliance again

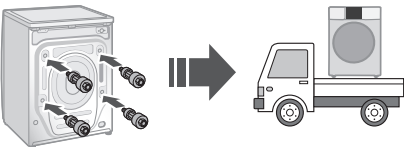

Levelling the appliance

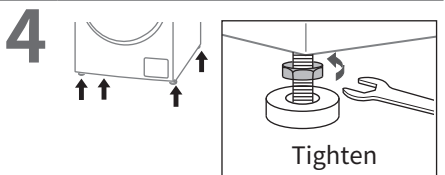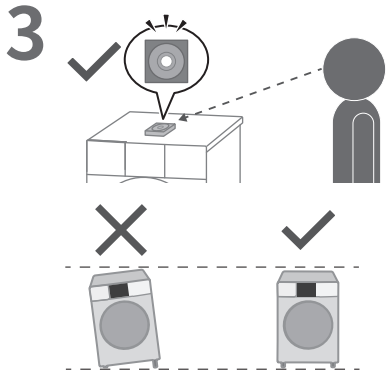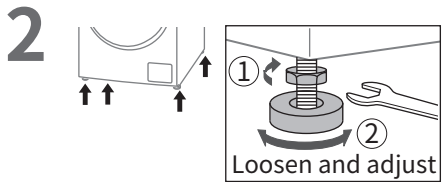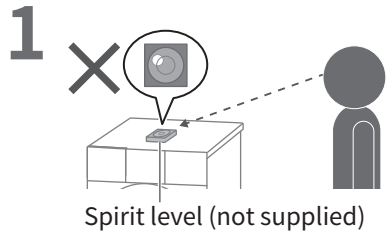

NOTE

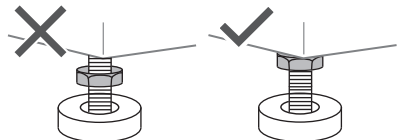


Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord


Right side connection

(cm)

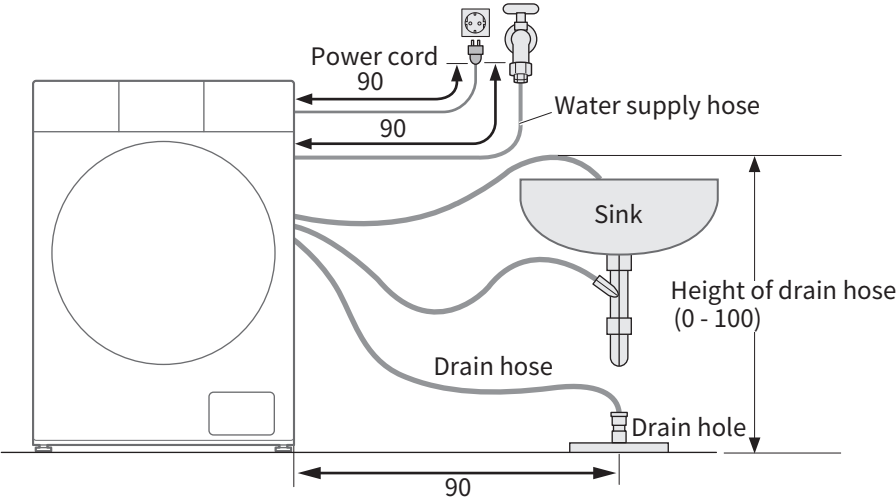

Left side connection

(cm)

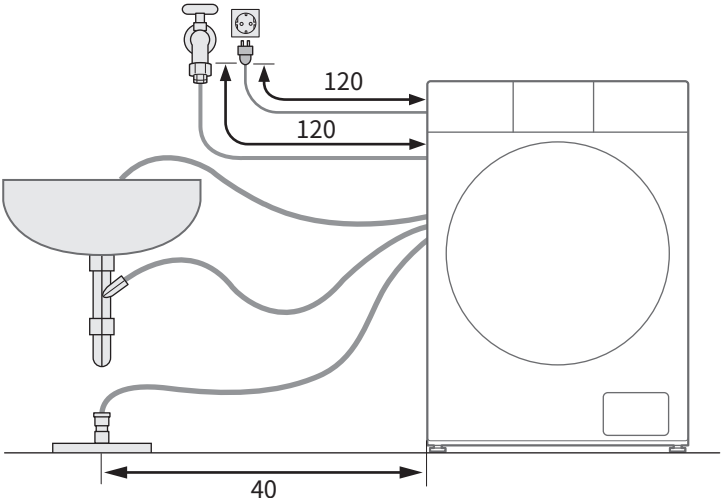


Water supply hose

■ Connecting the water supply hose


⚠ CAUTION

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.


1

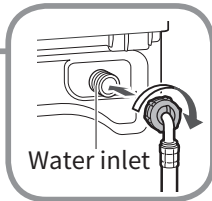

2

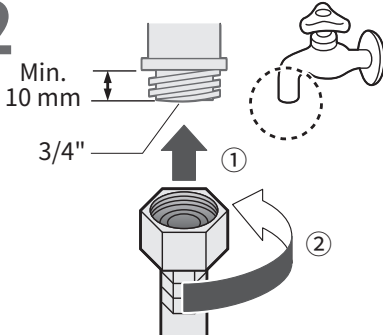


3

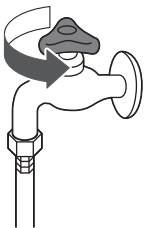


Drain hose

■ Draining to a sink or wash basin


NOTICE

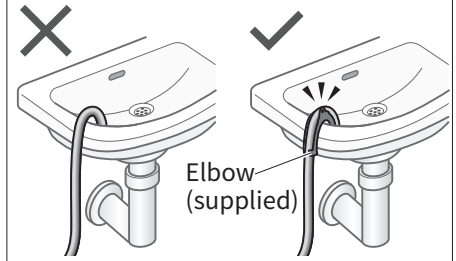


■ Draining to a stand pipe

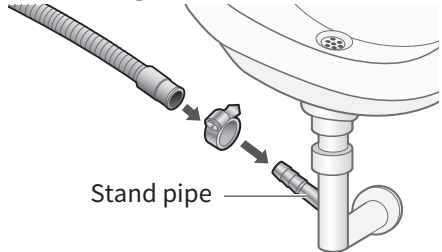


■ Draining to a drain hole

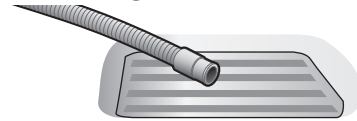


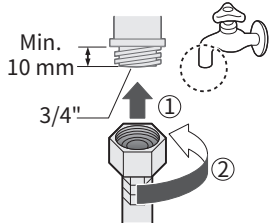

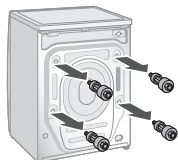
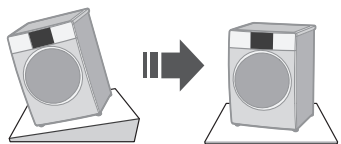
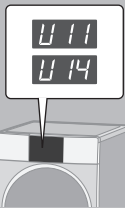
NOTE

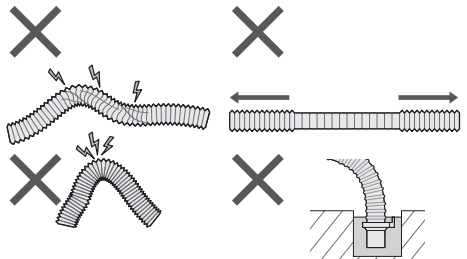

Test Run

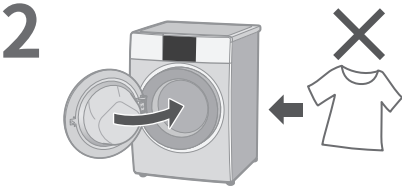


Checking after test run

| Problem | Causes and Measures | |
|---|--|--|
| <p>Water leaks</p>  | <p>Connect the water supply hose properly</p>  | |
|  | <ul style="list-style-type: none"> ● Remove the anchor bolts (P. 9)  | <ul style="list-style-type: none"> ● Install stably  |
| <p>Error display</p>  | <p>See P. 43</p> | |

Before Washing

Preparing laundry


Pre-laundry check

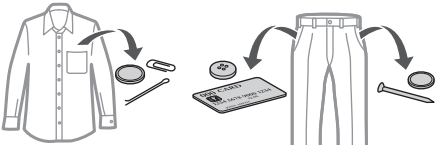

- Observe care labels.





- Pretreat for heavily stains.

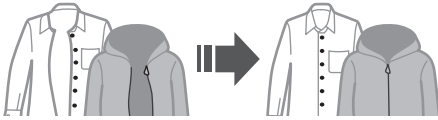

Reverse




Clothes likely to pill

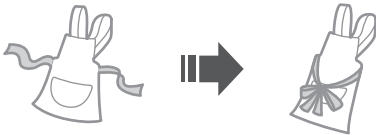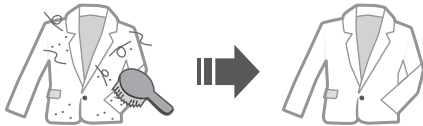


Paper diapers

Wash separately

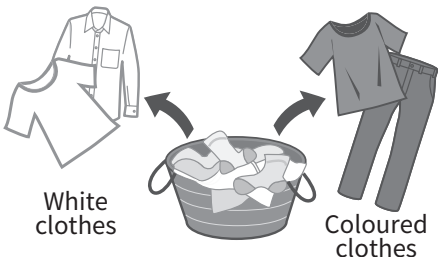


Use laundry nets for delicates and small items

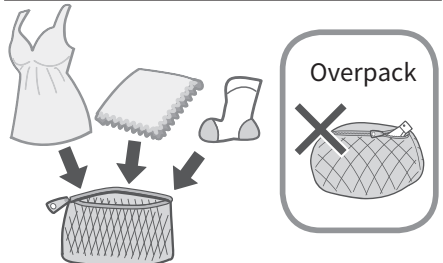

Control Panel

Control buttons

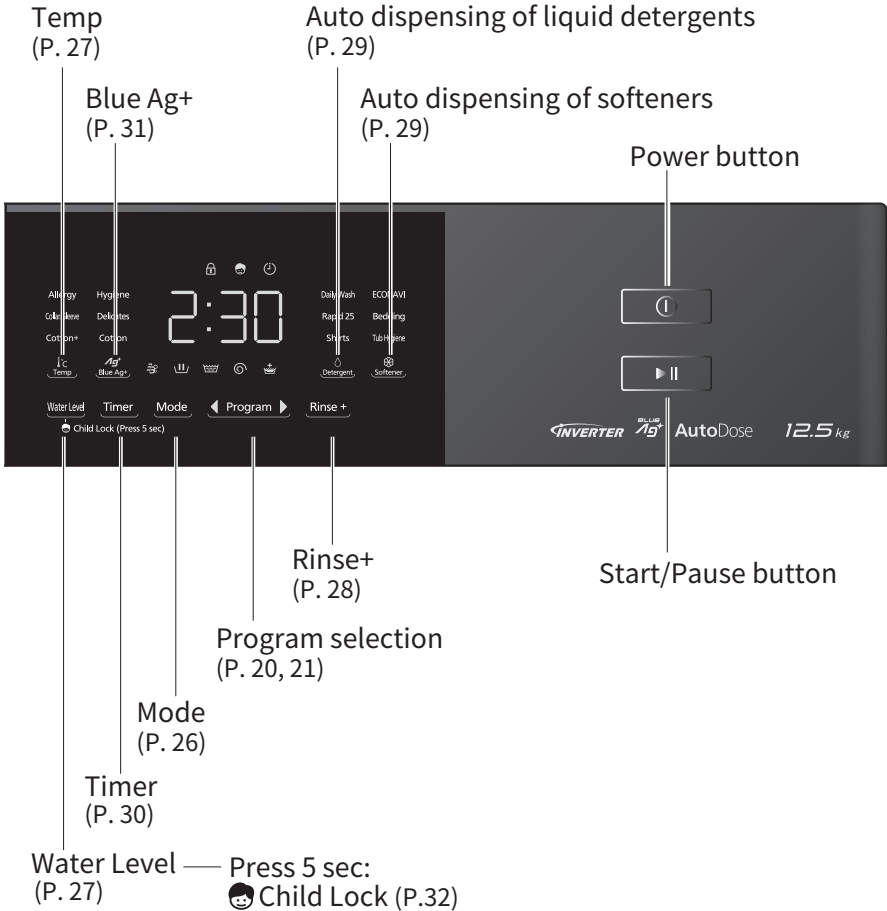

Touch operation

Operation buttons are capacitive.

- If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



Display

Lock: The door is locked.


Child Lock: The door and buttons are all locked.

Timer: Delay start is set.

- Turn off ➡ back on



- No operation ➡ auto power off (Not touching the panel)

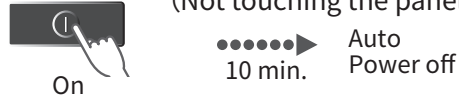


- In case of a power failure ➡ The appliance stops running. Even if the power supply is recovered, the appliance will not run again. Switch on the power and restart the appliance.

Detergent

Detergent—Manual dispensing compartment

Powder detergent Liquid detergent

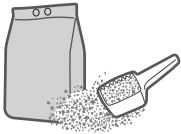

Bleach




Use a low foam detergent.

- To prevent powder detergent from remaining in the detergent drawer.



Wet

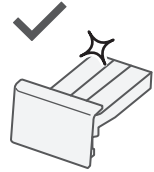


Dry



Lumps



Powder

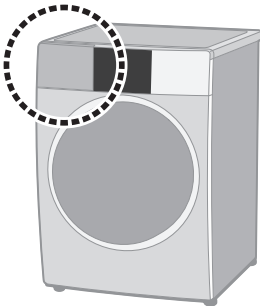

Detergent—Auto dispensing compartment

- The capacity is about 900 ml

Liquid detergent





Powder detergent



Bleach



NOTE

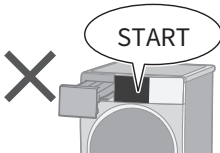
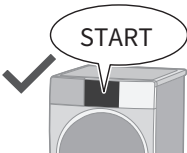


Fabric softener —Auto dispensing compartment

- The capacity is about 500 ml



Separated
or solidified
softeners

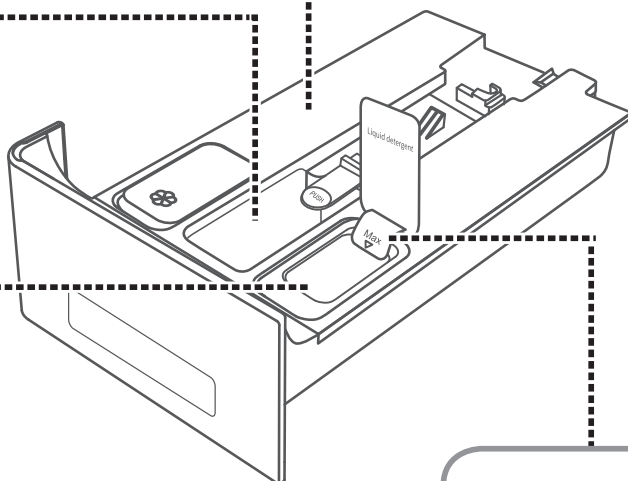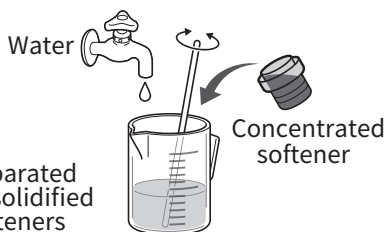


NOTE

- For use of detergents, please refer to the instructions of the purchased product.
- For solid detergents difficult to dissolve in water quickly, such as laundry pods, please fill them in the drum. Filling them into the detergent drawer directly may cause water leakage.
- Please clean the auto dispensing compartment regularly.
 - Every three months
 - When it is necessary to change the brands of liquid detergents or softeners
 - If liquid detergents or softeners stay in the auto dispensing compartment more than one month
 - When the auto dispensing compartment is not refilled within one week after the display prompts insufficiency
 - When liquids in the compartment are gelatinous

Tick line for maximum capacity


- Do not fill liquid detergents or softeners to exceed the tick line for maximum capacity.

Washing Basic Method

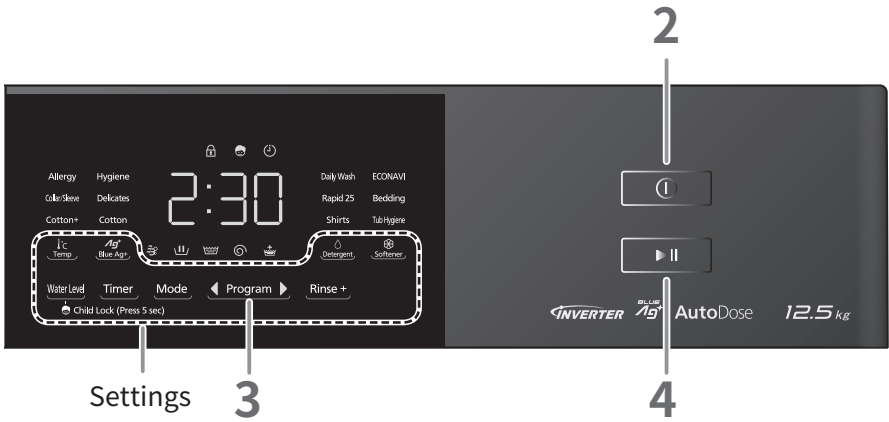


NOTE

■ Do not let laundry get caught in the door.

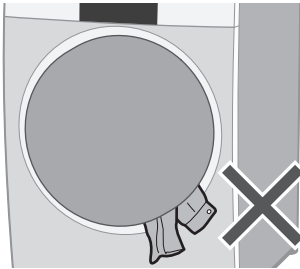


■ Do not overfill the drum with laundry.

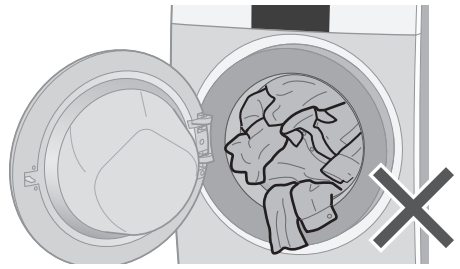

■ To open the door during operation

(You can add clothes when goes off.)

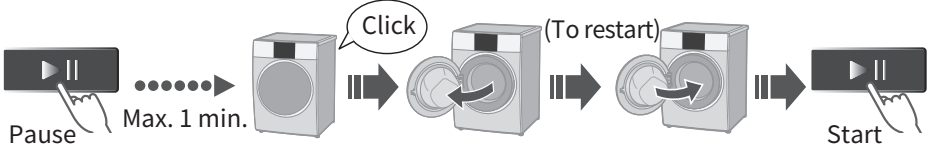


NOTE


● Door does not open \Rightarrow (P. 38)




1

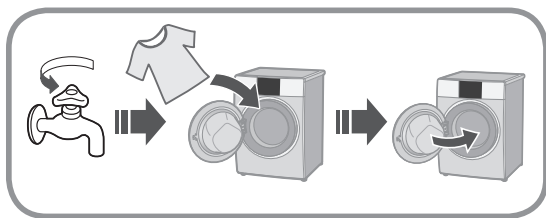

During manual dispensing

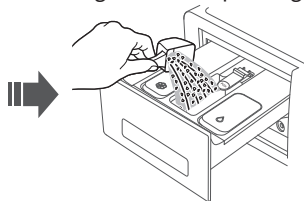

2

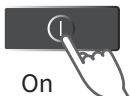

On

3




Select a program.

(P. 20, 21)

■ Changing the settings.

4

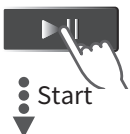

Start



Measures the amount of laundry



(30 sec.)

Except programs that do not weigh (P. 20)



Displays the time required (recalculated)



(e.g.)



Settings

Mode

Mode (P. 26)

Water Level

Water Level (P. 27)

Temp

Temp (P. 27)

Rinse+

Rinse+ (P. 28)

Detergent

Detergent (P. 29)

Softener

Softener (P. 29)


Timer

Timer (P. 30)





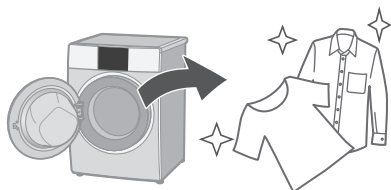

Blue Ag+

Blue Ag+ (P. 31)







5



Program List
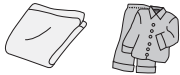
| Program | Description | Max load (kg) | Total time |
|--------------------|---|---------------|------------|
| Daily Wash | <ul style="list-style-type: none"> ● Everyday clothes  | 12.5 | 1:12-1:32 |
| ECONAVI | <ul style="list-style-type: none"> ● Automatically adjusting to save energy and water ● Mixed fabrics  | 12.5 | 1:18-2:23 |
| Rapid 25 | <ul style="list-style-type: none"> ● Small loads of lightly soiled  | 3.0 | 0:25 |
| Bedding | <ul style="list-style-type: none"> ● Large items  | 3.0 | 1:21 |
| Shirts | <ul style="list-style-type: none"> ● Shirts and blouses  | 2.0 | 1:11 |
| Tub Hygiene | <ul style="list-style-type: none"> ● Cleaning the drum.  | None | 3:36 |

- **Total time is approximate** (When the standard water supply rate is 15 L / min). For each program's default water temperature.
- Programs that the load is not weighed after pressing "Start/Pause" : Rapid 25, Bedding, Tub Hygiene, Delicates
- Above table states the "Max load" at which sufficient performance can be expected. If the actual load exceeds "Max load" in above table, total time and washing/drying performance may be various or affected.

| Program | Description | Max load (kg) | Total time |
|----------------------|---|---------------|------------|
| Allergy | <ul style="list-style-type: none"> ● Removing allergens such as mites ● Cotton sheets, pillowcase and nightclothes  | 5.0 | 1:38 |
| Hygiene | <ul style="list-style-type: none"> ● Sanitizing items with hot water ● Infant and toddler clothes, underclothes and flat sheets  | 11.0 | 1:43-2:48 |
| Collar/Sleeve | <ul style="list-style-type: none"> ● Removing sebum stains on collar & sleeve  | 6.0 | 1:47 |
| Delicates | <ul style="list-style-type: none"> ● Washing gently  | 2.0 | 0:41 |
| Cotton | <ul style="list-style-type: none"> ● Cotton, linen and cotton mixed clothing  | 12.5 | 0:47-0:57 |
| Cotton+ | <ul style="list-style-type: none"> ● Gentle wash with extra time  | 12.5 | 2:00-2:10 |

Details of Programs

| Program \ Settings | Auto setting | | Setting range |
|----------------------|--------------|-------------|----------------------|
| | Temp (°C) | Water Level | Temp (°C) |
| Daily Wash | 40 | — | Cold, 30, 40 |
| ECONAVI | 30 | — | 30 |
| Rapid 25 | Cold | 2 | Cold |
| Bedding | Cold | 3 | Cold, 30 |
| Shirts | 40 | 1 | Cold, 30, 40, 50, 60 |
| Tub Hygiene | 40 | 3 | 40 |
| Allergy | 60 | — | 60 |
| Hygiene | 95 | — | 60, 95 |
| Collar/Sleeve | 40 | 3 | Cold, 30, 40 |
| Delicates | 30 | 3 | Cold, 30, 40 |
| Cotton | 30 | — | Cold, 30, 40, 50, 60 |
| Cotton + | 30 | — | Cold, 30, 40, 50, 60 |

NOTE

- For normally soiled laundry at the rated capacity, we recommend using the “Cotton +, Cold” which is tested in accordance with IEC 60456 for the water efficiency aspects.
- Actual water temperature may differ from the declared cycle temperature.
- The test results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.


| Water Level | Optional functions | | | | | |
|-------------|--------------------|-------|--------------------|--------|---------------------------------|----------|
| | Mode | Timer | Detergent Softener | Rinse+ | ActiveFoam SYSTEM* ¹ | Blue Ag+ |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| — | — | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3, 2, 1 | — | ✓ | ✓ | — | ✓ | — |
| 3, 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3 | — | — | — | — | — | — |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | — | ✓ |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | — | ✓ |
| 3, 2 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3 | ✓ | — | ✓ | ✓ | — | ✓ |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3, 2, 1 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |

● *1: The ActiveFoam SYSTEM setting cannot be changed.

Washing Tips

ECONAVI

- Automatically set optimum parameters

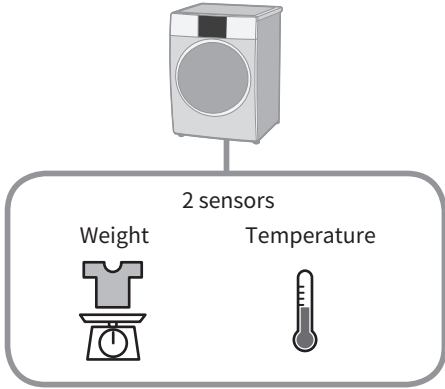



- Energy saving (lightning bolt icon)
- Water saving (water drops icon)
- Time saving (clock icon)

Delicates


- **When washing**
- To rinse fully, use the “Rinse+” function. (P. 28)

NOTE

Bleach Liquid detergent for delicates




■ After operation ends

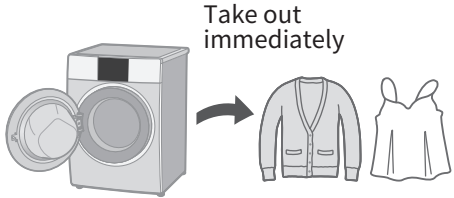

Bedding

■ Washable items

-  (Wash)
-  (Handwash)
- 100 % cotton or 100 % synthetic

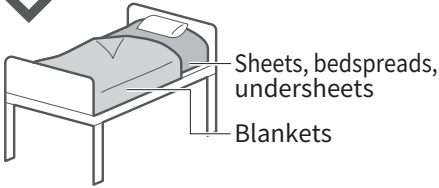

■ Not washable items



Electric blankets



Wool



Silk





Long pile





Fake fur


■ Putting blankets into the drum

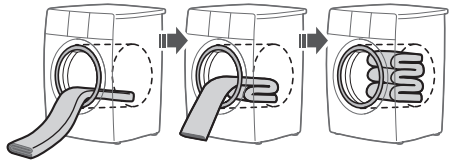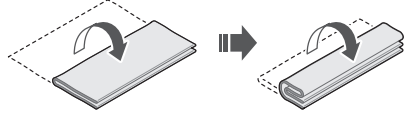

NOTE

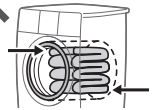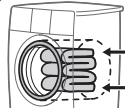

NOTE

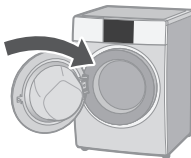

Changing Program Settings


■ Preparing

- Sort the laundry and put it into the drum. (P. 13)
- Add the detergent. (P. 16)



3 Change the program's settings.

Temp

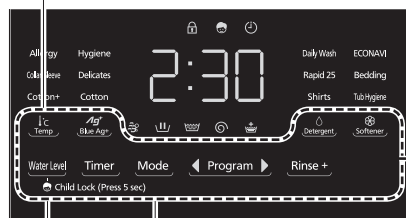

Mode

Water Level

- Available options and setting ranges are different depending on the program. (P. 22, 23)
- An alarm sounds if you select an option that is unavailable.




Mode







Select a combination of wash, rinse and spin.

(e.g.)

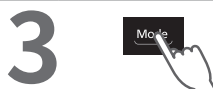

Wash ▶ Rinse ▶ Spin




| | |
|---|------------------------------|
|  | Wash |
|  | Rinse ^{*1} |
|  | Spin ^{*1} |
|  | Wash and rinse |
|  | Wash and spin |
|  | Rinse and spin ^{*1} |

^{*1} Drains first if there is water in the drum.

Water Level

Change the water level.

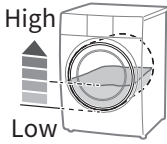


3







| | |
|---|--------|
| 1 | Low |
| 2 | Medium |
| 3 | High |

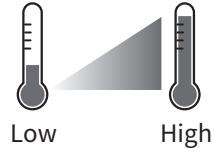Temp

Change the washing temperature.



■ Setting guide

| Low Temp | High Temp |
|---|---|
| ● Colours  | ● White  |
| ● Lightly soiled  | ● Heavily soiled  |
| ● Easily shrinks | ● Cotton |

3



(P. 22)


Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 13)
- Add the detergent. (P. 16)



3 Change the program's settings.

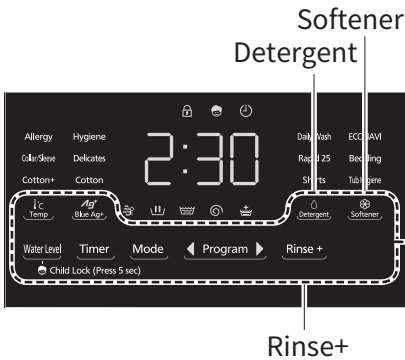


- Available options and setting ranges are different depending on the program. (P. 22, 23)
- An alarm sounds if you select an option that is unavailable.



Rinse+

Add an extra rinse.

Wash ▶ Rinse ▶ **Extra Rinse** ▶ Spin

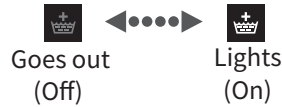

■ To change the setting while washing




Detergent / Softener

Set auto dispensing of liquid detergents/softeners




NOTE

- When you use the product at the first time, please fill the liquid detergents and softeners before washing.
- Do not fill detergents into the manual dispensing compartment because auto dispensing of liquid detergents is set.
- At delivery, the auto dispensing of liquid detergents is set to On and the auto dispensing of softeners is set to Off.
- It is necessary to refill liquid detergents or softeners
 - Please refill detergents or softeners of the same brand. If it is necessary to change the brand, please clean the detergent drawer (P. 34) and refill.

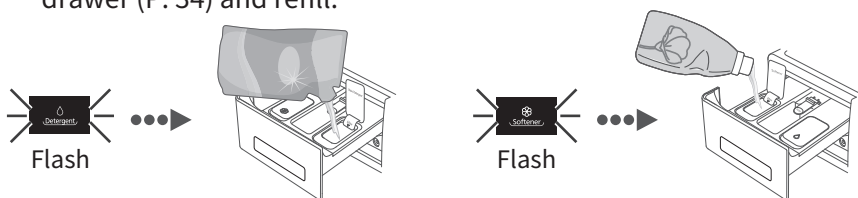

- If the display prompts insufficiency, a buzzer prompts when the program starts.

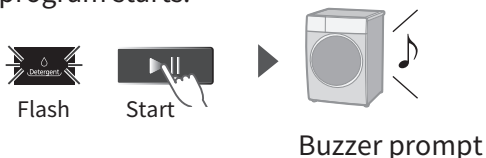

NOTE

- If the display prompts insufficiency, the usable times of remaining liquid detergents is dependent on number of clothes, kinds of liquid detergents etc., please refill as soon as possible.

Changing Program Settings (continued)


■ Preparing

- Sort the laundry and put it into the drum. (P. 13)
- Add the detergent. (P. 16)



3 Change the program's settings.

Blue Ag+

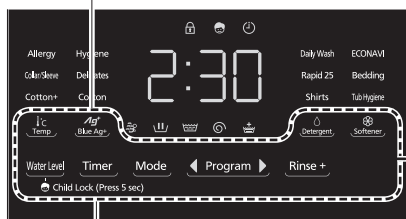



Timer

- Available options and setting ranges are different depending on the program. (P. 22, 23)
- An alarm sounds if you select an option that is unavailable.



Timer

Set timer for completion of wash.
(Up to 24 hours)

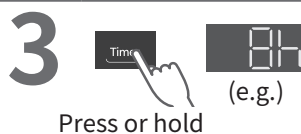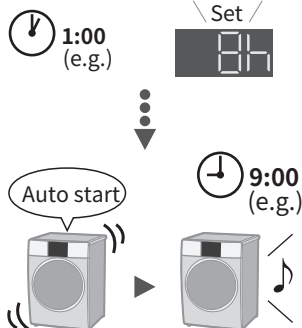

■ To check a preset time



■ To cancel settings



Turn off
(All settings are cancelled)

NOTE





▶ All indications turn off except



Changing Appliance Settings

Setting the Child Lock

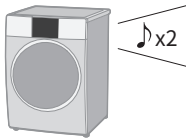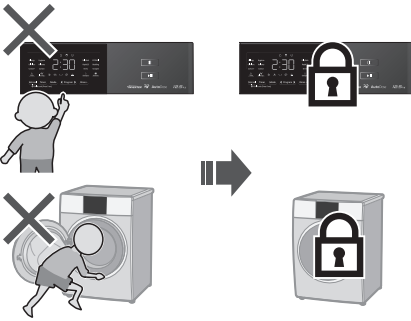

Lights
(On)

■ To cancel:



Same procedure  x4



Goes out
(Off)

Cancelling the buzzer

Cancel the buzzer at the end of the program.

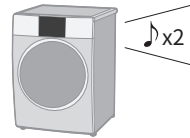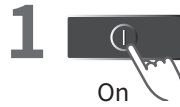


■ To reset:



Same procedure  x4


Maintenance

Water supply filter


If water does not flow smoothly

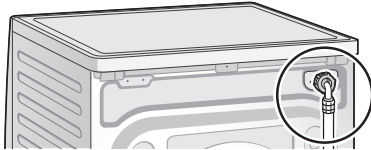


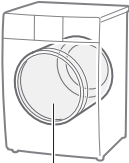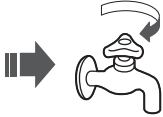
1  
Empty


2 
On


3  **Select Rapid 25.**


4  **1 min.** 
Start Turn off

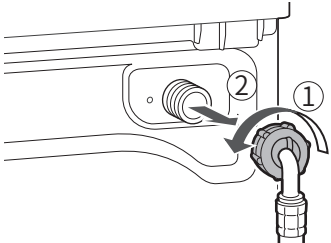5 

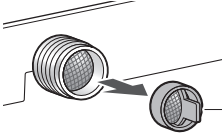
6  Water supply filter

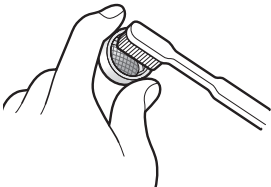7 

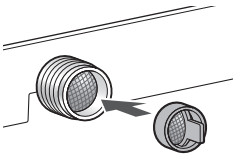8 

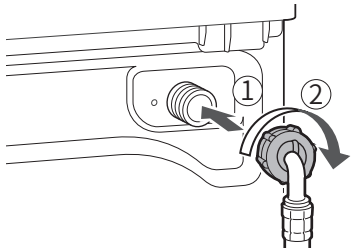9 


Maintenance (continued)

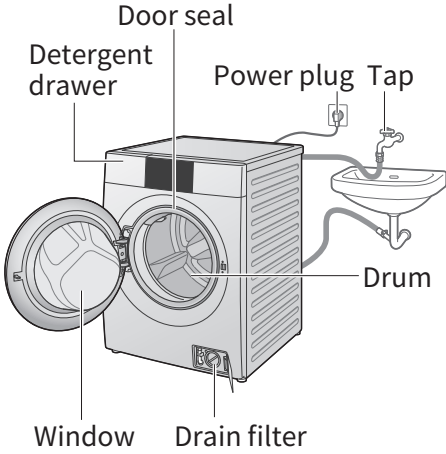


Appliance




Door seal

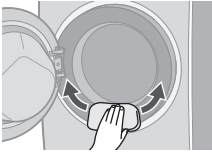

For heavy soil





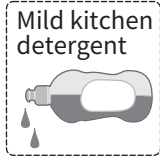


NOTE

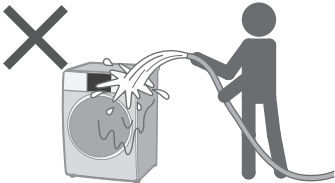


- Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.




Detergent drawer

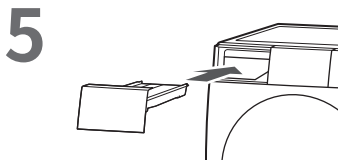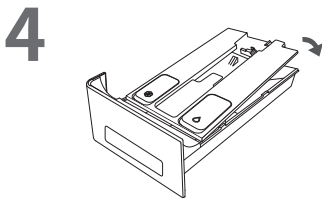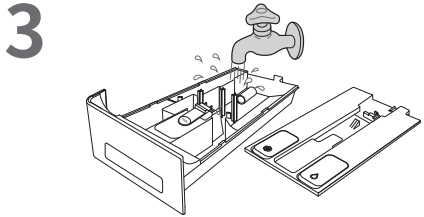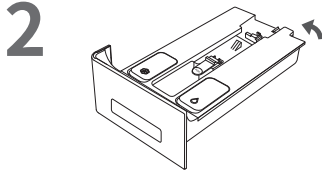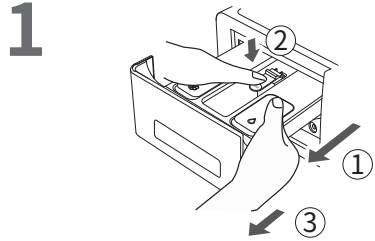

- Run the servicing program for the auto dispensing compartments to clean the auto dispensing compartments and pipes.



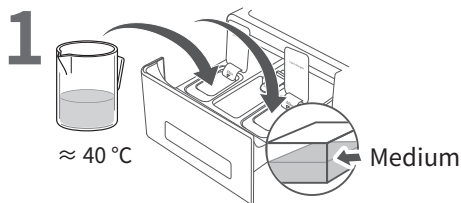


- Minerals in water may attach in pipes to form scales causing blockage. It is recommended to add citric acid in water.

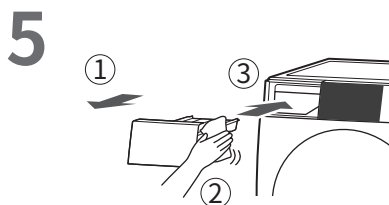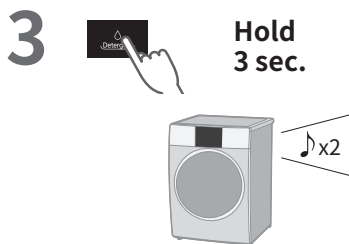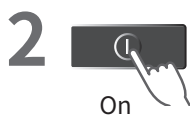

Drum

Once a month

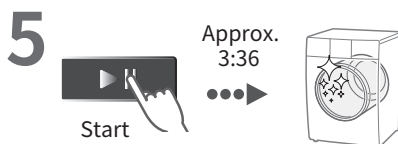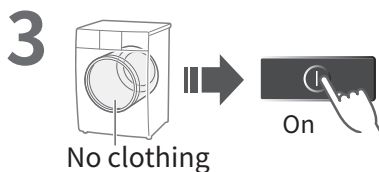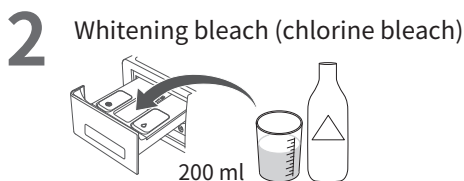


Maintenance (continued)


Drain filter


Be sure to drain water in the drum before this procedure.

CAUTION

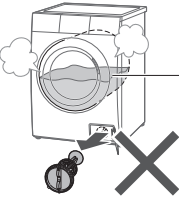


Hot water (possibly scalding water)


1 
Turn off

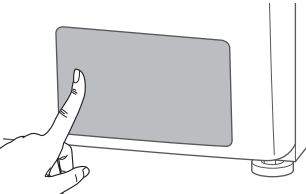2 


3 Pump hose

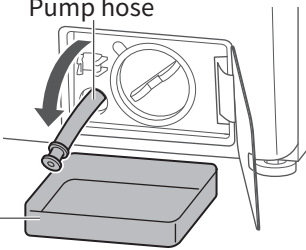


Tray

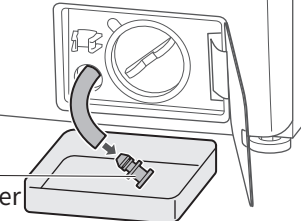
4 
Hose stopper


5 

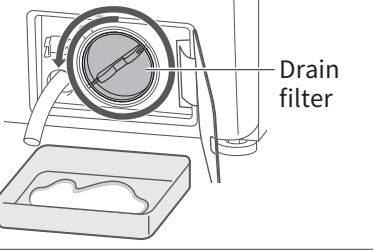
6 
Drain filter

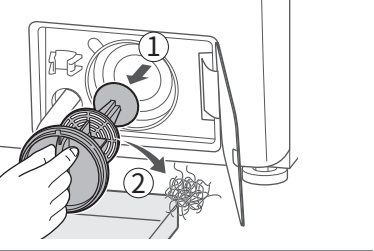
7 

8 Replace




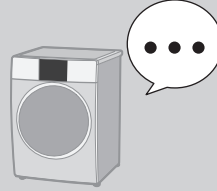


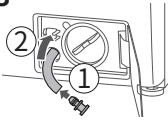








1 

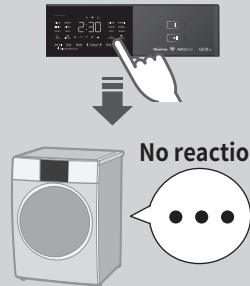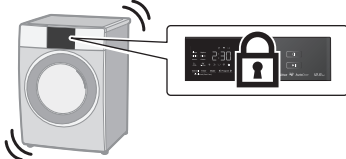2 Until it is in place 


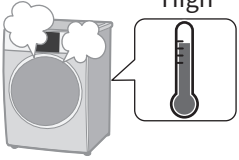
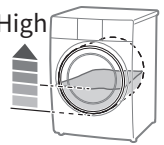


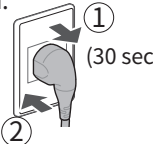




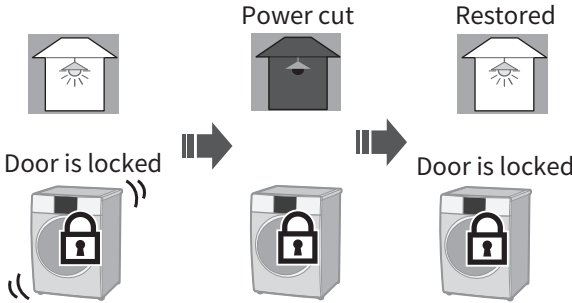
3 


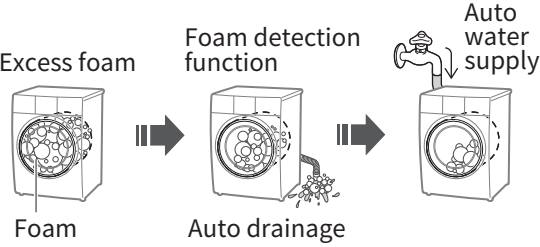
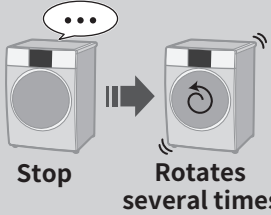
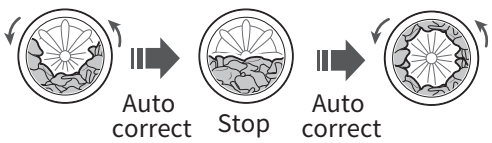



4 

Troubleshooting


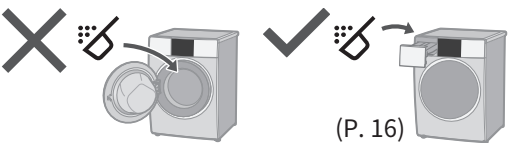



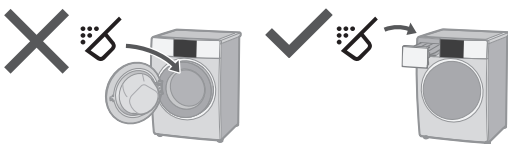



| | Symptoms | Points to be checked |
|-----------|---|--|
| Main unit | <p>Touch the buttons</p>  <p>No reaction</p> | <p><input type="checkbox"/> Possible cause</p> <ul style="list-style-type: none"> ● During an operation  <p><input type="checkbox"/> Try</p> <ul style="list-style-type: none"> ● Child Lock (P. 32)  |
| | <p>No operation</p>  | <p><input type="checkbox"/> Check</p> <ul style="list-style-type: none"> ● Power cut  ● Timer  <p><input type="checkbox"/> Try</p> <ul style="list-style-type: none"> ● Close the door.  ● Turn on.  ● Unplug and insert again.  ● Press "Start".  ● Turn the breaker on.  |
| | <p>Odour of rubber</p>  | <p><input type="checkbox"/> Possible cause</p> <p>Rubber parts  → Time passes  → No smell </p> <p><input type="checkbox"/> Try</p> <p>Tub Clean (P. 35)</p> |

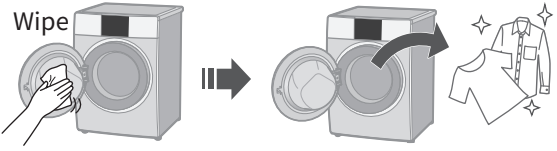
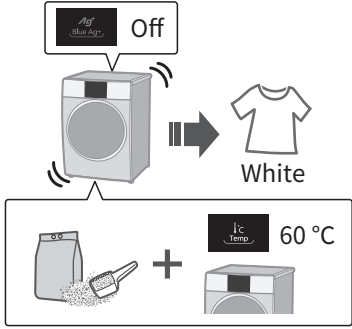

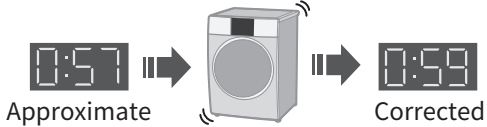
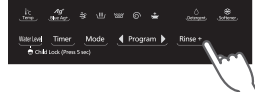


Troubleshooting (continued)

| | Symptoms | Points to be checked |
|-----------|--|---|
| Main unit | | <p><input type="checkbox"/> Possible cause</p> <ul style="list-style-type: none"> ● During an operation  <p>Door is locked (P. 18)</p> <p><input type="checkbox"/> Check</p> <ul style="list-style-type: none"> ● Temperature High ● Water level High   |
| | <p>Door does not open</p>  | <p><input type="checkbox"/> Try</p> <ul style="list-style-type: none"> ● Child Lock (P. 32)   <ul style="list-style-type: none"> ● During an operation <p>1 Turn off</p>  <p>2 On</p>  <p>3 Spin (P. 27)</p>  <p>4 Open</p>  |
| | | <p>NOTE</p>  <p>Door is locked → Power cut → Restored → Door is locked</p> |







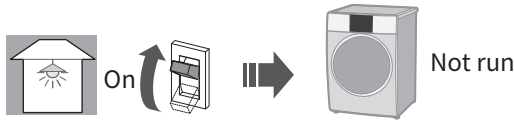
| | Symptoms | Points to be checked |
|------------|--|---|
| Wash | <p>During a wash</p>  <p>Water drainage</p> | <p><input type="checkbox"/> Possible cause</p> <p>Excess foam Foam detection function Auto water supply</p>  <p>Foam Auto drainage</p> |
| | <p>During the spin process</p>  <p>Stop Rotates several times</p> | <p><input type="checkbox"/> Possible cause</p> <p>Unevenness Evenness</p>  <p>Auto correct Stop Auto correct</p> <p><input type="checkbox"/> Try</p> <p>Too light Add 1 or 2</p>  <p>Bath towels</p> |
| Rinse/Spin | <p>After washing</p>  <p>Foam or water</p> | <p><input type="checkbox"/> Try</p> <p>Wipe</p>  |

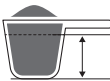Troubleshooting (continued)


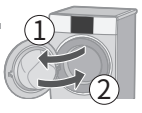

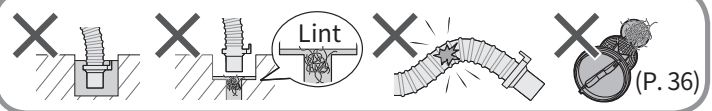




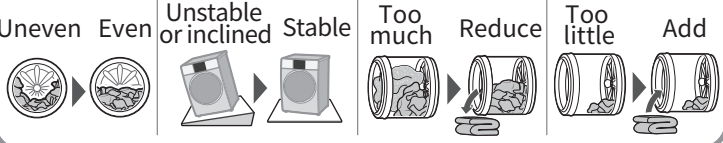
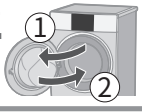

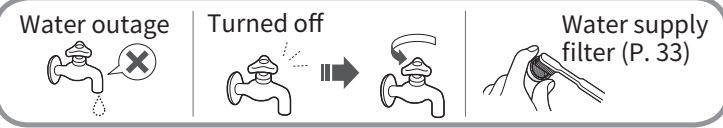

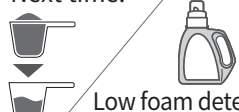

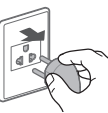

| | Symptoms | Points to be checked |
|--|--|---|
| Detergent and foam | <p>After washing</p>  | <p><input type="checkbox"/> Check</p>  <p>(P. 16)</p> |
| |  <p>Foam</p> | <p><input type="checkbox"/> Possible cause</p> <ul style="list-style-type: none"> ● The amount of foam varies. ● Temperature ● Water level ● Water softness  |
| | <p>Not enough</p>  | <p><input type="checkbox"/> Check</p> <ul style="list-style-type: none"> ● Powder detergent Put it in the detergent drawer. (P. 16)  <ul style="list-style-type: none"> ● Too little detergent ● Low foam detergent ● Heavily soiled ● Load too large  |
| <p>Too much</p>  | <p><input type="checkbox"/> Check</p> <ul style="list-style-type: none"> ● Too much detergent  | |

| | Symptoms | Points to be checked |
|---------|--|--|
| Laundry | <p>If the laundry yellows</p>  <p>Yellow</p> | <p><input type="checkbox"/> Try</p>  |
| Time | <p>During a wash</p> <p>Displayed time</p>  <p>Changes</p> | <p><input type="checkbox"/> Possible cause</p> <ul style="list-style-type: none"> ● Remaining time is corrected during operation.  <ul style="list-style-type: none"> ● If the settings changed ● If clothes are uneven   <p>➡ The remaining time may increase.</p> |
| Noise | <p>During water drainage</p>  | <p><input type="checkbox"/> Possible cause</p> <ul style="list-style-type: none"> ● This is normal. The drain pump is working. |

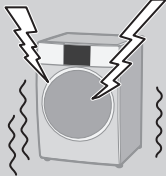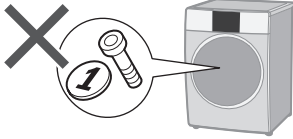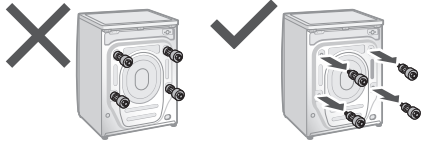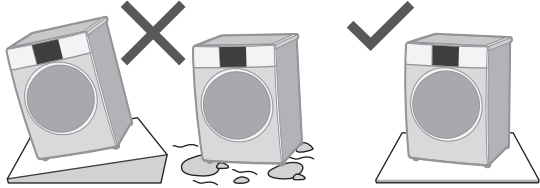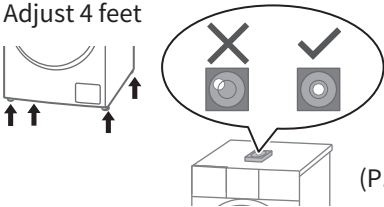Troubleshooting (continued)

| | Symptoms | Points to be checked |
|--------|---|--|
| Noise | <p data-bbox="130 544 295 596">Unusual noise (or vibration)</p>  | <p data-bbox="410 225 514 252">□ Check</p> <ul style="list-style-type: none"> <li data-bbox="440 263 593 290">● Metal items  <ul style="list-style-type: none"> <li data-bbox="440 464 663 491">● Anchor bolts (P. 9)  <ul style="list-style-type: none"> <li data-bbox="440 651 777 678">● Slope or an unstable surface  <ul style="list-style-type: none"> <li data-bbox="440 895 602 922">● Adjust 4 feet  <p data-bbox="815 1059 870 1086">(P. 9)</p> |
| Others | <p data-bbox="146 1203 259 1230">Power cut</p> <p data-bbox="295 1203 384 1230">Breaker</p>  | <p data-bbox="410 1134 514 1161">□ Check</p> <ul style="list-style-type: none"> <li data-bbox="440 1171 916 1230">● Even if the power supply is recovered, the appliance will not run again.  |

Error Display
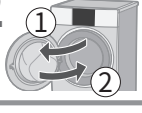
| Error Display | Points to be checked | | |
|--|---|--|--|
| <p>U11 Unable to drain</p> | <p>1 Check</p>  | <p>2</p>  | <p>3</p>  <p>Start</p>  <p>(P. 36)</p> |
| <p>U12 Door is open</p> | <p>1</p>  | <p>2</p>  <p>Start</p> | |
| <p>U13 Unable to spin-dry</p> | <p>1 Check</p> | <p>2</p>  | <p>3</p>  <p>Start</p>  |
| <p>U14 Unable to supply water</p> | <p>1 Check</p> | <p>2</p>  | <p>3</p>  <p>Start</p>  <p>Water supply filter (P. 33)</p> |
| <p>U17 Unable to spin-dry</p> | <p>1 Restart</p>  <p>Turn off On</p> | <p>2 Run "Rapid 25"</p> | <p>● Next time:</p>  <p>Low foam detergent</p> |
| <p>H □ □</p> | <p>1</p>  | <p>2</p>  | <p>3</p>  |

Specifications

For Singapore

| | NA-25CEW1 |
|--------------------------------------|-------------|
| Rated voltage (V) | 220 - 240 |
| Rated frequency (Hz) | 50 |
| Maximum energy rated power input (W) | 1630 - 1930 |
| Maximum spin speed (r/min) | 1200 |
| Product dimensions (W x D x H) (mm) | 596×605×845 |
| Product weight (kg) | 78 |
| Maximum mass of dry cloth (kg) | 12.5 |
| Pressure of tap water (MPa) | 0.01-1 |

For The Philippines

| | NA-25CEW1 |
|--------------------------------------|-------------|
| Rated voltage (V) | 220 - 240 |
| Rated frequency (Hz) | 60 |
| Maximum energy rated power input (W) | 1630 - 1930 |
| Maximum spin speed (r/min) | 1200 |
| Product dimensions (W x D x H) (mm) | 596×605×845 |
| Product weight (kg) | 78 |
| Maximum mass of dry cloth (kg) | 12.5 |
| Pressure of tap water (MPa) | 0.01-1 |