


**Panasonic**<sup>®</sup>

Operating Instructions  
(Household) Rechargeable body shaver

Model No. **ES2265**

**English**

**2**

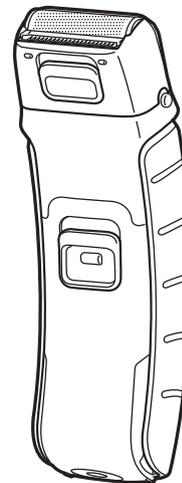

Before operating this unit, please read these instructions completely and save them for future use.

## Important

### ► Before use

This WET/DRY body shaver can be used for wet shaving with soap lather or for dry shaving. Use the watertight shaver in the shower and clean it in water. The following is the symbol of Wet body shaver. The symbol means that the hand-held part may be used in a bath or shower.



Our research has shown that you can enjoy closer and smoother shaves with the sharp blades. And our pop-up trimmer will be able to cut longer hairs with ease.

### ► Using the shaver

Caution - The outer foil is very thin and can be damaged if not used correctly.

- Check that the outer foil is not damaged before using the shaver. Do not use the shaver if the outer foil is damaged because you will cut your skin.
- Be sure to lubricate the outer foil or the blades before using the shaver. Failure to do so may cause the shaver to pull your hairs or damage to skin.
- Do not apply strong pressure to the skin, repeatedly rub over the same area, hold in one spot on the skin, or apply in a jabbing motion when using the shaver. Doing so may cause damage to skin, inflammation or increased pain.
- Do not use for facial shaving.

### ► Charging the shaver

- Dry the shaver completely before charging it.
- Do not attempt to use a charger other than the included one which is specifically designed for this model. Use only the included charger.
- Keep the charger away from water and handle it only with dry hands.

- The shaver may become warm during use and charging. However, this is not a malfunction.
- Hold the adaptor when disconnecting it from the household outlet. If you tug on the supply cord, you may damage it. The supply cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.
- Do not charge the shaver where the temperature is below 0 °C or above 40 °C, where it will be exposed to direct sunlight or a heat source, or where there is a lot of moisture.
- Charge the shaver for at least 16 hours when charging it for the first time or when it has not been used for more than 6 months.

### ► Cleaning the shaver

- When you clean the shaver with water, do not use salt water or hot water. Wipe it with a cloth dampened with soapy water. Do not use thinner, benzine or alcohol.

### ► Storing the shaver

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Store the charger in a dry area where it is protected from damage.
- Do not disassemble the appliance. Take it to a qualified service person when service or repair is required.

### SPECIFICATIONS


Power source: 220-240 V AC, 50-60 Hz

Motor voltage: 1.2 V DC

Charging time: Approx. 8 hours

This product is intended for household use only.

## Parts identification

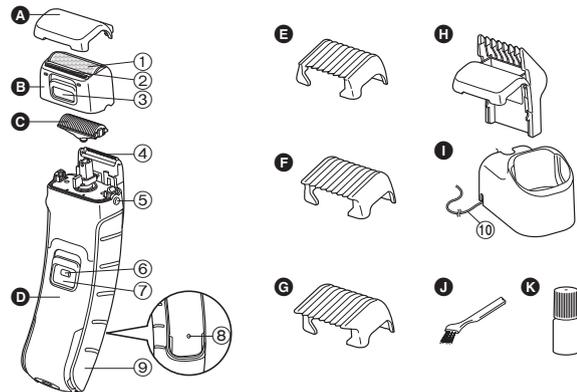


- A** Protective cap
- B** Foil frame
  - ① Outer foil
  - ② Pop-up trimmer
  - ③ Pop-up trimmer switch
- C** Inner blade
- D** Main body
  - ④ Trimmer for beards
  - ⑤ Foil frame release buttons
  - ⑥ Switch lock button
- E** 3 mm comb attachment
- F** 6 mm comb attachment
- G** 9 mm comb attachment
- H** Comb attachment for beards
- I** Charger (RE7-48)
- J** Cleaning brush
- K** Oil
- ⑦** OFF/ON switch
- ⑧** Charge indicator lamp
- ⑨** Handle
- ⑩** Power cord

Charge

## Charging the shaver

Place the shaver on the charger to charge it.  
You can charge the shaver in 8 hours.

- 1** Turn off the shaver.
- 2** Plug the power cord into a household outlet and place the charger on a flat surface.
- 3** Ensure that the marks of the handle and the main body are aligned with each other.
- 4** Insert it in the charger as illustrated.

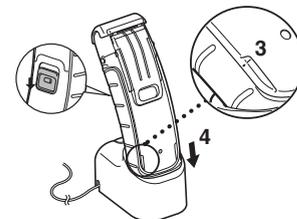


- The charge indicator lamp lights and stays on until the shaver is removed from the charger.
- A full charge will supply enough power for approx. 4 shaves of 7 minutes each.

English

### ► Fixing the charger to the wall

1. Attach two screws to the wall as illustrated.
  - Screws are sold separately.
2. Hook the charger onto these screws.
3. Plug the power cord into a household outlet.

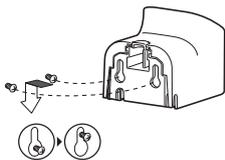

## Shave

### Using the shaver

Trim your hair using the pop-up trimmer if it is longer than 5 mm.


#### Wet/foam shaving

Shaving with soap lather makes the skin slippery for a closer shave. Do not use shaving cream, skin cream or skin lotion as it will clog the blades.


- 1 **Wet your skin and remove the protective cap.**
- 2 **Wet the outer foil and place a small quantity of liquid body soap on the outer foil.**
- 3 **While pressing the switch lock button, slide the OFF/ON switch upwards.**
- 4 **Press gently so that the whole of the outer foil is in close contact with the skin.**



- 5 **Apply the shaver to your skin and press gently while moving it slowly against the direction the hair grows.**

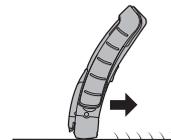

#### Underarm

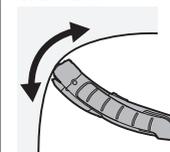

Hold your arm up enough to stretch the skin and shave back and forth.

#### Legs



Move the shaver from ankle to knee.

#### Arms



Move the shaver from outside to inside.

#### For the best results

Pull the skin taut where the area is prone to sagging (on the inside of the knees and elbows).

#### Dry shaving

You can also shave without wetting your skin or the outer foil.


#### Using the pop-up trimmer

1. Slide the pop-up trimmer switch upwards.
2. Slide the OFF/ON switch upwards.
3. Apply the shaver to your skin and press gently while moving it slowly.



### For bikini-line

Use the pop-up trimmer for bikini-line.



### Using the comb attachments


1. Select the attachment and attach it onto the shaver.
2. Slide the pop-up trimmer switch upwards.
3. Slide the OFF/ON switch upwards.
4. Apply the shaver to your skin and press gently while moving it slowly against the direction the hair grows.
  - Trim slowly and with care to avoid hairs being caught in the comb attachment.
  - Clean the shaver when it is no longer shaving well or when it is clogged.



### Using the handle

#### ► Shaving hard-to-reach areas (calves, backs, etc.)

1. Turn off the shaver.
  - Handle movement will be stiff if switch is left ON.
2. Extend the handle by sliding it until it clicks.
  - Adjustable to either 37.5 mm or 75 mm.
3. Bend the handle when it is fully extended.
  - Adjustable by 15° in total of 6 steps.

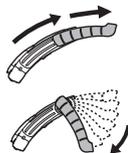

4. Slide the OFF/ON switch upwards.
5. Apply the shaver to hard-to-reach areas and slide it gently.



English


### Using the trimmer for beards

Comb your beard or sideburns before trimming them.


- Do not wet beard with shaving foam or similar products. A wet beard will form bunches and will make it difficult to maintain an even length.

#### ► Trimming your moustache

1. Attach the comb attachment for beards and slide the trimmer for beards upwards.



- Grasp the sides of the comb attachment for beards and move it to the desired trimming length.
  - Adjustable by 1.5 mm from 2.0 mm to 14.0 mm in 9 steps.




- Slide the OFF/ON switch upwards.
- Move the shaver upwards with the OFF/ON switch facing upwards as illustrated.



### ► Shaping your moustache

- Slide the trimmer for beards upwards and turn on the shaver.
- Trim around your moustache.
  - If you wish to have a rounded line, hold the shaver on its side.

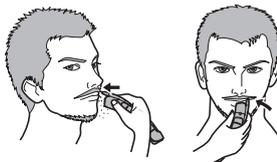

### ► Shaping your sideburns


- Slide the trimmer for beards upwards and turn on the shaver.
- Cut your sideburns.



Clean

## Cleaning the shaver

- Press the foil frame release buttons to remove the foil frame.
- Remove the inner blade by grasping it firmly at both ends and pulling straight away from the shaver.
- Clean with running water.
- Wipe off any drops of water with a dry cloth.

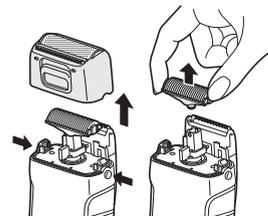

### ► Cleaning with brush

You can also clean the shaver with the cleaning brush.




## Lubrication

Apply the oil to the outer foil, the pop-up trimmer, and the trimmer for beards before and after each use.


### ► Outer foil and pop-up trimmer

1. Apply a drop of oil to the outer foil.
2. Raise the pop-up trimmer and apply a drop of oil.
3. Turn on the shaver, and run it for a few seconds.

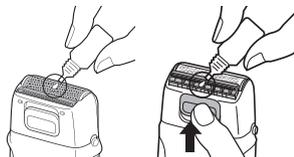

### ► Trimmer for beards

1. Remove the inner blade and slide the pop-up trimmer switch upwards.
2. Apply one or two drops of oil to the points indicated by arrows.

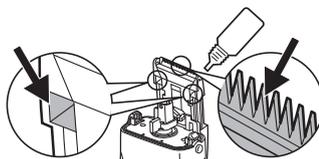


## Replacing the outer foil and the inner blade

outer foil	once every year
inner blade	once every two years

### ► Replacing the outer foil

Never remove the outer foil at any time other than when replacing it.

1. Press the foil frame release buttons to remove the foil frame.
2. Squeeze the front and the back side of the foil frame and lift up one of the two knobs on the outer foil.
3. Slip the outer foil into the frame and guide the plastic edges onto the hooks in the foil frame until it clicks into the shaver.

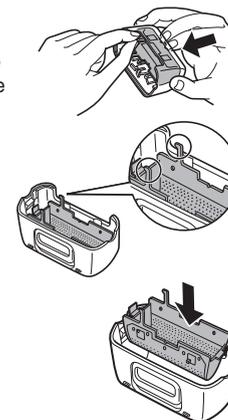

### ► Replacing the inner blade

1. Press the foil frame release buttons to remove the foil frame.
2. Remove the inner blade by grasping it firmly at both ends and pulling straight away from the shaver.
3. To insert the new inner blade, hold the blade at both ends and press downward until it snaps into the shaver.


## Removing the built-in rechargeable battery

English

Remove the built-in rechargeable battery before disposing of the shaver. Do not dismantle or replace the battery. Otherwise you can't use the shaver again. This could cause fire or an electric shock. Replace them at an authorized service center.

Remove the battery as illustrated.

- Fully discharge the battery.
- Please take care not to short-circuit the battery.

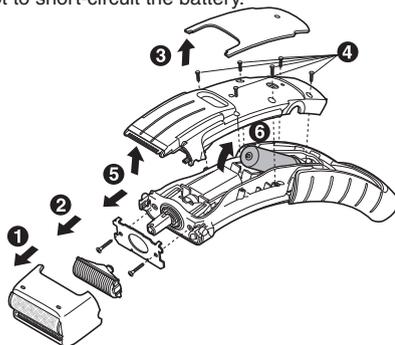

### Important notice regarding environmental protection

The built-in rechargeable Nickel-Metal Hydride battery contains substances that may be environmentally harmful. Please remove the battery before discarding your shaver.

### For environmental protection and recycling materials

This shaver contains Nickel-Metal Hydride battery. Please make sure that the battery is disposed of at an officially designated location if there is one in your area.




## نزع البطارية المضمنة القابلة لإعادة الشحن

قم بإخراج البطارية الداخلية القابلة لإعادة الشحن قبل التخلص من ماكينة الحلاقة. لا تسيب التعامل مع البطارية ولا تقوم باستبدالها. وإلا، سوف لن تتمكن من استعمال ماكينة الحلاقة مرة أخرى. قد يؤدي ذلك إلى نشوب حريق أو حدوث صدمة كهربائية. استبدليها لدى وكيل خدمات مؤهل.

انزع البطارية كما هو موضح بالشكل.

- قم بتفريغ البطارية تماماً.
- احرص على عدم حدوث دائرة قصر في البطارية.

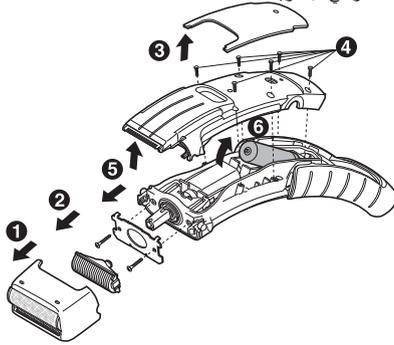

### ملاحظة هامة بخصوص حماية البيئة

تحتوي بطارية معدن نيكل-هيدريد المضمنة القابلة لإعادة الشحن على مواد قد تكون ضارة من الناحية البيئية. يرجى نزع البطارية قبل التخلص من الماكينة.

### لأغراض حماية البيئة وإعادة تدوير المواد

تحتوي هذه الماكينة على بطارية معدن نيكل-هيدريد. يُرجى التأكد من التخلص من البطارية في المكان المخصص لذلك رسمياً، حال وجود مثل هذا المكان ببلدك.

## استبدال الغلاف المعدني الخارجي والشفرة الداخلية

الغلاف المعدني الخارجي	مرة كل عام
الشفرة الداخلية	مرة كل عامين



### استبدال الغلاف المعدني الخارجي

تجنب نزع الغلاف المعدني الخارجي في أي وقت إلا حين استبداله بغلاف آخر.

1. اضغط على زري تحرير الإطار المعدني لنزعه.
2. اضغط على الجانب الأمامي والخلفي من الإطار المعدني ثم ارفع أحد المقبضين الموجودين على الغلاف الخارجي لأعلى.




3. قم بزلق الغلاف المعدني الخارجي في الإطار وتوجيه الحواف البلاستيكية الموجودة في الحطافات في الإطار المعدني حتى تسمع صوت طقطقة في الماكينة.

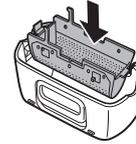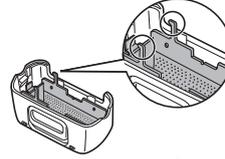

### استبدال الشفرة الداخلية

1. اضغط على زري تحرير الإطار المعدني لنزعه.
2. انزع الشفرة الداخلية بإمسك طرفيها بإحكام وجذبها في وضع مستقيم بعيداً عن الماكينة.
3. لإدخال الشفرة الداخلية الجديدة، أمسك طرفي الشفرة ثم اضغط عليها لأسفل حتى تستقر في الماكينة.

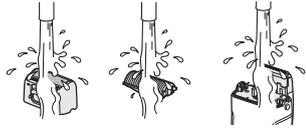

3. نظف الماكينة بماء جار.
4. جفف قطرات المياه باستخدام قطعة قماش جافة.

#### التنظيف بالفرشاة

يمكنك أيضا تنظيف الماكينة بفرشاة التنظيف.




#### التزييت

ضع الزيت على الغلاف المعدني الخارجي وعلى أداة التشذيب المنيقّة وأداة تشذيب اللحية وذلك قبل وبعد كل استخدام للماكينة.


#### الغلاف المعدني الخارجي وأداة التشذيب المنيقّة

1. ضع قطرة من الزيت على الغلاف المعدني الخارجي.
2. ارفع أداة التشذيب المنيقّة ثم ضع قطرة من الزيت.
3. شغل الماكينة واتركها تعمل لثوان قليلة.

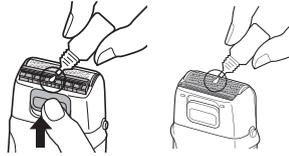


#### أداة تشذيب اللحية

1. انزع الشفرة الداخلية ثم حرك مفتاح أداة التشذيب المنيقّة لأعلى.
2. ضع قطرة أو قطرتين من الزيت في المواضع المشار إليها بالأسهم.

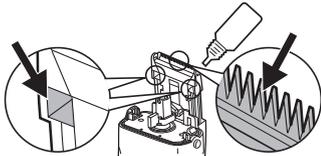

#### تحديد الشارب

1. حرك أداة تشذيب اللحية لأعلى وشغل الماكينة.
  2. شذب جوانب الشارب.
- إذا أردت عمل خط مستدير بالشارب، أمسك الماكينة من الجانب.

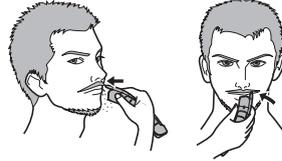

#### تحديد السوالف


1. حرك أداة تشذيب اللحية لأعلى وشغل الماكينة.
2. احلق السوالف.



#### التنظيف

#### تنظيف الماكينة

1. اضغط على زرّي تحرير الإطار المعدني لنزعه.
2. انزع الشفرة الداخلية بامسك طرفيها بإحكام وجذبها في وضع مستقيم بعيداً عن الماكينة.



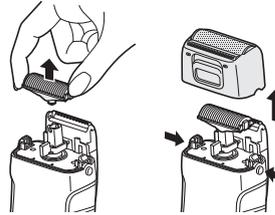


## استخدام أداة التشذيب لشعر اللحية


مشط شعر اللحية أو السوالف قبل تشذيبها.  
• لا ترطب شعر اللحية برغوة الحلاقة أو منتجات مشابهة، حيث يؤدي هذا إلى وجود نتوءات تجعل من الصعب الحفاظ حتى على مستوى واحد للتشذيب.

### تشذيب الشارب

1. قم بتثبيت المشط الملحق الخاص بشعر اللحية واسحب أداة تشذيب اللحية لأعلى.



2. أمسك جانبي المشط الملحق الخاص بشعر اللحية ثم حركه إلى مستوى طول التشذيب المطلوب.  
• يمكن ضبط مستوى الطول على 9 درجات من 2 مم إلى 14 مم في درجات قدرها 1.5 مم.

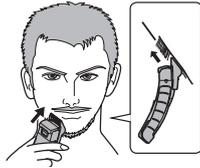

3. حرك مفتاح الإيقاف/التشغيل لأعلى.  
4. حرك ماكينة الحلاقة لأعلى مع توجيه مفتاح الإيقاف/التشغيل لأعلى كما هو موضح بالشكل.

## استخدام الأمشاط الملحقة


1. حدد المشط الملحق ثم ثبته في الماكينة.  
2. حرك مفتاح التشذيب المنبثقة لأعلى.  
3. حرك مفتاح الإيقاف/التشغيل لأعلى.  
4. ضع ماكينة الحلاقة على البشرة واضغط برفق مع تحريكها ببطء عكس اتجاه منبث الشعر.  
• شذب الشعر برفق وحرص لتجنب انحساره في المشط الملحق.  
• نظف الماكينة إذا لم تعد تعمل بكفاءة أو في حال انسدادها.



## استخدام المقبض

### حلاقة المناطق الصعبة (عضلة الساق والأجزاء الخلفية، الخ).

1. قم بإيقاف تشغيل الماكينة.  
• ستكون حركة المقبض قوية عندما يكون المفتاح في وضع التشغيل ON.  
2. قم بإطالة المقبض بتحريكه حتى تسمع صوت طقطة.  
• يمكن ضبط المقبض على 37.5 مم أو 75 مم.  
3. يمكنك نبي المقبض عند إطالته لأخره.  
• ويمكنك ضبط المقبض لمسافة 15 مم بإجمالي 6 درجات.

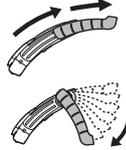

4. حرك مفتاح الإيقاف/التشغيل لأعلى.  
5. ضع الماكينة على المناطق التي يصعب الوصول إليها ثم حركها برفق.

استخدام الماكينة

قم بتشذيب شعرك باستخدام أداة التشذيب المنبثقة إذا كان أطول من 5 مم.

الحلاقة الرطبة/بالرغوة

الحلاقة برغوة الصابون تجعل البشرة ناعمة للحصول على حلاقة أفضل. تجنب استخدام كريم الحلاقة أو كريم البشرة أو غسول البشرة لأن هذا من شأنه إعاقة الشفرات.

1 رطب البشرة ثم انزع الغطاء الواقي.


2 رطب الغلاف المعدني الخارجي ثم ضع كمية قليلة من منظف سائل على الغلاف المعدني الخارجي.

3 أثناء الضغط على زر قفل المفتاح، حرك مفتاح الإيقاف/التشغيل لأعلى.



4 اضغط برفق حتى يكون الغلاف المعدني الخارجي بأكمله ملاصقًا للبشرة.

5 ضع ماكينة الحلاقة على البشرة واضغط برفق مع تحريكها ببطء عكس اتجاه منبت الشعر.

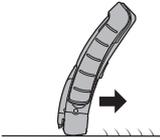

حرك الماكينة من الخارج للداخل.

حرك الماكينة من كاحل القدم إلى الركبة.

ارفع ذراعك لأعلى قدر الإمكان لشد البشرة وحرك الماكينة للأمام والخلف.

للحصول على أفضل النتائج

قم بشد البشرة في المنطقة المعرضة للتدلي (باطن الركبتين والمرفقين).

الحلاقة الجافة

يمكنك الحلاقة أيضًا دون ترطيب البشرة أو الغلاف المعدني الخارجي.


استخدام أداة التشذيب المنبثقة



1. حرك مفتاح أداة التشذيب المنبثقة لأعلى.
2. حرك مفتاح الإيقاف/التشغيل لأعلى.
3. ضع ماكينة الحلاقة على البشرة ثم اضغط برفق مع تحريكها ببطء.

منطقة bikini

استخدم أداة التشذيب المنبثقة لمنطقة bikini.

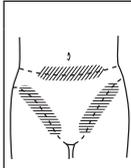



## شحن الماكينة

### الشحن


ضع الماكينة على الشاحن لبدء الشحن.  
يمكنك شحن الماكينة خلال 8 ساعات.

#### 1 قم بإيقاف تشغيل الماكينة.

2 وصل كبل الطاقة بأحد منافذ التيار وضع الشاحن على سطح مستو.

3 تأكد من محاذاة علامات المقبض مع جسم الماكينة الرئيسي.


#### 4 أدخلها في الشاحن كما هو موضح بالشكل.

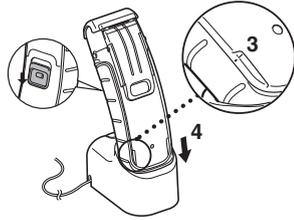


- يضى مصباح مؤشر الشحن ولا ينطفئ إلا عند نزع الماكينة من الشاحن.
- يؤدي اكتمال الشحن الى توفير طاقة كافية للحلقة 4 مرات تقريباً تستغرق المرة الواحدة 7 دقائق.

#### تثبيت الشاحن على الحائط

1. قم بتثبيت مسامري براغي على الحائط كما هو موضح بالشكل.
2. تباع المسامير منفصلة عن الماكينة.
3. علق الشاحن على هذين المساميرين.
3. وصل كبل الطاقة بأحد منافذ التيار.



## التعرف على الأجزاء

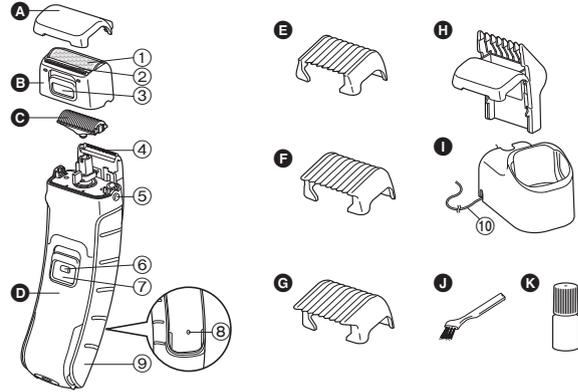

7 مفتاح الإيقاف/التشغيل

8 مصباح مؤشر الشحن

9 مقبض

E المشط الملحق 3 مم

F المشط الملحق 6 مم

G المشط الملحق 9 مم

H المشط الملحق للحية

I الشاحن (RE7-48)

10 كبل الطاقة

J فرشاة التنظيف

K الزيت

A الغطاء الواقي

B الإطار المعدني

1 الغلاف المعدني الخارجي

2 أداة التشذيب المنبثقة

3 مفتاح أداة التشذيب المنبثقة

C الشفرة الداخلية

D الجسم الرئيسي

4 أداة تشذيب للحية

5 أزرار تحرير الإطار المعدني

6 زر قفل المفتاح



## هام

### قبل الاستخدام

يمكن استخدام ماكينة حلقة الجسم الرطب/ الجاف هذه للحلاقة برغوة الصابون أو الحلاقة الجافة. كما يمكن استخدامها عند الاستحمام وتنظيفها بالماء حيث إنها مضادة للماء. ويشير الرمز التالي إلى خاصية الحلقة الرطبة، ويعني إمكانية استخدام الجزء الذي يمسك باليد في حوض الاستحمام أو أثناء الاستحمام.



أوضحت أبحاثنا أنه يمكنك الاستمتاع بحلاقة آمنة وسلسة باستخدام الشفرات الحادة. ويمكن لأداة التشذيب المنبثقة قطع الشعر الطويل بسهولة.

### استخدام الماكينة

تحذير - الغلاف المعدني الخارجي رقيق للغاية وقد يتعرض للتلف إذا لم يستخدم بطريقة صحيحة.

تحقق من أن الغلاف المعدني الخارجي غير تالف قبل استخدام الماكينة، واحرص على عدم استخدامها في حال تلف الغلاف المعدني الخارجي وإلا فقد يؤدي ذلك إلى إحداث قطع بالبشرة.

تأكد من تزييت الغلاف المعدني الخارجي أو الشفرات قبل استخدام الماكينة، فقد ينتج عن عدم التزييت جذب الماكينة للشعر أو الإضرار بالبشرة.

تجنب الضغط على البشرة بشدة أو حك المنطقة نفسها من البشرة بصورة متكررة أو تثبيت الماكينة على منطقة واحدة من البشرة أو وخزها عند استخدام الماكينة، فقد يتسبب ذلك في الإضرار بالبشرة أو التهابها أو الإصابة بالآلام مضاعفة.

لا تستعمل حلقة الوجه.

### شحن الماكينة

جفف الماكينة تمامًا قبل شحنها.

لا تستخدم أي شاحن سوى المرفق مع الماكينة المعد خصيصًا لهذا الطراز. استخدم الشاحن المرفق فقط.

احتفظ بالشاحن بعيدًا عن المياه وتجنب التعامل معه ويديك مبللة بالماء.

يرجى العلم بأن الماكينة قد تصبح ساخنة أثناء الاستعمال والشحن. غير أن هذا لا يعد خللًا وظيفيًا.

احرص على إمساك المهائب أثناء فصله من منفذ التيار. كما يحظر شد كبل الطاقة بقوة من المنفذ، فقد يؤدي ذلك إلى إتلافه.

لا يمكن استبدال كبل الطاقة. إذا تعرض الكبل للتلف، يجب التخلص من الجهاز.

• تجنب شحن الماكينة في الأماكن التي تقل فيها درجة الحرارة عن 0 مئوية أو تزيد عن 40 مئوية، أو الأماكن التي تتعرض فيها لأشعة الشمس المباشرة أو أي مصدر للحرارة أو لدرجة رطوبة عالية.

• اشحن الماكينة لمدة 16 ساعة على الأقل عند شحنها لأول مرة أو عند عدم استخدامها لمدة تزيد على 6 أشهر.

### تنظيف الماكينة

• تجنب استخدام المياه المالحة أو الساخنة عند تنظيف الماكينة بالماء. وعند التنظيف، يمكن استخدام قطعة قماش مبللة بالماء والصابون. ويُحظر تمامًا استخدام التتر أو البنزين أو الكحول للتنظيف.

### تخزين الماكينة

- الجهاز غير مصمم للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية الضعيفة أو قليلي الخبرة والمعرفة، إلا في ظل الإشراف عليهم أو إعطائهم تعليمات استخدام الجهاز من قبل فردٍ مسؤول عن سلامتهم. وينبغي الإشراف على الأطفال لضمان عدم العبث بالجهاز.
- خزن الشاحن في مكان جاف لحمايته من التلف.
- لا تفكك الماكينة، بل توجه بها إلى فني صيانة مؤهل إذا دعت الحاجة.

### المواصفات

مصدر الطاقة: 220 - 240 فولت تيار متردد، 50 - 60 هرتز  
فولتية المحرك: 1.2 فولت تيار مباشر  
مدة الشحن: حوالي 8 ساعات  
هذا المنتج مخصص للاستخدام المنزلي فقط.

# Panasonic®

تعليمات التشغيل  
(المنزلي) ماكينة حلاقة شعر الجسم القابلة لإعادة الشحن


رقم الطراز ES2265

10-15

عربي

قبل تشغيل هذه الوحدة، يرجى قراءة هذه التعليمات بالكامل وحفظها للاطلاع عليها في المستقبل.

Panasonic Electric Works Wanbao (Guangzhou) Co., Ltd.  
<http://panasonic.net>

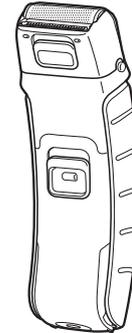

Ⓕ EN, ARA

Printed in China  
0000000000 0000-0