

Panasonic[®]

2.1 Channel Speaker System SC-HT19GS-K



Thank you for purchasing this Panasonic product.
Please read these instructions carefully before operating this product
and retain them for future reference.

The images shown in this manual are for illustrative purposes only.

Specifications

Sound output: 20 W + 12.5 W x 2 (RMS)

Drive Units: 3" x 2 satellite + 5" subwoofer

Frequency Response: Satellite Speaker: 120 Hz - 20 KHz

Subwoofer: 20 Hz - 170 Hz

Separation: ≥ 40 dB

S/N: ≥ 60 dB

Distortion: $\leq 0.5\%$ (1 K , 1 W)

Power Supply: 220-240V~50/60Hz

Dimensions: Subwoofer (L x B x H) : 245 x 212 x 187 (mm)

Satellite (L x B x H) : 93 x 103 x 118 (mm)


Features:

- Quality 2.1 speaker system with built-in amplifier
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3 and digital playbacks
- Specially designed woofer cabinet for bass
- With remote control and RCA stereo connection

Package contents:

Subwoofer cabinet	1 pc
Satellite speakers	2 pc
Remote control	1 pc
User manual	1 pc
Audio input cord	1 pc
Hanging screw	2 pc
Screw Supporter	2 pc

How to use the remote control

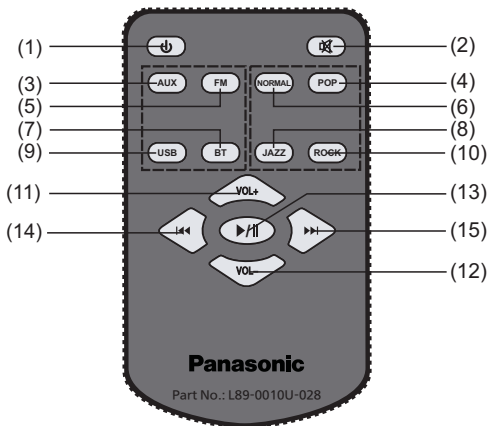

1. **ST-BY (Stand-by)**: Turns ON the unit; When is ST-BY mode, the LED indicator will blink as last selected function, i.e. Red for AUX, Purple for FM and Blue for USB & Bluetooth.

2. **MUTE**: Turn OFF volume. Press again to activate volume.

3. **AUX**: AUX mode selection. Red LED will be ON when in AUX mode.

4. **POP**: A kind of EQ mode, only applicable for USB/BT mode.

5. **FM**: FM mode selection. When you enter FM mode, the purple LED will be ON.

Long press “▶/||” to search and store FM stations/channels automatically.

6. **NORMAL**: A kind of EQ mode, only applicable for USB/BT mode.

7. **BT:** BT mode selection. When you enter BT mode, Blue LED display start flashing quickly to search the BT device. Turn on your mobile device and search the BT device name as "SC-HT19". When you have successfully paired your mobile to the speaker system, the LED flashes slowly. Once you started playing music, the LED will stop flashing. The functions as "PREVIOUS/NEXT", "▶/■", can operate via the front panel. At BT mode, when connecting with Mobile, press "▶/■" for 3 seconds, BT can be forcefully disconnected.
8. **JAZZ:** A kind of EQ mode, only applicable for USB/BT mode.
9. **USB:** For USB mode selection. When enter into USB mode, blue LED will be on. "▶▶" means next song; "◀◀" means previous song; "▶/■" means play/pause.
10. **ROCK:** A kind of EQ mode, only applicable for USB/BT mode.
11. **VOL+:** Increase the volume by continuous or long press of VOL+.
12. **VOL-:** Decrease the volume by continuous or long press of VOL-.
13. **PLAY/PAUSE:** Play/Pause the song in USB/BT mode and mute in FM/AUX mode.
14. **PREVIOUS:** For selection previous song in USB/BT mode and previous stored FM station in FM mode.
15. **NEXT:** For selection next song in USB/BT mode and next stored FM station in FM mode.


Notes:

When USB is plugged in, to turn ON the set, you may need to press "⏻" more than one time. For best performance in BT mode, please place your connected device within 9 Meters of operating range and in open area.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same of equivalent type.

Instructions for replacing lithium battery

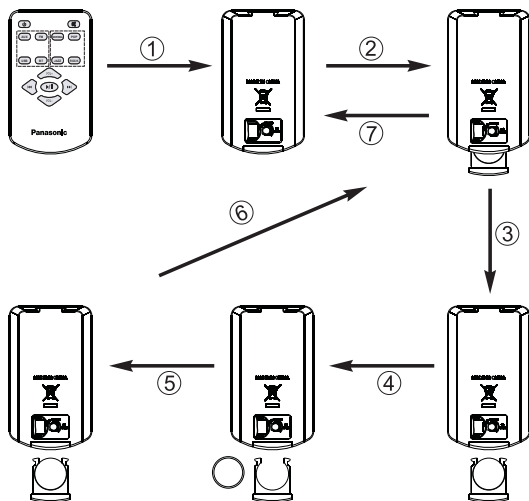

STEP1 : Turn the remote control to the back side

STEP2: Pull out the plastic sheet

STEP3: Pull out the battery box

STEP4: Take out the lithium battery out of the battery box


STEP5: Replace the lithium battery





STEP6: Put the battery box inside the remote control


STEP7: Put the plastic sheet inside the remote control

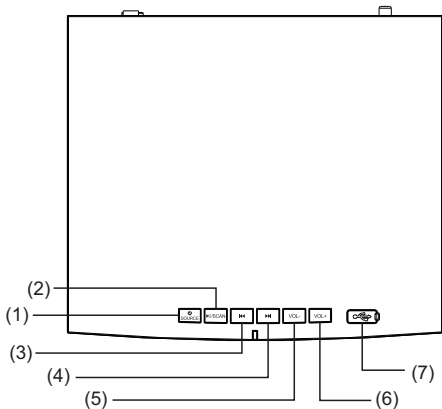Front Panel Key Operation:


1. /SOURCE
2. /SCAN
3. 
4. 
5. VOL-
6. VOL+
7.  USB socket



1. /Source: After power on, press /Source button for input mode selection. Long pressing /Source button will put the unit in “Stand-by” mode.
2. You can change the input modes by pressing /Source button. Color of LED in AUX mode is Red, Blue in USB/BT and Purple in FM mode.

		BT INPUT	AUX INPUT	USB INPUT	FM TUNNER
	short press	track selection previous/next		track selection previous/next	previous/next channel selection
	long time press	BT function will be force- disconnected			automatic search fm radio station/channel stored automatically

Rear panel

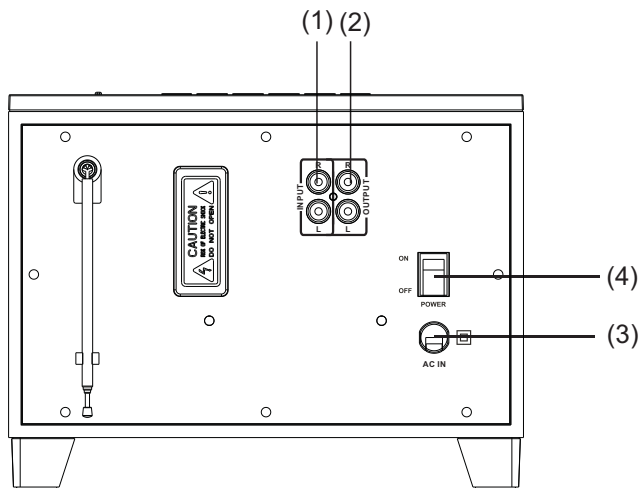

1. Input:

Connect to sound sources such as Computer, CD Player, Mp3 Player, etc.

3. AC IN:

AC Power cord


2. Output:

Connect the satellite speakers.

4. Power ON/OFF:

Switch for turning on/off the power.

System Connection Diagram

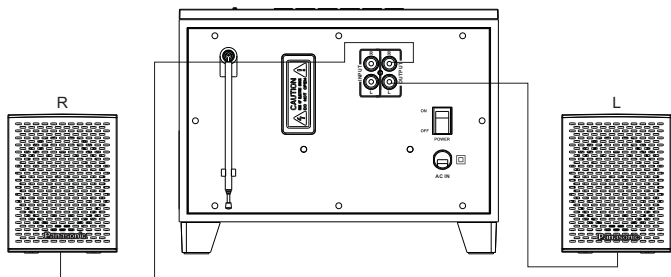


1. Connect both satellite speakers to OUTPUT terminals of back panel.
2. Connect the power cord to the mains and power on the system.
3. To play at AUX Mode, connect the 3.5 mm stereo input jack into the output of the audio sources such as Mp3 Player, Computer, etc. Connect other end RCA cable to "INPUT" terminal.
4. For playing USB, connect USB device to the socket shown on page No.4.
5. For listening to FM, please select FM mode using source key of front panel or FM button on remote.
6. For BT, pls select BT mode using source key of front panel or BT button on remote and connect with the name SC-HT19.





NOTE

- * Do not leave objects generating magnetism near the speakers.
- * Audio system may deliver low audio output for some mobile and other devices when connected via BT.

How to place Speaker System

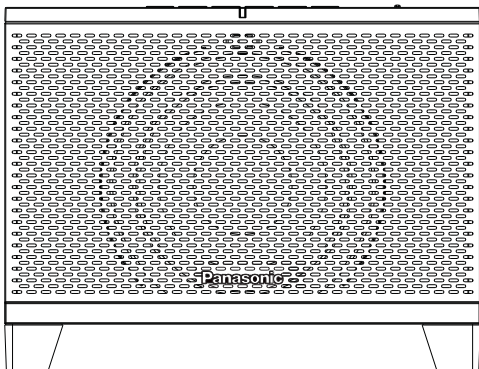

Ideal listening position
and placement

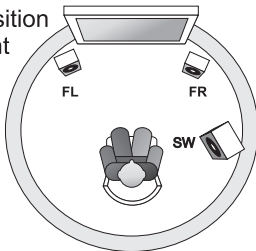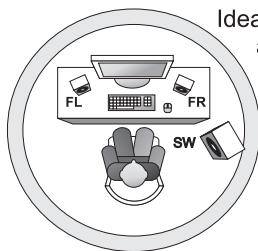

FL-front left
FR-front right
SW-subwoofer


① Sub-woofer

Place the sub-woofer any place on the floor.(There is no directional requirement for the BASS effect.)

② Satellites Speakers

Place at both side of the TV or Subwoofer

SAFETY INSTRUCTIONS

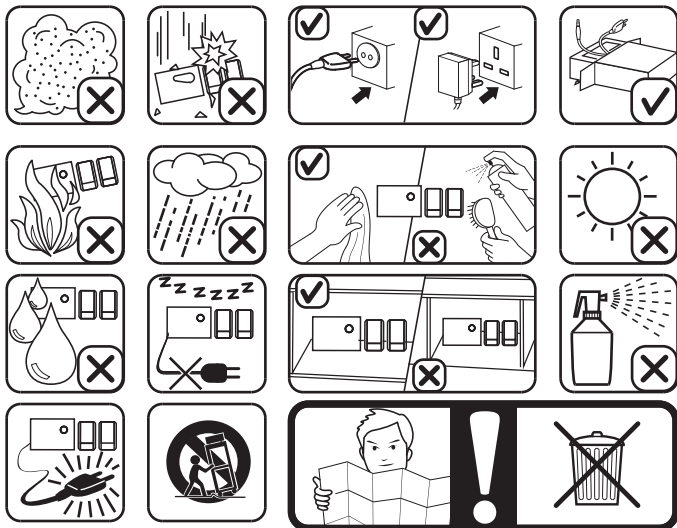

CAUTION/WARNING

Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

Maximum working temperature: 45 °C

Warning : User replaceable coin / button cell battery

*If the remote control cannot function, it is because the battery of remote control has been used up. Thank you.

UAE - TRA
REGISTERED No.
ER62070/18
DEALER No.
DA0052708/10

OMAN - TRA
REGISTERED No.
TRA/TA-R/5859/18
DEALER No.
D090281

OMAN - TRA
REGISTERED No.
TRA/TA-R/5859/18
DEALER No.
D090281

UAE - TRA
REGISTERED No.
ER62070/18
DEALER No.
DA0052708/10

Panasonic Marketing Middle East & Africa FZE

Web Site: <http://www.panasonic.com>



تحذير/تنبيه


لا ينبغي أن يتعرض هذا الجهاز للماء ولا يجب وضع أي شيء مملوء بالسوائل مثل المزهريات والزخارف على الجهاز. البطاريات (المغلقة أو المركبة في الجهاز) ينبغي ألا تتعرض للحرارة المفرطة مثل أشعة الشمس، اللهب أو ما شابه ذلك.

عند استخدام قابس التيار الكهربائي لفصل طاقة الجهاز، يبقى الجهاز في وضع الاستعداد.


درجة حرارة التشغيل القصوى: 45 درجة مئوية

تحذير: المستخدم استبدال البطارية الخلية عملة / زر


*إذا كان جهاز التحكم عن بعد لا يعمل، فهذا بسبب أن بطاريات جهاز التحكم عن بعد فارغة من الطاقة. شكراً.

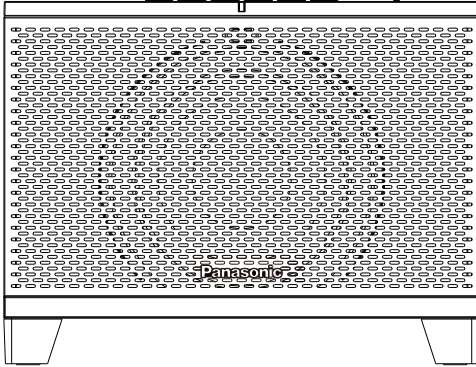

موضع الاستماع المثالي
والتناسب

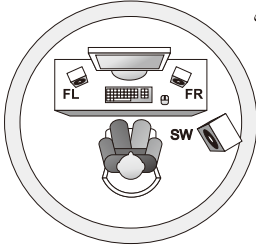

FL - الامامي الايسر
FR - الامامي اليمين
SW - مضخم الصوت

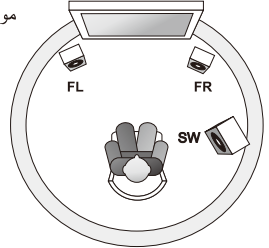


1) مضخم الصوت

ضع مضخم الصوت في أي مكان على السطح. (لا يوجد أي متطلبات توجيهية لتأثير الصوت الجهور).

2) سماعات ستالايت

ضع السماعات على كل جانبي التلفزيون أو مضخم الصوت.

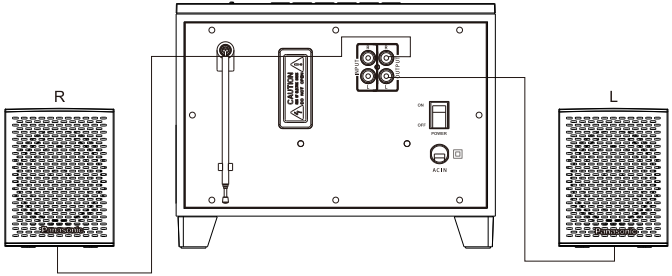

1. وصل كلا سماعتي الساتلايت إلى منافذ الإخراج على اللوحة الخلفية.

2. وصل سلك الطاقة الكهربائية إلى مصدر الطاقة وقم بتشغيل النظام.

3. للتشغيل في وضع الأوكس، وصل قابس إدخال ستريو 3.5مم إلى مخرج مصادر الصوت مثل مشغل Mp3، الكمبيوتر، إلخ. وصل نهايات كابل RCA الأخرى إلى منفذ "الإدخال".

4. لتشغيل الـ USB، وصل أداة الـ USB المقابس الموضحة في الصفحة رقم 4.

5. للاستماع إلى الراديو اف ام يرجى اختيار وضع اف ام بواسطة استخدام مفتاح المصدر على اللوحة الأمامية أو رز اف ام على الريموت.


6. للبلوتوث، يرجى اختيار وضع البلوتوث بواسطة استخدام مفتاح المصدر على اللوحة الأمامية أو زر البلوتوث على الريموت ثم ارتبط بالجهاز الذي يحمل الاسم SC-HT19.



ملاحظة

* لا تترك الأشياء التي تولد مجال مغناطيسي بالقرب من السماعات.

* النظام الصوتي قد يولد مخرجات صوتية منخفضة لبعض الجوالاات وغيرها من الأجهزة عند الاتصال بواسطة البلوتوث.

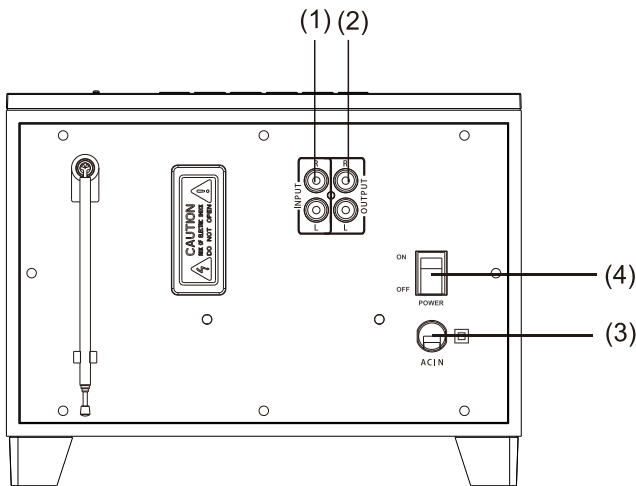

1. الإدخال:

التوصيل إلى مصدر الصوت مثل الكمبيوتر، مشغل اقراص سي دي، مشغل Mp3، الخ.

3. مدخل التيار الكهربائي:

سلك التيار الكهربائي


2. الإخراج:

توصيل سماعة ستالايت.

4. التشغيل/الإيقاف:

لتشغيل أو إيقاف تشغيل الوحدة.

1. ⏻ / المصدر
2. ⏮ / بحث
3. ⏪
4. ⏩
5. خفض الصوت
6. ارفع الصوت
7. USB منفذ

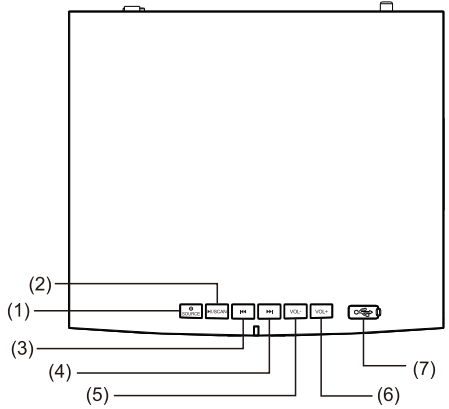


1. ⏻ / المصدر: بعد تشغيل الطاقة، اضغط الزر ⏻ / المصدر لاختيار وضع الإدخال

الضغط مع الاستمرار على الزر ⏻ / المصدر سيجعل الوحدة في وضع "الاستعداد".

2. يمكنك تغيير أوضاع الإدخال عبر الضغط على الزر ⏻ / المصدر. لون المؤشر الضوئي في وضع الأوكس هو أحمر، وأزرق في وضع USB/البلوتوث وبنفسجي في وضع اف ام.

⏮ ⏩		مداخل البلوتوث	مداخل الأوكس	مداخل USB	مواصفة الراديو اف ام
ضغط سريع	اختيار المسار السابق/التالي			اختيار المسار السابق/التالي	اختيار القناة السابقة/التالية
ضغط سريع	تشغيل / إيقاف مؤقت	كتم الصوت	تشغيل / إيقاف مؤقت	كتم الصوت	
⏮ / بحث	ضغط مع الاستمرار	البلوتوث الوظيفية سيتم فصلها إجبارياً			بحث تلقائي عن راديو اف ام حفظ تلقائي للقناة/المحطة

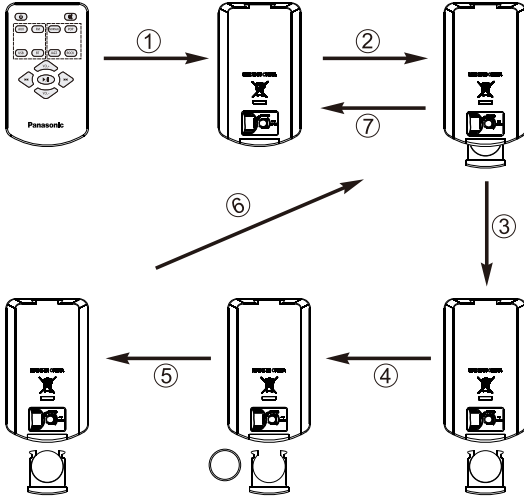

- 1STEP : الخلفى الجانب إلى بعد عن التحكم جهاز تشغيل
2STEP : البلاستيك من ورقة اسحب
3STEP : البطارية مربع اسحب
4STEP : البطارية الجزء منطقة خارج من ليثيوم بطارية إخراج
5STEP : ليثيوم بطارية استبدال
6STEP : بعد عن التحكم جهاز داخل بطارية مربع وضع
7STEP : بعد عن التحكم جهاز داخل البلاستيك من ورقة وضع

7. **البلوتوث:** اختيار وضع البلوتوث. عند دخول وضع البلوتوث، شاشة اليد الزرقاء تبدأ بالوميض بشكل سريع للبحث عن أداة البلوتوث. قم بتشغيل هاتفك وابحث عن أداة البلوتوث التي تحمل اسم "SC-HT19". عندما يتم اقتران هاتفك إلى نظام السماعه بنجاح، يومض المؤشر ببطء. حالما تبدأ بتشغيل الموسيقى، المؤشر يتوقف عن الوميض. وظائف "السابق/التالي" "▶/◀" يمكن تشغيلها من اللوحة الامامية، في وضع البلوتوث، عند الارتباط بالهاتف، الضغط على "▶/◀" لمدة ثلاث ثوان، يمكنه فصل البلوتوث بشكل إجباري.

8. **جاز:** نوعمنا نواع وضع معدلا لصوت، قابل للتطبيق فقط لوضع USB/بلوتوث.

9. **USB:** لاختيار وضع USB. عند دخول وضع الـ USB، المؤشر الضوئي الأزرق سوف

يضيء. "▶▶" تعني الأغنية التالية "◀◀" تعني الأغنية السابقة؛ "▶/◀" تعني تشغيل/إيقاف مؤقت.

10. **روك:** نوع من أنواع وضع معدل الصوت، قابل للتطبيق فقط لوضع USB/بلوتوث.

11. **رفع الصوت:** زيادة مستوى الصوت عبر الضغط المستمر أو المطول على +VOL.

12. **خفض الصوت:** خفض مستوى الصوت عبر الضغط المستمر أو المطول على -VOL.

13. **تشغيل / إيقاف مؤقت:** تشغيل/إيقاف مؤقت للأغاني في الوضع USB/البلوتوث وكنم الصوت في الوضع اف ام/أوكس.

14. **السابق:** لاختيار الأغنية السابقة في الوضع USB/البلوتوث واختيار محطة اف ام المخزنة السابقة في الوضع اف ام.


15. **التالي:** لاختيار الأغنية التالية في الوضع USB/البلوتوث واختيار محطة اف ام المخزنة التالية في الوضع اف ام.

ملاحظات:

- عندما يتم توصيل اليو اس بي، لتشغيل الجهاز، ينبغي عليك الضغط على "⏻" أكثر من مرة. للحصول على أفضل أداء في وضع البلوتوث، يرجى وضع الجهاز المتصل ضمن 9 امتار من نطاق التشغيل و في منطقة مفتوحة

تنبيه

خطر انفجار إذا تم استبدال البطاريات بشكل غير صحيح. استبدلها فقط بنوع له نفس المواصفات.

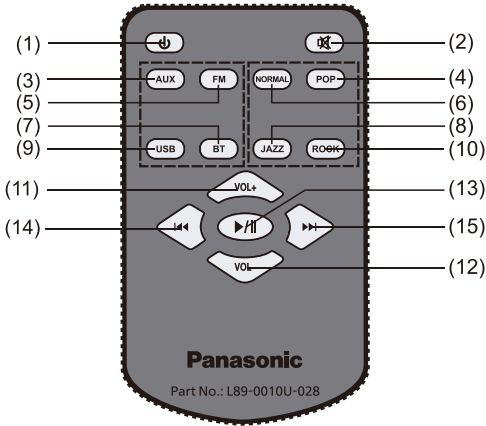

1. تشغيل الوحدة : عندما تكون في وضع الاستعداد ، المؤشر الضوئي سيمض طبقا لآخر وظيفة مختارة على سبيل المثال : أحمر لل AUX ، وارجواني للراديو FM وأزرق لليو اس بي و البلوتوث
2. كتم الصوت: إيقاف تشغيل الصوت. اضغط مجدداً لتفعيل الصوت.
3. أوكس: اختيار وضع الأوكس. المصباح الأحمر وسوف يضيء في وضع الأوكس.
4. POP: نوع من أنواع وضع معدل الصوت، قابل للتطبيق فقط لوضع USB/BT.
5. اختيار وضع اف ام : عند دخول وضع اف ام ، المؤشر البنفسجي سوف يضيئ. اضغط مع الاستمرار " ►/|| " على البحث وحفظ محطات / قنوات تلقائيا
6. عادي: نوع من أنواع وضع معدل الصوت، قابل للتطبيق فقط لوضع USB/BT.

مخرجات الصوت: 20 وات + 12.5 وات * 2 (RMS)
الوحدات السواعة: 3" * 2 ستالايت + 5" مضخم الصوت

استجابة تردد: سماعة ستالايت: 20 هرتز - 120 كيلو هرتز

مضخم الصوت: 20 هرتز ~ 170 هرتز

التشيت: ≤ 40 ديسبل

$S/N: \leq 60$ ديسبل

التشويش: $\geq 0.5\%$ (1ك، 1وات)

إمدادات الطاقة: 220-240 فولت ~ 60/50 هرتز

الأبعاد: مضخم الصوت (طول * عرض * ارتفاع): 245 * 212 * 187 (مم)

ستالايت (طول * عرض * ارتفاع): 93 * 103 * 118 (مم)

المزايا:

- نظام سماعة جودة 2.1 مع مكبر صوت مدمج
- أداء صوتي واسع الطيف، مثالي لترفيهك المفضل من Mp3 والصوتيات الرقمية
- صندوق مضخم الصوت مصمم خصيصاً للصوت الجهور (باس)
- مع جهاز تحكم عن بعد ووصلات RCA ستريو

محتويات الحزمة:

- صندوق مضخم الصوت عدد 1
- سماعات ستالايت عدد 2
- جهاز التحكم عن بعد عدد 1
- دليل المستخدم عدد 1
- كابل إدخال الصوت عدد 1
- براغي تعليق عدد 2
- براغي الداعم عدد 2

Panasonic®

نظام سماعات 2.1 قناة SC-HT19GS-K



شكرا لكم لشراء هذا المنتج من باناسونيك.
يرجى قراءة هذا الدليل بعناية قبل استخدام الجهاز ، كما يجب حفظه للرجوع إليه في المستقبل أو عند الحاجة.
الاشكال الواردة في هذا الدليل هي لأغراض توضيحية فقط.