
101130720044

Panasonic®

Operating & Installation Instructions

Tumble Dryer
(Household Use)

MODEL: NH-E70JA1　NH-E80JA1

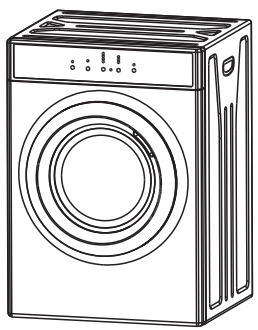


Contents

Safety & Warning	2
Check your Tumble Dryer	4
Before Drying	5
Control Panel	6
Operation Precaution	7
Installation Instruction	9
Maintenance	12
Trouble shooting & Specifications	13

Thank you for purchasing this product.
- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

JHDQ10113A1
Printed in China
01/2020

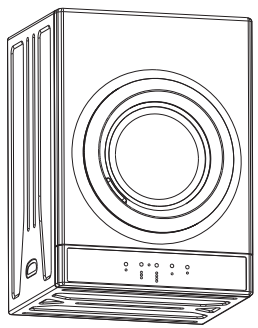

ข้อควรระวังและคำเตือน	2
ตรวจสอบเครื่องอบผ้าของคุณ	4
ก่อนอบผ้า	5
แผงควบคุม	6
ข้อควรระวังในการใช้งาน	7
คำแนะนำในการติดตั้ง	9
การบำรุงรักษา	12
ค้นหาข้อผิดพลาดและข้อมูลจำเพาะ	13

JHDQ10113A1
พิมพ์ที่ประเทศจีน
01/2020

- โปรดอ่านคำแนะนำเหล่านี้อย่างรอบคอบเพื่อประสิทธิภาพและความปลอดภัยสูงสุดก่อนใช้งาน
- เก็บคู่มือนี้ไว้สำหรับการอ้างอิงในอนาคต

ขอขอบคุณที่ซื้อผลิตภัณฑ์นี้

เครื่องอบผ้า
(ใช้ในครัวเรือน)

Model: NH-E70JA1　NH-E80JA1

Panasonic®

技术要求
1. 材质：105g双面铜版纸；
2. 说明书规格：136×193mm；
3. 黑色印刷，印刷字迹清晰明了；
4. 零件应符合RoHS2.0标准要求。

标记	处数	更改文件号	签字	日期
设计		工艺		
制图				
标准化		批准		
审核		日期		

版本：20200724				
图样标记	重要度		比例	
S		A		1.5：1
第 1 张	共 1 张			

江门市金环电器有限公司
Panasonic NH-E7(8)0JA1 通用说明书(英泰)
101130720044


借（通）用登记
输　出
校　对
电脑编号
底图总号
签　字
日　期

Panasonic

Operating & Installation Instructions

Tumble Dryer
(Household Use)

MODEL: NH-E70JA1 NH-E80JA1

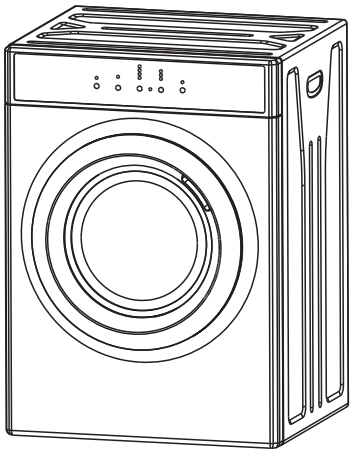

Contents


Safety & Warning	2
Check your Tumble Dryer	4
Before Drying	5
Control Panel	6
Operation Precaution	7
Installation Instruction	9
Maintenance	12
Trouble shooting & Specifications	13

Thank you for purchasing this product.
- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

JHDQ10113A1
Printed in China
01/2020

Panasonic

Model: NH-E70JA1 NH-E80JA1

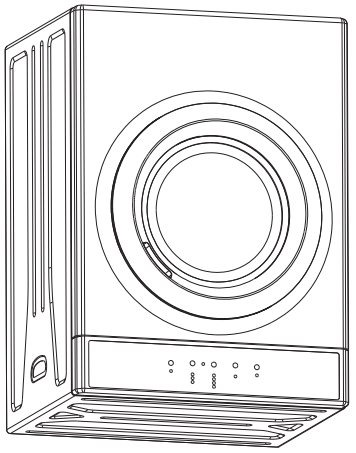

Safety & Warning	2
Check your Tumble Dryer	4
Before Drying	5
Control Panel	6
Operation Precaution	7
Installation Instruction	9
Maintenance	12
Trouble shooting & Specifications	13

JHDQ10113A1
01/2020

Safety & Warning

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- INDOOR USE ONLY this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not locate the appliance or cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
- Do not run the cord under floor coverings. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
- To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way. Consult the manufacturer.
- Do not attempt to repair, disassemble or modify this appliance. The warranty becomes void if not serviced or repaired by a Qualified person.
- Do not place items that have been soiled with flammable liquids inside the dryer without washing them with detergent thoroughly before hand.
- Do not excessively bend, stretch, twist or bind the power cord or place heavy objects on it.
- This appliance is only to be serviced by a qualified person. There are no user-serviceable parts inside.
- Do not use an extension cord with this appliance.
- Do not install in a tight fitting cabinet.
- Do not overload the laundry dryer.
- Ensure foreign objects do not find their way into the tub of the laundry dryer.
- The door window may be hot after a long drying cycle. Please ensure children are kept away from the machine.
- If the laundry dryer is not wall mounted, place in a flat, firm, dry and drafty place. Use the adjustable front legs to assist in leveling the dryer if need be. Do not place it on any soft material such as foam or plastic
- Do not use flammable or combustible materials such as gas, petrol, alcohol or lacquer in the laundry dryer.
- After turning off the power supply to the laundry dryer, wait at least 2 minutes before turning it back on again.
- Please remove the transport packaging at the rear of the laundry dryer, prior to use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CAUTION: If this appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

ڕێنمایی سەلامەتی گرنگ

بۆ سەلامەتی خۆت

- ئەم ئامێرە نەخشێنراوە بۆ بەکارهێنان لەلایەن کەسانێک (لەوانە منداڵان) کە توانای جەستەیی، هەستی یان عەقڵی کەمیان تێدایە، یان کەسانێک کە ئەزموون و زانیاریان کەمە، مەگەر ئەگەر چاودێری یان ڕێنمایی دابین کرابێت سەبارەت بە بەکارهێنانی ئامێرەکە لەلایەن کەسێکەوە کە بەرپرسیارە لە سەلامەتی ئەوان.
- پێویستە منداڵان چاودێری بکرێن بۆ دڵنیابوون لەوەی کە یاری بە ئامێرەکە ناکەن.
- تەنها بۆ بەکارهێنان لە ناوەوە ئەم ئامێرە نەخشێنراوە بۆ بەکارهێنان لە دەرەوە.
- سەرچاوەکانی شەپۆلی ئاگر، وەک مۆم، لەسەر ئامێرەکە دانەنێ.
- ئامێرەکە یان وایەرەکە لە نزیک سەرچاوەکانی گەرمی وەک ڕادیاتۆر، گەرمکەر، هێڵەکانی هەوا یان ڕووناکی ڕاستەوخۆی خۆر دانەنێ.
- هیچ یەکێک لە کونەکانی هەوا مەگرە. دڵنیابە لە کونەکان داپۆشراو نین بە ڕۆژنامە، جێگە خواردن، پەردە، هتد.
- وایەر لەژێر داپۆشەرەکانی نهۆم ڕامەکێشە. لە جیاتی ئەوە، وایەرەکە لە ناوچەکانی هاتووچۆ دابنێ کە نابێتە مەترسی بۆ تێکەوتن.
- بۆ جیاکردنەوەی ئامێرەکە، ئامێرەکە بکوژێنەوە، کلیپسی کارەبا بکوژێنەوە و پلەکە لە کلیپسی کارەبا دەربهێنە.
- بەکاری خراپ لە وایەرەکە مەکە. هەرگیز ئامێرەکە بە وایەرەکە هەڵمەگرە یان بۆ جیاکردنەوەی لە کلیپسەکە ڕایمەکێشە. لە جیاتی ئەوە، پلەکە بگرە و ڕایبکێشە بۆ جیاکردنەوە.
- ئامێرەکە بەکار مەهێنە ئەگەر وایەر یان پلەکەی تێکچووە؛ دوای ئەوەی ئامێرەکە کێشەی تەکنیکی هەبووە؛ یان کەوتووەتە خوارەوە یان بە هەر شێوەیەک زیانی پێگەیشتووە. پەیوەندی بە دابینکەرەوە بکە.
- هەوڵ مەدە ئامێرەکە چاک بکەیتەوە، هەڵیوەشێنیتەوە یان دەستکاری بکەیت. گەرەنتی باتڵ دەبێت ئەگەر خزمەتگوزاری یان چاککردنەوەی بۆ نەکرێت لەلایەن کەسێکی شارەزاوە.
- جلوبەرگی پیسکراو بە شلەی قابیلی گڕگرتن نەخەیتە ناو ئامێرەکە بەبێ ئەوەی بە دێتەرجەنت بە تەواوی بیانشۆیت پێش ئەوە.
- وایەر زۆر مەچەمێنەوە، مەکێشە، مەپێچە یان گرێی مەدە و شتی قورس لەسەری دانەنێ.
- ئەم ئامێرە تەنها لەلایەن کەسێکی شارەزاوە خزمەتگوزاری بۆ دەکرێت. هیچ پارچەیەکی خزمەتگوزاری تێدا نییە.
- وایەرێکی درێژکەرەوە بۆ ئەم ئامێرە بەکار مەهێنە.
- ئامێرەکە لە کابینەتێکی تەنگ دانەنێ.
- بارگەی زۆر بۆ ئامێری وشککەرەوەی جلوبەرگ دروست مەکە.
- دڵنیابە لە نەچوونە ناوەوەی شتی بێگانە بۆ ناو تەشتی ئامێری وشککەرەوەی جلوبەرگ.
- پەنجەرەی دەرگا دوای ماوەیەکی درێژ لە وشککردنەوە گەرمە. تکایە دڵنیابە منداڵان دوور ڕادەگیرێن لە ماشینەکە.
- ئەگەر ئامێری وشککەرەوەی جلوبەرگ بە دیوارەوە نەبەستراوەتەوە، لە شوێنێکی تەخت، توند، وشک و ڕووناک دایبنێ. پێیەکانی پێشەوە بەکار بهێنە بۆ یارمەتیدان لە ئاستکردن ئەگەر پێویست بوو. دایمەنێ لەسەر هیچ جۆرە ماددەیەکی نەرم وەک کەف یان پلاستیک
- ماددە قابیلی گڕگرتن یان قوڕاوی وەک گاز، بەنزین، ئەلکۆهۆل یان لاکەر لە ئامێری وشککەرەوەی جلوبەرگ بەکار مەهێنە.
- دوای کوژاندنەوەی هێزی ئامێری وشککەرەوەی جلوبەرگ، چاوەڕێ بکە لانیکەم ٢ خولەک پێش ئەوەی جارێکی تر بیکەیتەوە.
- تکایە ئامێرەکە لە پشتەوە دوای بەکارهێنان دابگرە.
- ئەگەر وایەری هێز زیانی پێگەیشتووە، دەبێت لەلایەن دابینکەرەوە یان خزمەتگوزارییەکی شارەزاوە بگۆڕدرێت بۆ ئەوەی مەترسی نەبێت.

ئاگاداری: ئەگەر ئەم ئامێرە لە ڕێگەی وایەرێکی درێژکەرەوە یان ئامێرێکی پۆرتەبڵی کارەبا دابین کرابێت، وایەرێکی درێژکەرەوە یان ئامێرێکی پۆرتەبڵی کارەبا دەبێت لە شوێنێکدا دابنرێت کە ڕژاندن یان چوونە ناوەوەی شێ بەسەریدا نەبێت.

Safety & Warning

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature to reduce wrinkling and ensure that the user will not be exposed to remaining heat that could cause injury.
- Remove all objects from pockets such as lighters and matches.
- The maximum mass of dry textile material in kilograms to be used in the appliance;
- That the tumble dryer is not to be used if industrial chemicals have been used for cleaning;
- That the lint trap has to be cleaned frequently, if applicable;
- That lint must not to be allowed to accumulate around the tumble dryer (not applicable for appliances intended to be vented to the exterior of the building);
- That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

NOTE: This instruction is not required if the tumble dryer discharges the air into the room.

- For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

NOTE: This instruction is not required if the tumble dryer discharges the air into the room.

- That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that heat is dissipate.

Save These Instructions

- ทำความสะอาดเครื่องอบผ้าตามคำแนะนำของผู้ผลิตอย่างสม่ำเสมอ การสะสมของขนสัตว์ในเครื่องอบผ้าอาจเป็นอันตรายได้
- ไม่ควรอบผ้าที่ไม่ได้ซักในเครื่องอบผ้า
- ผ้าที่เปื้อนสารต่างๆ เช่น น้ำมันพืช อะซิโตน แอลกอฮอล์ น้ำมันก๊าด ทินเนอร์ ขี้ผึ้งและน้ำยาขจัดขี้ผึ้ง ควรซักด้วยน้ำร้อนและผงซักฟอกในปริมาณที่มากขึ้นก่อนนำไปอบในเครื่องอบผ้า
- ไม่ควรอบฟองน้ำ (ยางฟองน้ำ) หมวกอาบน้ำ ผ้าที่กันน้ำได้ วัสดุที่มีฟองน้ำรองหลัง และเสื้อผ้าหรือหมอนที่มีฟองน้ำรองอยู่ในเครื่องอบผ้า
- ขั้นตอนสุดท้ายของรอบการอบผ้าจะเกิดขึ้นโดยไม่มีความร้อน (รอบการทำความเย็น) เพื่อให้แน่ใจว่าผ้าอยู่ในอุณหภูมิที่ลดการยับย่นและให้แน่ใจว่าผู้ใช้จะไม่ได้รับความร้อนที่เหลืออยู่ซึ่งอาจทำให้เกิดการบาดเจ็บได้
- นำสิ่งของทั้งหมดออกจากกระเป๋า เช่น ไฟแช็กและไม้ขีดไฟ
- น้ำหนักสูงสุดของวัสดุสิ่งทอแห้งเป็นกิโลกรัมที่จะใช้ในเครื่องใช้ไฟฟ้า;
- ว่าเครื่องอบผ้าไม่ควรใช้หากมีการใช้สารเคมีอุตสาหกรรมในการทำความสะอาด;
- ว่าต้องทำความสะอาดกับดักขนสัตว์บ่อยๆ หากมี;
- ขนสัตว์ต้องไม่สะสมรอบเครื่องอบผ้า (ไม่สามารถใช้ได้กับเครื่องใช้ที่ตั้งใจจะระบายอากาศไปยังภายนอกอาคาร);
- ว่าต้องมีการระบายอากาศที่เพียงพอเพื่อหลีกเลี่ยงการไหลย้อนกลับของก๊าซเข้าไปในห้องจากเครื่องใช้ที่เผาไหม้เชื้อเพลิงอื่นๆ รวมถึงไฟเปิด

หมายเหตุ: คำแนะนำนี้ไม่จำเป็นหากเครื่องอบผ้าระบายอากาศเข้าไปในห้อง

- สำหรับเครื่องใช้ที่มีช่องระบายอากาศที่ฐาน ว่าพรมต้องไม่ปิดกั้นช่องเปิด

- ว่าอากาศที่ระบายออกต้องไม่ถูกปล่อยเข้าไปในปล่องควันที่ใช้สำหรับไอเสียจากเครื่องใช้ที่เผาไหม้แก๊สหรือเชื้อเพลิงอื่นๆ

หมายเหตุ: คำแนะนำนี้ไม่จำเป็นหากเครื่องอบผ้าระบายอากาศเข้าไปในห้อง

- ว่าเครื่องใช้ต้องไม่ติดตั้งอยู่หลังประตูที่ล็อคได้ ประตูบานเลื่อน หรือประตูที่มีบานพับอยู่ด้านตรงข้ามกับเครื่องอบผ้า ในลักษณะที่จำกัดการเปิดประตูเครื่องอบผ้าได้อย่างเต็มที่

คำเตือน: อย่าหยุดเครื่องอบผ้าก่อนสิ้นสุดรอบการอบแห้ง เว้นแต่สิ่งของทั้งหมดจะถูกนำออกอย่างรวดเร็วและกระจายออกไปเพื่อให้ความร้อนกระจายออกไป

Checking Your Tumble Dryer

Your Tumble Dryer

Dryer Accessories included in Product Package

Instruction Manual(1) | Warranty Card(1) | Additional Printed Control Panel(1) * | Exhaust Connector(1) and 20mm Long Screw(1)

Wall Mounting Kit(1) | 12mm Long Screws(4) | 25mm Long Screws(8) | M6 Short Screw(8)

(*)This Accessories is only available for Malaysia, Singapore and New Zealand

Recommended Accessories

1. Stacking System – Bracket Kit (Model No N-SK2): designed for stacked installation of these Dryer on top of Panasonic Front Loading Washing Machine with Model number NA-V*****

Double-side adhesive tape(2) | Screws(6) | Bracket stack(L) | Bracket stack(M) | Bracket stack(R)

2. Venting Kit – Through Wall (Model No N-FH2): designed to extend the length of exhausting connector**

Metal Ring(1) | Flexible Hose(1)

You can buy Stacking System - Bracket Kit (Model No N-SK2) & Venting Kit – Through Wall (Model No N-FH2) from your local appliances shop or Panasonic Appliances Part Distributor
****: This Venting Kit – Through Wall is except for Thailand**

ตรวจเครื่องอบผ้าของคุณ

อุปกรณ์ที่ให้มาในบรรจุภัณฑ์ผลิตภัณฑ์

คู่มือการใช้งาน (1) | ใบรับประกัน (1) | แผ่นพิมพ์ข้อความแผงควบคุมเพิ่มเติม * (1) | ท่อต่อไอเสีย (1) | สกรูยึดผนัง (1)

ตัวยึดผนัง (1) | สกรูยึด 12 มม. (4) | สกรูยึด 25 มม. (8) | สกรูยึด M6 (8)

* อุปกรณ์นี้มีให้เฉพาะในมาเลเซีย สิงคโปร์ และนิวซีแลนด์เท่านั้น

ข้อแนะนำอุปกรณ์เสริม

1. ชุดวางซ้อน – เหล็กยึด (รุ่น N-SK2) : ชุดเหล็กยึดสำหรับติดตั้งเครื่องอบผ้าแบบซ้อนกันกับเครื่องซักผ้าฝาหน้าของพานาโซนิคที่มีหมายเลขรุ่น NA-V*****

เทปกาว 2 หน้า (2) | สกรู (6) | ตัวยึดผนัง (ขวา) (1) | ตัวยึดผนัง (กลาง) (1) | ตัวยึดผนัง (ซ้าย) (1)

2. ท่อต่อไอเสีย (รุ่น N-FH2) : ออกแบบมาสำหรับการต่อความยาวของท่อไอเสียให้ยาวขึ้น

แหวนยึด (1) | ท่อยืดหยุ่น (1)

ชุดวางซ้อน – เหล็กยึด (รุ่น N-SK2) และท่อต่อไอเสีย – ชนิดผนังทึบ (รุ่น N-FH2) สามารถซื้อได้จากร้านค้าเครื่องใช้ไฟฟ้าในบ้านของคุณ หรือตัวแทนจำหน่ายเครื่องใช้ไฟฟ้าพานาโซนิค


****: ยกเว้นประเทศไทย**

Before Drying

Laundry Preparation

Electrical Requirements

The unit is required to be plugged into a three pin socket that is reliably grounded.
Plug the power cord into the socket.

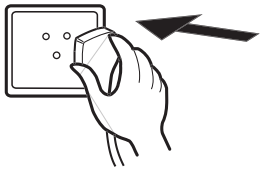

Loading the dryer

It is recommended that items are placed into the dryer one at a time. This ensures they are not tangled which results in uneven drying. When closing the dryer door prior to starting the unit ensures that items are not jammed in the door.





Tips before drying

Prior to loading the dryer check that the items do not have the following symbols anywhere on them. If they do, do not laundry dry these items.



Dry flat



Dry in the shade



Do not laundry dry



Hang to dry



Drip dry

- Check the items to be dried do not have combustible materials or foreign objects within them i.e.: lighters, hair pins, coins.



- Turn items with zippers inside out and fasten buckles.




- Dryer heat may permanently set stains, ensure you check prior to drying that stains are removed
- Separate dark and light colored items as you would do when washing.
- For best results load the dryer with similar fabrics. Place small delicate items in a mesh bag and do not overload the dryer.
- The maximum mass is rated capacity of dry textile material for the dryer and do not overload. The laundry dryer is intended only for drying textile material washed in water.
- Regarding the cleaning of the filter cover, it is recommended to keep it clean after each use, because every time cleaning can reduce the drying time and extend the life of the filter In addition, under normal operation, the service life of the Exhaust filter is 400 cycles, and the service life of the Lint filter is 800 cycles

לפני הייבוש

הכנת הכביסה


דרישות חשמל

היחידה נדרשת להיות מחוברת לשקע תלת פיני המוארק כראוי.
חבר את כבל החשמל לשקע.

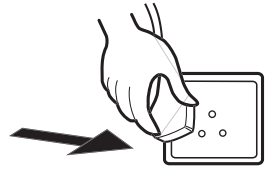

טעינת המייבש

מומלץ להכניס את הפריטים למייבש אחד בכל פעם. כך מבטיחים שהם לא יסתבכו, מה שגורם לייבוש לא אחיד. סגירת דלת המייבש לפני הפעלת היחידה מבטיחה שהפריטים לא נתקעים בדלת.

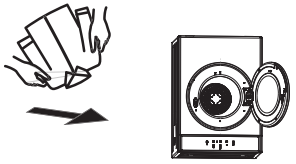

טיפים לפני הייבוש

לפני טעינת המייבש, בדוק שהפריטים אינם נושאים את הסמלים הבאים בכל מקום עליהם. אם כן, אל תייבש אותם במייבש.



שטוח

ייבוש בצל

אין לייבש במייבש




תלייה לייבוש




ייבוש בטפטוף

- בדוק את הפריטים שיש לייבש כדי לוודא שאין בהם חומרים דליקים או חפצים זרים כגון מצתים, סיכות שיער, מטבעות.

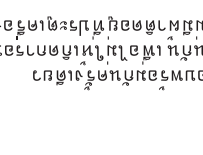

- הפוך פריטים עם רוכסנים כך שהצד הפנימי יהיה החיצוני וסגור אבזמים.

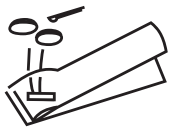

- חום המייבש עלול לגרום לכתמים להישאר לצמיתות, ודא שבדקת לפני הייבוש שהכתמים הוסרו
- הפרד בין בגדים כהים לבהירים כפי שהיית עושה בעת הכביסה.
- לתוצאות הטובות ביותר, טען במייבש בדים דומים. הנח פריטים עדינים קטנים בשקית רשת ואל תעמיס יתר על המידה במייבש.
- המסה המרבית היא קיבולת נקובה של חומר טקסטיל יבש עבור המייבש ואל תעמיס יתר על המידה. מייבש הכביסה מיועד רק לייבוש חומר טקסטיל שנשטף במים.
- בכל הנוגע לניקוי מכסה המסנן, מומלץ לשמור עליו נקי לאחר כל שימוש, מכיוון שכל פעם שמנקים אותו ניתן להפחית את זמן הייבוש ולהאריך את חיי המסנן. בנוסף, בתנאי פעולה רגילים, חיי השירות של מסנן הפליטה הם 400 מחזורים, וחיי השירות של מסנן המוך הם 800 מחזורים.

Control Panel

Control Panel Functions

Power Button

Press this button to power on and the buzzer emits 1 beep or to power off and the buzzer emits 1 beep. When drying operation end, the buzzer emits 8 beeps and the light will automatically turn off after 12 seconds. But please make sure the dryer will turn off when not in use.

Easy Iron

Touch this button to activate the Easy Iron program. The light above the button will come on, indicating that the Easy Iron program has been selected.
When this program is selected, the dryer will add an 8-10 minute air-dry cycle after the set drying program. During this cycle only cool air (no heat) will be generated to help prevent creasing of the items just dried. NOTE: To ensure you get the most out of the Easy Iron function, do not overload the dryer. Remove the dried items from the dryer immediately and hang on coat hangers or fold.

Mode

Press the program button to cycle through the options.

a) **Auto-sensing Dry*:** The dryer will stop working when it detect that the laundry has been dried. Note: The Maximum running time of this program don't exceed 220 min. Certain materials may not be dry enough by the end of the cycle, if this occurs please try a fixed program instead. Not recommended for loads less than 2 Kg.

b) **180min (for 7kg):** Select this program to run for 180 minutes to dry clothes.
220min (for 8kg): Select this program to run for 220 minutes to dry clothes.

c) **120min:** Select this program to run for 120 minutes to dry clothes.

d) **60min:** Select this program to run for 60 minutes to dry clothes.

Temperature Button

Press this button to cycle through the temp options.

a) **High:** On this setting the dryer is working with two sets of heating elements running simultaneously, providing the strongest hot airflow.

b) **Medium:** On this setting the dryer is working with one set of heating elements, providing the medium hot airflow.

c) **Air Dry:** On this setting the heating elements don't work. This function runs with cool air, primarily to air items that require freshening.

Start / Pause

Press this button to start or pause the dryer options.
If the door is opened during operation, close the door and push this button to restart the dryer.
Push “Pause” button to change the program, then push “Start” to restart a new program.

Child Lock

Push “Mode” and “Temperature” at the same time for 3 seconds until “Child Lock” light comes on and the program is locked. All other buttons are locked. Push “Mode” and “Temperature” at the same time for 3 seconds to unlock.
* “Auto-sensing Dry” cycle is the recommended cycle for cotton items.

แผงควบคุม

การทำงานของแผงควบคุม

Power

กดที่ปุ่มนี้เพื่อเปิด/ปิดเครื่องอบผ้า เครื่องจะส่งเสียงบี๊บ 1 ครั้ง เมื่อเริ่มการอบผ้าและเมื่อปิดเครื่องอบผ้า เครื่องจะส่งเสียงบี๊บ 1 ครั้ง เมื่อการอบผ้าสิ้นสุดลง เครื่องจะส่งเสียงบี๊บ 8 ครั้ง และไฟแสดงสถานะจะดับลงโดยอัตโนมัติภายใน 12 วินาที ในกรณีที่ไม่ได้ใช้งานเครื่องอบผ้า ควรปิดเครื่องทุกครั้งเพื่อความปลอดภัย

Easy Iron

กดที่ปุ่มนี้เพื่อเลือกโปรแกรมรีดเรียบ ระบบจะเพิ่มการอบผ้าเย็นอีก 8-10 นาที หลังจากโปรแกรมอบผ้าที่ตั้งไว้ เพื่อลดการยับย่นของเสื้อผ้าที่เพิ่งอบแห้ง ในขั้นตอนนี้จะมีเพียงลมเย็น (ไม่มีความร้อน) เป่าออกมาเท่านั้น เพื่อช่วยลดการยับย่นของเสื้อผ้าที่เพิ่งอบแห้ง ข้อแนะนำ : เพื่อให้ได้ประโยชน์สูงสุดจากฟังก์ชั่นรีดเรียบ ควรอย่าให้เครื่องอบผ้าทำงานหนักเกินไป ควรนำเสื้อผ้าออกจากเครื่องอบผ้าทันทีและแขวนบนไม้แขวนเสื้อหรือพับเก็บ

โหมด

กดปุ่มนี้เพื่อเลือกโปรแกรมการทำงาน

a) **ตรวจจับความแห้งอัตโนมัติ *** : เครื่องจะหยุดทำงานเมื่อตรวจพบว่าเสื้อผ้าแห้งแล้ว ข้อแนะนำ : ระยะเวลาในการทำงานสูงสุดของโปรแกรมนี้ไม่เกิน 220 นาที ไม่เหมาะสำหรับการอบผ้าที่มีปริมาณน้อยกว่า 2 กิโลกรัม ผ้าบางประเภทอาจไม่แห้งสนิทเมื่อสิ้นสุดรอบการทำงาน หากเกิดขึ้นให้ใช้โปรแกรมอื่นแทน

b) **180 นาที (สำหรับ 7 กิโลกรัม) :** เครื่องจะทำงานเป็นเวลา 180 นาที สำหรับการอบผ้าแห้ง

220 นาที (สำหรับ 8 กิโลกรัม) : เครื่องจะทำงานเป็นเวลา 220 นาที สำหรับการอบผ้าแห้ง

c) **120 นาที :** เครื่องจะทำงานเป็นเวลา 120 นาที สำหรับการอบผ้าแห้ง

d) **60 นาที :** เครื่องจะทำงานเป็นเวลา 60 นาที สำหรับการอบผ้าแห้ง

อุณหภูมิ

กดปุ่มนี้เพื่อเลือกอุณหภูมิในการอบผ้า

a) **สูง :** การอบผ้าด้วยอุณหภูมิสูงจะใช้เวลาในการอบผ้าแห้งประมาณ 2 ชั่วโมง

b) **ปานกลาง :** การอบผ้าด้วยอุณหภูมิปานกลางจะใช้เวลาในการอบผ้าแห้งประมาณ 2 ชั่วโมง และเครื่องจะหยุดทำงานหลังจากอบผ้าแห้งแล้วประมาณ 10 นาที

c) **ต่ำ/เย็น :** การอบผ้าด้วยอุณหภูมิต่ำหรือลมเย็นจะใช้เวลาในการอบผ้าแห้งมากกว่าการอบผ้าด้วยอุณหภูมิสูงหรือปานกลาง

Start/Pause

กดปุ่มนี้เพื่อเริ่มต้น/หยุดชั่วคราวการอบผ้า

การเปลี่ยนโปรแกรมการอบผ้าหรือตัวเลือกต่างๆ ในขณะที่เครื่องกำลังทำงานอยู่ ให้กดปุ่มนี้เพื่อหยุดการทำงานชั่วคราว จากนั้นจึงเลือกโปรแกรมใหม่ และกดปุ่มนี้อีกครั้งเพื่อเริ่มการทำงาน


ล็อคเด็ก

กด 'โหมด' และ 'อุณหภูมิ' พร้อมกันค้างไว้ 3 วินาที จนกว่าไฟแสดงสถานะล็อคเด็กจะติดขึ้น และโปรแกรมการทำงานจะถูกล็อค กด 'โหมด' และ 'อุณหภูมิ' พร้อมกันค้างไว้ 3 วินาที เพื่อปลดล็อค


* กรณีเลือกใช้งานโปรแกรมตรวจจับความแห้งอัตโนมัติ ผ้าฝ้ายเป็นโปรแกรมที่แนะนำ

Operation Precaution


Delicate items should be placed into a nylon net bag prior to drying. It is not recommended to dry under wire bras in this unit.

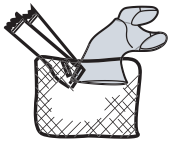


Ensure that foreign objects do not find their way into the dryer. All pockets should be emptied, buttons, buckles and zips fastened. This will also help reduce impact noise when the items hit against the turning drum.

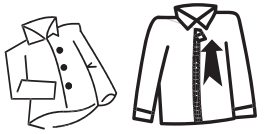


Do not add items into the dryer whilst it is in operation.

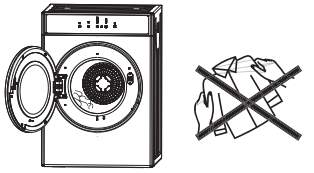

If drying large items such as a blanket, it is recommended that from time to time you open the dryer door, shake the item, place the item hack in the dryer and close the door. This will ensure even drying

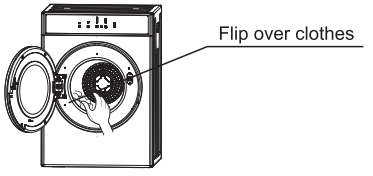

To ensure you get the most out of the Easy Iron function do not overload the dryer and remove the dried items from the dryer immediately and hang on coat hangers. Iron the items if desired.

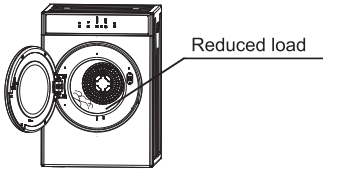



To minimize the risk of fire in a laundry dryer, the following should be observed:


- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a laundry dryer.


Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a laundry dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.


Relating to loading capacity or drum temperature, there are some cases the drying operation will be finished earlier than you selected.

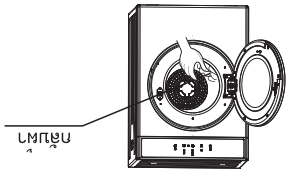

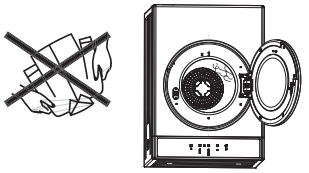

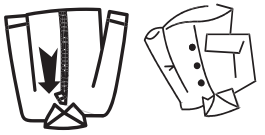

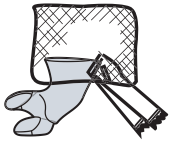

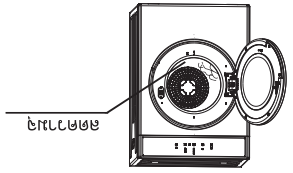

Operation Precaution

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a laundry dryer they should first be washed in hot water with extra detergent this will reduce, but not eliminate, the hazard.

“Easy Iron” function with 10min cool down cycle should be used after the high heat cycles to reduce the temperature of the items. They should not be taken out from the dryer or piled or slacked while hot.

Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a laundry dryer.

Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers(some brands), turpentine, waxes and wax removers.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber, like materials should not be dried in a laundry dryer on a heat setting.

Foam rubber materials can, when heated, produce fire by spontaneous combustion.

- Fabric softeners or similar products should not be used in a laundry dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

- Undergarments that contain metal reinforcements should not be placed in a laundry dryer.

Damage to the laundry dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a laundry dryer.

- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a laundry dryer.

8

ข้อควรระวังในการใช้งาน

หากไม่สามารถหลีกเลี่ยงได้ที่จะต้องนำผ้าที่มีส่วนผสมของน้ำมันพืชหรือน้ำมันสำหรับปรุงอาหาร หรือผ้าที่ปนเปื้อนจากผลิตภัณฑ์ดูแลเส้นผมมาใช้ในเครื่องอบผ้า ควรซักผ้าด้วยน้ำร้อนและผงซักฟอกในปริมาณที่มากขึ้น ซึ่งจะช่วยลดความเสี่ยงลงได้ แต่ไม่สามารถขจัดความเสี่ยงได้ทั้งหมด

ควรใช้ฟังก์ชั่น “Easy Iron” ที่มีรอบการทำความเย็น 10 นาที หลังจากรอบการอบผ้าที่ใช้ความร้อนสูง เพื่อลดอุณหภูมิของผ้า ไม่ควรนำผ้าออกจากเครื่องอบผ้าหรือกองผ้าไว้ในขณะที่ผ้ายังร้อนอยู่

ไม่ควรนำสิ่งของที่เคยผ่านการทำความสะอาด ซัก แช่ หรือเปื้อนน้ำมันเบนซิน/แก๊สโซลีน น้ำยาซักแห้ง หรือสารไวไฟหรือวัตถุระเบิดอื่นๆ มาอบในเครื่องอบผ้า

สารไวไฟที่ใช้กันทั่วไปในบ้านเรือน ได้แก่ อะซีโตน แอลกอฮอล์ น้ำมันเบนซิน/แก๊สโซลีน น้ำมันก๊าด น้ำยาขจัดคราบ (บางยี่ห้อ) น้ำมันสน ขี้ผึ้ง และน้ำยาขจัดขี้ผึ้ง

- วัสดุที่มีโฟมยาง (หรือที่เรียกว่าโฟมลาเท็กซ์) หรือยางที่มีพื้นผิวคล้ายกัน เช่น วัสดุต่างๆ ไม่ควรนำมาอบในเครื่องอบผ้าที่ตั้งความร้อนไว้

วัสดุที่มีโฟมยางเมื่อได้รับความร้อนจะสามารถก่อให้เกิดไฟไหม้ได้เองจากการลุกไหม้ด้วยตัวเอง

- ไม่ควรใช้น้ำยาปรับผ้านุ่มหรือผลิตภัณฑ์ที่คล้ายกันในเครื่องอบผ้าเพื่อขจัดผลของไฟฟ้าสถิต เว้นแต่จะมีการแนะนำวิธีการนี้โดยเฉพาะจากผู้ผลิตน้ำยาปรับผ้านุ่มหรือผลิตภัณฑ์

- ไม่ควรนำชุดชั้นในที่มีโครงโลหะมาอบในเครื่องอบผ้า

ความเสียหายต่อเครื่องอบผ้าอาจเกิดขึ้นได้หากโครงโลหะหลุดออกมาระหว่างการอบผ้า หากมีให้ใช้ที่ตากผ้าสำหรับสิ่งของเหล่านี้

- ไม่ควรนำวัสดุพลาสติก เช่น หมวกคลุมอาบน้ำหรือผ้าอ้อมกันน้ำของเด็กมาอบในเครื่องอบผ้า

- ไม่ควรนำสิ่งของที่มีด้านหลังเป็นยาง เสื้อผ้าที่ติดแผ่นโฟมยาง หมอน รองเท้าบูท และรองเท้าเทนนิสที่เคลือบยางมาอบในเครื่องอบผ้า

Installation Instruction

Installation Instructions

Place the dryer in a dry well ventilated area. It should be positioned away from heat and direct sunlight.

If the dryer is not wall mounted, it must be placed on firm horizontal ground. Do not place the dryer on carpet as this will block the intake. There should be at least 15cm between the dryer and the walls.

The dryer comes with fixed legs that need to be assembled to ensure stability.

If the dryer is rack mounted. A secure bracket is required to ensure stability and prevent vibration. At least 15cm between the dryer and walls is required(The bracket is not included).

Wall Mounting Instructions

1. Determine dryer position on wall and mark required bracket position.

* A minimum 50mm is needed between the top of the dryer and the ceiling for ease of installation.

* If mounting above a washing machine, allow sufficient room to open the lid of the washer.

Tools required		
Tools & parts required for Plaster/ wooden wall	Drill & 3mm Bit	1
	Philips Head Screw Driver	1
	Wood Screws, Φ12 x 50mm Timber Screws	4
	Helper to lift dryer onto wall	1

Wall Mounting Kit Includes			
Description	Hanging brackets		2
	Plastic Spacers		2
	Exhaust connector		1
	25mm Long Screws		8
	12mm Long Screws		4
	20mm Long Screws		1

2. Fix the wall hanging brackets (2 supplied) to the wall securely (eg. into the stud.) Fit a timber slat between the studs to mount the brackets onto if the stud position is too wide.

Note:
* Please make sure no electricity behind the screw position on the wall.
* Ensure the wall strength allow for this mounting installation.

ติดตั้งเครื่องอบผ้า

คำแนะนำการติดตั้ง

1. กำหนดตำแหน่งที่ติดตั้งบนผนังและทำเครื่องหมายตำแหน่งที่ต้องการติดตั้งขาแขวน
* ต้องมีระยะห่างอย่างน้อย 50 มม. ระหว่างด้านบนของเครื่องอบผ้ากับเพดานเพื่อให้ติดตั้งได้ง่าย
* หากติดตั้งเหนือเครื่องซักผ้า ต้องมีพื้นที่เพียงพอสำหรับเปิดฝาเครื่องซักผ้าได้

ชิ้นส่วนที่จำเป็นสำหรับการติดตั้ง		
อุปกรณ์ที่จำเป็นสำหรับการติดตั้งบนผนังปูนหรือไม้	ไขควงปากแฉก 3 มม.	1
	ไขควงปากแฉก	1
	สกรูไม้ขนาด 12x50 มม. จำนวน 4 ตัว	4
	ผู้ช่วยยกเครื่องอบผ้าขึ้นติดผนัง	1

ชิ้นส่วนที่มาพร้อมกับขาแขวนผนัง		
ขาแขวนผนัง		2
พลาสติกกันกดสกรู		2
ท่อระบายอากาศ		1
สกรูยาว 25 มม.		8
สกรูยาว 12 มม.		4
สกรูยาว 20 มม.		1

2. ยึดขาแขวน (2ชิ้น) กับผนังด้วยสกรูที่มาพร้อมกับขาแขวนผนัง ยึดขาแขวนกับโครงไม้ของผนังหรือโครงไม้ที่ยึดกับผนังปูน

หมายเหตุ :
* ตรวจสอบให้แน่ใจว่าไม่มีสายไฟฟ้าอยู่ด้านหลังตำแหน่งที่ยึดสกรูบนผนัง
* ตรวจสอบความแข็งแรงของผนังก่อนการติดตั้งเพื่อให้แน่ใจว่าผนังสามารถรับน้ำหนักได้

ขาปรับ

ปรับขาปรับทั้งสองข้างให้ได้ระดับเท่ากันและเครื่องอบผ้าตั้งได้มั่นคง ขาปรับสามารถปรับได้ 15 ซม. ระยะห่างระหว่างเครื่องอบผ้ากับผนังควรมีอย่างน้อย 15ซม.

Installation Instruction

3. To install the hanging hook to timber, start at Fig 2.
4. Align hanging hooks and fasten screws tightly.
5. Install the exhaust connector. Rotate the exhaust connector clockwise to fix it on the connector base.(as per Fig.3).
6. Then install the 20mm long screw to fix it.
7. **For Normal mounting:**
   Using 4 x 12mm screws (provided) to fix the 2 spacers as per Fig 4.
   For upside down mounting:
   Remove the existing 4 screws and using 4 x 12mm screws (provided) to fix the 2 spacers as per Fig.5
8. With assistance, mount dryer on wall bracket
   See Fig.4 Fig.5 final picture

Fig. 3

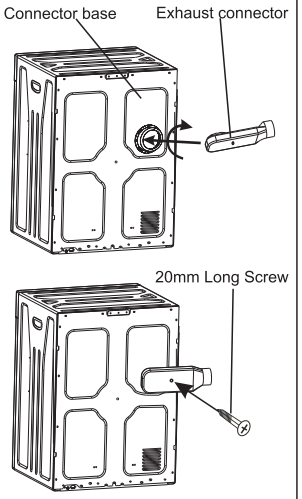


Fig.2

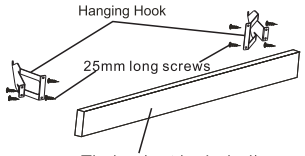


Fig.4 **Normal mounting**


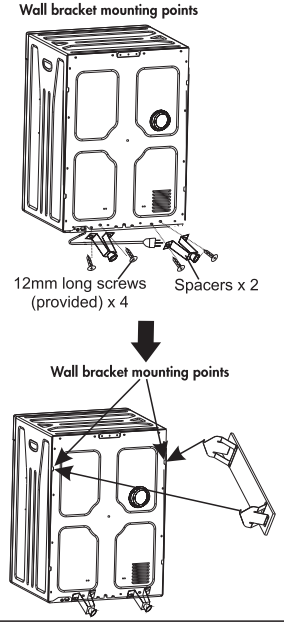


Fig.5 **For Upside down mounting**

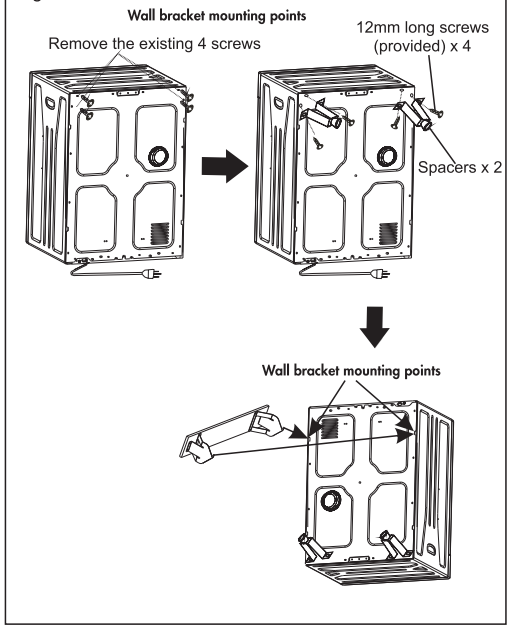

3. ในการติดตั้งตะขอแขวนกับไม้ ให้เริ่มที่รูปที่ 2.
4. จัดตะขอแขวนให้ตรงกันและขันสกรูให้แน่น
5. ติดตั้งท่อต่อไอเสีย หมุนท่อต่อไอเสียตามเข็มนาฬิกาเพื่อยึดกับฐานต่อ (ตามรูปที่ 3)
6. ติดตั้งสกรูยาว 20 มม. ให้แน่น
7. ติดตั้งแบบปกติ: ใช้สกรู (ให้มา) ขนาด 4x12 มม. จำนวน 4 ตัว ยึดตัวรองทั้ง 2 ตัวตามรูปที่ 4
   ติดตั้งแบบคว่ำลง: ถอดสกรูเดิม 4 ตัวออก แล้วใช้สกรู 4x12 มม. (ให้มา) ยึดตัวรองทั้ง 2 ตัวตามรูปที่ 5
8. ขอความช่วยเหลือในการติดตั้งเครื่องอบผ้าบนขาแขวนผนัง ดูรูปที่ 4 และ 5

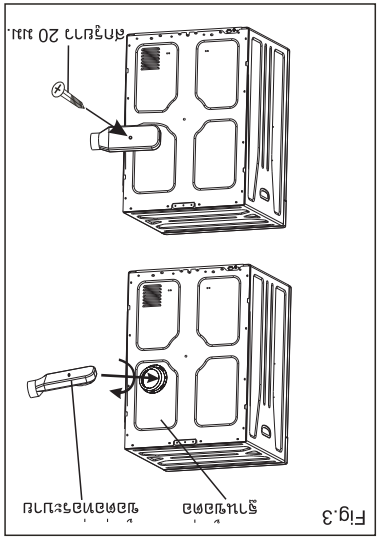


Fig.3

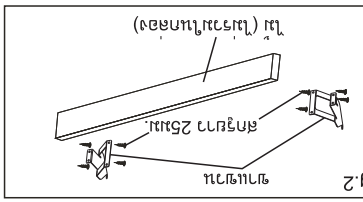


Fig.2

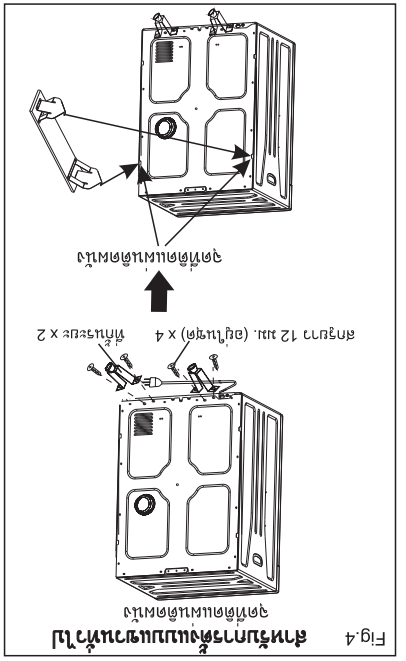


Fig.4 **ไม่ได้ติดตั้งแบบคว่ำลงตามรูปที่ 4**

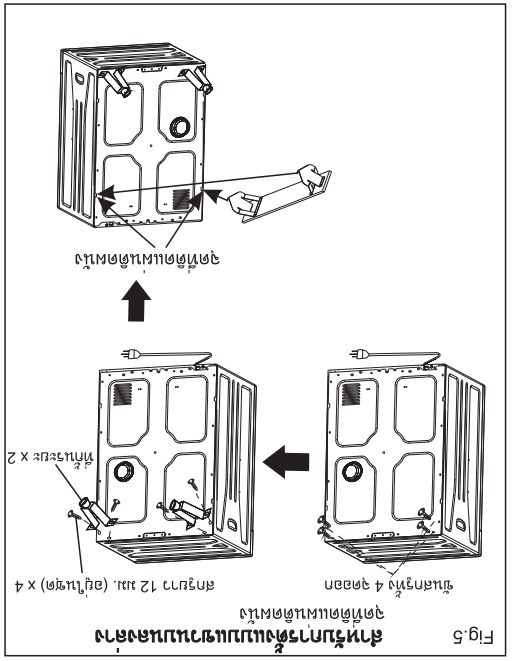



Fig.5 **ติดตั้งแบบคว่ำลงตามรูปที่ 5**

Getting Started: Installation(Cont.)

Upside down installation


The dryer can be installed upside down, if this suits your setup better. To prepare the unit for upside down installation, proceed as follows:


1. Place the dryer upside down on a firm horizontal surface, such as on a table or benchtop (Fig. 6).
2. Take the additional printed control panel from the wall-mounting kit and place it over the existing panel (Fig. 7).
3. Remove the four legs from the dryer
4. Install 8 pcs M6 Short Screws into the 8 holes on the cabinet bottom.(Fig. 8)
5. The dryer is now ready for upside down installation (Fig. 9).

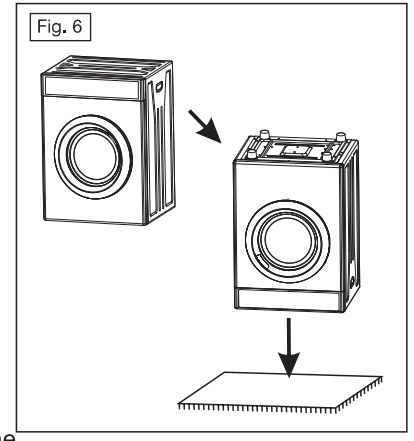


*** This upside down setting is recommended to combine with Wall mounting installation or in any case which the dryer is over height from human using requirement.**
Do NOT operate the dryer on top of a washing machine without the use of a suitable stacking kit (was not provided from Panasonic). Failure to do so could cause injury.

*** This operation is only available for Malaysia, Singapore and New Zealand.**

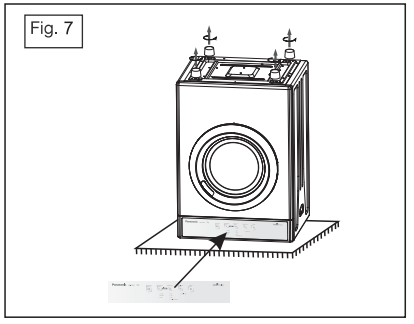

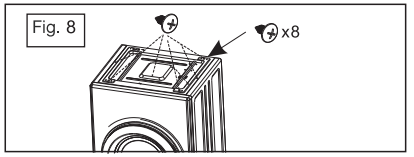

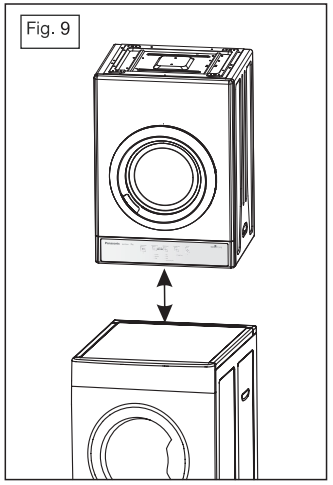


การติดตั้งเครื่องอบผ้า (ต่อ)

การติดตั้งแบบคว่ำเครื่องลง


หากการติดตั้งเครื่องอบผ้าแบบคว่ำเครื่องลงเหมาะกับการใช้งานของคุณมากกว่า ให้ปฏิบัติตามขั้นตอนต่อไปนี้เพื่อเตรียมเครื่องสำหรับการติดตั้งแบบคว่ำเครื่องลง

1. วางเครื่องอบผ้าคว่ำลงบนพื้นผิวแนวนอนที่มั่นคง เช่น โต๊ะ หรือ เคาน์เตอร์ (ดูรูปที่ 6)
2. นำแผงควบคุมที่พิมพ์เพิ่มเติมออกจากชุดติดตั้งแบบแขวนผนัง และวางทับบนแผงที่มีอยู่ (ดูรูปที่ 7)
3. ถอดขาทั้ง 4 ข้างของเครื่องอบผ้าออก (ดูรูปที่ 7)
4. ขันสกรูสั้น M6 จำนวน 8 ตัว เข้ากับรูทั้ง 8 รูที่ก้นตู้ (ดูรูปที่ 8)
5. ติดตั้งเครื่องอบผ้าคว่ำลงเสร็จเรียบร้อย (ดูรูปที่ 9)

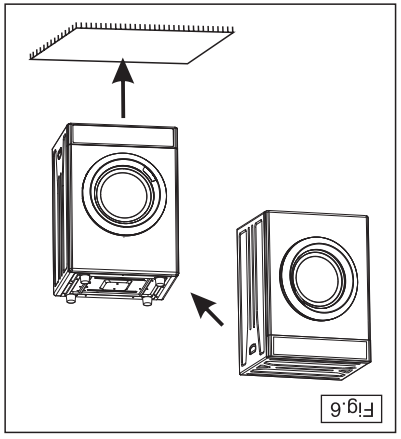

*** การตั้งค่าการติดตั้งเครื่องอบผ้าคว่ำลงนี้แนะนำให้ใช้ร่วมกับการติดตั้งแบบแขวนผนัง หรือในกรณีที่เครื่องอบผ้าสูงเกินไปสำหรับการใช้งานของมนุษย์ ห้ามใช้งานเครื่องอบผ้าบนเครื่องซักผ้าโดยไม่ใช้ชุดวางซ้อนที่เหมาะสม (ไม่ได้จัดมาให้จาก Panasonic) มิฉะนั้นอาจเกิดการบาดเจ็บได้**

*** การทำงานนี้มีให้ใช้ได้สำหรับมาเลเซีย สิงคโปร์ และนิวซีแลนด์เท่านั้น**

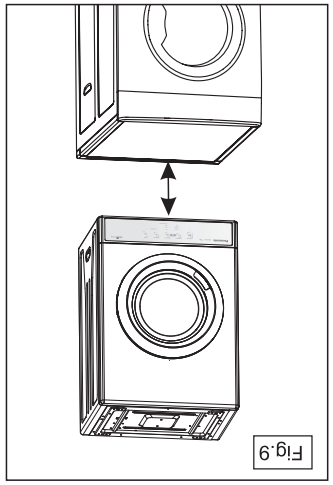

Maintenance

Cleaning the Lint Filter

Please unplug the power cord prior to any cleaning. The lint filter must be in place whenever drying. It must be cleaned before each use.

1. Removing the filters

Remove by pulling outwards with fingers, inserted into the four holes around the exhaust vent shroud. The filter is in 3 parts: Exhaust vent shroud, lint filter and exhaust filter (as shown in figure1)

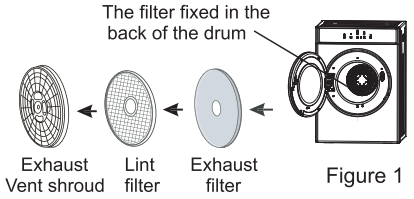


Figure 1

2. Cleaning the filter

Separate "exhaust vent shroud", "lint filter" and "exhaust filter". Clean the lint on the lint filter and exhaust filter with a soft brush or vacuum cleaner. Do not damage the filters(as show in figure 2).




Figure 2

3. Re-installing the filter

After cleaning, assemble in the sequence of "exhaust filter - lint filter- exhaust vent shroud", align the recesses in the center with the projection in the center of the drum. Make sure that it is firmly inserted (as shown in figure 3).





Figure 3

Cleaning of the Air Intake Filter

The filter should be cleaned once a month.

Remove by pulling outwards holding the upper and lower ends of the air intake shroud. Remove the filter inside the shroud and clean it with a soft brush. Reassemble and install as before.

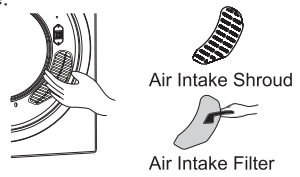

Slightly push upwards with your thumb until the latch hook disconnects, then remove.

Cleaning the interior & exterior of the Dryer


Do not wash directly with water.

Do not use thinner, gasolene or alcohol.

Do not use any type of spray cleaner when cleaning the interior. If dryer drum becomes stained, clean the drum with a damp cloth.

Remove any residue before drying the next load.

Clean cabinet with mild soap and water. Do not use harsh or abrasive cleaners, this could damage the dryer.

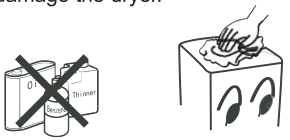



WARNING: Regularly clean the lint trap


CAUTION! HOT SURFACE


- Do not touch the intake during the drying cycle due to high temperatures


READ THE INSTRUCTIONS

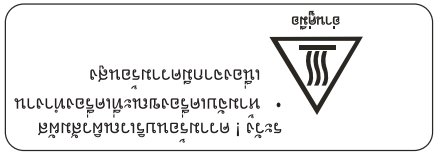



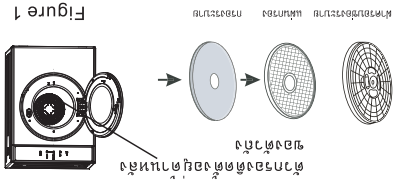

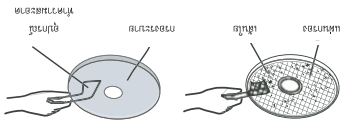

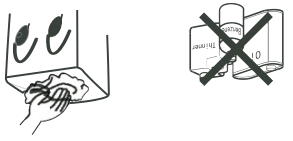

การแก้ไขปัญหา และข้อมูลจำเพาะ

ทบทวนคำแนะนำในหน้านี้ก่อนติดต่อศูนย์บริการ

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ปัญหา
เปิดประตูไม่ได้	• ประตูปิดอยู่หรือไม่ • ติดสายไฟหรือไม่ • ไม่มีการจ่ายไฟฟ้า	• ปิดประตู • เสียบปลั๊กไฟให้แน่น • ตรวจสอบไฟฟ้า
เครื่องอบผ้าอบไม่แห้ง	• ตัวกรองด้านหน้าและด้านหลังอุดตัน • มีเสื้อผ้ามากเกินไปในเครื่อง • มีการใส่เสื้อผ้าเข้าไปในระหว่างเครื่องกำลังทำงาน • มีผ้าพันกันขณะอบผ้า • เครื่องอบผ้าติดตั้งอยู่ในพื้นที่เล็กและอากาศถ่ายเทไม่สะดวก • ตั้งค่าเครื่องอบไปที่ไม่มีรอยยับ	• ทำความสะอาดตัวกรอง • ลดจำนวนผ้าลง • ให้ตั้งค่าเริ่มต้นทำงานใหม่อีกครั้ง • คลี่ผ้าที่พันกันและเริ่มทำงานใหม่อีกครั้ง • ติดตั้งอยู่ในพื้นที่อากาศถ่ายเทได้สะดวก • ให้เลือกใช้โปรแกรม ‘ อุ่น’ หรือ ‘ร้อน’แทน
เครื่องอบผ้าไม่ทำงาน	• ไฟฟ้าดับ • เสียบปลั๊กไฟแน่นหรือไม่ • ประตูปิดหรือไม่	• ลองอีกครั้งเมื่อมีกระแสไฟฟ้า • เสียบปลั๊กไฟให้แน่น • ปิดประตูให้สนิท
ประตูเปิดและมีเสียงเตือน (ไฟกระพริบ และเสียงเตือน 12 ครั้ง)	• ประตูปิดหรือไม่	• ปิดประตูและกดปุ่ม “Start/Pause” • ยกเลิกล็อกป้องกันเด็ก (กด ‘โปรแกรม’ และ ‘อุณหภูมิ’ พร้อมกัน 3 วินาที) และกดปุ่ม “Start/Pause”

ข้อมูลจำเพาะ

รุ่น	NH-E70JA1	NH-E80JA1
ความจุในการอบ	7 กิโลกรัม	8 กิโลกรัม
กำลังไฟตามพิกัด	220 โวลต์ 50 เฮิรตซ์	220 โวลต์ 50 เฮิรตซ์
กำลังไฟฟ้าตามพิกัด	1700 วัตต์	1900 วัตต์
น้ำหนักของเครื่อง	27.5 กิโลกรัม	29 กิโลกรัม
ขนาดของเครื่อง	600x565x850 มม.	600x595x850 มม.

Panasonic Corporation
http://www.panasonic.com

Troubleshooting, Specification

Review the following pages before calling for service.

Problem	Possible Cause	What to do
Drum does not turn	● Is the door closed? ● Is the power cord inserted? ● Does the receptacle have power?	● Close the door. ● Insert the power cord firmly. ● Check the power cord receptacle.
The laundry is not thoroughly dried	● Are the front and back filters clogged? ● Is there too much laundry in the dryer? ● Have items been added whilst the dryer is in operation? ● Has the laundry become twisted whilst drying? ● Has the dryer been placed in a small and badly ventilated area? ● Have you set the dryer to Air Dry?	● Clean the filter. ● Reduce the amount in the dryer. ● Re-dry the items again. ● Untwist the items and re-dry. ● Place the dryer in a well-ventedarea. ● Try using 'Medium' or 'High' setting instead.
Dryer does not start	● Is there a power failure? ● Is the power cord inserted firmly? ● Is the door closed?	● Try again when there is power. ● Insert the power cord firmly.
Door opening alarm (all LED flash and 12 beep sounds)	● Is the door closed?	● Close the door and push “Start / Pause” button. Please unlock and push “Start / Pause” in case of Child Lock mode.

Dryer Technical Specifications

Model	NH-E70JA1	NH-E80JA1
Drying Capacity	7.0 kg	8.0 kg
Voltage	220~240V 50/60Hz	220~240V 50/60Hz
Rated Input	1700 W	1900 W
Net Weight	27.5kg	29kg
Dimensions	600x565x850mm	600x595x850mm

Panasonic Corporation
http://www.panasonic.com

Panasonic Corporation
http://www.panasonic.com

Panasonic Corporation
http://www.panasonic.com

14