Panasonic

CD Stereo System

Model No. SC-PMX152
SC-PMX150

- This guide describes how to connect this system to a network while starting up and operating the Panasonic Music Streaming app.
- The operations and on-screen display items, etc. of the app "Panasonic Music Streaming" are subject to change.
  For the latest information, visit
  http://panasonic.jp/support/global/cs/audio/app/
  (This site is in English only.)

Wi-Fi® QUICK SETUP GUIDE

Thank you for purchasing this product.
Please read these instructions carefully before using this product,
and save this manual for future use.

Illustrations shown are based on model SC-PMX152.

TQZJ767-1
F0117YM1037

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
The Wi-Fi Protected Setup™ Logo is a certification mark of Wi-Fi Alliance®.
"Wi-Fi®" is a registered trademark of Wi-Fi Alliance®.
"Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.
Google Play and Android are trademarks of Google Inc.
App Store is a service mark of Apple Inc.
All other trademarks are trademarks of their respective owners.

Wi-Fi CERTIFIED

1 Download the app

Download the free "Panasonic Music Streaming" app from the store on your smartphone/tablet.

Music Stream

iOS :
App Store

Android :
Google Play™

2 Open the app and follow the on-screen instructions

Select PMX152 or PMX150.

Could not find AllPlay speakers.
Add an AllPlay speaker to the network?

Add

Skip settings

e.g.

Selecting a speaker
Select the AllPlay speaker to add to the wireless network.

PMX152

Connect the AC mains lead.

NOTE:
Do not connect the LAN cable.

Are you ready?   PMX152

If you are connecting with wired network, this setting is not required. Please tap "Skip settings".
Make sure your phone is connected to your wireless network.
And check PMX152 is plugged into the power socket.

← Back   Skip settings
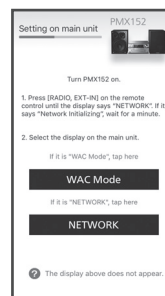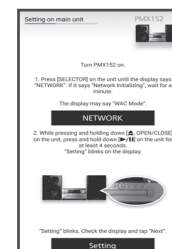
NEXT
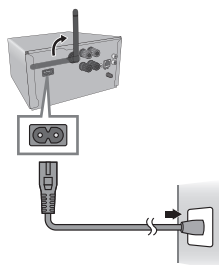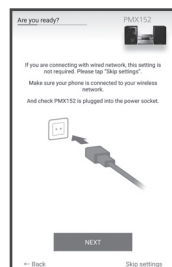
Turn on the unit.
Perform network setup for the unit by following the steps on app screen.

- Depending on the screen size of your smartphone/tablet, you may need to scroll to the bottom for any remaining steps.
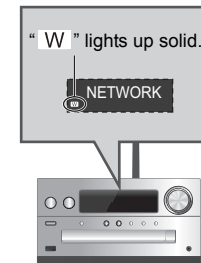

iOS

Setting on main unit   PMX152

Turn PMX152 on.

1. Press [RADIO, EXT-IN] on the remote control until the display says "NETWORK". If it says "Network Initializing", wait for a minute.

2. Select the display on the main unit.

   If it is "WAC Mode", tap here

   WAC Mode

   If it is "NETWORK", tap here

   NETWORK

? The display above does not appear.

Android

Setting on main unit   PMX152

Turn PMX152 on.

1. Press [SELECTOR] on the unit until the display says "NETWORK". If it says "Network Initializing", wait for a minute.

   The display may say "WAC Mode".

   NETWORK

2. While pressing and holding down [▲, OPEN/CLOSE] on the unit, press and hold down [▶/‖] on the unit for at least 4 seconds.
   "Setting" blinks on the display.

   "Setting" blinks. Check the display and tap "Next".

   Setting

3 After a short wait ...you're connected!

" W " lights up solid.

NETWORK

After a short wait, your smartphone/tablet should be automatically reconnected to your Wi-Fi network. In case you are not reconnected automatically, please re-select your Wi-Fi network from the settings / Wi-Fi settings menu on your device.

Further Support

For more information and other network setting methods, refer to the Operating Instructions. If you require further help, please visit http://panasonic.jp/ support/global/cs/audio/ (This site is in English only.)