Maintenance

Appliance

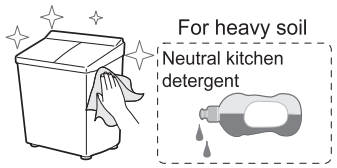



- Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.

Lint filter

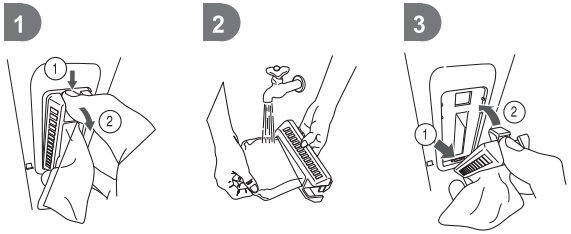

Check the following before calling for service:

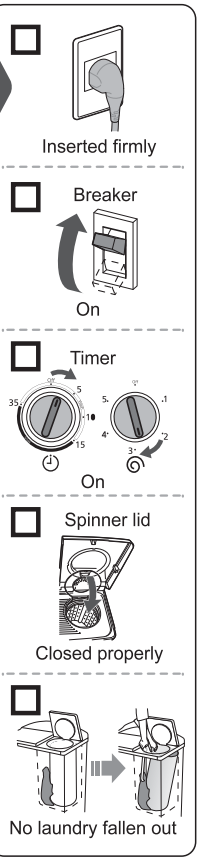

Troubleshooting

If the laundry or button is stuck into the pulsator:

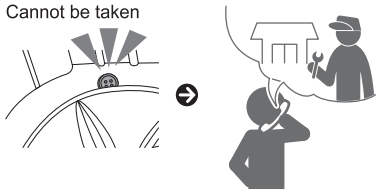

If the laundry falling from the spin tub:

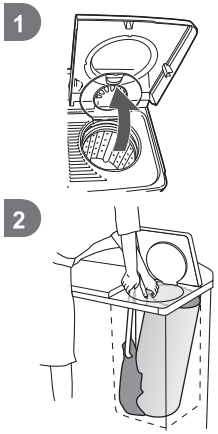

Unable to spin

Spin stops when the motor-protective device is activated. Restart after 30 minutes.

Requests



Too much detergent | Cover made of vinyl chloride | Too much water | Sprays

Operating & Installation Instructions

Panasonic

Twin-Tub Electric Washing Machine (Household use)

Model No. **NA-W13XG2BPH**

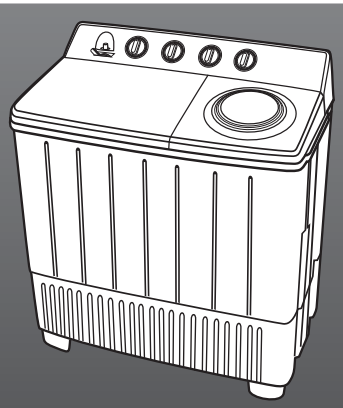

Contents

Safety Precautions	2
Part Names	4
Operation Panel	4
Accessories	4
Installation	5
Laundry Preparation and Check	5
Washing Process	6
Maintenance	8
Troubleshooting	8
Requests	8

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

CERTIFIED Product Safety BPS License No.Q-5903

Distributed by
Panasonic Manufacturing Philippines Corporation
Ortigas Avenue Extension, Taytay, Rizal, Philippines

Specifications

Model	NA-W13XG2BPH
Destination	Philippines
Rated voltage	230 V
Rated frequency	60 Hz
Rated power consumption	710W (Wash 500 W, Spin 210 W)
Maximum mass of dry cloth (Wash)	13 kg
Maximum mass of dry cloth (Spin)	8 kg
Standard water amount	105 L
Maximum inlet water pressure	300 kPa
Product dimensions	957 mm(W) × 549 mm(D) × 1045 mm(H)
Product weight	32 kg

Importer	Panasonic Manufacturing Philippines Corporation

Panasonic Corporation
https://www.panasonic.com
© Panasonic Corporation 2020

• A1120-11223
Printed in China
02-2024

Safety Precautions

⚠WARNING May cause serious injury or death.

Children must not use it alone

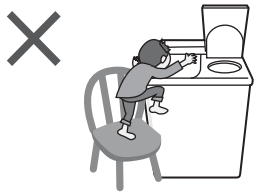

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Do not touch the spin tub until it stops

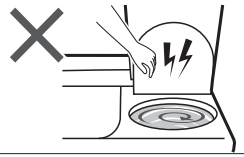

If the spin tub does not stop within 15 sec:

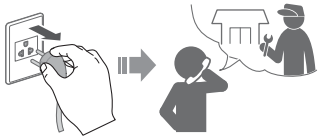

Do not touch it with wet hands



Do not hold or pull on the cord



Fully insert it



Do not use

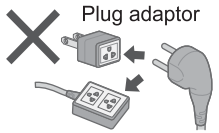

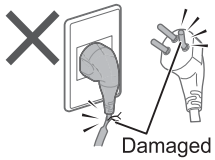

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Securely insert the ground prong. Ask the electrical technician for a new socket

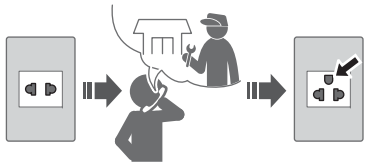

In case of failure or damaged power cord, stop use and ask the electrical technician

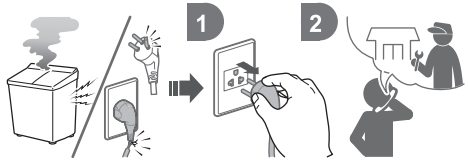

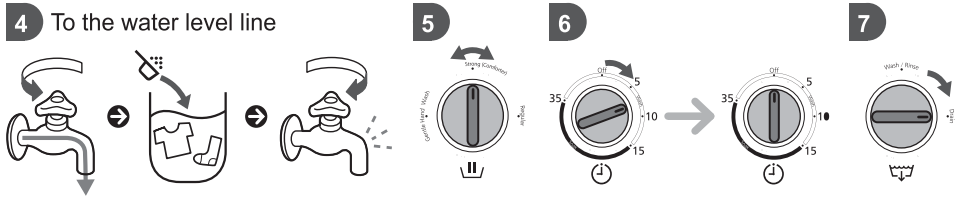

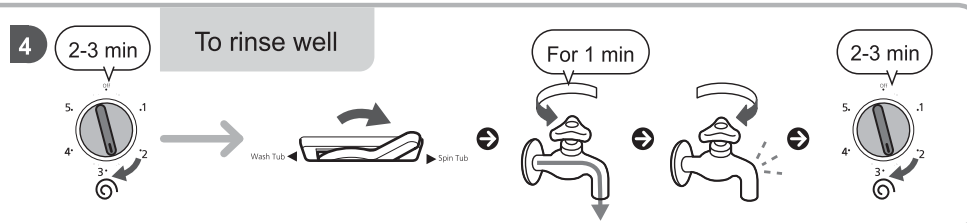

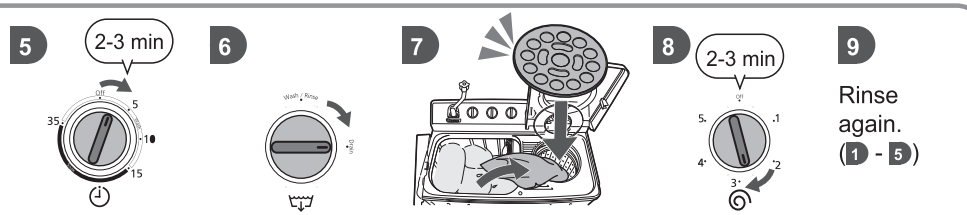

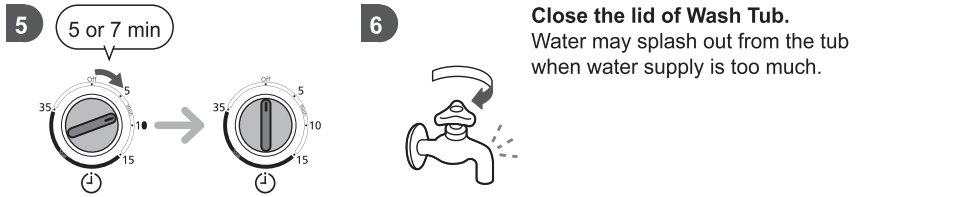

Washing Process

Wash

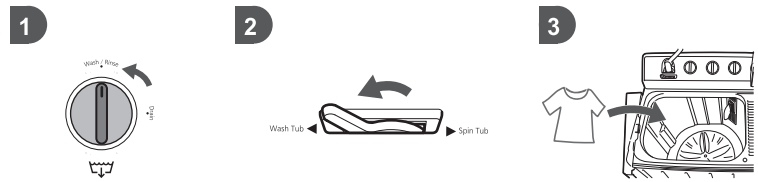

Spin

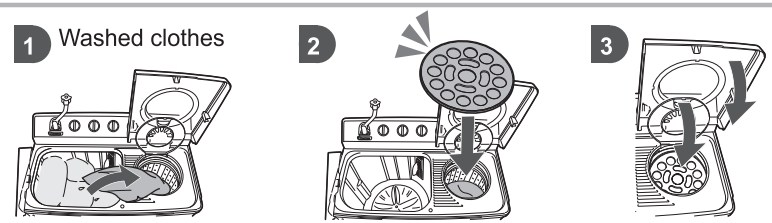

Rinse

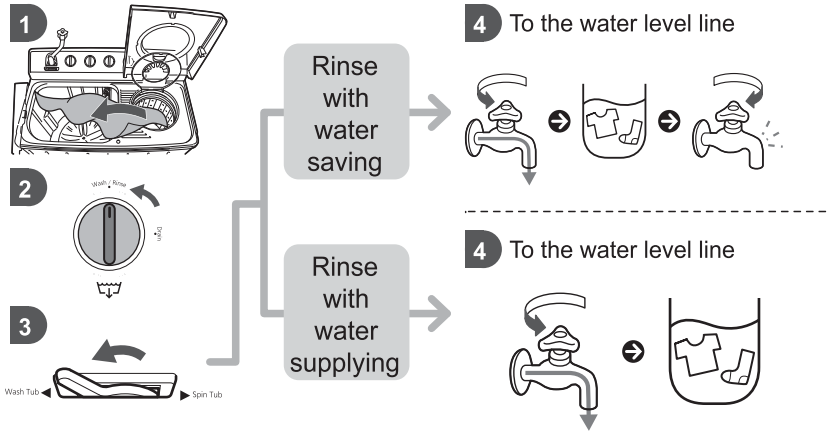

Spin

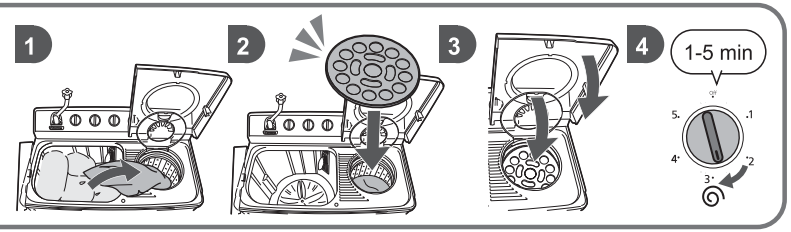

Final Step

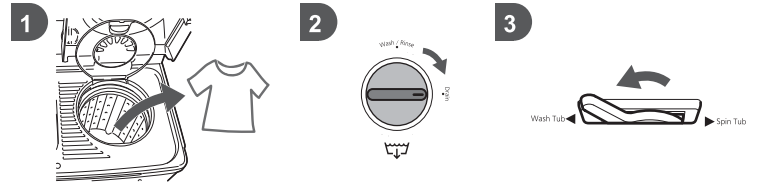

Use a socket appropriate for this appliance



The plug shape, socket shape and rating requirement vary with the region.

Accumulated dust may cause fire

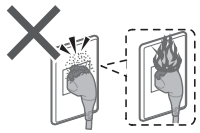

Wipe the power plug periodically



Keep away from flammable materials



Do not disassemble, repair or modify it by yourself



⚠CAUTION May cause injury or property damage.

Be careful not to get your fingers caught

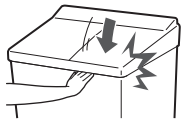

Do not spin waterproof items

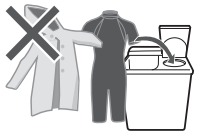

Raincoats, wet suits, etc.

Do not use hot water



Do not climb on the appliance



For machine-washable items only

This appliance is intended to be used in household.
This appliance is not intended to be used in applications such as:

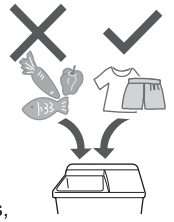

- staff kitchen areas in shops, offices and other working environments;
- farm houses (excluding clothes);
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

Use new hose-sets



New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

Do not obstruct

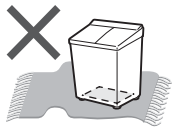

Do not obstruct the openings of the bottom face with carpet, etc.

Handle the appliance carefully



- Unplug and cut off the power.
- Secure parts that can easily come off.

Part Names

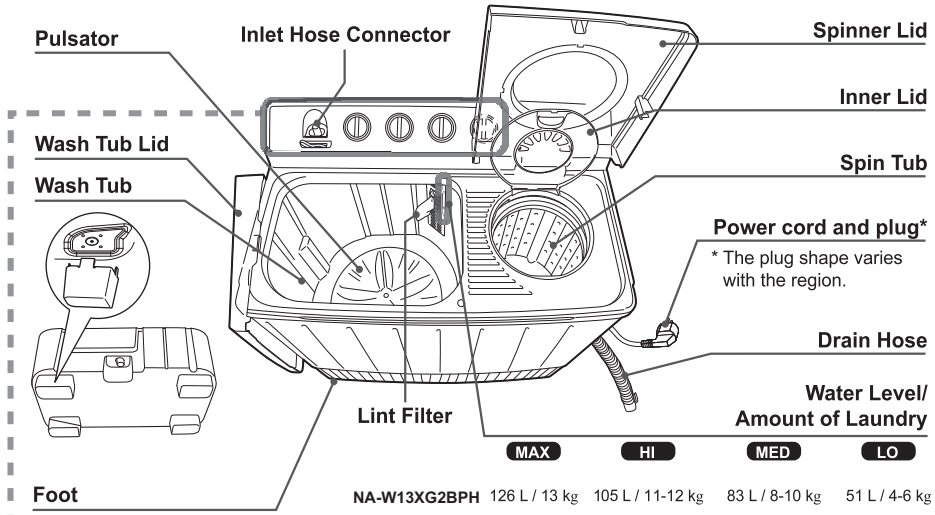

	MAX	HI	MED	LO
NA-W13XG2BPH	126 L / 13 kg	105 L / 11-12 kg	83 L / 8-10 kg	51 L / 4-6 kg

Operation Panel

Water Supply Selector
- Wash Tub (LEFT)
- Spin Tub (RIGHT)

Wash Selector
- Regular
- Strong / Comforter
- Gentle

Spin Timer

To set spin time up to 5 min.

Back

* To set the timer to 1 min or less : Beyond the 2 min

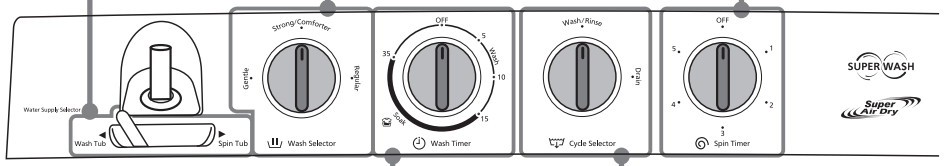

Wash Timer

* To set the timer to 2 min or less :

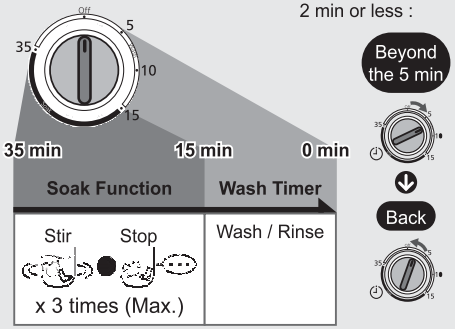

Cycle Selector
- Wash / Rinse
- Drain

Accessories

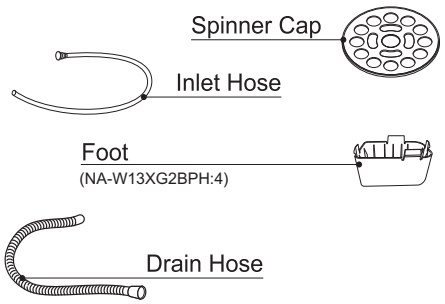

Installation

Install the appliance

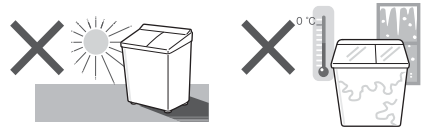

Remove all packing cushions before use.

Connect inlet hose and power plug

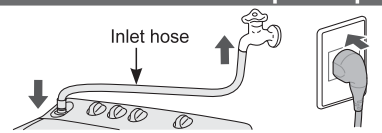

Put down the drain hose

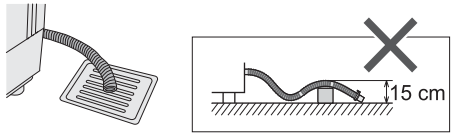

Change the Position of the Drain Hose

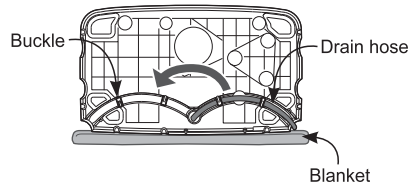

Laundry Preparation and Check

Pre-laundry check



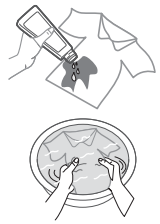

- Pretreatments for heavily stains

Wash separately

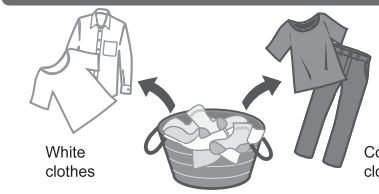

Use laundry nets for delicates and small items

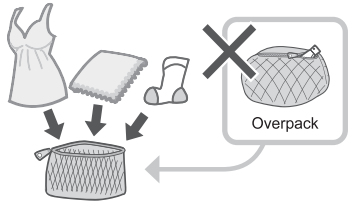

Spinner Cap Installation

