

Flexible Combination

Various combination is possible by choosing socket outlets, data outlets, telephone modular from Panasonic wiring accessories.

Floor Outlet Aluminium BS-TYPE




Floor Outlet Aluminium A-TYPE




Dimension

Aluminium BS-TYPE

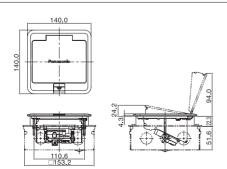

Aluminium A-TYPE

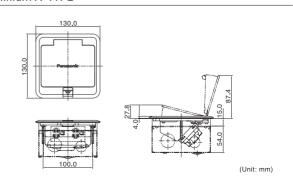

Installation Procedure

1. Embeding the Outlet Box


(1) After the completion of plumbing, install the cover unit with M4 screws. *M4 screws included.


2. Making an Inlet for Cable

- (1) Hit at the center of the box protector with hammer to make a hole.
- (2) Trim concrete along the rim of the box protector.
- (3) When install the Floor Outlet, loosen cover unit screws to remove the box protector.

3. Install the Floor Outlet to the Outlet Box

- (1) Put the Floor Outlet into the Outlet Box by sliding the lever. Fasten the setting screws after opening the cover. (Adjustable degree of product is 6 degrees)
- (2) Check direction and position of the Floor Outlet.



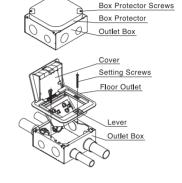

Floor Box-3 Compartments for concrete floor

DUMF6200LT-1

The three-compartment floor box for British Standard power and data outlets, flexible combination for various applications

SIMPLE LID REVERSING


Quick and easy releasing lid by moving it to the unlock position

OPTIONAL DEVICES DIRECTION

Power and Data devices can be adjusted to 4 directions (for single devices)

6 DEVICES MOUNTABLE


Miltiple combination of Power and Data up to 6 modules maximum

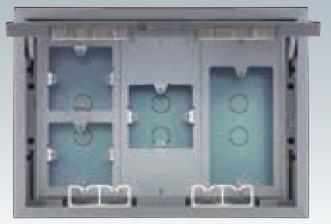



IP2X

Box Protector

Dimension

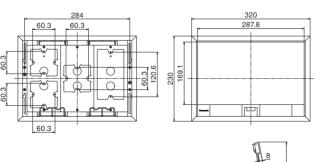





Installation

How To Mount

After putting the concrete on, make the hole to install the product.

(1) Take the box protector off

(2) Insert the Floor Outlet Unit

