


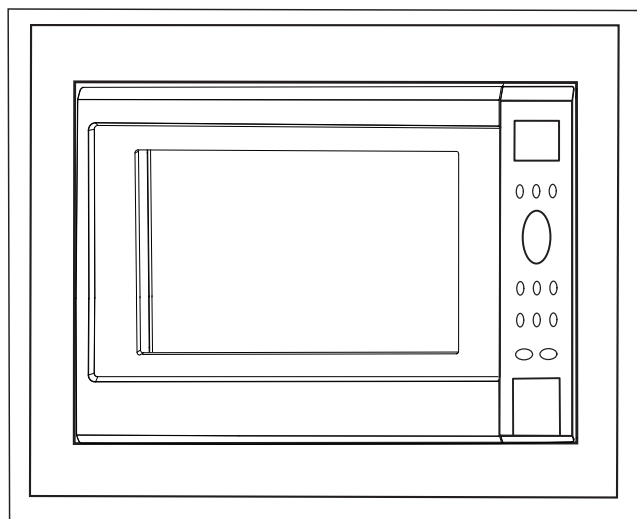

# Installation Instructions

|                         | Trim kit               |
|-------------------------|------------------------|
| 24" cabinet<br>(596 mm) | TK712SSQP<br>TK712SWQP |

© Panasonic Appliances Microwave Oven (Shanghai) Co., Ltd. 2012

## Contents

|                                           |       |
|-------------------------------------------|-------|
| Attention .....                           | P1    |
| Step 1. Unpacking list.....               | P2    |
| Step 2. Feature diagram.....              | P3    |
| Step 3. Cabinet Preparation .....         | P4    |
| Step 4. Microwave Oven Installation ..... | P5    |
| Step 5. Cabinet Installation.....         | P6-7  |
| Step 6. Finishing Installation.....       | P8-10 |

1. This trim kit can be installed into a cabinet. The cabinet opening must have the following internal dimensions as shown in **fig 1, p 4**.

A vent is required at the rear of the cabinet. It should travel the full height of the cabinet and the cabinet should not be obstructed. Minimum dimension of vent: 45 mm x 600 mm (**fig 1, p 4**).

### MINIMUM INSTALLATION HEIGHT 850 MM.

2. Electrical Connections The appliance is supplied with a mains plug attached and should only be connected into an earthed socket that has been installed according to the relevant safety regulations.  
If the plug is no longer accessible after the appliance has been built into the cabinet, a dual pole isolator must be installed to conform to the relevant safety standards.
3. Appliance shall be provided with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage III conditions, such means must be incorporated in the fixed wiring in accordance with the wiring rules and accessible.
4. It is essential that the cabinet is fixed to the wall for stability. The shelf must be able to support a weight of 30 kg.
5. If the microwave oven is to be removed from the kitchen cabinet and used free standing, the built in parts must be removed, and the oven returned to its original condition. Keep these installation instructions for future reference so the installation process can be reversed.

### TAKE CARE NOT TO KINK OR TRAP THE MICROWAVE ELECTRICAL CABLE.



The diagram may vary from the actual unit and is only for your reference.

## Step 1. Unpacking list

### Tools Needed


- Measuring tape
- Pencil
- Driver
- Ø2 drill

### Parts Supplied
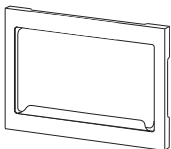
| PART                                                                                |            | QUANTITY |
|-------------------------------------------------------------------------------------|------------|----------|
|    | Trim Frame | 1        |
|    | Left Duct  | 1        |
|    | Rail       | 2        |
|    | Bracket    | 4        |
|   | Catch      | 4        |
|  | Tape       | 2        |
|  | Screw      | 12       |
|  | Strike     | 4        |

# Step 2. Feature diagram

## Installed Image

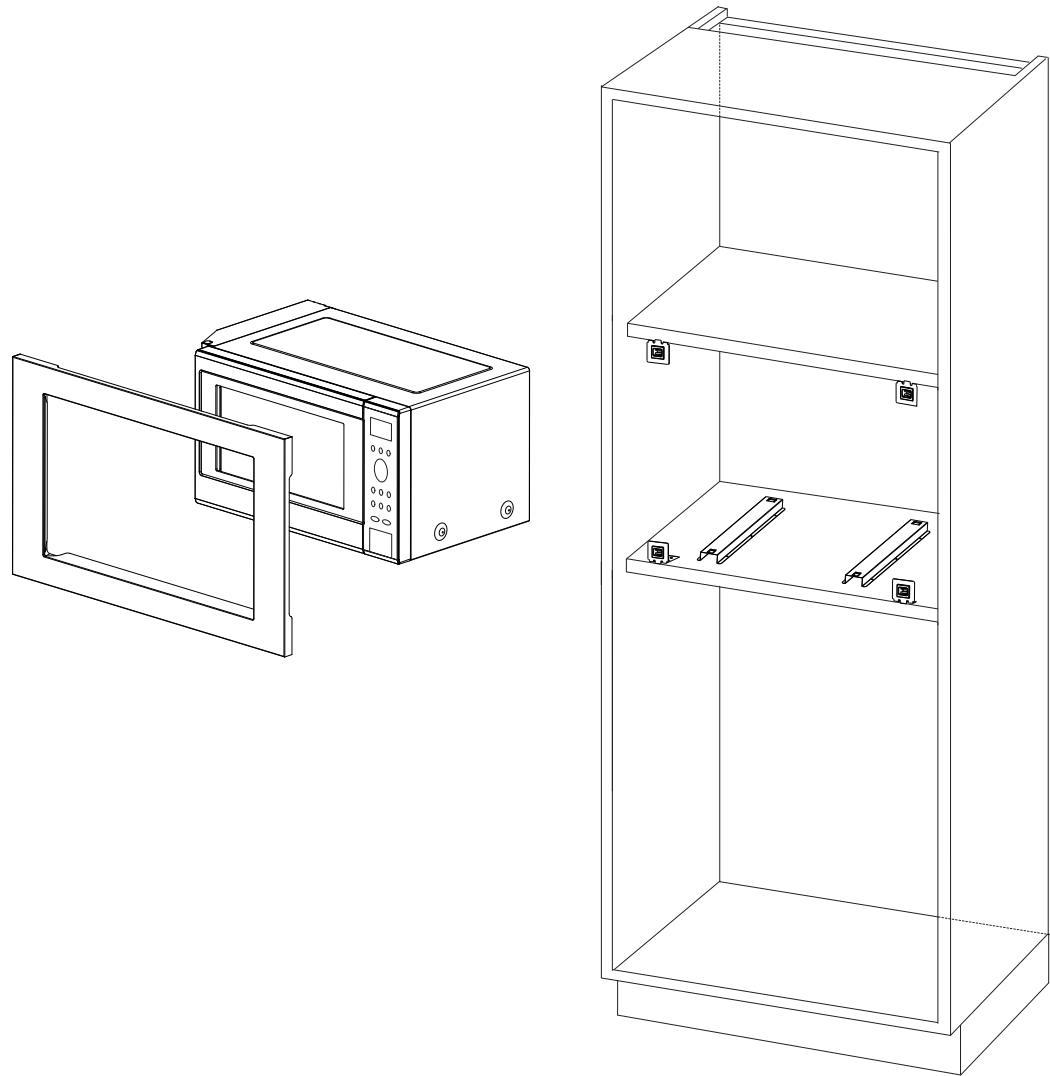

|        | Trim kit Dimensions |
|--------|---------------------|
| Width  | 596 mm              |
| Height | 410 mm              |
| Depth  | 20 mm (Thickness)   |

## Step 3. Cabinet Preparation

fig 1.





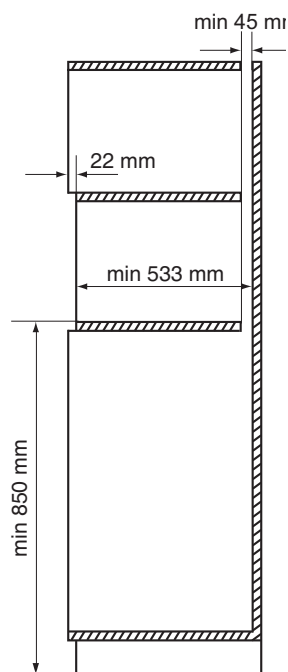


fig 2.

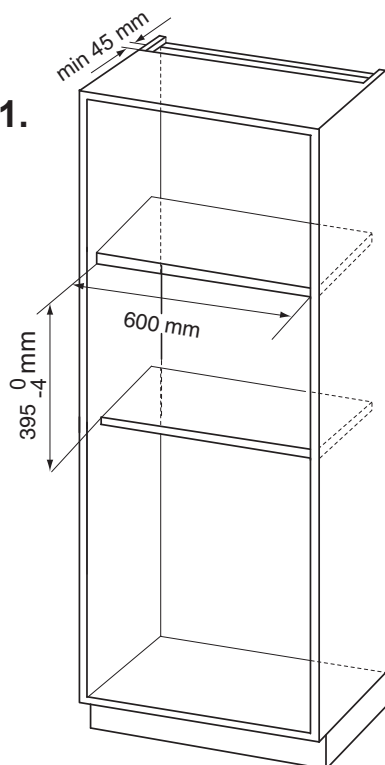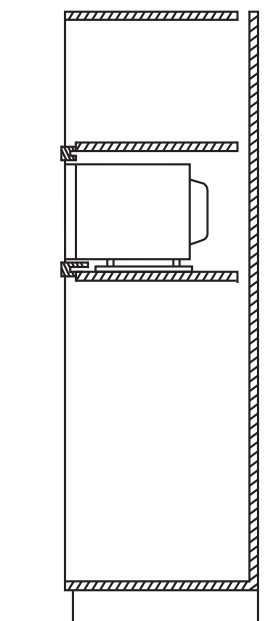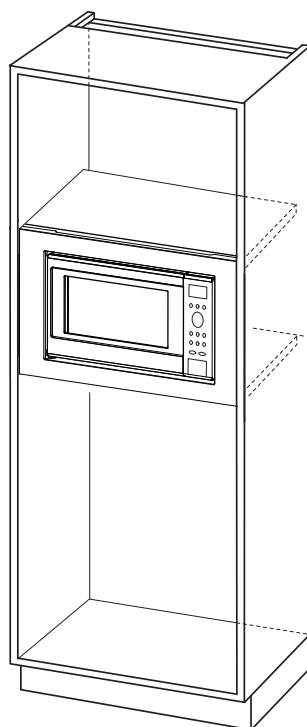


## Step 4. Microwave Oven Installation


1.

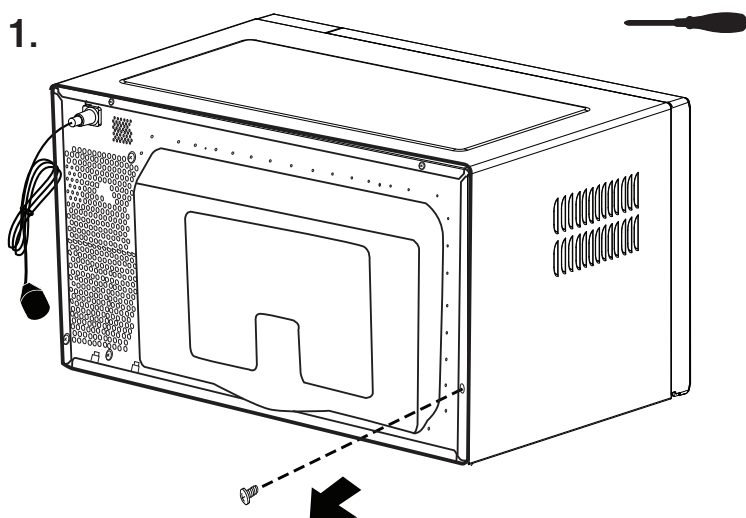

2.

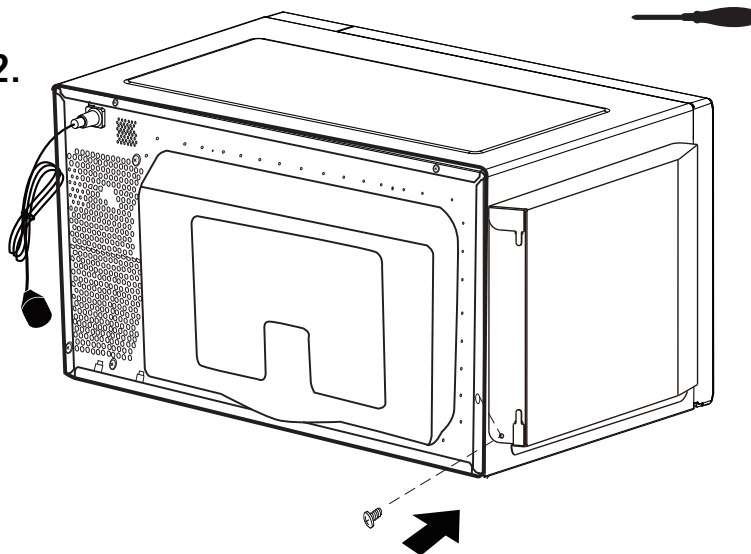


3.

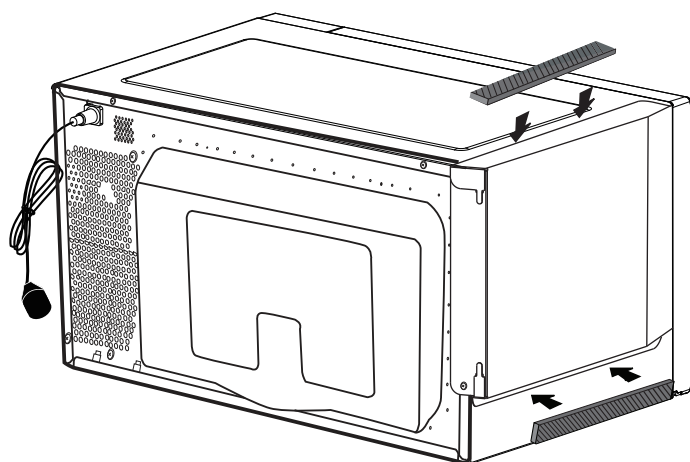



Put a piece of the tape on top of oven and left duct and put a piece of the tape on side of oven and left duct.

## Step 5. Cabinet Installation

### 1. Aligning the rails

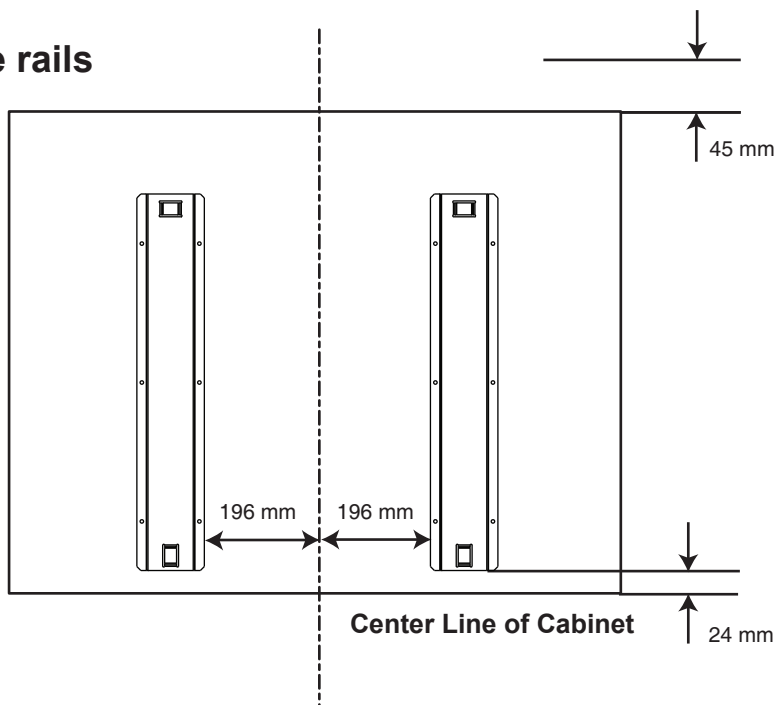


### 2. Attaching the rails

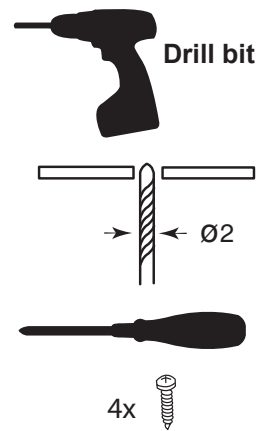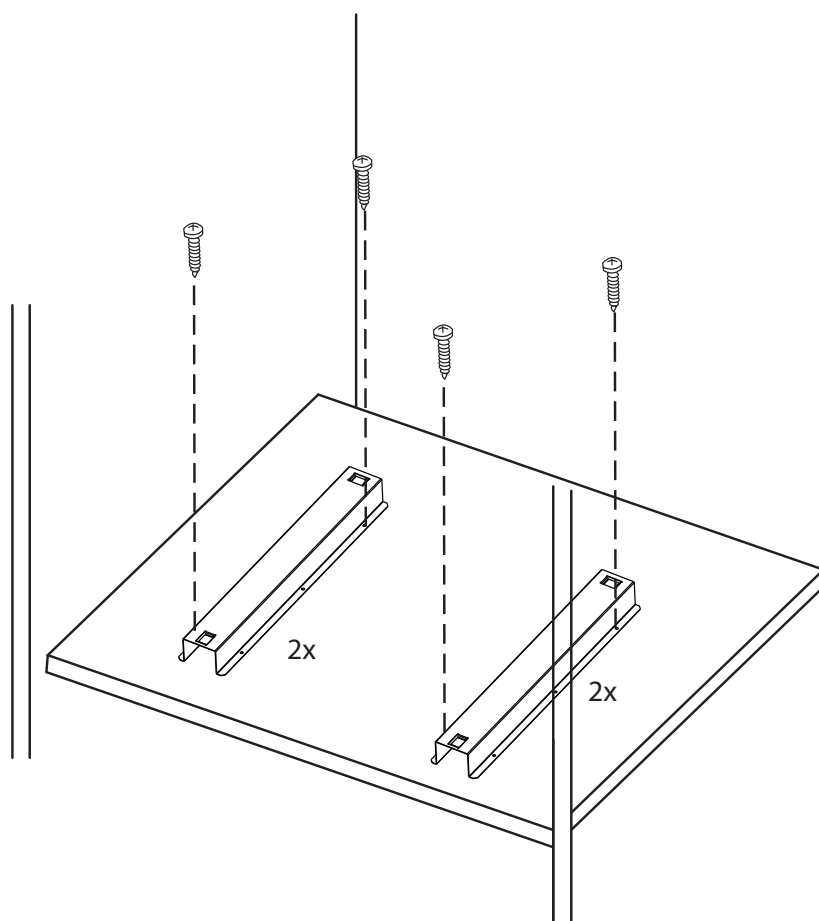

## Step 5. Cabinet Installation


### 3. Bracket assembly

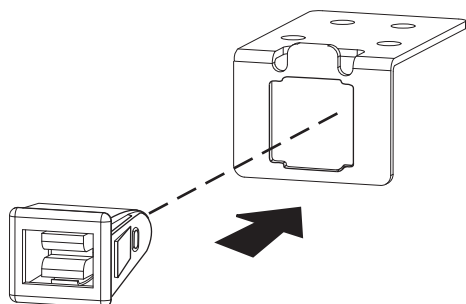


### 4. Attaching the bracket



Drill bit



8x 

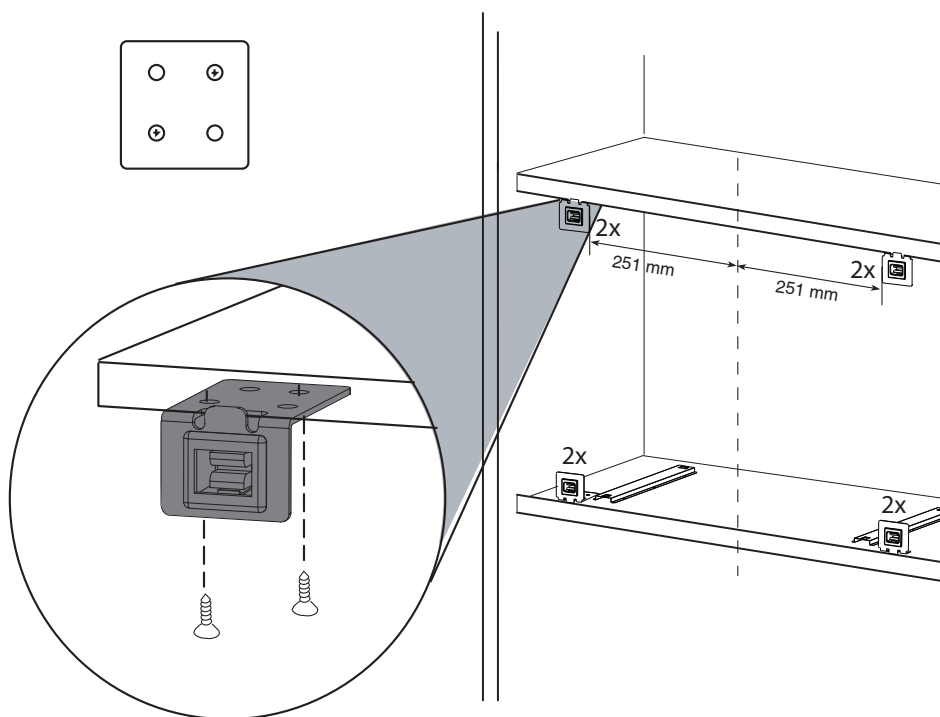


2 screws on each bracket



## Step 6. Finishing Installation

### Trim Frame



#### 1. Inserting strikes

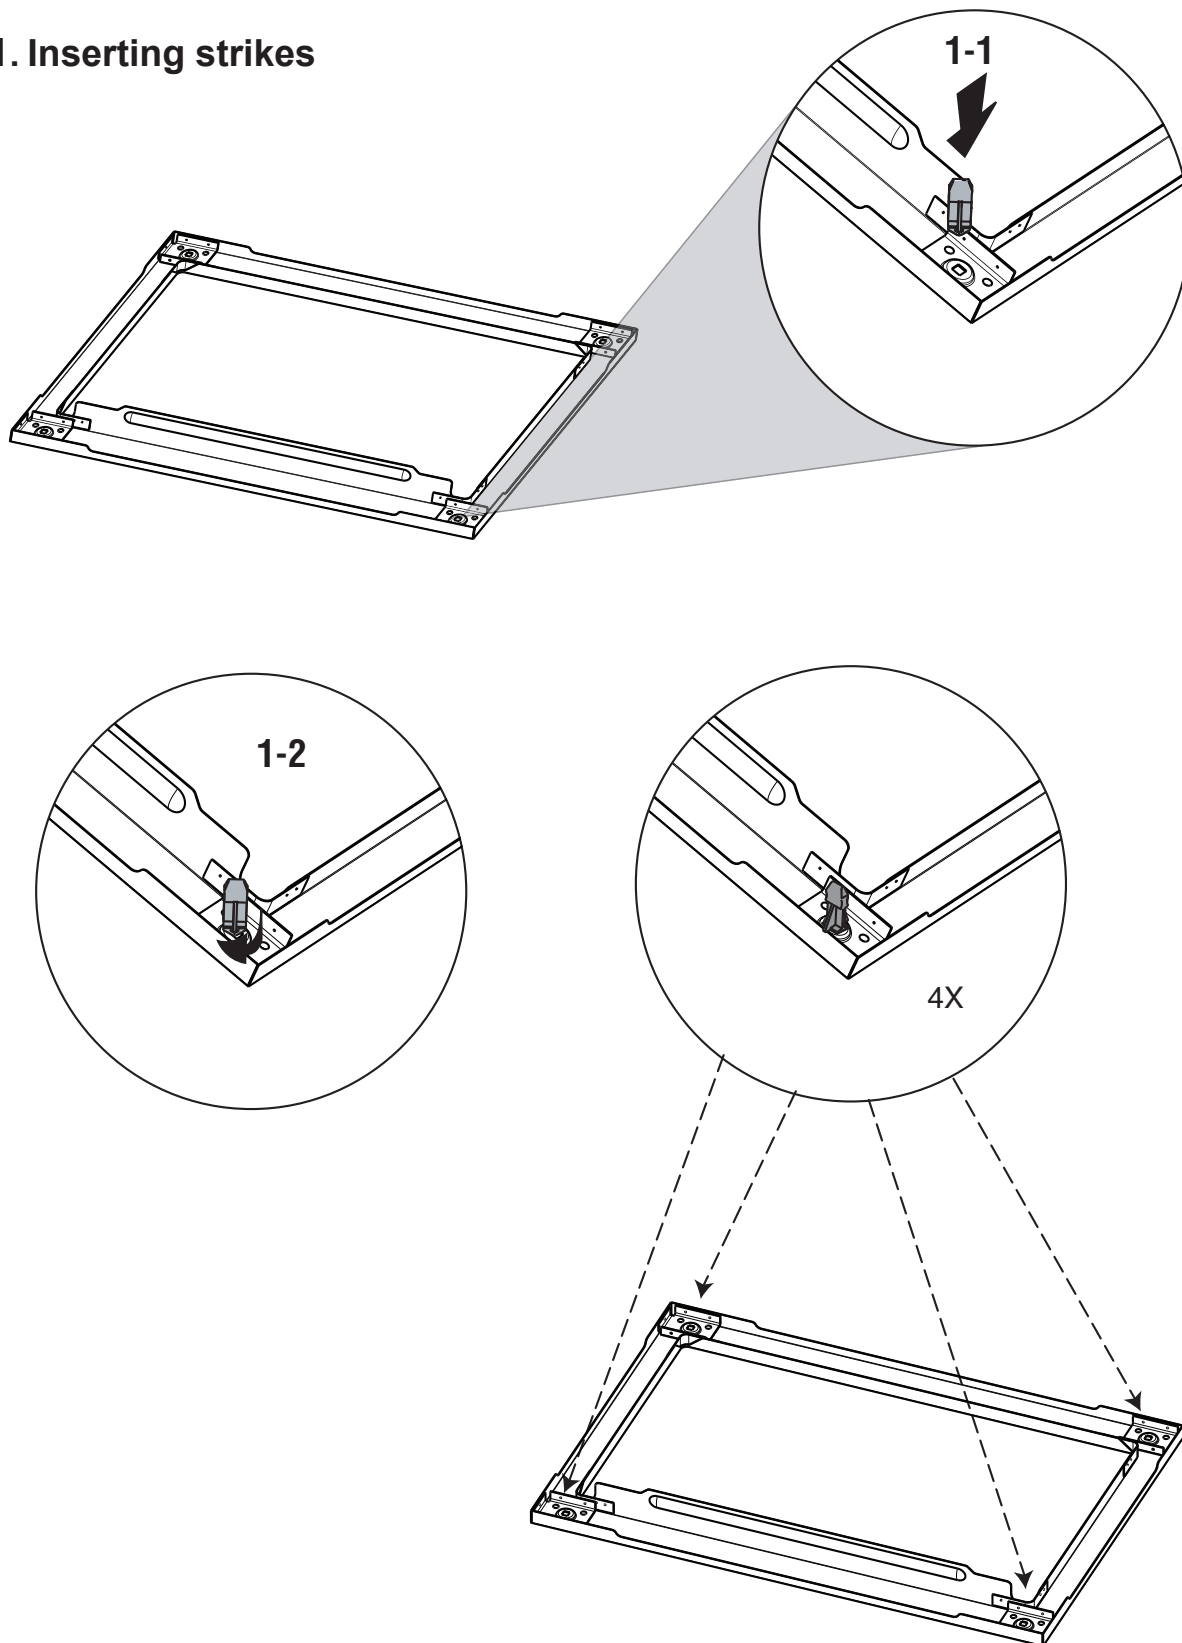

## Step 6. Finishing Installation

Complete the assembly



### 2. Oven placement

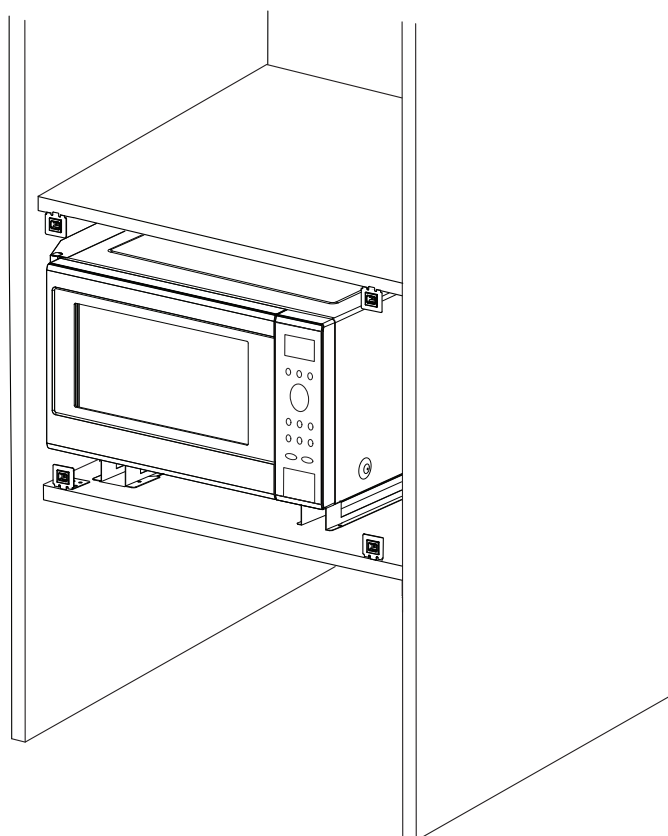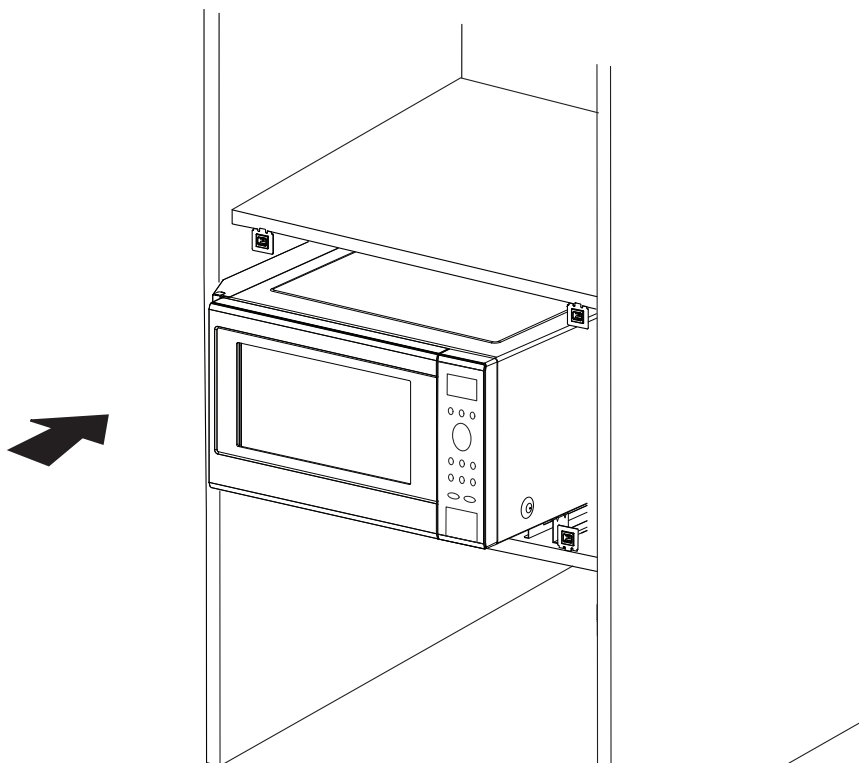

## Step 6. Finishing Installation

Complete the assembly

### 3. Trim frame installation

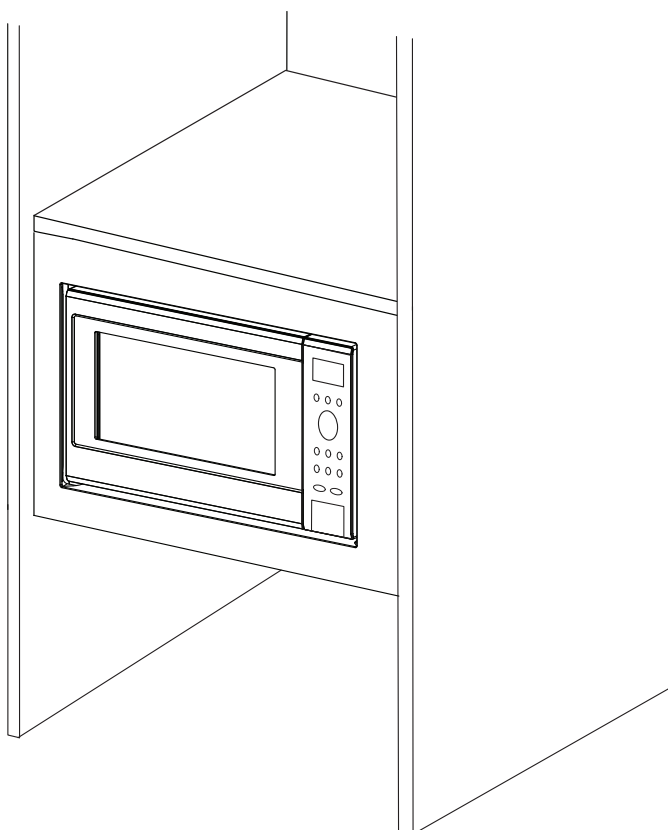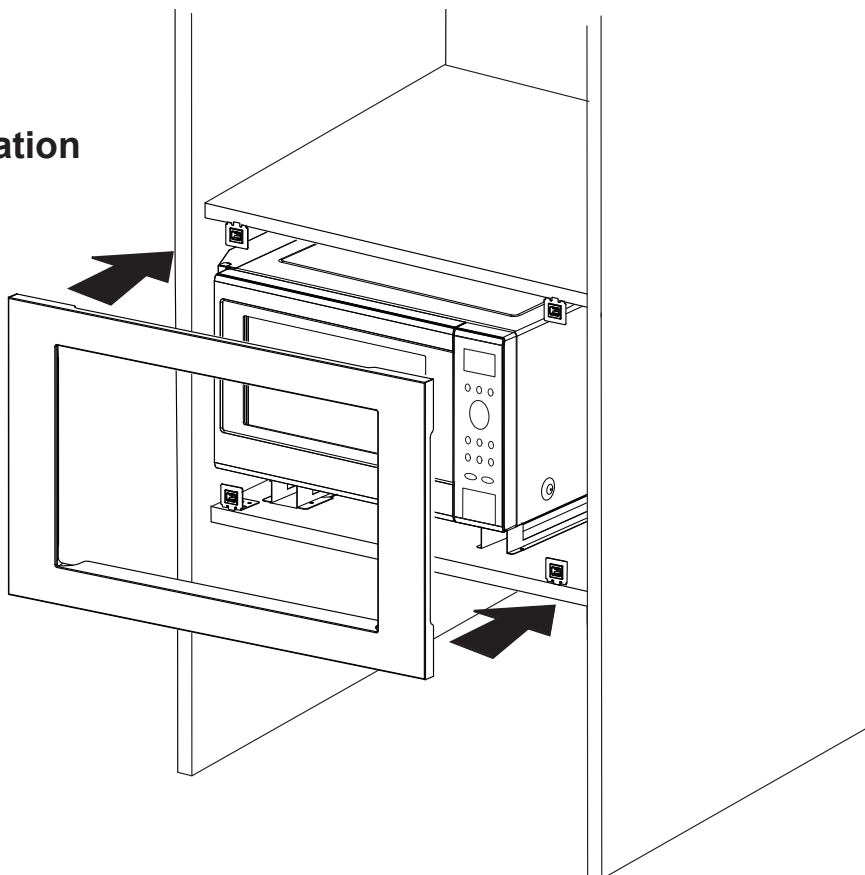

F0313BE90QP  
IP0812-0  
Printed in China