


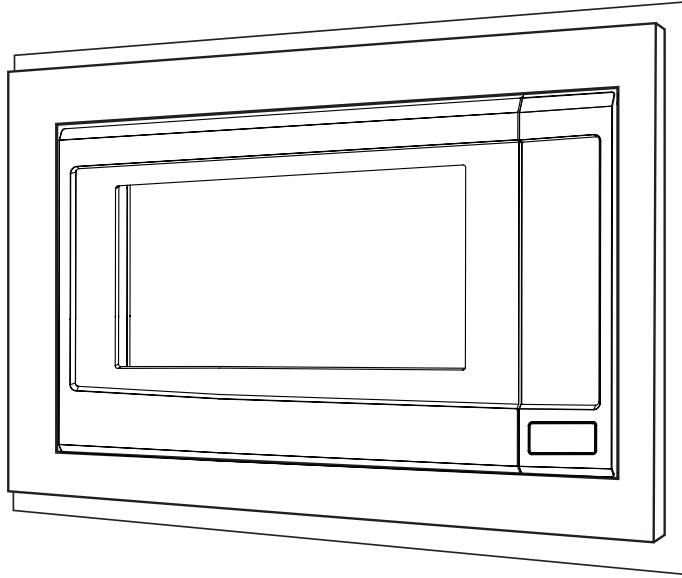

Installation Instruction

安裝說明書

	Trim kit / 專用框架
24" cabinet / 24寸儲藏櫃 (596mm)	TK611SWQP TK611SSQP TK611SMHP TK611SSHP

Contents/目錄

Attention / 注意	P1
Step1. Unpacking list / 步驟1. 包裝中的部件	P2
Step2. Feature diagram / 步驟2. 外觀示意圖	P3
Step3. Cabinet Preparation / 步驟3. 儲藏櫃的準備	P4-6
Step4. Microwave Oven Installation / 步驟4. 微波爐的安裝	P7
Step5. Cabinet Installation / 步驟5. 儲藏櫃的安裝	P8-9
Step6. Lower Duct Installation / 步驟6. 底板的安裝	P10
Step7. Finishing Installation / 步驟7. 完成安裝	P11-13

Panasonic

en

1. This trim kit can be installed into a cabinet. The cabinet opening must have the following internal dimensions as shown in **fig 1, p 4-6**.

A vent is required at the rear of the cabinet. It should travel the full height of the cabinet and the cabinet should not be obstructed. Minimum dimension of vent: 45 mm x 562 mm (**fig 1, p 4-6**).

MINIMUM INSTALLATION HEIGHT 850 MM.

2. Electrical Connections The appliance is supplied with a mains plug attached and should only be connected into an earthed socket that has been installed according to the relevant safety regulations. If the plug is no longer accessible after the appliance has been built into the cabinet, a dual pole isolator must be installed to conform to the relevant safety standards.
3. Appliance shall be provided with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage III conditions, such means must be incorporated in the fixed wiring in accordance with the wiring rules and accessible.
4. It is essential that the cabinet is fixed to the wall for stability. The shelf must be able to support a weight of 30 kg.
5. If the microwave oven is to be removed from the kitchen cabinet and used free standing, the built in parts must be removed, and the oven returned to its original condition. Keep these installation instructions for future reference so the installation process can be reversed.

TAKE CARE NOT TO KINK OR TRAP THE MICROWAVE ELECTRICAL CABLE.

The diagram may vary from the actual unit and is only for your reference.

zh

1. 此專用框架可安裝在開放式櫥櫃內。櫥櫃內部尺寸請參考第4-6頁圖1所示。

櫥櫃後必須預留有足夠高度的通風空隙，並確保櫥櫃不被阻塞。最小通風尺寸為45 mm x 562 mm（第4-6頁圖1）。

最小安裝高度為850 mm。

2. 綫路 本設備配有一個接地插頭，必須確保插在符合相應安全標準的插座上。如果當微波爐安裝在櫥櫃內後，插頭不易接近原有插座時，可另行安裝符合相應安全標準的插座。
3. 本設備應提供一個停止供電的方法：在過壓Ⅲ條件下，電源會通過全電極的觸點斷開使電源停止供電。這種方法必須包含一個固定綫路，該電路應該符合電路法規並且是可使用的。
4. 確保有足夠穩定性的開放式櫥櫃，並且能支撐30千克的載重。
5. 如果要把微波爐從櫥櫃內取出置放在桌上使用，必須取去專用框架部件使微波爐恢復原來的狀態。請妥善保存此安裝說明書以備查閱。

不可扭曲或纏繞電綫。




圖標與實際產品可能有不同，僅供參考。

Step1. Unpacking list / 步驟1. 包裝中的部件

Tools Needed / 所需的工具


- Measuring tape / 卷尺
- Pencil / 鉛筆
- Driver / 錘子
- Ø2 drill / ϕ 2沖鑽

Parts Supplied / 附件

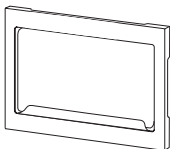PART / 部件		QUANTITY / 數量
	Trim Frame / 蓋板架	1
	Left Duct / 側邊蓋架	1
	lower Duct / 底板	1
	Rail / 託盤	2
	Bracket / 連接件緊固板	4
	Catch / 連接嵌件	4
	Tape / 膠帶	2
	Screw / 螺釘	12
	Strike / 連接插件	4

Step2. Feature diagram / 步驟2. 外觀示意圖

Installed Image / 安裝示意圖

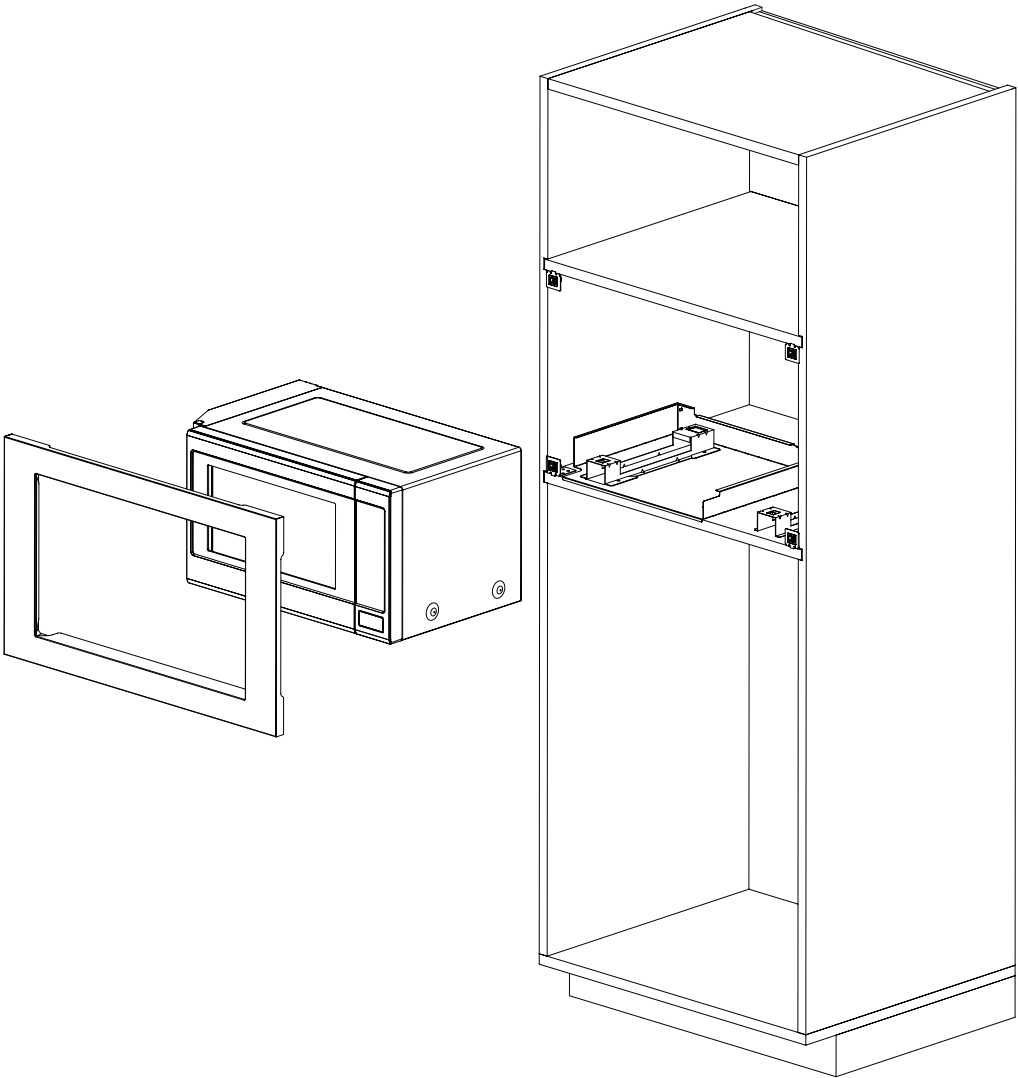

	Trim kit Dimensions / 專用框架尺寸
Width / 寬	596 mm
Height / 高	410 mm
Depth / 深	20 mm (Thickness)

Step3. Cabinet Preparation / 步驟3. 儲藏櫃的準備

Please confirm and select the type of your own cabinet firstly. / 請確認並選擇你的儲藏櫃。

Type1 / 型號 1

fig 1.

圖 1.




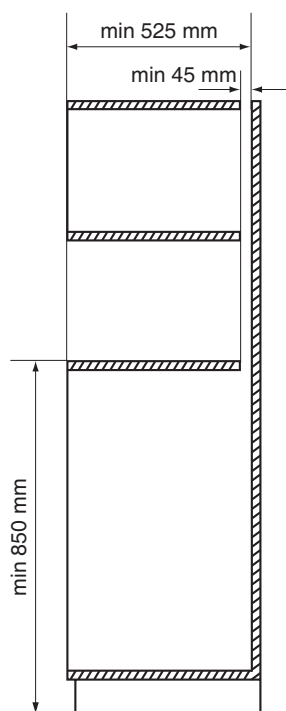




fig 2.

圖 2.

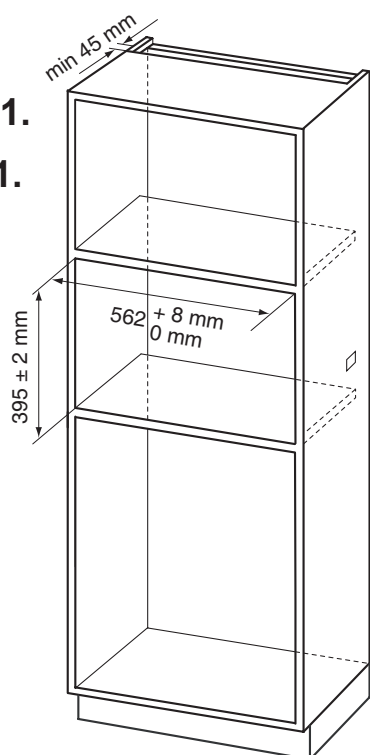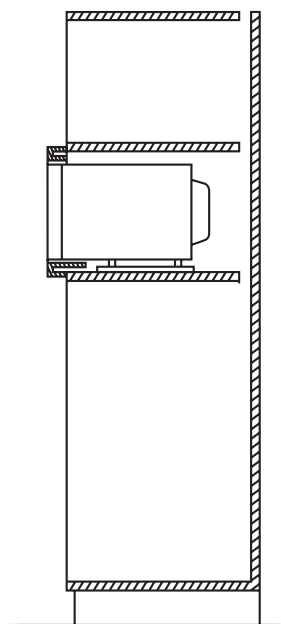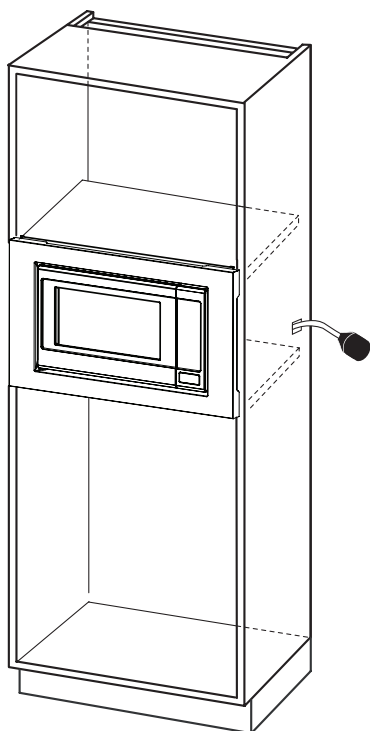

Step3. Cabinet Preparation / 步驟3. 儲藏櫃的準備

Type2 / 型號 2

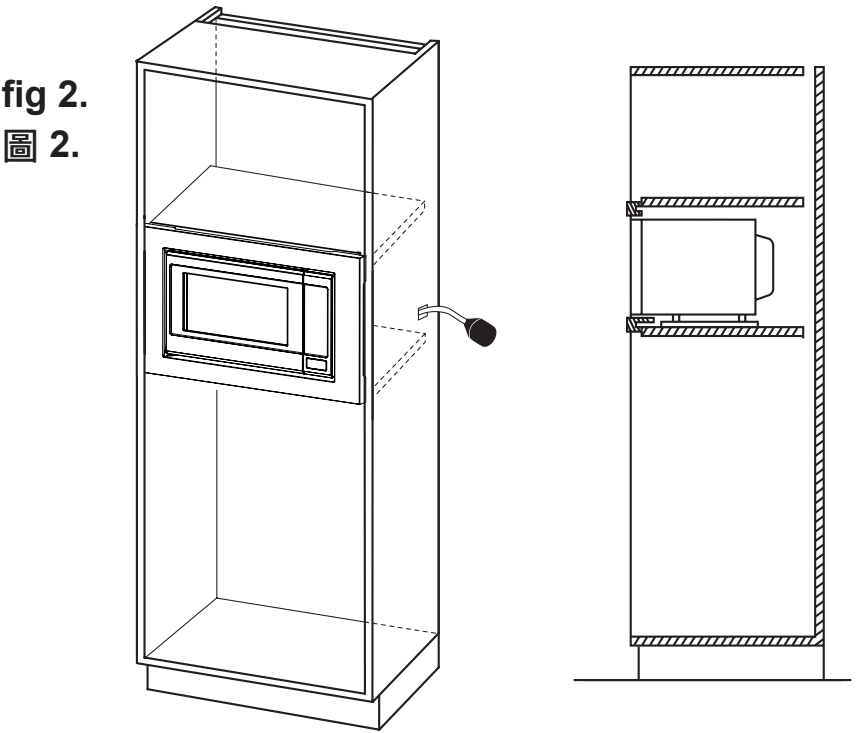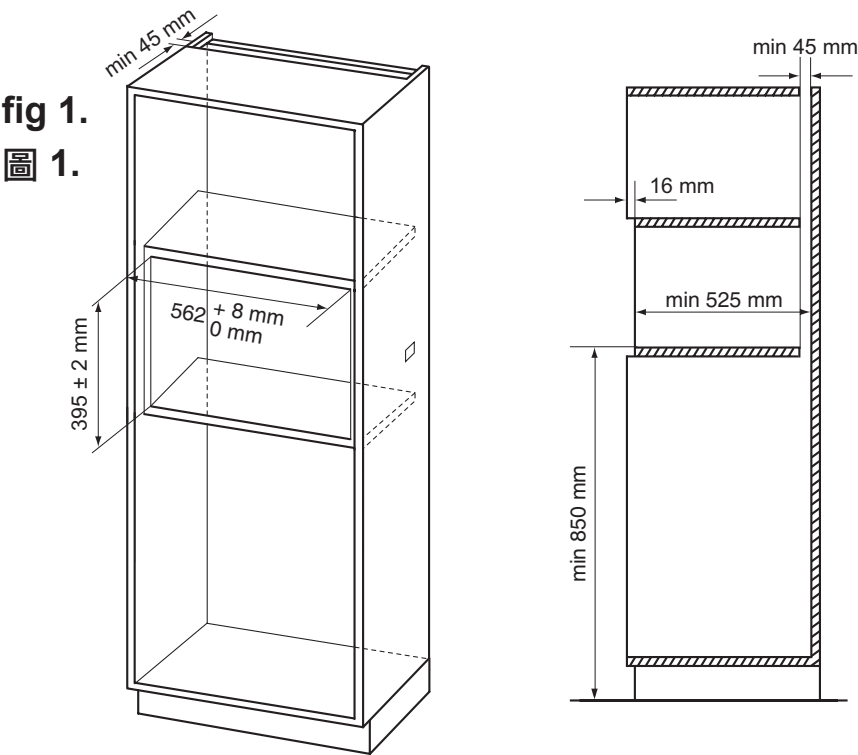

Step3. Cabinet Preparation / 步驟3. 儲藏櫃的準備

Type3 / 型號 3

fig 1.
圖 1.





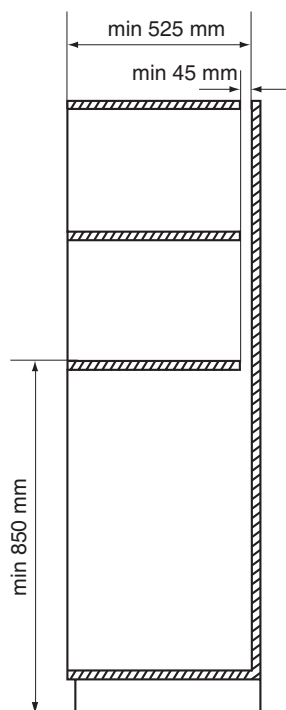


fig 2.
圖 2.

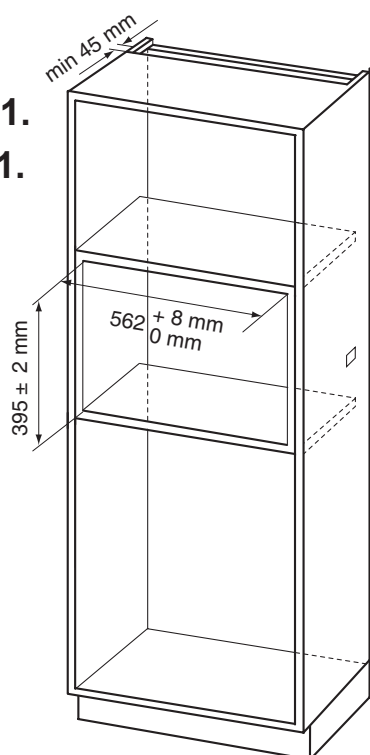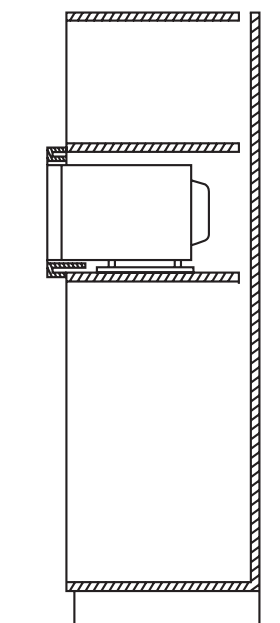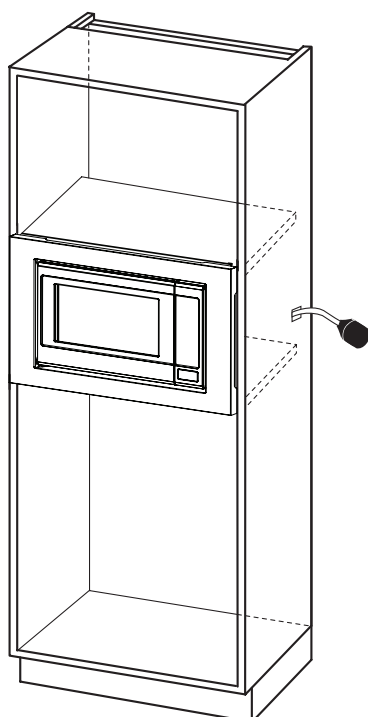


Step4. Microwave Oven Installation / 步驟4. 微波爐的安裝


1.

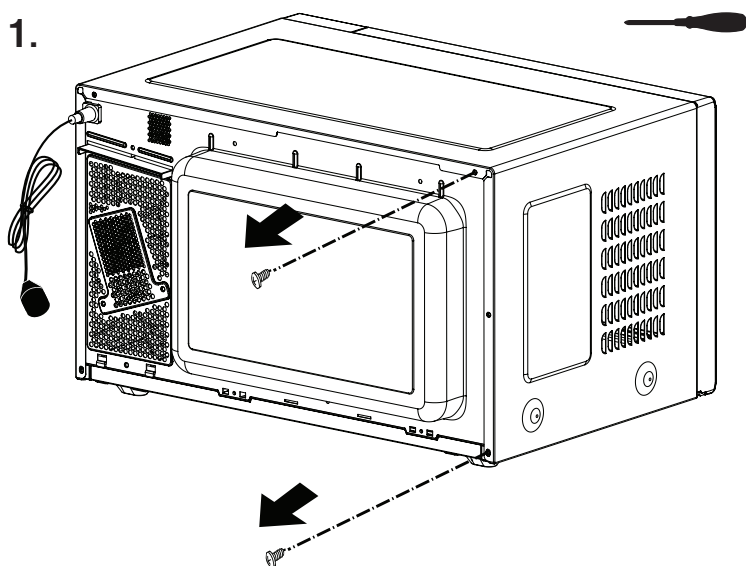

2.

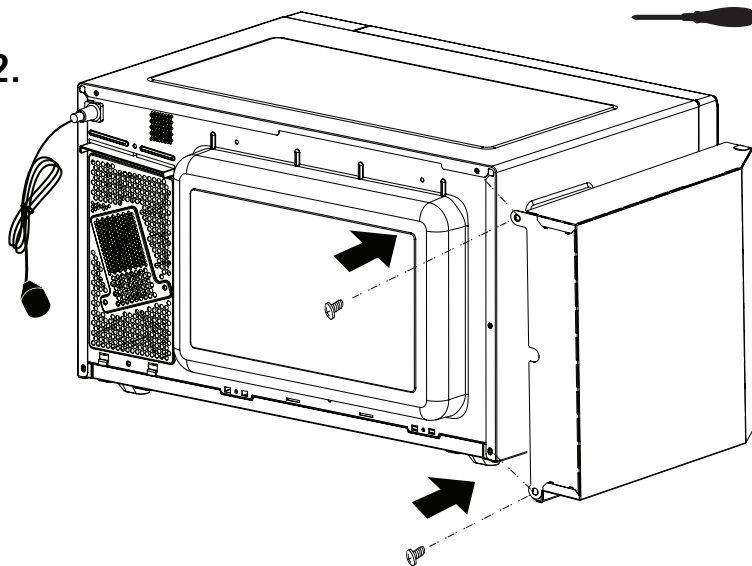


3.


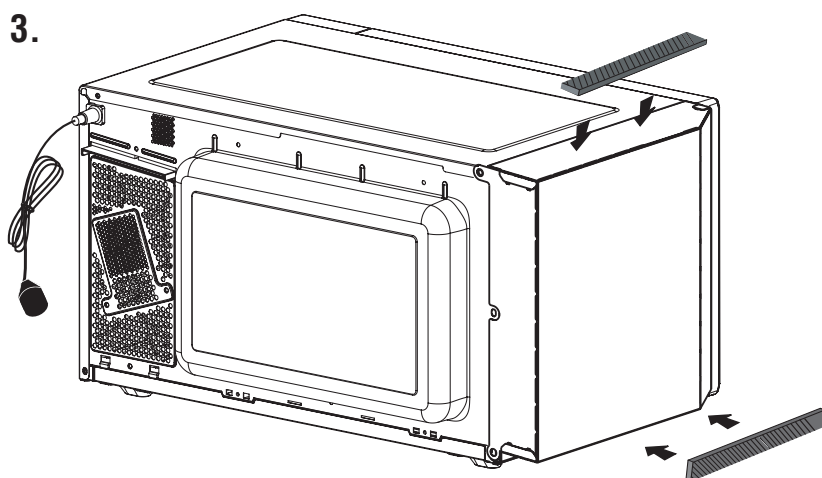


Step5. Cabinet Installation / 步驟5. 儲藏櫃的安裝

1.

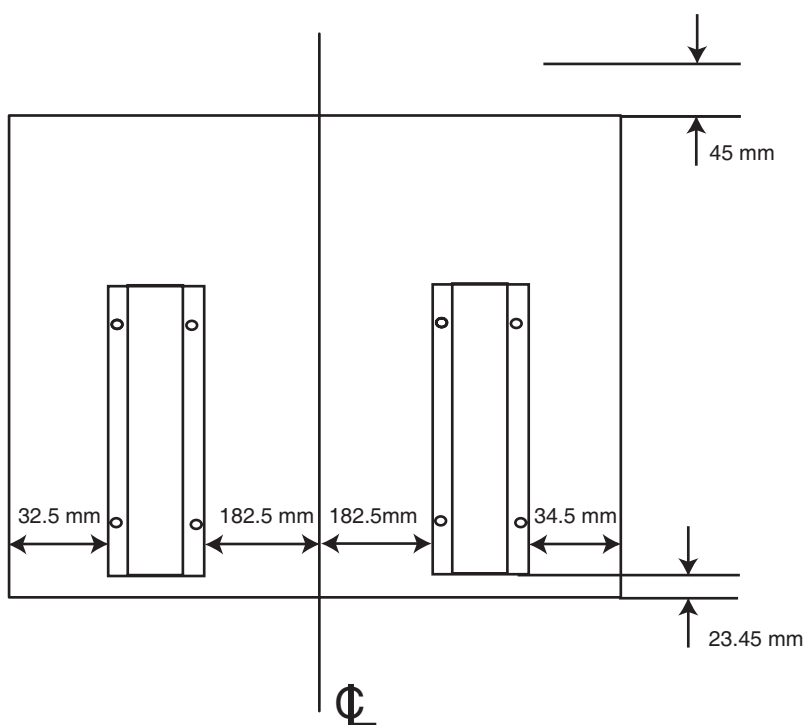


2.


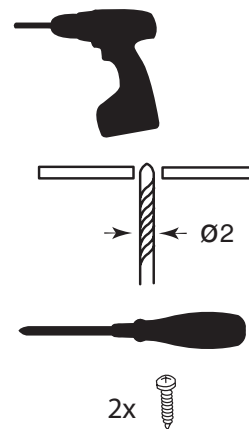
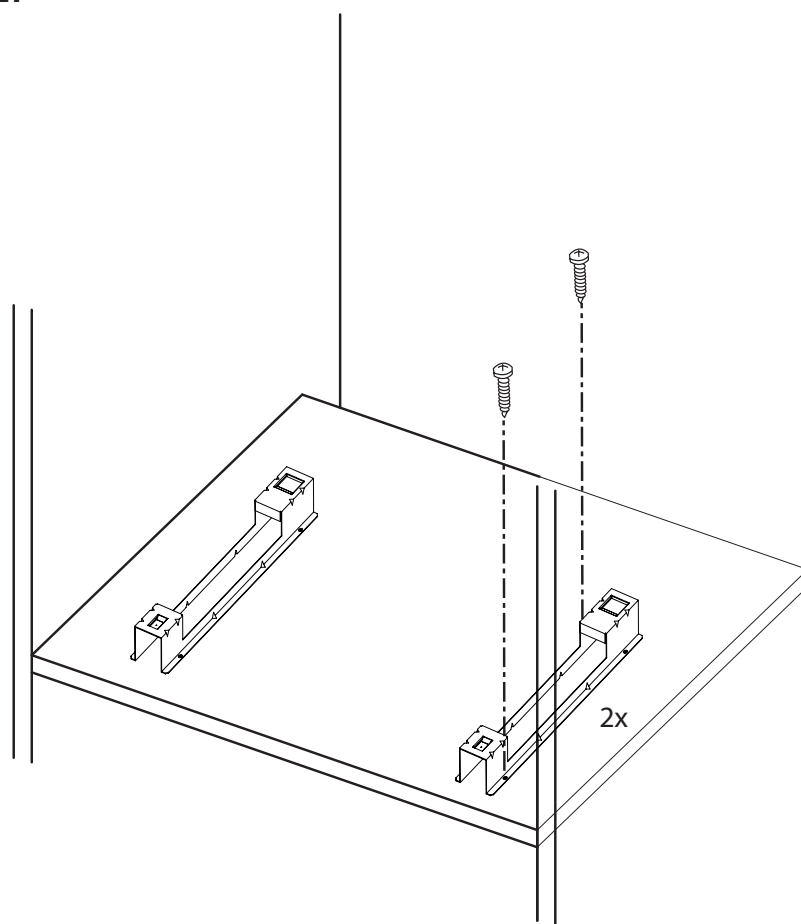


Step5. Cabinet Installation / 步驟5. 儲藏櫃的安裝

3.

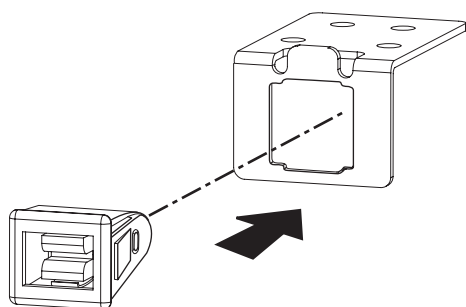


4.

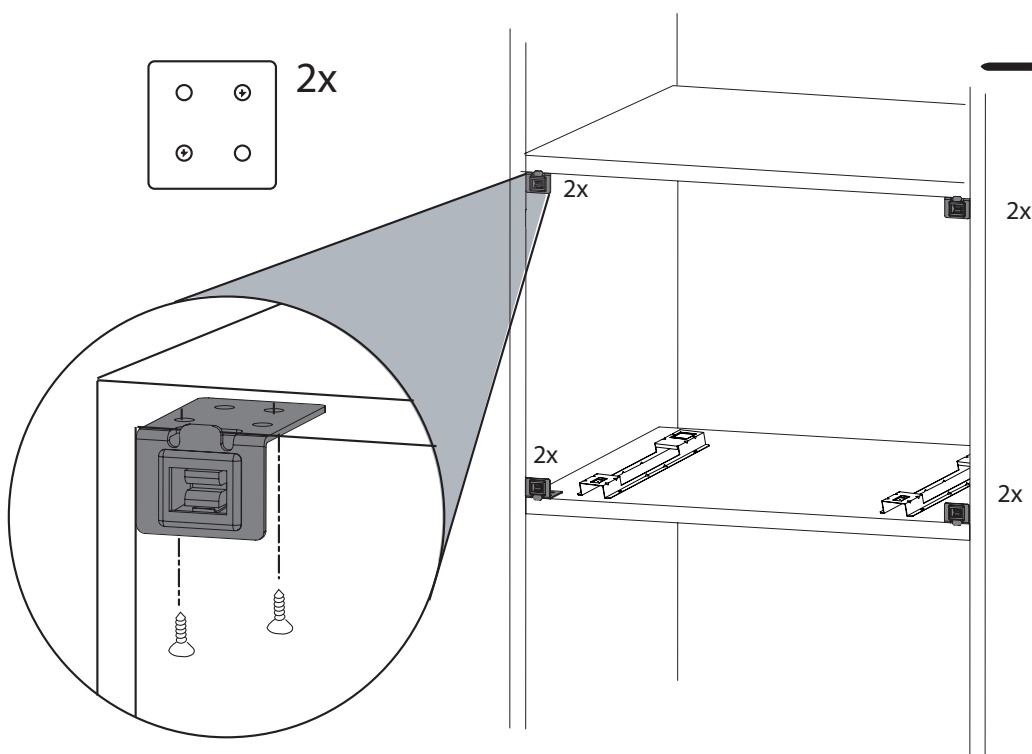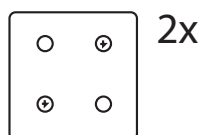


Step6. Lower Duct Installation / 步驟6. 底板的安裝


1.

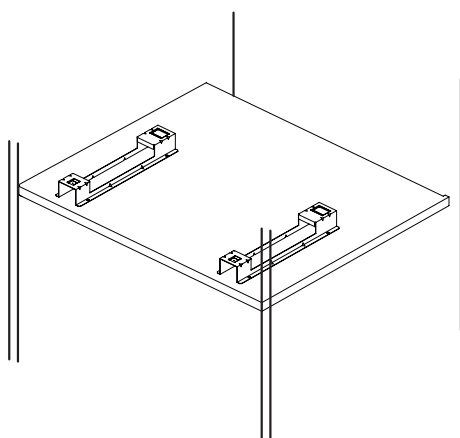

2.

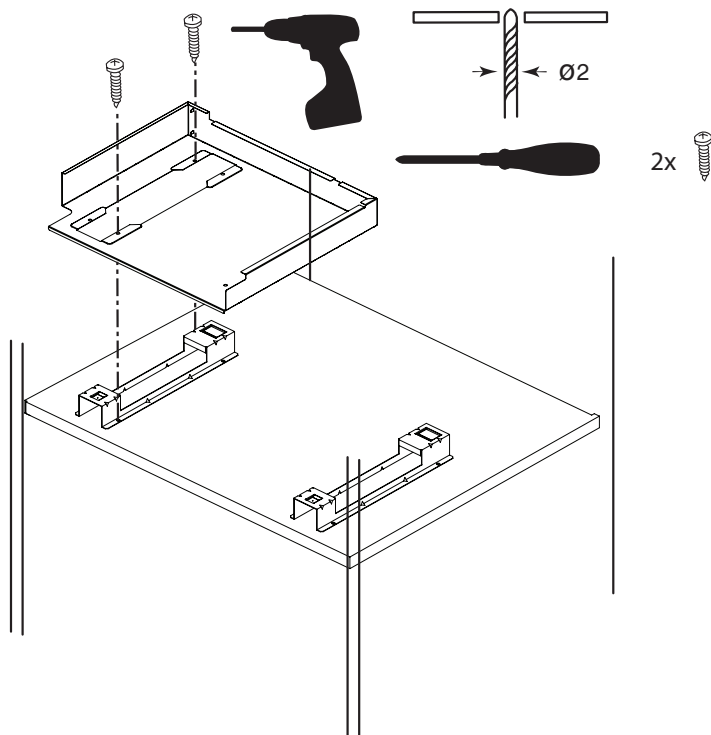


3.

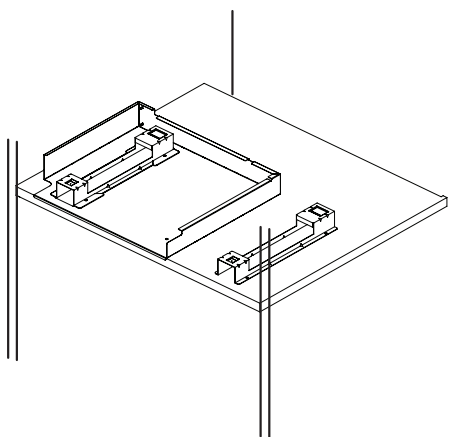


Step7. Finishing Installation / 步驟7. 完成安裝

Trim Frame / 專用框架


1.

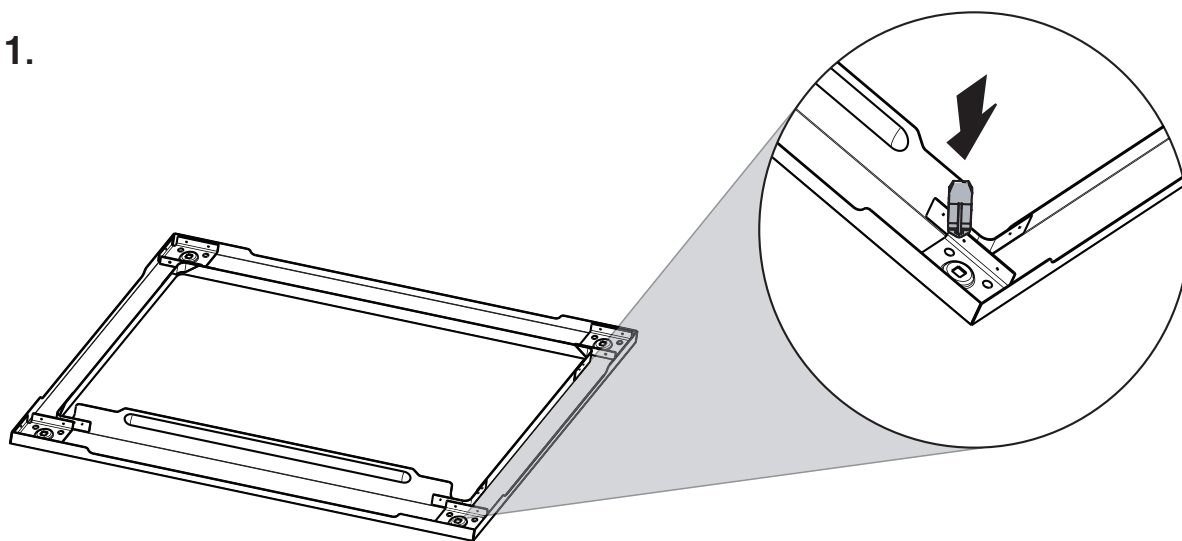

2.

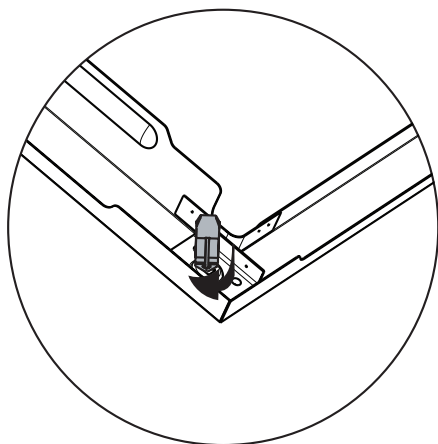


3.

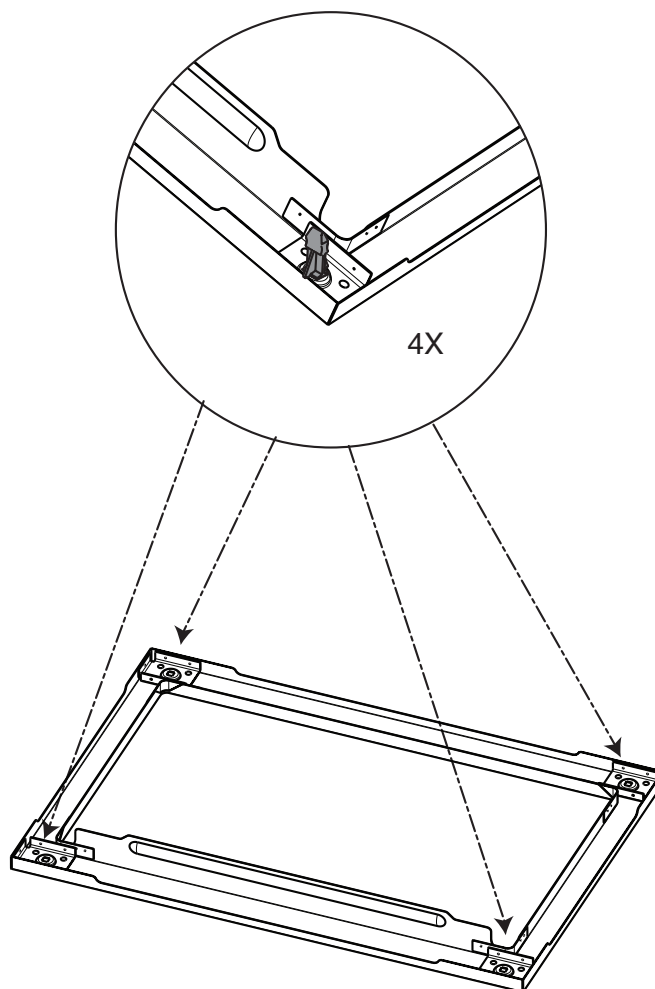


Step7. Finishing Installation / 步驟7. 完成安裝

Complete Confirm / 完全確認

3.

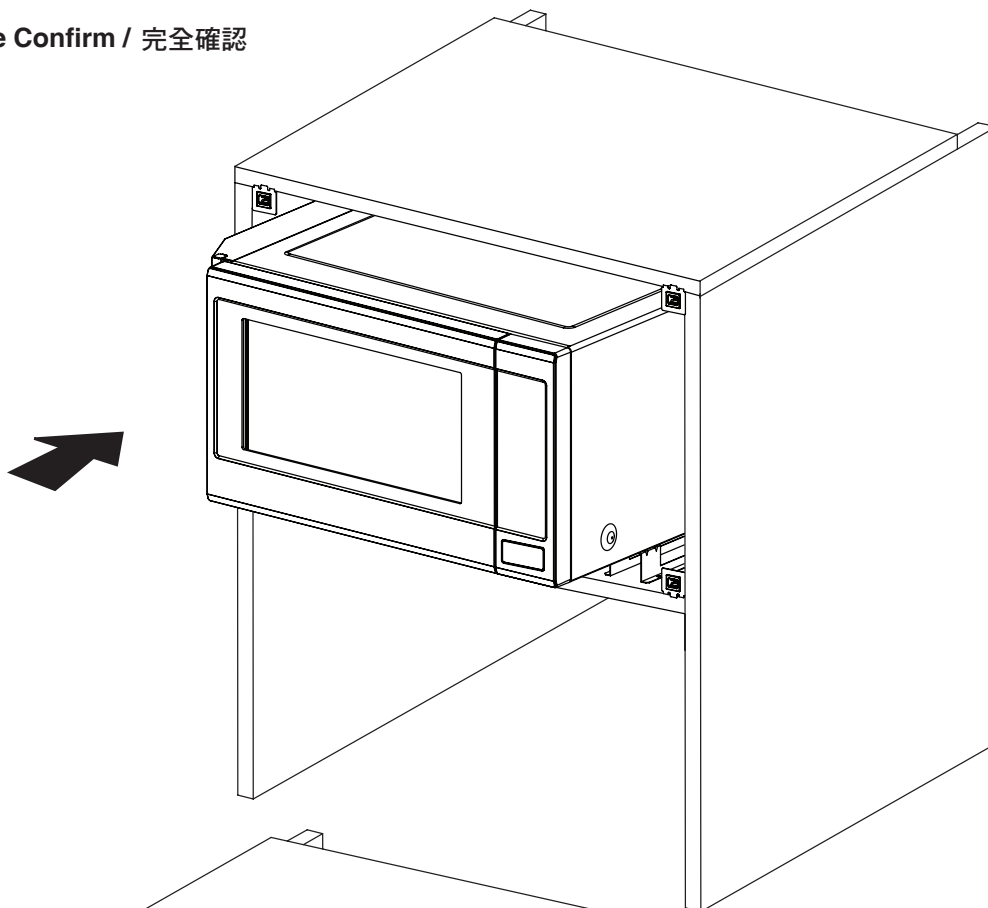


4.

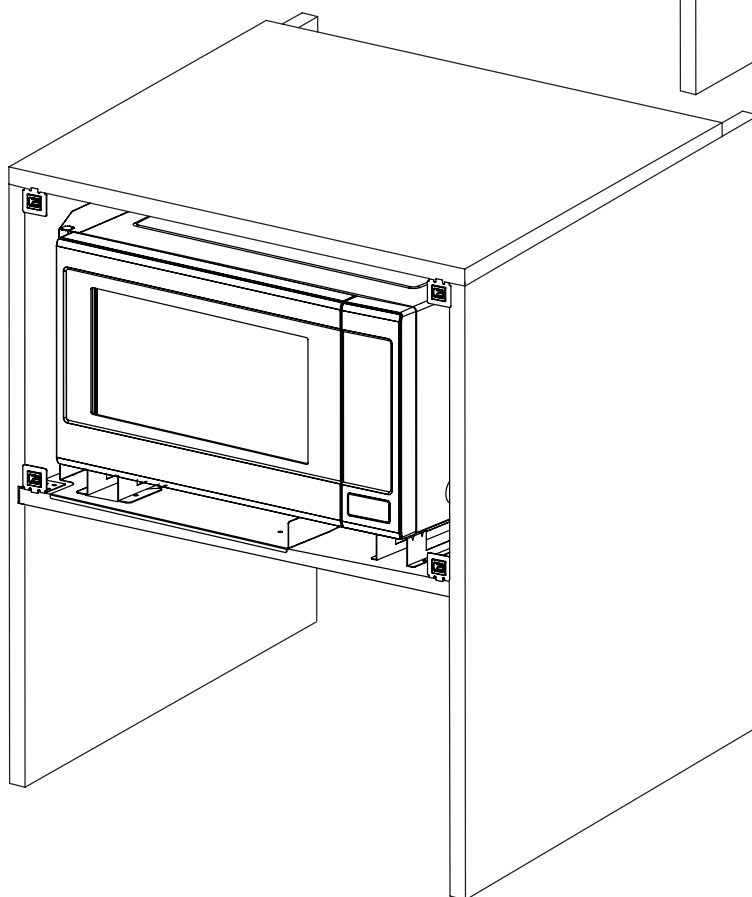


Step7. Finishing Installation / 步驟7. 完成安裝

Complete Confirm / 完全確認

5.

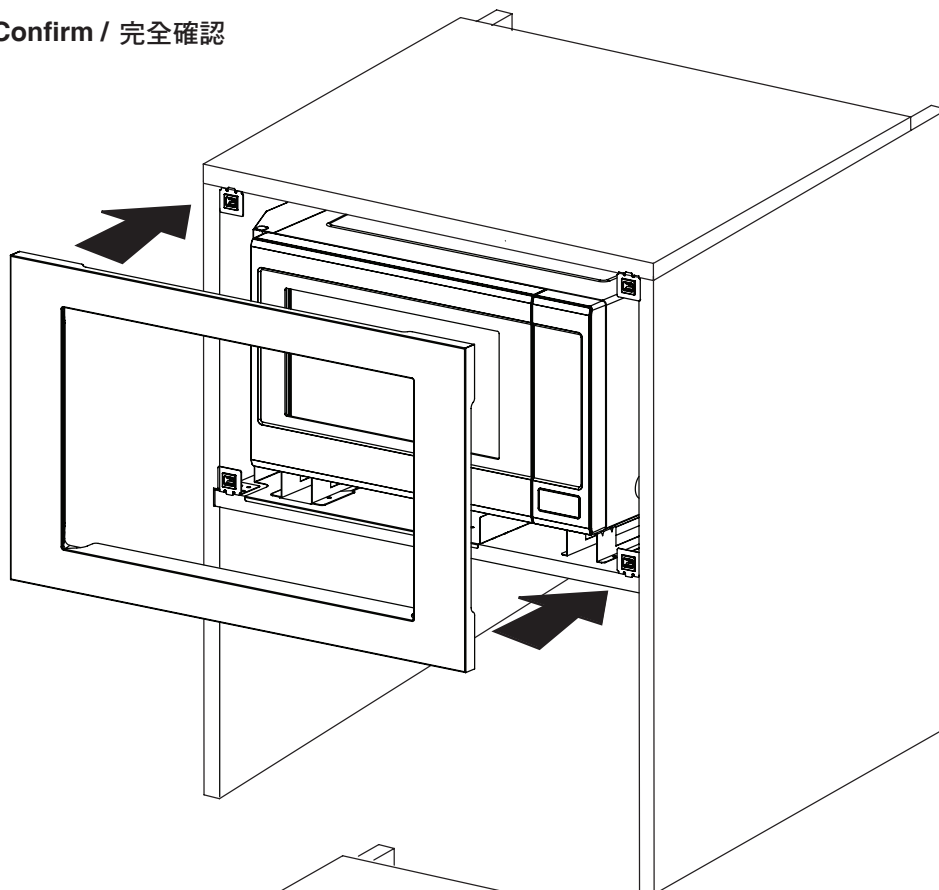

6.

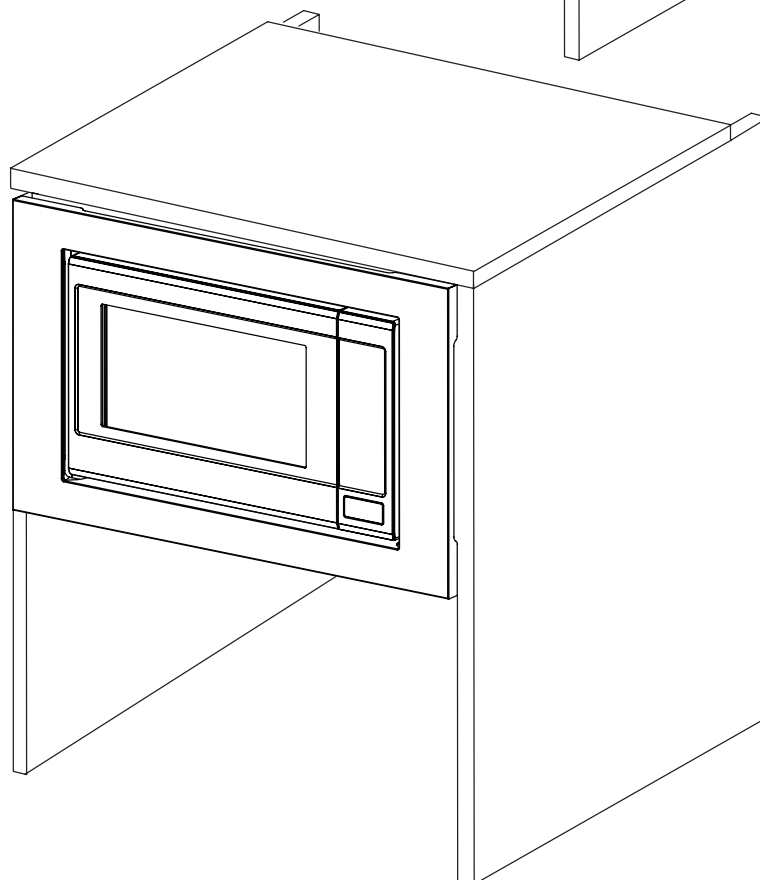

F03139Y10QP
IP0811-0
Printed in China