

# WALL-MOUNTED

# STANDARD *INVERTER* Single-Split Type



CS-PU36WKQ



Wireless  
(Standard)

POWERFUL



MODEL	INDOOR UNIT		[60Hz]		CS-PU36WKQ		
	OUTDOOR UNIT				CU-PU36WKQ		
Cooling Capacity	(min-max)		kW		10.0 [2.7-11.0]		
	(min-max)		kJ/h		36,000 [9,720-39,600]		
EER	(min-max)		kJ/hW		10.8 [17.1-10.6]		
Electrical Data	Voltage		V		230		
	Current		A		15.0		
	Power Input (min-max)		W		3,330 [570-3,730]		
Moisture Removal			L/h (Pt/h)		4.4 [9.4]		
Air Circulation	Indoor		m <sup>3</sup> /min (ft <sup>3</sup> /min)		24.0 [847]		
	Outdoor		m <sup>3</sup> /min (ft <sup>3</sup> /min)		82.2 [2,902]		
Noise Level	Indoor (H / L / Q-Lo)		dB (A)		49/39		
	Outdoor (H)		dB (A)		57		
Unit Dimensions Indoor (Outdoor)	Height			mm		295 [955]	
				inch		11-5/8 [37-5/8]	
	Width			mm		1,160 [1,100]	
				inch		45-11/16 [43-5/16]	
	Depth			mm		255 [370]	
				inch		10-1/16 [14-19/32]	
Packaging Dimensions Indoor (Outdoor)	Height			mm		375 [1,018]	
				inch		14-25/32 [40-3/32]	
	Width			mm		1,250 [1,305]	
				inch		49-7/32 [51-13/32]	
	Depth			mm		331 [535]	
				inch		13-1/16 [21-3/32]	
Net Weight	Indoor / Outdoor		kg (lb)		14 [31] / 76 [168]		
Gross Weight	Indoor / Outdoor		kg (lb)		20 [44] / 85 [187]		
Refrigerant Pipe Diameter	Liquid Side		mm (inch)		ø 6.35 (1/4)		
	Gas Side		mm (inch)		ø 15.88 (5/8)		
Pipe Extension	Chargeless Pipe Length		m		10.0		
	Maximum Pipe Length		m		30		
	Maximum Elevation Length		m		20		
	Additional Refrigerant Gas*		g/m		25		
Power Supply					Outdoor		

\*When pipes are not extended from the chargeless pipe length, the required amount of refrigerant is already in the unit.


## OUTDOOR UNIT



CU-PU36WKQ

## EASY-TO-USE REMOTE CONTROLLER

Panasonic's wireless remote controller features a large Liquid Crystal Display (LCD) panel which makes it even more user-friendly. So you can sit back and enjoy easy operation and long-lasting comfort from your Panasonic Air Conditioner.

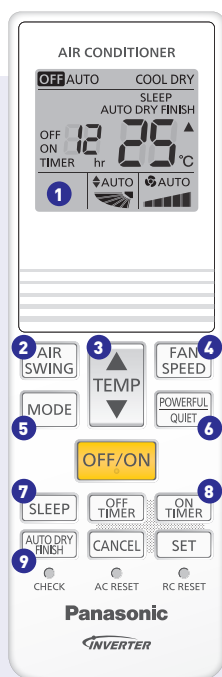

### Wireless

Applicable to STANDARD  
INVERTER

- 1 LCD display for an easy overview of the operation status.
- 2 Set the vertical airflow direction.
- 3 Press up or down to set the temperature.
- 4 Adjusts the fan speed.
- 5 Toggles between AUTO, COOL and DRY setting mode.
- 6 Toggles setting between POWERFUL mode and Quiet mode. Press POWERFUL mode when you want to cool down the room quickly while Quiet mode allow you to quiet down the unit.
- 7 Press the SLEEP button to control temperature and fan speed for better sleep.
- 8 Set the ON & OFF Timer in 12-hour range in 1 hour increment.
- 9 Press the AUTO DRY FINISH button when you want to dry the air conditioner indoor unit.

### TO SET POWERFUL/QUIET MODE



#### Powerful or Quiet operation



#### POWERFUL

• Used when you want to cool down the room quickly.

- 1 Press the button once to activate the "POWERFUL" mode. The "POWERFUL" indicator on the indoor unit is illuminated (Red).

#### QUIET

• Used when you want to quiet down the unit.

- 1 Press the button once again to activate the "QUIET" mode. The "QUIET" indicator on the indoor unit is illuminated (Green).

#### CANCEL

- 1 Press the button once again to cancel the powerful or quiet function. The "POWERFUL" or "QUIET" indicator on the indoor unit is no illuminate.

Note: When the powerful/quiet function be activated, the indoor unit "POWERFUL" of "QUIET" indicator will be illuminated, but there is no indicator for this function on remote control screen.

### TO SET THE TIMER

The ON and OFF time can be set in the 12 hour range in 1 hour increment.

#### ON TIMER setting

\* Set the "ON TIMER" only when unit in off period. During ON period the "ON TIMER" is invalid.

- 1 Press the button
  - Each press can change the set time from 6, 7, 8...12, 1, 2...5...
  - Press and hold the button to change setting time continuously.
- 2 Press the button (The "TIMER" indicator on the indoor unit is illumination (Orange)).

#### OFF TIMER setting

\* Set the "OFF TIMER" only when unit in off period. During OFF period the "OFF TIMER" is invalid.

- 1 Press the button
  - Each press can change the set time from 1, 2, 3, 4...12, 1, 2...
  - Press and hold the button to change setting time continuously.
- 2 Press the button (The "TIMER" indicator on the indoor unit is illumination (Orange)).